



LG Easy Guide

Model Name : 13Z970

www.lg.com


Instruction / Safety Information

ENGLISH

Using **LG Easy Guide**, **LG Troubleshooting**

LG Electronics Inc. provides **LG Easy Guide** (User's Guide) and **LG Troubleshooting** (Troubleshooting Guide) to users for their easy and convenient use of the product.

- Press [], select [**LG Software**], and run [**LG Easy Guide**] or [**LG Troubleshooting**].

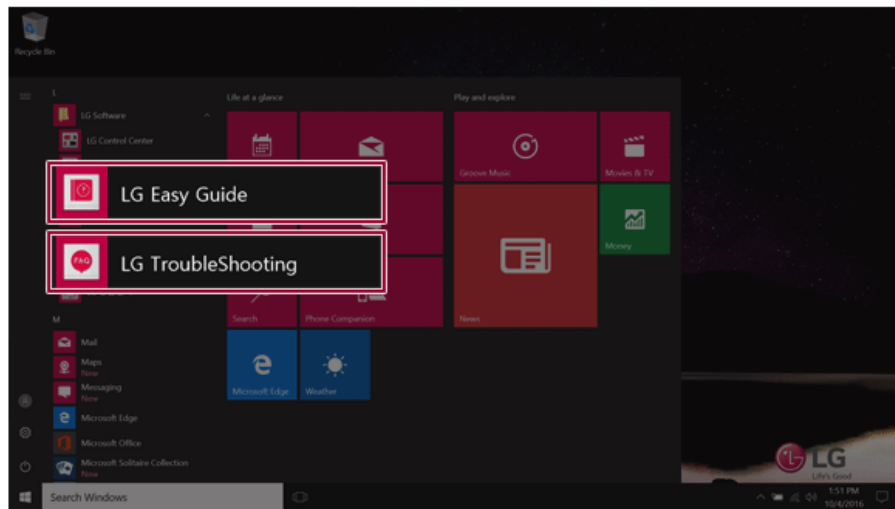

Information/Precautions Before Using

Before reading **LG Easy Guide**, first check the following information.

- This **LG Easy Guide** has been written for the Windows 10 operating system.
- The screen and menu configurations may differ from this manual depending on the status of the Windows update.
- Representative images are used in **LG Easy Guide**. Product purchased may differ in appearance and color.
- **LG Easy Guide** includes instruction about optional products. There may be information about products you did not purchase.
- The contents of **LG Easy Guide** are subject to change without prior notice.
- Use, duplication, or reproduction of any part of **LG Easy Guide** without prior permission from LG Electronics Inc. is strictly prohibited.
- LG Electronics Inc. does not provide warranty for data loss. In order to minimize damage from data loss, please make backup copies of important data.
- The optical disk drive (DVD, CD-ROM, etc.) is optional and may not be provided upon purchasing the product.
- Manufacturers and installers cannot provide services related to human safety as this wireless device may cause radio interference.

Safety Precaution Notations

The below symbols are to inform you of dangers and safety concerns that you must be aware of. Read the symbol-indicated instructions with caution to avoid any possible mishap.



WARNING

Appears in the case of noncompliance with the instruction that may cause serious physical damage or fatal injuries.



CAUTION

Appears in the case of noncompliance with the instruction that may cause minor damage to the body or the machine.

Text Notations

The symbols below are used to display information required to use the product. Familiarize yourself with the instructions marked by the symbols to ensure proper operation of the product.

TIP

Indicates that the following information is added to help the user utilize the machine more conveniently.

OPTION

The Option symbol indicates that the concerned device is not included in the product package and thus has to be purchased separately, or the device may not be applied to the user's machine depending on model type.

Manufacturer and Copyright

Microsoft™, MSTM, WinPE™, and Windows® are the registered trademarks of Microsoft Corporation™.

USB Type-C™ and USB-C™ are trademarks of USB Implementers Forum.

Manufacturer and Copyright represent the logo and trademark of the manufacturer, and bear no relationship to the functions supported by the product.

	LG logo is a registered trademark of LG Electronics, inc.
	SD™ logo is a registered trademark of Secure Digital™ Corporation.
	xD™ logo is a registered trademark of FUJIFILM™ Co., Ltd.
	For DTS patents, see http://patents.dts.com . Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together, DTS-HD, Play-Fi, HeadphoneX, DTS:X, the DTS HeadphoneX logo, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.
	The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
	The SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc.

LG Easy Guide may contain undetectable errors despite our dedicated efforts to provide users with reliable information. We ask for your understanding.

The illustrated figures in **LG Easy Guide** may differ in appearance with the actual products.

Unauthorized reproduction or duplication of any part of **LG Easy Guide** is strictly prohibited.

LG Electronics Inc. reserves the right to modify any part of this manual for quality purposes, without prior notice.

Copyright (C) 2016 LG Electronics Inc. Digitalmate Co., LTD

ENGLISH

Country of Origin	China
Manufacturer	LG Electronics Inc.

OPEN SOURCE SOFTWARE NOTICE

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

System Protection Feature

If the system becomes too hot, the system protection feature automatically stops recharging the battery and switches to hibernate mode or turns the power off.

The PC system may not be reactivated until it cools down enough.

Information on Hard Drive / Memory Capacity

Information on Hard Drive (HDD, SSD, eMMC) Capacity

The hard drive capacity shown by Windows is lower than that stated by the hard drive manufacturer due to a difference in calculation.

Manufacturer	Hard drive manufacturers use a decimal definition of 1 KB = 1,000 Bytes. 100 GB Storage Device (HDD, SSD, eMMC): 100,000 MB / 1,000 Bytes = 100 GB
Windows	Windows use the binary definition of 1 KB = 1,024 Bytes. 100 GB Storage Device (HDD, SSD, eMMC): 100,000 MB / 1,024 Bytes = 97.6 GB

RAM Capacity

RAM capacity shown by Windows may be lower than the actual capacity because the PC uses shared memory for BIOS and the integrated graphics card.

Due to BIOS using shared memory, 1,024 MB RAM may be reported as 1,022 MB or slightly less.

If the PC has integrated graphics card, 1,024 MB RAM may be reported as 1,022 MB or less than 1,000 MB.

CMOS Backup Battery

The CMOS backup battery of the main board ensures that the system setup (BIOS) does not disappear even if the power is disconnected.

The CMOS backup battery is an expendable component.

CMOS backup battery may not be available depending on the model.



CAUTION

- To replace the CMOS backup battery, visit the LG Electronics Service Center.
- The computer may be damaged if an incompatible battery is used.
- The product warranty is not applied to failure or breakdown caused by willful damage by the user.

Adjusting Volume (headset and speakers)

Check the volume before listening to music.



CAUTION



- Before using the headset, check if the volume is too high.
- Do not use the headset too long.

Important Safety Precautions

Please use the machine in the proper environment to extend the machine's lifespan. Use the machine in a safe and stable place.

The warranty does not cover any damage resulting from reckless use or use in undesirable environments.

ENGLISH

Product Installation/Usage Precautions

**CAUTION****Place the machine in a safe place so it does not fall.**

- If dropped, the machine may be damaged or cause an injury.

**Use the product in a clean, dust-free environment.**

- Otherwise, the system may not function properly.

**Do not place any objects within 15 cm of the PC.**

- Lack of ventilation may overheat the PC from inside and put users at risk of burn injuries.

**Do not store or use the PC near a magnetic object (i.e. a bag with a magnetic object, a diary, a wallet, a memo board, high-powered speakers, a bracelet, or etc.).**

- Otherwise, the storage device (HDD, SSD, eMMC) and the system may be damaged, and the system may fail to operate properly.

Do not use the PC on a bag with magnetic objects attached to it.

- Otherwise, the storage device and the system may be damaged, and the system may fail to operate properly.

**Operate the product where there is no electromagnetic interference.**

- Keep a proper distance between the PC and electronic appliances such as radios or speakers that generate strong magnetic fields.
- Otherwise, data may be lost from the storage device (HDD, SSD, eMMC) or the LCD color may be damaged.

**Do not connect a key-phone line to a wired LAN port.**

- A fire may occur or the product may get damaged.

**If the LCD screen is damaged, do not touch LCD with your hands.**

- Contact the service center as it may cause an injury.

**Do not leave any objects such as a pen between the keypad and the LCD.**

- You might break the LCD by unwittingly closing it with a foreign object remaining on the pad.

**Do not press or scratch the LCD with a sharp object.**

- It may cause impairment.



Ensure the power is off before shutting the LCD.

- The product may catch fire, be broken or deformed due to temperature rise.



Do not impose excessive force on the LCD screen or drop it.

- You may break the LCD glass panel.



Do not forcibly open the LCD screen with one hand.

- External impact may be inflicted on the machine.



To clean the LCD screen, use designated agents and soft cloth and rub the screen in one direction.

- Too much force may damage the LCD screen.



When handling PC parts, follow the instructions in the manual.

- Otherwise, the product may get damaged.



Install a vaccine program on your PC and do not download illegal programs nor access any corruptive web site such as those pushing pornographic contents.

- The system may be infected and impaired.



Do not insert devices other than designated ones in the ports.

- Otherwise, the product may get damaged.



Do not press the eject button while the optical disk drive (CD/DVD/Blu-ray) is running.

- An error may occur or the disc may be ejected, causing injury.



Do not use a damaged optical disc (CD/DVD/Blu-ray).

- Otherwise, the product may get damaged or cause physical injury.




Avoid using a wireless LAN connection within the 5 m radius of a microwave or plasma lamp. If you have to use wireless LAN and a plasma bulb within the range, do so between channels 11 and 13.

- The transmission rate may drop even if the connection is made.



Turn off the PC if you are not going to use it for an extended period of time.

- It may overheat the battery.



Make sure that the memory cover is securely closed before turning on the PC.

- Do not use the machine when the memory cover is open. It may damage the machine.



Please use parts certified by LG Electronics, Inc.

- Otherwise, a fire or product damage may occur.



If there is a problem with peripheral devices, contact the device manufacturer.

- The product may get damaged.



Handle devices and parts of the machine with care.

- The product may get damaged.



Do not drop any part or device of the machine while disassembling it.

- If dropped, it may be damaged and cause an injury.

**WARNING****Dispose of the desiccating agent and plastic wrap properly.**

- The desiccating agent and plastic wrap may cause suffocation.

**Do not use the machine in damp places like a laundry room or bathroom.**

- Moisture may cause a glitch or electric shock.
- Please use the machine within the appropriate temperature range (10 °C to 35 °C) and humidity range (20% RH to 80% RH).

**Clean the PC with a proper agent and dry it completely before using it again.**

- If the PC is wet while used, an electric shock or fire may occur.

**When lightning flashes in your area, disconnect the power, wired LAN and other connections.**

- An electric shock or fire may occur.

**Do not leave a cup or other containers filled with watery substance near the PC.**

- In the case that liquid goes inside the PC, a fire or electric shock may occur.

**If you have dropped or damaged the PC, disconnect the power and contact the local service center for a safety check.**

- If a damaged PC is used continuously, an electric shock or fire may occur.

**Do not put a lit candle or live cigarette on the PC.**

- A fire may occur.

**If you detect or smell smoke from the PC, stop use immediately and disconnect the power source before contacting your local service center.**

- A fire may occur.

**As the AC adapter can be hot, do not touch it with bare skin while using it.**

- Extended period of exposure may cause burn.

**The bottom of the PC gets hot when the system is in operation. Do not touch or put it on your lap.**

- Extended period of exposure may cause burn.

**Do not play the PC games excessively.**

- Playing a PC game for an extended period of time may cause a mental disorder. It may also inflict physical impairments on the elderly and children.



Do not put your finger or an object into PC ports.

- An injury or electric shock may occur.



Ask one of our engineers to run a safety check after your computer has been repaired.

- Otherwise, an electric shock or fire may occur.



For minors, we recommend a program that blocks access to illegal or pornographic web sites.

- Minors' exposure to adult-only contents may inflict psychological instability or even trauma on them. Take an extra precaution for your children if the whole family is using this machine.



Keep the machine away from heat-emitting devices such as a heater.

- The product may get deformed or catch on fire.



Prevent children from thrusting their finger into the optical disk drive (CD/DVD/Blu-ray) tray.

- The finger may be stuck in the tray and injured.



Do not block the ventilation hole with any object.

- Otherwise, an electric shock may occur.



When upgrading your PC, turn off the power and disconnect the power cable, battery, and LAN.

- There is a risk of electric shock or fire and the product may be damaged.



When you upgrade the PC, ensure that children will not swallow any parts including bolts.

- If a child swallowed a nut, he or she may get suffocated.
- In that case, see the doctor immediately.



Do not disassemble or modify the machine arbitrarily.

- There is a risk of electric shock and the product may be no longer covered by the warranty.



If you disassemble the PC, connect the power after reassembly is done.

- There is a risk of electric shock or product damage, if you touch the disassembled PC.



Do not put in metal items such as coins, hair pin or other irons or inflammables such as paper or matches. Especially, ensure that children will not do so.

- There is a risk of product damage, fire, or electric shock.
- If any foreign substance gets in the product, unplug the product and contact the local service center.

Product Storage/Transportation Precautions



CAUTION



Before carrying the machine, turn off the power and disconnect all the cables.

- Otherwise, you may trip over the wire, damaging the PC and sustaining an injury.



Do not carry the machine with the LCD open.

- Otherwise, the product may get damaged.



Protect the machine from any shock while carrying it.

- System damage or an injury may result.



Carry the product in a bag designed for it.

- Carrying it in another type of bag may result in product damage.



Do not put any heavy object on the PC.

- There is the risk of malfunction. If the object were to fall, it may cause an injury or damage the machine.

**WARNING**

During air travel, follow the directions of flight attendants.

- Using the PC during flight may cause an aircraft accident.



When leaving the machine in a car, avoid exposure to direct sunlight.

- The product may get deformed or caught on fire due to a temperature rise.



Do not put any heavy object on the power cable and AC adapter, and avoid damage from impacts.

- A malfunction or fire may occur.



Do not leave the powered-on PC in a space without enough ventilation (i.e. bags) for an extended or repeated time.

- The battery may overheat and cause a fire.

Battery and AC Adapter Precautions

**WARNING**

When the PC is not used for an extended period of time, keep the battery level at 50%.

- Do not leave the product with discharged battery for an extended period of time. It may damage the battery.



Charge the battery only with the provided instrument.

- Otherwise, the battery may be damaged presenting a risk of fire.



Do not throw or disassemble the battery.

- The resulting damage may cause an injury, explosion, or fire.



Use batteries certified and acknowledged by LG Electronics Inc.

- Otherwise, an explosion or fire may occur.



Prevent the battery from being in contact with any metallic object like a car ignition key or a paper clip.

- Otherwise, this may cause damage to the battery, a fire or burn due to overheat in the battery.



Keep the battery away from heat.

- Otherwise, an explosion or fire may occur.



Do not short-circuit the battery.

- Otherwise, it may explode.



Do not dispose of a spent or backup (standby) battery arbitrarily.

- It may explode or cause a fire.
- Disposal methods may differ by country and region. Dispose of spent batteries in accordance with the laws and safety rules of the country and region you reside in.



If you find leakage or smell bad odor from the battery, remove the battery and contact the local service center.

- It may explode or cause a fire.



Do not store in places with temperatures above 60 °C and high humidity (in cars or saunas).

- It may explode or cause a fire.



Keep the battery out of the reach of children or pets.

- If damaged, it may cause an injury.



Keep the battery from being pierced by a sharp object or chewed by pets.

- It may explode or cause a fire.



Do not put the battery in water.

- Otherwise, the battery may be damaged or explode.



Do not use the PC on top of carpet, blanket or bed. Also, do not put the adapter under the blanket.

- This may cause a malfunction, fire or burn due to overheat in the PC and adapter.



Read the battery usage precautions carefully before use.

- Keep the battery at room temperature. **LG Easy Guide** Refer to the Tip. Using a Battery in the installation guide to store the battery properly.



Connect the power plug properly by pushing it to the end.

- If a contact failure occurs, it may cause product damage or fire.



Do not bend the power cable for AC adapter too much or get stamped by a sharp object.

- The wires inside the cable may break and cause electric shock or fire.



Do not use loose plugs or damaged power cords.

- An electric shock or fire may occur.



Do not touch the power cord with your hands wet.

- Otherwise, an electric shock may occur.



Pull the plug, not the cord, to disconnect the AC adapter and power jack.

- Otherwise, a fire or product damage may occur.



Operate the product at the proper voltage.

- Excessive voltage may result in damage on the product, electric shock or fire.



Use power outlets with an earth pin installed and proper supply of rated electricity.

- An electric leakage may cause an electric shock or fire.
- The shape of the power cord and outlet may differ by country and region.



In the case of strange noise from the cord or plug, disconnect the power cord from the outlet immediately and contact the service center.

- A fire or electric shock may occur.



Use the power supply/adapter provided with the product and never disassemble the product.

- Using a different product or disassembling it may cause an electric shock or fire.



Always keep the AC adapter and power outlet clean.

- A fire may occur.



Keep children and pets from damaging the power cord.

- It may cause a fire or an electric shock.



Disconnect the PC completely before cleaning it.

- Otherwise, an electric shock or impairment may occur.



If the power/AC adapter or the product is soaked, disconnect the battery, power/AC adapter, and all other lines before contacting the local service center.

- An electric shock or fire may occur.



Ensure that the battery pack is locked to the machine after installation.

- Otherwise, the battery may be damaged.

Other Safety Precautions

**CAUTION****Handle the machine with care to prevent loss of data from the storage device (HDD, SSD, eMMC).**

- Since the storage device is fragile, you need to back up your important data frequently.
- The manufacturer is not responsible for any storage device data loss caused by a user's mistake.

**Damage to the storage device (HDD, SSD, eMMC) and data loss may occur when:**

- External shocks are inflicted on the machine while disassembling or installing it.
- The machine is reset (i.e. restarted) or turned on again after a power outage while the storage device is operating.
- The PC is infected with a virus, tainting the data irrecoverably.
- Abrupt turning-off of the PC can damage the PC.
- If the product is moved, shaken or exposed to external shock while the storage device is running, file damage or bad sectors may occur.

**To minimize data loss resulting from storage device damage (HDD, SSD, eMMC), frequently back up important data.**

- The manufacturer is not responsible for any data loss.

**We do not refund or replace a product that malfunctions due to the installation or use of an operating system other than the one provided by LG Electronics Inc.**

- Some software applications may not work properly in other operating systems. Such malfunctions are not covered by the warranty.

ENERGY STAR®

ENGLISH

ENERGY STAR®



ENERGY STAR® Specifications

- LG Electronics Inc. participates in ENERGY STAR® and the energy efficiency of this product complies with the specifications of ENERGY STAR®.
- ENERGY STAR® is a set of regulations that encourages manufacturers of electronic devices to create more energy efficient products.
- The energy consumption of this product was decreased along with the cost. Also, it helps preserve natural resources.
- This PC includes a feature that turns into (Sleep) mode when it is not used for up to 30 minutes.
- To leave sleep mode, click a mouse button or press any key on the keyboard.

Product Specifications

PC Specifications

ENGLISH

Display	33.7 cm IPS LCD or Touch LCD The display resolution may differ by model.
CPU	Intel®Core™ i7 / i5 / i3 or Intel®Pentium® processor The CPU differs depending on model type and cannot be replaced by the user.
GPU	Intel® HD Graphics 620 or Intel® HD Graphics 610 The GPU differs depending on model type and cannot be replaced by the user. When processing large graphic data, it utilizes dynamically allocated system memory. The size of the allocated memory depends on the system memory size.
System Memory	DDR4 SODIMM The maximum capacity of the main board is 16 GB. Memory of 3 GB or more is supported only in a 64-bit O/S. Memory size may differ depending on the model. The user must not arbitrarily replace the memory.
Storage	M.2 SSD (2280) SSD capacity may differ depending on the model.
Bluetooth	Bluetooth 4.1 If you connect to Bluetooth device and wireless LAN at the same time, the system may become slow. In order to use Bluetooth 4.1, the device you want to connect to should support Bluetooth 4.1.
Wireless LAN	Intel® 8265D2W Qualcomm QCNFA324A The WLAN card may differ depending on model. The user must not arbitrarily replace the WLAN card. Manufacturers and installers cannot provide services related to human safety as this wireless device may cause radio interference.
Webcam	HD Webcam
LAN	10/100 Megabit or gigabit. To use a wired LAN, you need to have a LAN adapter installed separately. The performance of the provided adapter depends on the model.
Product Weight	Approx. 940 g (based on a large capacity battery) / Approx. 840 g (based on a standard battery) The weight may differ depending on the model.

The product dimensions and specifications differ by model type and cannot be replaced by the user.

Power Supply and Environments

AC Adapter (Free Voltage)	Power Capacity: 40 W Input: AC 100 V to 240 V, 1.0 A - 1.1 A 50 / 60 Hz Output: DC 19 V, 2.1 A (40 W)
Battery	Lithium Ion battery Charging Hours: 3.0 hours Charging hours may be longer if the battery is not used for a long time or the system is on. When temperature is outside the operating temperature specification, the battery may not be charged or charging hours may be longer. Operating temperature may be different from the actual room temperature.
Operating and Storage Conditions	Operating Temperature: 10 °C to 35 °C Operating Humidity: 20 % RH to 80 % RH Storage Temperature: - 5 °C to 40 °C Storage Humidity: 5 % RH to 90 % RH

Power Consumption


Power consumption of this product during operation standby, sleep mode, and manual off modes may differ depending on the product specifications and the adapter type. Even when the system is turned off, it consumes a minute amount of power, if supplied. To cut off the power supply completely, disconnect the power cord from the power outlet.

Using Windows 10

Start Menu

A New Start Menu


The Start menu in Windows 10 has been changed so you can use Windows quickly and easily.

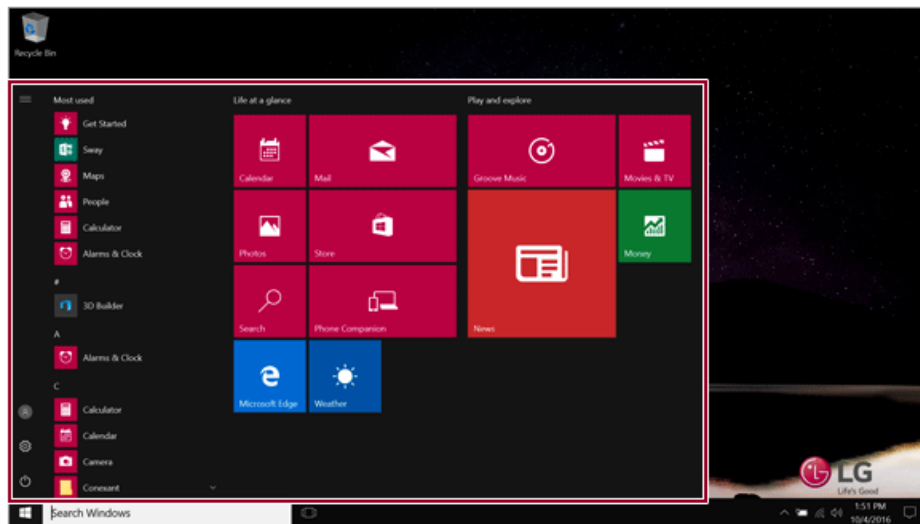

Press the [] button in the lower-left corner of the screen to display the Start menu.

TIP

Press the [] key or [Ctrl] + [Esc] to display the Start menu.

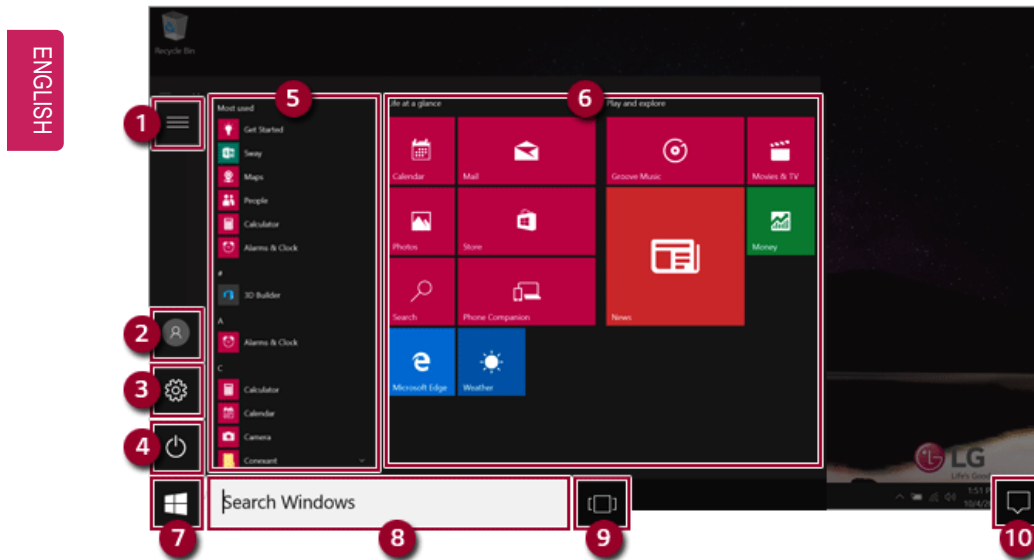

- 1 **Expand:** Displays the names of all menu items.
- 2 **User Account:** Displays the current user's information. You can use functions such as Change Account Settings, Lock or Logout.
- 3 **Settings:** You can set up the system including the network settings.
- 4 **Power:** Sleep, System Shutdown, and Restart menus are available.
- 5 **App List:** Displays the app list.
- 6 **App Tile:** Apps added to the Start menu are displayed in tile format.
- 7 **Start Button:** Opens or closes the Start menu.
- 8 **Windows Search:** Searches for the text entered by the user in My Items (system) or the Internet.
- 9 **Add/Toggle Desktops:** You can add and use multiple desktops.
- 10 **Action Center:** You can view the system-related notification messages and change PC settings.

TIP

- Press [Windows] + [X], and then the [Windows] button pop-up menu appears. You can use the pop-up menu to easily access the shortcuts for Control Panel, Explorer, Search, System Shutdown, and the desktop environment.

Desktop Apps and Windows Apps

The Desktop apps remain unchanged from the previous Windows apps, but Windows apps have been changed to include various functions.

The Windows apps provide easy-to-use menus according to the window size and a variety of convenient functions such as Update and Alarm.

Using Apps

ENGLISH


Running and Exiting Apps

Run apps that were not added to the Start menu or apps that were installed on the system using the following method:

- 1 Press the  button and select and run the app you want from the app list.

 **TIP**

Press the  key or [Ctrl] + [Esc] to display the Start menu.

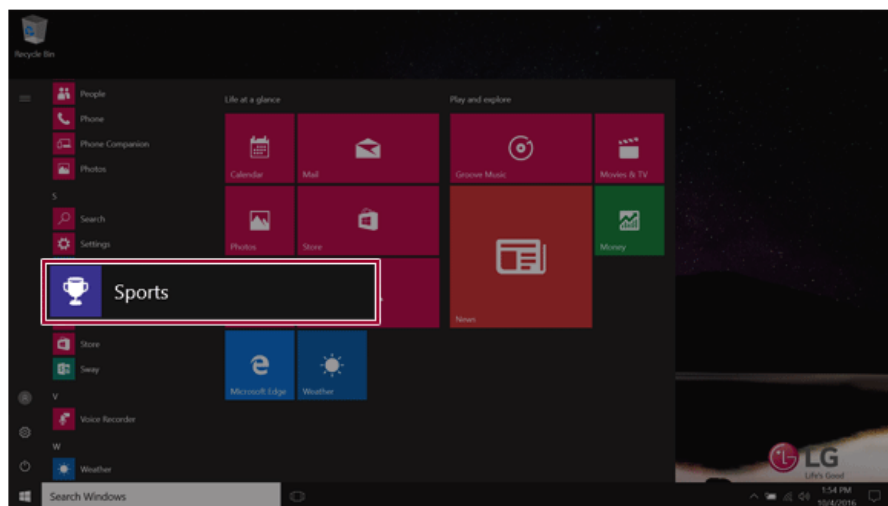

- 2 To exit an app, press the  button on the top of the app screen.

Deleting Apps

You can delete apps from the Start menu tiles or the app list.

 **TIP**


The basic Windows apps that are required may not be deleted.

- 1 Press the  button to display the Start menu.

TIP


Press the  key or [Ctrl] + [Esc] to display the Start menu.

ENGLISH

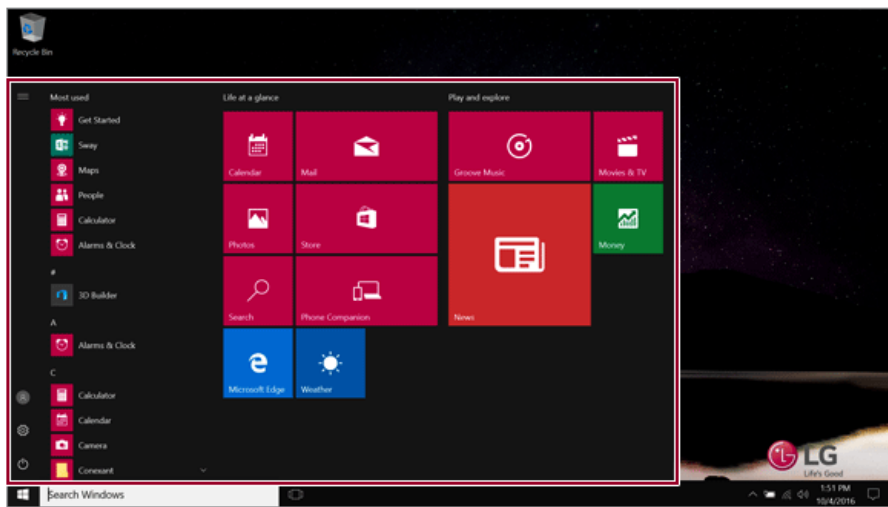


- 2 Go to the Start menu app tiles or the app list and right-click the app you wish to delete.

ENGLISH

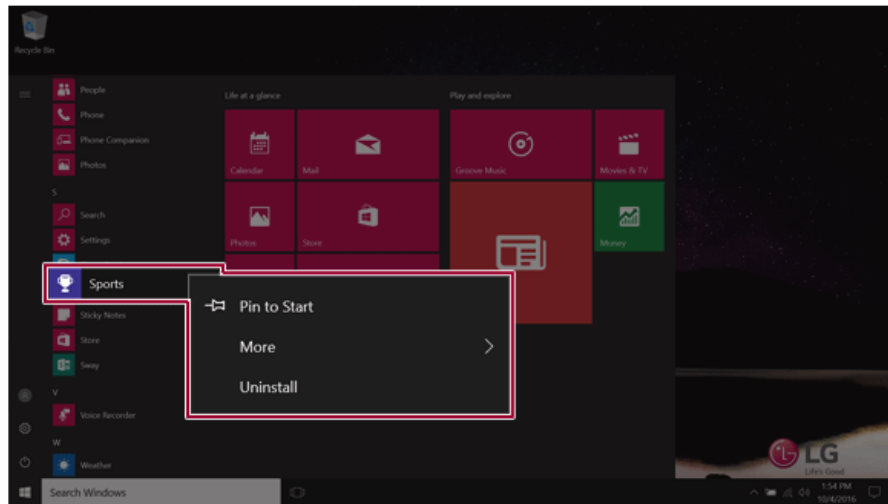

- 3 When the pop-up menu appears, select **[Uninstall]**.

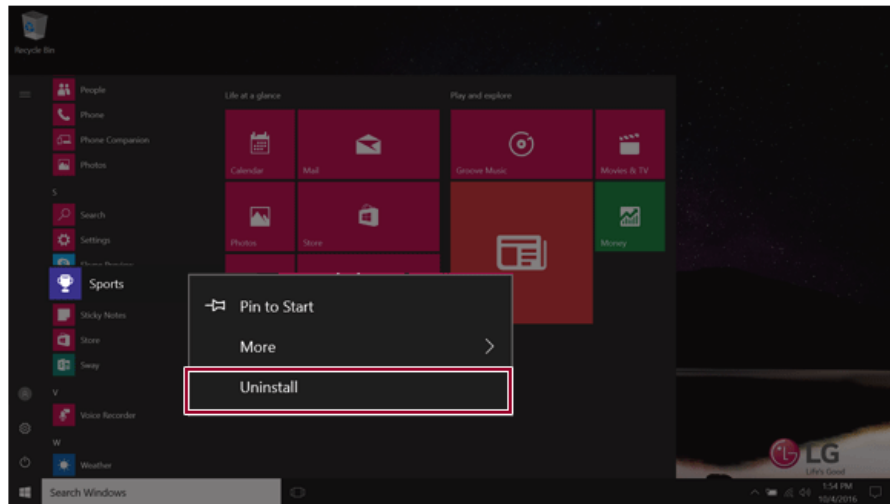


ENGLISH




TIP

If you are deleting a desktop app, the **Programs and Features** window appears. Right-click the app you wish to delete and press the **Uninstall/Change** button.

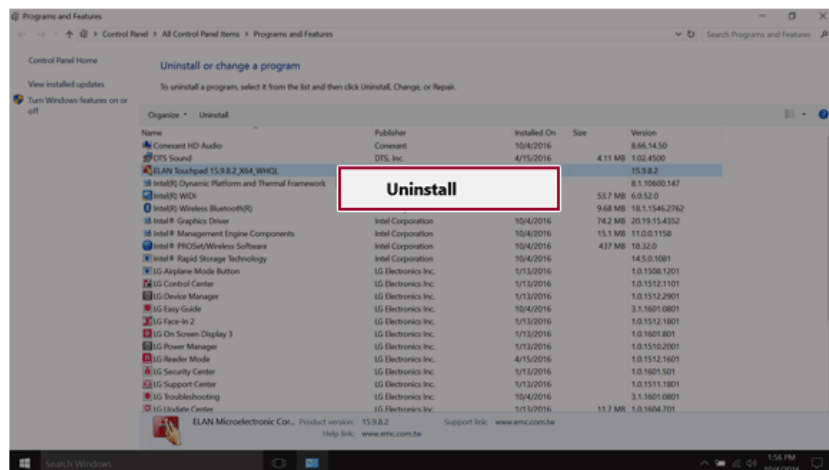

- 4 When prompted to confirm the deletion, click the **[Uninstall]** button to delete the app.

ENGLISH

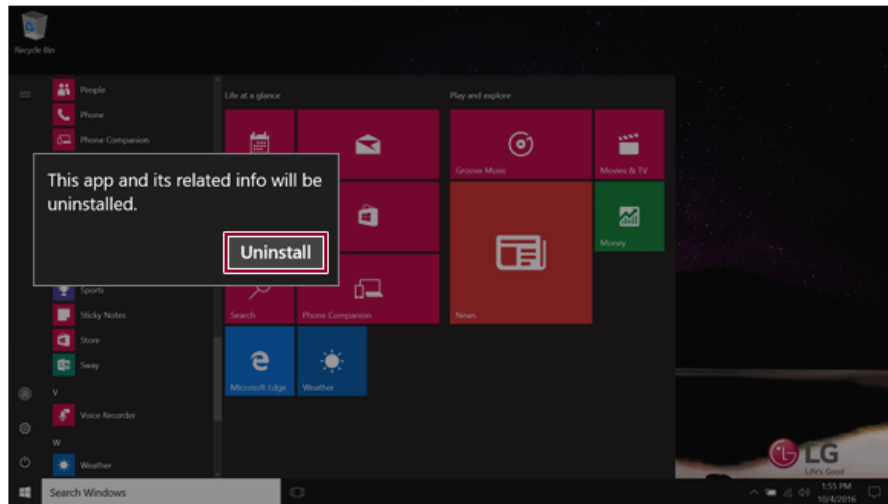

Adding Apps to Start Menu/Taskbar


You can add frequently used apps on the Start menu and taskbar for easy and quick access.

- 1 Press the  button to display the Start menu.


TIP

Press the  key or [Ctrl] + [Esc] to display the Start menu.


ENGLISH

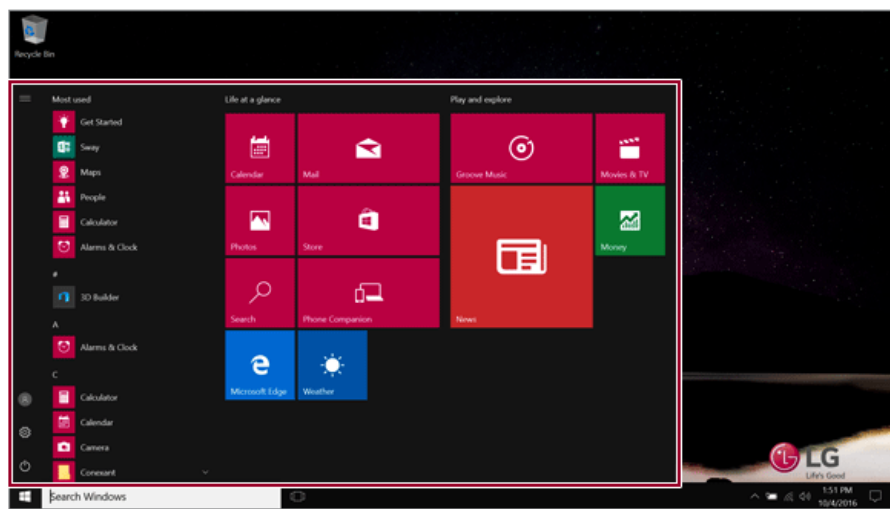

- 2 Right-click the app you want from the app list, and then click **[Pin to Start]** or **[More] > [Pin to Taskbar]**.

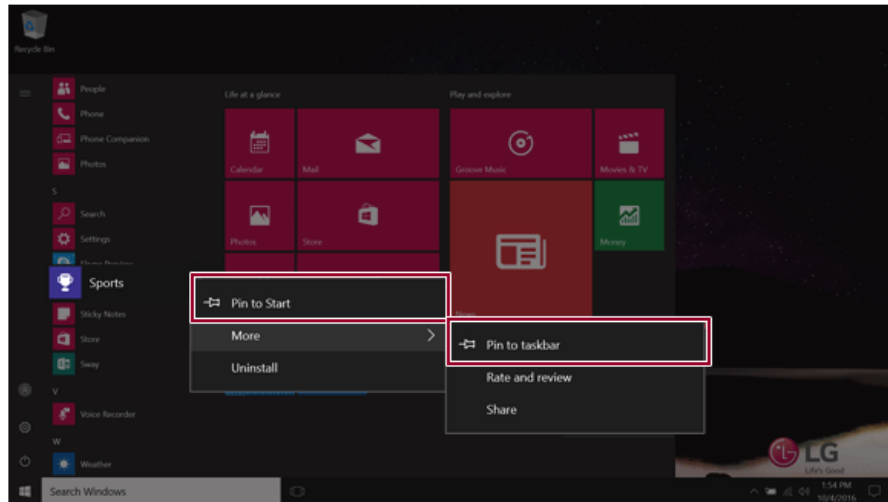

- 3 The selected app is added to the Start menu or taskbar.

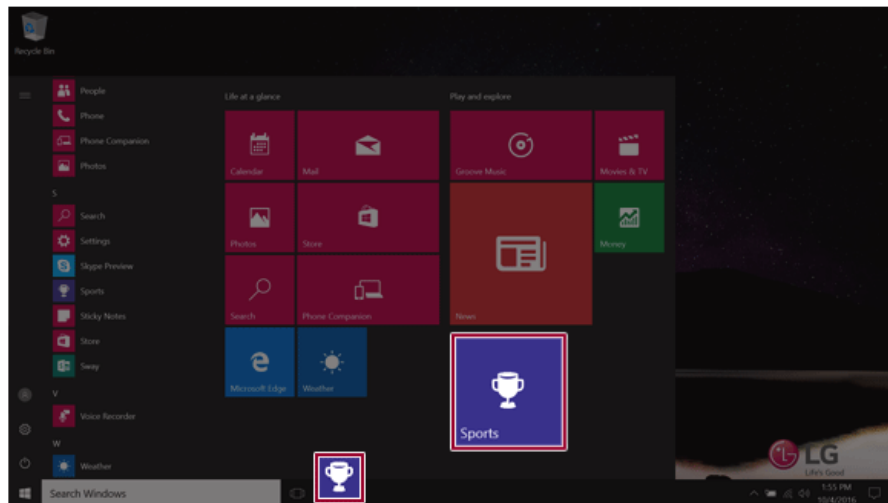

Toggling and Adding Apps/Desktops


In Windows 10, you can toggle the running apps easily and quickly, and add desktops to use them like multiple PCs.

TIP

For an app that does not allow multitasking, you may be switched to the desktop where the app was executed, or you may have an error message.


ENGLISH

- 1 In the taskbar, press .

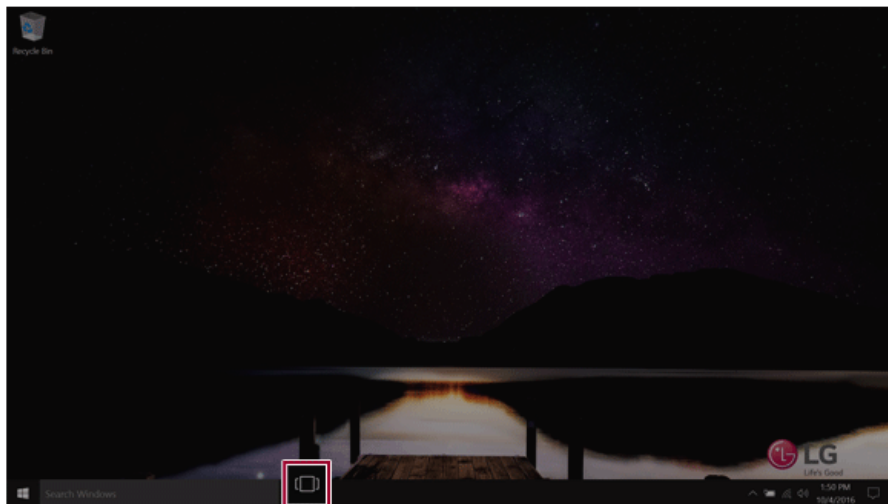

- 2 The screen to switch between apps and desktops appears and the running apps are displayed in the preview.


ENGLISH

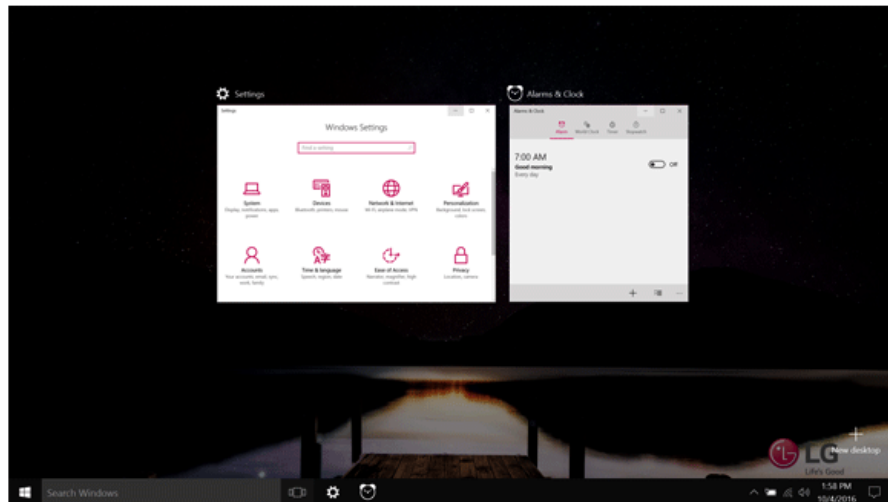

TIP


Press the [X] button of an app in the preview to exit the app.

- 3 Click the **[New desktop]** tile.

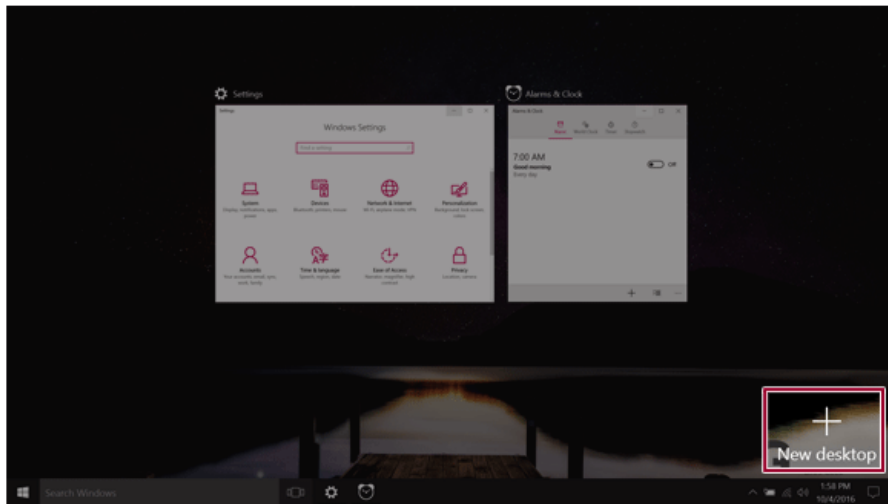

ENGLISH


- 4 **[Desktop 1]** and **[Desktop 2]** are created.

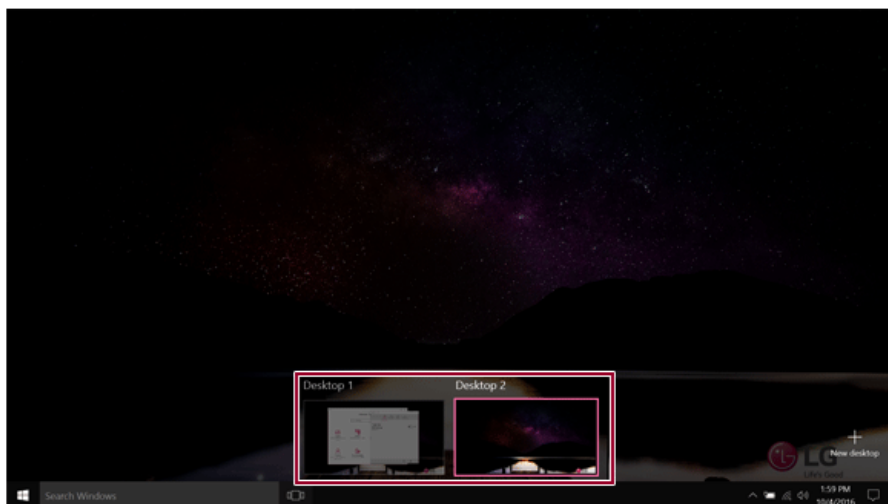

Two desktops are provided by default and you can add more if necessary.

- 5 Select an app in the preview or desktop.

ENGLISH

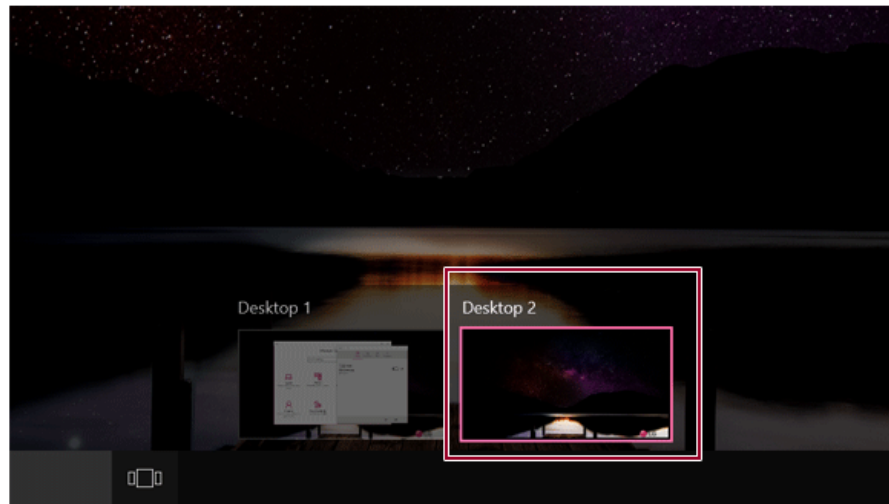


- 6 The screen is toggled to the selected app or desktop.




TIP

Press the [X] button in the app preview to exit the app.

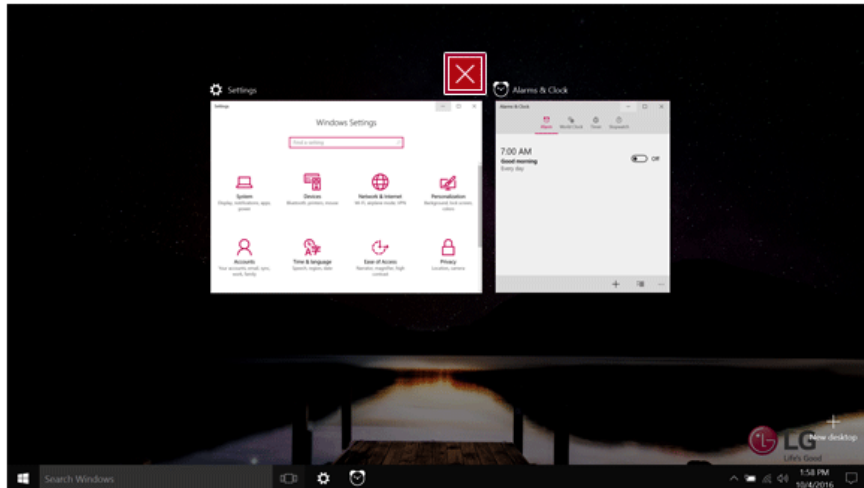

ENGLISH

In the desktop preview, press the [X] button to delete the desktop and move running apps to another desktop.

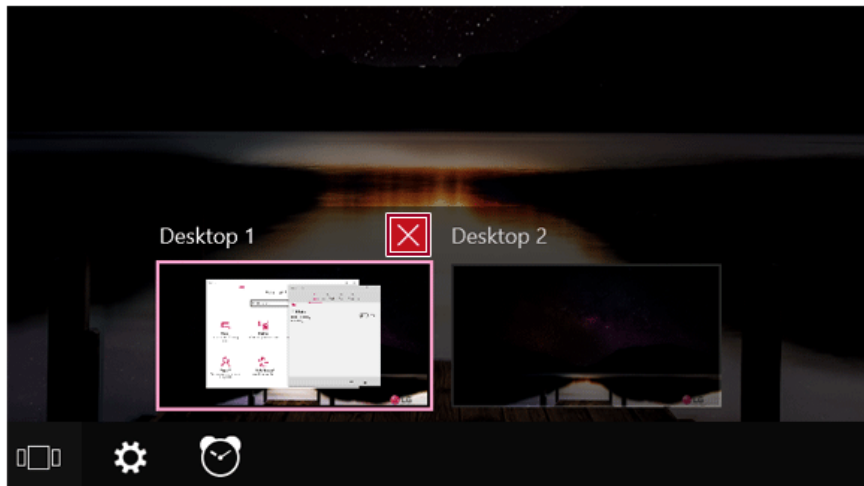

Using Shortcut Keys

Use the shortcut keys to quickly toggle between apps and desktops.

ENGLISH

Shortcut Keys	Comments
[Alt] + [Tab]	Hold down the [Alt] key and press the [Tab] key to view the running apps in the preview. Press [Tab] repeatedly to select the app you wish to switch to and then release the [Alt] key.
[Alt] + [Ctrl] + [Tab]	The running apps on the screen are displayed in the preview. Select and switch to an app.
 + Tab	If the desktop toggling screen appears, select an app or desktop you wish to switch to.

Splitting the App Screen

In Windows 10, you can easily adjust window sizes and split windows if necessary.





Some apps that cannot adjust the window size do not support the screen split.

Full Screen

ENGLISH

- 1 Drag and drop an app to the top end of the screen to change the app to the full screen size.

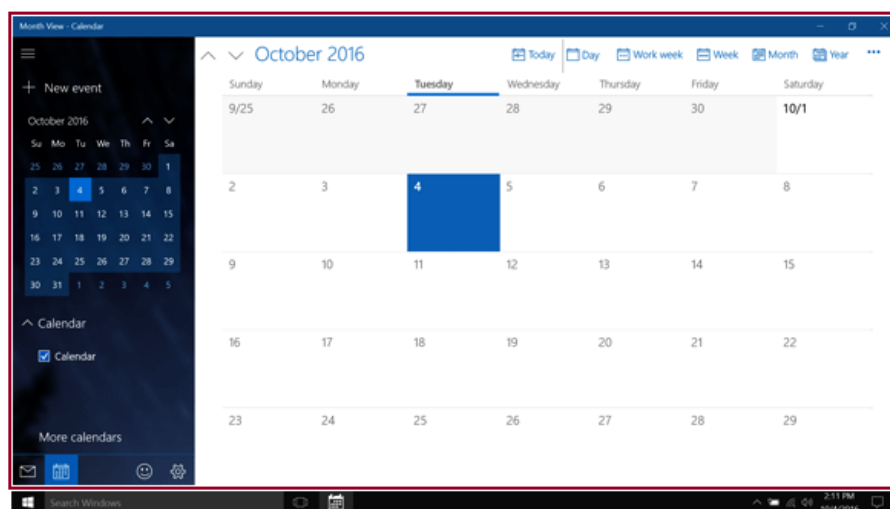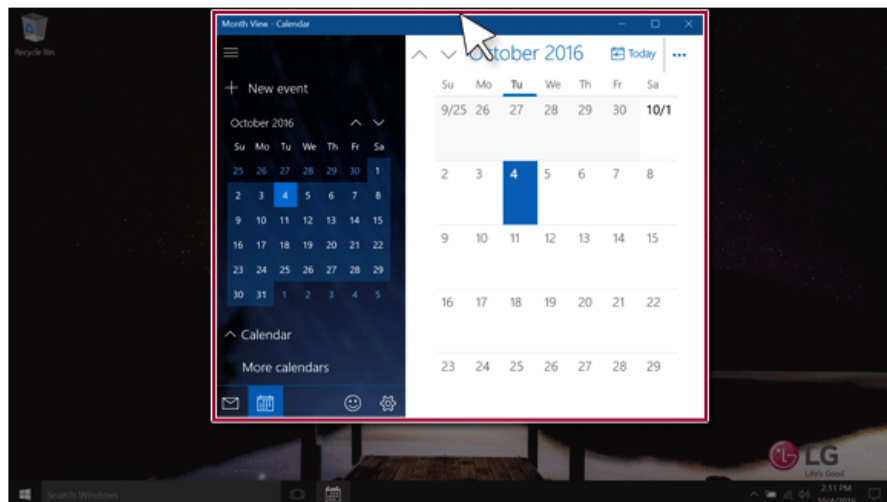

- 2 Drag and drop the app again to a different location to return to its original size.

Screen Split into Two



- 1 Drag and drop an app to the right end or left end to reduce the size by half.



TIP



The screen is split according to the guideline.

ENGLISH

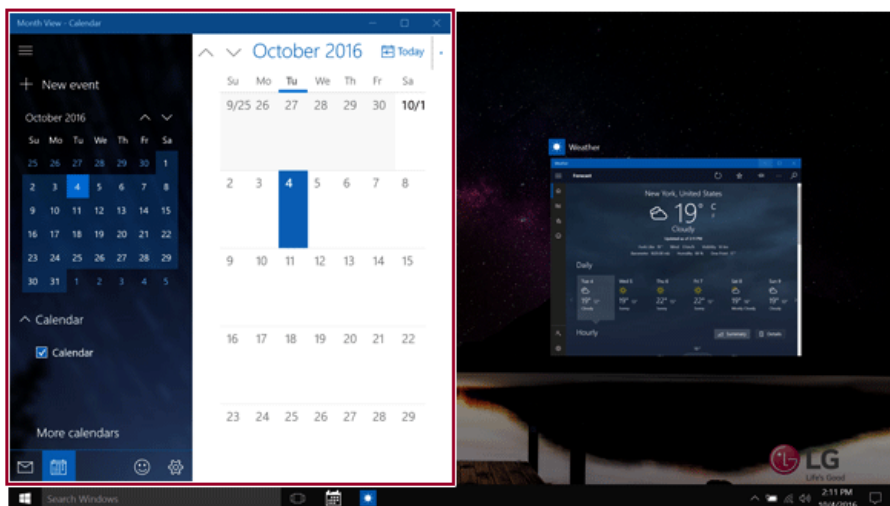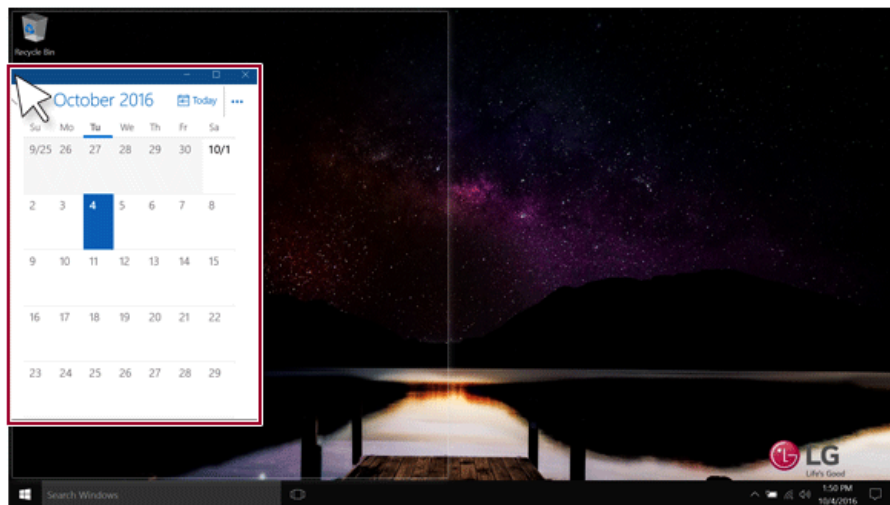

- 2 Select a running app displayed in the preview on the split screen.

ENGLISH

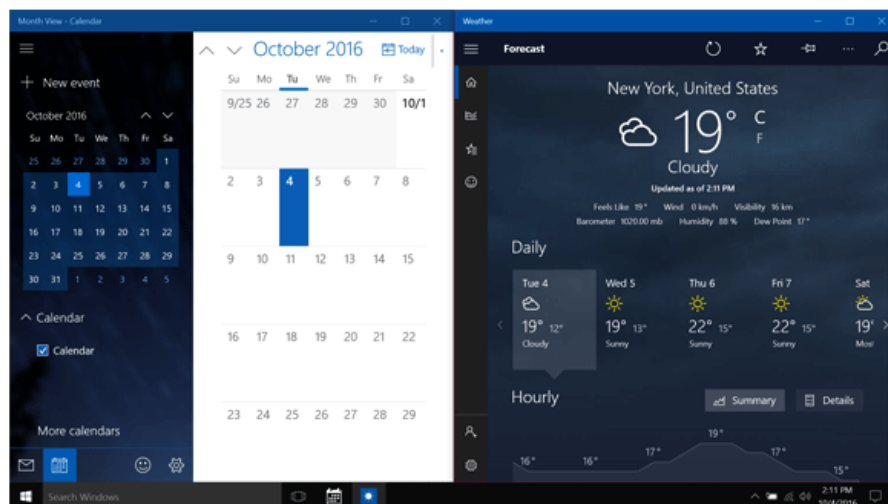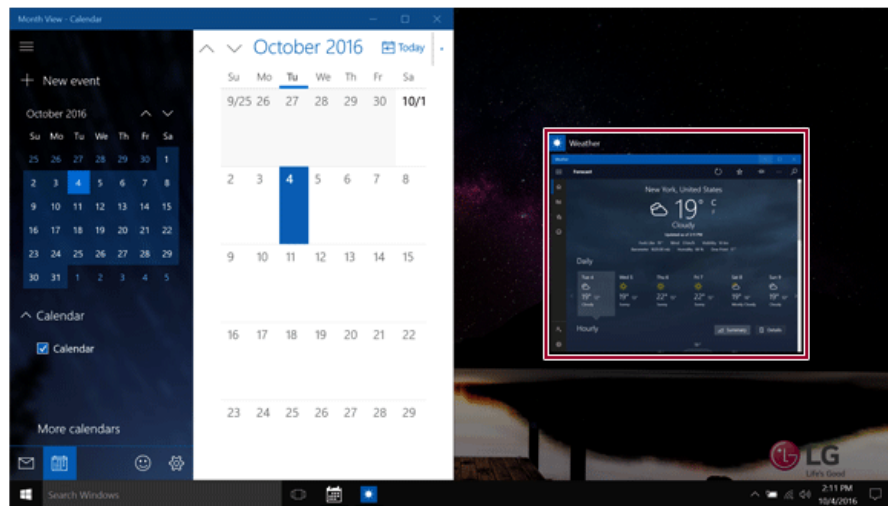


- 3 Drag and drop the app again to a different location to return to its original size.

Screen Split into Four

- 1 Drag and drop an app to the left corner to reduce the app to 1/4 size of the screen.



**TIP**

The screen is split according to the guideline.

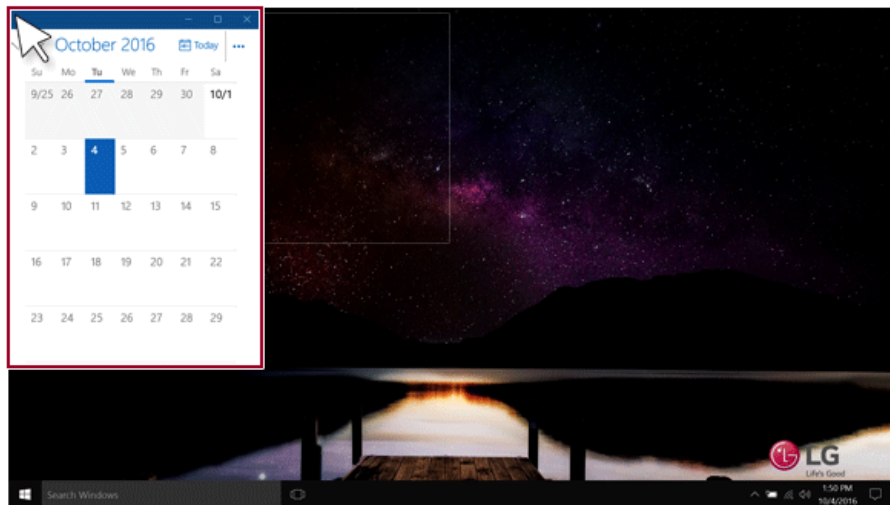ENGLISH

- 2 You can use this method to place up to four apps on the screen.

ENGLISH

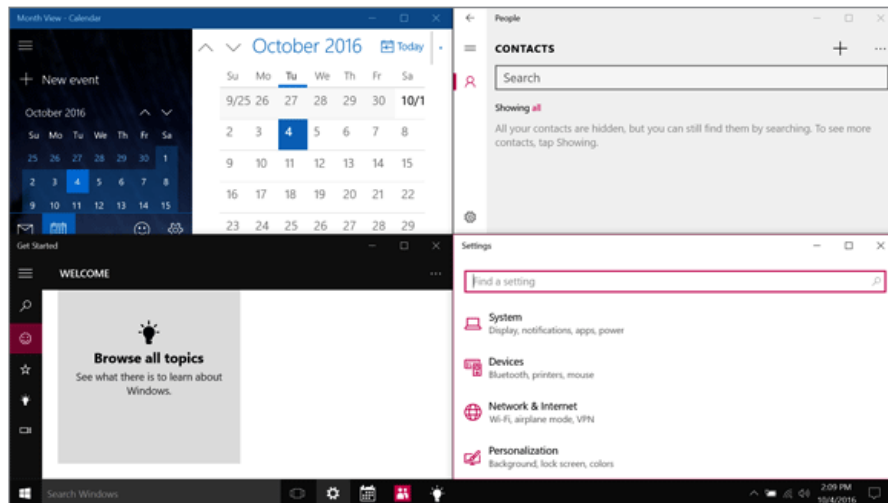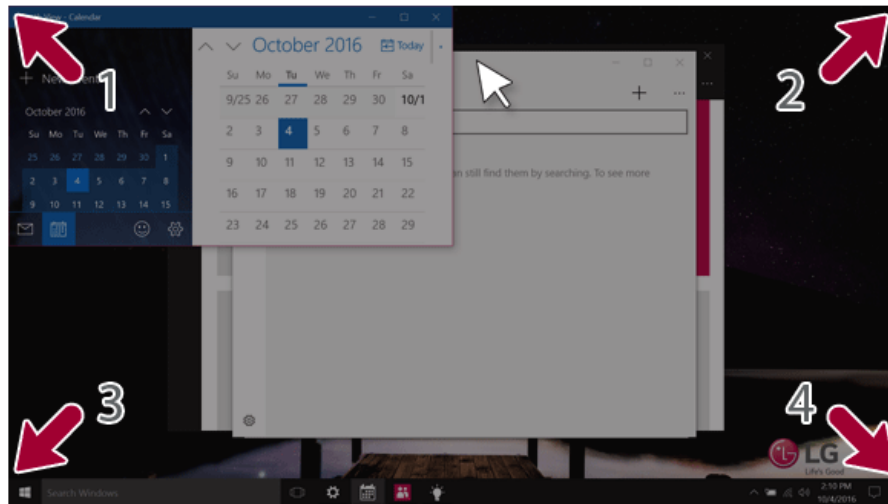

- 3 Drag and drop the app again to a different location to return to its original size.

Using the Store

You can purchase apps or get free apps from Windows Store.

TIP

If a local account is being used, a window to switch to a Microsoft account appears while using Windows Store. Follow the instructions on the screen to switch the local account to a Microsoft account.

You can also do so by selecting [Start menu] > [Account] > [Change Account Settings].


If you switch to a Microsoft account, your PC settings (background, user settings, etc.) may be changed to the previous settings.

ENGLISH

- 1 Press the  button to move to the Start menu and select the **[Store]** tile.


TIP

Press the  key or [Ctrl] + [Esc] to display the Start menu.

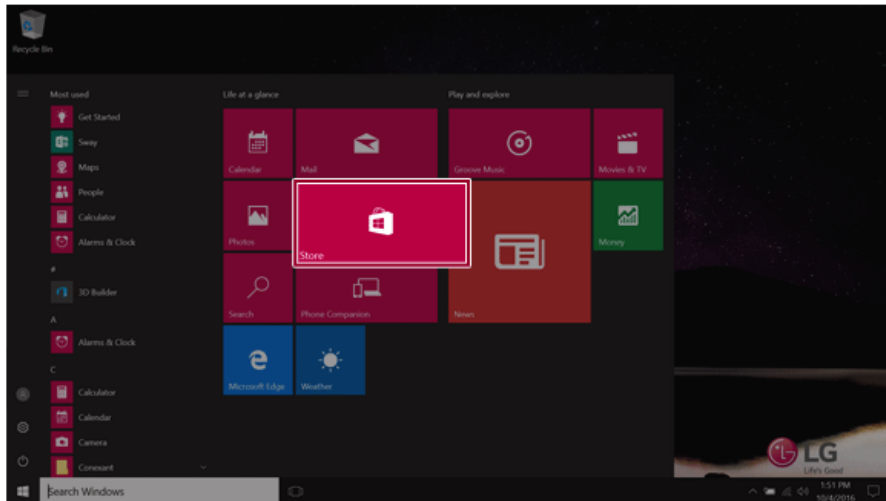


- 2 On the Store screen, select a category or app of your choice.

ENGLISH

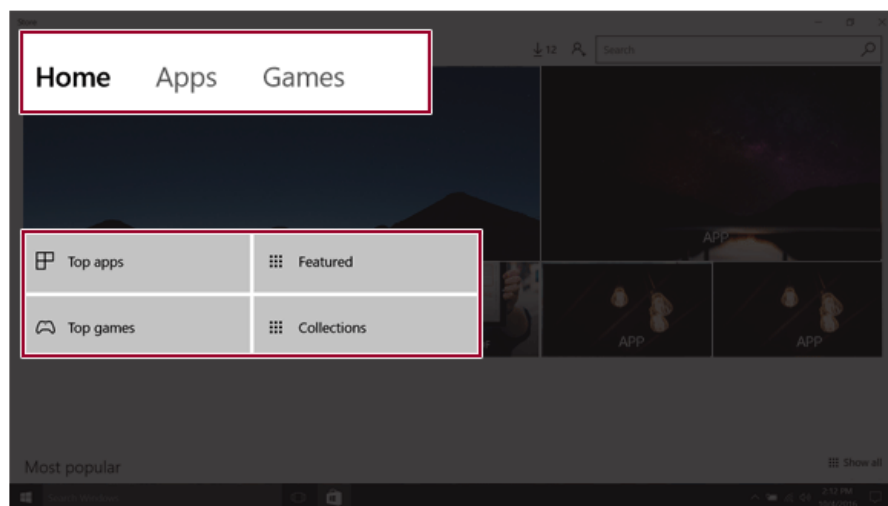

- 3 On the app details screen, select **[Get]** or **[Buy]**.

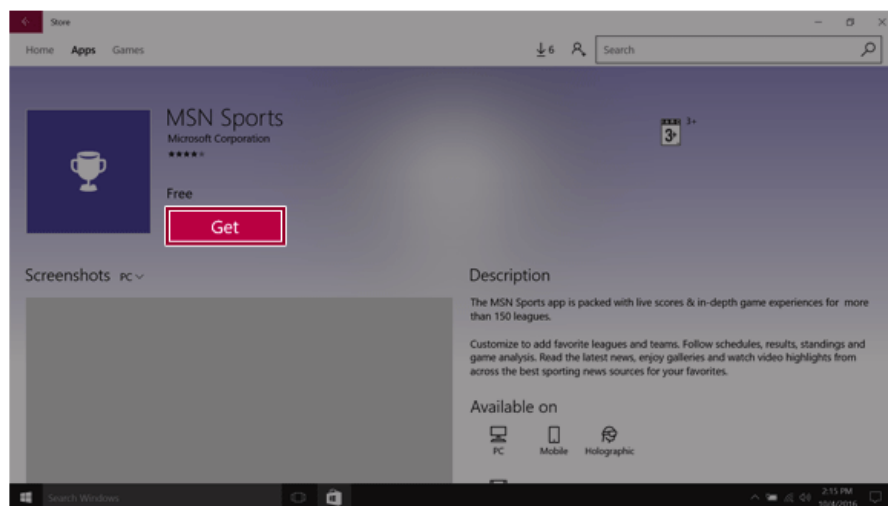

- 4 App installation starts in a moment.


- 5 You can see the installed app in the app list on the Start menu.

Switching to Tablet Mode


ENGLISH

If you are using Windows on a tablet PC, you can easily switch to the tablet mode.


- 1 Press the Action Center [] icon on the right side of the taskbar.

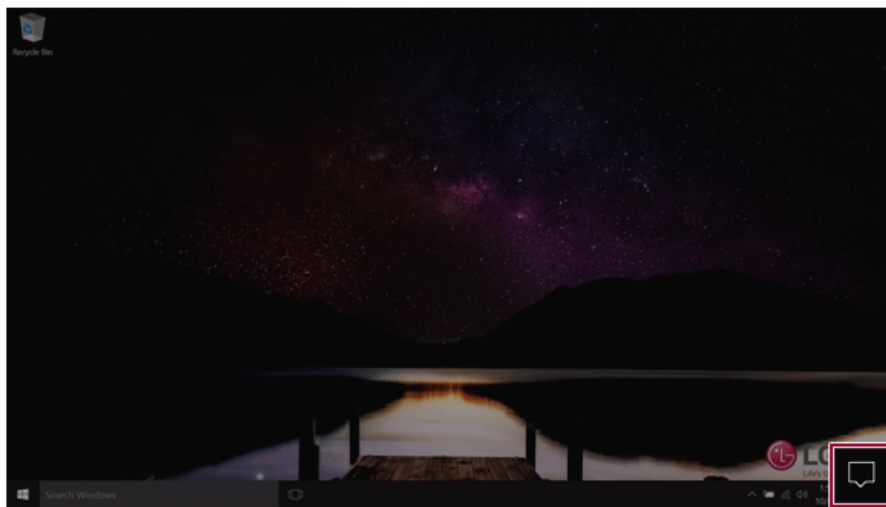

- 2 Select **[Tablet mode]** to switch Windows to tablet mode.

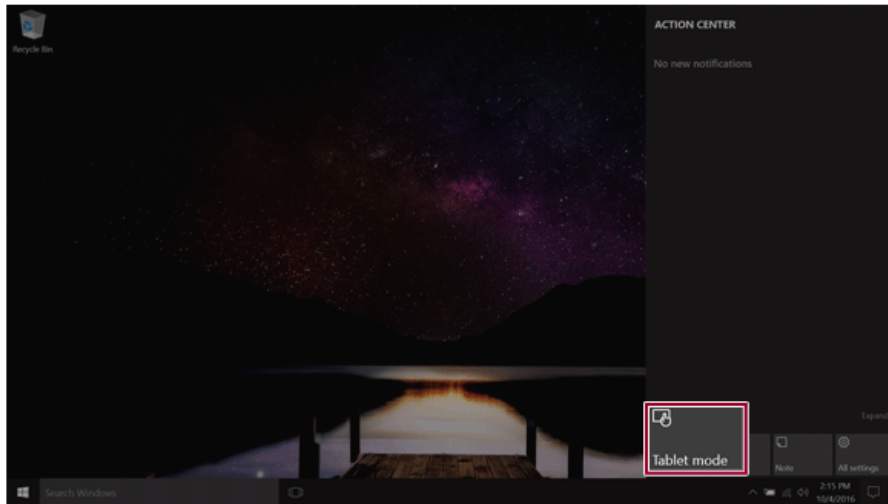

- 3 Select **[Tablet mode]** again to deactivate the mode.

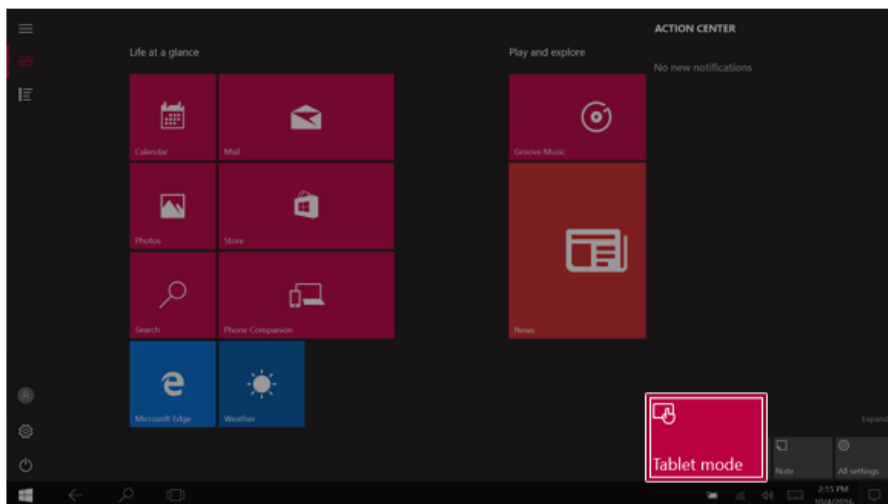

Unlocking the Screen

ENGLISH

If the PC is not used for an extended period, it goes into a locked state.

When the PC is used again, a lock screen appears for security purposes and may be unlocked by using the following method.

- 1 From the lock screen, press any key on the keyboard or drag up while you click and hold the mouse button.



- 2 When the login window appears, enter the password and click [Enter].
(If no password is set, press the login button to immediately unlock the screen.)

Setting the PC


Windows 10 supports various functions so that the user can change the PC setting easily and quickly.

Using Action Center

You can use the Action Center to easily change the settings for tablet mode, display, media connection and network settings.

The functions supported by the Action Center may differ depending on the model.

- 1 Press the Action Center [] icon on the right side of the taskbar.

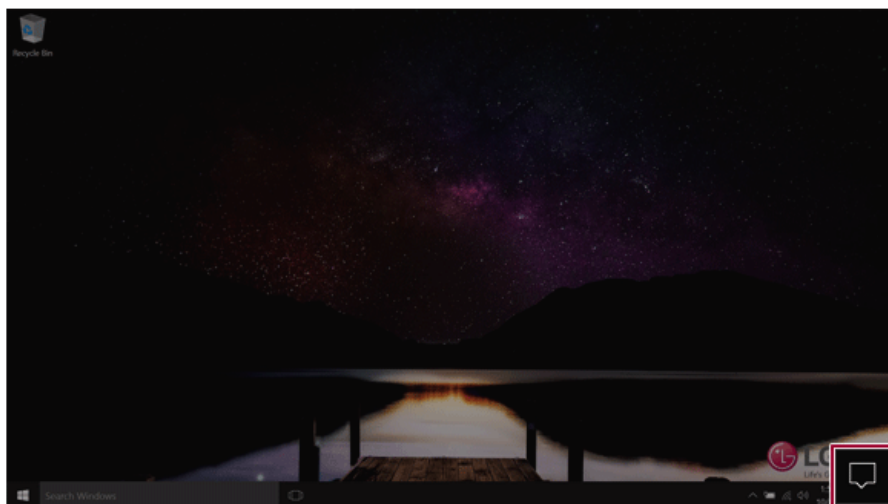


- 2 Change the PC settings as needed.




TIP

If the tile does not appear, press the [Expand] menu.

ENGLISH

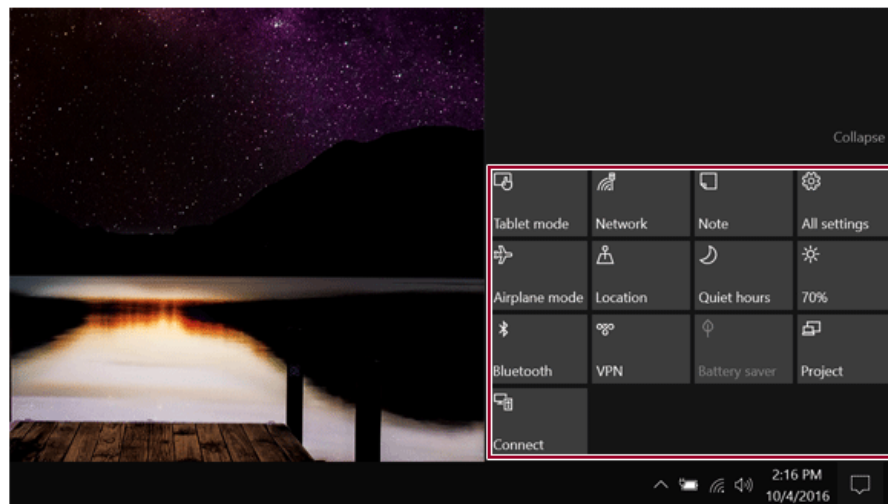


- 3 To change the detailed settings of the PC, press the **[All Settings]** tile.

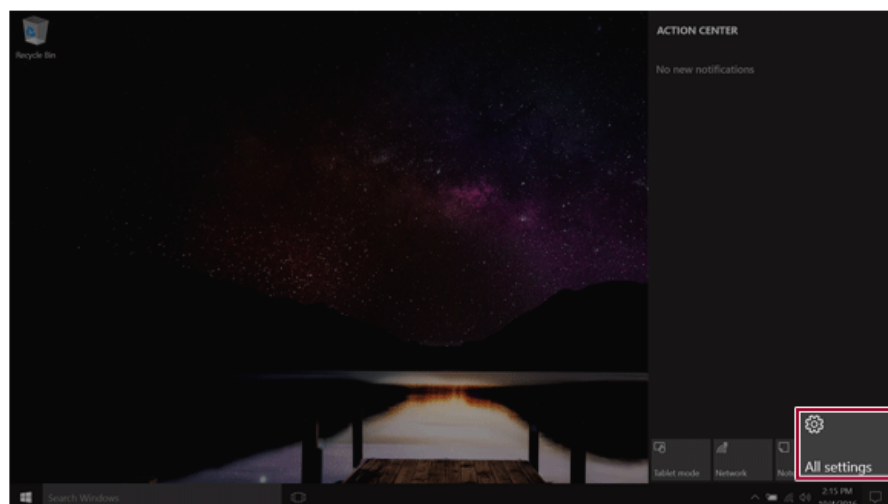


Using the Start Menu

- 1 Press the  button and select the **Settings** menu.

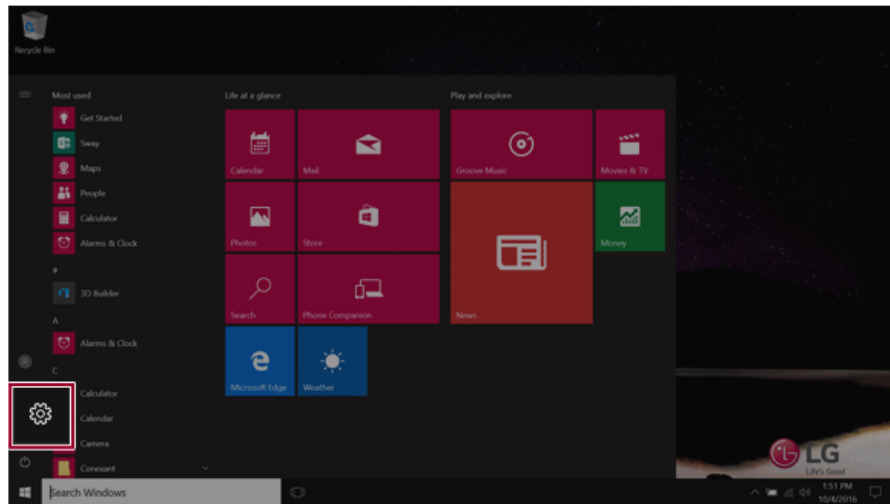

- 2 When the screen for PC's detailed settings appears, select and change the settings as needed.

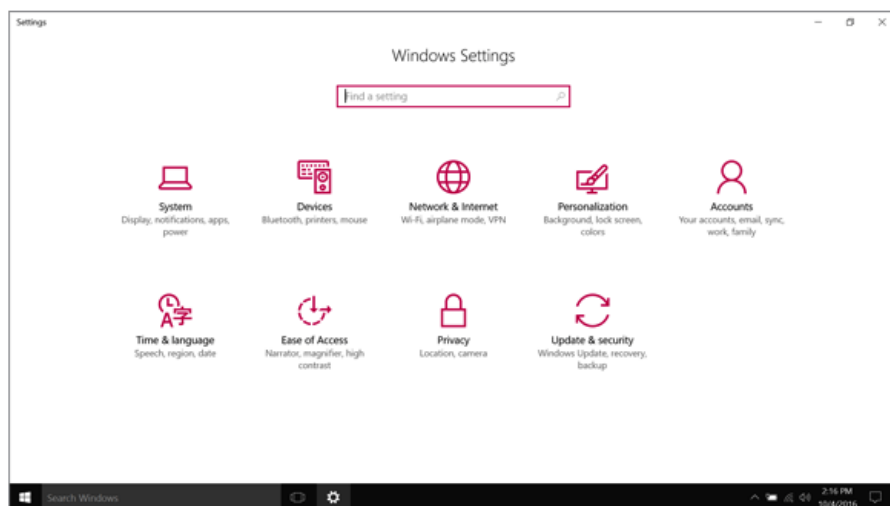

Windows Shutdown Option


ENGLISH

In Windows 10, you can use the Windows shutdown option by following these steps:

- 1 Click the  button and select the **[Power]** menu.

TIP

Press the  key or [Ctrl] + [Esc] to display the Start menu.

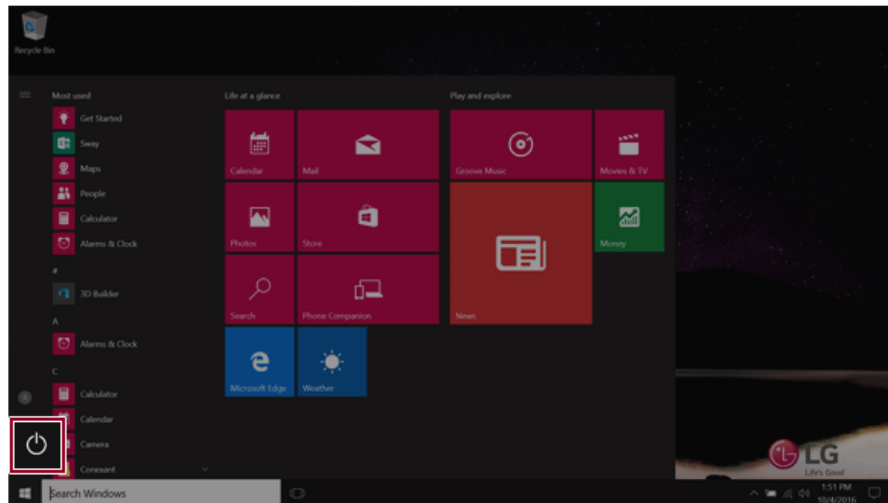

- 2 Select a Windows shutdown option.

TIP

On the Desktop screen, press [Alt] + [F4] to use the Windows shutdown option.
(Pressing [Alt] + [F4] on a running app may end the app.)

Using the PC

Using an AC Adapter and a Battery

Connect the AC adapter to power and charge the product.

TIP

The power cable and the AC adapter type may differ per model type and country and there is no difference in functionality.

This product has a built-in battery pack.

The internal battery should not be arbitrarily disassembled or replaced. Arbitrarily disassembling the product may void the warranty.

If you need to disassemble or replace the battery, please visit the designated LG Electronics Service Center.

We charge a fee for removing or replacing the battery.

Using an AC Adapter

An AC adapter of 100 V - 240 V can be used.

- 1 Connect the AC adapter to a power outlet.
- 2 Connect the AC adapter to the PC.
- 3 Adjust the LCD to the most comfortable angle.
- 4 Press the PC's power button to turn on the system.



CAUTION

Do not leave a liquid container on the PC.

- The system may be short-circuited and damaged.

**WARNING**

Please use an AC adapter certified by LG Electronics Inc.

- Uncertified batteries may explode.
- It may cause a problem in battery charging or system operation.

When you use an AC adapter, follow the below directions.

- 60 °C or more high-humidity spaces, for example, inside cars or saunas, should be avoided when you use or store it.
- Do not disassemble or modify the AC adapter.
- Do not twist the AC adapter plug.
- When you connect the AC adapter, do not forcefully push the plug.

Checking the Battery State

- 1 Connect the AC adapter to the power port in the PC.



- 2 Open the LCD and check the charging state.
When the AC adapter lamp is blinking, charge it fully with the AC adapter before using it.

ENGLISH

**CAUTION**

Use batteries certified and acknowledged by LG Electronics Inc.

- Uncertified batteries may explode.

**WARNING**

The battery may explode due to excessive heat, causing fire. For a safe and efficient use of battery, follow the below directions.

- Do not short-circuit the battery.
- Keep the battery out of reach of children.
- A visible swelling of the battery pack indicates a possible danger. When this occurs, contact your local vendor or service center immediately.
- Use only a certified and designated recharger.
- Keep the battery pack away from heat. (Never put it in a microwave.)
- Do not leave inside a car under the summer heat.
- Do not leave or use at a hot and humid place like a sauna.
- Do not use the machine placed on a heating blanket or other heat reserving materials.
- Do not leave the machine turned on inside a closed space.
- Make sure that the power ports are not touched by any metallic objects like a key, coin, necklace, and watch.
- Use only a lithium secondary battery certified and guaranteed by mobile device manufactures.
- Do not disassemble or modify the battery. Do not compress or pierce the battery.
- Do not apply shock to the battery. For example, do not drop the battery from a high place.
- Keep the room temperature between -5 °C and 40 °C. Do not expose the PC to heat hotter than 60 °C.
- Keep the machine dry.
- Do not discard the battery arbitrarily as you are requested to follow the local procedure for discarding the battery.
- Before using this machine, read this guide carefully.

**TIP****When the PC is not used for an extended period of time, refer to the following:**

- Check the battery charge level on a regular basis and keep it at 50%. This allows you to extend the battery life.
- If the battery is left fully charged for an extended period of time, the battery capacity and battery running time may be reduced.
- If the battery is left fully discharged for an extended period of time, it may become over-discharged and cannot be charged again.

For more efficient use of the battery, read the following carefully.

- The battery runs low naturally even if it is kept unused.
- To increase battery lifespan, use the battery for a while before charging it rather than keeping the battery completely charged.
- If you don't use the product for a long time with the battery completely charged, the battery lifespan may decrease.

The battery capacity may change due to chemical reactions during charge and discharge.

- The system checks the charge status of LG batteries frequently, and then calculates and indicates the actual battery duration on the current system setup.
- The battery is wearable goods and thus the life span may become shorter with use. The battery running time may also become shorter accordingly.
- When the battery is fully charged, the machine stops recharging. It resumes recharging when the battery charge rate drops below 95%. This feature secures the safe and efficient use of the battery.
- When the temperature of the battery drops below 10 °C, it is charged in a low current to protect the battery cells. In this case, charging time may stretch to up to 32 hours.

If you use the system at a low temperature, refer to the following:

- The battery capacity may be reduced depending on the chemical characteristics of the battery and the system may not be turned on after it freezes or it is turned off.
- If the system freezes or if it is not turned on, connect the AC adapter to the system and charge the battery fully before use.
- If there is any error in the indication of the battery capacity, charge and discharge the battery two or three times at room temperature to return to the normal operation.

Operation Status Lamps



1 AC Adapter Lamp

- On: The AC adapter is connected.
- Off: The AC adapter is not connected.

If you try to turn on the system that has entered the Hibernates mode or been turned off after a low-battery alarm, the system will not be turned on but the lamp will blink three times. In this case, connect the AC adaptor and charge the battery sufficiently before use.

2 Storage Device (HDD, SSD, eMMC) Indicator Lamp

- When the PC accesses the storage device, the indicator lamp turns on.

Do not turn off the power forcibly while the storage device indicator lamp is on or blinking. Otherwise, the disk or its data may get damaged.

3 Power Lamp

- On: The system is on and running by the AC adapter or battery.
- Off: When the system is turned off or in Hibernate mode
- Blinking: The system is in the standby mode.

- 4 Caps Lock Lamp
 - On: When the caps lock is activated
 - Off: When the caps lock is deactivated
- 5 Touchpad Lamp
 - On: When the touchpad is activated
 - Off: When the touchpad is deactivated
- 6 Webcam Operation Status Lamp
 - On: When the webcam is operating
 - Off: When the webcam is not operating
- 7 **Reader Mode/Daylight Mode** Lamp
 - On: The **Reader mode** or the **Daylight mode** is activated.
 - Off: The **Reader mode** or the **Daylight mode** is deactivated.

**OPTION**

A touchscreen model does not support the **Daylight mode**.

Keyboard

The keyboard allows the user to input data or give commands.

The keyboard may differ in appearance and color depending on your country.



CAUTION

- Spilling a watery substance like coffee or juice on the keyboard may cause a fault, malfunction, or electric shock.
- The keys may not work properly when you use several keys at the same time while playing a PC game. (Please change the key combination settings according to the combinations necessary for the game play.)

Using Hot Keys

You can use the hot keys shown below to use the PC conveniently.

Fn + F1	Executes LG Control Center
Fn + F2	Decreases LCD brightness, which can have eleven different levels.
Fn + F3	Increases LCD brightness, which can have eleven different levels.
Fn + F4	Runs the mode defined in Windows Sleep Mode . (Example: Standby Mode, Hibernate Mode)
Fn + F5	When the [Fn] + [F5] keys are pressed, the mode switches in the order of Touchpad Off (touchpad is not enabled), Touchpad Auto (touchpad is not enabled when an external USB mouse is inserted), Touchpad On (touchpad is enabled). Initialization takes 1 to 2 seconds. It is recommended to use after the initialization.
Fn + F6	Airplane Mode ON/OFF (Wireless LAN, Bluetooth OFF/ON)
Fn + F7	Switches between monitor and projector.
Fn + F8	Its function differs depending on the model. It performs one of the following functions: Switches to the [] Backlight mode. Runs [] Audio Manager.
Fn + F9	Each time you press [Fn] + [F9], the product switches in the order of Reader Mode On, Daylight Mode On, Mode Off.  OPTION A touchscreen model does not support the Daylight mode.

Fn + F10	Mute
Fn + F11	Turns down the volume.
Fn + F12	Turns up the volume.
Fn + Prt Sc	Works as the [Scr Lk] (Scroll Lock) key.
Fn + Delete	Works as the [Insert] key.
Fn + Ctrl	Works as the [Pop-up Window] key.
Fn + ◀	Works as the [Home] key.
Fn + ▶	Works as the [End] key.
Fn + ▲	Works as the [Page Up] key.
Fn + ▼	Works as the [Page Down] key.

Shortcut Keys



TIP

- To change the input mode temporarily, you can press the [Shift] key together with the letter you want to enter. By doing so, you can enter an uppercase letter when the **Caps Lock** key is not pressed and a lowercase letter when it is pressed.

To use Windows more conveniently, remember the following Windows key combinations:

-  + R
Displays an input window for program execution.
-  + Tab
Displays the running desktop in the preview.
-  + M
Minimizes the current window.

Keyboard Backlight

You can set the **Keyboard Backlight** function to use the product in a dark environment.

The figures herein are subject to change without prior notice.



OPTION

This only applies to the products that have the **Keyboard Backlight** function.

Configuring **Keyboard Backlight**




TIP


You can use hot keys to use the **Keyboard Backlight** function more conveniently.

- Each time you press the [Fn] + [F8] keys, the status changes to **KBD Backlight Off**, **KBD Backlight Low**, and then **KBD Backlight High** in the specified order.

- Select the  button > [LG Software] to run [LG Control Center].
- On the **LG Control Center** screen, select the [System Settings] menu.

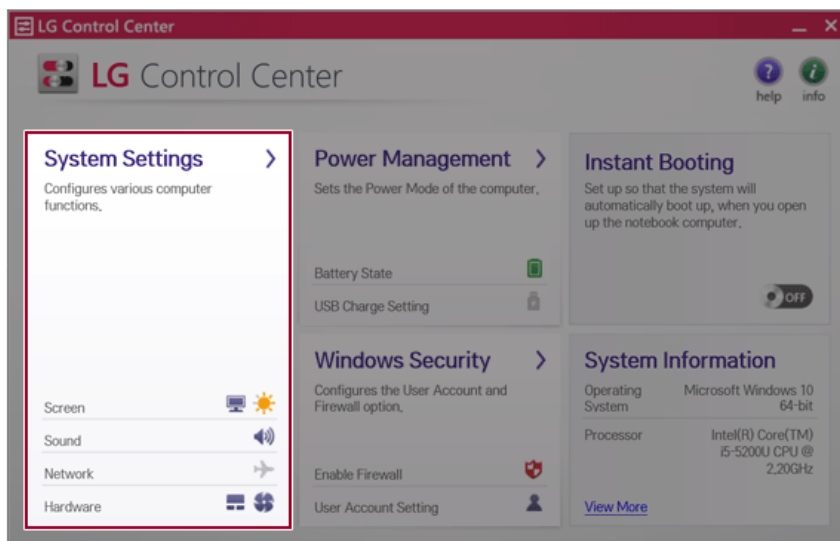

- 3 Go to **Keyboard Backlight** and select your desired options.

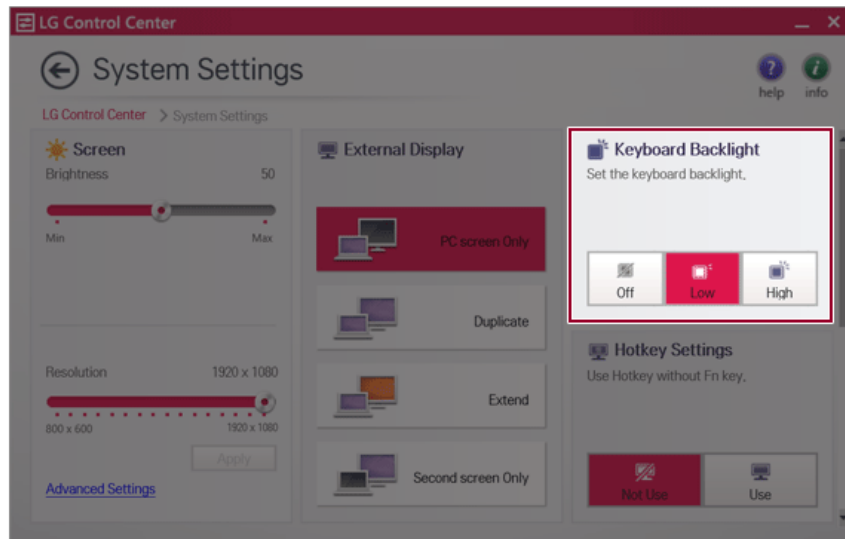

Adjusting Screen Brightness and Volume

ENGLISH

LG PC allows you to use the hot keys to easily adjust the screen brightness and volume.

TIP

According to the model type, a button for volume control (mute, volume up / down, DTS, etc.) may be available.

Function	Hot Keys	Comments
Screen Brightness	[Fn] + [F2], [F3]	Press the [F2] key to darken the screen or the [F3] key to brighten it. Press the Action Center  icon on the right side of taskbar to run the Action Center. Click the [Brightness] tile to adjust the screen brightness.
Volume	[Fn] + [F11], [F12]	Press the [F11] key to lower the volume or [F12] key to increase the volume. Press the  icon on the right side of the taskbar to adjust the volume.
Mute	[Fn] + [F10]	Press the button to turn on or off the mute feature. Press the  icon on the right side of the taskbar to mute the sound.


Using the Touchpad

The built-in touchpad provides the same functionality as an external mouse. You can use the touchpad and USB mouse simultaneously.

For best performance, it is recommended to use the driver provided by the touchpad manufacturer.

The driver provided by the touchpad manufacturer is preinstalled when you purchase this product. You can reinstall the driver through LG Update Center.


The touchpad scroll feature is not supported in the model that supports the gesture feature.

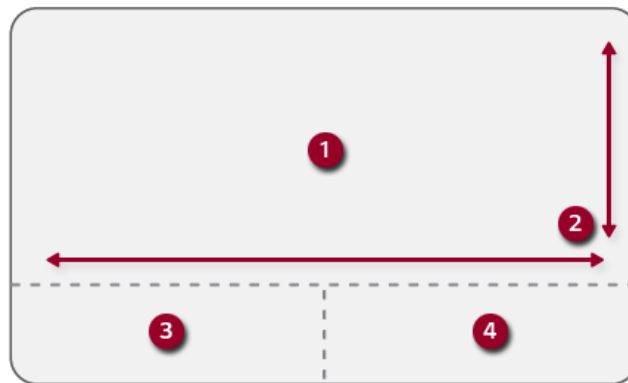

- 1 Touchpad
 - Moves the cursor.
- 2 Scrolling area
- 3 Left button
 - Use to select or execute programs.
- 4 Right button
 - Functions as the right button of a mouse in most cases. However, the usage may differ depending on programs.


Moving the Cursor (Pointer) on the Screen

Place a finger on the touchpad and glide the finger.

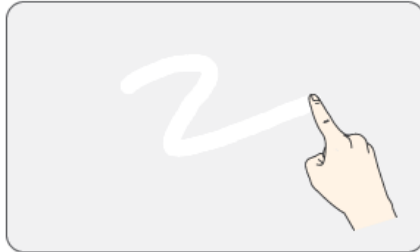**Click (Select)**


Press and release the left button swiftly with a finger. (Or tap the touchpad once.)

Do this, for example, to select a menu or icon and to place the cursor to type on a word processor file.

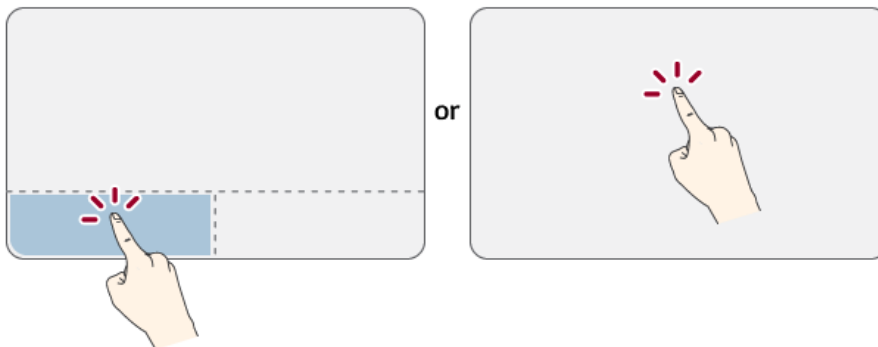**Double-click (Execute)**

Press the left button twice consecutively and release the button. (Or tap the touchpad twice.)

Do this, for example, to run a program after selecting its execution file (or icon).

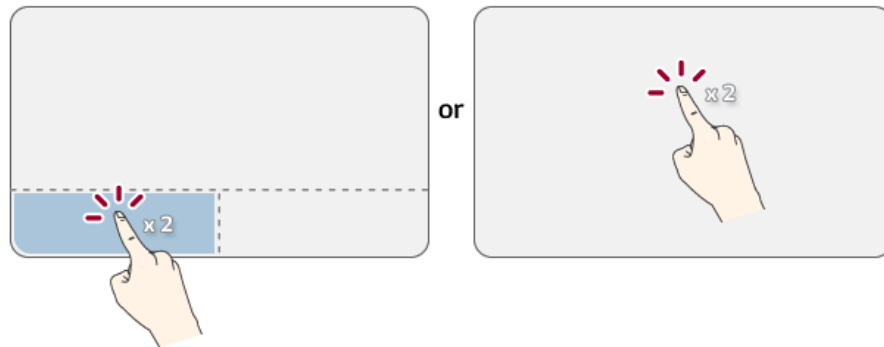
**CAUTION****Notes on Using the Touchpad**

- Do not use a sharp object such as a pen on the pad nor peel the cover. It may cause an impairment.
- Do not place more than one finger, and do not use while wearing a glove or when the hand is wet. The Touchpad will not work properly. Oil or dirt at the fingertip can also cause an impairment.
- The touchpad is sensitive. Do not impose excessive force or maintain an uncomfortable position. Otherwise, it may result in a finger or wrist injury.

Right button

Press and release the right button swiftly.

Functions as the right button of a mouse, but the usage may differ depending on programs.

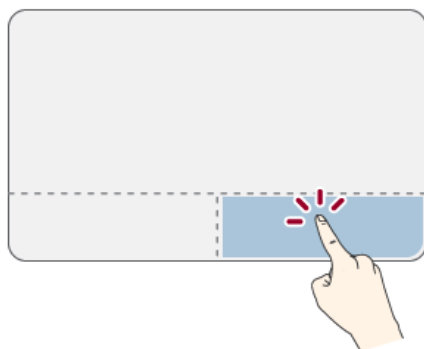


Drag & Drop

To drag, click and hold an icon, and move it to another location.

To drop, release the dragged icon in the location you want.

To move a file icon to another folder or to **Recycle Bin**, place the cursor (or the pointer) on the icon, press and hold the left button, and glide another finger on the touchpad until the icon reaches the aimed location. After reaching the destination, release the left button.

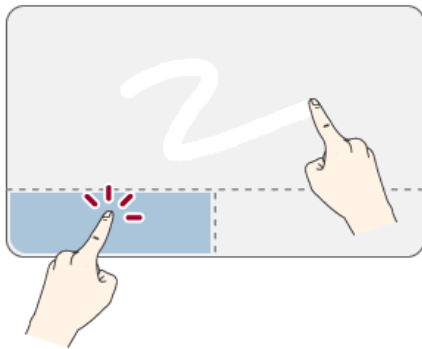**1 Drag**

- Glide one finger on the pad with another finger pressing and holding the left button.

2 Drop

- Release the left button to drop it into the **Recycle Bin**. (By using this, you can drop a file into the **Recycle Bin** at will.)

ClickLock


When activated, this feature allows you to drag/scroll without pressing and holding the left button.

- 1 Click the  button and select the Settings menu.

TIP


Press the  key or [Ctrl] + [Esc] to display the Start menu.

ENGLISH

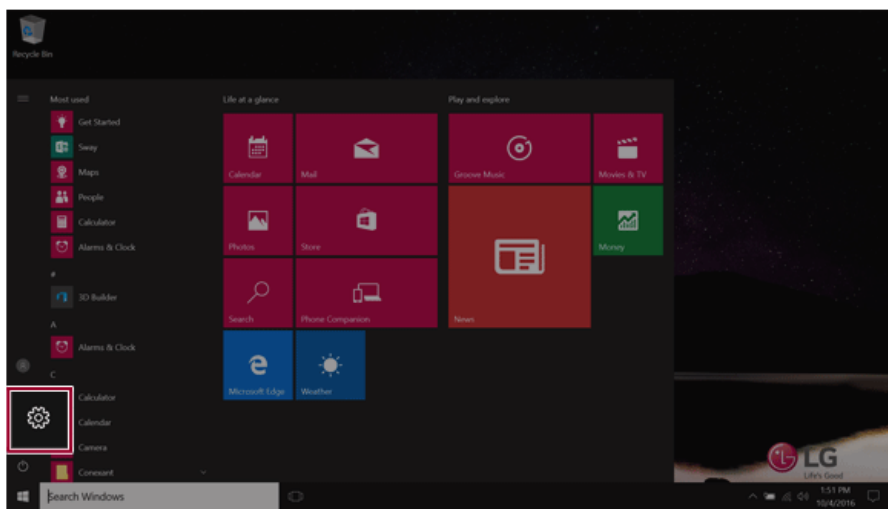


- 2 When the [Settings] screen appears, select [Devices].


ENGLISH

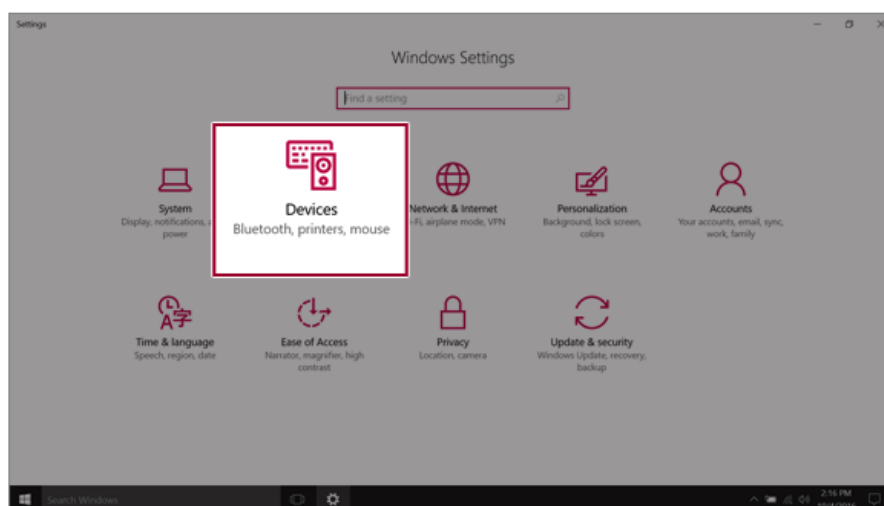


- 3 Select [Mouse and touchpad] > [Additional mouse options].

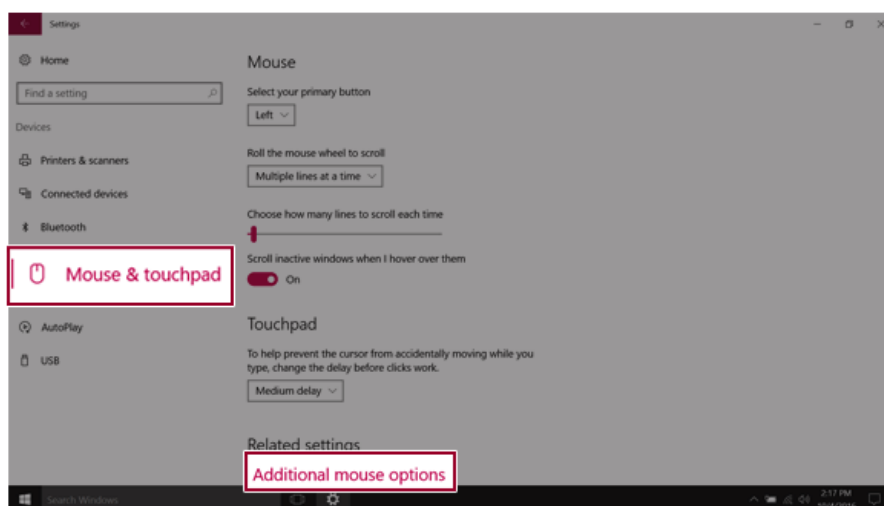

- 4 When [Mouse Properties] screen appears, select [Turn on ClickLock].

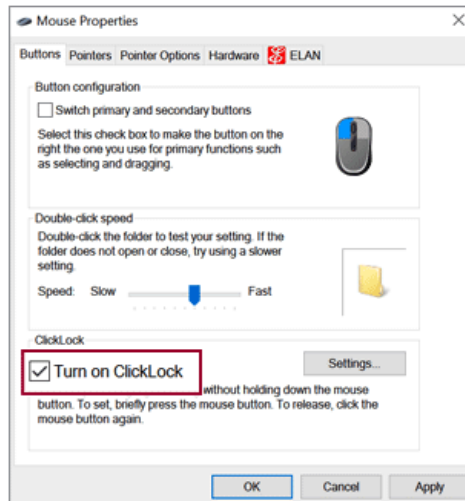


- 5 Press [Settings] to set the time for the ClickLock.

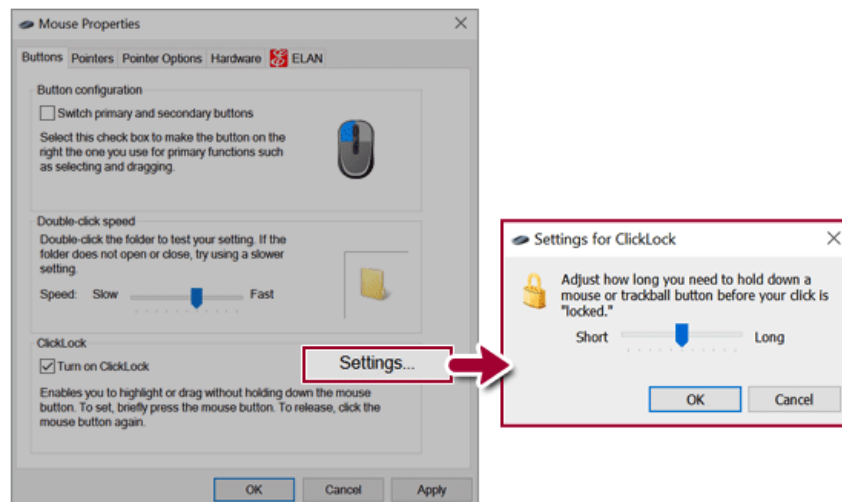


- 6 Press the left button of the touchpad and release it to change the button into the pressed state.

ENGLISH

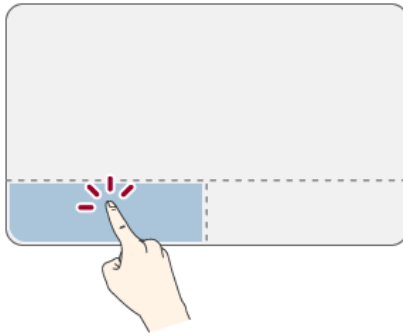

- 7 Move on the touchpad to use the drag/scroll feature.

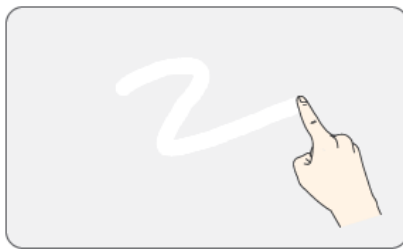

- 8 Press the left mouse button to turn off the ClickLock.


Touchpad Gesture

The touchpad gesture feature allows you to use Windows programs more easily by utilizing multi-touch functions.

Windows 10 Touchpad Gestures allow you to use the PC more easily.


The touchpad gesture feature may not be supported in some models.

- Place two fingers on the touchpad and move up/down/left/right to scroll the screen.
(It operates only on an app or screen which scrolling is available.)

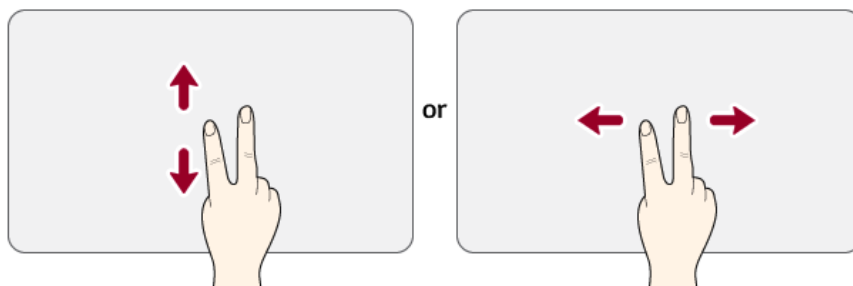

ENGLISH

- Place two fingers on the touchpad and widen or narrow them to zoom out or in.

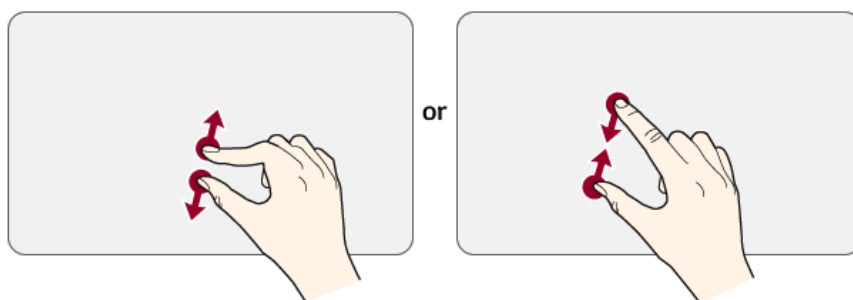


Setting Touchpad

ENGLISH


You can change the touchpad features or enable/disable the gesture feature.

The figures herein may differ by language selection and are subject to change without prior notice.

- 1 On the desktop taskbar, double-click the touchpad settings icon.

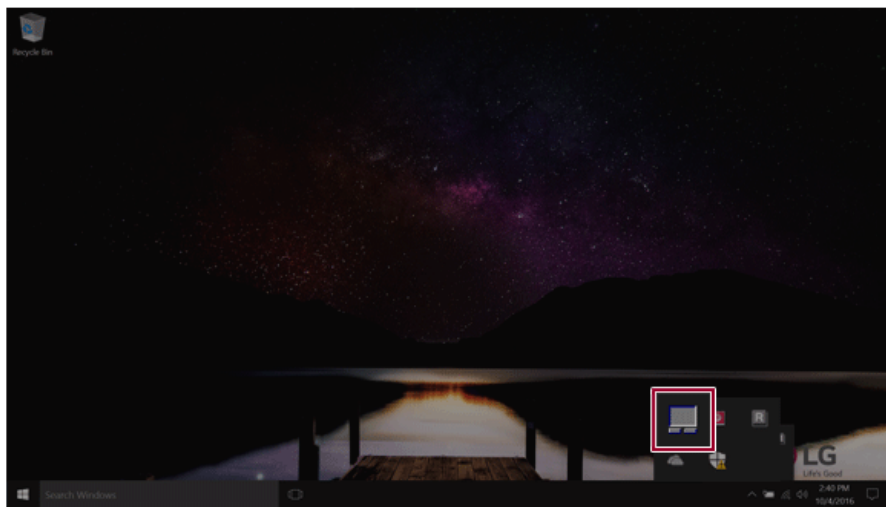

- 2 When the following screen appears, change the settings and click [OK].

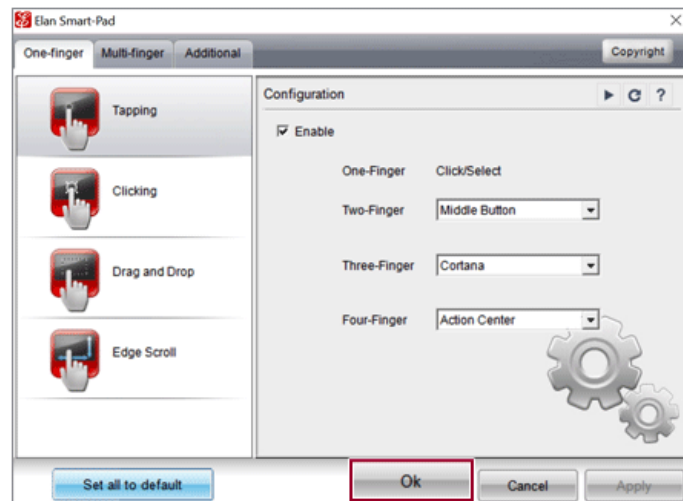

Using Touch Panel

ENGLISH

Use the touch panel for a faster and more convenient use of the PC. All gestures provided by Windows 10 can be used.

For more details about the Windows 10 gestures, refer to Windows help.



OPTION


This applies only to models equipped with a touch panel.

Basic Usage


- 1 **Touching Once:** Touch the panel once to use as left mouse button.



- 2 **Touching Twice:** Touch the panel twice to use as double-click.

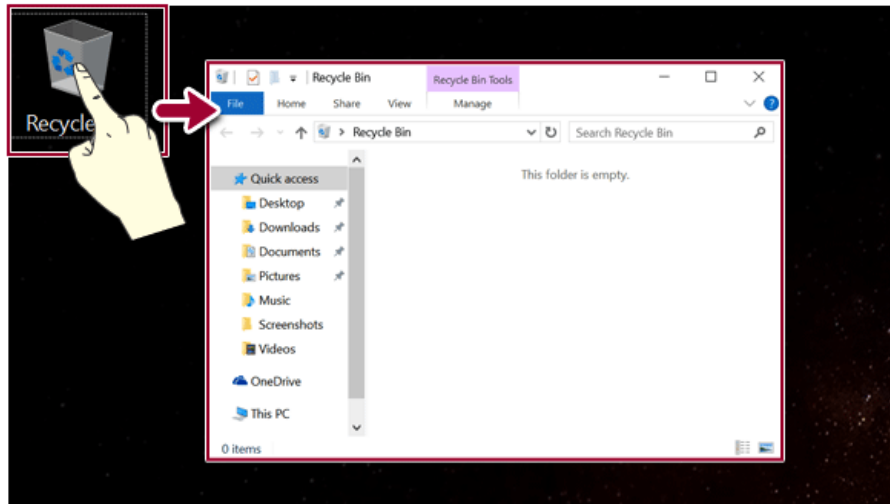


- 3 **Drag:** After touching the start point, finger movement can be used instead of the mouse.

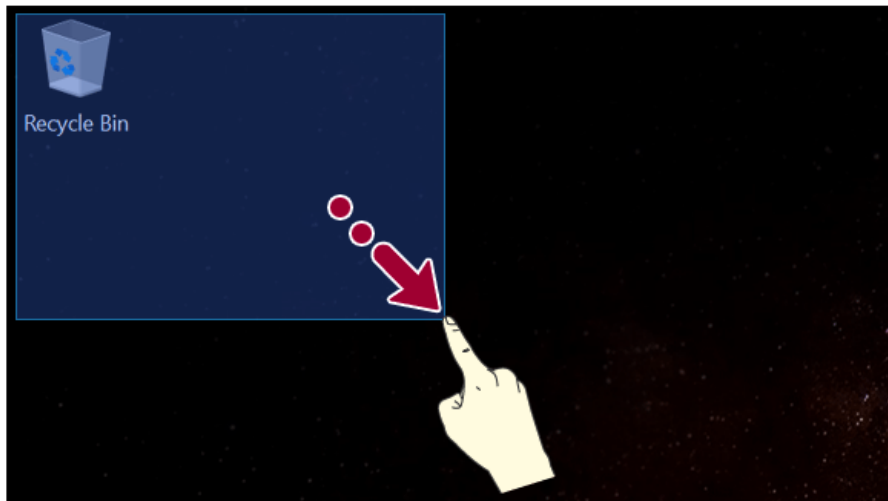


- 4 **Touching Longer:** Touch the panel for a longer time to use as right mouse button.

ENGLISH

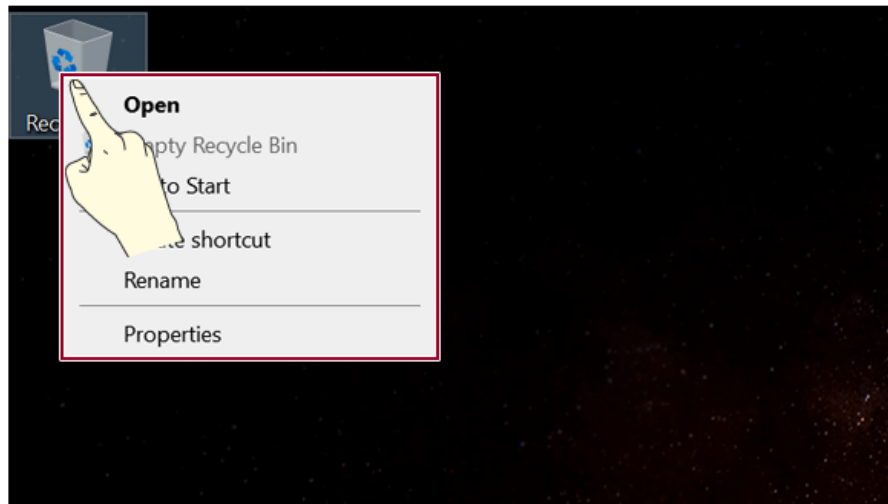

Using the Touch Keyboard

- 1 Press the  icon on the right side of taskbar to display the [Keyboard] screen as shown below.

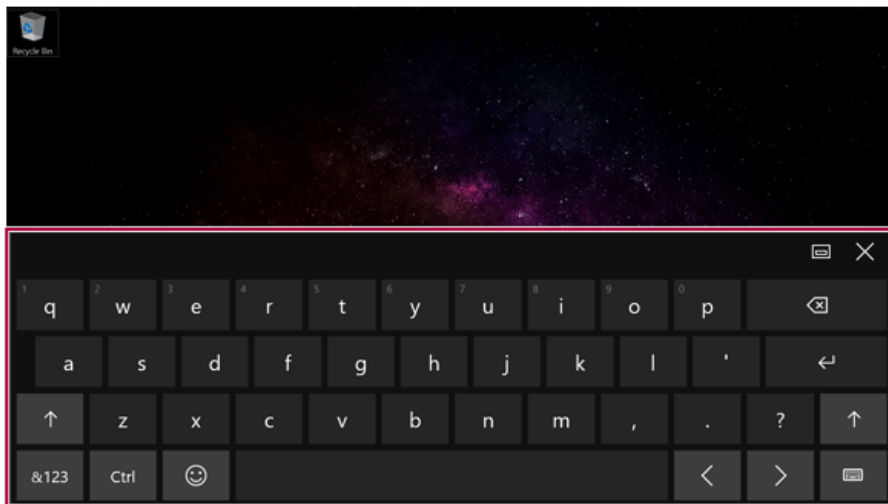

Connecting to External Display

ENGLISH

Connecting to the HDMI Port

HDMI is a high-speed multimedia interface that can transfer uncompressed full digital audio and video signals.

When LG Notebook PC supports SPDIF, HDMI is not supported.

In some models, DTS Audio may not work when you use HDMI.

TIP


Ensure the monitor power is off before connecting the external monitor to the PC.

Use '**HDMI to VGA Gender**' to connect to VGA port.

HDMI to VGA Gender is available at LG Service Center.

It supports HDCP 1.4 specifications.

- 1 Connect the HDMI cable to the PC and the external device (TV, monitor) that supports HDMI.
- 2 HDMI port transfers both video and audio simultaneously. Hence, there is no need for a separate audio connection.

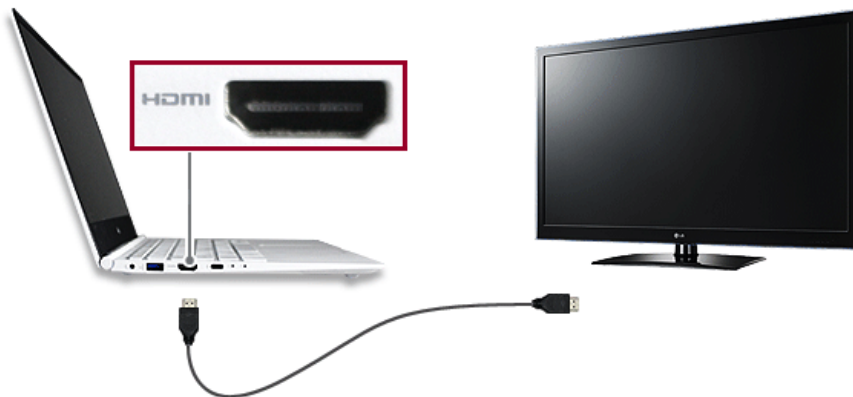

- 3 On the PC, press [Fn] + [F7] to display monitor (projector) toggling screen. Select the desired screen output.

 TIP

- Every time [] + P keys are pressed, the screen output option changes. Release the keys to display the selected screen output.



CAUTION

- If you do not set Speaker as the default value after disconnecting the HDMI cable, the system may not produce any sound.
- If a program was running already, you need to exit and restart the program for it to produce sound.

Connecting to Wireless Display

ENGLISH

The wireless display feature connects the PC screen and sound to a display (TV, projector, etc.).




OPTION

- To use the wireless display feature, the display device must support this feature.
- To connect to the display device that does not support wireless display, you must separately purchase a wireless display connection device.
- Once the wireless display connection is established, no additional procedures and searching are necessary the next time you try to connect.

Connecting to Wireless Display


- 1 Press the Action Center [] icon on the right side of the taskbar.

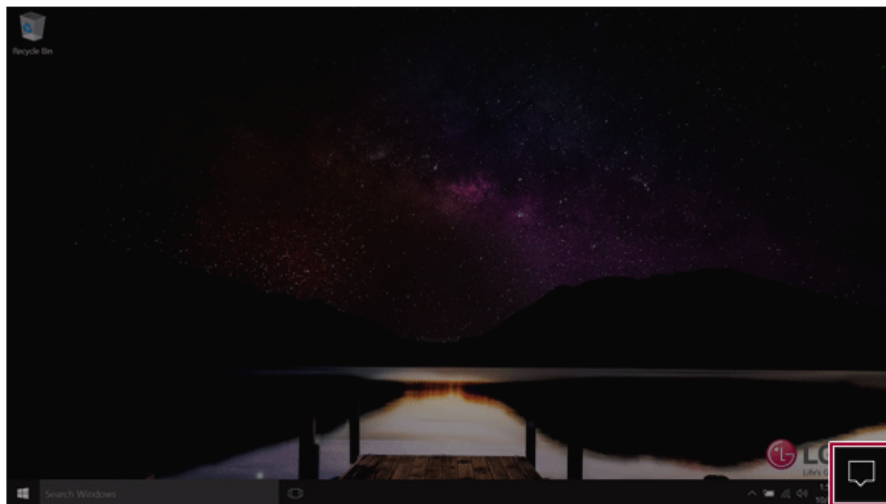


- 2 When the Action Center screen appears, press the **[Connect]** tile.

**TIP**

If the tile does not appear, press the **[Expand]** menu.

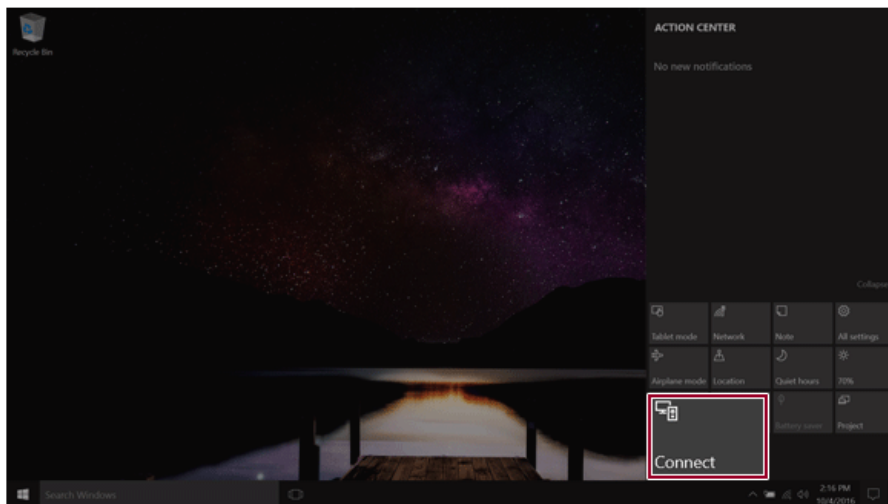
ENGLISH

- 3 Search for wireless display devices in the proximity.

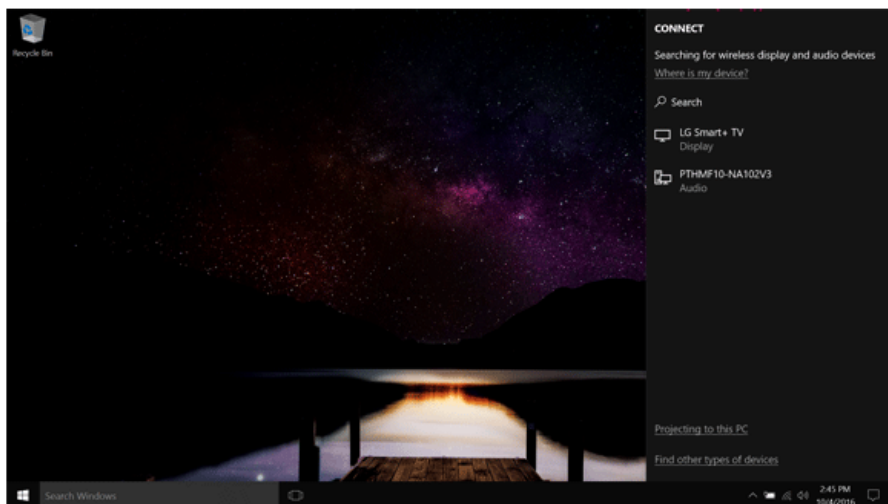

- 4 If the device is connected as shown below, the PC screen and sound are produced on the wireless display device.

ENGLISH

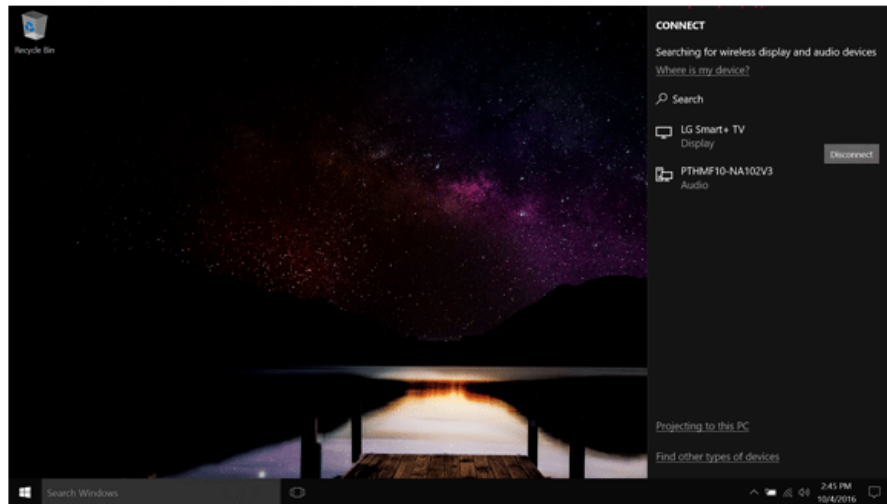

Using the USB Type-C™ Port

The USB Type-C™ port mounted on this product supports USB 3.1 Gen 1 (USB 3.0) standards. Use the USB Type-C™ port to charge the notebook PC battery or to output a screen to an external display.

Connecting a USB Device

If a USB device is connected to the USB Type-C™ port, it works as an ordinary USB port.



TIP

When a USB device that supports **Power Delivery 5 V / 2 A Profile** is connected, it supports a 5 V / 2 A output.

To use a conventional USB device, a separate conversion adapter should be used.
(Conversion adapters may be purchased separately.)

Charging a Battery

Connect a power supply unit that supports **Power Delivery 20 V / 2 A Profile** to the USB Type-C™ port to charge the notebook PC battery.



CAUTION

Unless a **20 V / 2 A Profile** is supported, the power supply unit does not support the charging feature.

Outputting to an External Display

By connecting a display that supports USB Type-C™ Alternate Mode, you can use the USB Type-C™ port to output a screen to an external display.



TIP

We support DisplayPort (DP) interface standards.
It supports HDCP 1.4 specifications.



CAUTION

You must use a cable that supports **Alternate Mode** to output a screen to another display.
If you use USB Type-C™ accessories (cables or interface conversion adapters) that are used for other products, you may have compatibility problems (no screen output or a malfunction).

Bluetooth

ENGLISH

Bluetooth allows the user to access wirelessly various devices such as camera, cell phone, headset, printer, and GPS receiver that support Bluetooth. It can also establish a network and exchange data with other Bluetooth-enabled PC or smartphone.



OPTION

The Bluetooth device is optional, and it may not be available in some models.

The figures herein may differ by language selection and are subject to change without prior notice.


For details on connecting a Bluetooth device, refer to the user manual that came with the Bluetooth device.

- 1 Click the  button and select the Settings menu.




TIP

Press the  key or [Ctrl] + [Esc] to display the Start menu.

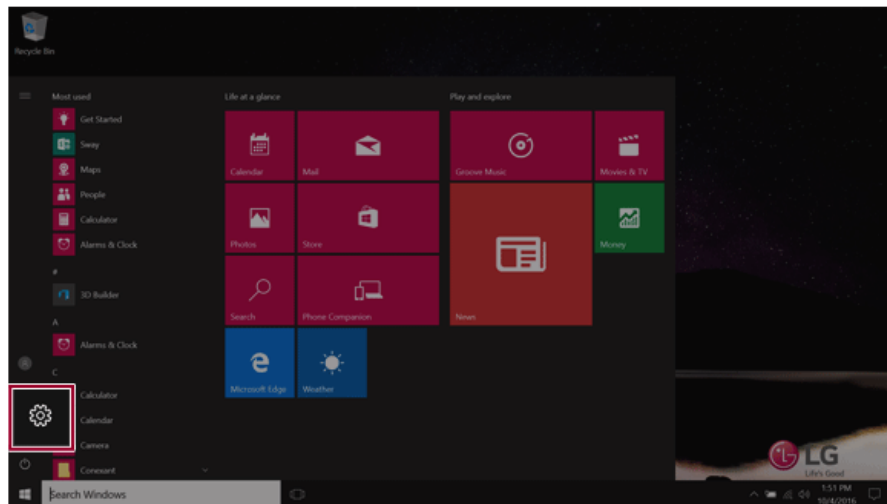


- 2 When the [Settings] screen appears, select [Devices].

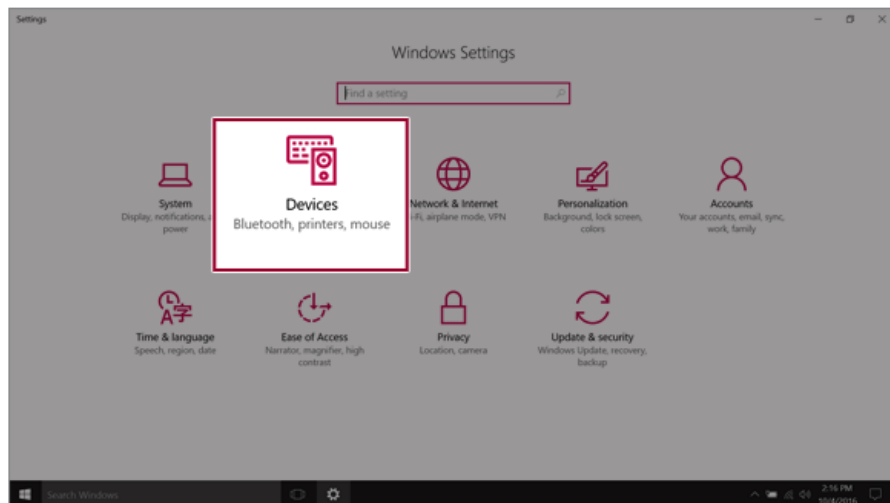


ENGLISH

- 3 Select the [Bluetooth] menu to search for Bluetooth devices automatically.

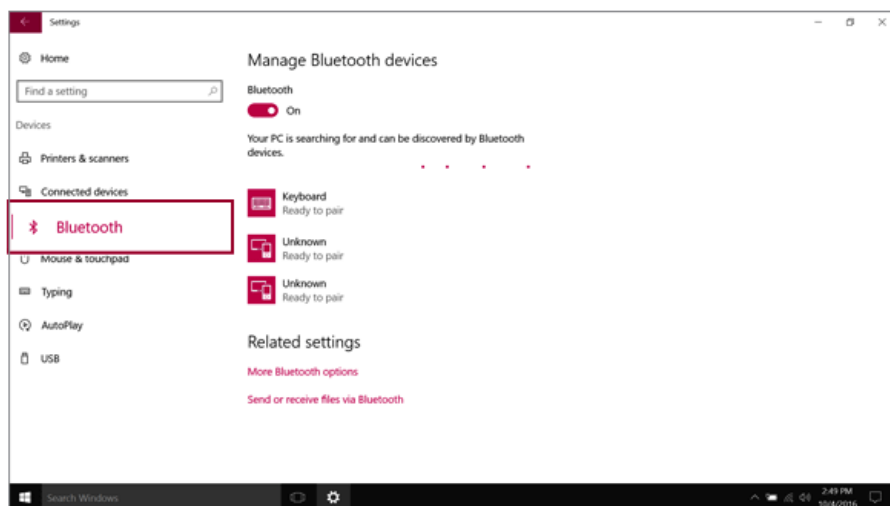

- 4 Select a device to connect and press [Pair].

ENGLISH

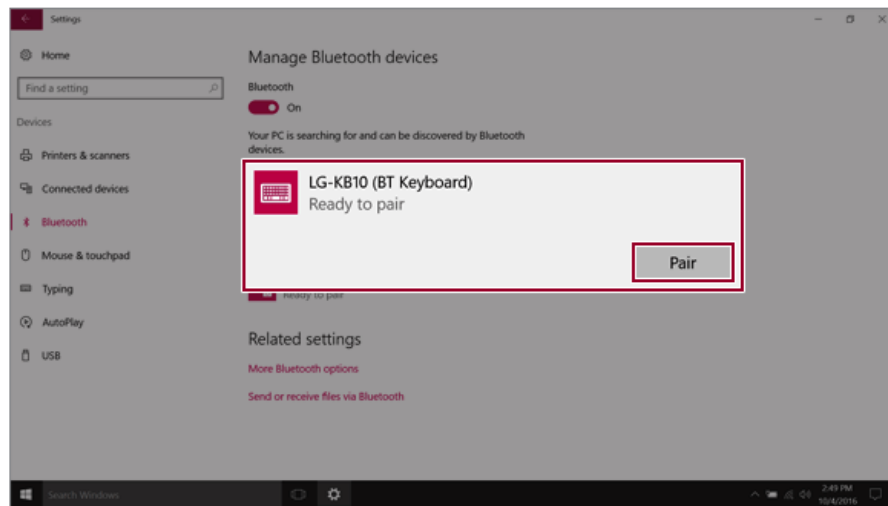

- 5 Complete the Bluetooth connection as directed.

Wired LAN

LAN is the network environment that users can connect to by using a cable to connect to their internet providers or the company's network.

Using Wired LAN

Wired LAN is installed with an automatic IP (DHCP) as default value.

Please refer to the following instructions for details on setting up an automatic IP (DHCP) or manual IP.

- 1 Connect the LAN adapter to the USB Type-C™ port on the PC.

TIP

The recommended network cable for the optimal network environment is CAT5 or higher.
The network (LAN) cable may be connected when the LAN adapter is used.
The LAN adapter may be separately purchased at LG Service Center.



- 2 Connect the wired LAN cable to the LAN port.

ENGLISH




- 3 Press the  button and select the **Settings** menu.

TIP



Press the  key or [Ctrl] + [Esc] to display the Start menu.

ENGLISH

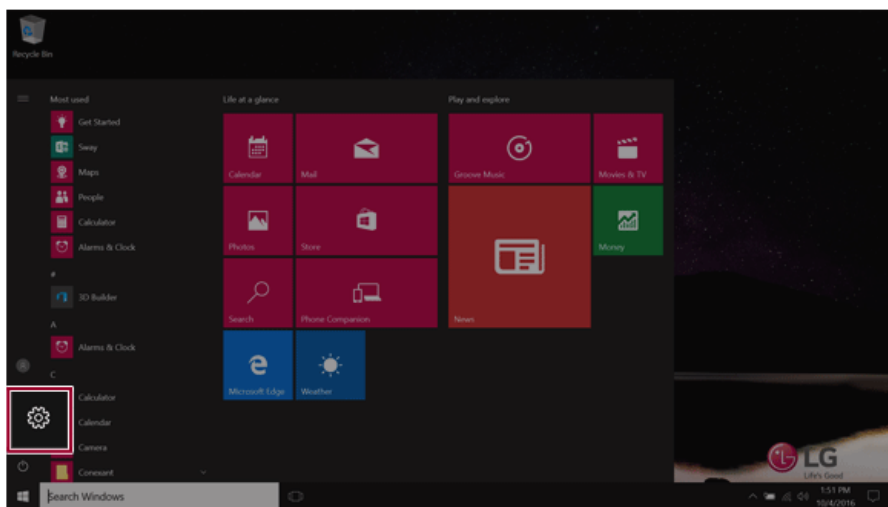


- 4 Select **[Network & Internet] > [Status] > [Change adapter options]**.

ENGLISH

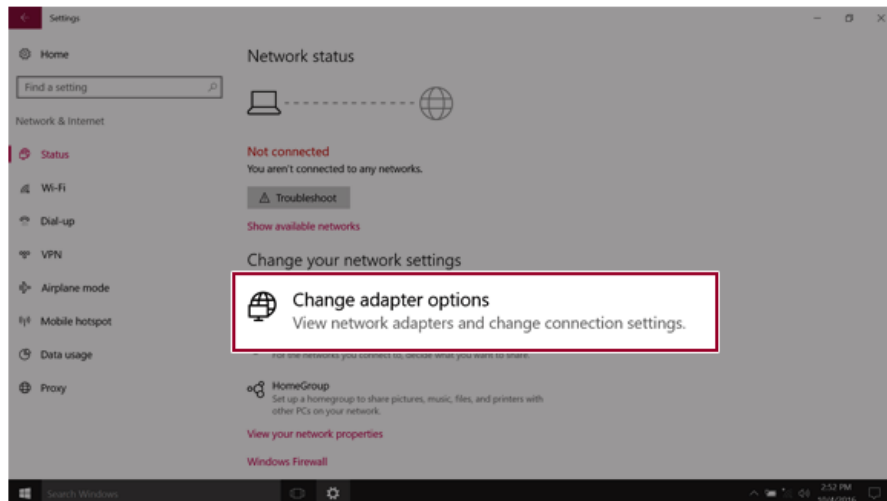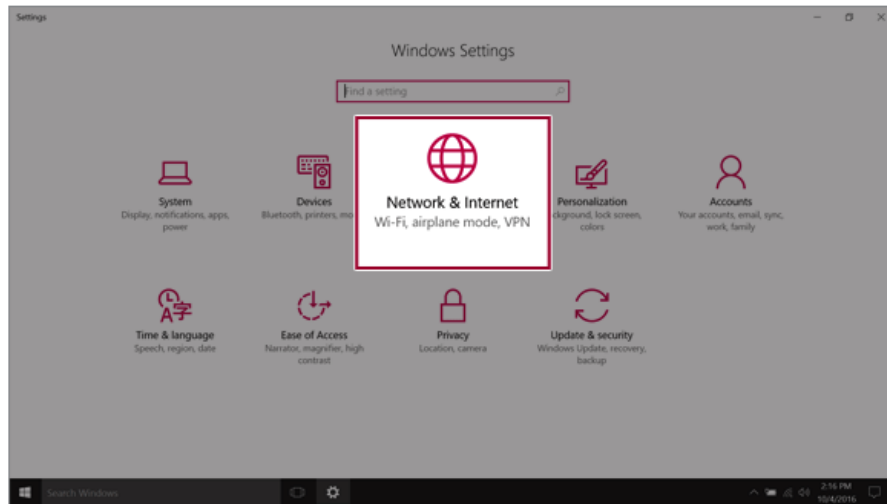


- 5 Right-click **[Ethernet]** and select the **[Properties]** menu.

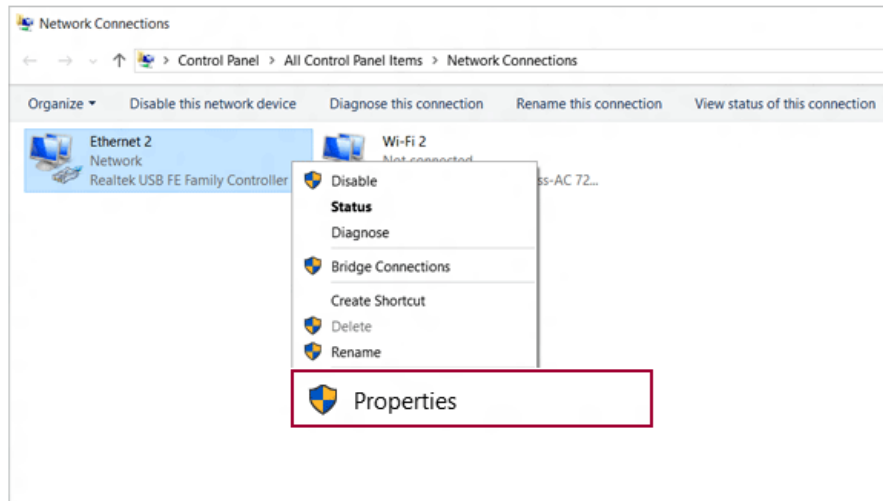


- 6 Select **Internet Protocol Version 4 (TCP/IPv4)** and then click **Properties**.

ENGLISH

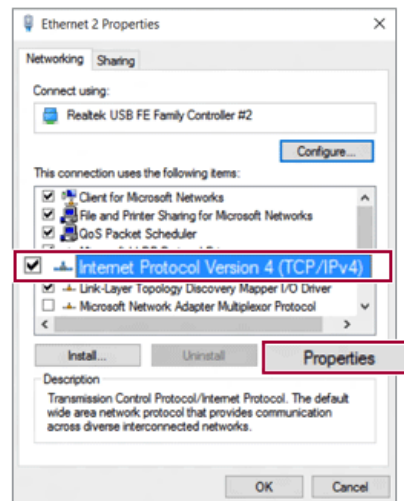

- 7 To use an automatic IP(DHCP), select **[Obtain an IP address automatically]**. If you wish to use a static IP, select **[Use following IP address]** to enter the address.
Contact the network service provider or administrator to use a static IP.

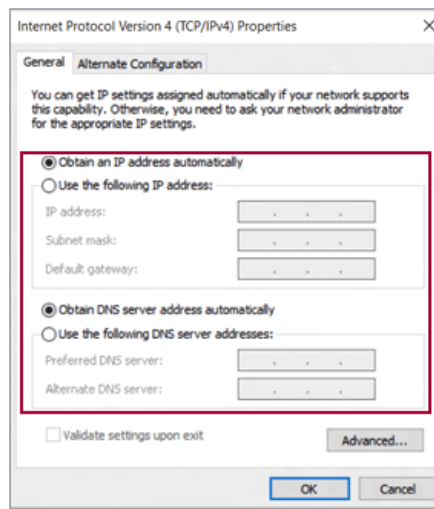

- 8 Press **[OK]** to complete the network setup.
- 9 click the Internet Browser icon to check whether the internet is operating normally.

Wireless LAN

The wireless network (Wireless LAN) is the network environment that connects a PC with the internet provider or company network through an Access Point (wireless or regular router).



OPTION

Wireless LAN is optional. Hence, it may not be installed in some models.

Turning On/Off **Airplane Mode**

Prior to using the wireless LAN, press [Fn] + [F6] to turn off **Airplane mode**.

Pressing [Fn] + [F6] keys will turn on or off the **Airplane mode**. If you are not going to use the product for a while, keep the **Airplane mode** turned on to reduce the battery power consumption.

Using the Wireless LAN


If an Access Point (wired or wireless router) is in the vicinity of the PC, the wireless LAN can easily be accessed.

During the search for a wireless network (Wireless LAN), various Access Point may be found according to the location where the PC is used.

In case no accessible wireless network (Wireless LAN) is near the PC, no Access Point might be found.



A password protected Access Point cannot be accessed without the correct password.

- 1 Press the Action Center [] icon on the right side of the taskbar.

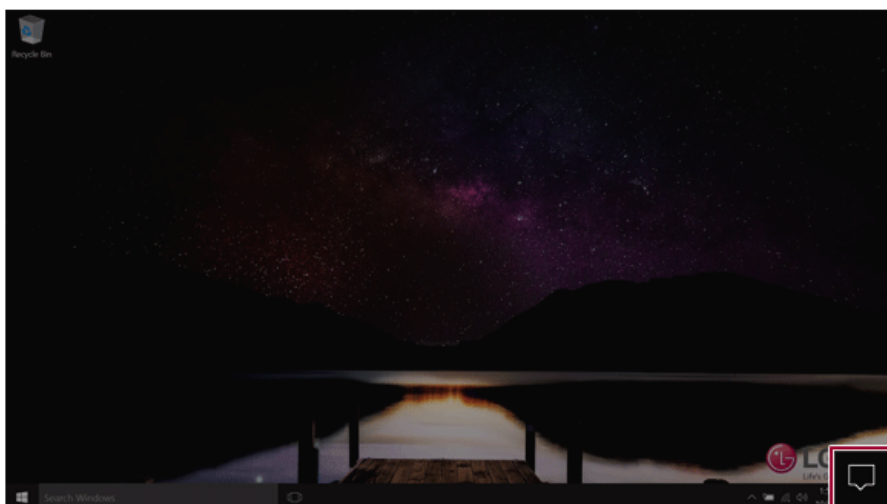


- 2 Press the **[Network]** tile to search for a nearby Access Point.

ENGLISH

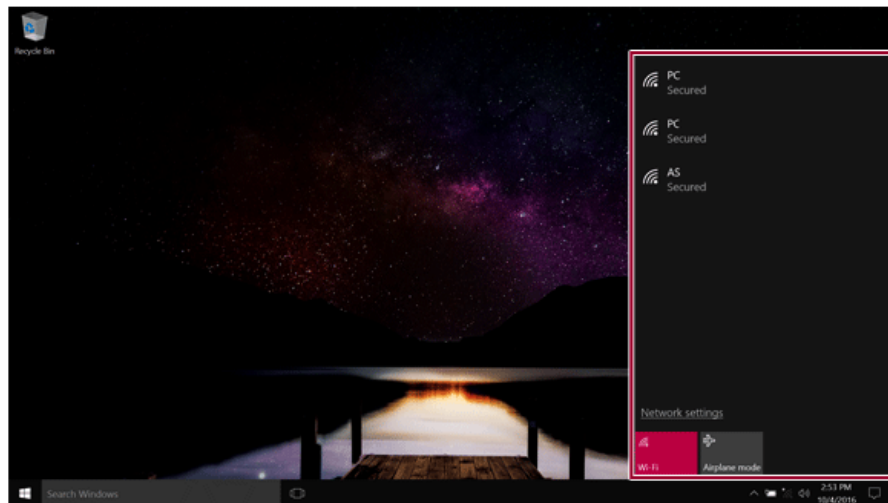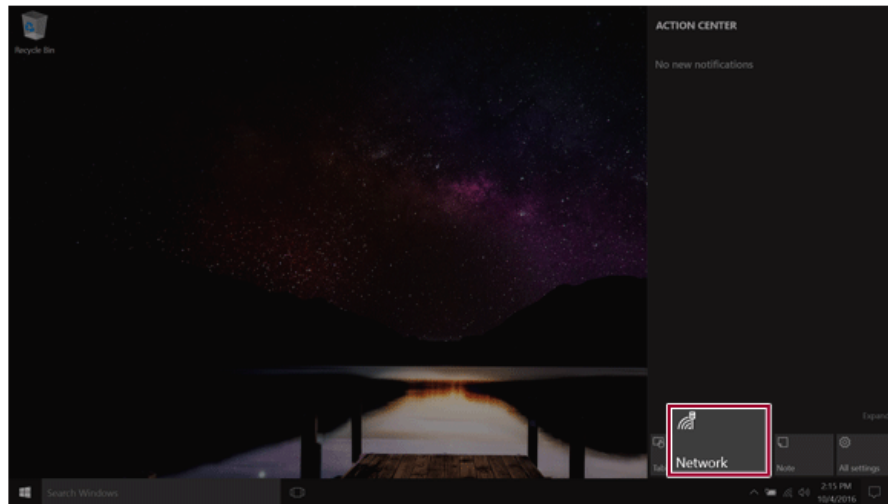


TIP

If **Wi-Fi** is turned off, press the **[Wi-Fi]** tile.

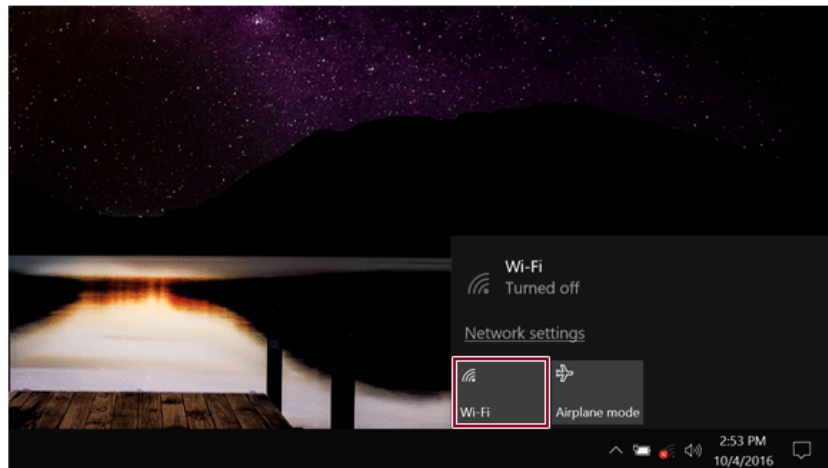


- 3 Select the Access Point you want to connect to and press [Connect].

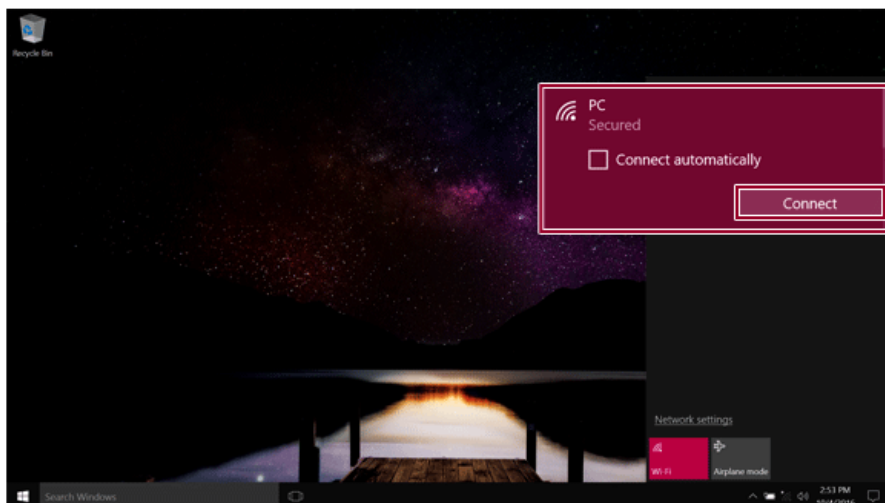

- 4 If a connection is established, [Connected] appears below the Access Point name.

ENGLISH

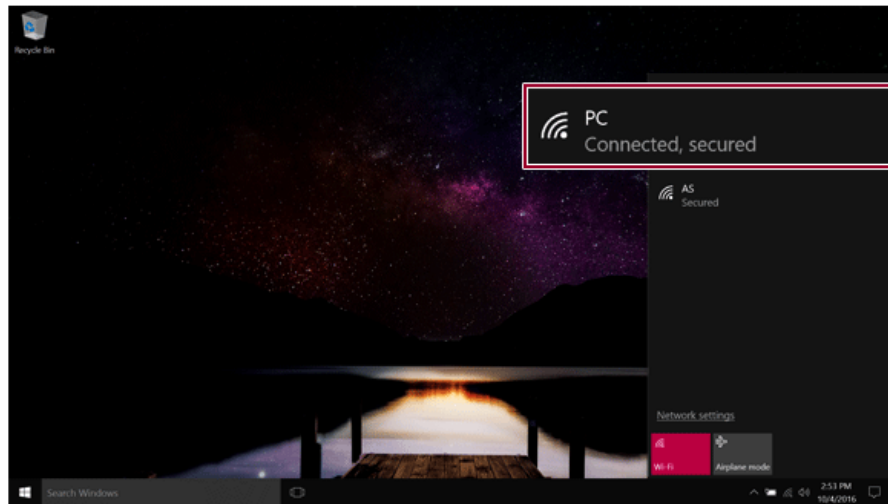

- 5 click the Internet Browser icon to check whether the internet is operating normally.

Using a Wired/Wireless Router

A wireless / regular router connects several PCs and mobile devices to one internet line and enables the use of internet and the network.

A wireless / regular router has to be bought separately. Refer to the manual provided by the manufacturer for instructions.

Connecting a Wireless or Regular Router

If one internet line is used with a wired / wireless router and several devices are connected, this may result in a slower connection.

In case of a wireless LAN, it is recommended to change the network name and security settings for a more secure connection.

Network speed can differ according to operation environment and specifications.

- 1 Connect the internet cable of the modem that was provided by your internet provider to the router's WAN port.
- 2 Connect all devices (PC, IPTV, internet phone, etc.) with a LAN cable to LAN ports 1 to 4 of the router.

The number of LAN ports can vary for each router model.

- 3 Please refer to the manual provided by the router manufacturer for setup of the network and internet.

Micro SD Slot

ENGLISH

Checking Available Memory Card

This model supports Micro SD memory cards.

- Directly applicable memory cards



micro SD

Mounting and Using Memory Card

This product supports one **Micro SD** slot.

Check the direction and insert the **Micro SD** into the multi-card slot until it is locked in place as shown in the following figure.

**TIP**

- When the memory card is formatted, the data stored in the memory card will be deleted. Check whether there are important data before formatting the memory stick.
- To format a memory card, right-click the memory card drive and select Format. When the Format window appears, press Start to continue.
- If the write protection tab of memory card is locked, the user cannot format the memory stick nor write or delete the data.
- SD™, MMC™ memory cards can be used only as storage devices and do not support the copyright protection feature.


Removing Memory Card

Push the card with your finger to make the card spring out of the slot. Remove the memory card.

 TIP**To safely remove a memory card:**

The figures herein may differ by language selection and are subject to change without prior notice.

- 1 Click **Safely Remove Hardware and other Media** icon on the right side of the taskbar.

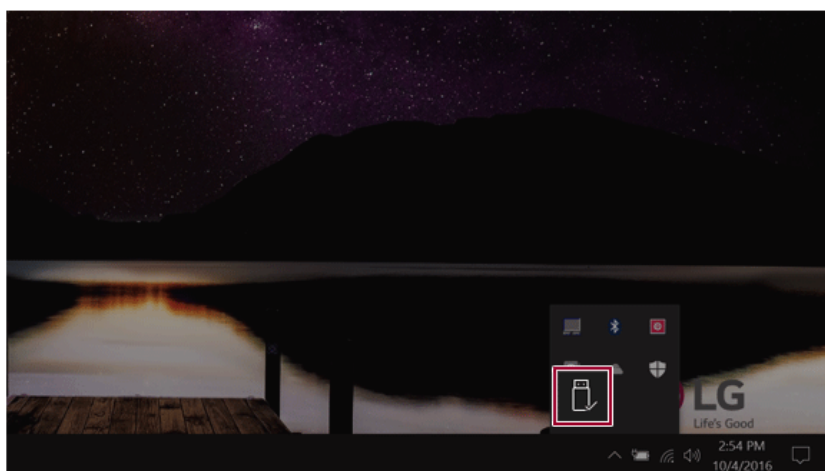

- 2 Select **Remove Multi-Card USB Device** to safely remove hardware.

Using Software

LG Control Center

LG Control Center is a software that helps you to change PC Settings, Power Settings, Windows Security Settings, etc. as well as viewing system information.


TIP

The menus displayed in **LG Control Center** and its supported functions may differ depending on the model.

The figures herein are subject to change without prior notice.

Running LG Control Center

Select the [] button > [LG Software] to run [LG Control Center].

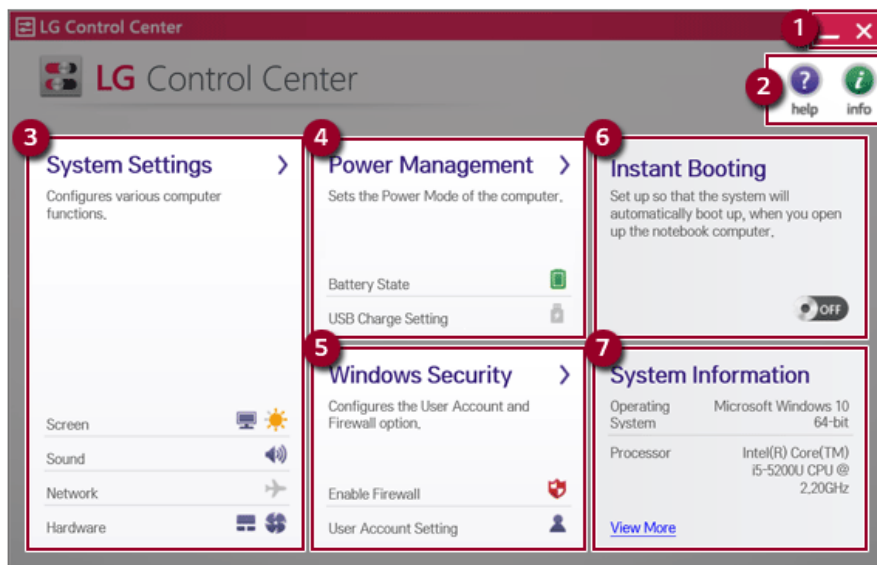


- 1 **Minimize/Exit Button:** Minimizes the size of the window, or exits the software.
- 2 **help/info:** Runs Help or displays information about the software.

- 3 **System Settings:** Sets up the screen brightness / resolution, external display, sound and other various devices.
- 4 **Power Management:** Sets up USB charging, battery status and battery life extension.
- 5 **Windows Security:** Sets User Account Control settings and Firewall settings.
- 6 **Instant Booting:** You can set the system to automatically boot whenever you open the notebook PC.
- 7 **System Information:** Displays the PC OS in use, processor information and other system information.

System Settings Screen


You can use this screen to configure various devices in your PC.

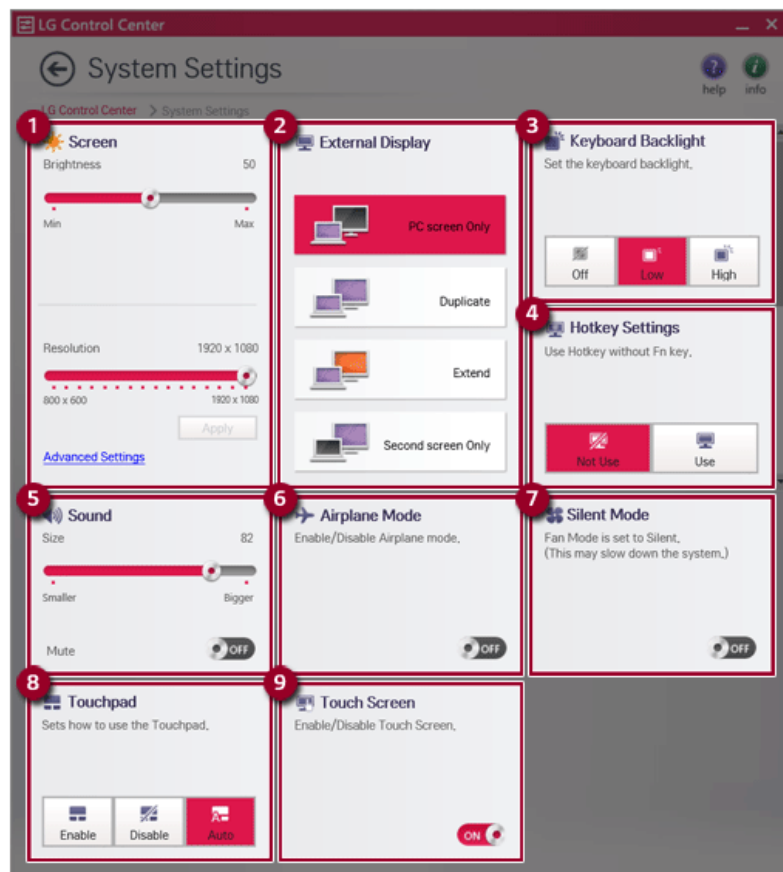

- 1 **Screen:** Allows you to set the brightness and resolution of the screen. (This function is not supported in a model that does not provide the brightness settings in Windows.)
- 2 **External Display:** Allows you to configure the connection mode of an external display connected to the PC.
- 3 **Keyboard Backlight:** Allows you to configure the Keyboard backlight.
- 4 **Hot Key Settings:** Allows you to set the hot keys so that you can use them without pressing the Fn key.
- 5 **Sound:** Allows you to adjust the volume of the sound or use the mute function.
- 6 **Airplane Mode:** Allows you to set the Airplane Mode. (It turns off the wireless LAN).
- 7 **Silent Mode:** Allows you to set the fan to the low-speed mode.
- 8 **Touchpad:** Allows you to set whether to use the touchpad. (If you select Automatic, the touchpad is automatically set to "Do Not Use" when you connect a mouse to your PC.)
- 9 **Touch Screen:** Allows you to set whether to use the touch screen.

Power Management Screen:

You can check or change the settings related to USB charging or battery.

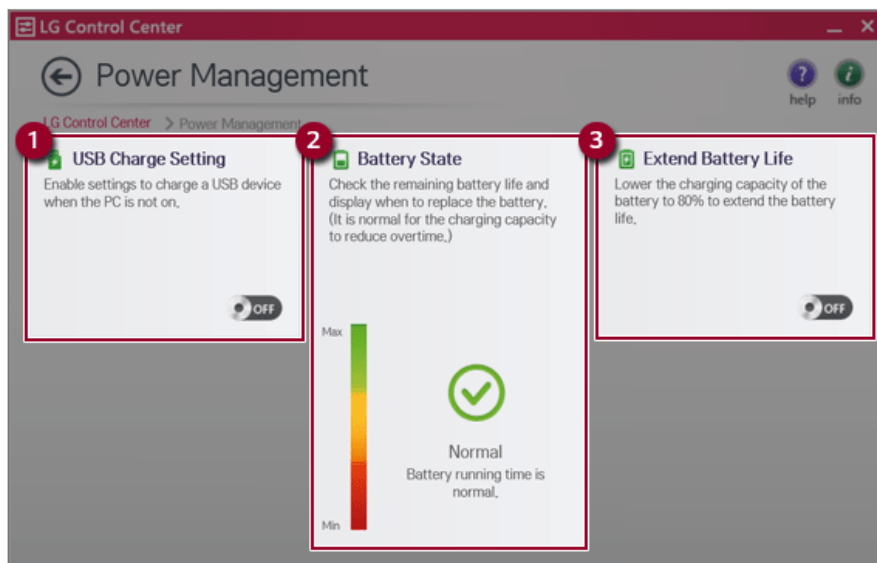


- 1 **USB Charge Setting:** Allows you to set the USB port so that you can perform charging using the USB port even when the PC is turned off.
- 2 **Battery State:** Allows you to measure the battery lifespan so that you can replace it timely.

- 3 **Extend Battery Life:** Allows you to increase the battery lifespan by lowering the battery charging level to 80% of the battery capacity.

Windows Security Screen


You can change the User Account Control and firewall settings in Windows.

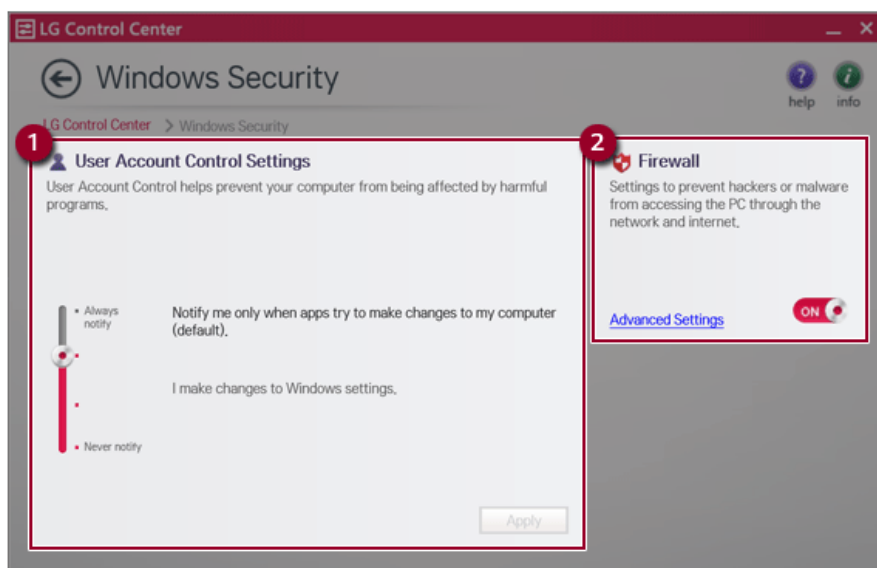

- 1 **User Account Control Settings:** Allows you to change the User Account Control settings in Windows.
- 2 **Firewall:** Turns on/off the Windows firewall. (It may not work if other vaccine software is installed in the PC.)

Instant Booting

You can set the system to automatically boot whenever you open the notebook PC.

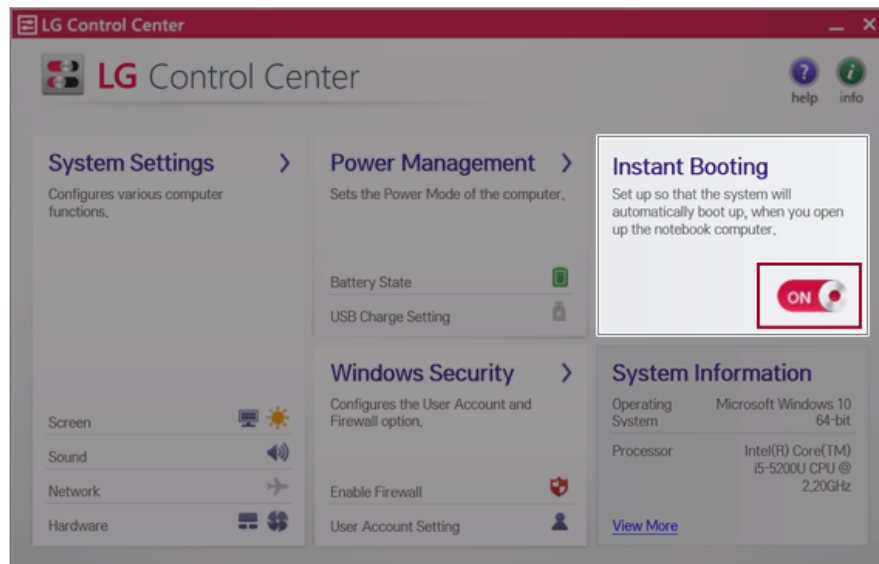

FAQ

Q: Battery status displays “Warning”.

- The battery is a consumable item and its lifespan may decrease depending on the usage frequency and environment. It is recommended that you visit the LG Electronics service center to have the battery replaced.

LG Update Center

ENGLISH

LG Update Center allows you to install various PC drivers, applications and Windows patches easily.

TIP

It may not work properly depending on user preferences (security tools, etc.) and the network status.


You can use the **LG Update Center** to quickly install the latest drivers, or reinstall any deleted drivers.

Use **LG Update Center** to keep your system current and optimized.

The figures herein are subject to change without prior notice.

Running LG Update Center

Select the [] button > [LG Software] to run [LG Update Center].

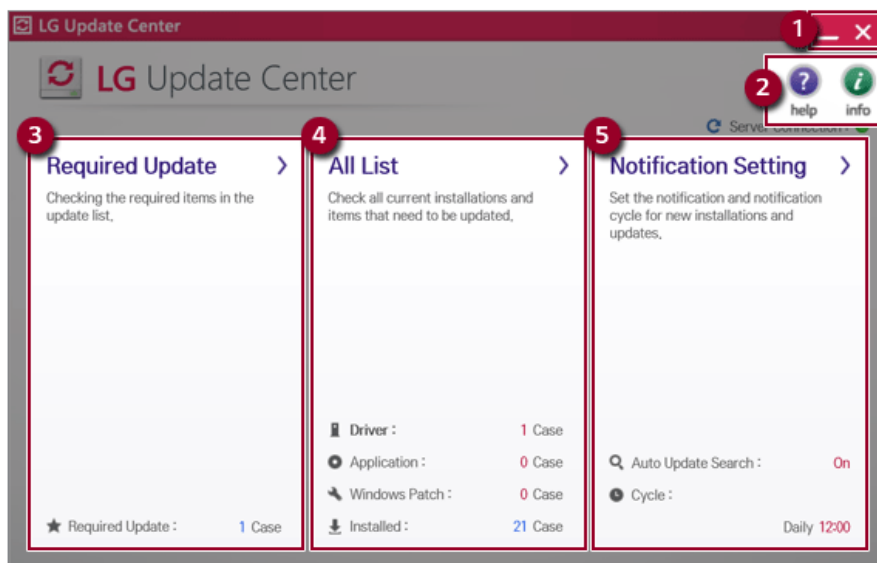

- 1 **Minimize/Exit Button:** Minimizes the size of the window, or exits the software.
- 2 **help/info:** Runs Help or displays information about the software.
- 3 **Required Update:** Installs critical items that must be applied to the system.


- 4 **All List:** Displays and installs all required items for the system.
- 5 **Notification Setting:** Sets up notifications for online updates for installed items.

Required Update

You can install essential updates and drivers that are necessary for the system.


- 1 Select the [Required Update] menu.

ENGLISH

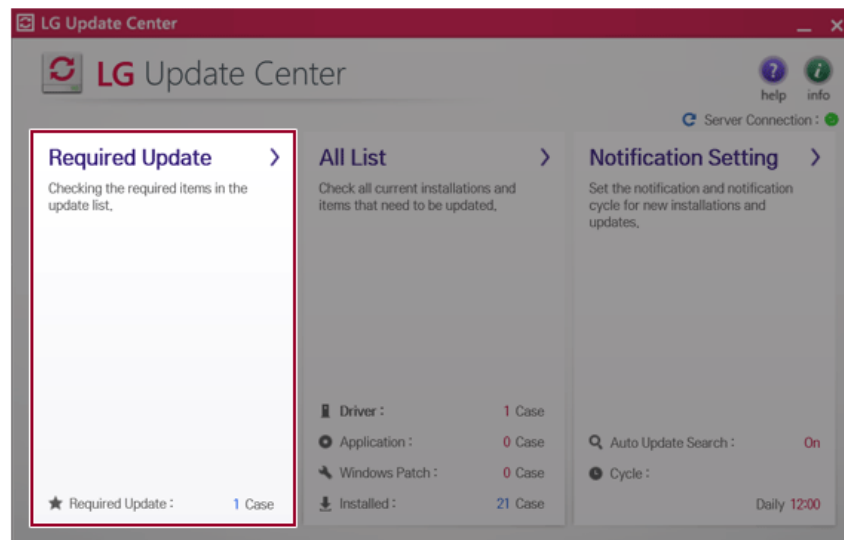

- 2 When the **Required Update** list appears, select the updates to install and press the [Installation] button.

ENGLISH

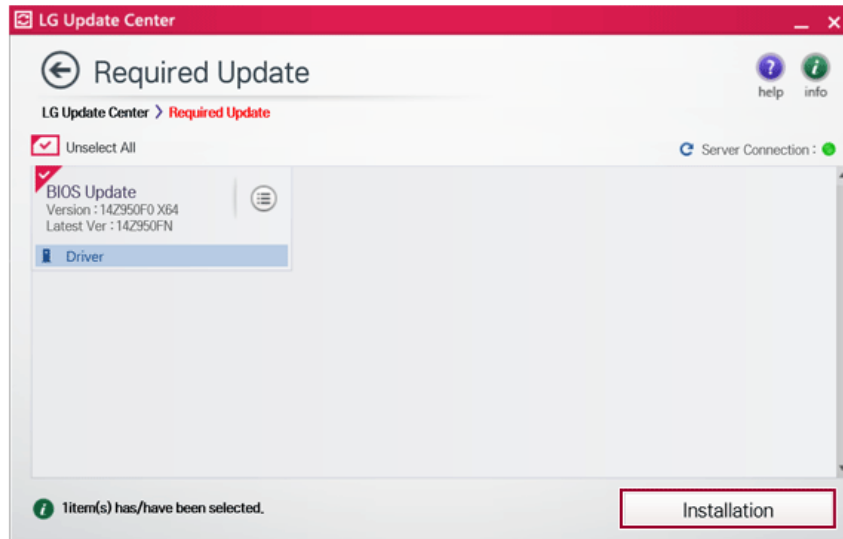


TIP

All items are selected by default.

All List


You can install all updates and drivers that can be installed in the system.

- 1 Select the [All List] menu.

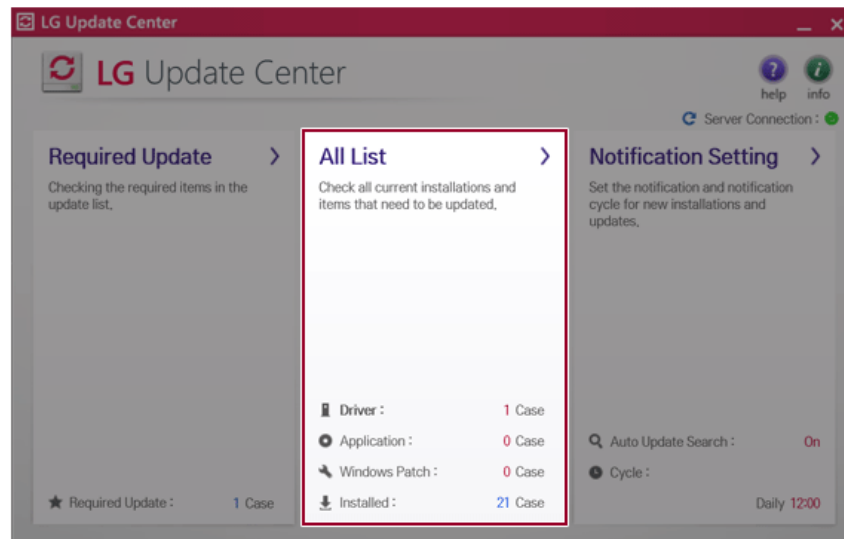

- 2 When the list appears, select the updates to install and press the [Installation] button.

ENGLISH

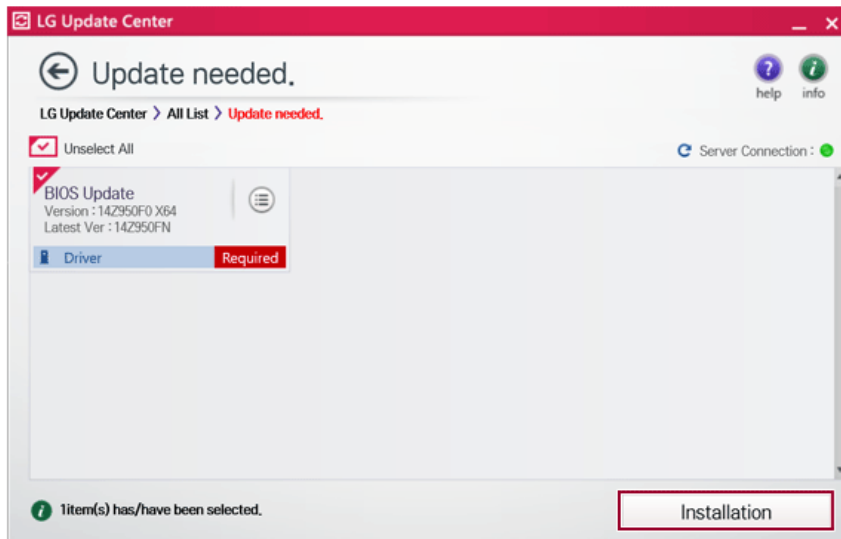

TIP

All items are selected by default.

Notification Settings


You can check the critical updates to set whether to display the notifications for update installation.




TIP

The Auto Update Search function is set to [ON] by default. If you set it to [OFF], the notifications are not displayed.

- 1 Select the [Notification Setting] menu.

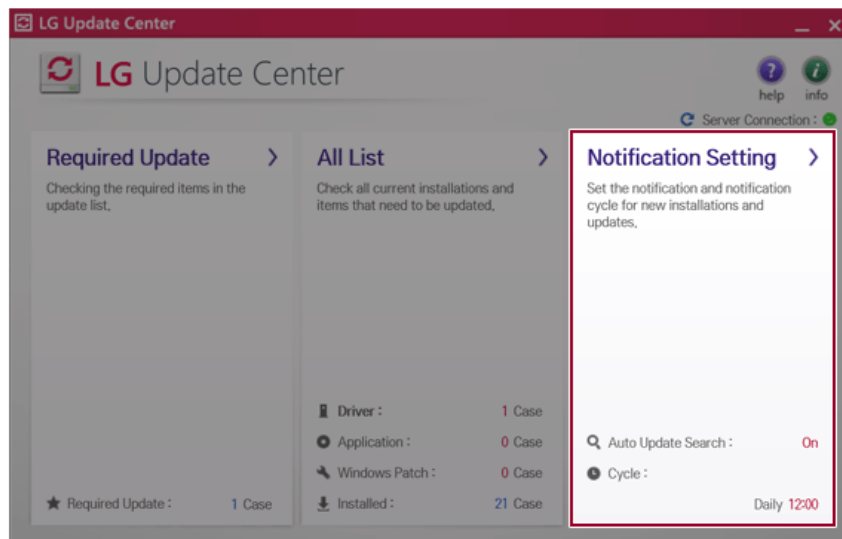


- 2 Set [Auto Update Search] to [ON] or [OFF].

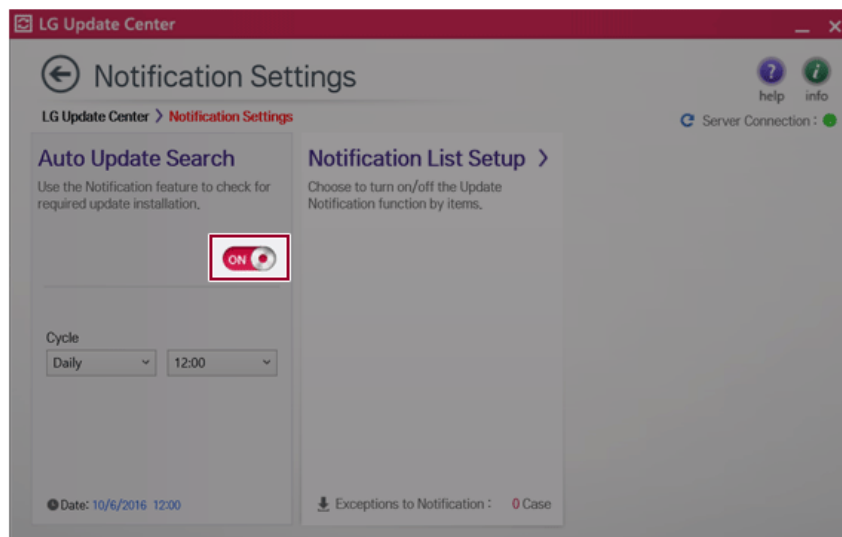

- 3 Set the [Notification Frequency].

ENGLISH

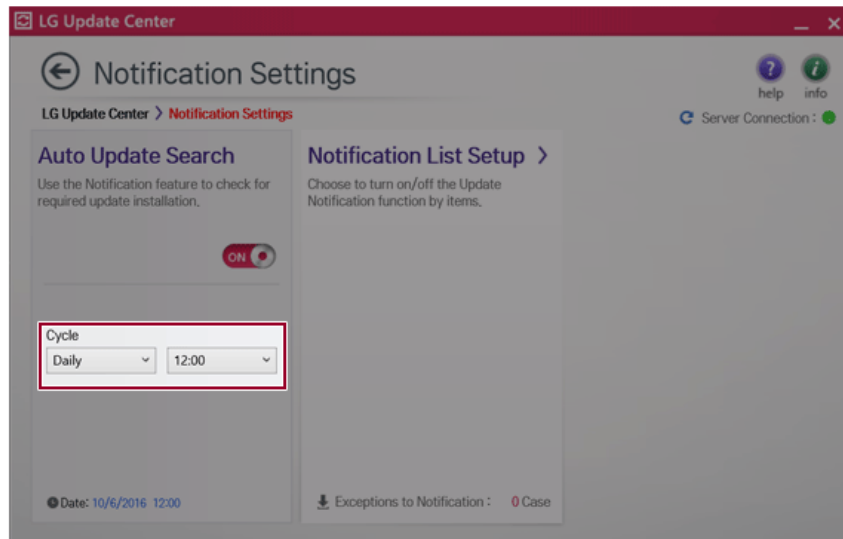

- 4 Select [Notification List Setup] menu to turn on/off the notification for each item.

FAQ

Q: Is there a way that I can install the drivers and applications easily?

- You can select [Required Update] or [All List] menu in **LG Update Center** to automatically install the drivers and applications that you want.

Q: The server connection status is not displayed in the program.

- Check if your PC is properly connected to the wired or wireless LAN.
- Check if Internet connection works properly.

Q: I want to hide the update notifications.

- Select the [Notification Settings] menu and set the [Auto Update Search] to [OFF].
- Select [Notification List Settings] menu to turn on/off the notification for each item.

Q: How can I update the items that are excluded from the notification list?

- You can also install the items that are excluded from the notification list by using the [Required Update] or [All Lists] menu.

LG Power Manager

LG Power Manager allows you to configure the power settings according to the usage environment to manage the battery efficiently.

TIP


If **LG Power Manager** is not installed, visit **LG Update Center** to have it installed.

The menus displayed in **LG Power Manager** and its supported functions may differ depending on the model.

The figures herein are subject to change without prior notice.

LG Power Manager Tour

Select the [] button > [LG Software] to run [LG Power Manager].

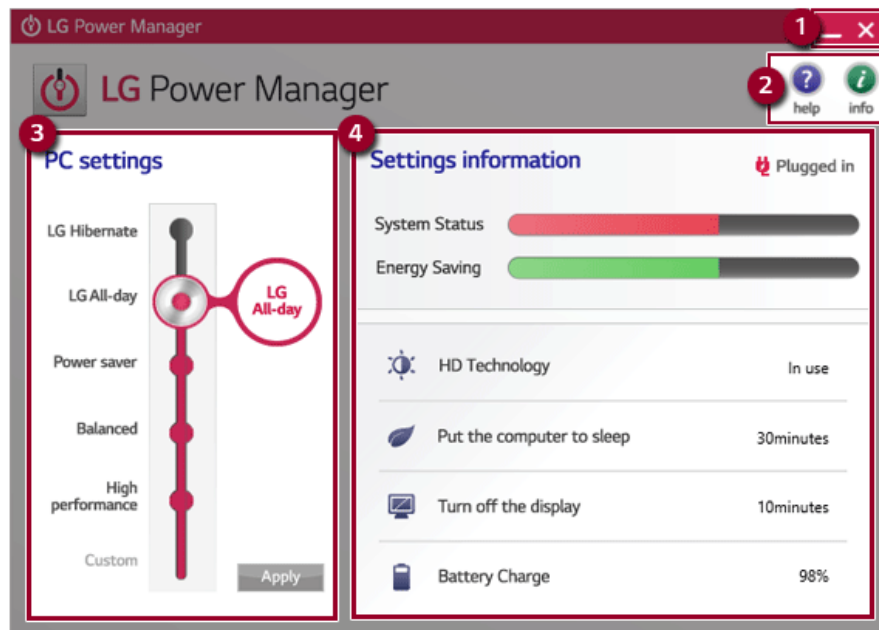


- 1 **Minimize/Exit Button:** Minimizes the size of the window or closes the window.
- 2 **help/info:** Runs Help or displays information about the software.

- 3 **PC Settings:** Allows you to change the PC settings, such as LG Hibernate, LG All-day (Recommended), Sleep, Balanced, High Performance, and Customized.
- 4 **Settings information:** Displays the PC settings, such as System Performance, Energy Saving, Sharp Screen, Put the Computer to Sleep, Turn off the Display, and Battery Charging. (A touchscreen model does not support the **HD Technology**.)

Using LG Power Manager

Drag the icon on the left of the screen to select the desired **PC settings**. Then, press the **[Apply]** button to apply the PC settings.

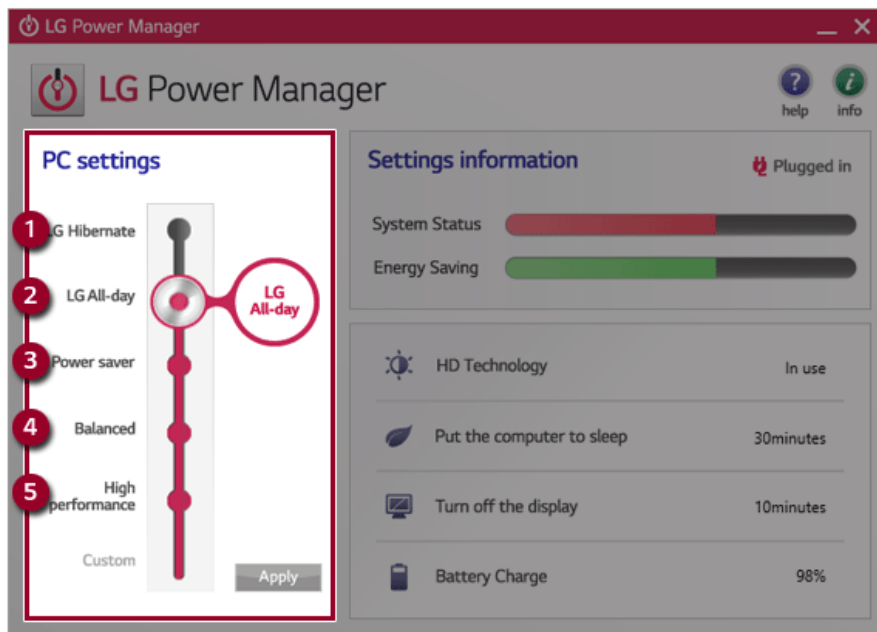

- 1 **LG Hibernate:** Configures the system settings so that you can use the battery for the longest duration.
- 2 **LG All-day (Recommended):** Changes the system settings so that you can optimize the system performance and use the battery as long as possible. (In the case of a model with standard battery, **Recommended** is displayed.)
- 3 **Power saver:** Saves the energy as much as possible by lowering the system performance.
- 4 **Balanced:** Maintain the balance between energy consumption and performance automatically.

- 5 **High Performance:** Puts emphasis on the performance, but may consume significant amount of energy.



TIP

When you connect/disconnect an AC adaptor to the system In **LG Hibernate** or **LG All-day** (or **Recommended**) mode, screen brightness is reduced to save the battery.

LG Reader Mode


ENGLISH

LG Reader Mode allows you to change the screen to **Reader Mode** or **Daylight Mode** according to the user's needs.

The figures herein is subject to change for performance improvements without prior notice and the functions supported by **LG Reader Mode** may vary from models.

Using LG Reader Mode

- 1 Press the [] icon on the taskbar.

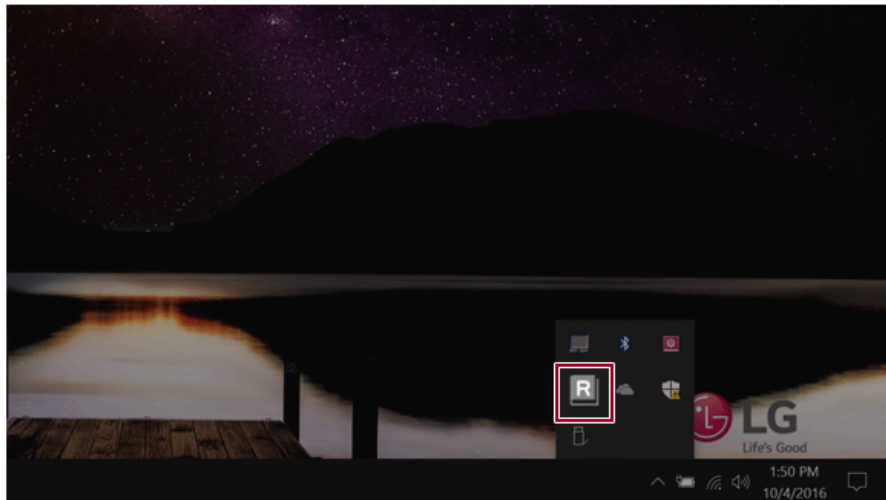

- 2 Select the **[Reader Mode On]** or **[Daylight Mode On]** menu.




TIP

Reader Mode: The screen outputs like printed paper to prevent eyestrain.

Daylight Mode: The screen changes to appear brighter. (A touchscreen model does not support the **Daylight Mode**.)

Select **[Mode Off]** to turn off the mode.

ENGLISH

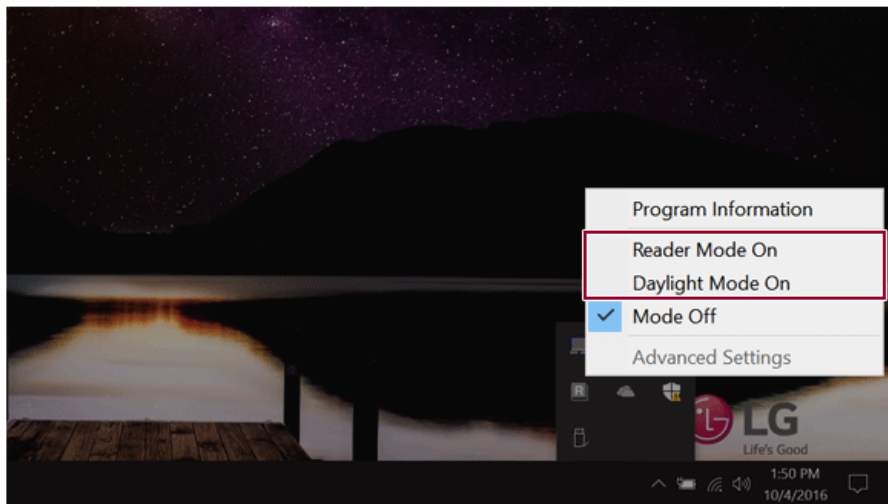


Using **Advanced Settings**

ENGLISH


- 1 Select the **Advanced Settings** menu as shown in the figure.

**TIP**

The **Advanced Settings** menu is activated when Reader Mode is on.

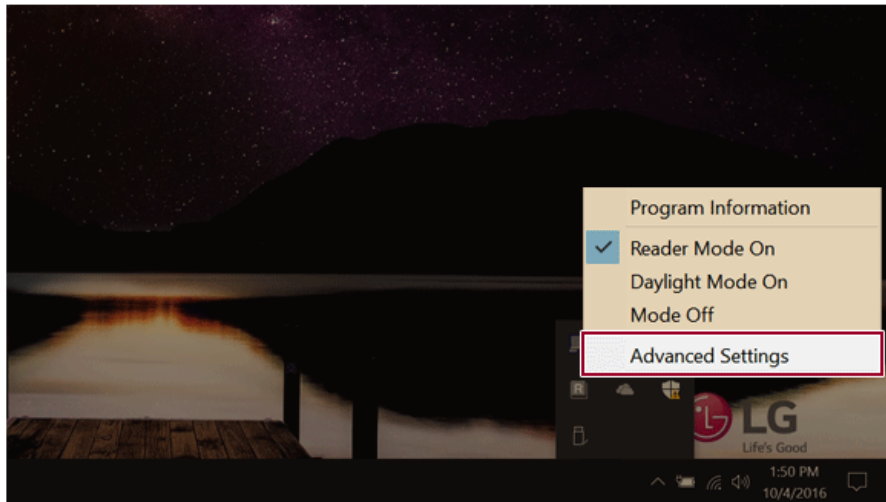

- 2 The **[Advanced Settings]** window appears as shown below.

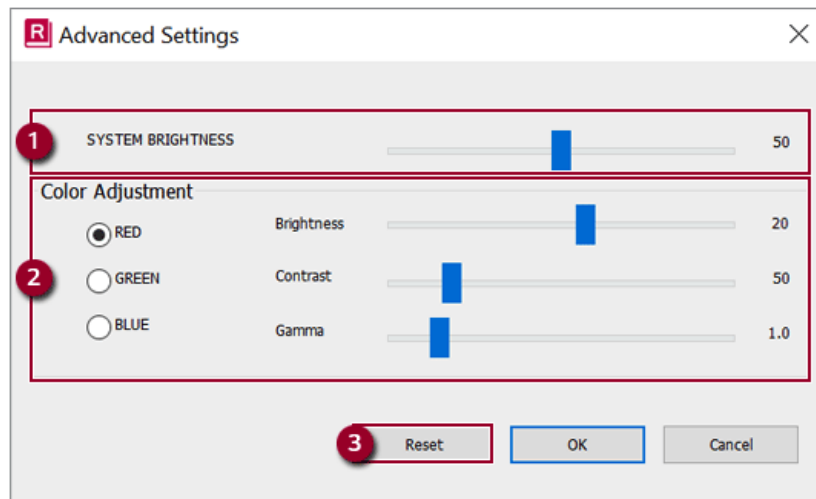

- a **SYSTEM BRIGHTNESS:** System brightness can be adjusted.
- b **Color Adjustment:** Color and its **Brightness, Contrast and Gamma** can be adjusted.
- c **Reset:** Settings are reset to the default settings.

DTS Headphone:X/DTS Studio Sound

ENGLISH


DTS Headphone:X/DTS Studio Sound provides rich, sonorous sound when you listen to music, watch videos or play games in the PC.

DTS Headphone:X/DTS Studio Sound may not be applied depending on the model.


The figures herein are subject to change without prior notice.

Running **DTS Headphone:X/DTS Studio Sound** Program

- 1 Press [] icon on the right side of the task bar to run [DTS Audio].

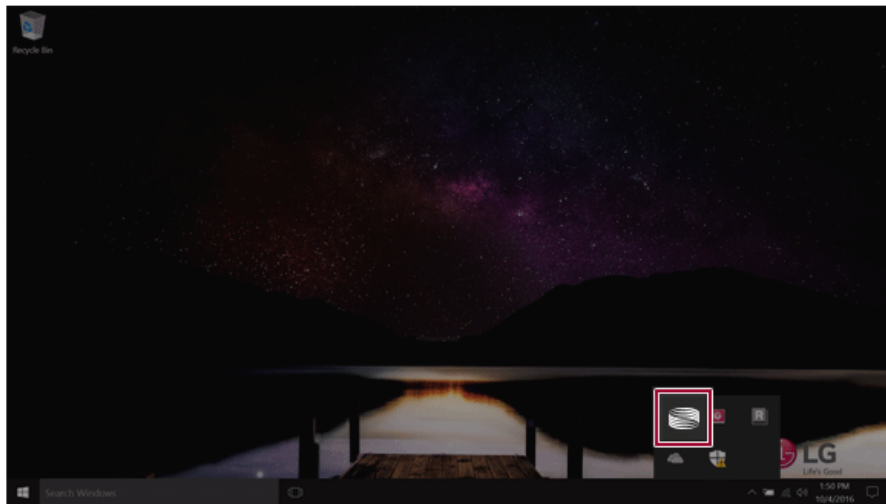

- 2 Default is **DTS Studio Sound** and **DTS Headphone:X** operates when the earphone is connected.

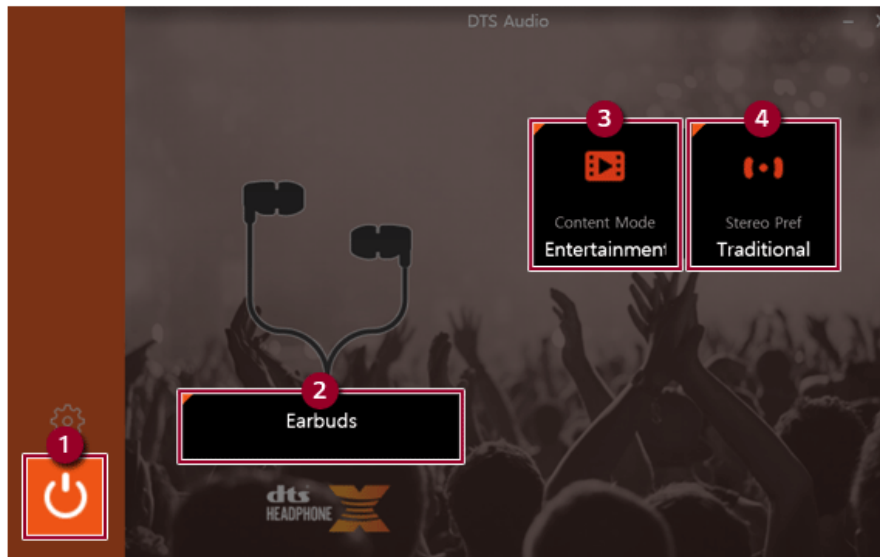
DTS Headphone:X Tour

ENGLISH

- 1 **Power:** DTS Headphone:X Turns the power on/off.
- 2 **Earbuds:** Allows you to select the connected earphone.
- 3 **Content Mode:** Allows you to select entertainment/game/sport and provides optimum setting for each content.
- 4 **Stereo Default Settings:** Provides settings for stereo including wide/front/traditional.

DTS Studio Sound Tour

ENGLISH

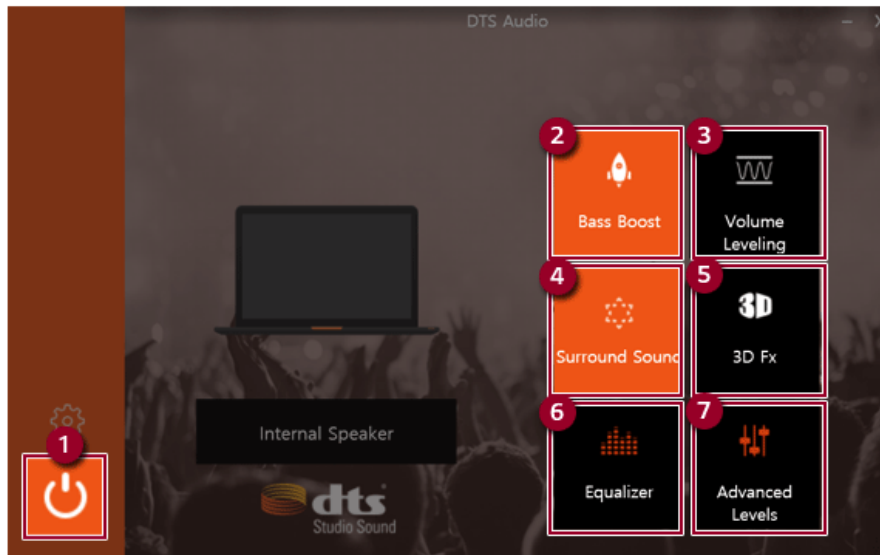

- 1 **Power: DTS Studio Sound** Turns the power on/off.
- 2 **Bass Boost:** Boosts the lowest frequencies for enhanced bass sound.
- 3 **Volume Leveling:** Increases audio level without distortion of sound.
- 4 **Surround:** Sets up surround sound effects through the PC's embedded speakers.
- 5 **3D:** Sets up 3D sound effects through the PC's embedded speakers.
- 6 **Equalizer:** Sets the equalizer.
- 7 **Advanced Level: DTS Studio Sound** Provides advanced options menu.

 TIP

If you want to remove Audio Driver or DTS Headphone:X/DTS Studio Sound, remove [DTS Audio] and [Conexant High Definition Audio Driver] in the order specified and restart the system.

If you want to reinstall Audio Driver or DTS Headphone:X/DTS Studio Sound, remove [DTS Audio] and [Conexant High Definition Audio Driver] in the order specified and install [Conexant High Definition Audio Driver]. Then restart and install [DTS Audio].

- If you do not remove or install them in the order specified, an error may occur.

Restoring the System

Restoring the System

If the system has an error, you can use Windows 10's recovery function to recover or restore the system to its initial pre-purchase state.




CAUTION

If you have deleted the restoration data in the protected area of the disk, or have arbitrarily installed another operating system, the restore function may not work.


To recover the system, the AC adapter must be connected.

- 1 Click the  button and select the Settings menu.

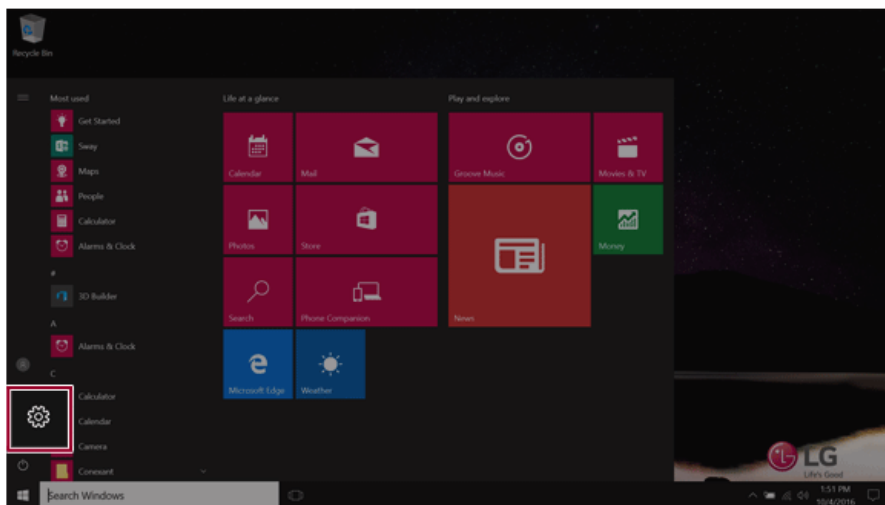


- 2 When the [Settings] screen appears, select [Update & security].


ENGLISH

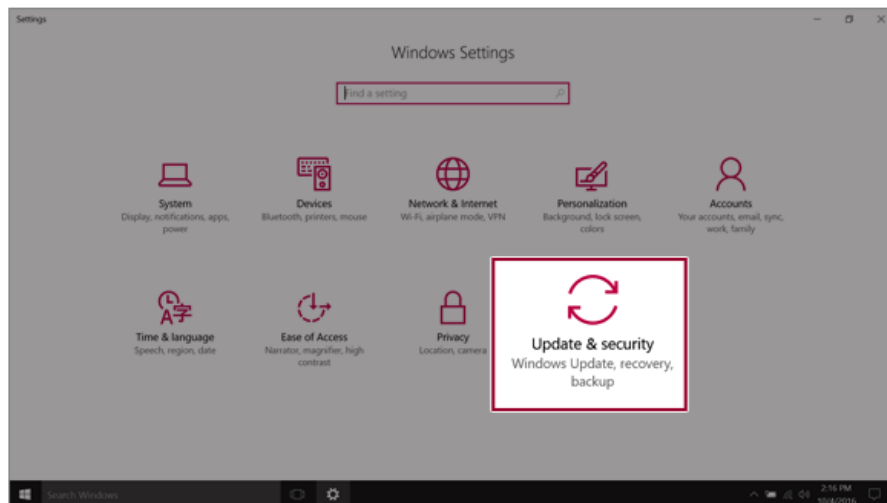

- 3 Select the [Recovery] menu and press [Get started] in the **Reset this PC** menu.

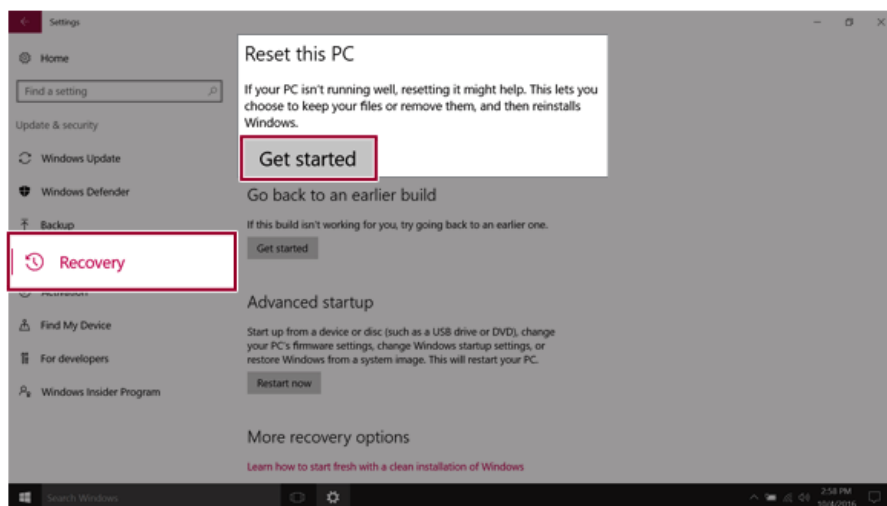


- 4 If the following screen appears, select a desired option to proceed with recovery.

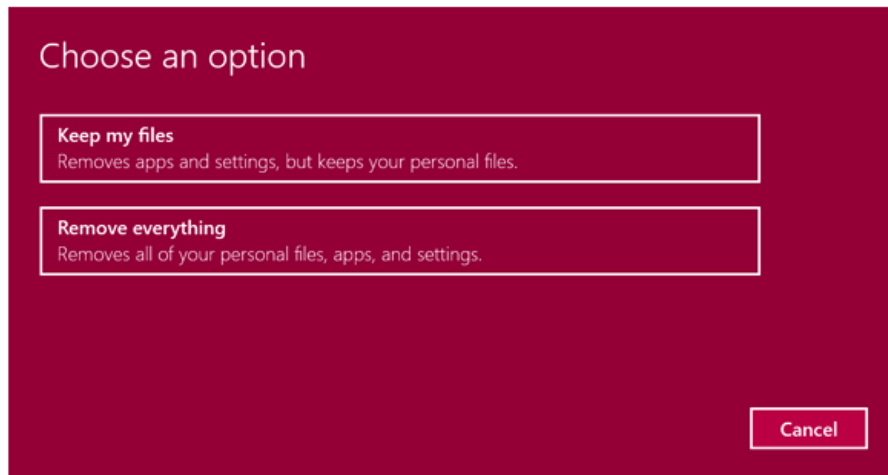

ENGLISH

- **Keep my files:** Recovers the PC without losing any personal files.
- **Remove everything:** Removes all items from the system and restores the system to its initial pre-purchase state.

1. When the following screen appears, select [Yes].

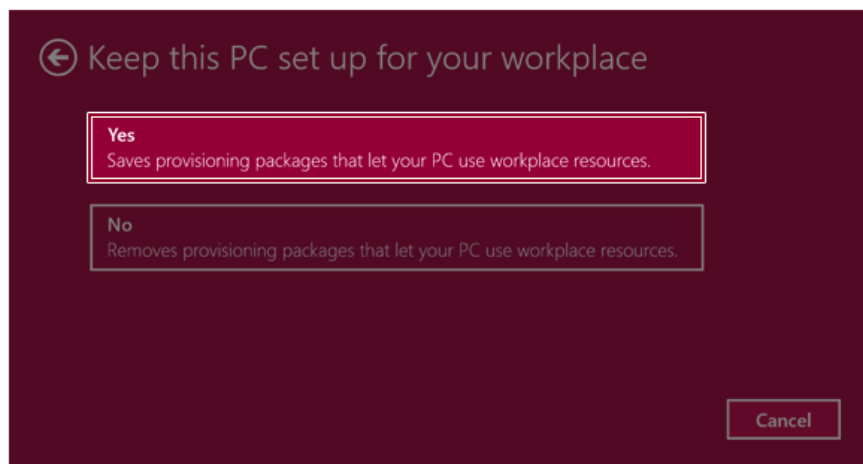

2. Select the options you want to proceed with the recovery.



- **Just remove my files:** Factory-resets the drive where Windows is installed (for example: Drive C).
- **Remove files and clean the drive:** Resets all partitions and drives in the system.

**CAUTION**

All data is lost during the initialization, so you must backup all critical data in advance.
It may take about 5 hours or longer depending on the system conditions.

LG Recovery Center RE

If booting is impossible due to an error with the system, you can recover the system using **LG Recovery Center RE**.



TIP

It is recommended that you create a recovery drive in case a serious error occurs in the system.




CAUTION


If you have deleted the restoration data in the protected area of the hard disk, the restore function may not work.

All data is lost during the initialization, so you must backup all critical data in advance.


- 1 Turn on the PC and press [F11].
- 2 When the following screen appears, select a language you want to use and then press [Next].

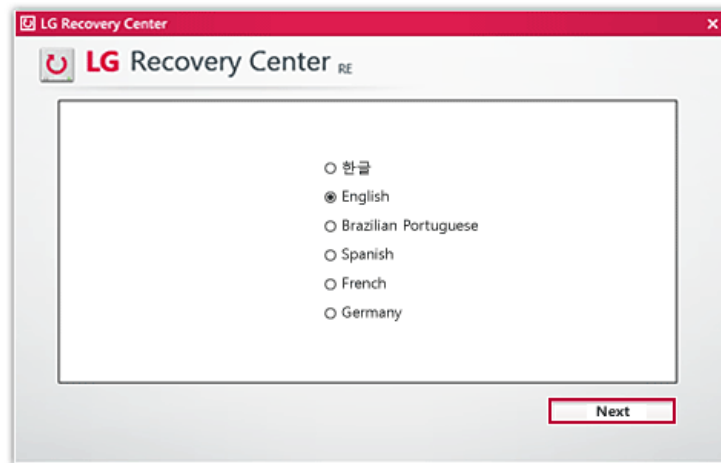

- 3 When the following screen appears, select the [I Agree] button and then click the Next button.
For recovery, the power adapter must be connected. Connect the system power and then recover the system.

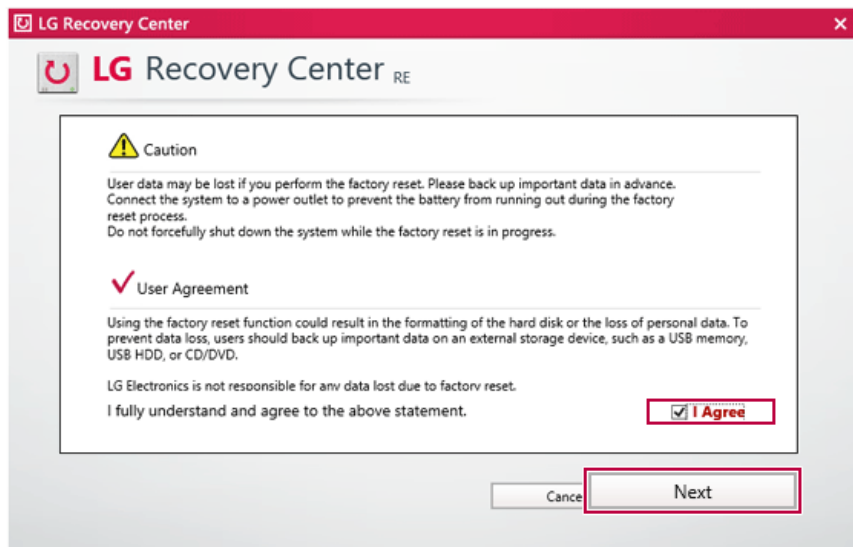

- 4 When the factory reset has been completed as shown in the following figure, click the [Complete] button and then restart the system.

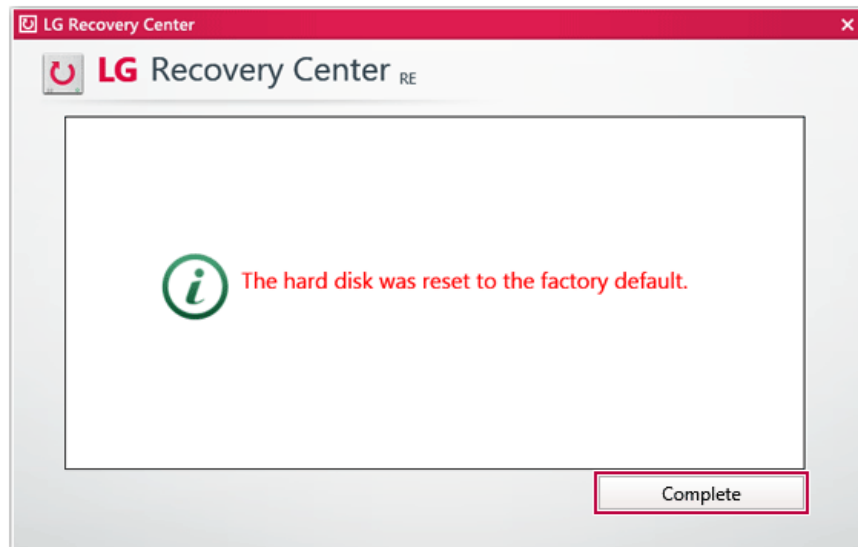

Recovery Drive

ENGLISH


Creating Recovery Drive

Create a recovery drive in case **LG Recovery Center RE** is unable to recover the system.


**TIP**

This process may delete all data on the storage device designated as the recovery drive. Make sure to back up all important data in advance.


- 1 Right-click the  button and select [Control Panel] menu.

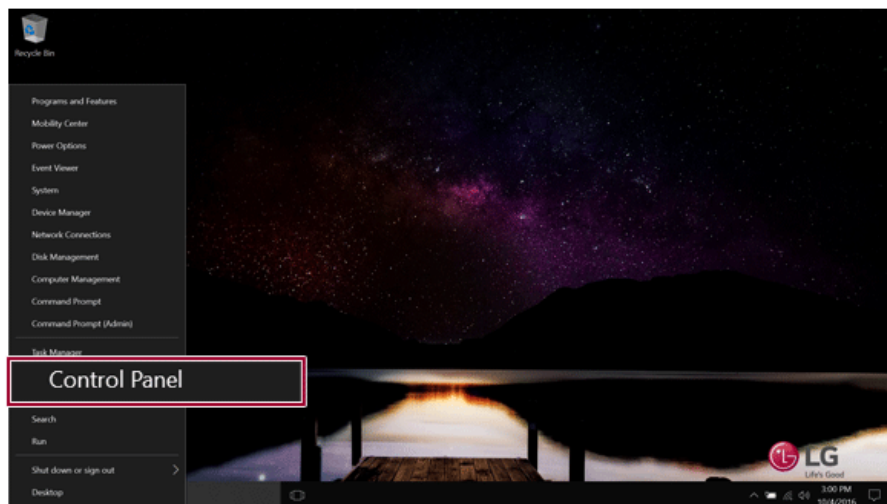


- 2 Press [Recovery] in the control panel and select [Create Recovery Drive].

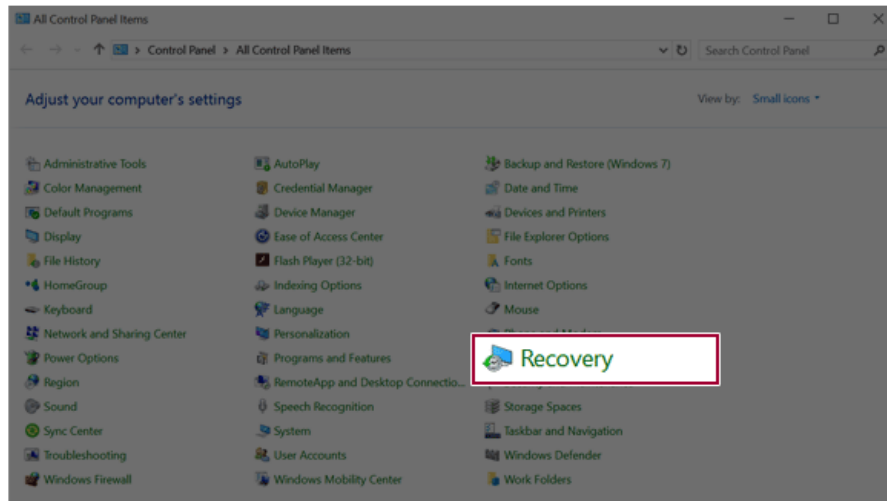

- 3 When the following screen appears, select [Back up the system files to the recovery drive.] and press [Next].

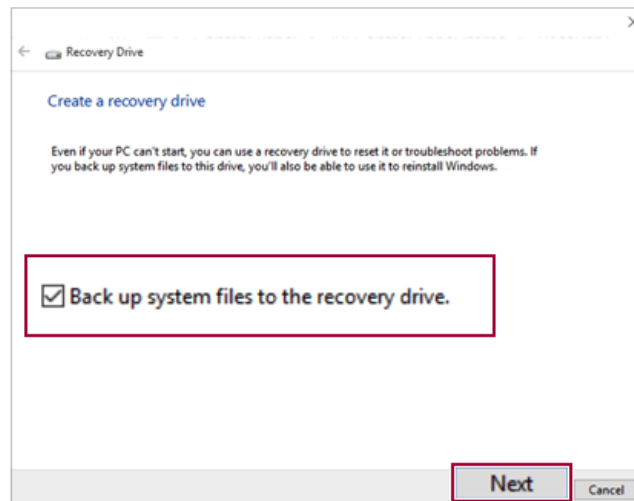

- 4 Select the USB flash drive to use and press [Next] to create a recovery drive.

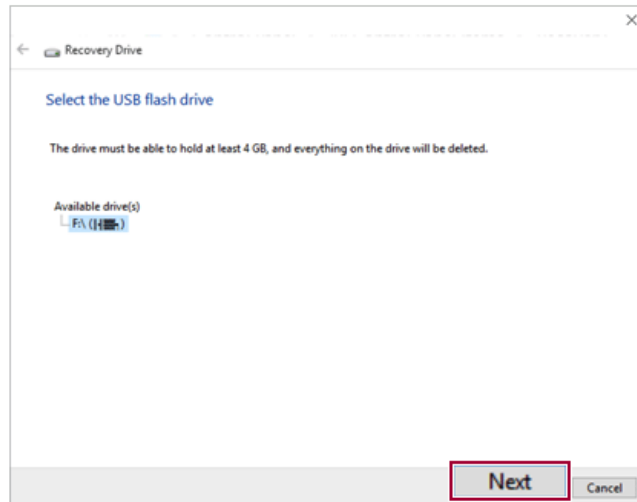

- 5 Once the storage device is ready, press [Finish] to complete the creation of the recovery drive.

Using Recovery Drive

In case **LG Recovery Center RE** is unable to recover the system, you can use the recovery drive to recover the system.



CAUTION

All data may be lost depending on the user settings during the system recovery.

- 1 Connect the recovery drive to the USB port of the PC.
- 2 Turn on the PC and press [F10] several times.
- 3 When the screen for selecting the boot device appears, select the connected recovery drive and press [Enter].
- 4 Set the language and select the [Troubleshooting] menu.
- 5 Select the item you want and recover the system by following the instructions.


Setup and Upgrade

Installing the Driver

The figures herein may differ by language selection and are subject to change without prior notice.

Using **LG Update Center** to install the Driver

- 1 Select the [] button > [LG Software] to run [LG Update Center].

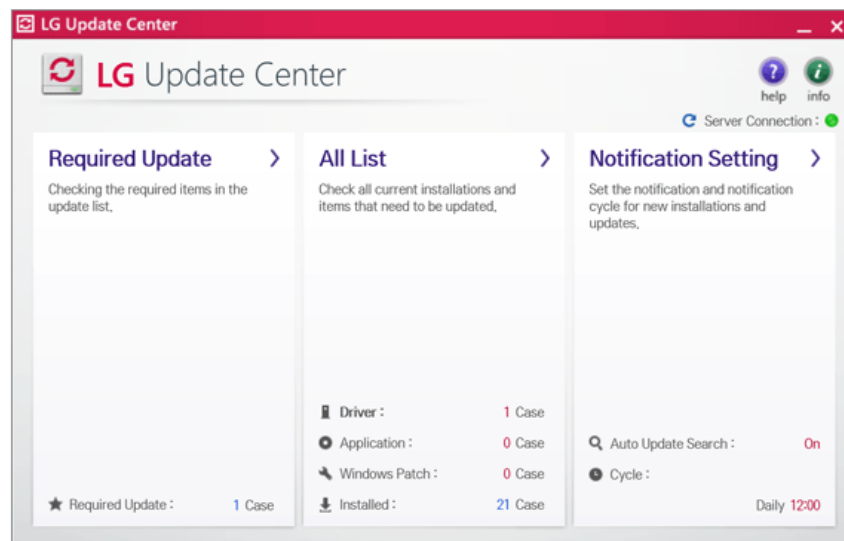

- 2 Select [Required Update] or [All List] to install the driver.

TIP

You can use the **LG Update Center** to quickly install the latest drivers, or reinstall any deleted drivers.

Use **LG Update Center** to keep your system current and optimized.

How to Download **LG Update Center**

ENGLISH

You can install **LG Update Center** by downloading it from the LG Electronics Service Center (www.lg.com).

Starting System Setup

System setup means storing the hardware configuration information of the PC in the flash memory. Through system setup, the PC retrieves various information including current date and time, memory capacity, and hard disk capacity and type.

You setup the system when you set passwords, change the boot order, and add new peripheral devices to the machine.

Items displayed on the Setup screen may differ by model type and specification. Refer to

- Refer to .
- Refer to .
- Refer to .

TIP

To use the system setup (F2), booting device selection (F10), or recovery (F11), you need to restart the system (click [Restart] in the system power menu) and then immediately press the corresponding function key due to the fast booting speed.



CAUTION


- Do not change the system setup unless necessary. Incorrect system setup may cause errors during system operation. Use caution when changing the system setup.
- For performance improvement, the system setup menu configuration and the initial setup status may be changed and may become different from images included in the user manual.

- 1 Reboot the system and press [F2].

ENGLISH



- 2 In a few moments, the system setup screen appears.

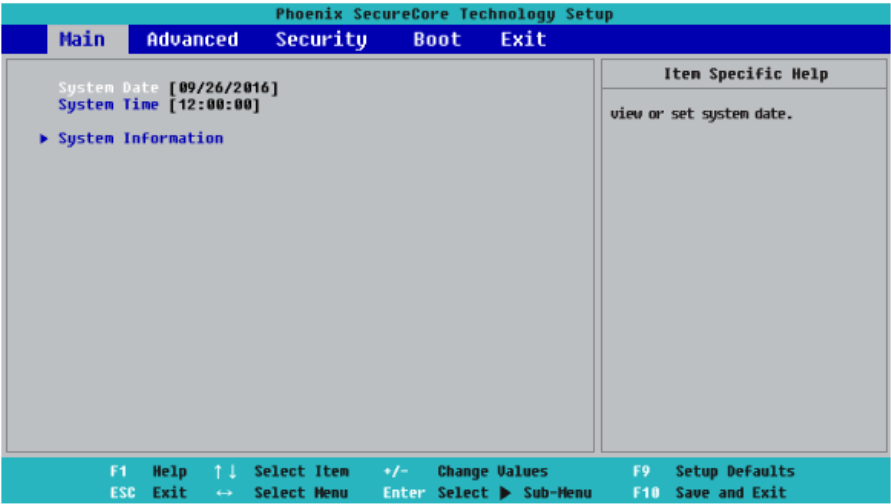

Keys Used in System Setup

Keys	Function
Enter	Selects the current item.
Esc	To deselect the current item or to move to the previous screen.
▲, ▼, ◀, ▶ (Arrow keys)	Moves the cursor up, down, left, and right.
+, −	Increases or decreases the item value.
F10	Saves the new settings or exits the system setup.

Setting the Password

ENGLISH

This process is to set a password so that other people cannot use the PC or change the settings. The user can set a password while booting the system or setting up the system.

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.


 **CAUTION**

- Without the registered password, access to the system will be denied. Write down and keep the password in a safe place.

Set Supervisor Password

The password prevents unauthorized people from accessing the PC. By default, no password is set for the machine. If an unauthorized person changes the password in the System Setup, you will be unable to access the system.

- After opening the system setup screen, use the arrow keys to move to **[Security]**.
- When the following screen shows up, click **[Set Supervisor Password]** by using the arrow keys and press **[Enter]**.

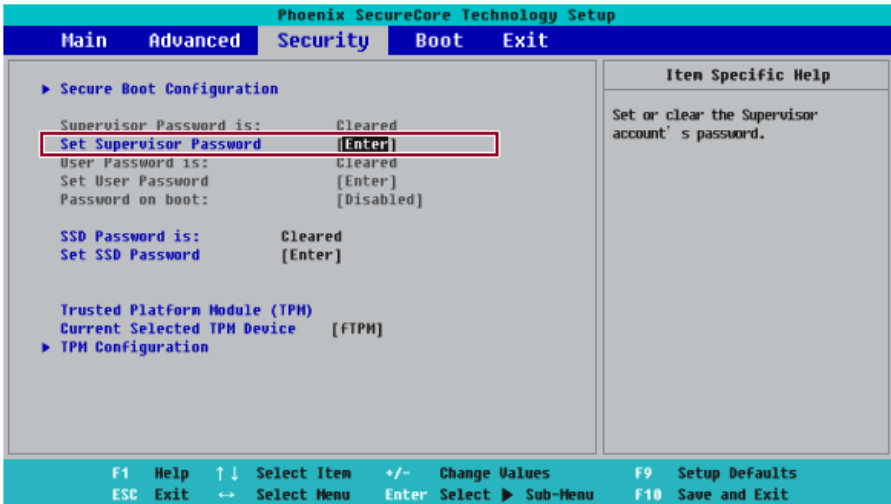

- 3 When the following message shows up on the screen, enter the password and press [Enter]. The password must not exceed 8 characters consisting of letters (A - Z), numbers (0 - 9), or a combination of both.

Set Supervisor Password	
Enter New Password	[]
Confirm New Password	[]

- 4 When the following message appears, select and press [Enter].

Notice
Changes have been saved. [OK]

- 5 To save the changes in the system setup, press [F10].
- 6 When the following message appears, select [Yes] and press [Enter]. The PC will restart.

Setup Confirmation
Save confirmation changes and exit now? [Yes] [No]


 TIP

- With **Supervisor Password**, you are authorized to set all items in the System Setup and to set **Password on boot**. In case other people also use the PC, it is recommended to set the **Set User Password**.

Set User Password

The password set by the **Set User Password** process is lower in level than that set by the **[Set Supervisor Password]** process, and so the user can use the **Set User Password** only after setting a password in the **[Set Supervisor Password]** menu.

- 1 After opening the system setup screen, use the arrow keys to move to **[Security]**.
- 2 When the following screen appears, press **[Enter]** in the **[Set User Password]** menu.

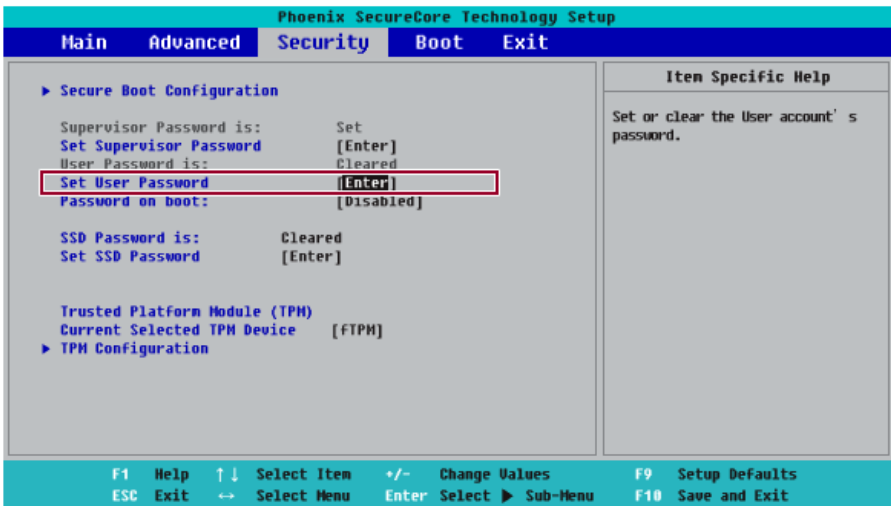

- 3 When the following message shows up on the screen, enter the password and press [Enter]. The password must not exceed 8 total characters consisting of letters (A - Z), numbers (0 - 9), or a combination of both.

Set User Password	
Enter New Password	[]
Confirm New Password	[]

- 4 When the following message appears, select and press [Enter].

Notice
Changes have been saved. [OK]

- 5 To save the changes in the system setup, press [F10].
- 6 When the following message appears, select [Yes] and press [Enter]. The PC will restart.

Setup Confirmation
Save confirmation changes and exit now? [Yes] [No]

**TIP**


- [User Password] allows limited access to the items in the System Setup compared to the [Supervisor Password] item.

ENGLISH


Password on boot

Password on boot protects the system by requesting [Set Supervisor Password] or [Set User Password] during boot up.

- 1 After opening the system setup screen, use the arrow keys to move to [Security].
- 2 When the following screen appears, set [Set Supervisor Password] only or both [Set Supervisor Password] and [Set User Password].

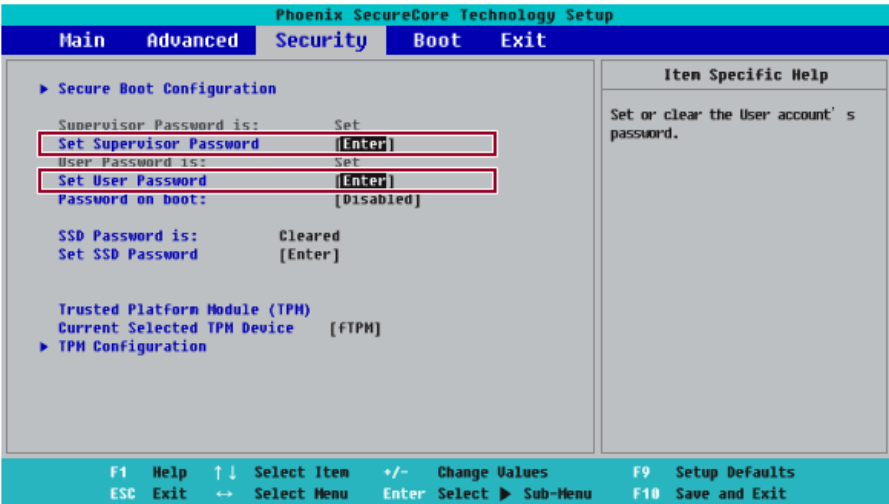

- 3 The popup screen will show up, after selecting **[Password on boot]** and press **[Enter]**. After selecting **[Enable]** and press **[Enter]**, **[Password on boot]** will be complete.

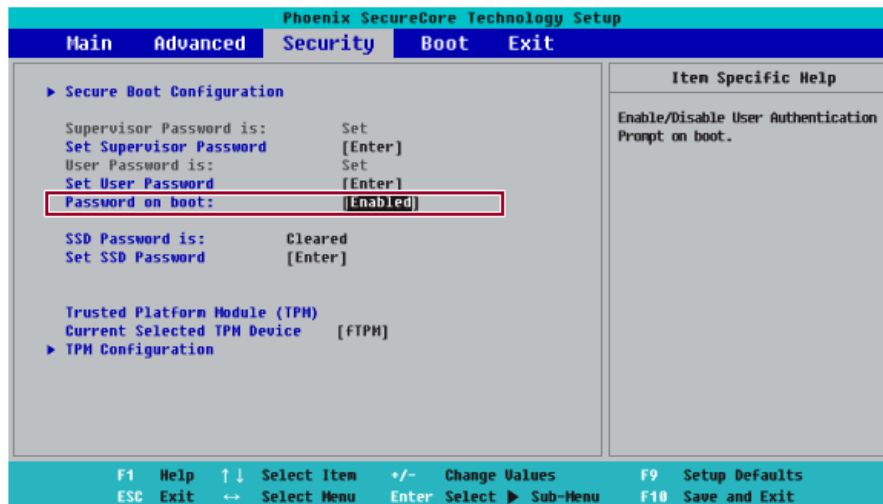

Set HDD Password / Set SSD Password

HDD / SSD Password is used to set a password in the HDD and SSD separately from the Supervisor Password.


If you set both HDD Password and SSD Password, the password input screen appears twice during system booting.

If you set both HDD Password and SSD Password, the password input screen appears according to the order of [Boot Priority order] under the [Boot] menu.

- 1 After opening the system setup screen, use the arrow keys to move to **[Security]**.

ENGLISH


- 2 When the following screen appears, select **[Set Hard Disk Password]** or **[Set SSD Password]** with the arrow keys and press **[Enter]**.

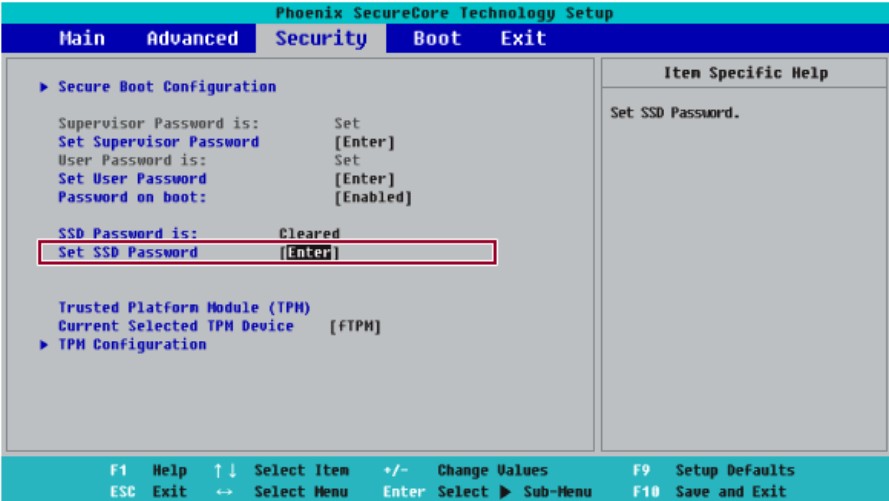


- 3 When the following message appears on the screen, enter the password and press **[Enter]**. The password must not exceed 8 characters consisting of letters (A - Z), numbers (0 - 9), or a combination of both.



- 4 When the following message appears, select and press [Enter].

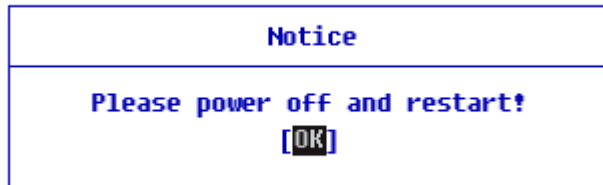

- 5 To save the changes in the system setup, press [F10].
- 6 When the following message appears, select [Yes] and press [Enter]. The PC will restart.

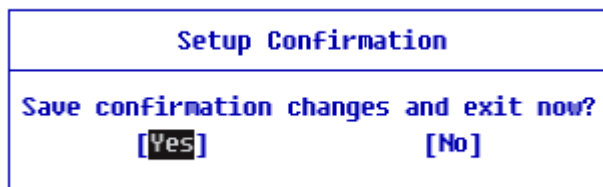**CAUTION**

If you forget HDD / SSD Password, you cannot restore the HDD / SSD.

- The replacement of HDD / SSD due to a forgotten **HDD / SSD Password** is not covered by warranty.

Changing or Deleting the Password

ENGLISH

You can delete or change the password only after entering the current password.

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.

Changing the Password

- 1 Execute System Setup, enter the password, and click [Enter].

A screenshot of a blue rectangular input field with a double border. The word "Password" is displayed in white text on the left. To the right of the text is a black rectangular area representing a password mask, followed by a white closing square bracket "]" on the right side of the field.


- 2 Change the password in the same way as setting one.

Deleting the Password

- 1 Execute System Setup, enter the password, and press [Enter].

A screenshot of a blue rectangular input field with a double border. The word "Password" is displayed in white text on the left. To the right of the text is a black rectangular area representing a password mask, followed by a white closing square bracket "]" on the right side of the field.

- 2 After moving to the Security menu by using the arrow keys from the System Setup screen, select **[Set Supervisor Password]** and press **[Enter]**.

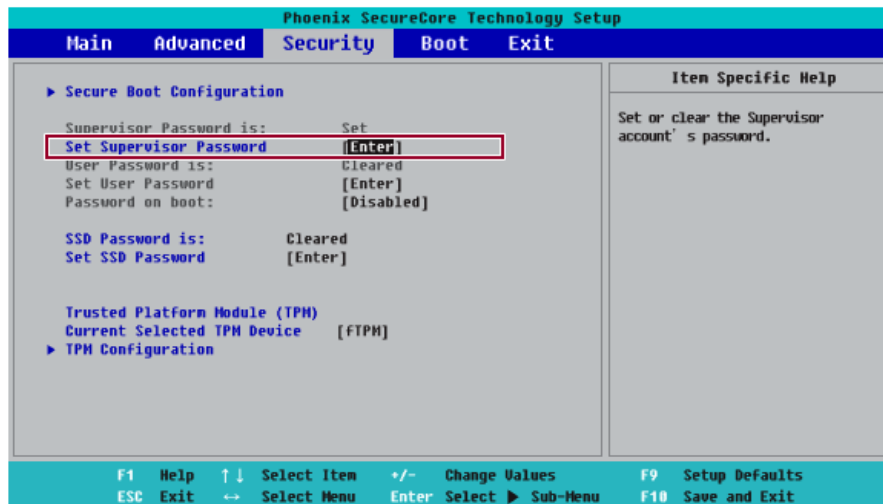

ENGLISH

- 3 When the following message appears, enter the current password in the **[Enter Current Password]** field.

Set Supervisor Password	
Enter Current Password	[]
Enter New Password	[]
Confirm New Password	[]

- 4 Press [Enter] in **[Enter New Password]** and **[Confirm New Password]**.

ENGLISH

Set Supervisor Password	
Enter Current Password	[****]
Enter New Password	[]
Confirm New Password	[]

- 5 When the following message appears, select and press [Enter].

Notice
Changes have been saved. [OK]

- 6 To save the changes in the system setup, press [F10].
- 7 When the following message appears, select **[Yes]** and press [Enter]. The PC will restart.


Setup Confirmation
Save confirmation changes and exit now? [Yes] [No]

Deleting the Password (Set HDD Password / Set SSD Password)

- 1 Execute System Setup, enter the password, and press [Enter].



- 2 After moving to the [Security] menu by using the arrow keys from the System Setup screen, select [Set Hard Disk Password] or [Set SSD Password] and press [Enter].

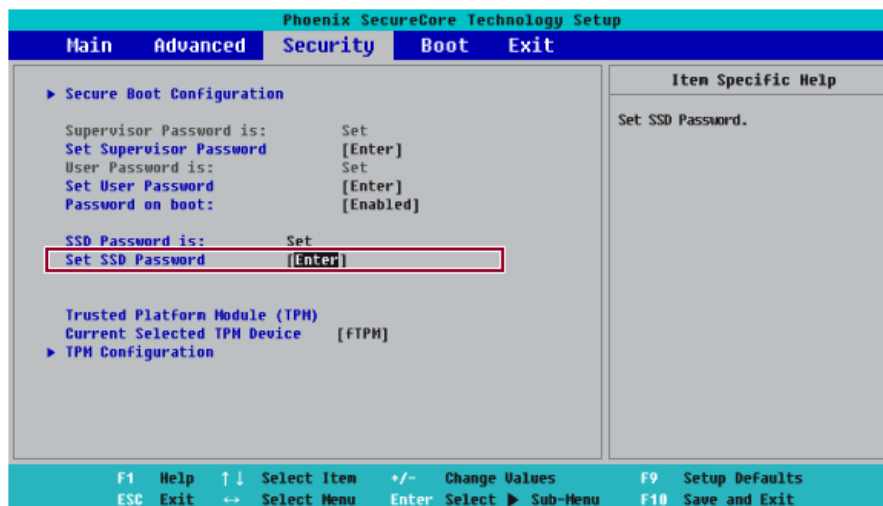

- 3 When the following message appears, enter the current password in the **[Enter Current Password]** field.

Set HDD/SSD Password	
Enter Current Password	[]
Enter New Password	[]
Confirm New Password	[]

- 4 Press [Enter] in **[Enter New Password]** and **[Confirm New Password]**.

Set HDD/SSD Password	
Enter Current Password	[****]
Enter New Password	[]
Confirm New Password	[]

- 5 When the following message appears, select and press [Enter].

Notice
Please power off and restart! [OK]

- 6 To save the changes in the system setup, press [F10].

- 7 When the following message appears, select **[Yes]** and press [Enter]. The PC will restart.

Setup Confirmation
Save confirmation changes and exit now? [Yes] [No]


Restoring the Factory Default Settings

ENGLISH


If you have changed the system setup by mistake, you can restore the default settings.

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.

- 1 After opening the system setup screen, use the arrow keys to move to **[Exit]**.
- 2 Click **[Load Setup Defaults]** by using the arrow keys and pressing **[Enter]**.

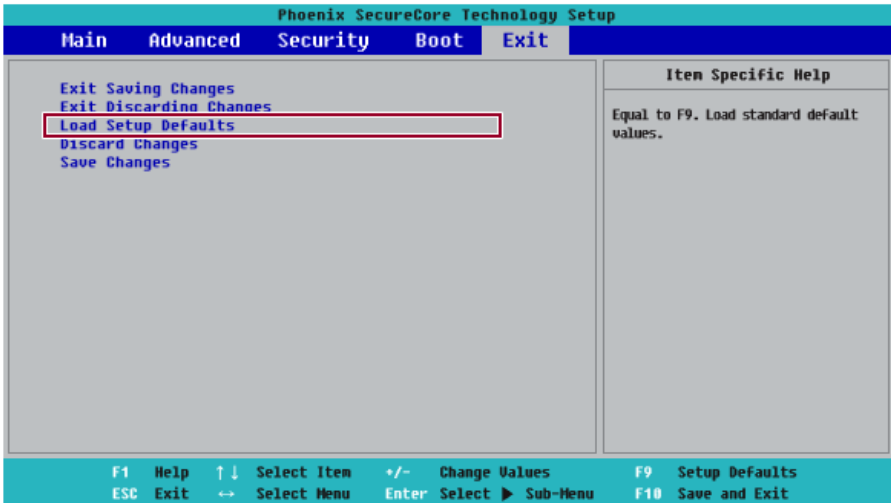


- 3 When the following message appears, select **[Yes]** and press **[Enter]**. The settings will be reset to the factory default.

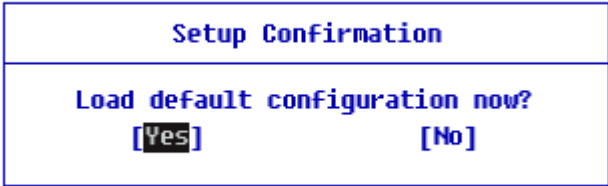

- 4 To save the changes in system setup, press **[F10]**.

- 5 When the following message appears, select **[Yes]** and press [Enter]. The PC will restart.

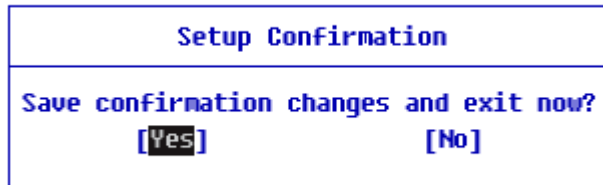

 TIP

- When you press [F9], you can use **[Load Setup Defaults]**.

Changing the Boot Order

ENGLISH

The user can change the boot order according to his or her needs, or select a boot device

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.

TIP

To use the system setup (F2), booting device selection (F10), or recovery (F11), you need to restart the system (click [Restart] in the system power menu) and then immediately press the corresponding function key due to the fast booting speed.


Changing Boot Order

- 1 Reboot the system and press [F2].




- 2 Move to the **[Boot]** menu when the system setup screen appears.

- 3 Go to **[Boot Priority Order]** and press **[F5]** or **[F6]** to change the booting order.

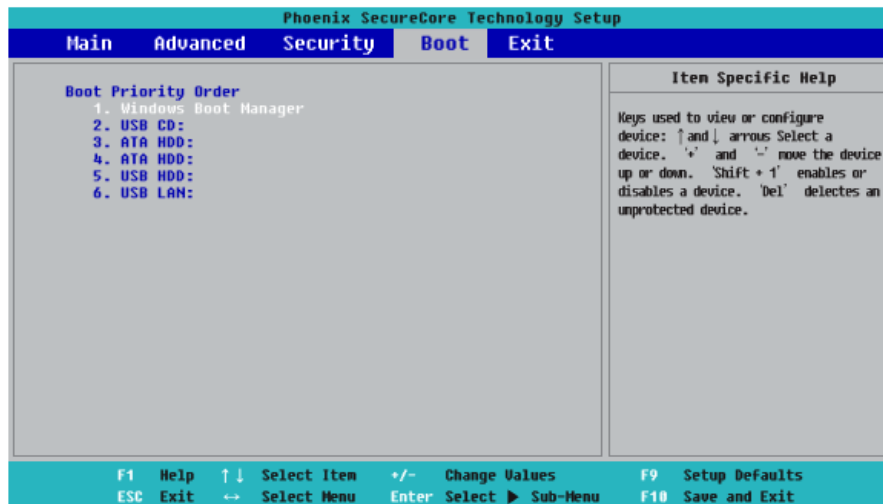

ENGLISH

- 4 When you press **[F10]** and the following screen appears, select **[Yes]** and press **[Enter]**.

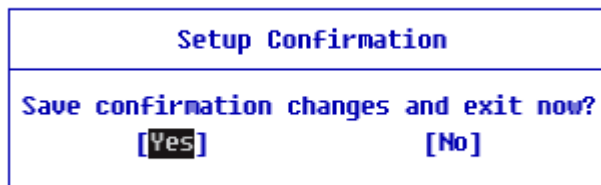

- 5 The changes are saved and the system reboots.


Selecting a Booting Device to Use

ENGLISH

- 1 Reboot the system and press [F10].



- 2 When the Select Booting Device screen appears, select the device.

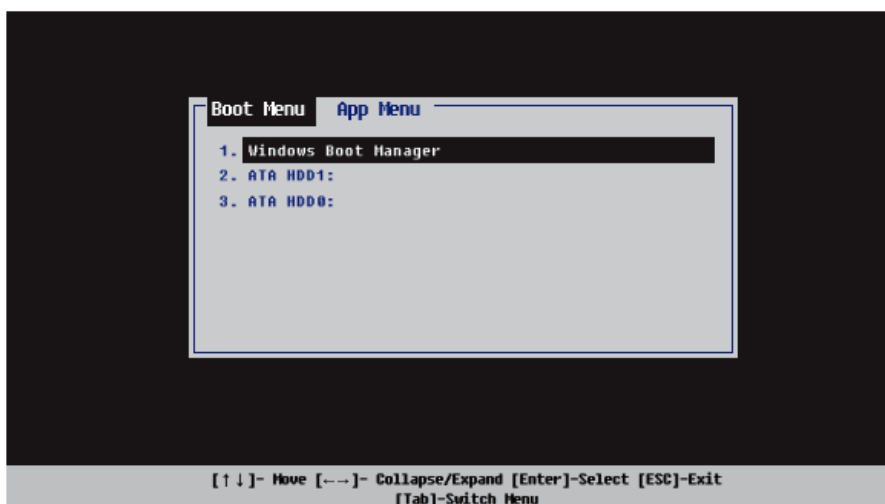

- 3 Boots using the selected device.

Windows 10 Auto Scaling

ENGLISH


The Windows 10 **Auto Scaling** feature for user's convenience may partially blur the screen or display some icons and texts larger.

Refer to the following information to change the DPI scaling to suit your needs.


- 1 Press the  button and select the **[Settings]** menu.

 **TIP**


Press the  key or [Ctrl] + [Esc] to display the Start menu.

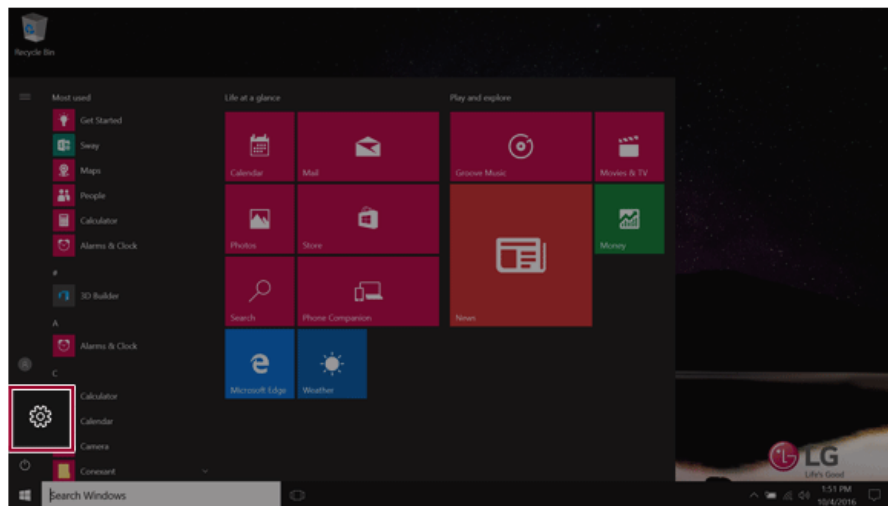

- 2 Select [System] > [Display].

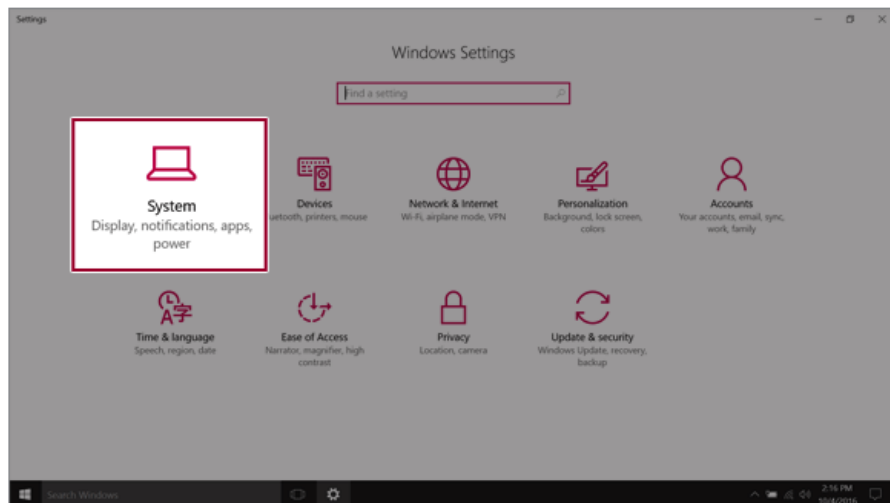


- 3 [Change the size of text, apps and other items.] Changing the item value changes the auto scaling settings.

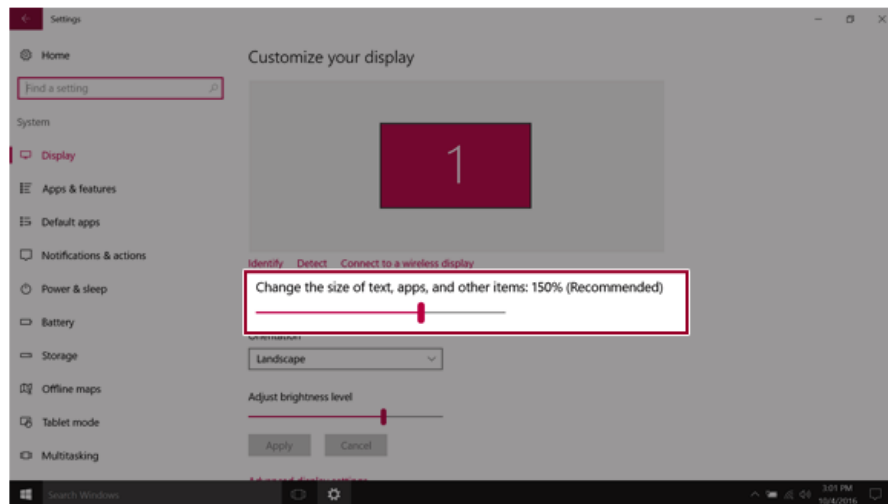

TIP


After changing the auto scaling settings, it is recommended that you click **[Sign out now]** and log on to Windows again.

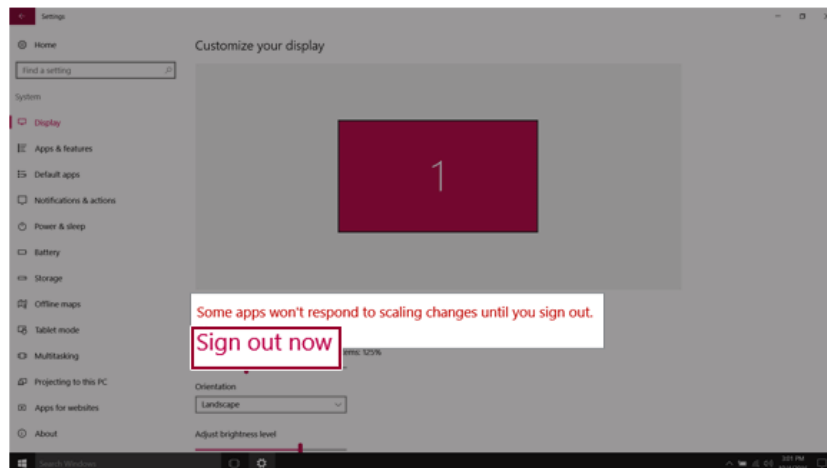

Using Instant Booting

Instant Booting allows the system to boot automatically when the notebook PC cover is opened, so that you can use the system without pressing the power button.

- 1 Select the [] button > [LG Software] to run [LG Control Center].
- 2 On **LG Control Center** screen, set the [Instant Booting] to [ON].

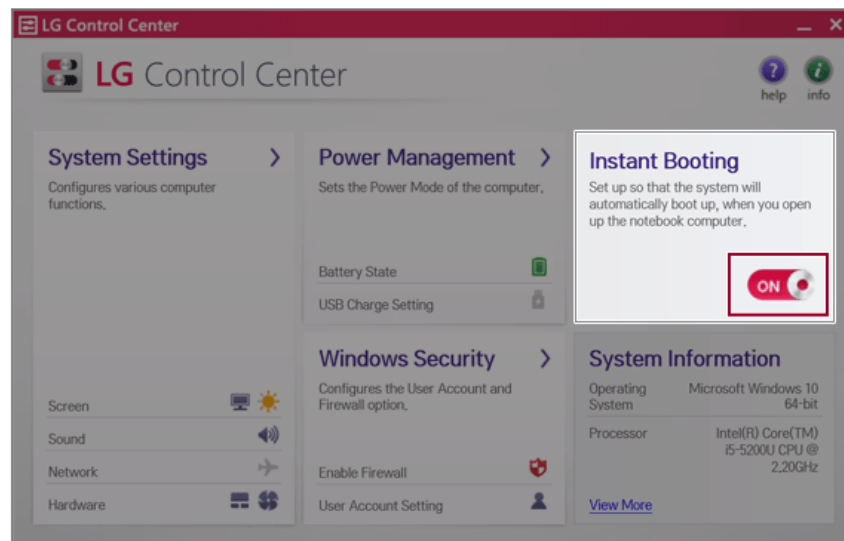

- 3 Shutdown the system and close the notebook PC cover.
- 4 When the cover is opened, the notebook PC turns on and the system starts to boot automatically.

FAQ

ENGLISH

FAQ Content

LG Recovery Center RE

If booting is impossible due to an error with the system, you can recover the system using **LG Recovery Center RE**.

TIP


It is recommended that you create a recovery drive in case a serious error occurs in the system.

**CAUTION**

If you have deleted the restoration data in the protected area of the hard disk, the restore function may not work.


All data is lost during the initialization, so you must backup all critical data in advance.

- 1 Turn on the PC and press [F11].
- 2 When the following screen appears, select a language you want to use and then press [Next].

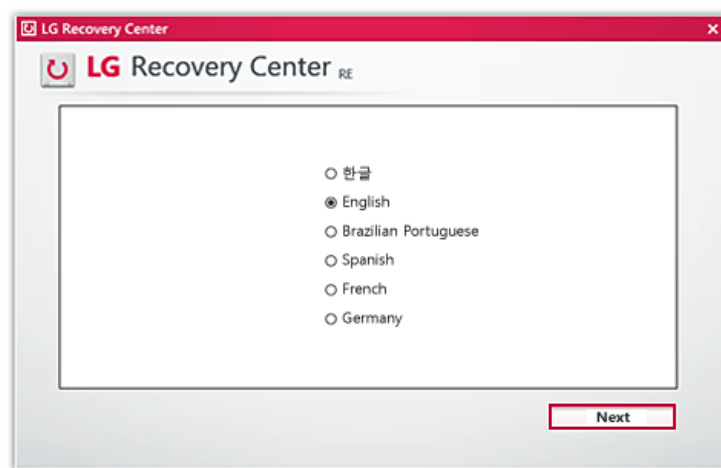


- 3 When the following screen appears, select the [I Agree] button and then click the Next button.
For recovery, the power adapter must be connected. Connect the system power and then recover the system.

ENGLISH

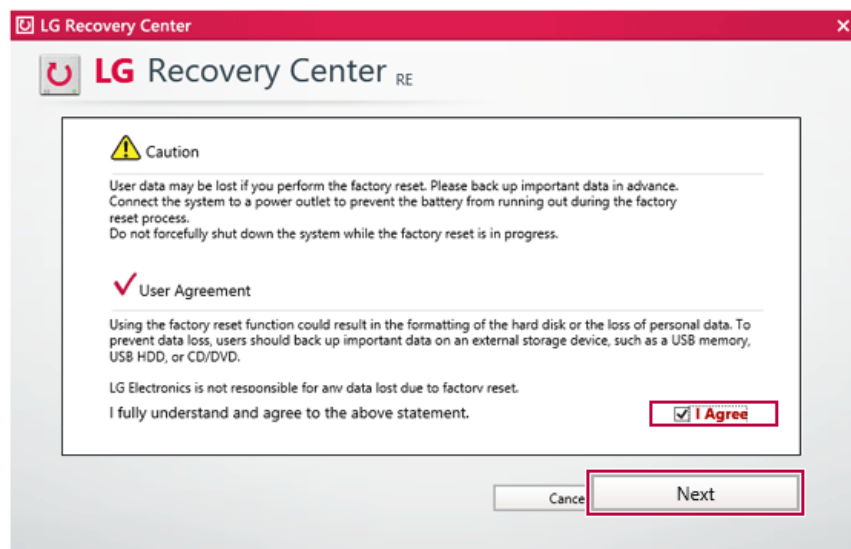


- 4 When the factory reset has been completed as shown in the following figure, click the [Complete] button and then restart the system.

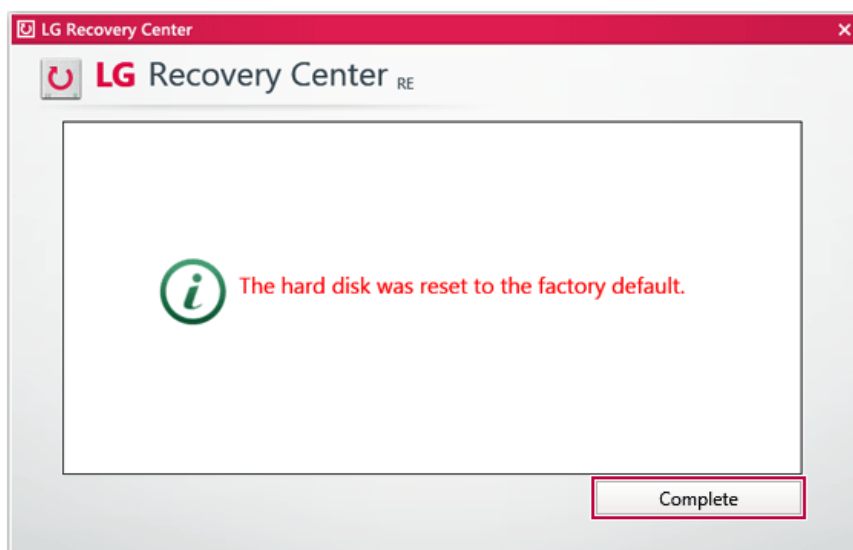

Using Instant Booting

Instant Booting allows the system to boot automatically when the notebook PC cover is opened, so that you can use the system without pressing the power button.

- 1 Select the [] button > [LG Software] to run [LG Control Center].
- 2 On **LG Control Center** screen, set the [Instant Booting] to [ON].

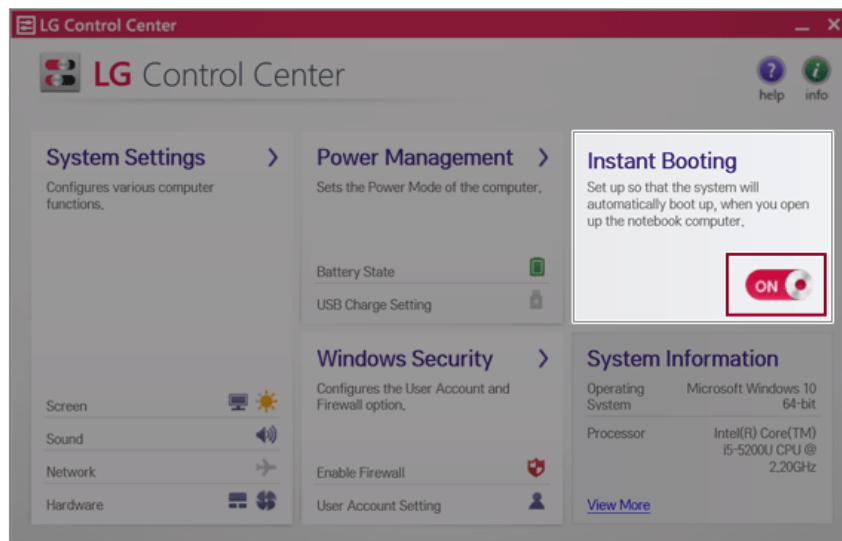

- 3 Shutdown the system and close the notebook PC cover.
- 4 When the cover is opened, the notebook PC turns on and the system starts to boot automatically.

Windows 10 Auto Scaling

ENGLISH


The Windows 10 **Auto Scaling** feature for user's convenience may partially blur the screen or display some icons and texts larger.

Refer to the following information to change the DPI scaling to suit your needs.


- 1 Press the  button and select the **[Settings]** menu.

 **TIP**


Press the  key or [Ctrl] + [Esc] to display the Start menu.

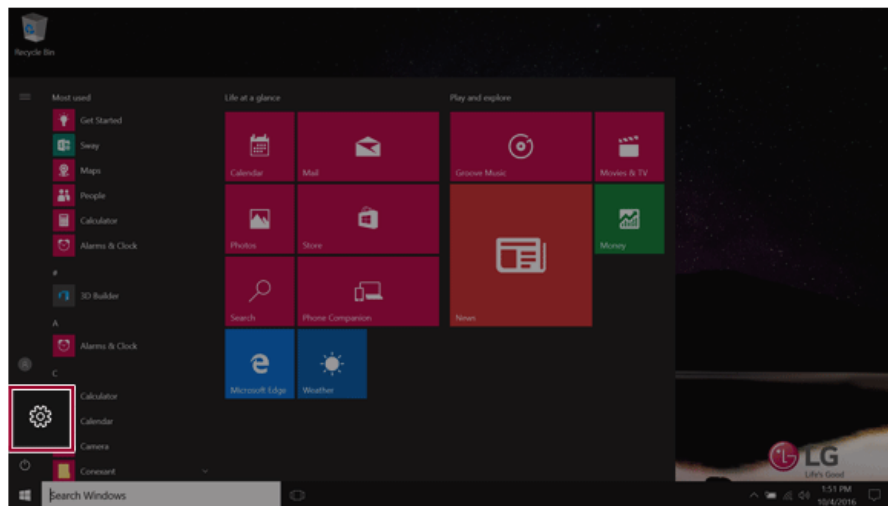

- 2 Select [System] > [Display].

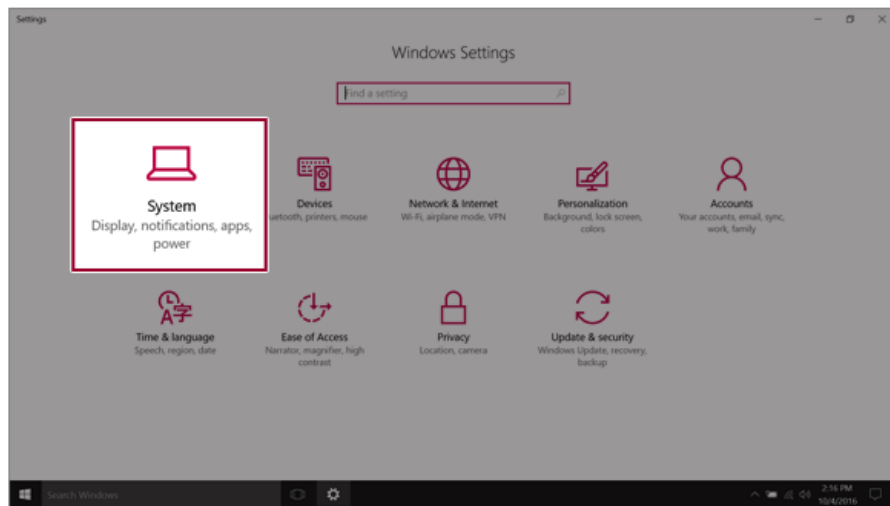


- 3 [Change the size of text, apps and other items.] Changing the item value changes the auto scaling settings.

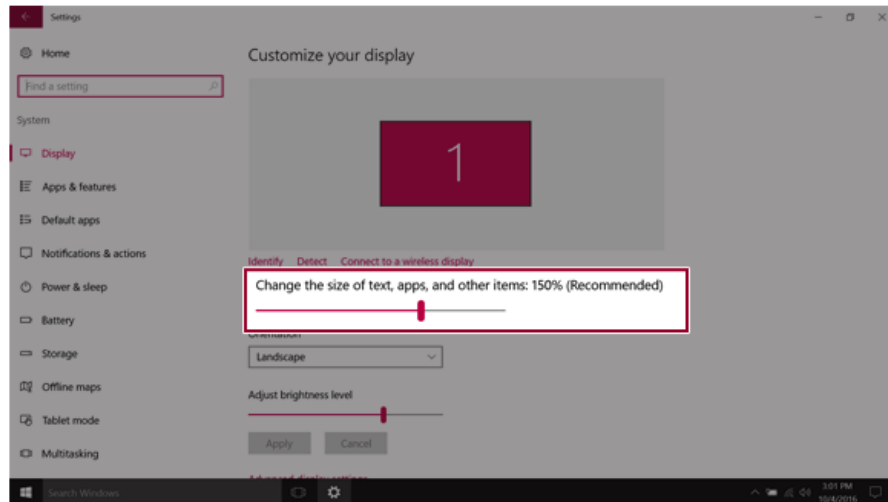

TIP

After changing the auto scaling settings, it is recommended that you click **[Sign out now]** and log on to Windows again.

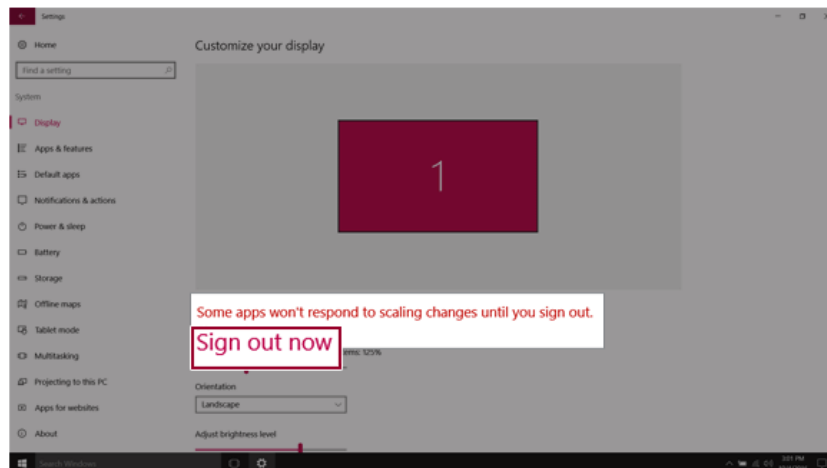

Restoring the System

If the system has an error, you can use Windows 10's recovery function to recover or restore the system to its initial pre-purchase state.




CAUTION

If you have deleted the restoration data in the protected area of the disk, or have arbitrarily installed another operating system, the restore function may not work.


To recover the system, the AC adapter must be connected.

- 1 Click the  button and select the Settings menu.

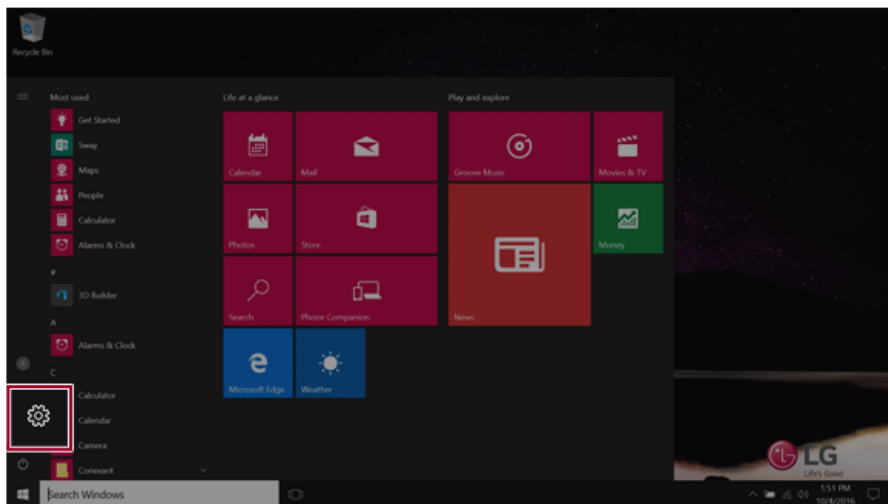


- 2 When the [Settings] screen appears, select [Update & security].


ENGLISH

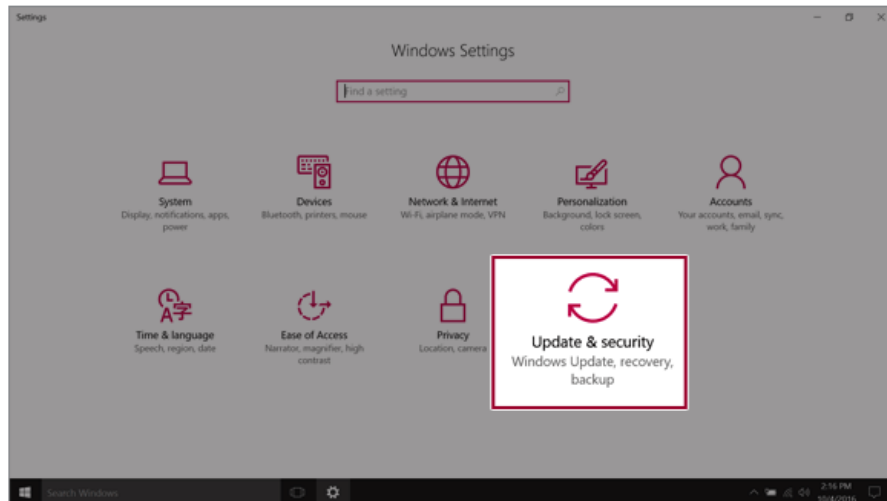

- 3 Select the [Recovery] menu and press [Get started] in the **Reset this PC** menu.

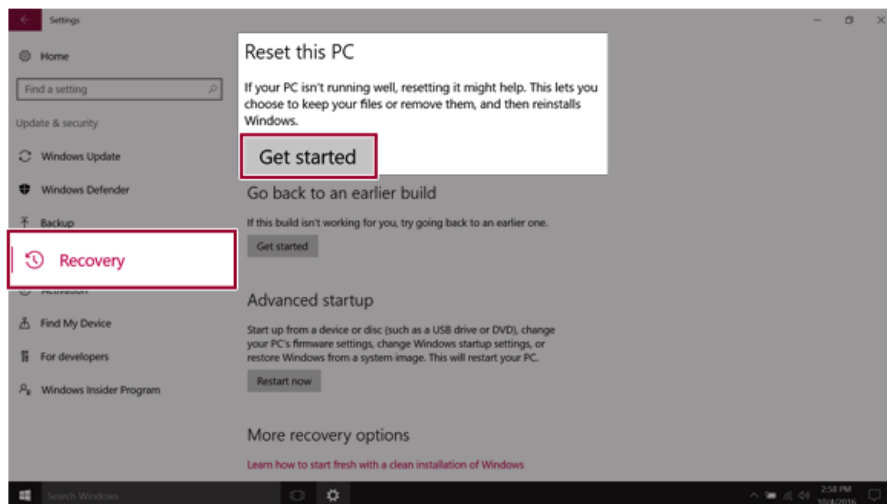


- 4 If the following screen appears, select a desired option to proceed with recovery.

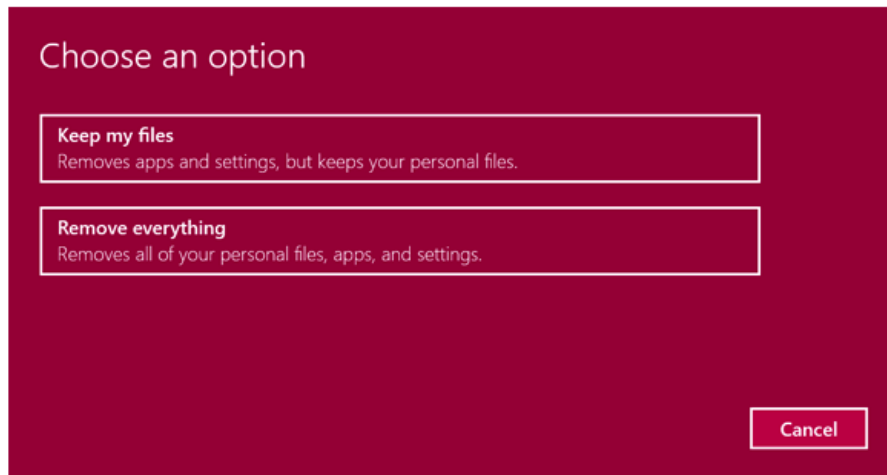

ENGLISH

- **Keep my files:** Recovers the PC without losing any personal files.
- **Remove everything:** Removes all items from the system and restores the system to its initial pre-purchase state.

1. When the following screen appears, select [Yes].

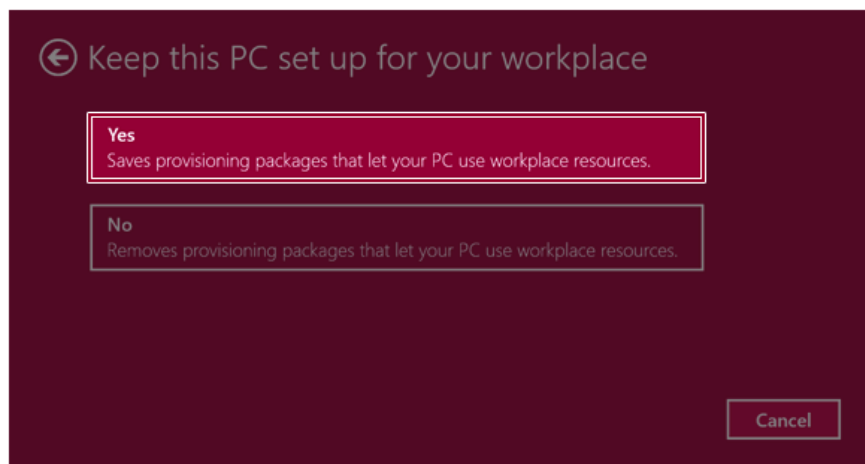

2. Select the options you want to proceed with the recovery.



- **Just remove my files:** Factory-resets the drive where Windows is installed (for example: Drive C).
- **Remove files and clean the drive:** Resets all partitions and drives in the system.

**CAUTION**

All data is lost during the initialization, so you must backup all critical data in advance.
It may take about 5 hours or longer depending on the system conditions.

Connecting to External Display

Connecting to the HDMI Port

HDMI is a high-speed multimedia interface that can transfer uncompressed full digital audio and video signals.

When LG Notebook PC supports SPDIF, HDMI is not supported.

In some models, DTS Audio may not work when you use HDMI.

TIP

Ensure the monitor power is off before connecting the external monitor to the PC.

Use '**HDMI to VGA Gender**' to connect to VGA port.

HDMI to VGA Gender is available at LG Service Center.

It supports HDCP 1.4 specifications.

- 1 Connect the HDMI cable to the PC and the external device (TV, monitor) that supports HDMI.
- 2 HDMI port transfers both video and audio simultaneously. Hence, there is no need for a separate audio connection.



- 3 On the PC, press [Fn] + [F7] to display monitor (projector) toggling screen. Select the desired screen output.

**TIP**

- Every time [] + P keys are pressed, the screen output option changes. Release the keys to display the selected screen output.

**CAUTION**

- If you do not set Speaker as the default value after disconnecting the HDMI cable, the system may not produce any sound.
- If a program was running already, you need to exit and restart the program for it to produce sound.

Using a Wired/Wireless Router

A wireless / regular router connects several PCs and mobile devices to one internet line and enables the use of internet and the network.

A wireless / regular router has to be bought separately. Refer to the manual provided by the manufacturer for instructions.

Connecting a Wireless or Regular Router

If one internet line is used with a wired / wireless router and several devices are connected, this may result in a slower connection.

In case of a wireless LAN, it is recommended to change the network name and security settings for a more secure connection.

Network speed can differ according to operation environment and specifications.

- 1 Connect the internet cable of the modem that was provided by your internet provider to the router's WAN port.
- 2 Connect all devices (PC, IPTV, internet phone, etc.) with a LAN cable to LAN ports 1 to 4 of the router.

The number of LAN ports can vary for each router model.

- 3 Please refer to the manual provided by the router manufacturer for setup of the network and internet.

Wireless LAN

The wireless network (Wireless LAN) is the network environment that connects a PC with the internet provider or company network through an Access Point (wireless or regular router).



OPTION

Wireless LAN is optional. Hence, it may not be installed in some models.

Turning On/Off **Airplane Mode**

Prior to using the wireless LAN, press [Fn] + [F6] to turn off **Airplane mode**.

Pressing [Fn] + [F6] keys will turn on or off the **Airplane mode**. If you are not going to use the product for a while, keep the **Airplane mode** turned on to reduce the battery power consumption.

Using the Wireless LAN

If an Access Point (wired or wireless router) is in the vicinity of the PC, the wireless LAN can easily be accessed.

During the search for a wireless network (Wireless LAN), various Access Point may be found according to the location where the PC is used.

In case no accessible wireless network (Wireless LAN) is near the PC, no Access Point might be found.



A password protected Access Point cannot be accessed without the correct password.

- 1 Press the Action Center [] icon on the right side of the taskbar.




- 2 Press the **[Network]** tile to search for a nearby Access Point.


ENGLISH

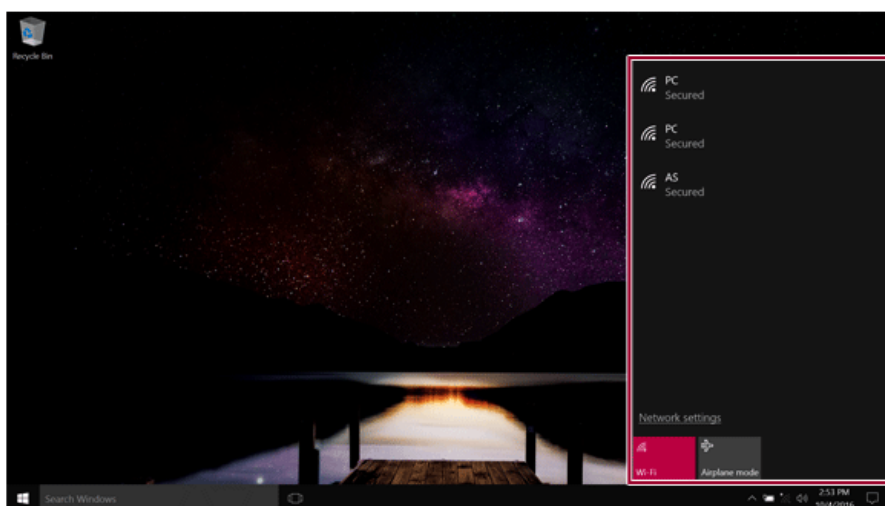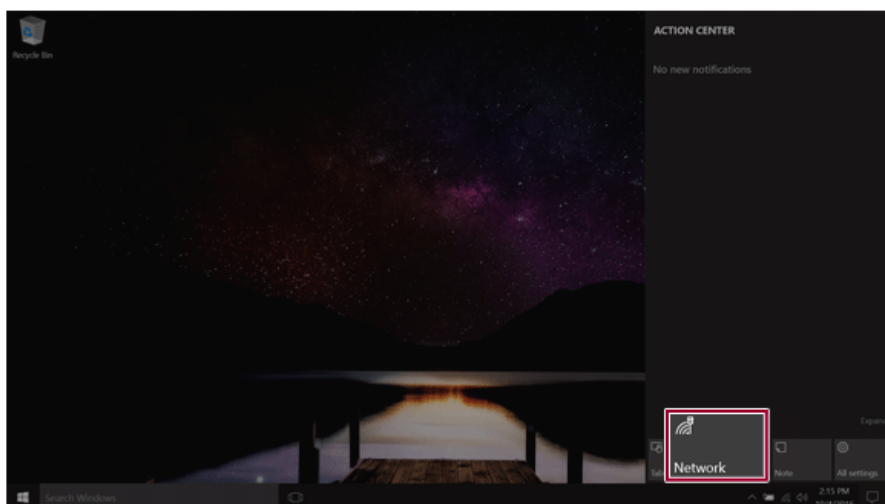**TIP**

If **Wi-Fi** is turned off, press the **[Wi-Fi]** tile.

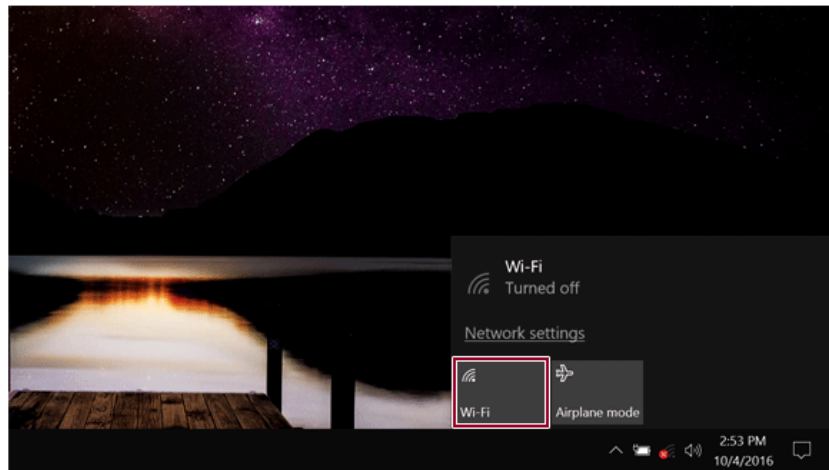


- 3 Select the Access Point you want to connect to and press [Connect].

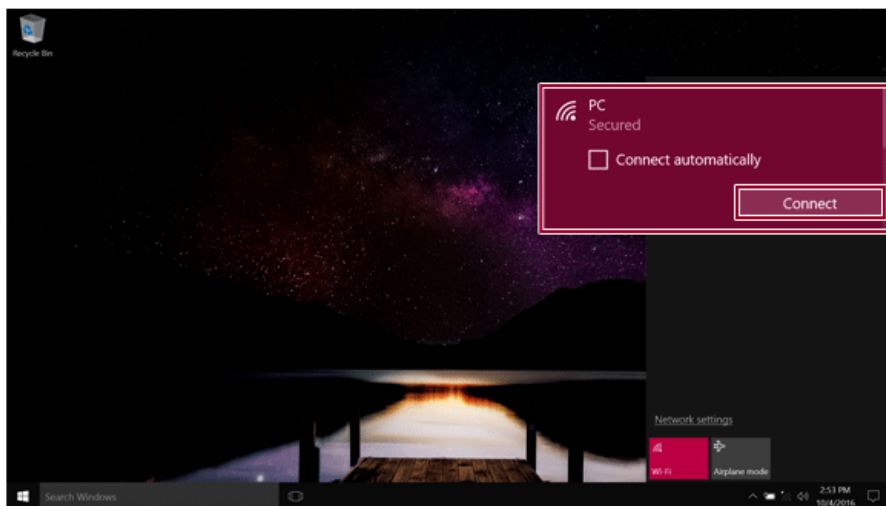

- 4 If a connection is established, [Connected] appears below the Access Point name.

ENGLISH

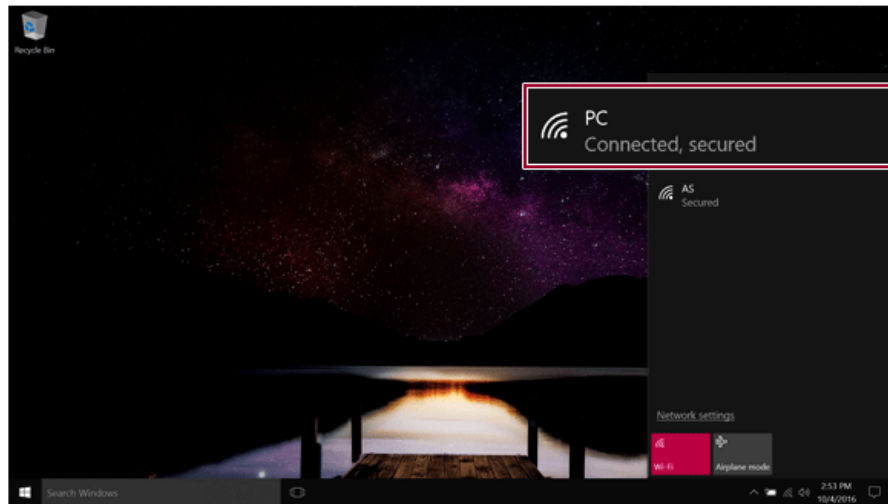

- 5 click the Internet Browser icon to check whether the internet is operating normally.

Wired LAN

LAN is the network environment that users can connect to by using a cable to connect to their internet providers or the company's network.

Using Wired LAN

Wired LAN is installed with an automatic IP (DHCP) as default value.

Please refer to the following instructions for details on setting up an automatic IP (DHCP) or manual IP.

- 1 Connect the LAN adapter to the USB Type-C™ port on the PC.

TIP

The recommended network cable for the optimal network environment is CAT5 or higher.
The network (LAN) cable may be connected when the LAN adapter is used.
The LAN adapter may be separately purchased at LG Service Center.



- 2 Connect the wired LAN cable to the LAN port.

ENGLISH




- 3 Press the  button and select the **Settings** menu.

TIP



Press the  key or [Ctrl] + [Esc] to display the Start menu.

ENGLISH

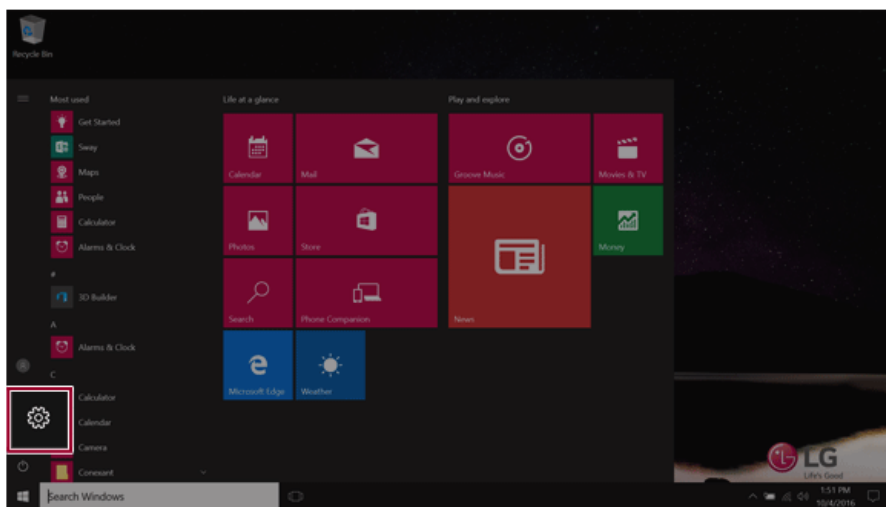


- 4 Select **[Network & Internet]** > **[Status]** > **[Change adapter options]**.

ENGLISH

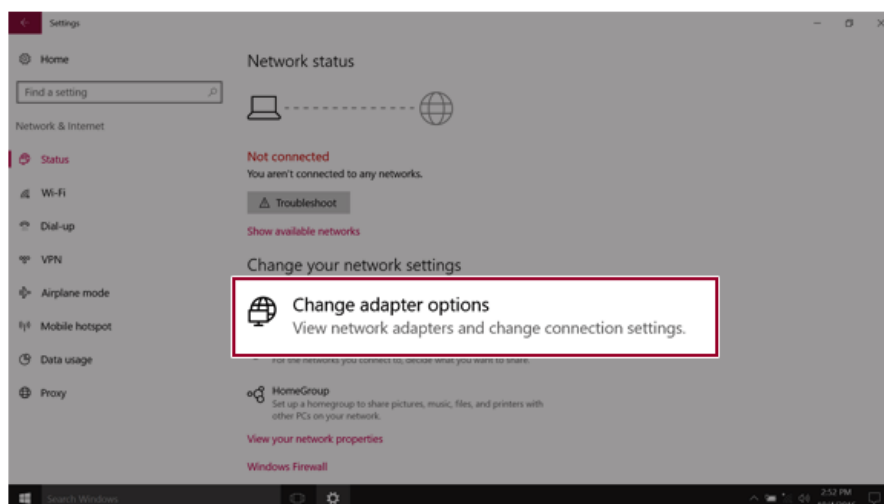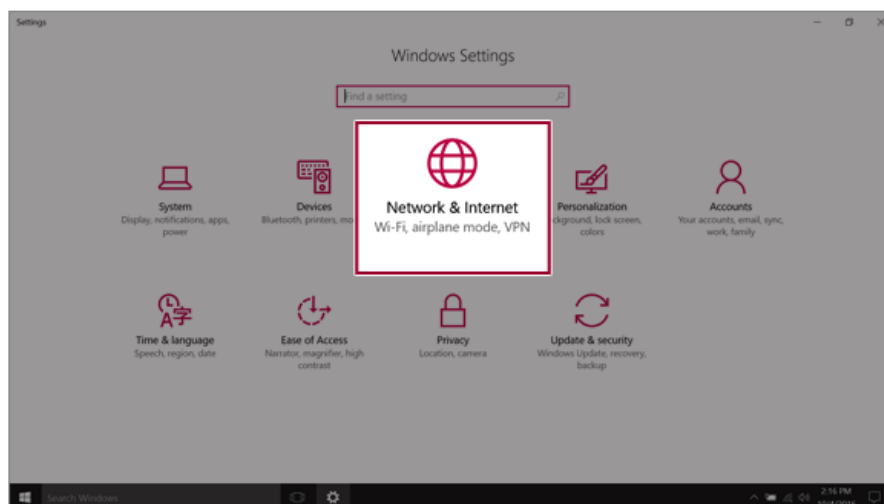


- 5 Right-click **[Ethernet]** and select the **[Properties]** menu.

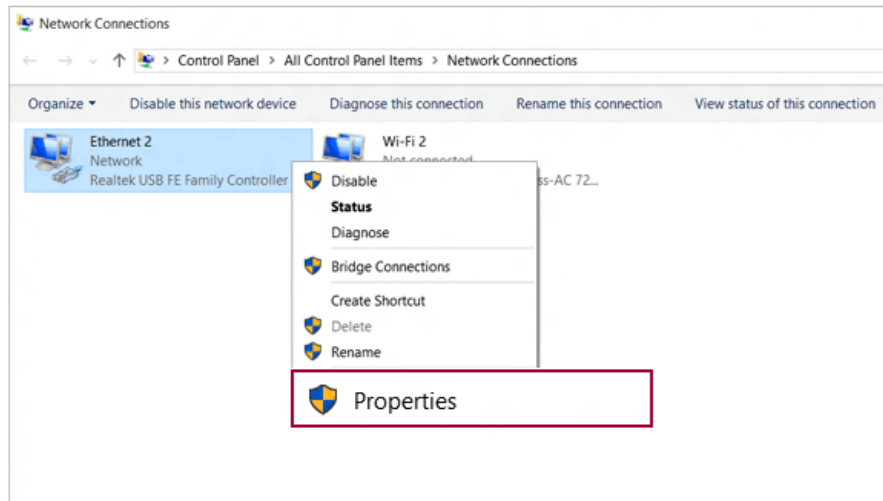


- 6 Select **Internet Protocol Version 4 (TCP/IPv4)** and then click **Properties**.

ENGLISH

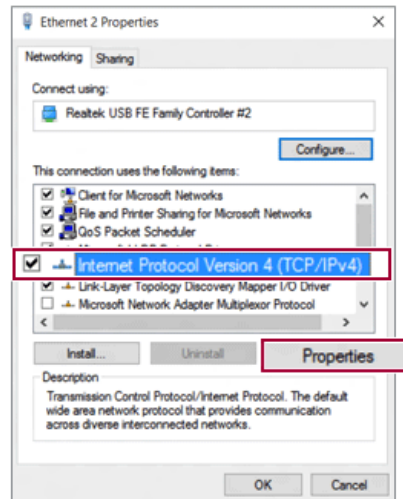

- 7 To use an automatic IP(DHCP), select **[Obtain an IP address automatically]**. If you wish to use a static IP, select **[Use following IP address]** to enter the address.
Contact the network service provider or administrator to use a static IP.

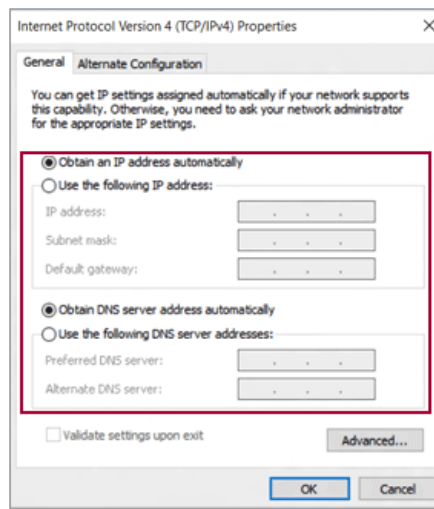

- 8 Press **[OK]** to complete the network setup.
- 9 click the Internet Browser icon to check whether the internet is operating normally.

FEDERAL COMMUNICATIONS COMMISSION

INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada RSS-247 . Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5150-5250MHz is limited to use indoor only

RF Exposure Information (SAR)

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. This device have been tested and found to comply with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules(<1.6W/kg).

Cet appareil radio est conforme au CNR-247 d'Industrie Canada.

L'utilisation de ce dispositif est autorisée seulement aux deux conditions

suivantes : (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

5150-5250MHz est limitée à une utilisation en intérieur uniquement

RF Exposure Information (SAR)

Selon les preuves scientifiques disponibles, aucun problème de santé n'est associé à l'utilisation d'appareils sans fil de faible puissance. Rien ne prouve cependant que ces appareils sont absolument sans danger. Lorsqu'ils sont utilisés, les appareils sans fil de faible puissance émettent de faibles niveaux d'énergie radiofréquence (RF) dans la gamme des hyperfréquences. Bien que les niveaux élevés de radiofréquence puissent avoir un effet sur la santé (réchauffement des tissus), l'exposition à de faibles niveaux n'ayant pas d'effet thermique n'a aucun impact négatif connu sur la santé. De nombreuses études sur l'exposition aux radiofréquences de faible niveau n'ont révélé aucun effet biologique. Certaines d'entre elles ont sous-entendu qu'il pourrait y avoir de tels effets, mais leurs résultats n'ont pas été confirmés par des recherches supplémentaires. Les modèles suivants ont été testés et se sont avérés conformes aux limites d'exposition aux rayonnements définies par la FCC et IC pour l'environnement non contrôlé ; ils répondent aux règles sur l'exposition aux rayonnements RF (radiofréquence) de la FCC et à celles de la norme RSS-102 d'IC.