

REVISION HISTORY

Refer to the DCA and associated markups for a complete description of the changes incorporated in a revision.

REV	DCA	DATE	DRAWN	CHECKED	APPROVED	PUBLISHED
A	W14973	07/06/15	John Blasi Digitally signed by John Blasi dn: cn = John Blasi C = US Date: 2015.07.06 15:20:28 -0600	Michael Hohman 2015.07.06 15:25:32 -0700	Robert Davis 2015.07.06 15:26:26 -0600	Linda Andujio signature 2015.07.06 15:53:05 -0700

2015.0
7.06
15:53:
27
-07'00'

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION.

NEITHER RECEIPT NOR POSSESSION OF THIS DOCUMENT CONFERS ANY RIGHT TO REPRODUCE, USE OR DISCLOSE, IN WHOLE OR IN PART, ANY INFORMATION CONTAINED IN THIS DOCUMENT WITHOUT WRITTEN AUTHORIZATION FROM WULFSBERG ELECTRONICS.

TEMPLATE 150-744545-01 REV. E

COBHAM

Chelton Avionics, Inc.
dba Wulfsberg Electronics Division
Prescott, AZ

CAGE
CODE
1WZE2

A PRINTED COPY OF THIS DOCUMENT MAY NOT BE THE LATEST REVISION.

IT IS THE **USER'S RESPONSIBILITY** TO ENSURE THAT HE OR SHE IS USING THE LATEST DOCUMENT REVISION. THE LATEST REVISION MAY BE VIEWED OR PRINTED FROM THE ELECTRONIC DOCUMENT DISTRIBUTION SYSTEM.

DOCUMENT TITLE

INTERFACE SPECIFICATION, HUMAN INTERFACE, RT7PAN

SIZE
A

LRU
RT7PAN

DOCUMENT NUMBER
701-070801

REV
A

Typed signatures indicate approval. Handwritten signature approval of this document is on file at Wulfsberg Electronics, Prescott, Arizona.

SCALE: NONE

DO NOT SCALE DRAWING

TABLE OF CONTENTS

1	PURPOSE	6
2	SCOPE	6
3	ACRONYMS, ABBREVIATIONS AND GLOSSARY.....	6
4	RELATED AND REFERENCE DOCUMENTS.....	6
5	GUIDANCE ADHERENCE.....	6
6	HUMAN INTERFACE DESCRIPTION	7
6.1	ARCHITECTURE.....	7
6.2	POWER ON.....	8
6.3	POWER OFF	10
6.4	DISPLAY PAGES	11
6.4.1	Normal Operation Page	11
6.4.2	System Functions	33
6.4.3	Reusable Components	76
APPENDIX A	SUB-AUDIBLE TONES	80
A.1	CTCSS TONE CODE TABLE.....	80
A.2	DCS TONE CODE TABLE.....	81
APPENDIX B	ARINC 716 SPECIFICATION FOR 8.33 KHZ TUNING.....	82
B.1	8.33 KHZ TUNING	82

LIST OF FIGURES

Figure 1	User Control Module.....	7
Figure 2	Display Page Tree Structure.....	8
Figure 3	Boot Screen.....	9
Figure 4	APM-Error Screen	9
Figure 5	Factory-Configuration-Error Screen	10
Figure 6	System Shutdown Screen.....	11
Figure 7	Normal Operation Page	12
Figure 8	Normal Operation Page Regions	12
Figure 9	Normal Operation Page Navigation.....	13
Figure 10	Dashboard View – Internal Transceiver	14
Figure 11	Dashboard View – External Transceiver	14
Figure 12	Dashboard View – Transceiver Off.....	15
Figure 13	Dashboard View – Transceiver Not Installed	16
Figure 14	Active Transceiver View.....	16
Figure 15	Active Transceiver View – Transceiver Off	19
Figure 16	Volume Adjustment Dialog	20
Figure 17	QMEM Selection Dialog.....	20
Figure 18	Squelch Threshold Adjustment Dialog.....	21

Figure 19	Changing Active Channel by Transfer	22
Figure 20	Changing Standby Channel by Number	22
Figure 21	Changing Standby Channel by Alphanumeric Identifier	23
Figure 22	OTAR Confirmation Dialog	24
Figure 23	OTAR Status Display	25
Figure 24	OTAR Cancel Confirmation Dialog	25
Figure 25	Key Selection Dialog	26
Figure 26	No Scan Groups Warning Dialog	27
Figure 27	Scan Group Selection Dialog	27
Figure 28	Scan Group Edit Dialog	28
Figure 29	View Channel Properties Page	29
Figure 30	View Channel Properties Page Example 1	30
Figure 31	View Channel Properties Page Example 2	30
Figure 32	Changing Active Frequency by Transfer	32
Figure 33	Changing Standby Frequency by MHz	32
Figure 34	Changing Standby Frequency by KHz	33
Figure 35	Brightness Control Dialog	34
Figure 36	Mode-Selection-Menu Dialog	34
Figure 37	Relay-Configuration Dialog	35
Figure 38	Relay-Mode Page	36
Figure 39	Simulcast-Configuration Dialog	37
Figure 40	Simulcast-Mode Page	38
Figure 41	No Message Page	38
Figure 42	Message List Page	39
Figure 43	Message View Page	39
Figure 44	Information Page	40
Figure 44	Programming-Mode-Selection Dialog	40
Figure 45	Programming-Password-Entry Dialog	41
Figure 46	Preset-Channel-Function Dialog	42
Figure 47	Preset-Channel-Transceiver Page	43
Figure 48	Preset-Channel-Number Page	43
Figure 49	Preset-Channel-Alpha Page	44
Figure 50	Preset-Channel-Type Page	45
Figure 51	Preset-Channel-Receive-Frequency Page	46
Figure 52	Preset-Channel-Receive-Tone Page	47
Figure 53	Preset-Channel-Receive-NAC Page	47
Figure 54	Preset-Channel-Transmit-Frequency Page	48
Figure 55	Preset-Channel-Transmit-Tone Page	49
Figure 56	Preset-Channel-Transmit-NAC Page	50
Figure 57	Preset-Channel-Transmit-Power Page	51
Figure 58	Preset-Channel-Talk-Group Page	52
Figure 59	Preset-Channel-Encryption-Type Page	52
Figure 60	Preset-Channel-Encryption-Key Page	53
Figure 61	Preset-Channel-Receive-Phase Page	54
Figure 62	Preset-Channel-Transmit-Phase Page	55
Figure 63	Preset-Channel-Transmit-Deviation Page	56
Figure 64	Preset-Channel-Receive-Bandwidth Page	57
Figure 65	Preset-Channel-Save Page	58
Figure 66	Delete-Preset-Channel-Transceiver Page	59
Figure 67	Delete-Preset-Channel-Number Page	59
Figure 68	Delete-Preset-Channel-Confirm Page	60
Figure 69	Clone-Preset-Channel-Transceiver Page	61
Figure 70	Clone-Preset-Channel-Source Page	61
Figure 71	Clone-Preset-Channel-Target Page	61
Figure 72	Clone-Preset-Channel-Confirm Page	62

Figure 73	Scan-Group-Function Dialog.....	63
Figure 74	Scan-Group-Add-Transceiver Page.....	63
Figure 75	Scan-Group-Add-Number Page	64
Figure 76	Scan-Group-Add-Alpha Page	65
Figure 77	Scan-Group-Add-Channel-1 Page	66
Figure 78	Scan-Group-Add-Priority-Channel Page.....	67
Figure 79	Scan-Group-Add-Confirm Page.....	68
Figure 80	Scan-Group-Delete-Transceiver Page.....	69
Figure 81	Scan-Group-Delete-Number Page	69
Figure 82	Scan-Group-Delete-Confirm Page.....	70
Figure 83	Encryption-Key-Function Dialog	71
Figure 84	Encryption-Key-Fill-Transceiver Page	72
Figure 85	Encryption-Key-Fill-Action Page.....	72
Figure 86	Encryption-Key-Erase-Transceiver Page.....	73
Figure 87	Encryption-Key-Erase-Action Page	74
Figure 90	System-Configuration-Xcvr-Transceiver Page	75
Figure 91	System-Configuration-Xcvr-Action Page.....	76
Figure 95	Channel-Number-Entry Dialog.....	77
Figure 96	Talk-Group-Entry Dialog	77
Figure 97	Frequency-Entry Dialog	78
Figure 98	Tone-Entry Dialog CTCSS	78
Figure 99	Tone-Entry Dialog DCS	79
Figure 100	Tone-Entry Dialog No Tone	79

LIST OF TABLES

Table 1	Dashboard View Indicators	14
Table 2	Active Transceiver View Indicators	17
Table 3	Transceiver Functions	18
Table 4	Channel Properties	31
Table 5	Mode-Selection-Menu Dialog Actions.....	34
Table 6	Relay-Configuration Dialog Actions.....	35
Table 7	Transceiver Functions in Relay-Mode.....	36
Table 8	Simulcast-Configuration Dialog Actions.....	37
Table 9	Programming-Mode-Selection Dialog Actions	41
Table 10	Preset-Channel-Function Dialog Actions	42
Table 11	Preset-Channel-Transceiver Page Actions.....	43
Table 12	Preset-Channel-Number Page Actions	44
Table 13	Preset-Channel-Alpha Page Actions	44
Table 14	Preset-Channel-Type Page Actions	45
Table 15	Preset-Channel-Receive-Frequency Page Actions.....	46
Table 16	Preset-Channel-Receive-Tone Page Actions.....	47
Table 17	Preset-Channel-Receive-NAC Page Actions.....	48
Table 18	Preset-Channel-Transmit-Frequency Page Actions	48
Table 19	Preset-Channel-Transmit-Tone Page Actions.....	49
Table 20	Preset-Channel-Transmit-NAC Page Actions	50
Table 21	Preset-Channel-Transmit-Power Page Actions.....	51
Table 22	Preset-Channel-Talk-Group Page Actions	52
Table 23	Preset-Channel-Encryption-Type Page Actions	53
Table 24	Preset-Channel-Encryption-Key Page Actions.....	53
Table 25	Preset-Channel-Receive-Phase Page Actions	54
Table 26	Preset-Channel-Transmit-Phase Page Actions	55
Table 27	Preset-Channel-Transmit-Deviation Page Actions.....	56
Table 28	Preset-Channel-Receive-Bandwidth Page Actions.....	57
Table 29	Preset-Channel-Save Page Actions.....	58

Table 30	Delete-Preset-Channel-Confirm Page Actions	60
Table 31	Clone-Preset-Channel-Confirm Page Actions	62
Table 32	Scan-Group-Function Dialog Actions	63
Table 33	Scan-Group-Add-Transceiver Page Actions	63
Table 34	Scan-Group-Add-Number Page Actions	64
Table 35	Scan-Group-Add-Alpha Page Actions	65
Table 36	Scan-Group-Add-Channel-1 Page Actions	66
Table 37	Scan-Group-Add-Priority-Channel Page Actions	67
Table 38	Scan-Group-Add-Confirm Page Actions	68
Table 39	Scan-Group-Delete-Transceiver Page Actions	69
Table 40	Scan-Group-Delete-Number Page Actions	70
Table 41	Scan-Group-Delete-Confirm Page Actions	70
Table 42	Encryption-Key-Function Dialog Actions	71
Table 43	Encryption-Key-Fill-Transceiver Page Actions	72
Table 44	Encryption-Key-Fill-Action Page Actions	72
Table 45	Encryption-Key-Erase-Transceiver Page Actions	73
Table 46	Encryption-Key-Erase-Action Page Actions	74
Table 48	System-Configuration-Xcvr-Transceiver Page Actions	75
Table 49	System-Configuration-Xcvr-Action Page Actions	76
Table 53	CTCSS Tones	80
Table 54	DCS Tones	81
Table 55	Control Head Tuning in 8.33 KHz Mode	82

End of Page 5

1 PURPOSE

This document establishes the design requirements for the human interface of the RT-7000 panel mount radio. It is to be used by the design team as a specification guiding all detailed design.

2 SCOPE

This document addresses only the human interface of the RT-7000 panel mount radio.

3 ACRONYMS, ABBREVIATIONS AND GLOSSARY

Term	Definition
PMR	Panel mount radio
CPS	Customer Programming Software – Motorola PC application for configuring radio personality data.
KVL	Key Variable Loader - Motorola product for loading encryption keys into an encryption capable radio.
OTAR	Over The Air Rekeying - an encryption system feature for loading encryption keys into a radio via a radio link.
LCD	Liquid Crystal Display
XCVR	Abbreviation for Transceiver
APX-7000	Motorola portable radio with P25 capability
APX	Abbreviation for APX-7000
CWT	Abbreviation for Cobham wideband transceiver
PCIe	PCI Express
APM	Aircraft Personality Module

4 RELATED AND REFERENCE DOCUMENTS

Document Number	Publisher	Document Title
701-070041	Wulfsberg	System Requirements Specification, RT7PAN
DOT/FAA/TC-13/44 v1.0	FAA	Human Factors Considerations in the Design and Evaluation of Flight Deck Displays and Controls
701-070724	Wulfsberg	Panel Mount Radio Project - Graphics, Human Factors and Haptics Guidelines

5 GUIDANCE ADHERENCE

The human interface of the PMR should adhere to the applicable guidance documents as much as is practicable. Guidance documents are listed in Section 4. Note that the guidance documents come from multiple sources and include internally developed guidelines and those from the FAA. The following summarizes the guidance applicable to the PMR. This is not an exhaustive list. The source guidance documents should be referenced when additional detail is desired.

TSOC113a

Advisor Circular 25-11B

SAE AS8034B Minimum Performance Standard for Airborne Multipurpose Electronic Displays

SAE ARP4256A Design objectives for liquid crystal displays for part 25 (transport) aircraft

6 HUMAN INTERFACE DESCRIPTION

The human interface of the PMR is provided by the User Control Module. This module consists of the faceplate, knobs, buttons, LCD touch display, digital interface port, and supporting hardware. The User Control Module communicates with the Radio Control Module over PCIe. Figure 1 depicts the User Control Module.

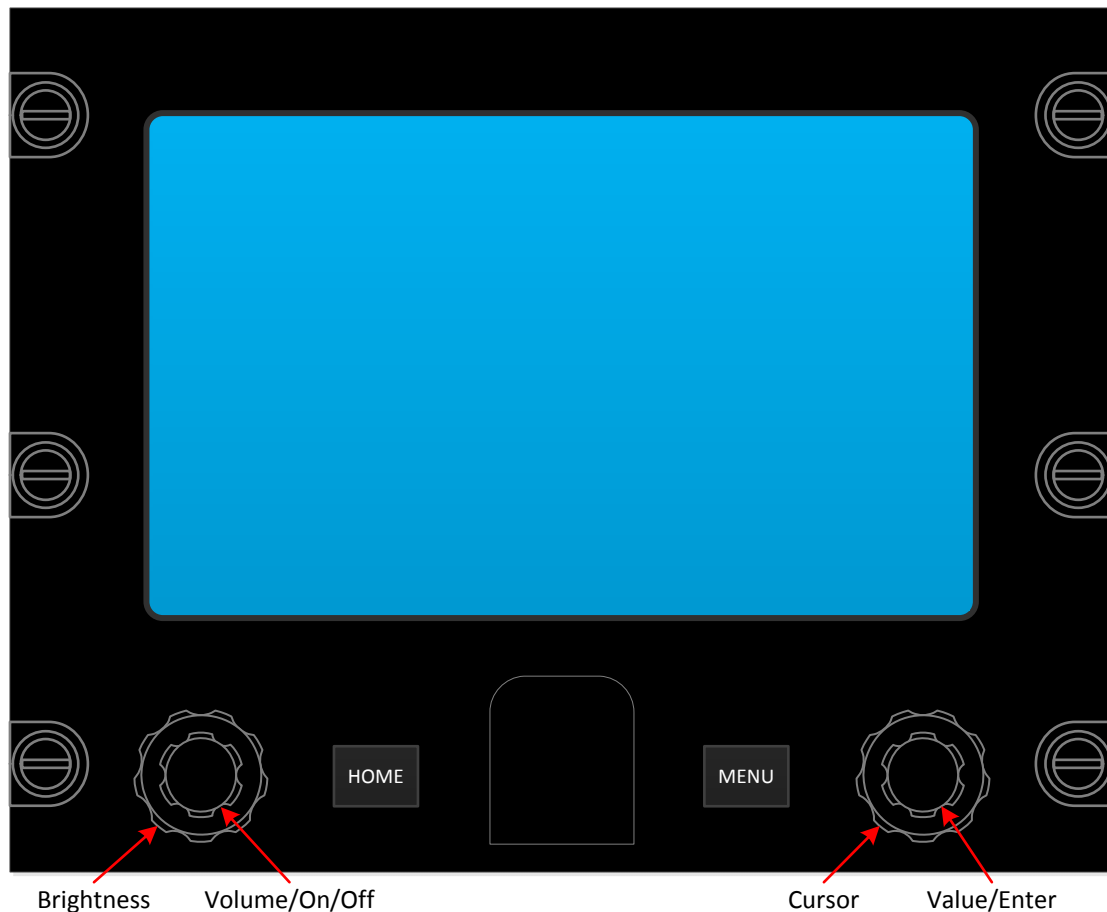


Figure 1 User Control Module

6.1 ARCHITECTURE

The human interface is organized into display pages. Each display page provides the operator the ability to view specific information, or perform some specific task(s). The operator navigates from page to page by pressing keys, turning knobs, etc. Navigation can be achieved either through the touchscreen or through keys/knobs/push-button actions. Display pages are organized in a tree structure, rooted at the normal operation page. All features are three (3) actions or less from the normal operation page. Figure 2 shows the tree structure of the display pages identified in this document.

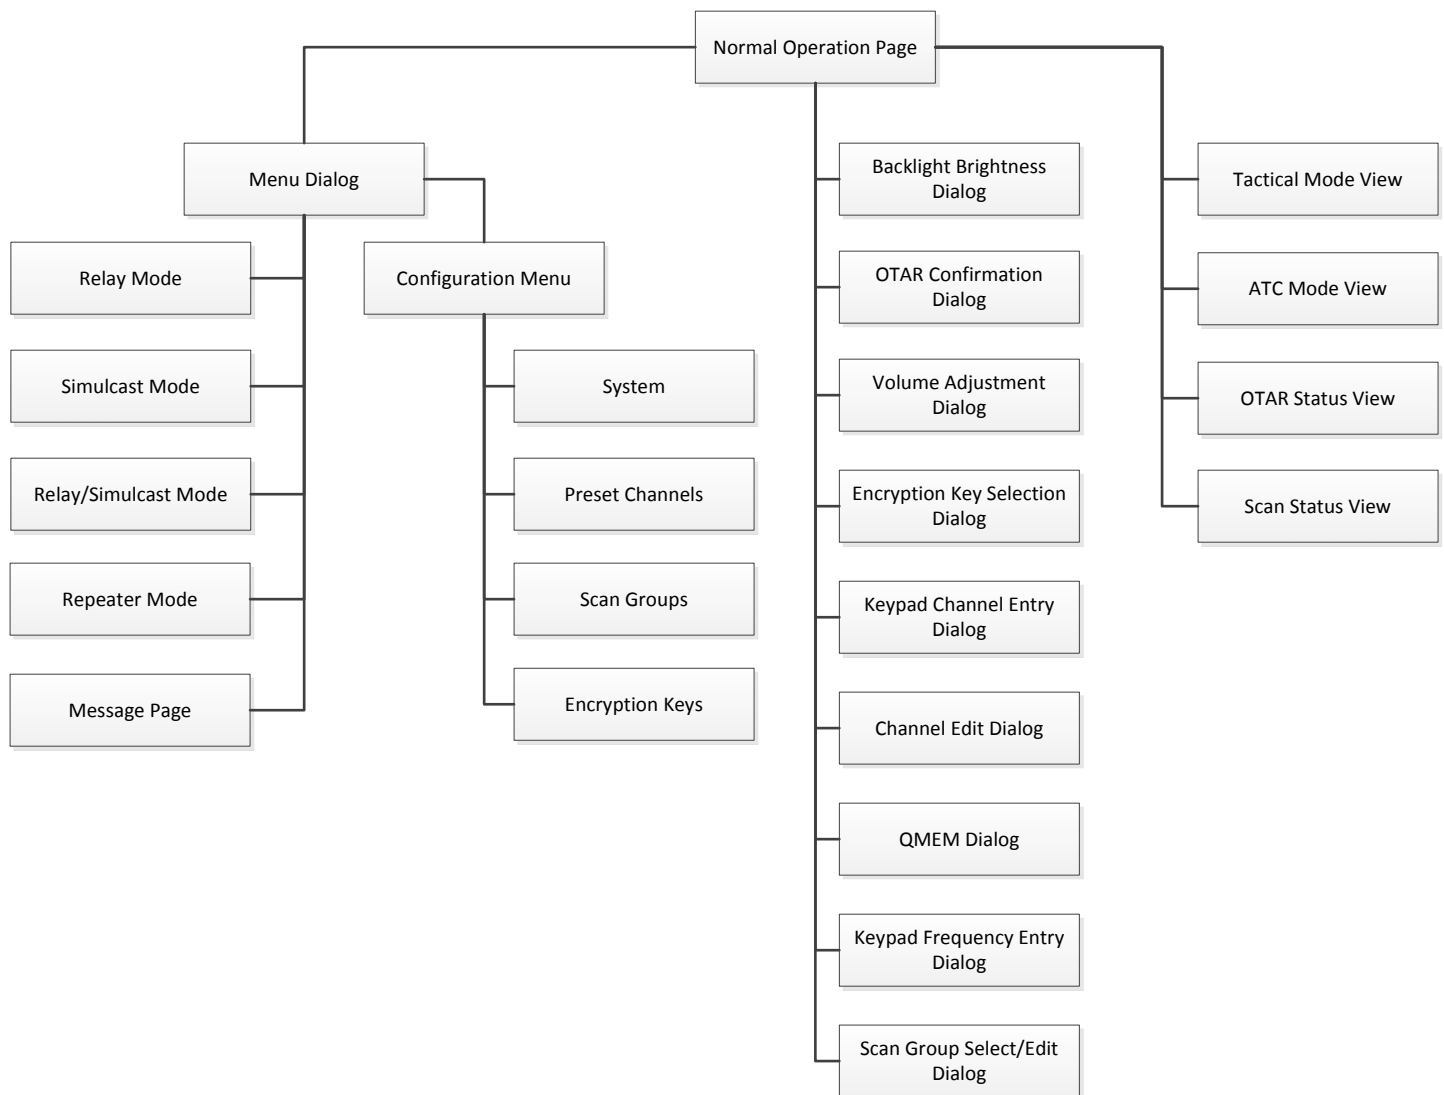


Figure 2 Display Page Tree Structure

6.2 POWER ON

If aircraft power is removed while the PMR is in operation, the PMR shall automatically turn on upon reapplication of aircraft power. If the PMR is not in operation (turned off) when aircraft power is removed, the PMR shall remain off when aircraft power is restored, and shall only turn on when an operator presses the “ON” button.

Upon power up, the PMR shall display a “boot” screen while system initialization is taking place. This should take less than 30 seconds, which is the amount of time specified for the transceiver modules to come up fully. Figure 3 depicts the boot screen. Note the software part number displayed near the bottom of the screen. In addition, the hardware model number and firmware number shall be displayed.



Figure 3 Boot Screen

During power up, if the Aircraft-Personality-Module (APM) is missing or inoperable, the PMR shall display an error screen indicating the condition. The operator shall be required to acknowledge this condition before execution can continue. Once acknowledged, the system shall use default values for the APM parameters and continue the boot process. Figure 4 depicts the APM-Error screen.

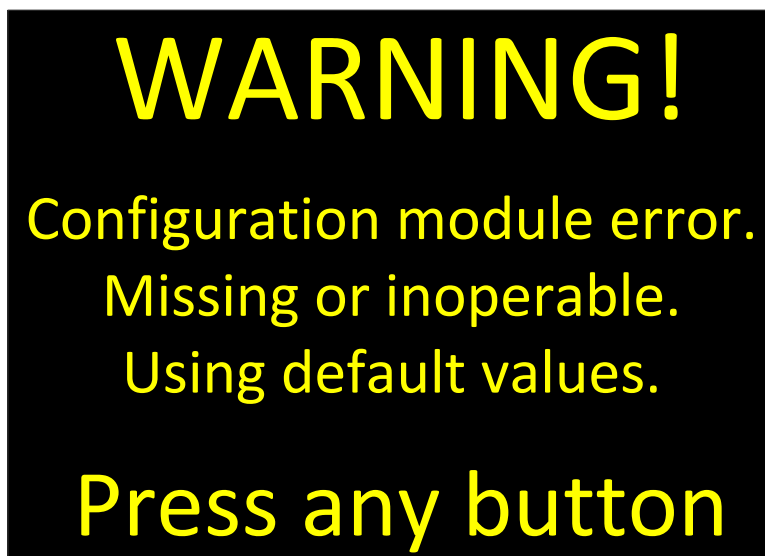


Figure 4 APM-Error Screen

During power up, if the Factory-Configuration data is missing or corrupt, the PMR shall display an error screen indicating the condition and cease normal operation. Figure 5 depicts the Factory-Configuration-Error screen.

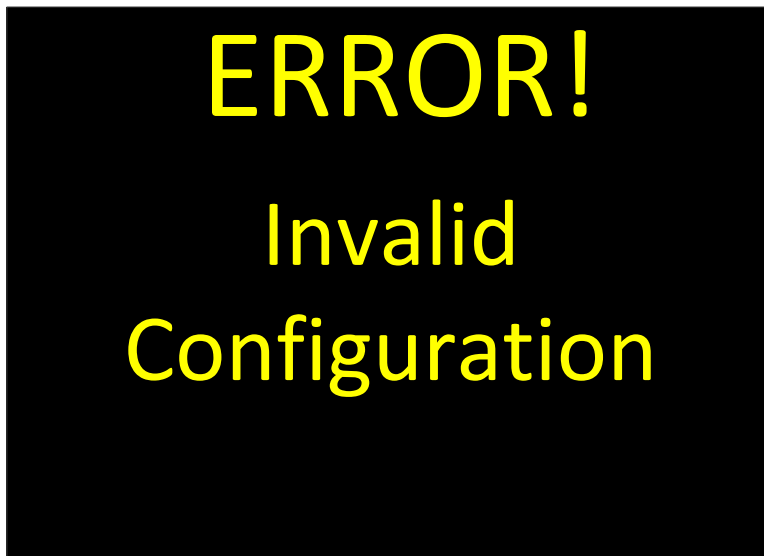


Figure 5 Factory-Configuration-Error Screen

6.3 POWER OFF

If aircraft power is removed while the PMR is in operation, the PMR shall be able to restore the following from non-volatile memory upon reapplication of aircraft power.

- Current active channel for each transceiver
- Current volume level for each transceiver
- Current active transceiver
- Audio Levels

The operator shall be able to turn the PMR off by pressing and holding the “ON” button. While the “ON” button is being held down, the PMR shall do the following:

1. Go to full brightness.
2. Display the System Shutdown screen depicted in Figure 6.
3. Count down the seconds remaining until system turns off from 3 to 0.
4. When the count hits 0, power off.

If the operator releases the “ON” button prior to 3 seconds elapsing, the display shall return its previous state.

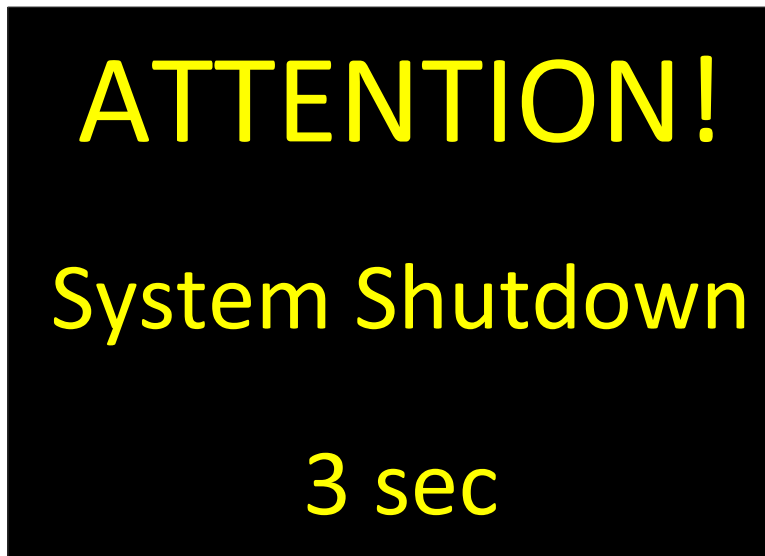


Figure 6 System Shutdown Screen

6.4 DISPLAY PAGES

The following sections flesh out each of the display pages identified in Figure 2. The information required to display on each page is given along with known button/knob event requirements. A picture showing the desired page layout is also provided. Due to the significant differences in aspect ratio between the documentation system and the actual hardware's display, some deviation in fonts, colors, and information placement is expected, and permissible, in the implementation.

6.4.1 NORMAL OPERATION PAGE

This page is the primary operational page of the PMR. This page shall be the first operational page displayed after system boot. Figure 7 depicts the desired layout for this page when the maximum 5 transceivers are available.

6.4.1.1 Layout

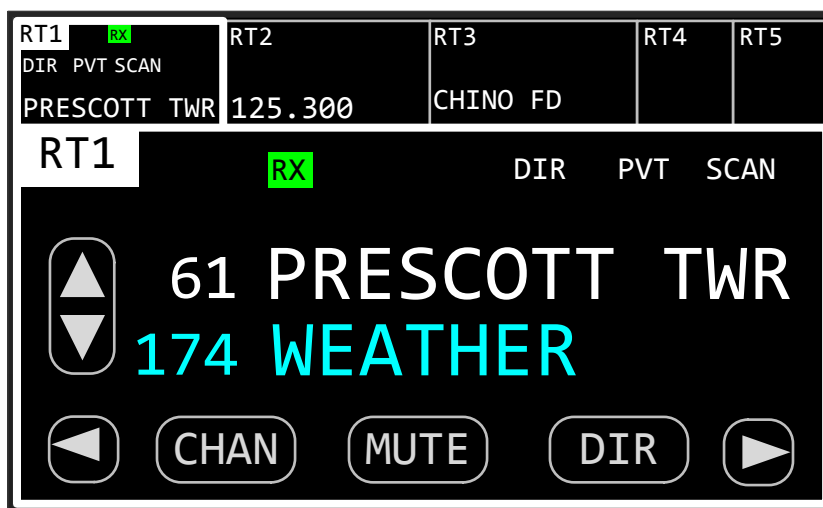


Figure 7 Normal Operation Page

The Normal-Operation-Page is divided into 2 regions: System Dashboard and Active Transceiver. These regions are depicted in Figure 8.

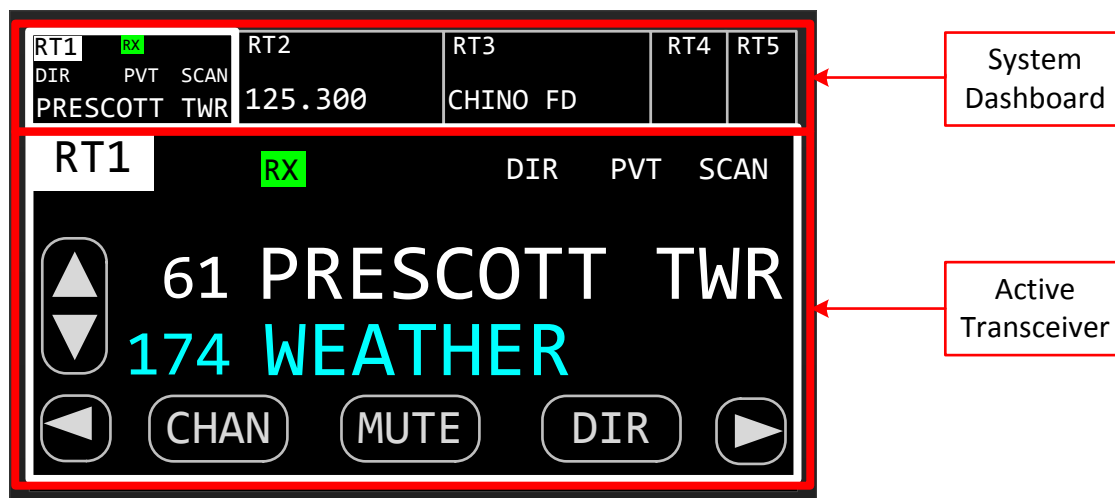


Figure 8 Normal Operation Page Regions

The System-Dashboard region contains a summary of the operating state of all the transceivers installed in the system. The PMR supports from 1 to 3 internal transceivers and 0 to 2 external transceivers. This region shall be split into sub-regions, one for each transceiver. These sub-regions are termed a Dashboard-View. Details of the contents of the Dashboard-View are given elsewhere in this document.

The Active-Transceiver region contains detailed information on the active transceiver. The active transceiver is the one that the operator will interact with. This region of the display is termed an Active-Transceiver-View. All transceiver specific functions are accessed via the Active-Transceiver-View. Details of the contents of the Active-Transceiver-View are given elsewhere in this document.

A transceiver shall be made active by pressing its Dashboard-View, either by direct touch or by cursor/value/enter. Any of the installed transceivers shall be selectable as the active transceiver, but only one transceiver shall be active at any given time.

When a transceiver is made active, it shall become the active transmitter for its PTT group. In single-microphone installations (i.e. a single PTT group), the active transceiver shall transmit when the PTT is asserted. In multiple-microphone installations (i.e. two or more PTT groups), the active transceiver for the PTT group shall transmit when the PTT for the group is asserted.

6.4.1.2 Navigation

To Home page shall be navigable by both touch and cursor/value. The screen element that the operator is currently interacting with shall be indicated by a rectangle drawn around the element. This rectangle is termed the focus rectangle. Only one screen element shall be focused at any given time. After three (3) seconds of inactivity, the focus rectangle shall become invisible to avoid screen clutter. The gold boxes (some rounded) in Figure 9 show the screen elements that shall be focusable.

Touching an element gives it the focus. Rotating the cursor knob clockwise shall move the focus rectangle in a generally circular, left-to-right, top-to-bottom fashion. The red arrows in Figure 9 depict the motion of the focus rectangle as the cursor knob is turned clockwise. Turning the cursor knob counterclockwise shall move the focus rectangle in the reverse order of clockwise rotation. If the focus rectangle is invisible due to inactivity, the first turn of the cursor knob shall make the focus rectangle visible, but shall not move it from its previous location.

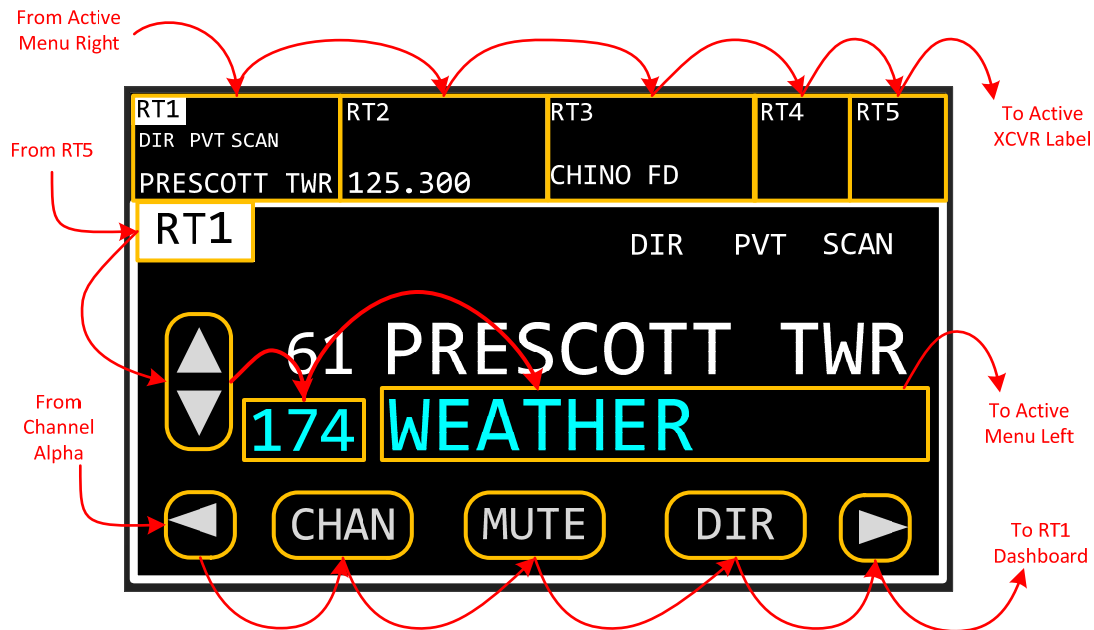


Figure 9 Normal Operation Page Navigation

6.4.1.3 Dashboard-View

The Dashboard-View contains a summary of the operating state of a transceiver. Its purpose is to keep the operator informed about the state of non-active transceivers. This view contains only summary information, such as the active channel and indications of mode. The Dashboard-View for an internal transceiver is depicted in Figure 10. The Dashboard-View for an external transceiver is depicted in Figure 11.

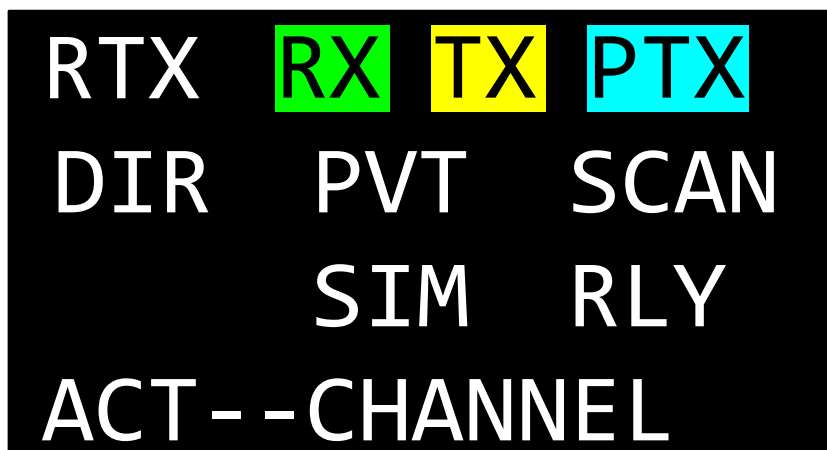


Figure 10 Dashboard View – Internal Transceiver



Figure 11 Dashboard View – External Transceiver

Table 1 Dashboard View Indicators

Indicator	Description
RTX	Placeholder for transceiver's identifier. Always visible. Valid values are RT1, RT2 ... RT5
RX	Indicates transceiver is receiving. Only visible when receiving.
TX	Indicates transceiver is transmitting. Only visible when transmitting.
PTX	Indicates transceiver is associated with PTT-X. Displayed in reverse video (as shown) when transceiver is the active transceiver for its PTT group. Can change if transceiver is participating in a simulcast, in which case the simulcast trigger PTT will be displayed.
DIR	Indicates transceiver is in direct mode. Only visible when transceiver is in direct mode. When not displayed, transceiver is in repeater mode. This indicator should automatically appear for preset channels whose transmit and receive frequencies are identical.

PVT	Indicates transceiver is in private mode, i.e. encryption is enabled. Only visible when transceiver is in encrypted mode. When not displayed, transceiver is operating in the clear.
SCAN	Indicates transceiver is in scan mode. Only visible when transceiver is in scan mode. When not displayed, transceiver is not scanning.
SIM	Indicates transceiver is participating in a simulcast. Only visible when simulcast mode is active and the transceiver is participating in the simulcast. When not displayed, transceiver is not participating in a simulcast.
RLY	Indicates transceiver is participating in a relay. Only visible when relay mode is active and transceiver is participating in the relay. When not displayed, transceiver is not participating in a relay.
ACT--CHANNEL	Placeholder for transceiver's active channel. Always visible. When transceiver is in tactical mode and is tuned to a preset channel the active channel indicator will display the alphanumeric identifier of the channel. When transceiver is in COM mode, or the manual channel is tuned while in tactical mode, the active channel indicator will display the receive frequency of the channel.

When the transceiver has been turned off, all indicators except the transceiver identifier shall be invisible, and "RADIO OFF" shall be displayed. The Dashboard-View for a transceiver that is off is depicted in Figure 12.



Figure 12 Dashboard View – Transceiver Off

When the transceiver is not installed in the system, all indicators except the transceiver identifier shall be invisible, and "NOT INSTALLED" shall be displayed. The Dashboard-View for a transceiver that is not installed is depicted in Figure 13.



Figure 13 Dashboard View – Transceiver Not Installed

6.4.1.4 Active-Transceiver-View

The Active-Transceiver-View contains detailed information on the operating state of the active transceiver, and allows the operator to control the transceiver. From within this view the operator can perform activities such as change channels, enter/exit direct mode, turn on/off encryption, etc. This also contains more detailed state information than is displayed in the Dashboard-View. The Active-Transceiver-View is depicted in Figure 14.

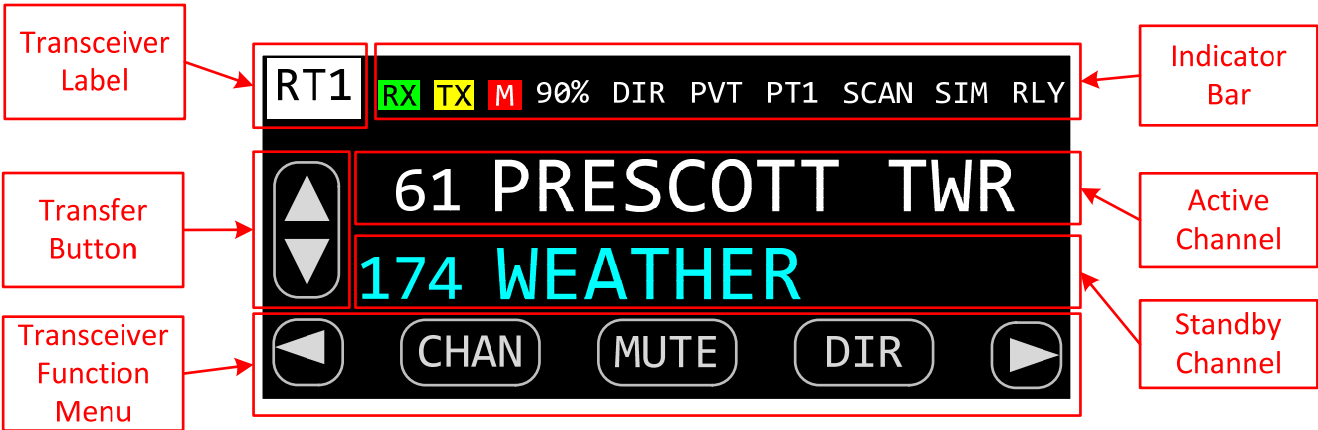


Figure 14 Active Transceiver View

The Transceiver-Label contains the identifier of the active transceiver. Valid values are RT1, RT2, RT3, RT4, and RT5. The Transceiver-Label shall behave as a button that when pressed, shall toggle the transceiver's on/off state. The label press shall be either by direct touch, or by cursor/value/enter control.

The Indicator-Bar displays the current state of the active transceiver. The following table lists all the indicators that can appear in the Indicator-Bar, what they mean, and when they are to be displayed.

Table 2 Active Transceiver View Indicators

Indicator	Description
RX	Indicates transceiver is receiving. Only visible when receiving.
TX	Indicates transceiver is transmitting. Only visible when transmitting.
M	Indicates transceiver is muted. Only visible when muted.
90%	Placeholder for current volume level. Always visible. Valid values range from 0% to 100%.
DIR	Indicates transceiver is in direct mode. Only visible when transceiver is in direct mode. When not displayed, transceiver is in repeater mode. This indicator should automatically appear for preset channels whose transmit and receive frequencies are identical.
PVT	Indicates transceiver is in private mode, i.e. encryption is enabled. Only visible when transceiver is in encrypted mode. When not displayed, transceiver is operating in the clear.
SCAN	Indicates transceiver is in scan mode. Only visible when transceiver is in scan mode. When not displayed, transceiver is not scanning.
SIM	Indicates transceiver is participating in a simulcast. Only visible when simulcast mode is active and the transceiver is participating in the simulcast. When not displayed, transceiver is not participating in a simulcast.
RLY	Indicates transceiver is participating in a relay. Only visible when relay mode is active and transceiver is participating in the relay. When not displayed, transceiver is not participating in a relay.
PTX	Indicates transceiver is associated with PTT-X. Displayed in reverse video (as shown) when transceiver is the active transceiver for its PTT group. Can change if transceiver is participating in a simulcast, in which case the simulcast trigger PTT will be displayed.

The Transfer-Button is a soft button that allows the operator to flip-flop the active and standby channels. The Transfer-Button shall only be visible when the active transceiver is operating in standby tuning mode.

The Active-Channel-Field is always visible and displays the channel to which the active transceiver is currently tuned. When operating in Tactical-Mode the Active-Channel-Field shall display the channels number and alphanumeric identifier if tuned to a preset channel. In SCAN mode, this field will display the active channel. When Paused or Delaying in SCAN mode, this field will display the channel where the pause or delay occurs. If tuned to a manual channel, the number shall be displayed as '..M' and the channel's receive frequency shall be displayed in place of the alphanumeric identifier. If the PTT is in effect, the alphanumeric identifier shall change to the transmit frequency of the channel, and if the channel is being encrypted, the encryption key shall be displayed to the right of the transmit frequency. If the channel is for receive only, the alphanumeric identifier field shall display "RX ONLY" during an attempted PTT. When operating in ATC-Mode the Active-Channel-Field shall display the channel's receive frequency.

The Standby-Channel-Field is only visible in standby tuning mode, and displays the channel to which the active transceiver will be tuned when the Transfer-Button is pressed. When operating in Tactical-Mode the Standby-Channel-Field shall display the channels number and alphanumeric identifier if tuned to a preset channel. If tuned to a manual channel, the number shall be displayed as '..M' and the channel's receive frequency shall be displayed in place of the alphanumeric identifier. When operating in ATC-Mode the Standby-Channel-Field shall display the channel's receive frequency.

The Transceiver-Function-Menu is always visible and displays the functions available for the active transceiver. Different types of transceivers have different functions. Only functions applicable to the active transceiver shall be made visible. Functions that are applicable but not available shall be shown but disabled. The following table lists the transceiver functions and their applicability.

Table 3 Transceiver Functions

Function	Description	Applicability	Mode	Availability
CHAN	Allows channel to be selected by channel number	APX, CWT	TAC	Always
DIR	Toggles state of direct/repeat mode	APX, CWT	TAC	Only when channel is duplex
OTAR	Start/Stop performing an OTAR operation	APX, CWT	TAC	Only when encryption is available
KEY	Allows encryption key to be temporarily changed	APX, CWT	TAC	Only when encryption is available
TEST	Temporarily forces un-squelch of transceiver	APX, CWT	TAC, ATC	Always
SCAN	Start/Stop scanning	APX, CWT	TAC	Only when scan groups defined for transceiver
PVT	Toggles encryption on/off	APX, CWT	TAC	Only when encryption is available
EDIT	Allows temporarily overriding some channel parameters, such as sub-audible tones, NAC codes, transmit power levels, etc.	APX, CWT	TAC	Always
QMEM	Displays quick-memory preset channels	APX, CWT	TAC, ATC	Always
VOL	Allows changing transceiver's volume level	APX, CWT	TAC, ATC	Always
ATC	Allows toggling transceiver's operating mode between ATC COM and Tactical.	CWT	TAC, ATC	Always
FREQ	Allows frequency to be selected by number	CWT	ATC	Always
MUTE	Toggles state of mute, allowing audio to be heard or silenced.	APX, CWT	TAC, ATC	Always
25K	Force COM tuning to be in 25 KHz increments.	CWT	ATC	Always
8.3K	Force COM tuning to be in 8.33 KHz increments.	CWT	ATC	Always
SQL	Allows squelch threshold to be changed.	CWT	TAC, ATC	Always

When the transceiver has been turned off, all indicators except the transceiver identifier shall be invisible, and "RADIO OFF" shall be displayed. The Active-Transceiver-View for a transceiver that is off is depicted in Figure 15.



Figure 15 Active Transceiver View – Transceiver Off

6.4.1.5 Common Functions

Some functionality is available regardless of whether a transceiver is operating in Tactical mode or ATC-COM mode, such as volume control. The following sections describe operation that is common to both Tactical and ATC-COM mode.

6.4.1.5.1 Test Function

When the operator presses and holds the TEST Transceiver-Menu button the active transceiver shall be forcibly un-squelched for as long as the button is pressed. When the operator releases the Transceiver-Menu button, the active transceiver shall resume its normal squelch operation.

6.4.1.5.2 Mute Function

When the operator presses the MUTE Transceiver-Menu button the active transceiver shall be muted if it is not already muted, and shall become unmuted if it is currently muted. When a transceiver is muted, no audio from that transceiver shall be audible.

6.4.1.5.3 Volume Adjustment

When the operator turns the volume knob, the volume adjustment dialog shall appear to adjust the volume on the active transceiver. Figure 16 depicts the volume adjustment dialog after the volume knob has been turned. Turning the volume knob clockwise shall increase the volume level, while turning the knob counter clockwise shall decrease the volume level. The current volume level shall be displayed within the dialog. The volume adjustment dialog shall automatically disappear when no knob turning activity has occurred for more than 2 seconds.

When the operator pushes the VOL Transceiver-Menu button the volume adjustment dialog shall appear to adjust the volume on the active transceiver. Touching the volume scale and sliding the pointer to the left shall decrease the volume level, while sliding the pointer to the right shall increase the volume level. The current volume level shall be displayed within the dialog. The volume adjustment dialog shall automatically disappear when no touch pointer activity has occurred for more than 2 seconds.

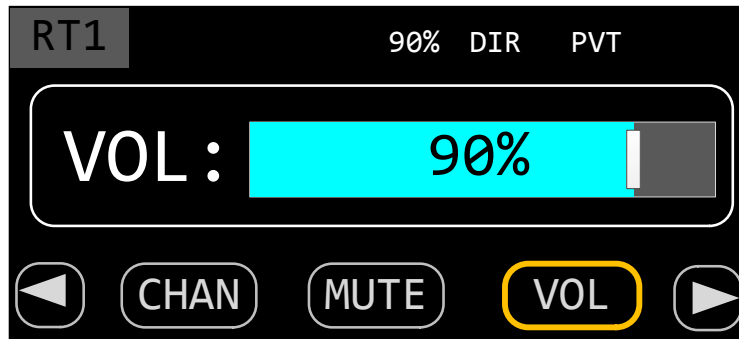


Figure 16 Volume Adjustment Dialog

6.4.1.5.4 Quick Memory (QMEM)

The QMEM feature allows the operator to store/recall frequencies much like presets on a car stereo. When the operator presses the QMEM Transceiver-Menu button, the QMEM selection dialog shall be displayed. The QMEM selection dialog allows the operator to either recall or program a QMEM location. When the operator momentarily presses a QMEM location, the channel programmed into the corresponding (0-9) QMEM location shall be loaded into the active channel, and the previously active channel shall be loaded into the standby channel. If the operator presses and holds a QMEM location (0-9) for 3 or more seconds, the current active channel shall be programmed into the corresponding QMEM location. Should the operator not press any key for more than 4 seconds after pressing the QMEM Transceiver-Menu button, the QMEM operation shall automatically be canceled. The operator shall be able to manually cancel the QMEM operation by pressing the Cancel button. There shall be 10 QMEM locations for Tactical mode, and another 10 QMEM locations for ATC-COM mode. Figure 17 depicts the QMEM selection dialog in Tactical Mode.

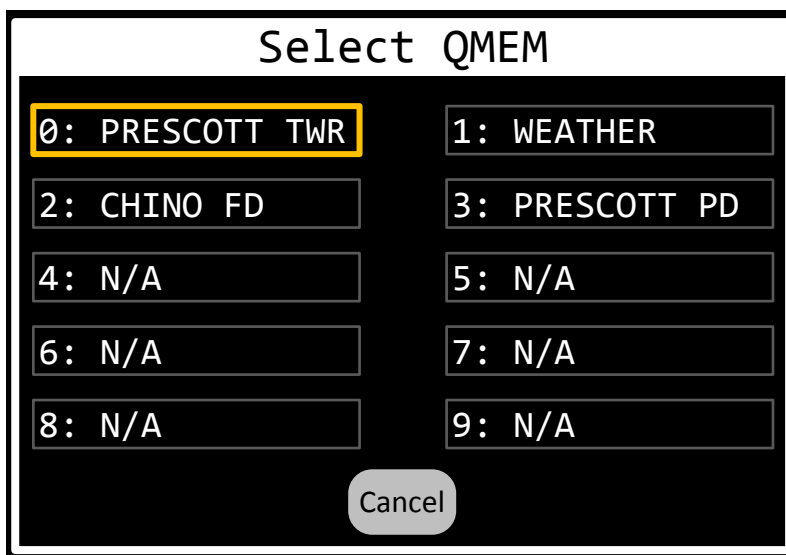


Figure 17 QMEM Selection Dialog

When a transceiver is operating in Tactical mode the QMEM selection dialog shall display the alphanumeric identifier of the preset channel if the QMEM locations has been programmed or “N/A” if the locations is un-programmed. When a transceiver is operating in ATC-COM mode, the receive frequency of the channel shall be displayed for programmed QMEM locations, while “N/A” shall be displayed for un-programmed locations.

The QMEM locations can be touched directly, or selected by rotation the Cursor knob. The selected locations shall be indicated by the focus rectangle, shown in orange in the figure. Pressing the ENTER button shall have the same effect on the focused location as if it were touched directly on the screen, including the press and hold functionality.

6.4.1.5.5 Squelch Threshold Adjustment

When the operator pushes the SQL Transceiver-Menu button the squelch threshold adjustment dialog shall appear to adjust the squelch threshold on the active transceiver. Touching the scale and sliding the pointer to the left shall decrease the level, while sliding the pointer to the right shall increase the level. Rotating the value knob clockwise shall increase the level while rotating the value knob counterclockwise shall decrease the level. The current level shall be displayed within the dialog. The squelch threshold adjustment dialog shall automatically disappear when no touch pointer activity has occurred for more than 2 seconds. Figure 18 depicts the squelch threshold adjustment dialog after the SQL button has been pressed.

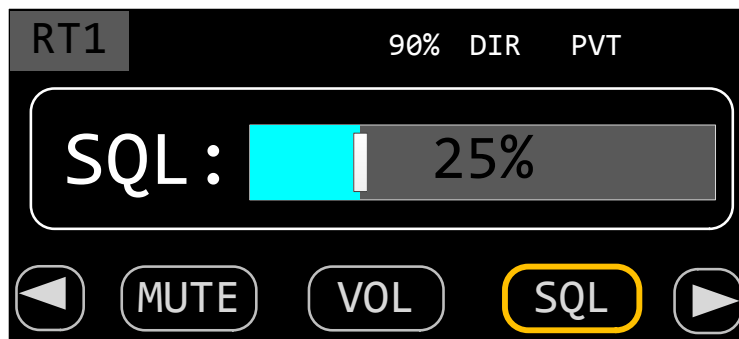


Figure 18 Squelch Threshold Adjustment Dialog

6.4.1.6 Tactical Mode

When a transceiver is operating in Tactical mode it behaves similar too, and has all the functionality of, previous generations of Cobham (Wulfsberg) tactical radios, such as the C-5000/RT-5000 and P-2000. This includes preset channel tuning, P25 functionality, and, via the Manual-Channel, unlimited frequency tuning capability. The following sections describe operation in Tactical mode.

6.4.1.6.1 Changing Channels

When the unit is operating in tactical mode and standby tuning is enabled and the operator presses the Transfer-Button the active and standby channels shall be swapped, and the active transceiver shall be tuned to the new active channel (previously the standby channel). Figure 19 depicts the active transceiver both prior to, and after, pressing the Transfer-Button.

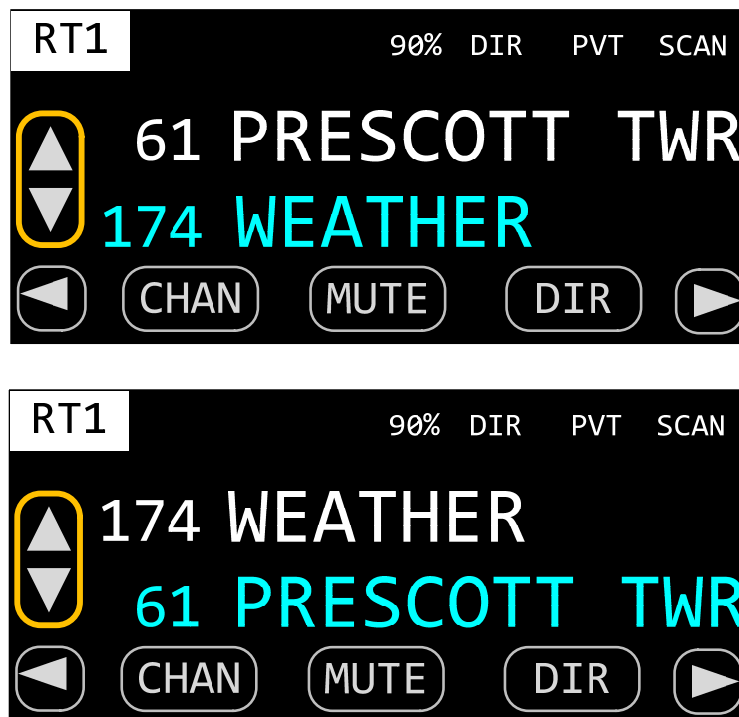


Figure 19 Changing Active Channel by Transfer

When the unit is operating in tactical mode and standby tuning is enabled the operator shall be able to focus the standby channel's Channel-Number field. When the Channel-Number field has the focus, turning the Value knob clockwise shall select the next available channel by number, while turning the knob counterclockwise shall select the previous available channel by number. Figure 20 depicts the standby channel being tuned by number.

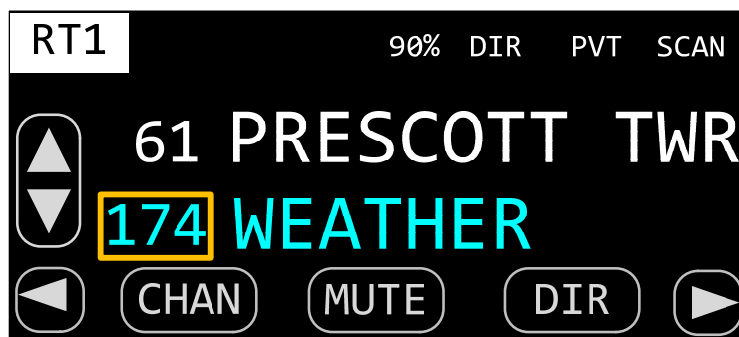


Figure 20 Changing Standby Channel by Number

When the unit is operating in tactical mode and standby tuning is enabled the operator shall be able to focus the standby channel's Channel-Alpha field. When the Channel-Alpha field has the focus, turning the Value knob clockwise shall select the next available channel by alphanumeric identifier, while turning

the knob counterclockwise shall select the previous available channel by alphanumeric identifier. Figure 21 depicts the standby channel being tuned by alphanumeric identifier.



Figure 21 Changing Standby Channel by Alphanumeric Identifier

When the unit is operating in tactical mode and standby tuning is enabled and the operator presses the CHAN Transceiver-Menu button, the Channel-Number-Entry dialog shall appear to change the standby channel on the active transceiver. Figure 91 depicts the Channel-Number-Entry dialog.

If the number entered is a valid channel, it shall be loaded into the active transceiver and the display shall return to the Normal-Operation-Page. If the entered number is invalid, the digits entered shall be cleared and the operator can try again. Entering a channel number of 0 shall load the manual channel for the active transceiver. Pressing the HOME button shall cancel the operation and return to the Normal-Operation-Page.

6.4.1.6.2 Direct/Repeat Mode

When the unit is operating in tactical mode and the active channel is not a simplex channel, and the operator presses the DIR Transceiver-Menu button and the transceiver is in Direct mode, the transceiver shall change to Repeater mode. Conversely, if the transceiver is in Repeater mode, pressing the DIR Transceiver-Menu button shall change the transceiver to Direct mode. If the active channel is a simplex channel, the DIR Transceiver-Menu button shall have no effect as DIR should be displayed at all times

6.4.1.6.3 Encrypted Mode

When the unit is operating in tactical mode and the active channel is capable of encryption, and the operator presses the PVT Transceiver-Menu button and the transceiver is in encrypted mode, the transceiver shall change to non-encrypted mode. Conversely, if the transceiver is in non-encrypted mode, pressing the PVT Transceiver-Menu button shall change the transceiver to encrypted mode. If the active channel (or transceiver itself) is not capable of encryption, the PVT Transceiver-Menu button shall have no effect.

6.4.1.6.4 ATC Mode

When the unit is operating in tactical mode and the operator presses the ATC Transceiver-Menu button, the transceiver shall change to ATC-COM mode. Note ATC-COM functionality is only available on CWT modules. If the active transceiver is an APX, the ATC Transceiver-Menu button should be disabled or invisible.

6.4.1.6.5 OTAR Process

When the operator presses the OTAR Transceiver-Menu button, the OTAR process shall begin. The first step in this process is confirmation. The operator shall be presented with the OTAR start confirmation dialog, depicted in Figure 22. The operator may press the NO button or the HOME key to cancel the operation, or press the YES button to continue the OTAR operation.

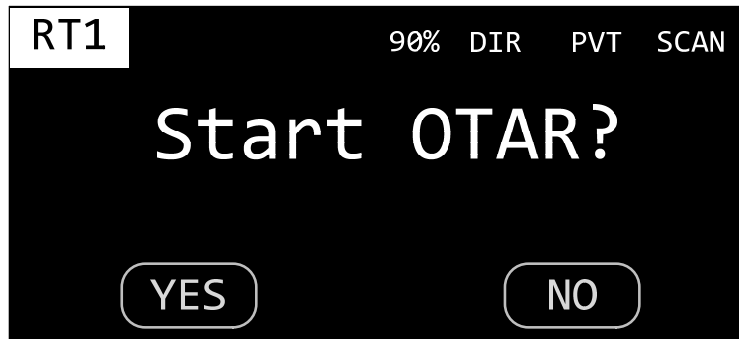


Figure 22 OTAR Confirmation Dialog

Once the operator has confirmed the operation, the active transceiver shall begin the OTAR operation. The display shall give feedback to the operator on the progress of the OTAR operation. At a minimum, "OTAR in progress" and "OTAR completed" or "OTAR failed" status messages shall be displayed. The status messages shall be displayed in the screen area normally used to display the active and standby channel information. Figure 23 depicts a typical OTAR status display.

While the OTAR status is "OTAR in progress" the STOP button shall be enabled. If the operator presses the STOP button the OTAR cancel confirmation dialog shall be displayed, as depicted in Figure 24. This dialog functions identically to the OTAR start confirmation dialog. If the operator chooses to cancel the OTAR, then the OTAR operation shall be aborted and normal operation resumed. If the operator chooses to continue with the OTAR operation, the display shall resume to where it was prior to the STOP button being pressed. While an OTAR is in progress, no transceiver functions shall be available other than to cancel the OTAR in progress.

While the OTAR status is "OTAR completed" or "OTAR failed" the OK button shall be enabled. The operator shall be required to press the OK button to acknowledge the result of the OTAR operation. When the operator presses the OK button the display and available functionality shall return to normal.

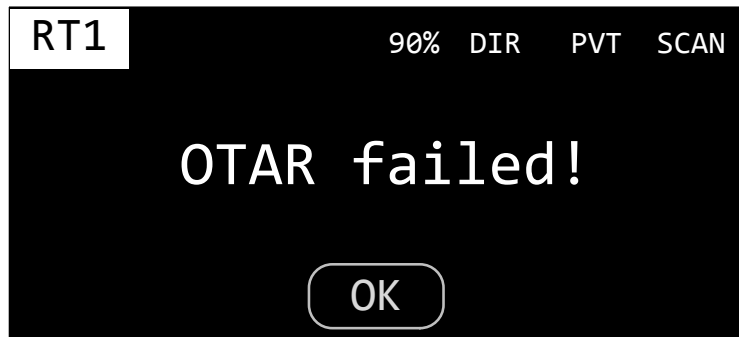
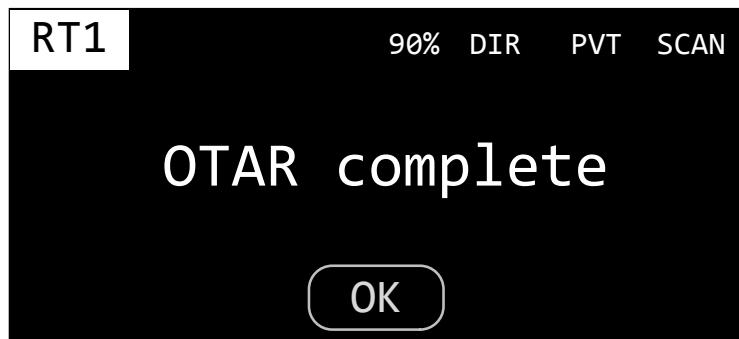
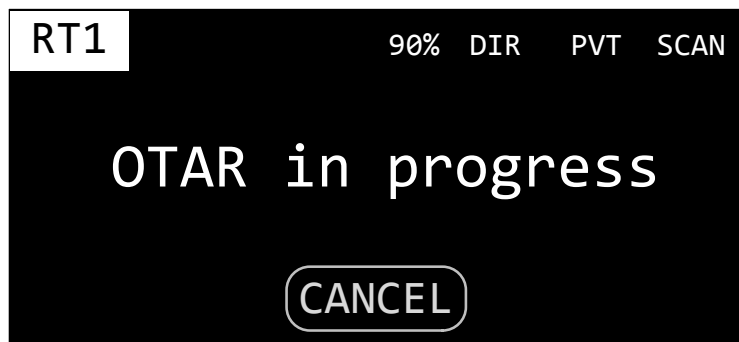


Figure 23 OTAR Status Display

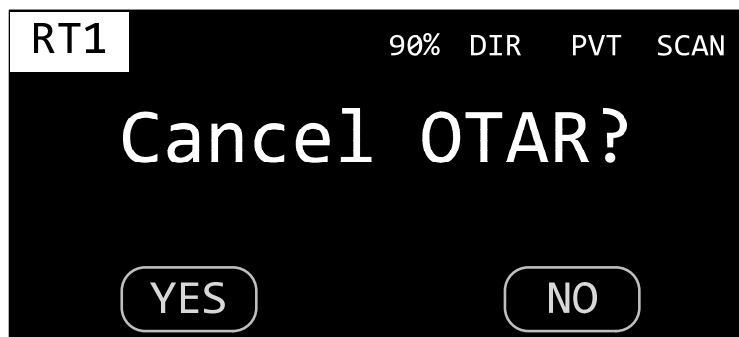


Figure 24 OTAR Cancel Confirmation Dialog

6.4.1.6.6 Encryption Key Selection

When the operator presses the KEY Transceiver-Menu button, the encryption key selection dialog shall appear as depicted in Figure 25. All 16 possible keys shall be displayed, both by number and alphanumeric identifier. In addition, the “PRESET” option shall be displayed, allowing the restoration of the key that was preset for the channel. The operator shall be able to select a key by touching it directly on the screen, or by using the cursor/value knobs. When the value knob is turned, the focus rectangle shall traverse the list, scrolling as necessary. When the cursor knob is turned, the focus rectangle shall move between the list and the Cancel button. Pressing the ENTER button shall select the key with the focus. The operator shall be able to cancel the operation by pressing the Cancel button.

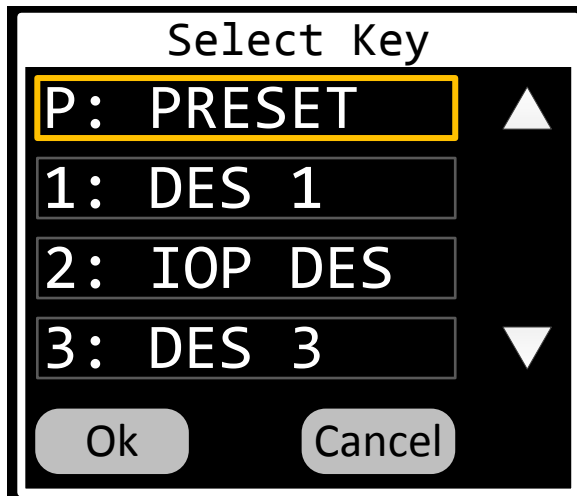


Figure 25 Key Selection Dialog

6.4.1.6.7 Scan Operation

Scan mode is invoked by pressing the SCAN Transceiver-Menu button. Only the active transceiver is affected. If the active transceiver is incapable of scan, the Error-Tone should sound. If the active transceiver is scan capable but there are no scan groups programmed for it, the No-Scan-Groups dialog shall display. If the active transceiver is scan capable and there are one or more scan groups programmed for it, the Select-Scan-Group dialog shall display.

The No-Scan-Groups dialog is displayed when an attempt is made to start scan mode on a transceiver that has no scan groups associated with it. The page is depicted in Figure 26. The OK soft button or the HOME button shall be used to dismiss the dialog. All other buttons and knobs are ignored.

The Select-Scan-Group dialog is displayed when scan mode is started on a transceiver that has one or more associated scan groups. This page, depicted in Figure 27, shall allow the operator to select one of the transceiver's scan groups for scanning.

The first time the Select-Scan-Group dialog is displayed after a power cycle, the first (lowest numbered) scan group assigned to the active transceiver shall be focused. For subsequent invocations of the page, the most recently selected scan group for the active transceiver shall be focused. The last selected scan group need not be retained when power is lost.

All available scan groups for the transceiver shall be displayed, both by number and alphanumeric identifier. The operator shall be able to select a group by touching it directly on the screen, or by using the cursor/value knobs. When the value knob is turned, the focus rectangle shall traverse the list, scrolling as necessary. When the cursor knob is turned, the focus rectangle shall move between the list and the Edit, Scan, and Cancel buttons.

Pressing the Cancel soft-button or the HOME button shall return the system to the Home page in normal operating mode. Pressing the Scan soft-button shall return the system to the Home page with the active transceiver in scan mode. Pressing the Edit soft-button shall invoke the Scan-Group-Edit dialog.

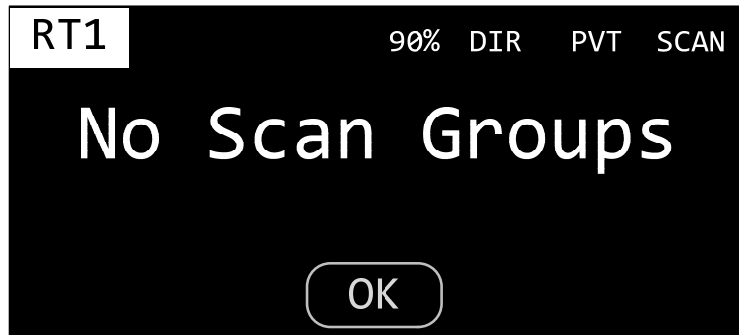


Figure 26 No Scan Groups Warning Dialog

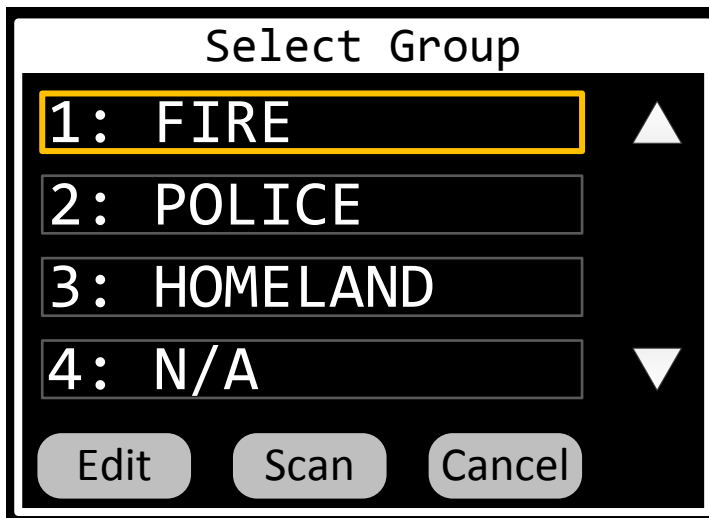


Figure 27 Scan Group Selection Dialog

The Scan-Group-Edit dialog, depicted in Figure 28, allows the operator to temporarily remove (or restore) a channel from the group, providing a nuisance delete feature. This dialog also allows the operator to temporarily change the priority 2 channel assignment for the group. Any changes made on this page shall be lost after a power cycle.

All channels in the scan group shall be displayed, both by number and alphanumeric identifier. The operator shall be able to select whether a channel is included in the scan via a toggle button or checkbox, or equivalent. This is depicted as a square in the figure, where green means the channel will be scanned, white means the channel will be excluded. The operator shall also be able to select which channel, if any, is the priority-2 channel. This should be done via a set of radio buttons, or equivalent. This is depicted as a circle in the figure. Only one channel can be the priority-2 channel, but the priority-2 channel is not required.

Pressing the Back soft-button or the HOME button shall return the system to the Scan-Group-Selection dialog. Pressing the Scan soft-button shall return the system to the Home page with the active transceiver in scan mode.

TBD – How to navigate this by cursor/value? Note that selecting 1 of the 10 channels for priority channel is inconsistent with the scan-group FPP pages.

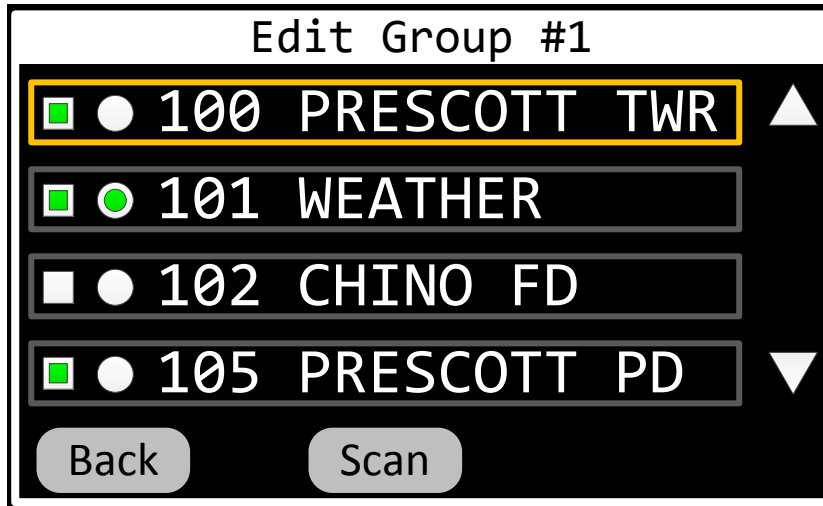


Figure 28 Scan Group Edit Dialog

When the operator presses the “Scan” button on the Select-Scan-Group page, the system will return to the Home page with the active transceiver scanning the selected group. The active channel of the active transceiver shall be automatically added to the selected scan group as the priority-1 channel. The system shall indicate it is scanning by displaying an the SCAN indicator.

If the system detects a signal while scanning, the display shall indicate the reception by displaying the SCAN indicator in reverse video. Furthermore, the channel being received shall be displayed temporarily in place of the active channel.

The display shall revert to showing the active channel when the signal has been lost from the scan channel for more than a prescribed amount of time. This time delay, called scan-delay, shall be programmable with a default of 3 seconds.

If the operator while the system is scanning, and the transceiver being scanned is the active transceiver, and one of the scan channels is currently receiving, the scan channel being received shall be temporarily removed from the scan group. This is a convenience function that is equivalent to changing the IN/OUT status of the channel via Scan-Group-Edit page. The channel can be added back into the group using the Scan-Group-Edit page.

If the operator presses PTT while the system is scanning, and the transceiver being scanned is the active transceiver, and no scan channel is currently receiving, the system shall stop scanning, and then proceed to transmit on the active channel. The system shall automatically resume scanning after 3 seconds of inactivity on the active channel.

If the operator presses PTT while the system is scanning, and the transceiver being scanned is the active transceiver, and one of the scan channels is currently receiving, the system shall stop scanning, and then proceed to transmit on the currently active scan channel. The system shall automatically resume scanning after 3 seconds of inactivity on the active scan channel. This provides a talkback feature.

If the operator presses PTT while a non-scanning transceiver is active, the transceiver being scanned shall remain scanning.

If the operator changes channel on a scanning transceiver, the newly tuned channel shall become the active channel and the system shall continue scanning. If the operator changes channel on a non-scanning transceiver, the transceiver being scanned shall remain scanning.

If the operator presses the SCAN Transceiver-Menu button, the system shall stop scanning and display the Select-Scan-Group page. This allows the operator to quickly select another group to scan, edit the selected scan group, or exit scan mode completely.

6.4.1.6.8 View Channel Properties Page

The View-Channel-Properties page shall allow the user to view all known properties of any channel known to the transceiver. The transceiver whose channels are being displayed shall be identified. Channel properties expected to be displayed are detailed in Table 4. Figure 29 depicts the desired layout for this page.

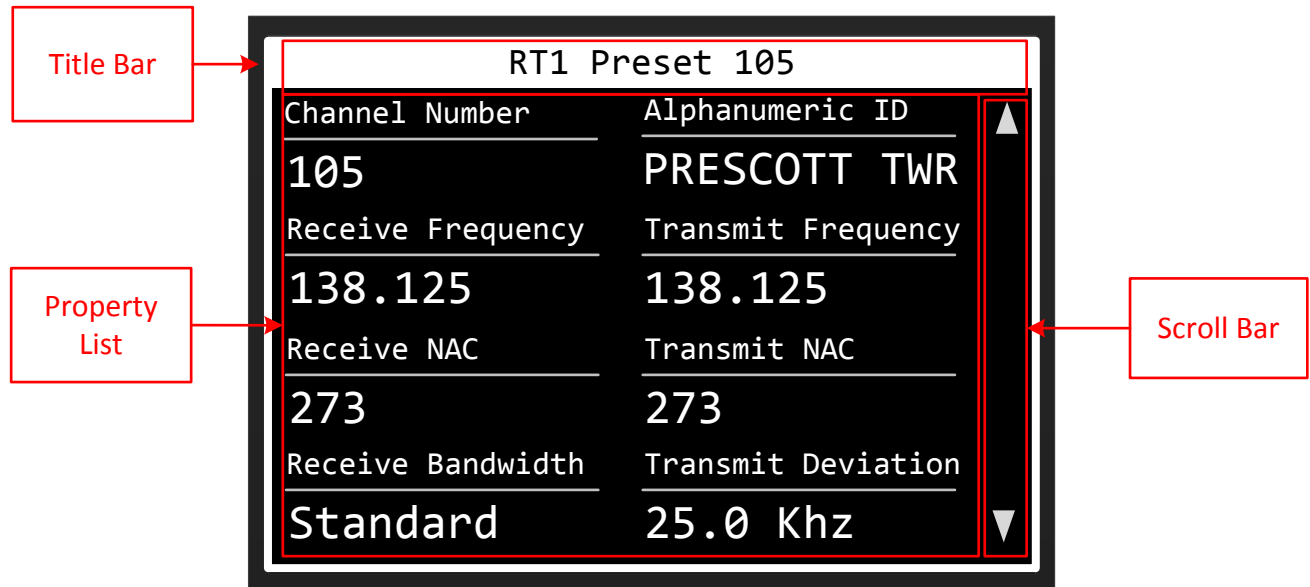


Figure 29 View Channel Properties Page

RT1 Preset 105	
Channel Number	Alphanumeric ID ▲
105	PRESCOTT TWR
Receive Frequency	Transmit Frequency
138.125	138.125
Receive NAC	Transmit NAC
293	293
Receive Bandwidth	Transmit Deviation
Standard	2.5 Khz ▼

Figure 30 View Channel Properties Page Example 1

RT1 Preset 105	
Receive Modulation	Transmit Power ▲
P25	High
Receive Phase	Transmit Phase
0 Degrees	0 Degrees
Talk Group	Encryption Key
65535	DES 5

Figure 31 View Channel Properties Page Example 2

Table 4 Channel Properties

Property	Values	Applicability	Editable	Availability
Channel Number	Integer	APX, CWT	Never	Always
Alphanumeric Identifier	String	APX, CWT	Never	Always
Receive Frequency	Real Number	APX, CWT	Manual	Always
Transmit Frequency	Real Number	APX, CWT	Manual	Always
Receive Tone	See Appendix A	APX, CWT	Always	Conventional FM channel
Transmit Tone	See Appendix A	APX, CWT	Always	Conventional FM channel
Receive Network Access Code	3-digit hexadecimal	APX, CWT	Always	P25 channel
Transmit Network Access Code	3-digit hexadecimal	APX, CWT	Always	P25 channel
Receive Modulation Type	FM, AM, P25, Trunked	APX, CWT	Manual	Always
Receive Bandwidth	Narrow, Standard, Wide	APX, CWT	Manual	Always
Transmit Power	High, Low	APX, CWT	Always	Always
Encryption Key	Integer	APX, CWT	Manual	P25 channel
Zone	Integer	APX	Never	Always
Zone Channel	Integer	APX	Never	Always
Talk Group	Integer	APX, CWT	Always	P25 channel
Transmit Deviation	2.5K, 4.0K, 5.0K, 5.6K	APX, CWT	Manual	Always
Transmit Phase	0, 180	CWT	Manual	Always
Receive Phase	0, 180	CWT	Manual	Always
OTAR Capable	True, False	APX, CWT	Manual	P25 channel

When the receive frequency is changed, the transmit frequency shall be set equal to it, easing normal simplex channel entry. Entering a receive frequency between 108 and 137 MHz or between 225 and 400 MHz shall automatically change the modulation type to AM, unless the modulation type is P25 or TRK. Entering any other receive frequency shall force the modulation to FM, unless the modulation type is P25 or TRK. Frequency entry shall be accomplished via the Frequency-Entry dialog depicted in Figure 93.

CTCSS tones shall be displayed using their 2-digit EIA code. DCS tones shall be displayed as a 3-digit number, padded with a leading zero if required. The word “None” shall indicate no tone is in use. The Tone fields shall only be visible when the channel type is “FM”. Tone entry shall be accomplished via the Tone-Entry dialog depicted in Figure 94.

Encryption keys shall be displayed using their alphanumeric identifier. Encryption key entry shall be accomplished via the Key-Selection dialog depicted in Figure 25.

6.4.1.7 ATC COM Mode

When a transceiver is operating in ATC-COM mode it behaves similar too, and has all the functionality of, previous generations of Cobham (Wulfsberg) COM radios, such as the CVC-152/CVC-151 and CD-5000/RT-5000. This includes frequency tuning limited to the AM COM bands. The following sections describe operation in ATC-COM mode.

6.4.1.7.1 Changing Frequencies

When the unit is operating in ATC-COM mode and standby tuning is enabled and the operator presses the Transfer-Button the active and standby frequencies shall be swapped, and the active transceiver

shall be tuned to the new active frequency (previously the standby frequency). Figure 32 depicts the active transceiver both prior to, and after, pressing the Transfer-Button.

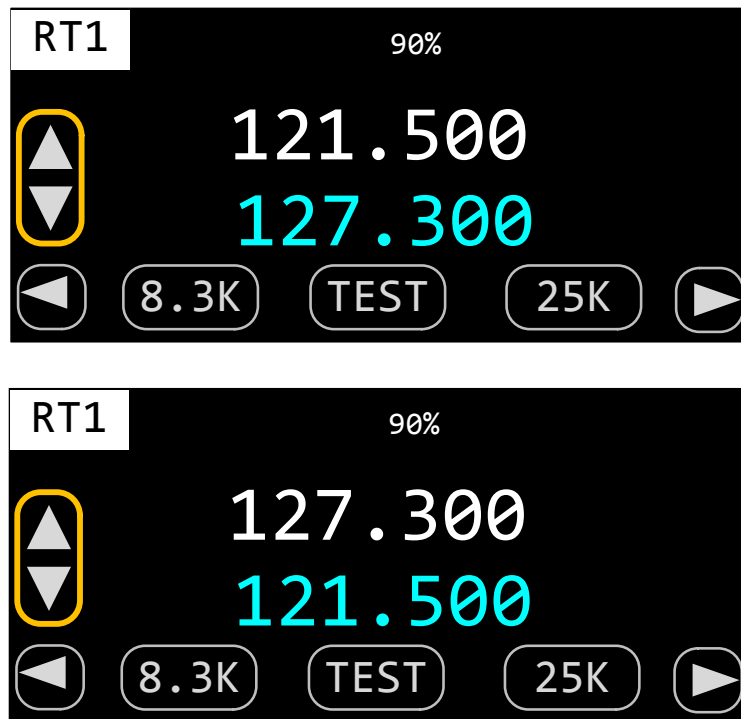


Figure 32 Changing Active Frequency by Transfer

When the unit is operating in ATC-COM mode and standby tuning is enabled the operator shall be able to focus the standby frequency's megahertz field. When the megahertz field has the focus, turning the Value knob clockwise shall increment the frequency by 1 MHz, while turning the knob counterclockwise shall decrement the frequency by 1 MHz. Figure 33 depicts the standby frequency being tuned by MHz.

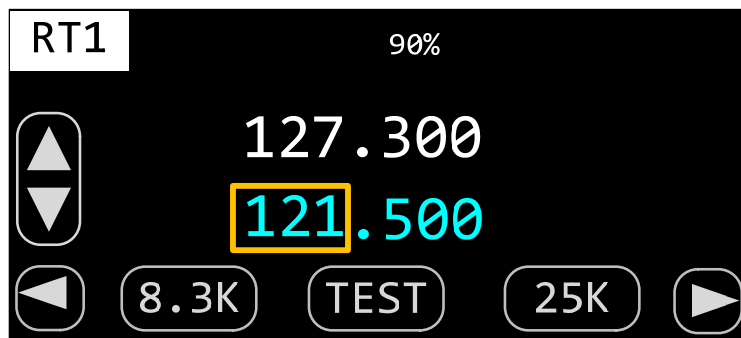


Figure 33 Changing Standby Frequency by MHz

When the unit is operating in ATC-COM mode and standby tuning is enabled the operator shall be able to focus the standby frequency's kilohertz field. When the kilohertz field has the focus and the transceiver is in 25K mode, turning the Value knob clockwise shall increment the frequency by 25.0 KHz, while turning the knob counterclockwise shall decrement the frequency by 25.0 KHz. When the kilohertz field has the focus and the transceiver is in 8.3K mode, turning the Value knob clockwise shall increment the frequency by 8.33 KHz, while turning the knob counterclockwise shall decrement the frequency by 8.33 KHz. Note that the displayed frequency and actual frequency are not the same when in 8.3K mode. Refer to Appendix B for more information. Figure 34 depicts the standby frequency being tuned by KHz.

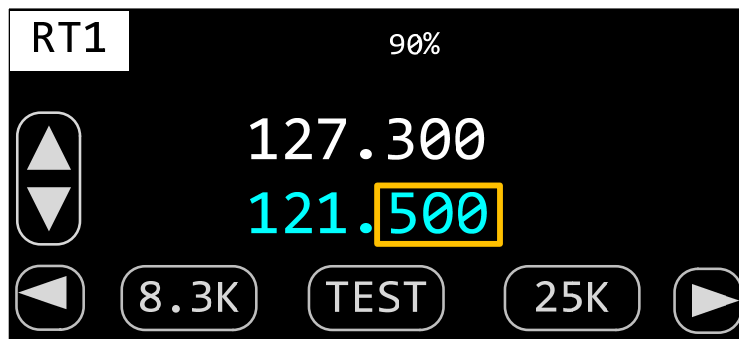


Figure 34 Changing Standby Frequency by KHz

When the unit is operating in ATC-COM mode and standby tuning is enabled and the operator presses the FREQ Transceiver-Menu button, the Frequency-Entry dialog shall appear to change the standby frequency on the active transceiver. Figure 93 depicts the channel frequency selection dialog.

If the frequency entered is valid, it shall be loaded into the active transceiver and the display shall return to the Normal-Operation-Page. If the entered frequency is invalid, the digits entered shall be cleared and the operator can try again. Pressing the HOME button shall cancel the operation and return to the Normal-Operation-Page.

6.4.1.7.2 ATC Mode

When the unit is operating in ATC-COM mode and the operator presses the ATC Transceiver-Menu button, the transceiver shall change to Tactical mode.

6.4.2 SYSTEM FUNCTIONS

The following sections describe system functionality, i.e. functionality that is not transceiver specific. This includes system configuration, brightness control, and advanced modes of operation, such as relat or simulcast.

6.4.2.1 Brightness Control

When the operator turns the brightness knob, the Brightness-Control dialog shall appear. This dialog shall allow the operator to adjust the display brightness level from 0% to 100%. These levels shall be user configurable via lighting curves. The Brightness-Control dialog is depicted in Figure 35.

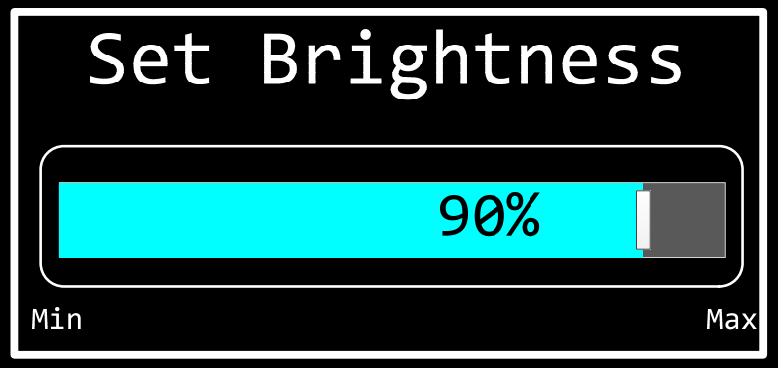


Figure 35 Brightness Control Dialog

When the brightness knob is turned clockwise, the display brightness shall increase in intensity. When the brightness knob is turned counterclockwise, the display brightness shall decrease in intensity. The dialog shall disappear when no brightness knob activity has been present for more than 2 seconds.

6.4.2.2 Mode Selection Menu

The Mode-Selection-Menu dialog shall appear anytime the MENU button is pressed while the Home page is active. This dialog shall allow the operator to select one of the PMR's alternate modes of operation, which are Relay, Simulcast, Message, Information, and Configuration. The Mode-Selection-Menu dialog is depicted in Figure 36 and Table 5 contains the Event/Action table.

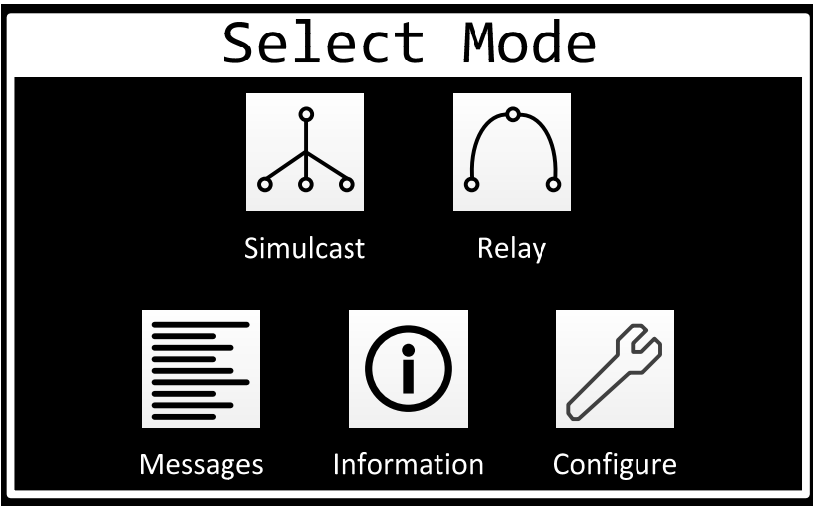


Figure 36 Mode-Selection-Menu Dialog

Table 5 Mode-Selection-Menu Dialog Actions

Event	Action
Simulcast button pressed	Invoke Simulcast-Configuration dialog.
Relay button pressed	Invoke Relay-Configuration dialog.
Messages button pressed	Invoke Messages dialog.

Information button pressed	Invoke Information page
Configure button pressed	- When option for password protection of programming mode is enabled, invoke Programming-Password-Entry dialog. - Otherwise, invoke Programming-Mode-Selection dialog.
HOME key pressed	Return to Home page.

6.4.2.3 Relay Mode

Relay Mode allows the PMR transceiver system to function as a cross-band repeater. All five transceivers can participate in a relay. If a Relay link is established between two transceivers, a message received on one transceiver is automatically retransmitted out the other. If a link is established between three or more transceivers, a message received on one transceiver is automatically retransmitted out all the others.

When an operator indicates their desire to enter Relay-Mode, they shall first be presented the Relay-Configuration dialog. This dialog shall allow the operator to select which transceivers will participate in the relay. Only transceivers installed in the system shall be selectable. The “Terminate” button shall only be visible if a relay is currently active. The Relay-Configuration dialog is depicted in Figure 37. Table 6 contains the Event/Action table.

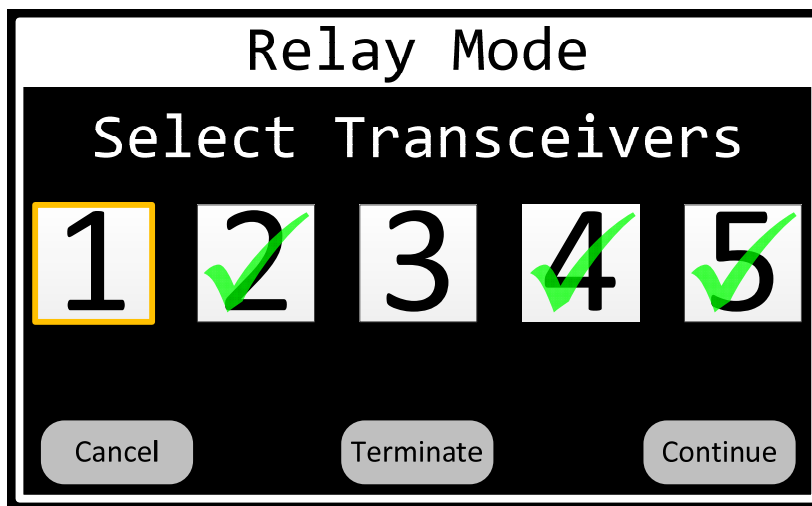


Figure 37 Relay-Configuration Dialog

Table 6 Relay-Configuration Dialog Actions

Event	Action
RT1 button pressed	Toggle transceiver 1's inclusion in the relay.
RT2 button pressed	Toggle transceiver 2's inclusion in the relay.
RT3 button pressed	Toggle transceiver 3's inclusion in the relay.
RT4 button pressed	Toggle transceiver 4's inclusion in the relay.
RT5 button pressed	Toggle transceiver 5's inclusion in the relay.
Cancel button pressed	Return to Home page.
Terminate button pressed	Return to Home page with Relay-Mode inactive.
Continue button pressed	Return to Home page with Relay-Mode active.
HOME key pressed	Return to Home page.

When Relay-Mode is active, transceivers participating in the relay shall display the RLY indicator in both their Dashboard-View and Active-Transceiver-View. The Active-Transceiver-View for a transceiver in Relay-Mode is depicted in Figure 38. This figure illustrates a relay between RT2, RT4, and RT5. Note that RT4 is receiving and the received message is being retransmitted on RT2 and RT5.

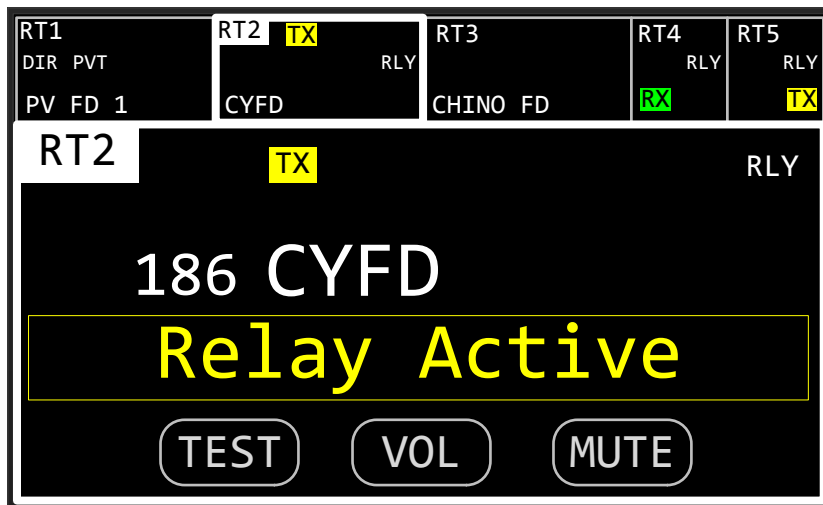


Figure 38 Relay-Mode Page

Once a relay is established, only the subset of transceiver functionality described in Table 7 shall be available in the Active-Transceiver-View of a transceiver participating in the relay. Transceivers not participating in the relay shall continue to operate normally.

Channel changes shall be disabled for a transceiver in Relay-Mode, therefore, the flip-flop button shall be hidden and the channel number and channel alpha fields shall not be focusable. The standby-channel shall be hidden and “Relay Active” shall be displayed in its place.

Table 7 Transceiver Functions in Relay-Mode

Function	Description	Applicability	Availability in Relay
TEST	Temporarily forces un-squelch of transceiver	APX, CWT	Always
VOL	Allows changing transceiver's volume level	APX, CWT	Always
MUTE	Toggles state of mute, allowing audio to be heard or silenced.	APX, CWT	Always

Exiting Relay-Mode can be achieved by invoking the Relay-Configuration dialog and pressing the “Terminate” button.

6.4.2.4 Simulcast Mode

Simulcast Mode allows the operator to simultaneously transmit on multiple transceivers within the PMR whenever the specified PTT is asserted. Any of the five PTT discrete inputs can be used as the simulcast trigger, and all five transceivers can participate in the simulcast. For example, if a Simulcast is established for transceiver-1 and transceiver-2 using PTT-1, and the operator keys up using PTT-1, the operator's transmission will be sent out both transceiver-1 and transceiver-2.

When an operator indicates their desire to enter Simulcast-Mode, they shall first be presented the Simulcast-Configuration dialog. This dialog shall allow the operator to select which PTTs and transceivers will participate in the simulcast. Only transceivers installed in the system shall be selectable. Only PTTs wired into the system shall be selectable. Only a single PTT shall be selected at any given time, i.e. selecting a PTT shall deselect any previously selected PTT. The “Terminate” button shall only be visible if a simulcast is currently active. The Simulcast-Configuration dialog is depicted in Figure 39. Table 8 contains the Event/Action table.

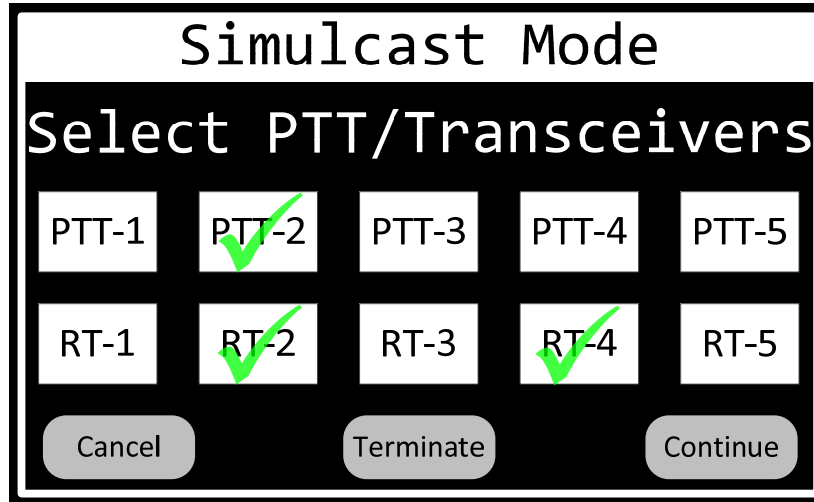


Figure 39 Simulcast-Configuration Dialog

Table 8 Simulcast-Configuration Dialog Actions

Event	Action
PTT-1 button pressed	Select PTT 1 as trigger for the simulcast.
PTT-2 button pressed	Select PTT 2 as trigger for the simulcast.
PTT-3 button pressed	Select PTT 3 as trigger for the simulcast.
PTT-4 button pressed	Select PTT 4 as trigger for the simulcast.
PTT-5 button pressed	Select PTT 5 as trigger for the simulcast.
RT-1 button pressed	Toggle transceiver 1's inclusion in the simulcast.
RT-2 button pressed	Toggle transceiver 2's inclusion in the simulcast.
RT-3 button pressed	Toggle transceiver 3's inclusion in the simulcast.
RT-4 button pressed	Toggle transceiver 4's inclusion in the simulcast.
RT-5 button pressed	Toggle transceiver 5's inclusion in the simulcast.
Cancel button pressed	Return to Home page.
Terminate button pressed	Return to Home page with Simulcast-Mode inactive.
Continue button pressed	Return to Home page with Simulcast-Mode active.
HOME key pressed	Return to Home page.

When Simulcast-Mode is active, transceivers participating in the simulcast shall display the SIM indicator in both their Dashboard-View and Active-Transceiver-View. The Active-Transceiver-View for a transceiver in Simulcast-Mode is depicted in Figure 40. This figure illustrates a simulcast between RT2, and RT4 using PTT2 as the trigger. Note that the operator has keyed up and both RT2 and RT4 are transmitting.

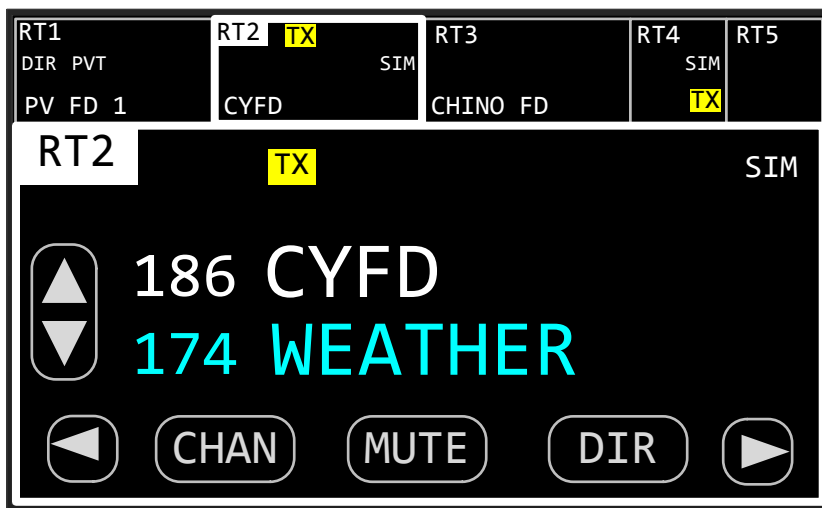


Figure 40 Simulcast-Mode Page

6.4.2.5 Message Page

The Message page shall allow the operator to manage notification messages for the system. The MSG indicator shall only be visible when one or more unread notification messages exist within the system. When the Message page is invoked and no messages are available, the No-Message page shall be displayed. This page is depicted in Figure 41. Pressing the Home button shall return to the previous page.



Figure 41 No Message Page

When the Message page is invoked and messages are available, the Message-List page shall be displayed. This page is depicted in Figure 42. Messages in the list shall be selectable by directly touching them or by using the cursor/value controls. Touching or pressing ENTER on a selected

message shall invoke the Message-View page with the selected message displayed. Pressing the HOME button shall return to the previous page.

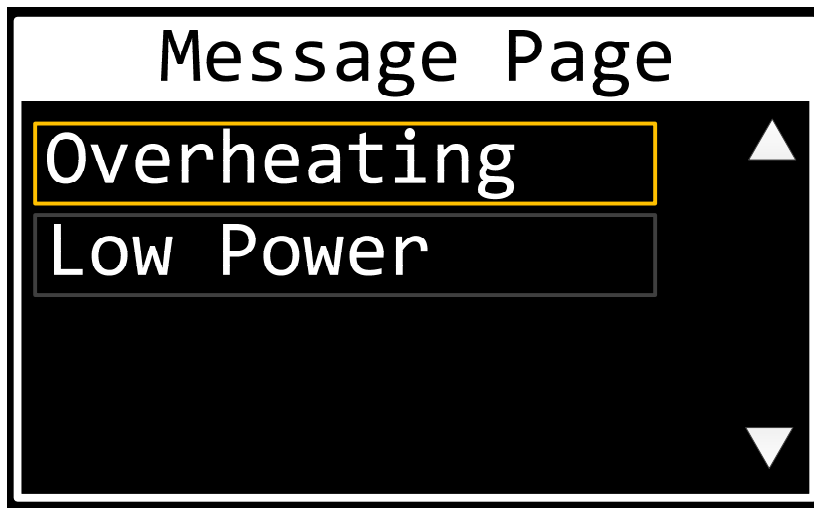


Figure 42 Message List Page

The Message-View page, depicted in Figure 43, shall allow the operator to read the details of a notification message. The message title shall be displayed at the top of the page, and the message text shall be displayed in the Message-Text field. The cursor knob shall allow the selection of the Message-Text field and the Back and Erase buttons. Pressing the HOME button, or ENTER while the Back button is selected, shall return to the previous page. Pressing ENTER while the Erase button is selected shall erase the message from the list and return to the previous page. If the message contains more text than can be seen at once in the Message-Text field, pressing the up/down arrows or turning the value knob while the Message-Text field is selected shall scroll the text.

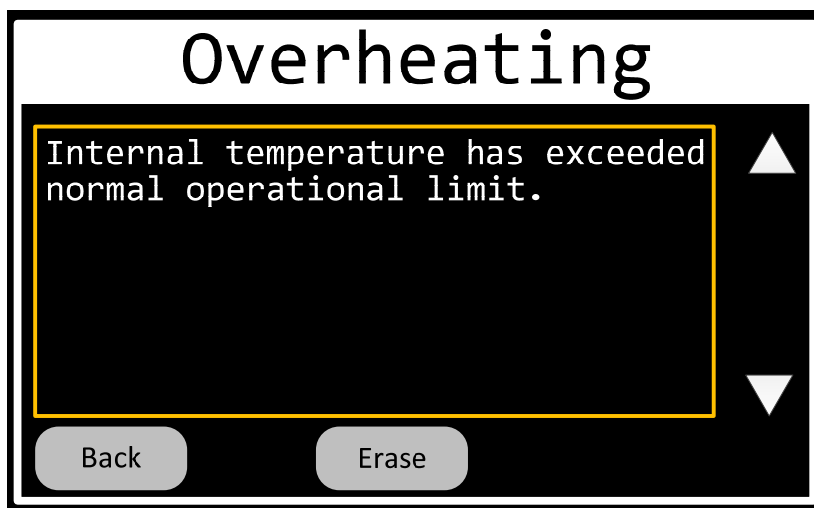


Figure 43 Message View Page

6.4.2.6 Information Page

The Information page shall display summary information for the system. This page is depicted in Figure 44. Pressing the Home button shall return to the previous page.

System Information	
Part Number	NVG
400-0ZZZZZ-ZZ	Yes
Software	Firmware
320-3XXXXX-02	320-3YYYYY-01
Temperature	HOBBS
60.0 C	120.2 Hrs
Display Lighting	Panel Lighting
28V DC	28V DC

Figure 44 Information Page

6.4.2.7 Programming Mode Selection

The Programming-Mode-Selection dialog shall allow the operator to select one of the PMR's programming modes, which are Preset Channels, Scan Groups, Encryption Keys, and Transceiver Configuration. The Programming-Mode-Selection dialog is depicted in Figure 45. Table 9 contains the Event/Action table for this page. The modes shall be selectable by touch or by cursor/value.

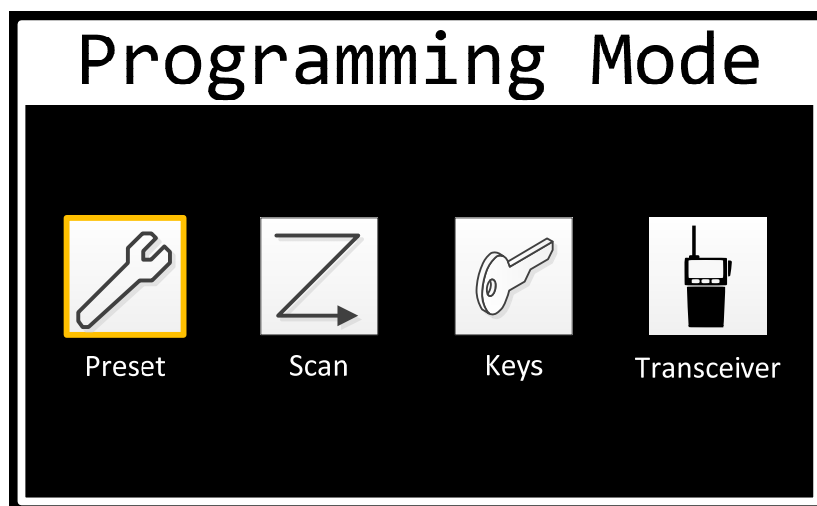


Figure 45 Programming-Mode-Selection Dialog

Table 9 Programming-Mode-Selection Dialog Actions

Event	Action
Preset button pressed	Invoke Preset-Channel-Function dialog.
Scan button pressed	Invoke Scan-Group-Function dialog.
Key button pressed	Invoke Encryption-Key-Function dialog.
Transceiver button pressed	Invoke Configure-Transceiver pages.
HOME key pressed	Return to Home page.

The Programming-Mode-Selection dialog shall be optionally password protected. If the system option for password protection of programming mode is enabled, the Programming-Password-Entry dialog shall appear prior to displaying the Programming-Mode-Selection dialog. If the operator enters the correct password, the Programming-Mode-Selection dialog shall be displayed. If the operator is unable to enter the correct password, the request to display the Programming-Mode-Selection dialog shall be rejected. The Programming-Password-Entry dialog is depicted in Figure 46.

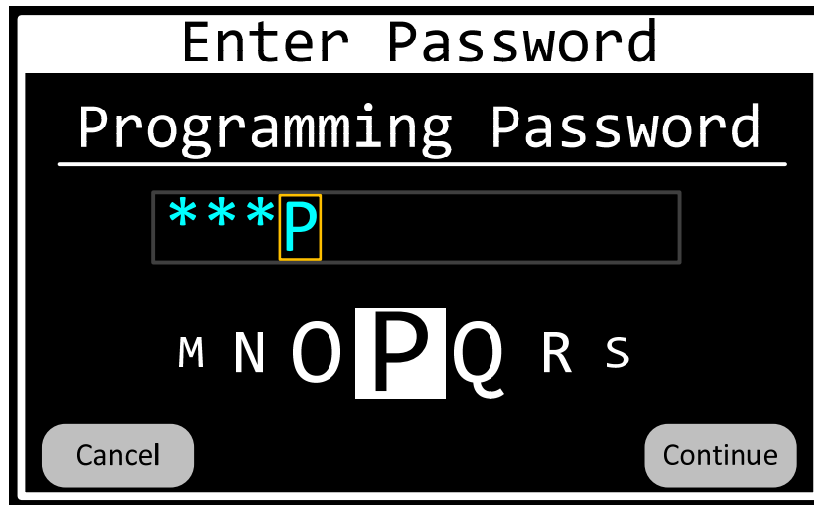


Figure 46 Programming-Password-Entry Dialog

The password shall be limited to 12 characters maximum and shall be comprised of the standard ASCII characters 33 thru 126 (no spaces allowed). After a character is entered it shall be displayed as an asterisk ('*'). If the operator enters the correct password, the Programming-Mode-Selection dialog shall be displayed. If the operator enters an incorrect password, the field shall be cleared and the operator may try again. The system shall provide a hard-coded password to grant back-door access to Service & Support personal troubleshooting in the field.

6.4.2.8 Preset Channel Programming

The Preset-Channel-Function dialog shall allow the operator to add, modify, or delete a preset channel. The page is depicted in Figure 47 and the page's Action/Event table is contained in Table 10.

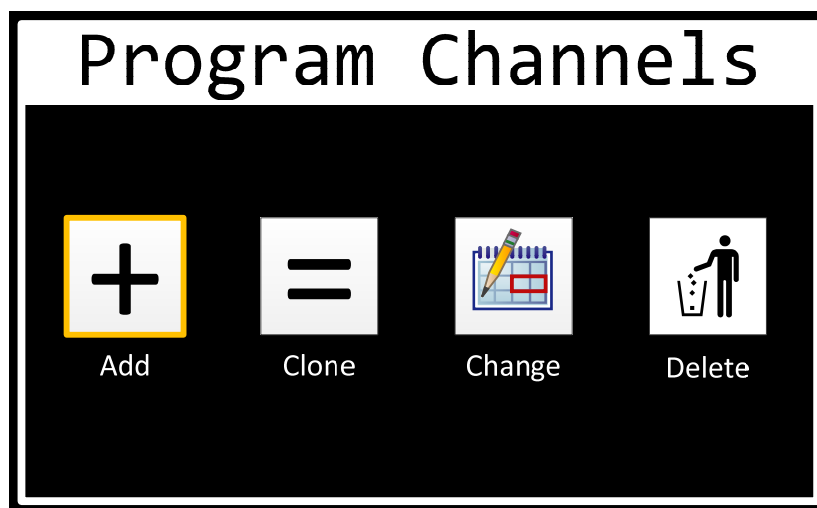


Figure 47 Preset-Channel-Function Dialog

Table 10 Preset-Channel-Function Dialog Actions

Event	Action
Add button pressed	Invoke Preset-Channel-Add dialog.
Clone button pressed	Invoke Preset-Channel-Clone dialog.
Change button pressed	Invoke Preset-Channel-Change dialog.
Delete button pressed	Invoke Preset-Channel-Delete dialog.
HOME key pressed	Return to Home page.

6.4.2.8.1 Add Preset Channel

The Preset-Channel-Add pages shall allow the operator to add a new channel to a transceiver's channel list and configure the newly added channel's properties. These pages utilize the "Wizard" paradigm where each channel property is configured on a separate page. This is useful for preset channels because the properties have dependencies. For example, an AM channel should not allow for configuring sub-audible tones since they are not used in AM. Another example, network access codes should not be available for non-P25 channels. The "Wizard" paradigm ensures only applicable properties are displayed to the operator for configuration.

The first page in the sequence shall be the Preset-Channel-Transceiver page. This page shall allow the operator to specify the transceiver for which the channel will be added. Only transceivers installed in the system shall be selectable. At this time, Motorola does not allow channels to be added to a transceiver by any means other than their CPS software. Therefore, APX transceivers shall be disabled or hidden on this page. The page is depicted in Figure 48 and the page's Action/Event table is contained in Table 11.

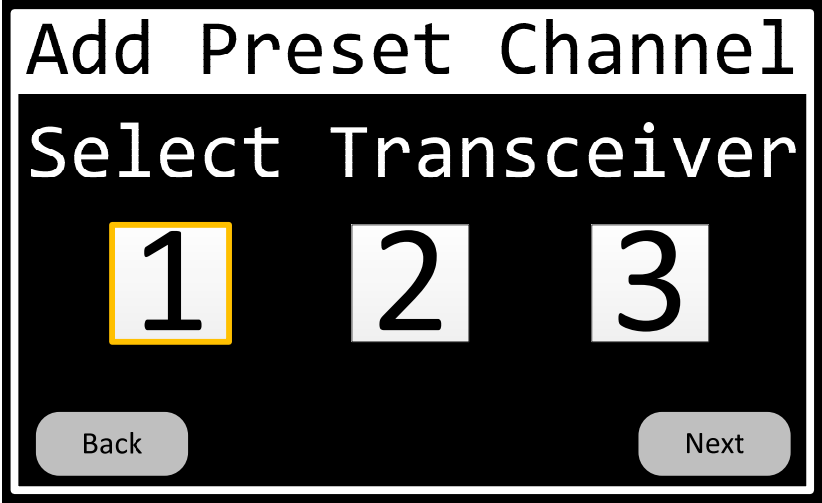


Figure 48 Preset-Channel-Transceiver Page

Table 11 Preset-Channel-Transceiver Page Actions

Event	Action
RT1 button pressed	Select transceiver 1 and invoke Preset-Channel-Number page.
RT2 button pressed	Select transceiver 2 and invoke Preset-Channel-Number page.
RT3 button pressed	Select transceiver 3 and invoke Preset-Channel-Number page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Number page shall allow the operator to select the channel to be added. Only channels that are not programmed shall be selectable. The page is depicted in Figure 48 and the page's Action/Event table is contained in Table 11.

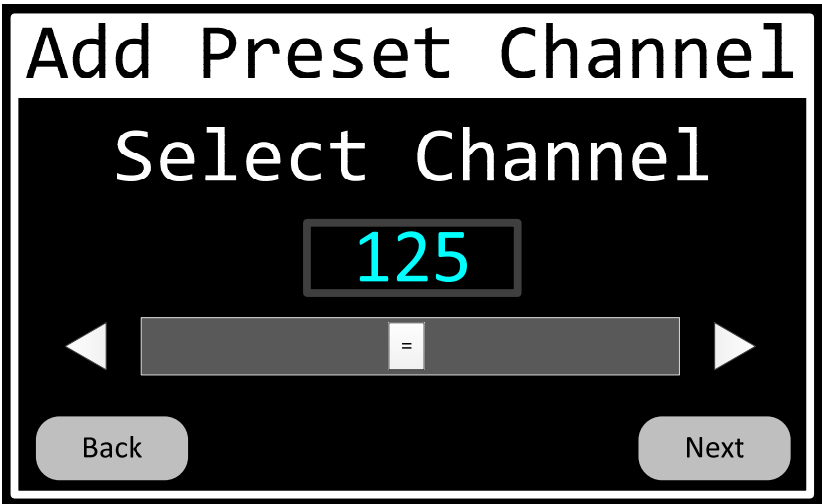


Figure 49 Preset-Channel-Number Page

Table 12 Preset-Channel-Number Page Actions

Event	Action
Value-Up button pressed	Select next (larger number) un-programmed channel.
Value-Down button pressed	Select previous (smaller number) un-programmed channel.
Right slider button pressed	Select next (larger number) un-programmed channel.
Left slider button pressed	Select previous (smaller number) un-programmed channel.
Slider position moved	Select nearest un-programmed channel to relative position of slider.
BACK button pressed	Invoke Preset-Channel-Transceiver page.
NEXT button pressed	Invoke Preset-Channel-Alpha page for selected channel.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Alpha page shall allow the operator to input the alphanumeric identifier of the channel. This value shall be a text string with a maximum length of 12 characters. The allowable character set shall be the standard ASCII characters 32 thru 126. The page is depicted in Figure 50 and the page's Action/Event table is contained in Table 13.

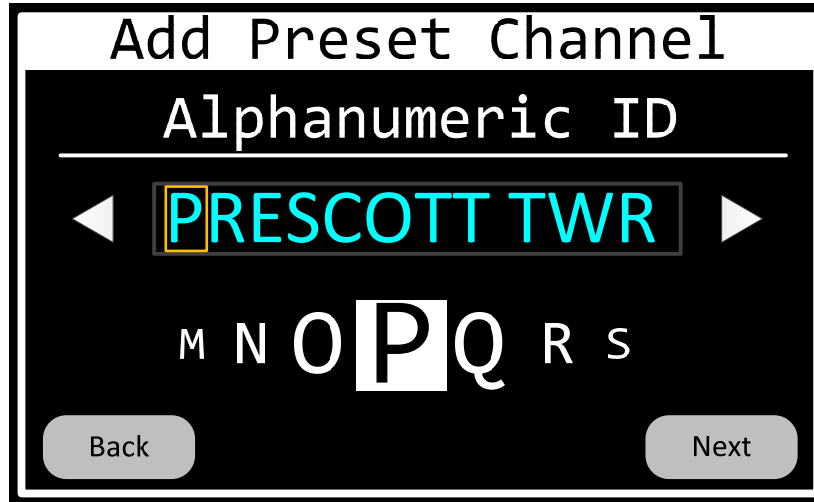


Figure 50 Preset-Channel-Alpha Page

Table 13 Preset-Channel-Alpha Page Actions

Event	Action
Value-Up button pressed	Increment focused character.
Value-Down button pressed	Decrement focused character.
Right arrow button pressed	Focus next (to right) character.
Left arrow button pressed	Focus previous (to left) character.
Cursor-Right button pressed	Focus next (to right) character.
Cursor-Left button pressed	Focus previous (to left) character.
Touch character thumbwheel	Set focused character to be value touched.
Slide character thumbwheel to left	Decrement focused character.
Slide character thumbwheel to right	Increment focused character.
Flick character thumbwheel to left	Increment focused character by value proportionate to flick velocity. Should animate rotation through characters if possible.
Flick character thumbwheel to right	Decrement focused character by value proportionate

	to flick velocity. Should animate rotation through characters if possible.
BACK button pressed	Invoke Preset-Channel-Number page.
NEXT button pressed	Invoke Preset-Channel-Type page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Type page shall allow the operator to input the channel type of the channel. Valid values are AM, FM, and P25. AM shall not be available for APX transceivers. The type shall default to FM. The page is depicted in Figure 51 and the page's Action/Event table is contained in Table 14.

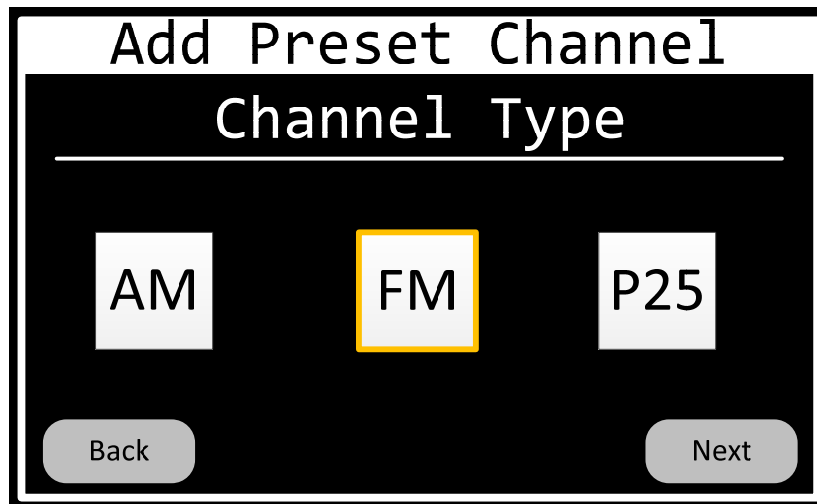


Figure 51 Preset-Channel-Type Page

Table 14 Preset-Channel-Type Page Actions

Event	Action
AM button pressed	Select AM and invoke Preset-Channel-Receive-Frequency page.
FM button pressed	Select FM and invoke Preset-Channel-Receive-Frequency page.
P25 button pressed	Select P25 and invoke Preset-Channel-Receive-Frequency page.
Cursor-Right button pressed	Move focus to next location in a left-to-right, top-to-bottom fashion.
Cursor-Left button pressed	Move focus to previous location in a right-to-left, bottom-to-top fashion.
BACK button pressed	Invoke Preset-Channel-Alpha page.
NEXT button pressed	Invoke Preset-Channel-Receive-Frequency page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Receive-Frequency page shall allow the operator to input the receive frequency of the channel. Valid values range from 29.7 MHz thru 959.99875 Mhz. The default shall be 0. The page is depicted in Figure 52 and the page's Action/Event table is contained in Table 15.

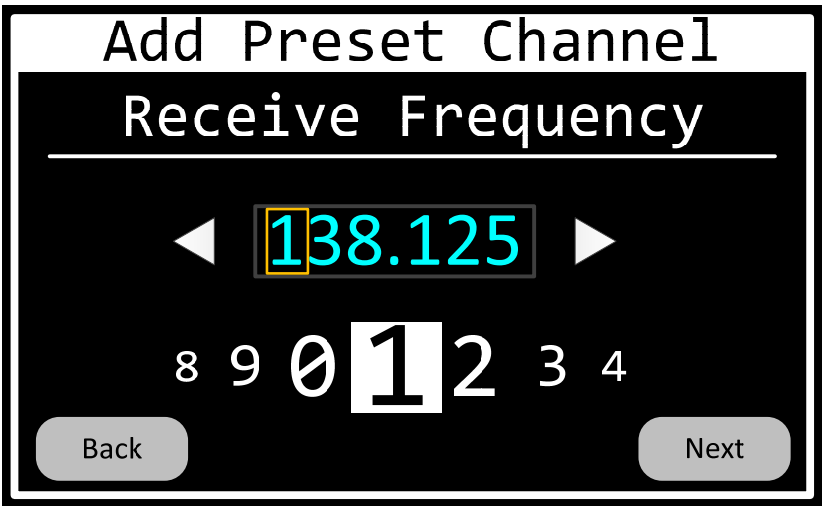


Figure 52 Preset-Channel-Receive-Frequency Page

Table 15 Preset-Channel-Receive-Frequency Page Actions

Event	Action
Value-Up button pressed	Increment focused digit.
Value-Down button pressed	Decrement focused digit.
Right arrow button pressed	Focus next (to right) digit.
Left arrow button pressed	Focus previous (to left) digit.
Cursor-Right button pressed	Focus next (to right) digit.
Cursor-Left button pressed	Focus previous (to left) digit.
Tap frequency	Set focused digit to be the one that was touched.
Double-Tap frequency	Invoke Frequency-Entry dialog.
Tap digit thumbwheel	Set focused digit to be value touched.
Slide digit thumbwheel to left	Decrement focused digit.
Slide digit thumbwheel to right	Increment focused digit.
Flick digit thumbwheel to left	Increment focused digit by value proportionate to flick velocity. Should animate rotation through digits if possible.
Flick digit thumbwheel to right	Decrement focused digit by value proportionate to flick velocity. Should animate rotation through digits if possible.
BACK button pressed	Invoke Preset-Channel-Type page.
NEXT button pressed	• When channel type is AM, invoke Preset-Channel-Transmit-Frequency page. • When channel type is FM, invoke Preset-Channel-Receive-Tone page. • When channel type is P25, invoke Preset-Channel-Receive-NAC page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Receive-Tone page shall allow the operator to input the receive sub-audible tone of the channel. Valid values are described in Appendix A. The default shall be no tone. The page is depicted in Figure 53 and the page's Action/Event table is contained in Table 16.

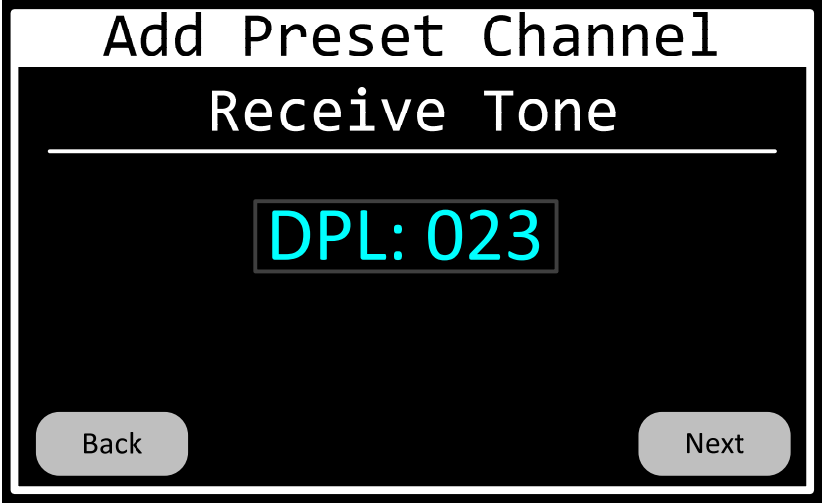


Figure 53 Preset-Channel-Receive-Tone Page

Table 16 Preset-Channel-Receive-Tone Page Actions

Event	Action
Double-Tap tone	Invoke Tone-Entry dialog.
BACK button pressed	Invoke Preset-Channel-Receive-Frequency page.
NEXT button pressed	Invoke Preset-Channel-Transmit-Frequency page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Receive-NAC page shall allow the operator to input the receive NAC code of the channel. This value shall be a 3-digit hexadecimal number. The allowable character set shall be the standard ASCII characters '0' thru '9' and 'A' thru 'F'. The page is depicted in Figure 54 and the page's Action/Event table is contained in Table 17.



Figure 54 Preset-Channel-Receive-NAC Page

Table 17 Preset-Channel-Receive-NAC Page Actions

Event	Action
Value-Up button pressed	Increment focused digit.
Value-Down button pressed	Decrement focused digit.
Right arrow button pressed	Focus next (to right) digit.
Left arrow button pressed	Focus previous (to left) digit.
Cursor-Right button pressed	Focus next (to right) digit.
Cursor-Left button pressed	Focus previous (to left) digit.
Tap digit thumbwheel	Set focused digit to be value touched.
Slide digit thumbwheel to left	Decrement focused digit.
Slide digit thumbwheel to right	Increment focused digit.
Flick digit thumbwheel to left	Increment focused digit by value proportionate to flick velocity. Should animate rotation through digits if possible.
Flick digit thumbwheel to right	Decrement focused digit by value proportionate to flick velocity. Should animate rotation through digits if possible.
BACK button pressed	Invoke Preset-Channel-Receive-Frequency page.
NEXT button pressed	Invoke Preset-Channel-Transmit-Frequency page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Transmit-Frequency page shall allow the operator to input the transmit frequency of the channel. Valid values range from 29.7 MHz thru 959.99875 Mhz. The default shall be 0. The page is depicted in Figure 55 and the page's Action/Event table is contained in Table 18.

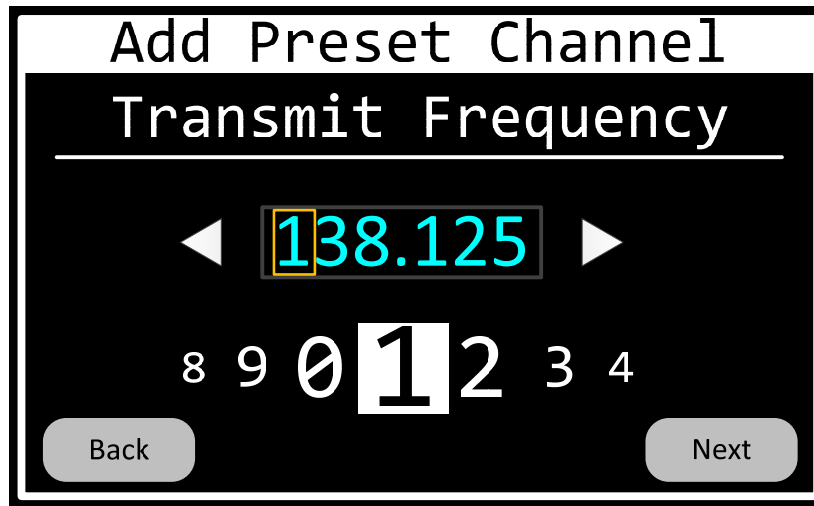


Figure 55 Preset-Channel-Transmit-Frequency Page

Table 18 Preset-Channel-Transmit-Frequency Page Actions

Event	Action
Value-Up button pressed	Increment focused digit.
Value-Down button pressed	Decrement focused digit.
Right arrow button pressed	Focus next (to right) digit.

Left arrow button pressed	Focus previous (to left) digit.
Cursor-Right button pressed	Focus next (to right) digit.
Cursor-Left button pressed	Focus previous (to left) digit.
Tap frequency	Set focused digit to be the one that was touched.
Double-Tap frequency	Invoke Frequency-Entry dialog.
Tap digit thumbwheel	Set focused digit to be value touched.
Slide digit thumbwheel to left	Decrement focused digit.
Slide digit thumbwheel to right	Increment focused digit.
Flick digit thumbwheel to left	Increment focused digit by value proportionate to flick velocity. Should animate rotation through digits if possible.
Flick digit thumbwheel to right	Decrement focused digit by value proportionate to flick velocity. Should animate rotation through digits if possible.
BACK button pressed	Invoke Preset-Channel-Type page.
NEXT button pressed	- When channel type is AM, invoke Preset-Channel-Transmit-Power page. - When channel type is FM, invoke Preset-Channel-Transmit-Tone page. - When channel type is P25, invoke Preset-Channel-Transmit-NAC page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Transmit-Tone page shall allow the operator to input the transmit sub-audible tone of the channel. Valid values are described in Appendix A. The default shall be no tone. The page is depicted in Figure 56 and the page's Action/Event table is contained in Table 19.

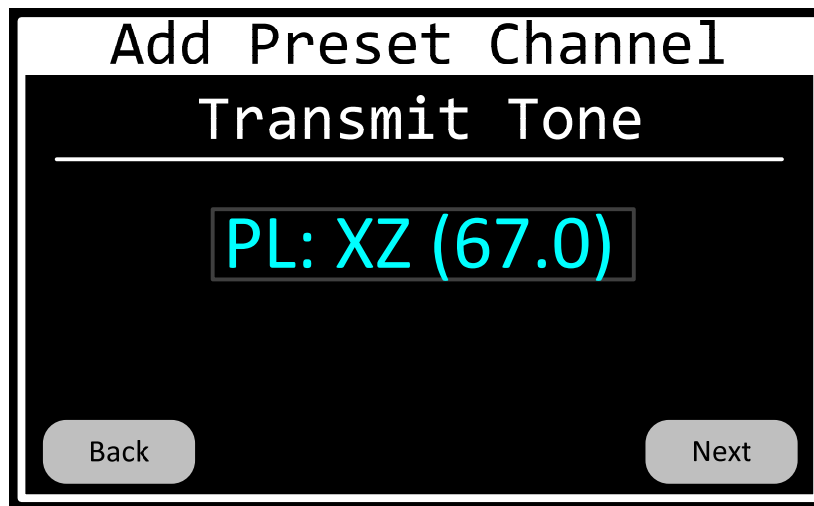


Figure 56 Preset-Channel-Transmit-Tone Page

Table 19 Preset-Channel-Transmit-Tone Page Actions

Event	Action
Double-Tap tone	Invoke Tone-Entry dialog.
BACK button pressed	Invoke Preset-Channel-Transmit-Frequency page.
NEXT button pressed	Invoke Preset-Channel-Transmit-Power page.

HOME key pressed	Return to Preset-Channel-Function page.
------------------	---

The Preset-Channel-Transmit-NAC page shall allow the operator to input the transmit NAC code of the channel. This value shall be a 3-digit hexadecimal number. The allowable character set shall be the standard ASCII characters '0' thru '9' and 'A' thru 'F'. The page is depicted in Figure 57 and the page's Action/Event table is contained in Table 20.

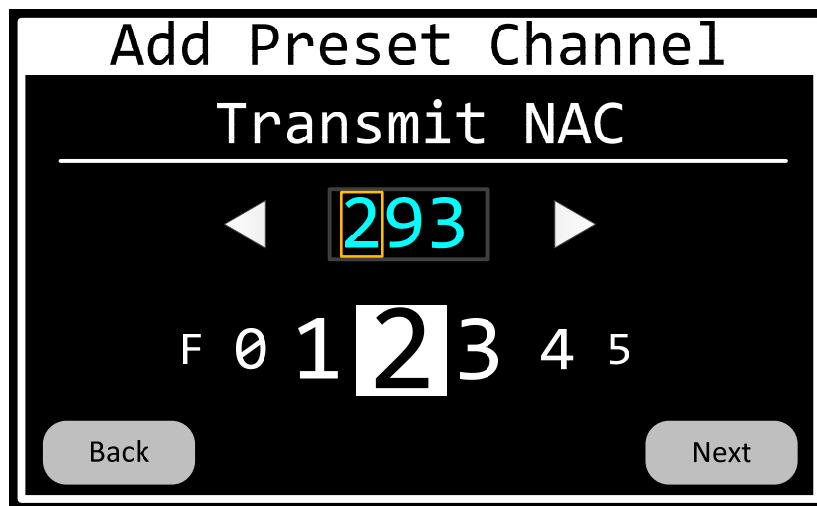


Figure 57 Preset-Channel-Transmit-NAC Page

Table 20 Preset-Channel-Transmit-NAC Page Actions

Event	Action
Value-Up button pressed	Increment focused digit.
Value-Down button pressed	Decrement focused digit.
Right arrow button pressed	Focus next (to right) digit.
Left arrow button pressed	Focus previous (to left) digit.
Cursor-Right button pressed	Focus next (to right) digit.
Cursor-Left button pressed	Focus previous (to left) digit.
Tap digit thumbwheel	Set focused digit to be value touched.
Slide digit thumbwheel to left	Decrement focused digit.
Slide digit thumbwheel to right	Increment focused digit.
Flick digit thumbwheel to left	Increment focused digit by value proportionate to flick velocity. Should animate rotation through digits if possible.
Flick digit thumbwheel to right	Decrement focused digit by value proportionate to flick velocity. Should animate rotation through digits if possible.
BACK button pressed	Invoke Preset-Channel-Transmit-Frequency page.
NEXT button pressed	Invoke Preset-Channel-Transmit-Power page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Transmit-Power page shall allow the operator to input the transmit power of the channel. Valid values are High and Low. The page is depicted in Figure 58 and the page's Action/Event table is contained in Table 21.

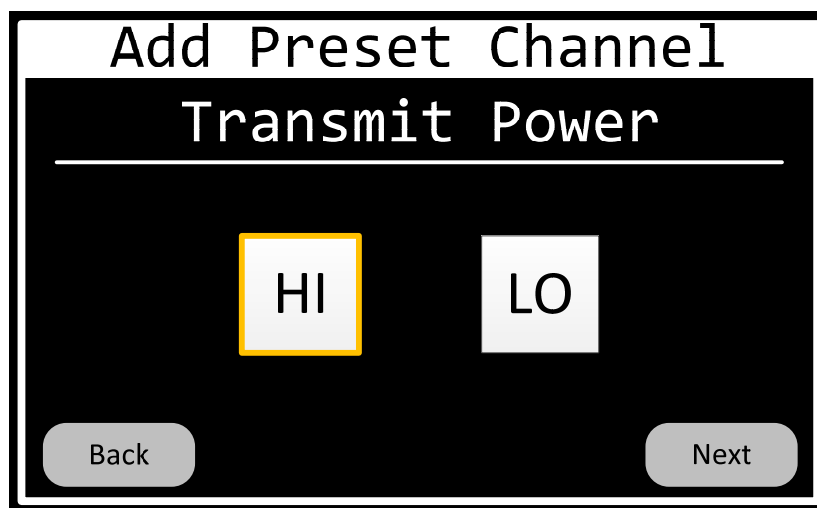


Figure 58 Preset-Channel-Transmit-Power Page

Table 21 Preset-Channel-Transmit-Power Page Actions

Event	Action
HI button pressed	Select high power and invoke : • Preset-Channel-OTAR-Capability page when transceiver is OTAR capable. • Preset-Channel-Receive-Bandwidth page otherwise.
LO button pressed	Select high power and invoke : • Preset-Channel-OTAR-Capability page when transceiver is OTAR capable. • Preset-Channel-Receive-Bandwidth page otherwise.
Cursor-Right button pressed	Move focus to next location in a left-to-right, top-to-bottom fashion.
Cursor-Left button pressed	Move focus to previous location in a right-to-left, bottom-to-top fashion.
BACK button pressed	• When channel type is AM, invoke Preset-Channel-Transmit-Frequency page. • When channel type is FM, invoke Preset-Channel-Transmit-Tone page. • When channel type is P25, invoke Preset-Channel-Transmit-NAC page.
NEXT button pressed	• When channel type is AM or FM, invoke Preset-Channel-Receive-Audio-Phase page. • When channel type is P25, invoke Preset-Channel-Talk-Group page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Talk-Group page shall allow the operator to input the talk group of the channel. Valid values are 0 thru 65535. The default shall be 65535. The page is depicted in Figure 59 and the page's Action/Event table is contained in Table 22.



Figure 59 Preset-Channel-Talk-Group Page

Table 22 Preset-Channel-Talk-Group Page Actions

Event	Action
Double-Tap tone	Invoke Talk-Group-Entry dialog.
BACK button pressed	Invoke Preset-Channel-Transmit-Power page.
NEXT button pressed	Invoke Preset-Channel-Encryption-Type page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Encryption-Type page shall allow the operator to input the encryption type of the channel. Valid values are None, Standard, and OTAR. OTAR means the channel has standard encryption, and is, in addition, able to perform OTAR operations. The page is depicted in Figure 60 and the page’s Action/Event table is contained in Table 23.

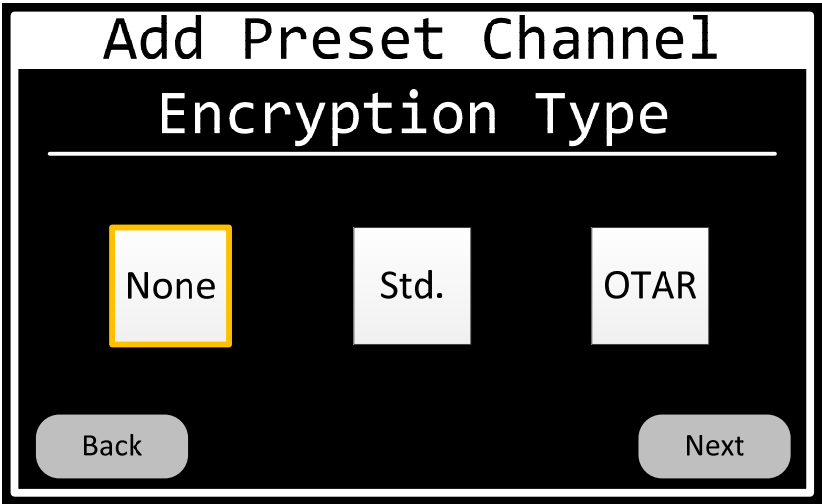


Figure 60 Preset-Channel-Encryption-Type Page

Table 23 Preset-Channel-Encryption-Type Page Actions

Event	Action
NONE button pressed	Select no encryption, not OTAR capable, and invoke Preset-Channel-Receive-Audio-Phase page.
STD button pressed	Select standard encryption, not OTAR capable, and invoke Preset- Channel-Encryption-Key page.
OTAR button pressed	Select standard encryption, OTAR capable, and invoke Preset-Channel-Encryption-Key page.
Cursor-Right button pressed	Move focus to next location in a left-to-right, top-to-bottom fashion.
Cursor-Left button pressed	Move focus to previous location in a right-to-left, bottom-to-top fashion.
BACK button pressed	- When channel type is AM or FM, invoke Preset-Channel-Transmit-Power page. - When channel type is P25, invoke Preset-Channel-Talk-Group page.
NEXT button pressed	- When “None” is selected, invoke Preset-Receive-Audio-Phase page. - When “OTAR” or “Standard” is selected, invoke Preset-Channel-Encryption-Key page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Encryption-Key page shall allow the operator to input the encryption key of the channel. Valid values are 1-16. The page is depicted in Figure 61 and the page’s Action/Event table is contained in Table 24.

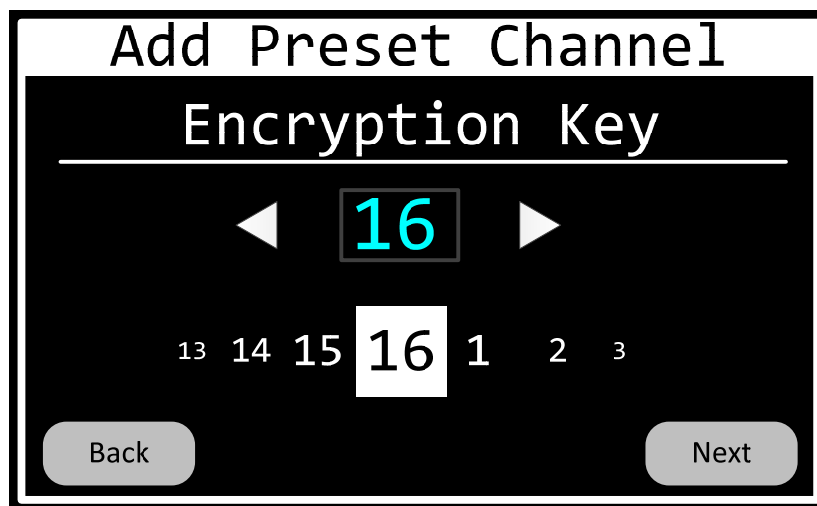


Figure 61 Preset-Channel-Encryption-Key Page

Table 24 Preset-Channel-Encryption-Key Page Actions

Event	Action
Value-Up button pressed	Increment key.
Value-Down button pressed	Decrement key.
Tap digit thumbwheel	Set key to be value touched.

Slide digit thumbwheel to left	Decrement key.
Slide digit thumbwheel to right	Increment key.
Flick digit thumbwheel to left	Increment key by value proportionate to flick velocity. Should animate rotation through keys if possible.
Flick digit thumbwheel to right	Decrement key by value proportionate to flick velocity. Should animate rotation through keys if possible.
BACK button pressed	Invoke Preset-Channel-Encryption-Type page.
NEXT button pressed	Invoke Preset-Channel-Receive-Audio-Phase page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Receive-Phase page shall allow the operator to input the receive phase of the channel. Valid values are 0 and 180. The page is depicted in Figure 62 and the page's Action/Event table is contained in Table 25.

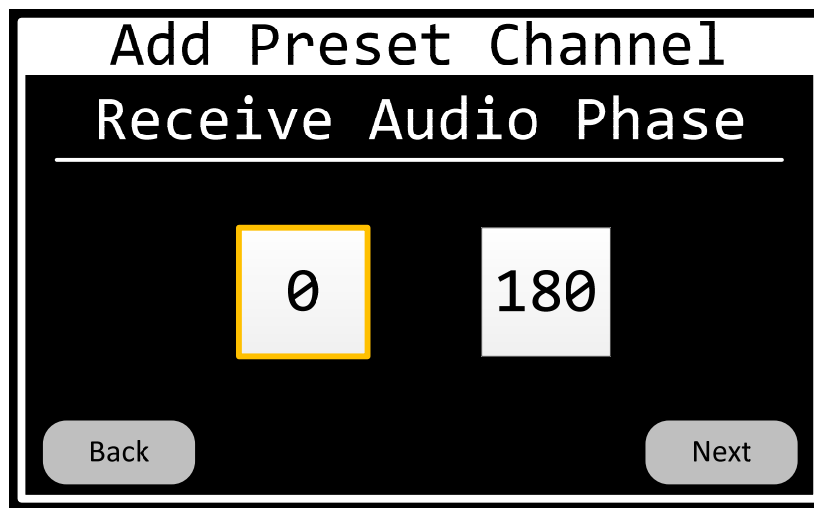


Figure 62 Preset-Channel-Receive-Phase Page

Table 25 Preset-Channel-Receive-Phase Page Actions

Event	Action
0 button pressed	Select phase of 0 degrees and invoke Preset-Channel-Transmit-Audio-Phase page.
180 button pressed	Select phase of 180 degrees and invoke Preset-Channel-Transmit-Audio-Phase page.
Cursor-Right button pressed	Move focus to next location in a left-to-right, top-to-bottom fashion.
Cursor-Left button pressed	Move focus to previous location in a right-to-left, bottom-to-top fashion.
BACK button pressed	- When channel is encrypted, invoke Preset-Channel-Encryption-Key page. - When channel type is P25, invoke Preset-Channel-Talk-Group page. - Otherwise, invoke Preset-Channel-Transmit-Power page.
NEXT button pressed	Invoke Preset-Channel-Transmit-Audio-Phase page.

HOME key pressed	Return to Preset-Channel-Function page.
------------------	---

The Preset-Channel-Transmit-Phase page shall allow the operator to input the transmit phase of the channel. Valid values are 0 and 180. The page is depicted in Figure 63 and the page's Action/Event table is contained in Table 26.

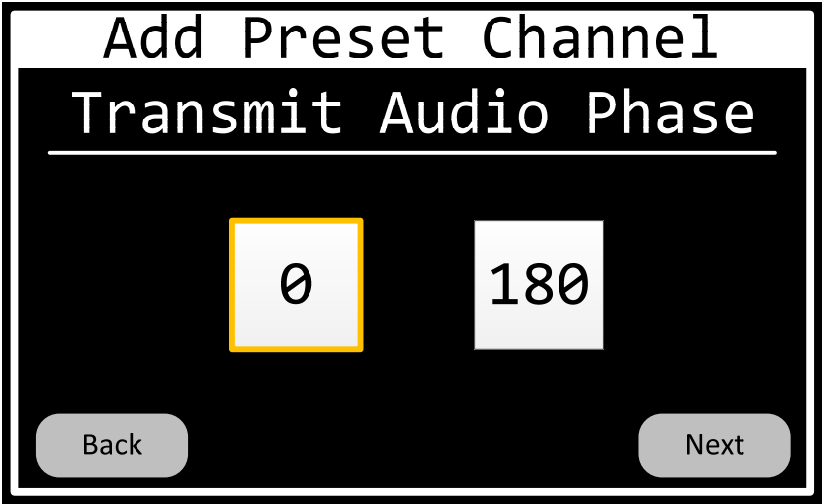


Figure 63 Preset-Channel-Transmit-Phase Page

Table 26 Preset-Channel-Transmit-Phase Page Actions

Event	Action
0 button pressed	Select phase of 0 degrees and invoke Preset-Channel-Transmit-Deviation page.
180 button pressed	Select phase of 180 degrees and invoke Preset-Channel-Transmit-Deviation page.
Cursor-Right button pressed	Move focus to next location in a left-to-right, top-to-bottom fashion.
Cursor-Left button pressed	Move focus to previous location in a right-to-left, bottom-to-top fashion.
BACK button pressed	Invoke Preset-Channel-Receive-Audio-Phase page.
NEXT button pressed	Invoke Preset-Channel-Transmit-Deviation page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Transmit-Deviation page shall allow the operator to input the transmit deviation of the channel. Valid values are 2.5K, 4.0K, 5.0K, and 5.6K. The page is depicted in Figure 64 and the page's Action/Event table is contained in Table 27.

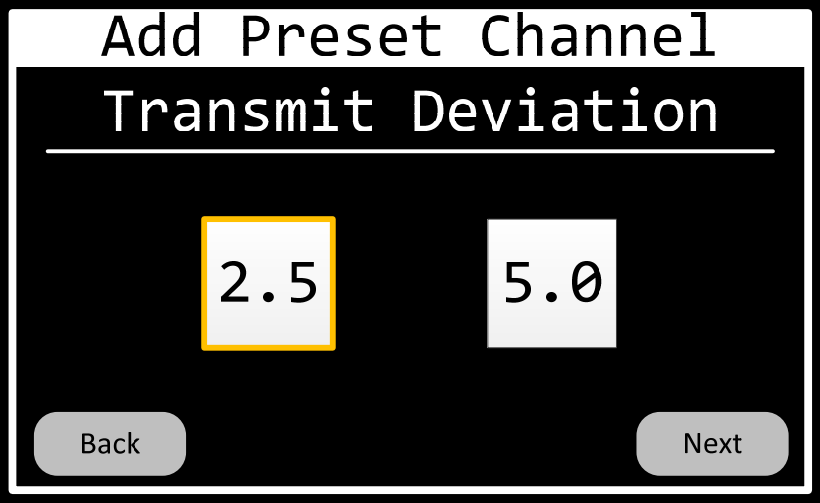


Figure 64 Preset-Channel-Transmit-Deviation Page

Table 27 Preset-Channel-Transmit-Deviation Page Actions

Event	Action
“2.5” button pressed	Select transmit deviation of 2.5 KHz and invoke Preset-Channel-Receive-Bandwidth page.
“4.0” button pressed	Select transmit deviation of 4.0 KHz and invoke Preset-Channel-Receive-Bandwidth page.
“5.0” button pressed	Select transmit deviation of 5.0 KHz and invoke Preset-Channel-Receive-Bandwidth page.
“5.6” button pressed	Select transmit deviation of 5.6 KHz and invoke Preset-Channel-Receive-Bandwidth page.
Cursor-Right button pressed	Move focus to next location in a left-to-right, top-to-bottom fashion.
Cursor-Left button pressed	Move focus to previous location in a right-to-left, bottom-to-top fashion.
BACK button pressed	Invoke Preset-Channel-Transmit-Audio-Phase page.
NEXT button pressed	Invoke Preset-Channel-Receive-Bandwidth page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Receive-Bandwidth page shall allow the operator to input the receive bandwidth of the channel. Valid values are Narrow, Standard, and Wide. The page is depicted in Figure 65 and the page’s Action/Event table is contained in Table 28.

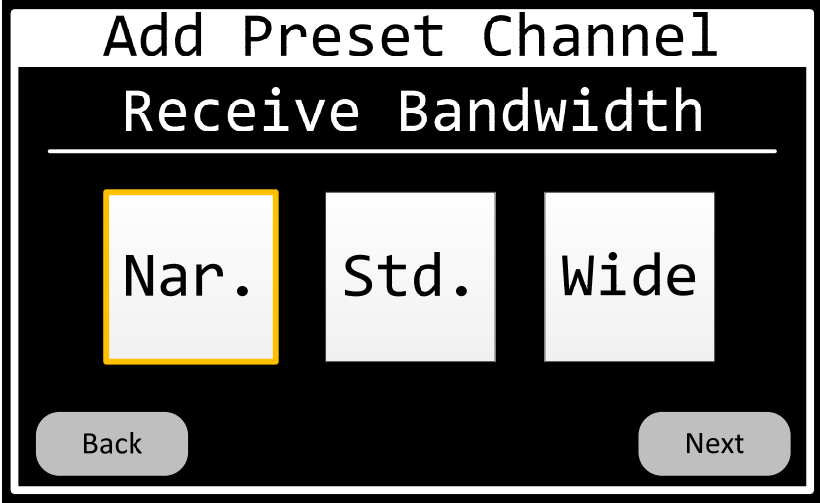


Figure 65 Preset-Channel-Receive-Bandwidth Page

Table 28 Preset-Channel-Receive-Bandwidth Page Actions

Event	Action
“Narrow” button pressed	Select narrow receive bandwidth and invoke Preset-Channel-Save page.
“Standard” button pressed	Select standard receive bandwidth and invoke Preset-Channel-Save page.
“Wide” button pressed	Select wide receive bandwidth and invoke Preset-Channel-Save page.
Cursor-Right button pressed	Move focus to next location in a left-to-right, top-to-bottom fashion.
Cursor-Left button pressed	Move focus to previous location in a right-to-left, bottom-to-top fashion.
BACK button pressed	Invoke Preset-Channel-Transmit-Deviation page.
NEXT button pressed	Invoke Preset-Channel-Save page.
HOME key pressed	Return to Preset-Channel-Function page.

The Preset-Channel-Save page shall allow the operator to save the changes made to the channel. The user shall be prompted. The page is depicted in Figure 66 and the page’s Action/Event table is contained in Table 29.



Figure 66 Preset-Channel-Save Page

Table 29 Preset-Channel-Save Page Actions

Event	Action
BACK button pressed	Invoke Preset-Channel-Transmit-Audio-Phase page.
SAVE button pressed	Save channel and invoke Preset-Channel-Function page.
HOME key pressed	Return to Preset-Channel-Function page.

6.4.2.8.2 Change Preset Channel

The Preset-Channel-Change pages shall allow the operator to modify the properties of an existing channel in a transceiver's channel list. These pages are mostly the same as the "add channel" pages and will not be duplicated here. The differences from the "add channel" pages are:

- The page titles shall be "Change Preset Channel" rather than "Add Preset Channel".
- The Preset-Channel-Number page shall limit selection of channels to those that are programmed rather than those that are not programmed.
- Channels for Motorola modules can be changed.

6.4.2.8.3 Delete Preset Channel

The Preset-Channel-Delete pages shall allow the operator to remove an existing channel from a transceiver's channel list. The page sequence is given below.

The first page in the sequence shall look and behave the same as the Preset-Channel-Transceiver page, only with the title changed to "Delete Preset Channel". The page is depicted in Figure 67.

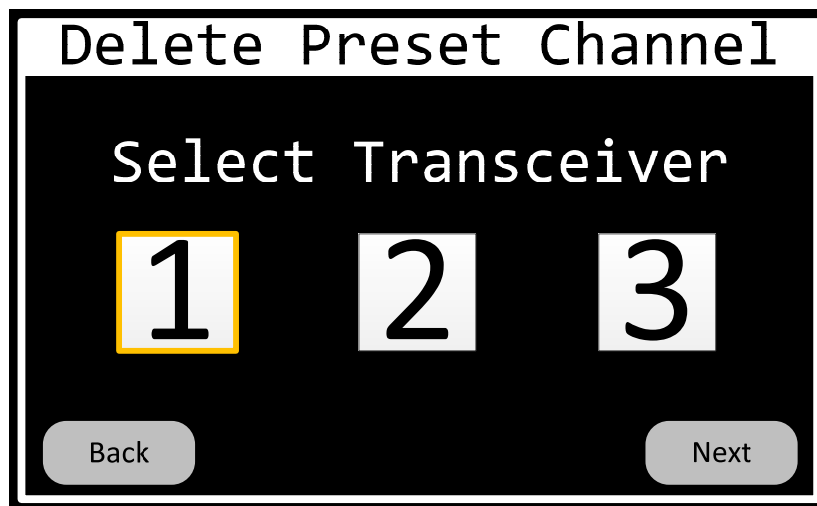


Figure 67 Delete-Preset-Channel-Transceiver Page

The Delete-Preset-Channel-Number page shall allow the operator to select the channel to be deleted. Only channels that are programmed shall be selectable. The page is depicted in Figure 68.

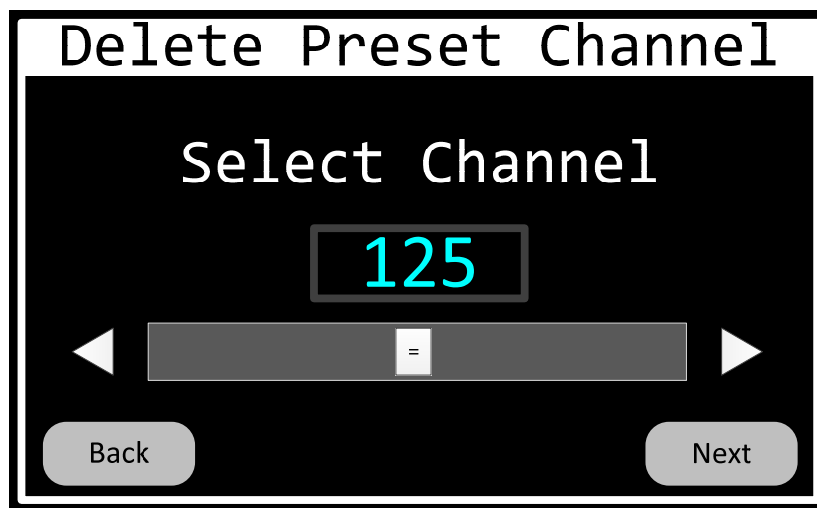


Figure 68 Delete-Preset-Channel-Number Page

The Delete-Preset-Channel-Confirm page shall allow the operator to confirm deletion of the channel. The page is depicted in Figure 69 and the page's Action/Event table is contained in Table 30.



Figure 69 Delete-Preset-Channel-Confirm Page

Table 30 Delete-Preset-Channel-Confirm Page Actions

Event	Action
BACK button pressed	Invoke Delete-Preset-Channel-Number page.
DELETE button pressed	Delete channel and invoke Preset-Channel-Function page.
HOME key pressed	Return to Preset-Channel-Function page.

6.4.2.8.4 Clone Preset Channel

The Preset-Channel-Clone pages shall allow the operator to add a new channel to a transceiver’s channel list by cloning an existing channel in the list. The page sequence is given below.

The first page in the sequence shall look and behave the same as the Preset-Channel-Transceiver page, only with the title changed to “Clone Preset Channel”. The page is depicted in Figure 70.

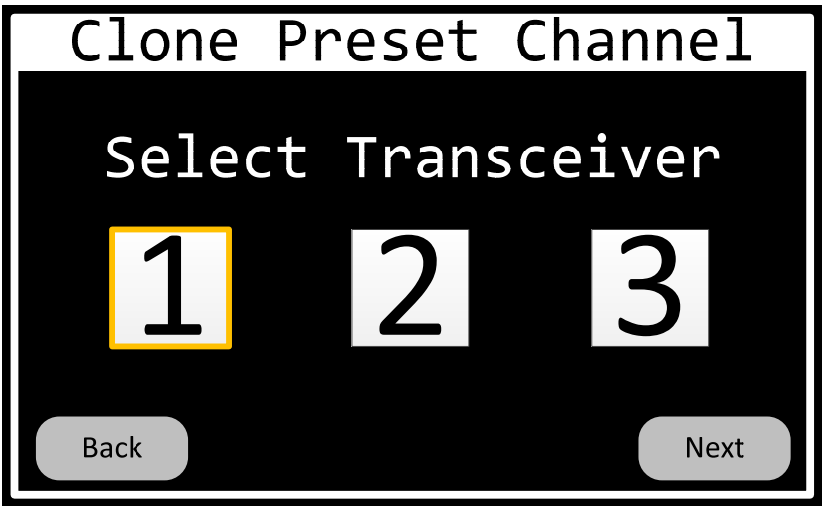


Figure 70 Clone-Preset-Channel-Transceiver Page

The Clone-Preset-Channel-Source page shall allow the operator to select the channel to be cloned, i.e. the source channel. Only channels that are programmed shall be selectable. The page is depicted in Figure 71.

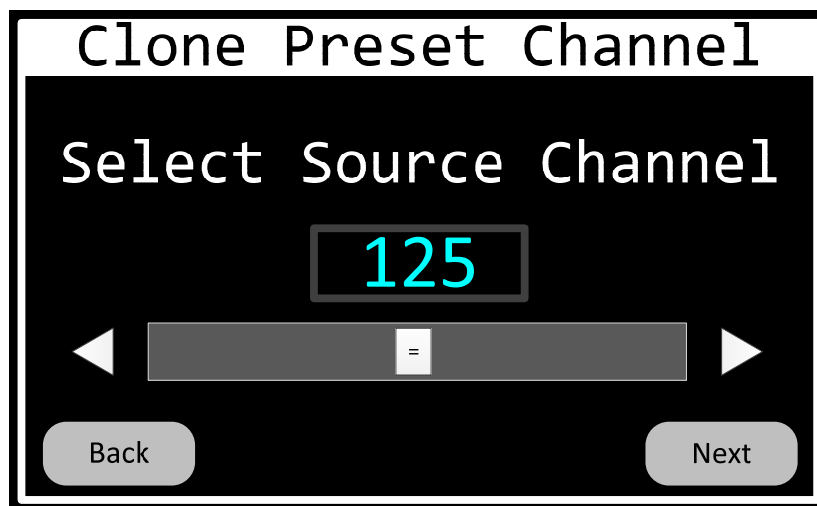


Figure 71 Clone-Preset-Channel-Source Page

The Clone-Preset-Channel-Target page shall allow the operator to select the new channel, i.e. the destination channel. Only channels that are not programmed shall be selectable. The page is depicted in Figure 72.

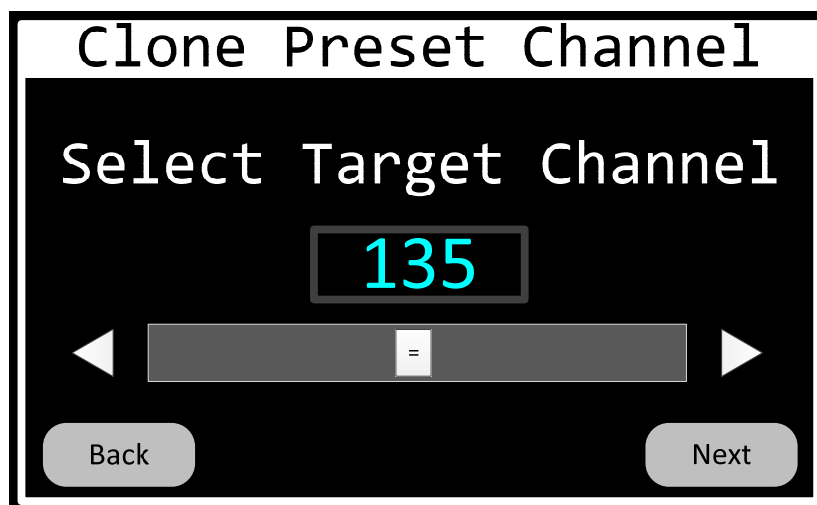


Figure 72 Clone-Preset-Channel-Target Page

The Clone-Preset-Channel-Confirm page shall allow the operator to confirm cloning of the channel. The page is depicted in Figure 73 and the page's Action/Event table is contained in Table 31.



Figure 73 Clone-Preset-Channel-Confirm Page

Table 31 Clone-Preset-Channel-Confirm Page Actions

Event	Action
BACK button pressed	Invoke Clone-Preset-Channel-Target page.
CLONE button pressed	Clone channel and invoke Preset-Channel-Function page.
HOME key pressed	Return to Preset-Channel-Function page.

6.4.2.9 Scan Group Programming

The Scan-Group-Function dialog shall allow the operator to add, modify, or delete a scan group. The page is depicted in Figure 74 and the page's Action/Event table is contained in Table 32.

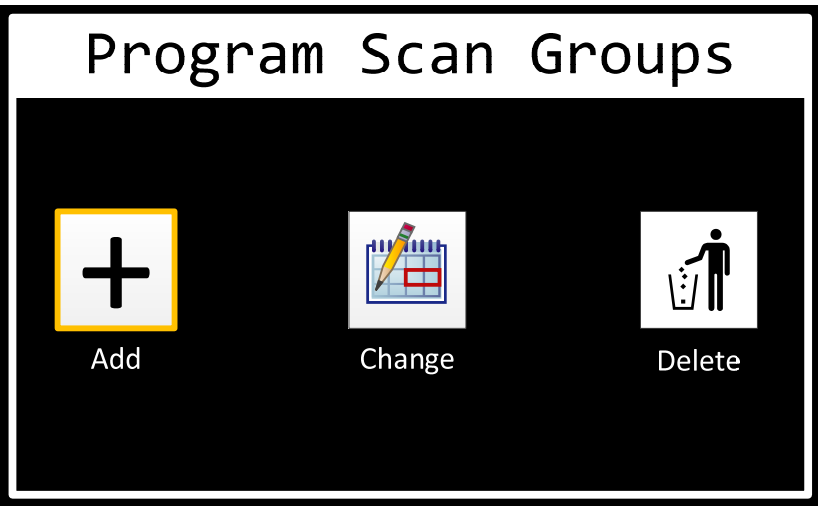


Figure 74 Scan-Group-Function Dialog

Table 32 Scan-Group-Function Dialog Actions

Event	Action
Add button pressed	Invoke Scan-Group-Add dialog.
Change button pressed	Invoke Scan-Group-Change dialog.
Delete button pressed	Invoke Scan-Group-Delete dialog.
HOME key pressed	Return to Home page.

6.4.2.9.1 Add Scan Group

The Scan-Group-Add pages shall allow the operator to add a new scan group to a transceiver's scan group list and configure the newly added group's properties.

The first page in the sequence shall be the Scan-Group- Add-Transceiver page. This page shall allow the operator to specify the transceiver for which the scan group will be added. Only transceivers installed in the system shall be selectable. At this time, Motorola does not allow scan groups to be added to a transceiver by any means other than their CPS software. Therefore, APX transceivers shall be disabled or hidden on this page. The page is depicted in Figure 75 and the page's Action/Event table is contained in Table 33.

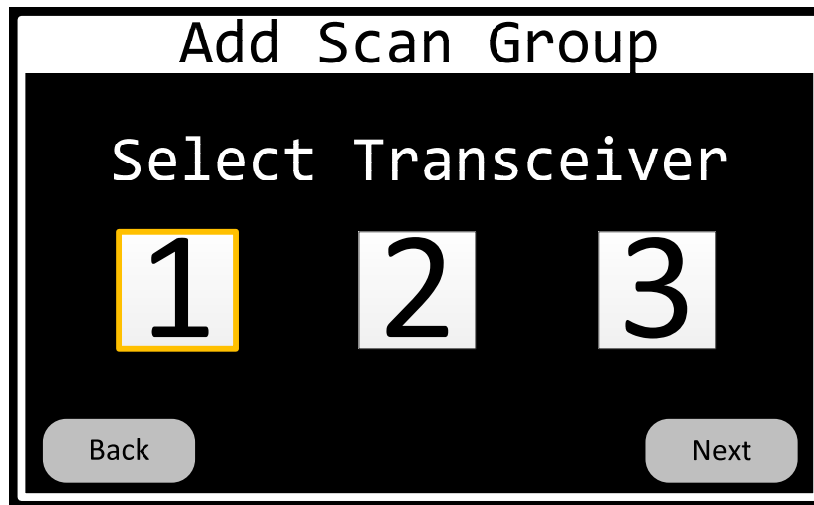


Figure 75 Scan-Group-Add-Transceiver Page

Table 33 Scan-Group-Add-Transceiver Page Actions

Event	Action
RT1 button pressed	Select transceiver 1 and invoke Scan-Group-Number page.
RT2 button pressed	Select transceiver 2 and invoke Scan-Group-Number page.
RT3 button pressed	Select transceiver 3 and invoke Scan-Group-Number page.
HOME key pressed	Return to Scan-Group-Function page.

The Scan-Group-Add-Number page shall allow the operator to select the number of the scan group to add. Only groups that are not programmed shall be displayed. The page is depicted in Figure 76 and the page's Action/Event table is contained in Table 34.

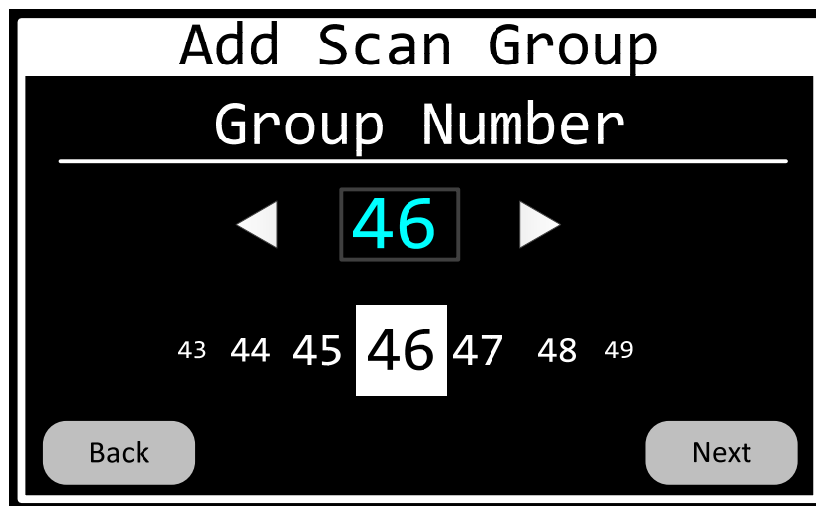


Figure 76 Scan-Group-Add-Number Page

Table 34 Scan-Group-Add-Number Page Actions

Event	Action
Value-Up button pressed	Increment group number.
Value-Down button pressed	Decrement group number.
Tap thumbwheel	Set group number to be value touched.
Slide thumbwheel to left	Decrement group number.
Slide thumbwheel to right	Increment group number.
Flick digit thumbwheel to left	Increment group number by value proportionate to flick velocity. Should animate rotation through groups if possible.
Flick digit thumbwheel to right	Decrement group number by value proportionate to flick velocity. Should animate rotation through groups if possible.
BACK button pressed	Invoke Scan-Group-Add-Transceiver page.
NEXT button pressed	Invoke Scan-Group-Add-Properties page.
HOME key pressed	Return to Scan-Group-Function page.

The Scan-Group-Add-Alpha page shall allow the operator to input the alphanumeric identifier of the scan group. This value shall be a text string with a maximum length of 12 characters. The allowable character set shall be the standard ASCII characters 32 thru 126. The page is depicted in Figure 77 and the page's Action/Event table is contained in Table 35.

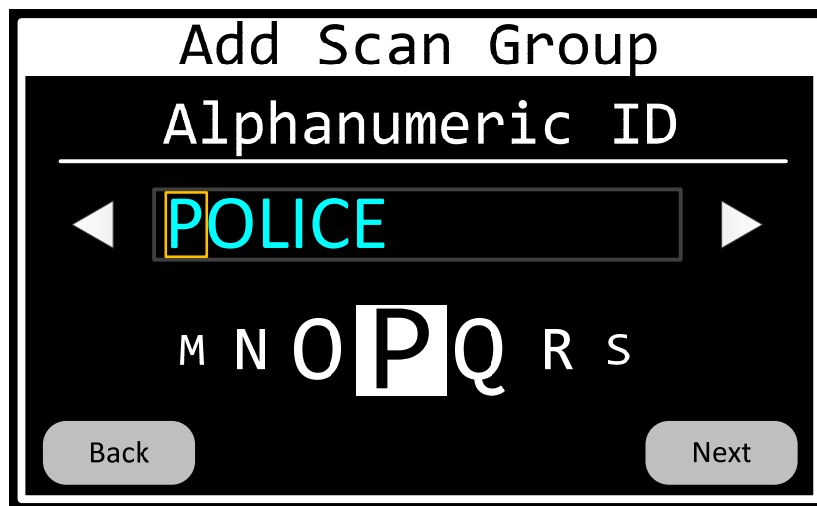


Figure 77 Scan-Group-Add-Alpha Page

Table 35 Scan-Group-Add-Alpha Page Actions

Event	Action
Value-Up button pressed	Increment focused character.
Value-Down button pressed	Decrement focused character.
Right arrow button pressed	Focus next (to right) character.
Left arrow button pressed	Focus previous (to left) character.
Cursor-Right button pressed	Focus next (to right) character.
Cursor-Left button pressed	Focus previous (to left) character.
Touch character thumbwheel	Set focused character to be value touched.
Slide character thumbwheel to left	Decrement focused character.
Slide character thumbwheel to right	Increment focused character.
Flick character thumbwheel to left	Increment focused character by value proportionate to flick velocity. Should animate rotation through characters if possible.
Flick character thumbwheel to right	Decrement focused character by value proportionate to flick velocity. Should animate rotation through characters if possible.
BACK button pressed	Invoke Scan-Group-Add-Number page.
NEXT button pressed	Invoke Scan-Group-Channel-1 page.
HOME key pressed	Return to Scan-Group-Function page.

The Scan-Group-Add-Channel-1 page shall allow the operator to input the 1st of 10 preset channels that make up the scan group. Only programmed channels shall be selectable. The page is depicted in Figure 61 and the page's Action/Event table is contained in Table 24.

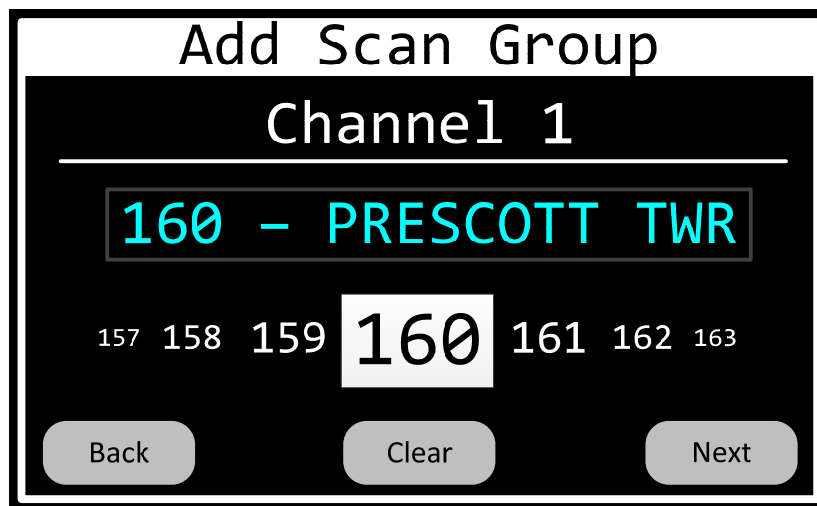


Figure 78 Scan-Group-Add-Channel-1 Page

Table 36 Scan-Group-Add-Channel-1 Page Actions

Event	Action
Value-Up button pressed	Increment preset channel.
Value-Down button pressed	Decrement preset channel.
Tap digit thumbwheel	Set preset channel to be value touched.
Slide digit thumbwheel to left	Decrement preset channel.
Slide digit thumbwheel to right	Increment preset channel.
Flick thumbwheel to left	Increment preset channel by value proportionate to flick velocity. Should animate rotation through channels if possible.
Flick thumbwheel to right	Decrement preset channel by value proportionate to flick velocity. Should animate rotation through channels if possible.
CLEAR button pressed	Clear channel assignment and display N/A.
BACK button pressed	Invoke Scan-Group-Add-Alpha page.
NEXT button pressed	Invoke Scan-Group-Add-Channel-2 page.
HOME key pressed	Return to Scan-Group-Function page.

There shall be 9 more pages like the Scan-Group-Add-Channel-1 Page for inputting a total of 10 channels into the group. Scan-Group-Add-Channel-2 thru Scan-Group-Add-Channel-10 will be skipped for brevity.

The Scan-Group-Add-Priority-Channel page shall allow the operator to input the priority channel for the scan group. Only programmed channels shall be selectable. The page is depicted in Figure 79 and the page's Action/Event table is contained in Table 37.

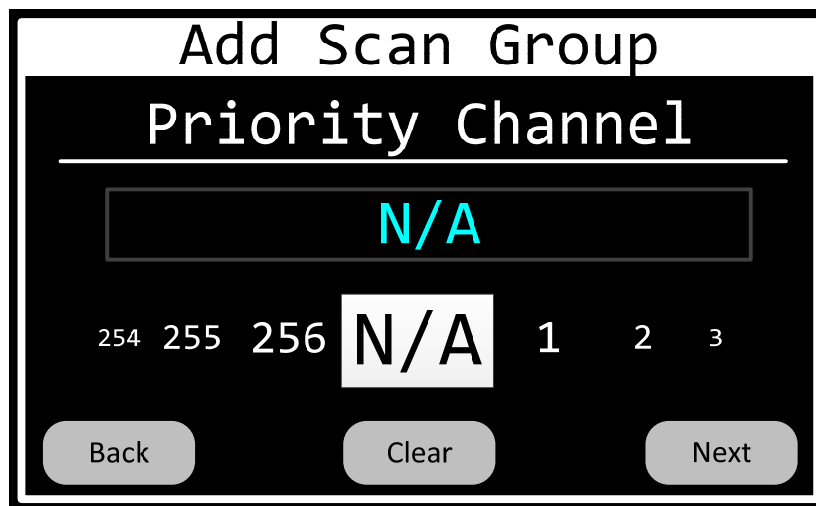


Figure 79 Scan-Group-Add-Priority-Channel Page

Table 37 Scan-Group-Add-Priority-Channel Page Actions

Event	Action
Value-Up button pressed	Increment preset channel.
Value-Down button pressed	Decrement preset channel.
Tap digit thumbwheel	Set preset channel to be value touched.
Slide digit thumbwheel to left	Decrement preset channel.
Slide digit thumbwheel to right	Increment preset channel.
Flick thumbwheel to left	Increment preset channel by value proportionate to flick velocity. Should animate rotation through channels if possible.
Flick thumbwheel to right	Decrement preset channel by value proportionate to flick velocity. Should animate rotation through channels if possible.
CLEAR button pressed	Clear channel assignment and display N/A.
BACK button pressed	Invoke Scan-Group-Add-Channel-10 page.
NEXT button pressed	Invoke Scan-Group-Add-Confirm page.
HOME key pressed	Return to Scan-Group-Function page.

The Scan-Group-Add-Confirm page shall allow the operator to confirm the changes made to the scan group should be saved. The page is depicted in Figure 80 and the page's Action/Event table is contained in Table 38.

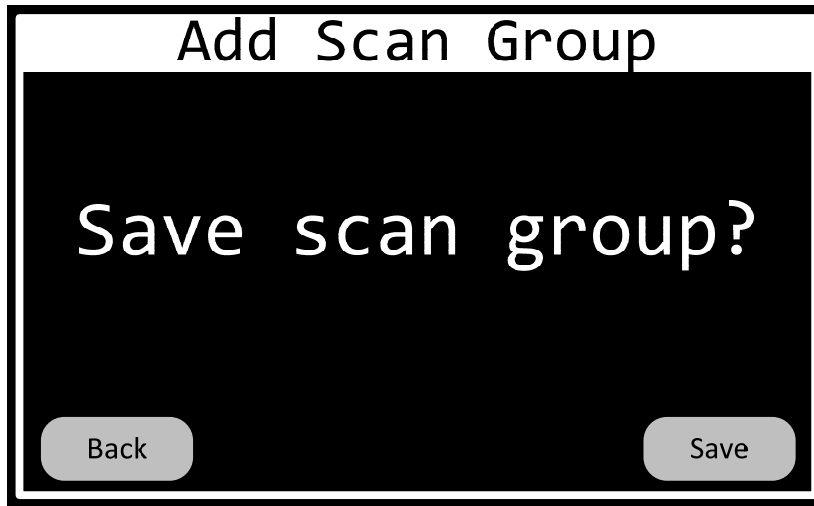


Figure 80 Scan-Group-Add-Confirm Page

Table 38 Scan-Group-Add-Confirm Page Actions

Event	Action
BACK button pressed	Invoke Scan-Group-Add-Channel-10 page.
SAVE button pressed	Save scan group and invoke Scan-Group-Function page.
HOME key pressed	Return to Scan-Group-Function page.

6.4.2.9.2 Change Scan Group

The Scan-Group-Change pages shall allow the operator to modify the properties of an existing scan group in a transceiver's scan group list. These pages are mostly the same as the "add scan group" pages and will not be duplicated here. The differences from the "add scan group" pages are:

- The page titles shall be "Change Scan Group" rather than "Add Scan Group".
- The Scan-Group-Add-Number page shall limit selection of scan groups to those that are programmed rather than those that are not programmed.
- Scan groups for Motorola modules can be changed.

6.4.2.9.3 Delete Scan Group

The Scan-Group-Delete pages shall allow the operator to remove an existing scan group from a transceiver's group list. The page sequence is given below.

The first page in the sequence shall be the Scan-Group- Delete-Transceiver page. This page shall allow the operator to specify the transceiver from which the scan group will be deleted. Only transceivers installed in the system shall be selectable. The page is depicted in Figure 81 and the page's Action/Event table is contained in Table 39.

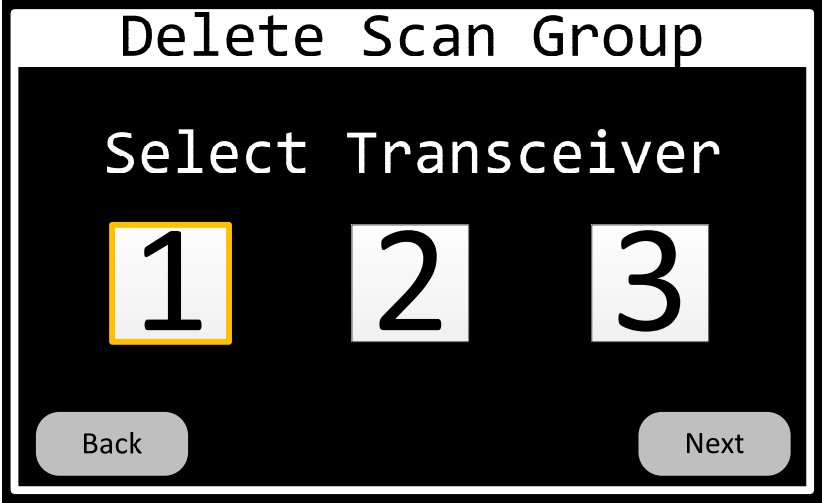


Figure 81 Scan-Group-Delete-Transceiver Page

Table 39 Scan-Group-Delete-Transceiver Page Actions

Event	Action
RT1 button pressed	Select transceiver 1 and invoke Scan-Group-Delete-Number page.
RT2 button pressed	Select transceiver 2 and invoke Scan-Group-Delete-Number page.
RT3 button pressed	Select transceiver 3 and invoke Scan-Group-Delete-Number page.
HOME key pressed	Return to Scan-Group-Function page.

The Scan-Group-Delete-Number page shall allow the operator to select the number of the scan group to delete. Only groups that are programmed shall be displayed. The page is depicted in Figure 82 and the page's Action/Event table is contained in Table 40.

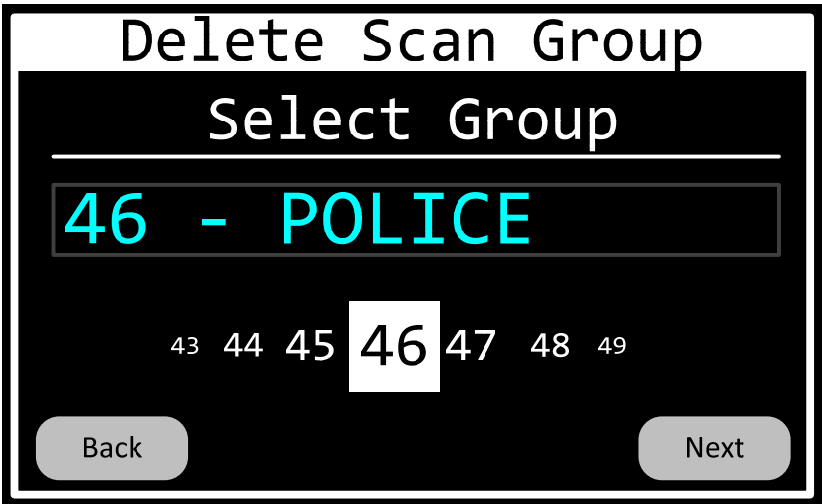


Figure 82 Scan-Group-Delete-Number Page

Table 40 Scan-Group-Delete-Number Page Actions

Event	Action
Value-Up button pressed	Increment group number.
Value-Down button pressed	Decrement group number.
Tap thumbwheel	Set group number to be value touched.
Slide thumbwheel to left	Decrement group number.
Slide thumbwheel to right	Increment group number.
Flick digit thumbwheel to left	Increment group number by value proportionate to flick velocity. Should animate rotation through groups if possible.
Flick digit thumbwheel to right	Decrement group number by value proportionate to flick velocity. Should animate rotation through groups if possible.
BACK button pressed	Invoke Scan-Group-Delete-Transceiver page.
NEXT button pressed	Invoke Scan-Group-Delete-Confirm page.
HOME key pressed	Return to Scan-Group-Function page.

The Scan-Group-Delete-Confirm page shall allow the operator to confirm the deletion of the scan group. The page is depicted in Figure 83 and the page's Action/Event table is contained in Table 41.

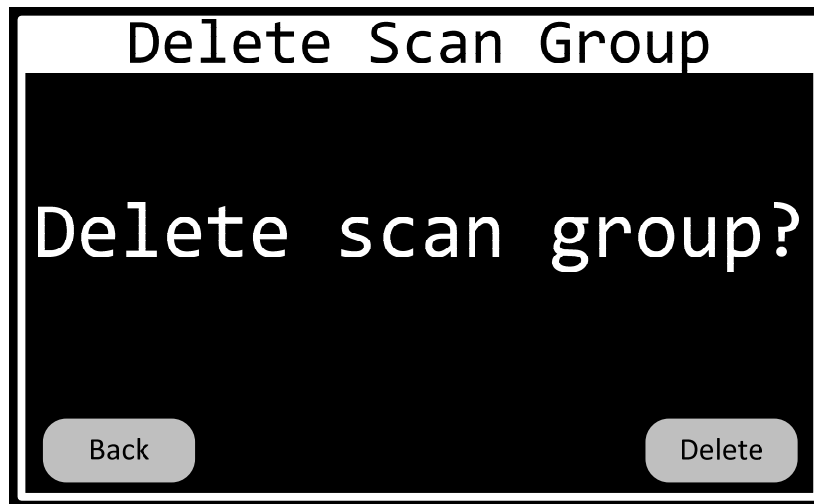


Figure 83 Scan-Group-Delete-Confirm Page

Table 41 Scan-Group-Delete-Confirm Page Actions

Event	Action
BACK button pressed	Invoke Scan-Group-Delete-Number page.
DELETE button pressed	Delete scan group and invoke Scan-Group-Function page.
HOME key pressed	Return to Scan-Group-Function page.

6.4.2.10 Encryption Key Programming

The Encryption-Key-Function dialog shall allow the operator to fill or delete encryption keys. The page is depicted in Figure 84 and the page's Action/Event table is contained in Table 1.

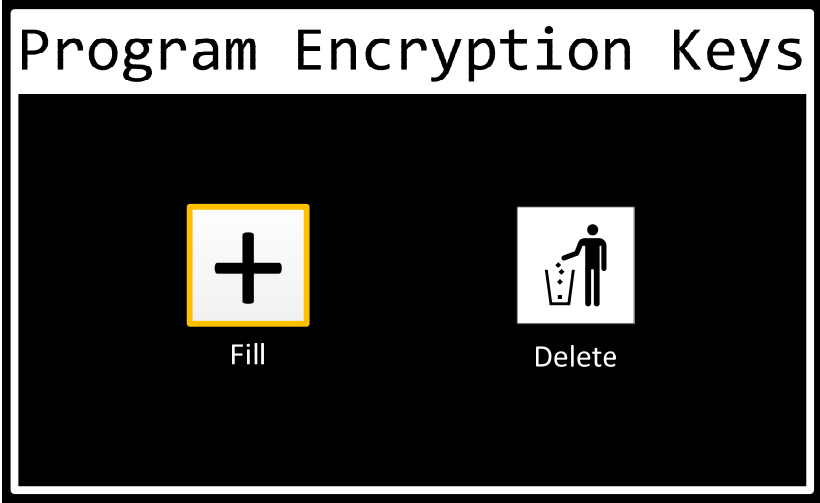


Figure 84 Encryption-Key-Function Dialog

Table 42 Encryption-Key-Function Dialog Actions

Event	Action
Fill button pressed	Invoke Encryption-Key-Fill page.
Delete button pressed	Invoke Encryption-Key-Delete page.
HOME key pressed	Return to Home page.

6.4.2.10.1 Fill Encryption Keys

The Encryption-Key-Fill pages shall allow the operator to load (fill) a transceiver's encryption keys.

The first page in the sequence shall be the Encryption-Key-Fill-Transceiver page. This page shall allow the operator to specify the transceiver for which the encryption keys will be added. Only transceivers installed in the system that support encryption shall be selectable. The page is depicted in Figure 85 and the page's Action/Event table is contained in Table 43.

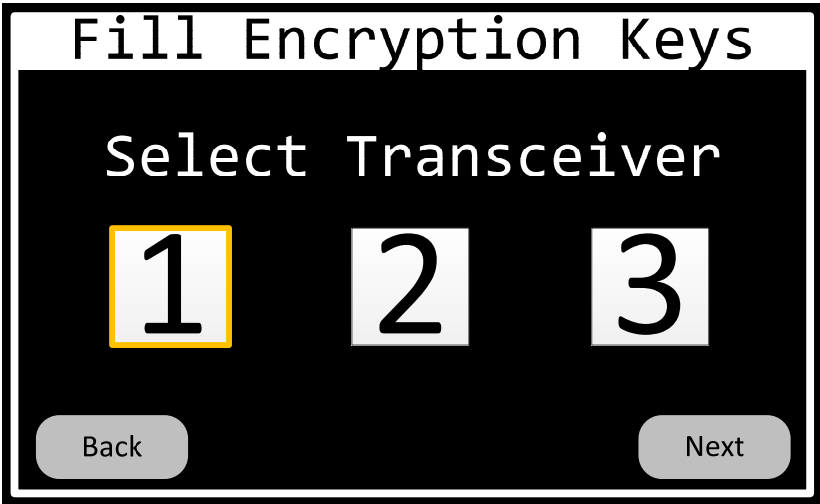


Figure 85 Encryption-Key-Fill-Transceiver Page

Table 43 Encryption-Key-Fill-Transceiver Page Actions

Event	Action
RT1 button pressed	Select transceiver 1 and invoke Encryption-Key-Fill-Action page.
RT2 button pressed	Select transceiver 2 and invoke Encryption-Key-Fill-Action page.
RT3 button pressed	Select transceiver 3 and invoke Encryption-Key-Fill-Action page.
BACK key pressed	Invoke Encryption-Key-Function page.
NEXT key pressed	Select focused transceiver and invoke Encryption-Key-Fill-Action page.
HOME key pressed	Return to Encryption-Key-Function page.

The Encryption-Key-Fill-Action page shall allow the operator to start and stop the key fill operation. Starting the operation implies configuring the key fill lines connected to the transceiver such that an external key fill device can communicate with the transceiver. The page is depicted in Figure 86 and the page's Action/Event table is contained in Table 44.

When the page is first loaded, the operation shall be considered in the Idle state and the Stop button shall be invisible or disabled. When the fill operation is underway, the Start button shall be invisible or disabled.

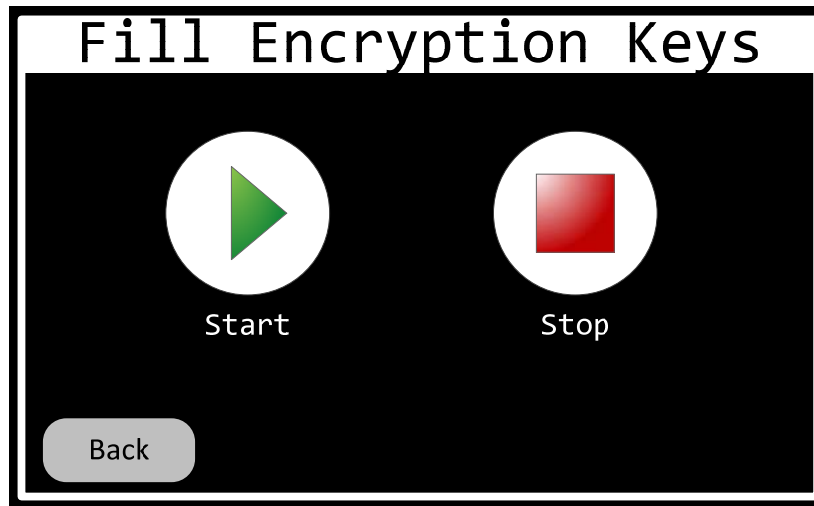


Figure 86 Encryption-Key-Fill-Action Page

Table 44 Encryption-Key-Fill-Action Page Actions

Event	Action
Start button pressed	Configure transceiver for key fill operation. Change state of operation to Underway. Hide or disable Start button. Hide or disable BACK button.
Stop button pressed	Configure transceiver for normal operation. Change state of operation to Idle. Show or enable Start button. Show or enable BACK button. Hide or disable Stop button.
BACK key pressed	Invoke Encryption-Key-Fill-Transceiver page.
HOME key pressed	Return to Encryption-Key-Function page. Sound error tone and ignore button press if key fill operation is underway.

6.4.2.10.2 Erase Encryption Keys

The Encryption-Key-Erase pages shall allow the operator to erase a transceiver's encryption keys.

The first page in the sequence shall be the Encryption-Key-Erase-Transceiver page. This page shall allow the operator to specify the transceiver for which the encryption keys will be erased. Only transceivers installed in the system that support encryption shall be selectable. The page is depicted in Figure 87 and the page's Action/Event table is contained in Table 45.

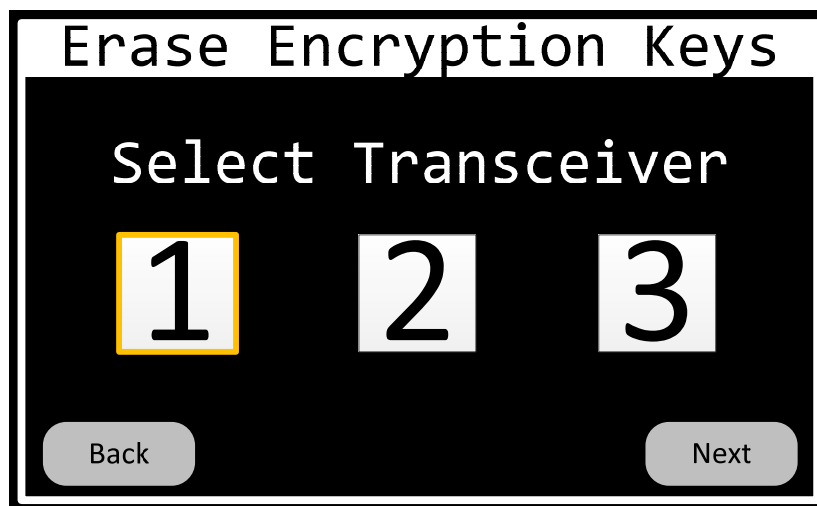


Figure 87 Encryption-Key-Erase-Transceiver Page

Table 45 Encryption-Key-Erase-Transceiver Page Actions

Event	Action
RT1 button pressed	Select transceiver 1 and invoke Encryption-Key-Erase-Action page.
RT2 button pressed	Select transceiver 2 and invoke Encryption-Key-Erase-Action page.
RT3 button pressed	Select transceiver 3 and invoke Encryption-Key-Erase-Action page.
BACK key pressed	Invoke Encryption-Key-Function page.
NEXT key pressed	Select focused transceiver and invoke Encryption-Key-Erase-Action page.
HOME key pressed	Return to Encryption-Key-Function page.

The Encryption-Key-Erase-Action page shall allow the operator to carry out the key erase operation. The page is depicted in Figure 88 and the page's Action/Event table is contained in Table 46.

When the page is first loaded, the operation shall be considered in the Idle state and the Complete indicator shall be invisible. When the erase operation is underway, the Start button shall be disabled. When the operation is complete, the Start button shall be invisible and the Complete indicator shall be visible.

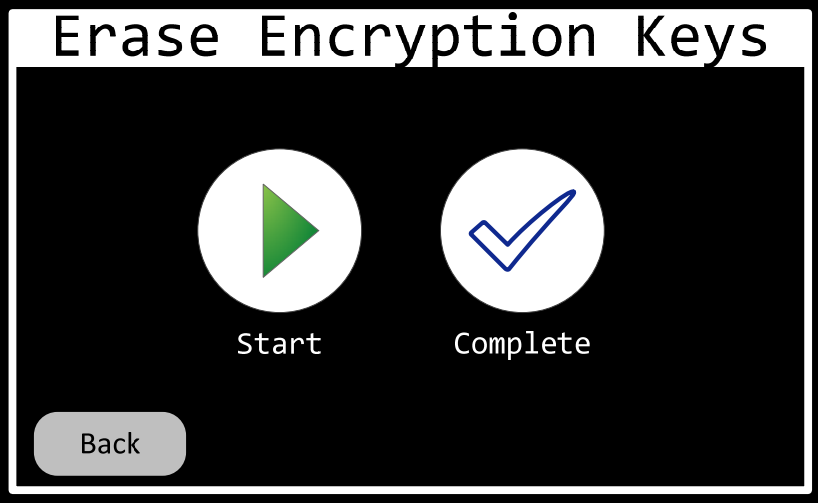


Figure 88 Encryption-Key-Erase-Action Page

Table 46 Encryption-Key-Erase-Action Page Actions

Event	Action
Start button pressed	Execute key erase operation. Disable Start button. Hide or disable BACK button.
Key erase completed	Hide Start button. Show Complete indicator. Show or enable BACK button.
BACK key pressed	Invoke Encryption-Key-Erase-Transceiver page.
HOME key pressed	Return to Encryption-Key-Function page. Sound error tone and ignore button press if key erase operation is underway.

6.4.2.11 Configure Transceiver

The System-Configuration-Xcvr pages shall allow the operator to load a transceiver's configuration via an external tool, such as Motorola CPS or Cobham FCT.

The first page in the sequence shall be the System-Configuration-Xcvr-Transceiver page. This page shall allow the operator to specify the transceiver for which the configuration will be loaded. Only transceivers installed in the system shall be selectable. The page is depicted in Figure 89 and the page's Action/Event table is contained in Table 47.

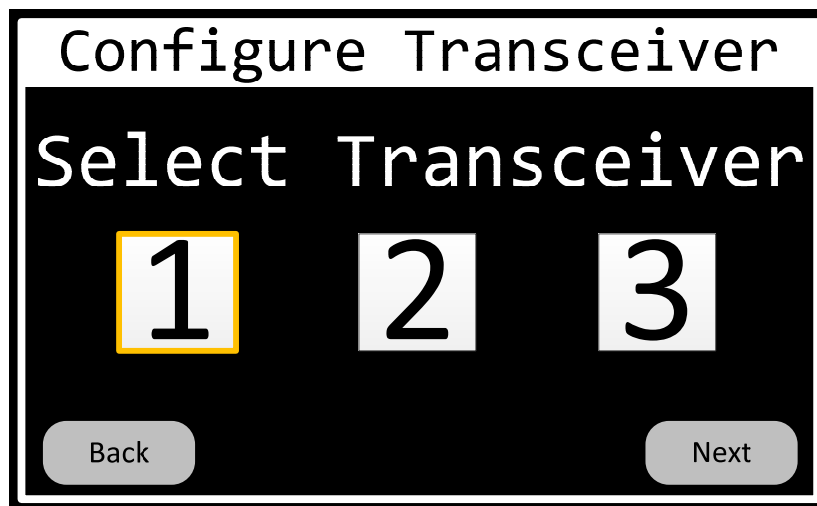


Figure 89 System-Configuration-Xcvr-Transceiver Page

Table 47 System-Configuration-Xcvr-Transceiver Page Actions

Event	Action
RT1 button pressed	Select transceiver 1 and invoke System-Configuration-Xcvr-Action page.
RT2 button pressed	Select transceiver 2 and invoke System-Configuration-Xcvr-Action page.
RT3 button pressed	Select transceiver 3 and invoke System-Configuration-Xcvr-Action page.
HOME key pressed	Return to Home page.

The System-Configuration-Xcvr-Action page shall allow the operator to start and stop the transceiver configuration operation. Starting the operation implies configuring the signals connected to the transceiver such that an external application can communicate with the transceiver. The page is depicted in Figure 90 and the page's Action/Event table is contained in Table 48.

When the page is first loaded, the operation shall be considered in the Idle state and the Stop button shall be invisible or disabled. When the configuration operation is underway, the Start button shall be invisible or disabled.

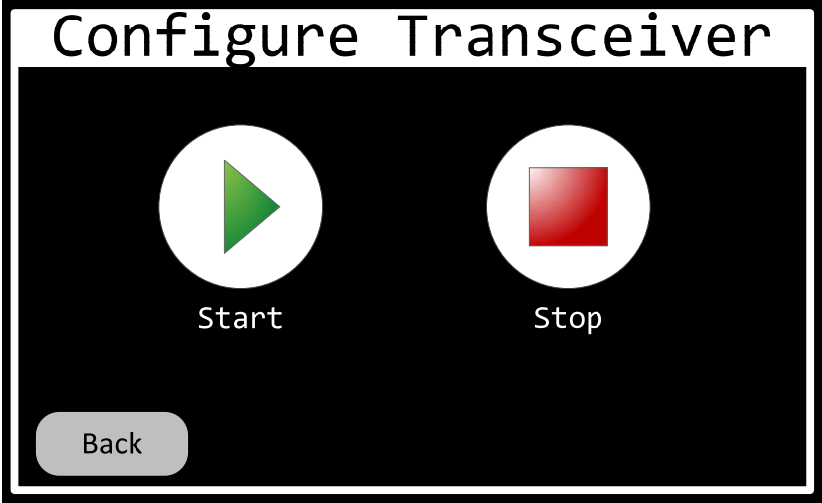


Figure 90 System-Configuration-Xcvr-Action Page

Table 48 System-Configuration-Xcvr-Action Page Actions

Event	Action
Start button pressed	Configure transceiver for configuration operation. Change state of operation to Underway. Hide or disable Start button. Hide or disable BACK button.
Stop button pressed	Configure transceiver for normal operation. Change state of operation to Idle. Show or enable Start button. Show or enable BACK button. Hide or disable Stop button.
BACK key pressed	Invoke System-Configuration-Xcvr-Transceiver page.
HOME key pressed	Return to System-Configuration-Function page.

6.4.3 REUSABLE COMPONENTS

The following sections describe data entry components designed to allow consistent data entry throughout the system. This includes components for all the common quantities, such as frequencies, sub-audible tones, NAC codes, etc.

6.4.3.1 Channel Number Entry

The Channel-Number-Entry dialog shall allow the operator to input preset channel numbers. Preset channel numbers are integers ranging from 0 to 1024. The operator enters a channel number using the virtual keypad. Digits keys on the keypad shall be touchable directly, or selectable via the cursor/value controls. An entry can be cleared (restarted) by pressing the “C” button. Entry shall be completed by pressing the “Ok” button. The Channel-Number-Entry dialog is depicted in Figure 91.

Figure 91 Channel-Number-Entry Dialog

6.4.3.2 Talk Group Entry

The Talk-Group-Entry dialog shall allow the operator to input Talk Group identifiers. Talk Group identifiers are 16-bit integers ranging from 0 to 65535. The Talk-Group-Entry dialog is depicted in Figure 92.

Figure 92 Talk-Group-Entry Dialog

6.4.3.3 Frequency Entry

The Frequency-Entry dialog shall allow the operator to input frequencies. Frequencies may range from 29.7 MHz to 960.0 MHz. The operator enters a frequency using the virtual keypad. Digits keys on the

keypad shall be touchable directly, or selectable via the cursor/value controls. An entry can be cleared (restarted) by pressing the “C” button. Entry shall be completed by pressing the “Ok” button. The Frequency-Entry dialog is depicted in Figure 93.

Figure 93 Frequency-Entry Dialog

6.4.3.4 Tone Entry

The Tone-Entry dialog shall allow the operator to input sub-audible tones. Both CTCSS (PL) and DCS (DPL) tones shall be supported. Valid values for these tones are described in Appendix A. CTCSS tones shall be displayed using their EIA code. DCS tones shall be displayed as a 3-digit number, padded with a leading zero if required. Tones shall be selectable by touching them directly, or via the cursor/value controls. A tone can be cleared (removed) by pressing the “None” tab. Entry shall be completed by pressing the “Ok” button. The Tone-Entry dialog is depicted in Figure 94.

Figure 94 Tone-Entry Dialog CTCSS

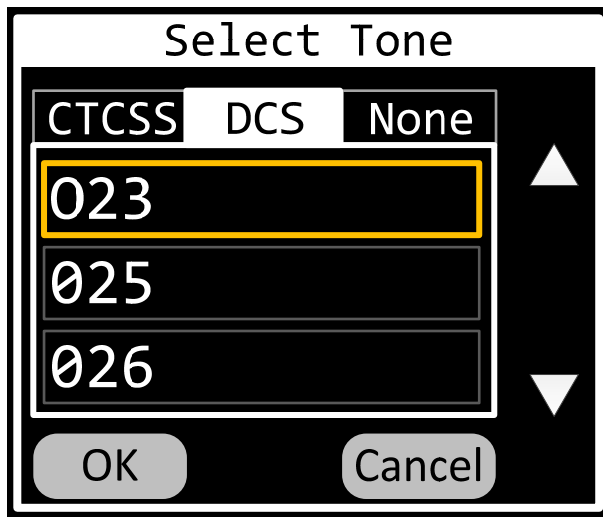


Figure 95 Tone-Entry Dialog DCS

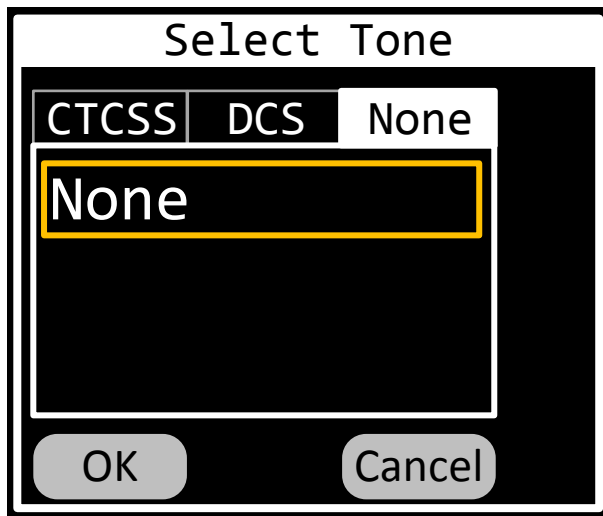


Figure 96 Tone-Entry Dialog No Tone

APPENDIX A SUB-AUDIBLE TONES

A.1 CTCSS TONE CODE TABLE

Table 49 CTCSS Tones

WED Code	Tone Freq. (Hz)	EIA Code		WED Code	Tone Freq. (Hz)	EIA Code
1	67.0	XZ		34	173.8	6A
2	71.9	XA		35	179.9	6B
3	74.4	WA		36	186.2	7Z
4	77.0	XB		37	192.8	7A
5	79.7	WB		38	203.5	M1
6	82.5	YZ		41	210.7	M2
7	85.4	YA		42	218.1	M3
8	88.5	YB		43	225.7	M4
11	91.5	ZZ		44	233.6	M5
12	94.8	ZA		45	241.8	M6
13	97.4	ZB		46	250.3	M7
14	100.0	1Z		47	229.1	9Z
15	103.5	1A		48	150.0	
16	107.2	1B		51	69.4	WZ
17	110.9	2Z		52	159.8	
18	114.8	2A		53	165.5	
21	118.8	2B		54	171.3	
22	123.0	3Z		55	177.3	
23	127.3	3A		56	183.5	
24	131.8	3B		57	189.9	
25	136.5	4Z		58	196.6	
26	141.3	4A		61	199.5	
27	146.2	4B		62	206.5	8Z
28	151.4	5Z		63	254.1	0Z
31	156.7	5A				
32	162.2	5B				
33	167.9	6Z				

A.2 DCS TONE CODE TABLE

Table 50 DCS Tones

023		174		411		703
025		205		412		712
026		212		413		723
031		223		423		731
032		225		431		732
036		226		432		734
043		243		445		743
047		244		446		754
051		245		452		
053		246		454		
054		251		455		
065		252		462		
071		255		464		
072		261		465		
073		263		466		
074		265		503		
114		266		506		
115		271		516		
116		274		523		
122		306		526		
125		311		532		
131		315		546		
132		325		565		
134		331		606		
143		332		612		
145		343		624		
152		346		627		
155		351		631		
156		356		632		
162		364		654		
165		365		662		
172		371		664		

APPENDIX B ARINC 716 SPECIFICATION FOR 8.33 KHZ TUNING

B.1 8.33 KHZ TUNING

Table 51 Control Head Tuning in 8.33 KHz Mode

Frequency (MHz)	Channel Spacing (kHz)	Channel Name
118.0000	25	118.000
118.0000	8.33	118.005
118.0083	8.33	118.010
118.0167	8.33	118.015
118.0250	25	118.025
118.0250	8.33	118.030
118.0333	8.33	118.035
118.0417	8.33	118.040
118.0500	25	118.050
118.0500	8.33	118.055
118.0583	8.33	118.060
118.0667	8.33	118.065
118.0750	25	118.075
118.0750	8.33	118.080
118.0833	8.33	118.085
118.0917	8.33	118.090
118.1000	25	118.100
.	.	
.	.	
.	.	
136.9750	25	136.975
136.9750	8.33	136.980
136.9833	8.33	136.985
136.9917	8.33	136.990

EMPTY PAGE 84

COBHAM

Cobham Avionics, Communications

END OF DOCUMENT

COBHAM

Cobham Avionics, Communications