


D-Link Quick Installation Guide

This product works with the following operating system software: **Windows XP, Windows 2000, Windows Me, Windows 98SE**

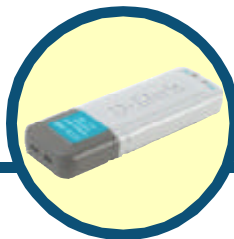

DWL-G122
AirPlus G™
High Speed 802.11g
USB Wireless Adapter

Before You Begin

You must have at least the following:

- You will need a computer with an available USB port to connect the DWL-G122 Wireless USB adapter.
- At least a 500 MHz processor and 62 MB of memory
- An 802.11b or 802.11g Access Point (for Infrastructure Mode) or another 802.11b or 802.11g wireless adapter (for Ad-Hoc; Peer-to-Peer networking mode.)
- Properly installed and working USB Controller.

Check Your Package Contents

These are the items included with your DWL-G122 purchase:



DWL-G122 Wireless USB Adapter



CD-ROM (containing Drivers, Manual and Warranty)



Cradle

If any of the above items are missing, please contact your reseller.

DWL-G122 Overview

USB Connector

Connects to Yours desktop or laptop computerl.

Link/Power LED

Link - Indicates that the DWL-G122 is properly installed in the computer.
Power - blinks when data is being transmitted through the wireless connection.

Antenna

Used to wirelessly connect to 802.11b or 802.11g networks.

1

Insert the D-Link CD-ROM Into Your Computer

Turn on the computer and **Insert** the **D-Link AirPuls G™ DWL-G122 Driver CD** in the CD-ROM drive.

The step-by-step instructions that follow are shown in **Windows XP**. The steps and screens are similar for the other Windows operating systems



Do **NOT** install the **DWL-G122 USB Adapter** into your computer before installing the driver software on the **D-Link CD!**

The Install Screen will appear.

Click Install Drivers




If the CD Autorun function does not automatically start on your computer , type **"D:\Driver\Setup.exe"** If it does start, proceed to the next screen.




The letter **"D"** represents the letter of the CD-ROM drive. Your CD-ROM drive may be a different drive letter.


Click Next

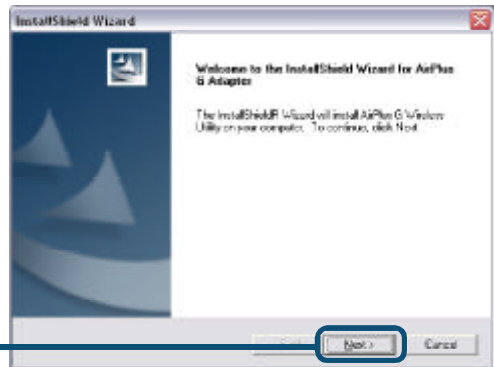

Click Next

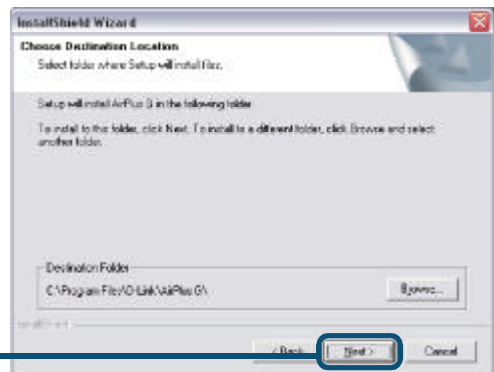


Click Next

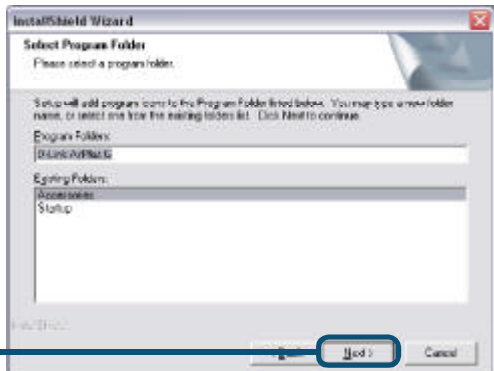



Click Continue Anyway

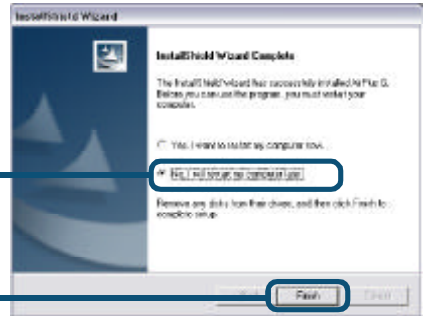

Click No, I will restart
my computer later

Click Finish

Shut down your computer

2

Installing the DWL-G122 Wireless USB Adapter to Your Laptop Computer

A. Make sure to turn off your computer.



B. Insert one end of the USB Adapter into the provided USB cable and plug the other end into your computer's USB Port.


3

Restart Your Computer


When you restart your computer this **Found New Hardware Wizard (Windows XP)** screen will appear:

Select **Install the software automatically (Recommended)**


Click **Next**

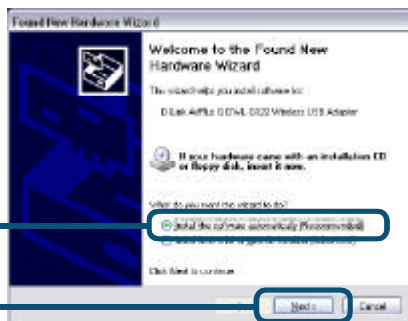


Windows XP will automatically load the driver files.

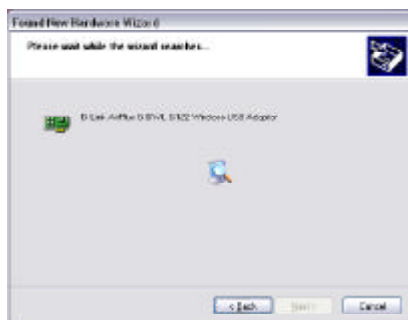

Click **Continue Anyway**

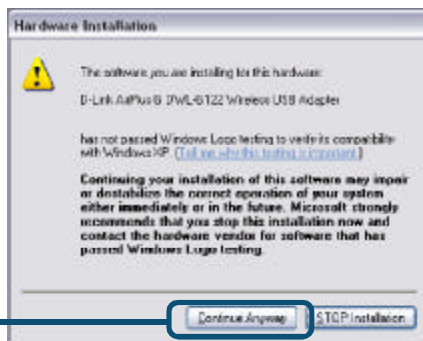


Click **Finish**

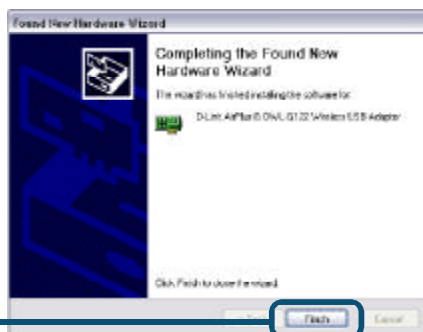




For Windows 2000, this Digital Signature Not Found screen may appear during the installation.

Click Yes to continue the installation

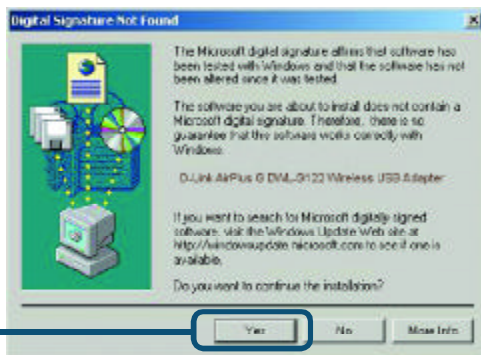

For Windows Me and 98, this screen may appear.

Click Yes to finalize the installation

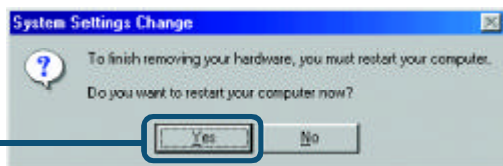


4

Your Installation is Complete!

After you've continued in Windows XP (or after the computer restarts in the other Windows operating systems), the D-Link AirPlus DWL-G122 **Configuration Utility** will automatically start and the utility icon will appear in the bottom right hand corner of the desktop screen (systray). **If this icon appears GREEN, then you have successfully installed the DWL-G122, are connected to a wireless network and are ready to communicate!**

Double-click the utility icon to use the configuration utility.



Appendix

Using the Configuration Utility


A. Status: Displays the MAC Address of the Access Point that is associated with the DWL-G122.

B. SSID: The Service Set Identifier is the name assigned to the wireless network. The factory SSID setting is set to **default**.

C. Frequency: Displays the current frequency used by the adapter.

D. Wireless Mode: The factory setting is set to Infrastructure. Ad-Hoc mode is used for peer-to-peer networking.

E. Encryption: Displays the current encryption status of the wireless connection.

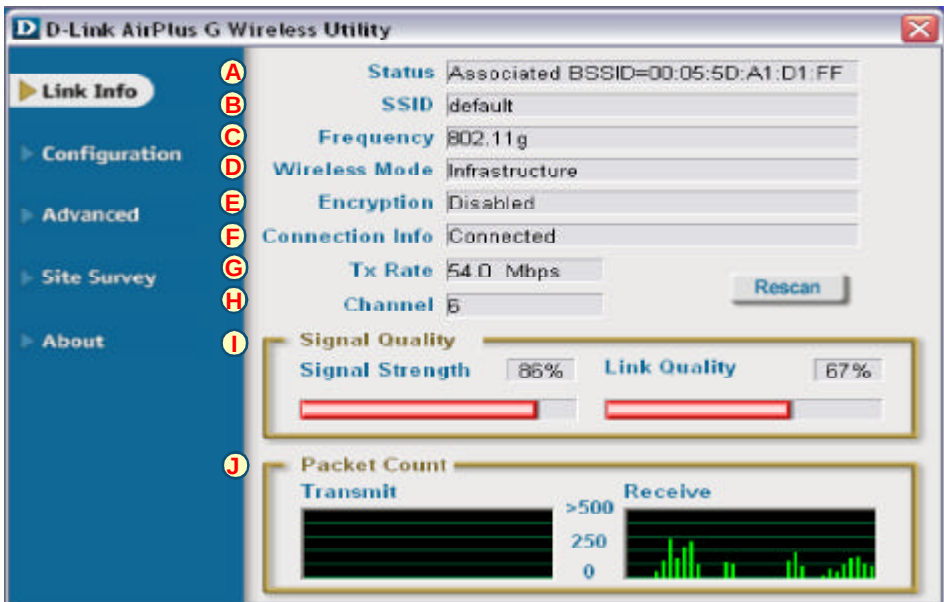

F. Connection Info: Displays connected or authenticated information.

G. TxRate: The default setting is **Auto**; meaning, TxRate settings are automatically determined by the DWL-G122 depending on the distance from the access point.

H. Channel: Displays the channel information. By default, the channel is set to 6. Please note that the DWL-G122 will automatically adjust channel depending on the Access Point.

I. Signal Strength / Link Quality: Represents the wireless signal quality and strength between the access point and the DWL-G122. The percentage coincides with the graphical bar.

J. Packet Count: Graphically displays the statistics of data transmitted and received.

Appendix

Using the Configuration Utility (cont.)

K. SSID: The Service Set Identifier is the name assigned to the wireless network. The factory SSID setting is set to **default**. Make changes here to match the SSID on existing Wireless Router or Access Point.

L. Wireless Mode: The factory setting is set to **Infrastructure**. Ad-Hoc mode is used for peer-to-peer networking.

M. Data Encryption: The default setting is set to **Disabled**. The adapter supports WEP when encryption is enabled.

D-Link AirPlus G Wireless Utility

Link Info

Configuration

Advanced

Site Survey

About

SSID default

Wireless Mode Infrastructure

Data Encryption Disabled

Authentication Open

Key Length 64 bits (40+24) - 10 Hexadecimal digits

IEEE802.1X Disabled

1 *****

2 *****

3 *****

4 *****

Authentication Config

IP Settings

Apply

N. Authentication: You can specify the authentication mode for the wireless network. The default setting is set to **Open Authentication**.

O. Key Length: When encryption is enabled, you will have the option to specify the level and key format of the encryption used. Select the appropriate Key Index : 1-4 and enter ACSII or hexadecimal digits in the appropriate field.

P. IEEE 802.1x: When encryption is enabled, you will have the option to specify the level and key format of the encryption used. Select the appropriate Key Index : 1-4 and enter ACSII or hexadecimal digits in the appropriate field.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

"D-Link declare that DWL-G122 (802.11g/2.4GHz Wireless USB Adapter) is limited in CH1~CH11 by specified firmware controlled in USA."

The equipment has been SAR-evaluated and authorized for use in laptops / notebook