

ADAM-6051 16-channel Digital I/O w/Counter Module

The ADAM-6051W is a high-density I/O module built-in a 10/100 based-T interface for seamless Ethernet connectivity. It provides 12 digital input, 2 digital output, and 2 counter (10 KHz) channels with 5000V_{RMS} Isolating protection. All of the Digital Input channels support input latch function for important signal handling. Mean while, these DI channels allows to be used as 1 KHz counter. Opposite to the intelligent DI functions, the Digital Output channels also support pulse output function.

ADAM-6051W

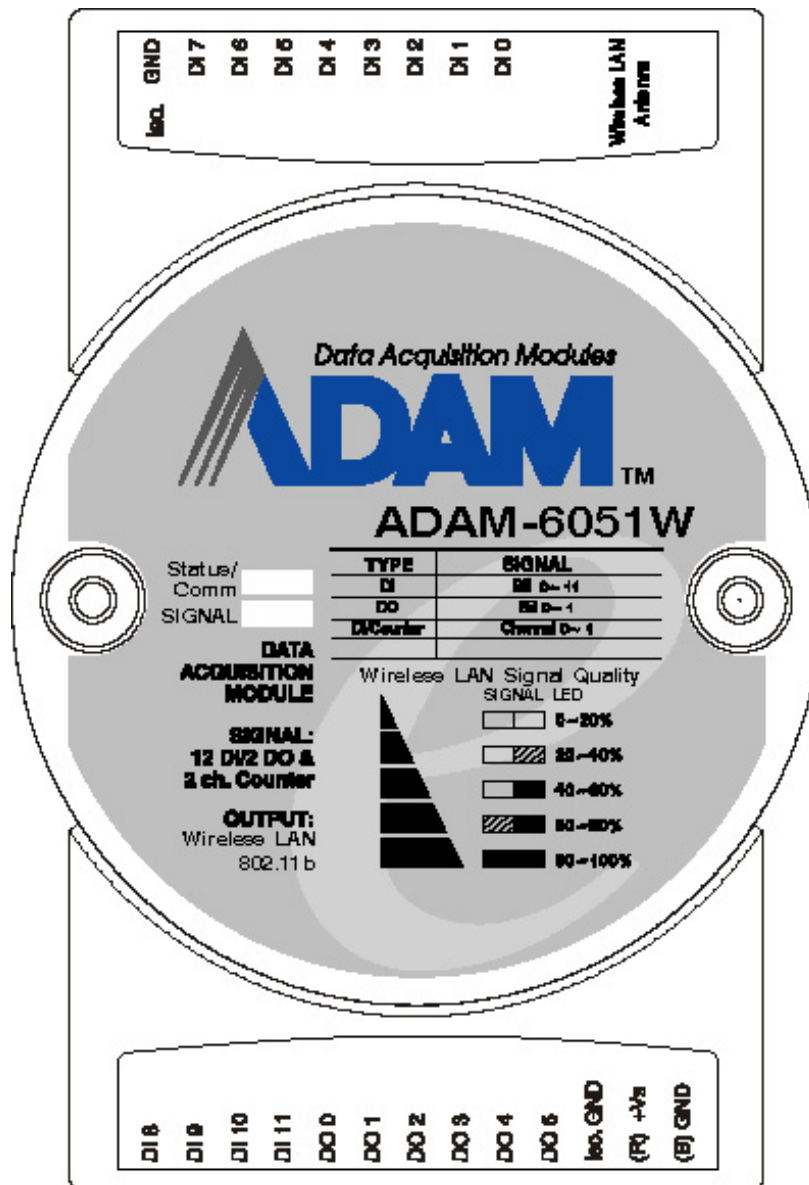


Figure 1: ADAM-6051W 16-channel Digital I/O w/Counter Module

ADAM-6051W Specification

- **Channel:** 16
- **I/O type:** 12DI / 2DO / 2Counter
- **Digital Input:** Dry Contact:
 - Logic level 0: Close to GND
 - Logic level 1: OpenWet Contact:
 - Logic level 0: +3 V_{max}
 - Logic level 1: +10 to 30 V
- **Digital Output:** Open Collector to 30 V, 200 mA max. load
- **Optical Isolation:** 5000V_{RMS}
- **Counter:**
 - Maximum Count: 4,294,967,285(32 bit)
 - Input frequency: 0.3 ~ 1000 Hz max. (frequency mode), 5000 Hz max. (counter mode)
 - Isolation voltage: 2500 V_{RMS}
 - Mode: Counter (Up/Down, Bi-direction), Frequency
- **Communication:** Wireless LAN IEEE802.11b
- **Power Consumption:** 2 W (Typical)

Application Wiring

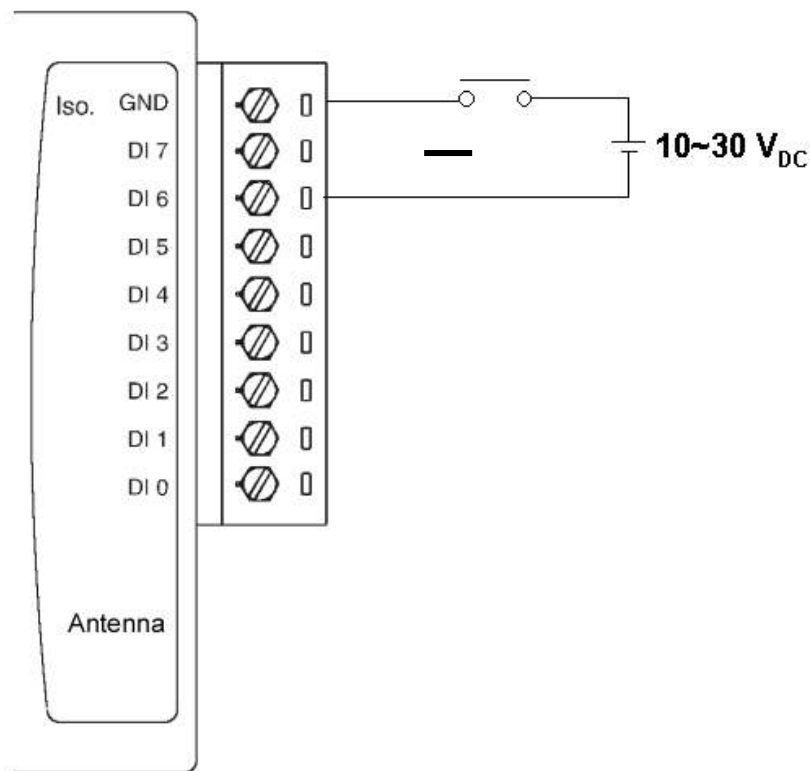


Figure 2: ADAM-6051W Digital Input (Wet Contact) Wiring

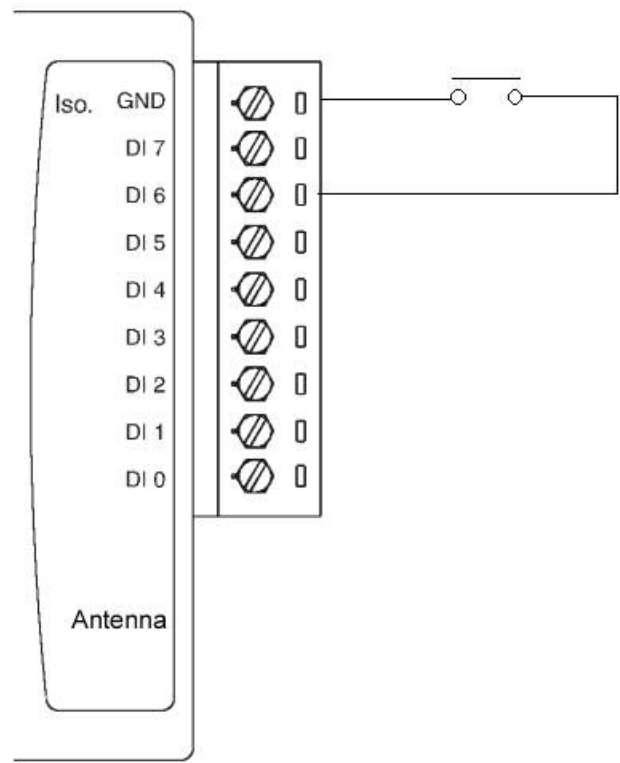


Figure 3: ADAM-6051W Digital Input (Wet Contact) Wiring


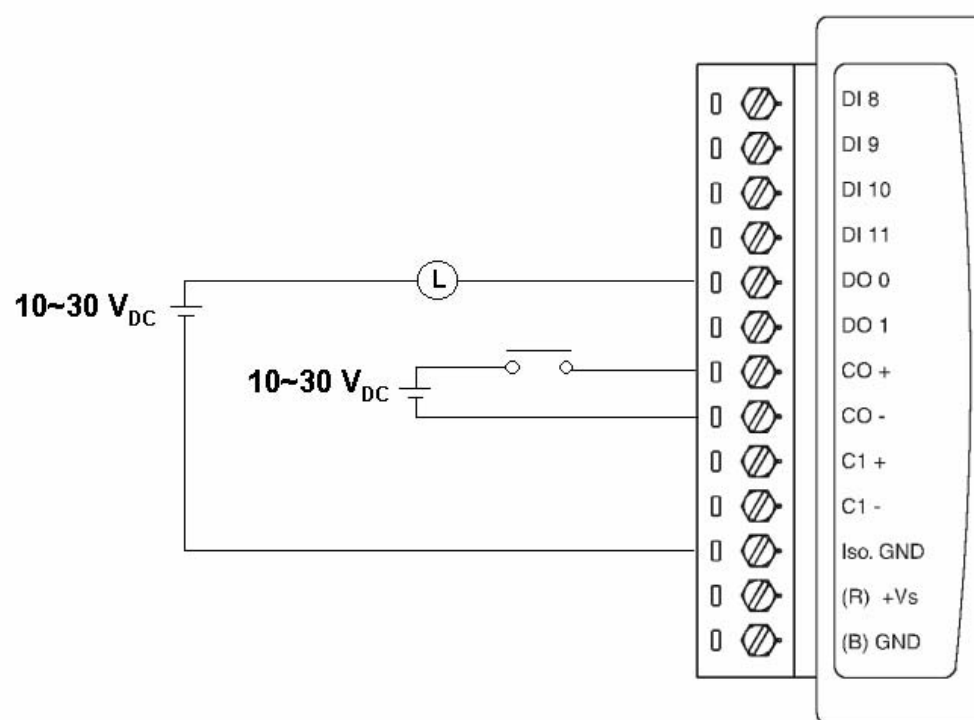


Figure 4: ADAM-6051W Digital Output and Counter Wiring


System Architecture

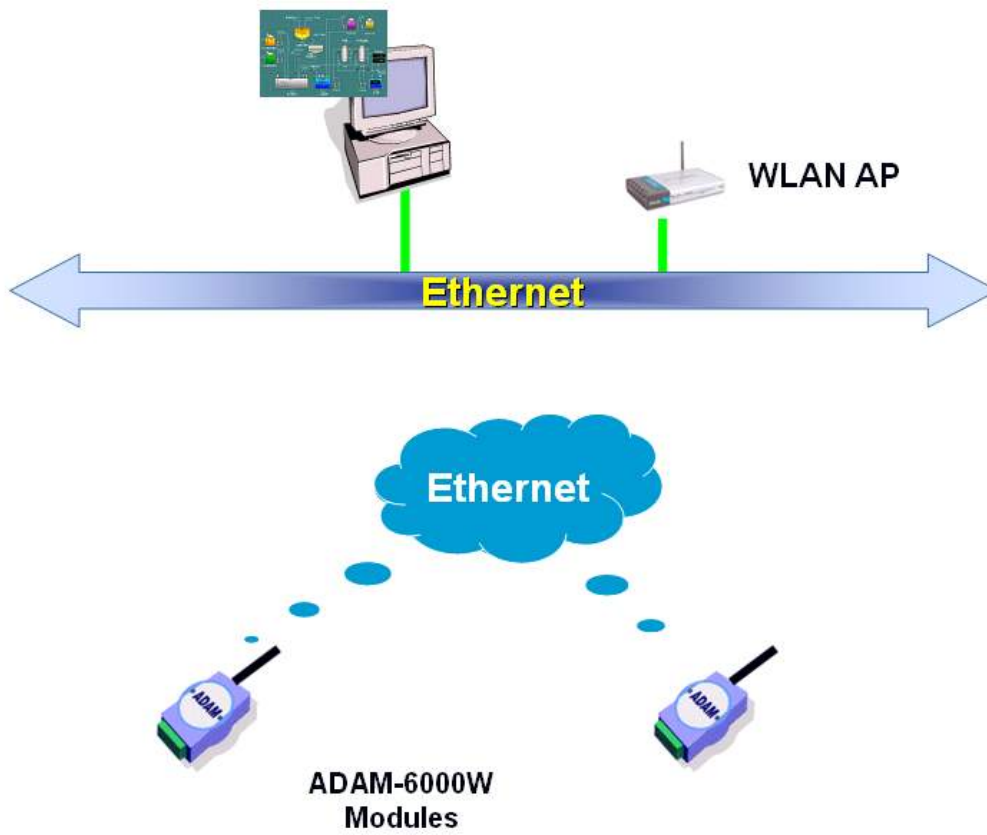


ADAM-6051W Configuration

Network Configuration

Step 1 : Please open the ADAM-5000TCP-6000 utility software. The utility software will automatically scan the ADAM-6000 modules. Please wait for the ADAM-6051W being found by utility software.

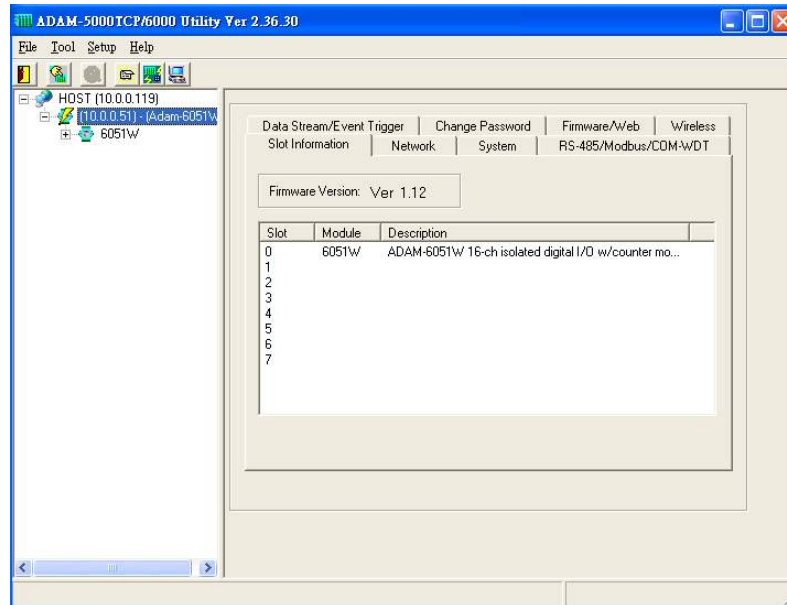

Step 2 : Please go the “Network” page to change the IP address/Subnet Address/Default Gateway of ADAM-6051W module to be compatible with user’s existing network and set the host idle time out value (the ADAM-6000 module can only accept 8 connection from host station. Any host station doesn’t request the communication with this ADAM-6000 module over the time out setting, the connection of this host station will be released for the other stations).

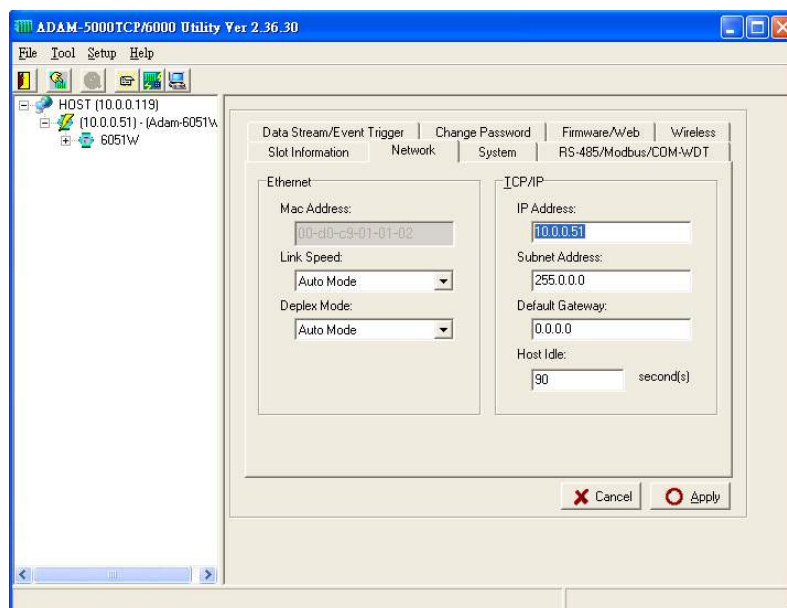


press “Apply” to download the new IP address to ADAM-6051W module (the default password for the changing configuration is “00000000”).




Step 3 : Re-configuring the IP address of the configuration PC to be the original setting (compatible with user's existing network) then re-start the utility software. The software will automatically search the ADAM-6051W module again.


Step 4 : Go to the "Wireless" page to set the wireless LAN configuration.

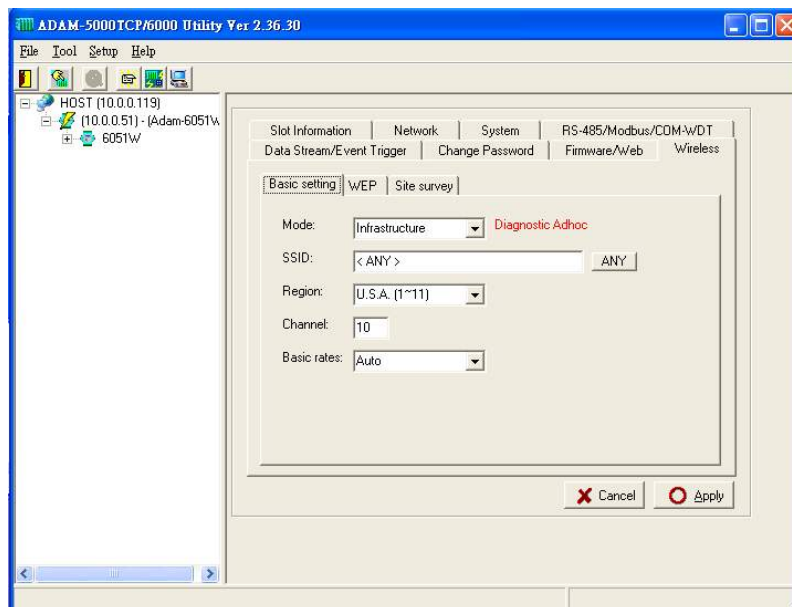


Please set the wireless LAN mode to be "Infrastructure" or "Adhoc" based on exact system architecture.

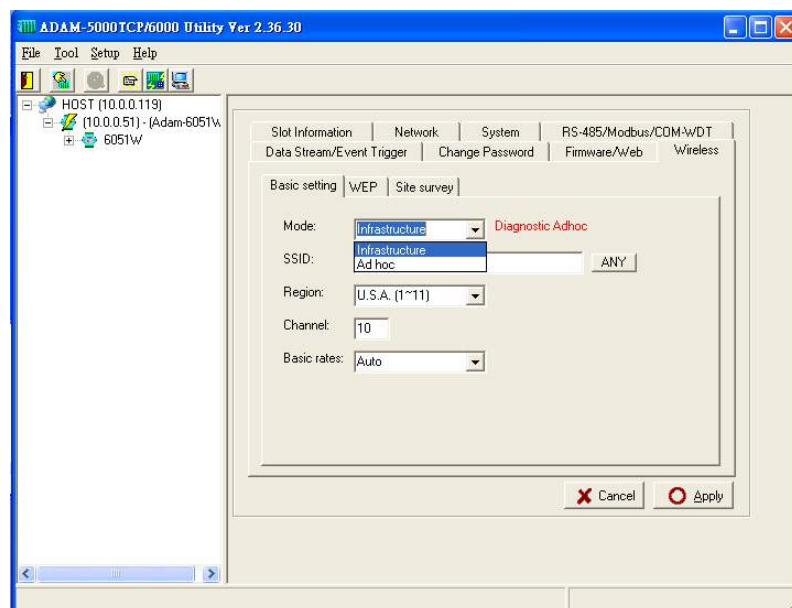


Please assign the SSID for the specific wireless AP to be connected with ADAM-6000W modules. User can place “ANY” key to let the ADAM-6000W modules to automatically search the existing wireless AP. Or key in the specific SSID to assign the dedicated AP (strongly recommending to set up the dedicated SSID, it can guarantee the communication of ADAM-6000W modules to be stable)

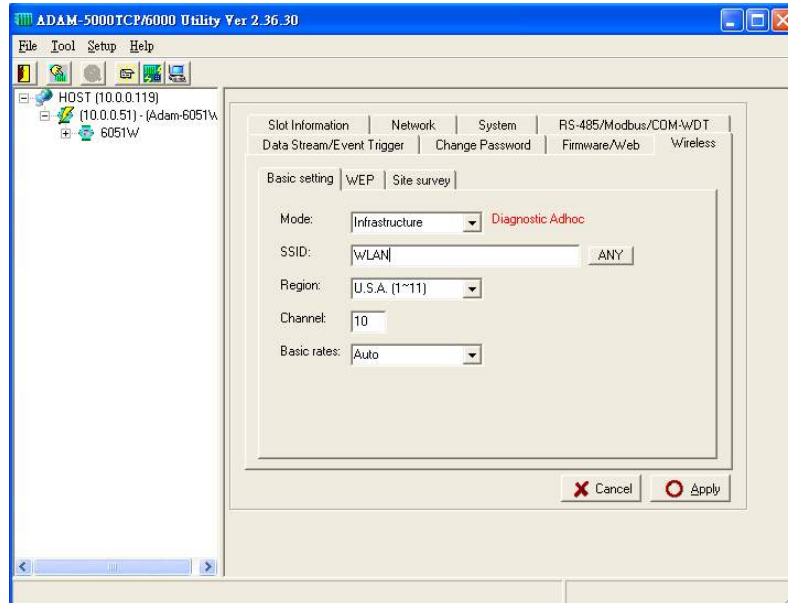


For assigning the dedicated wireless LAN AP, user can use the site survey function to check the existing AP in connection environment. Please go to the “Site Survey” page.

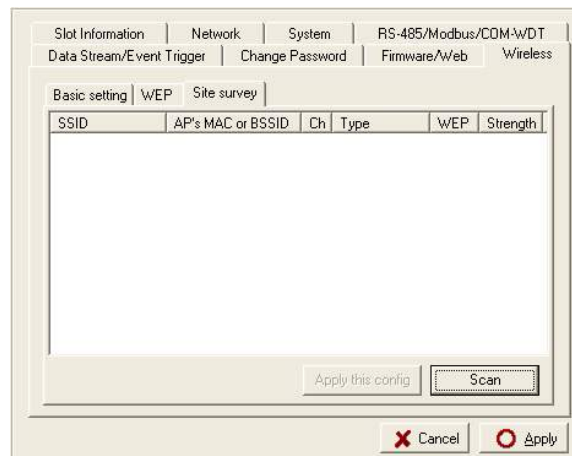



Press “Scan” bottom to search the existing AP.

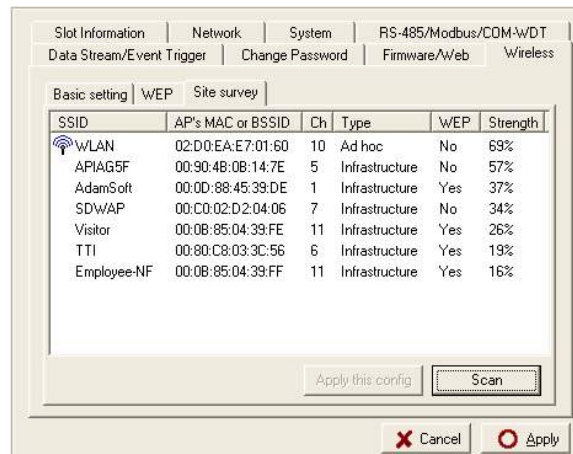


Selecting the AP in the searching result table.

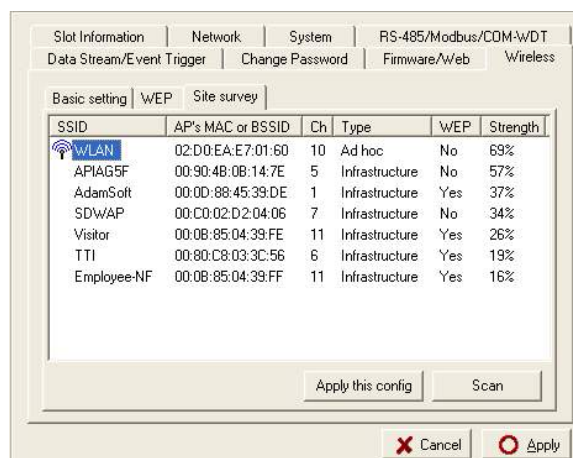


Press "Apply" bottom to accept the AP to finish the set up action.

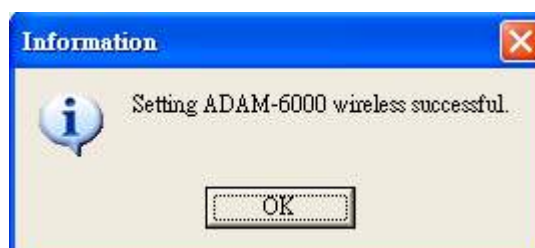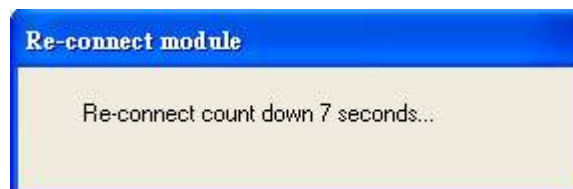


Please select the region for your area.

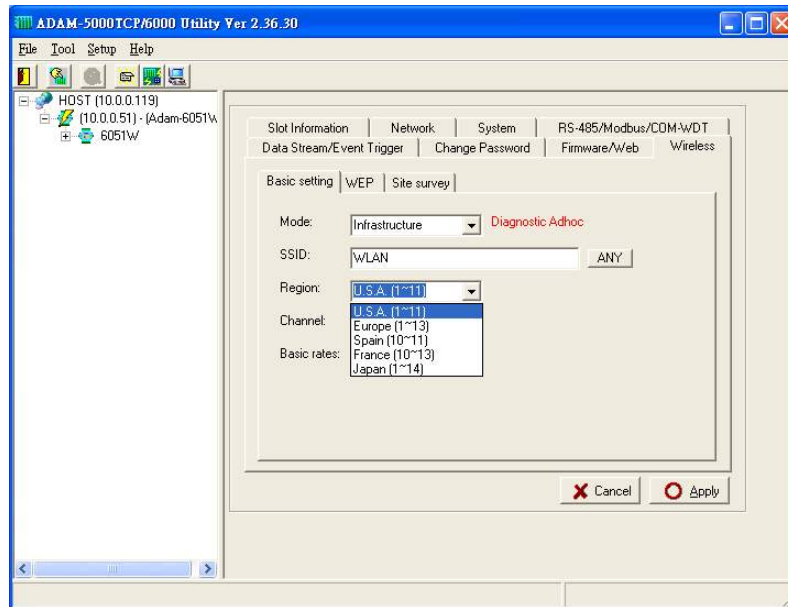

Setting the used channel, the channel number must be included in the channel segment of your region.

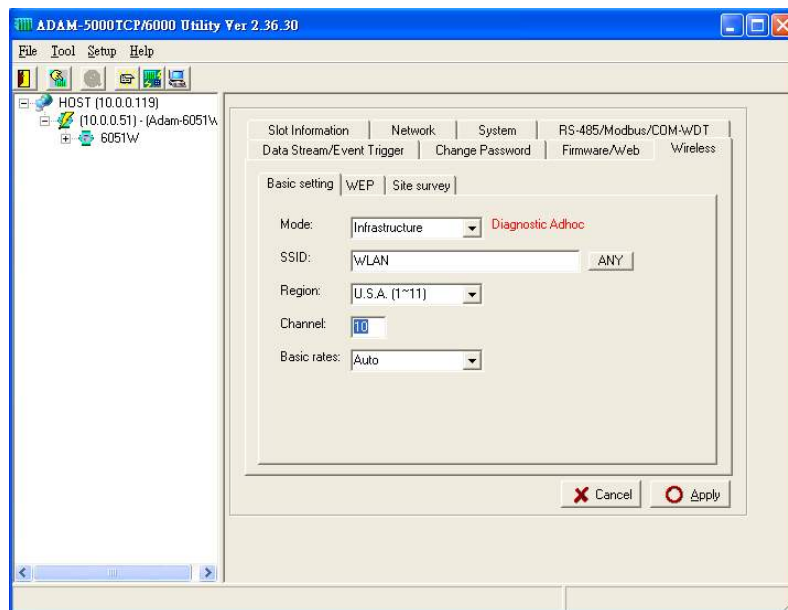


Please select the basic rate for the communication bandwidth.

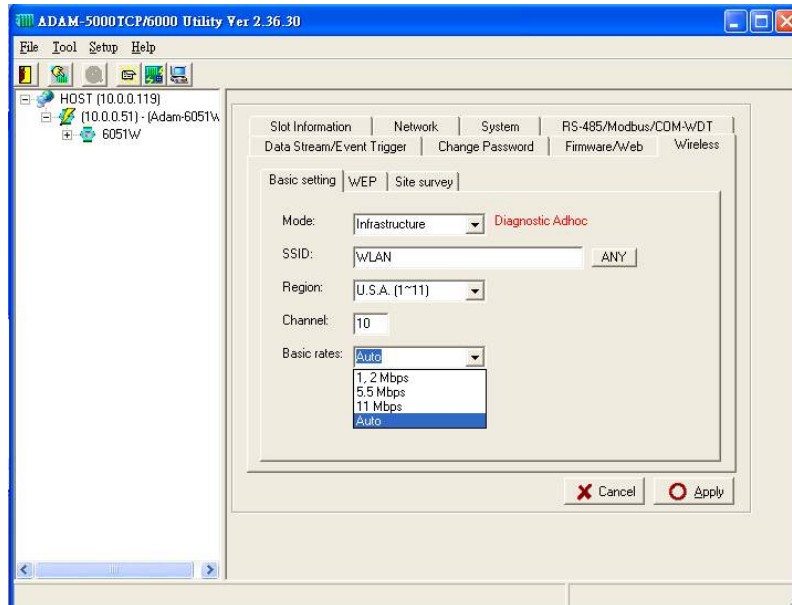


Press the “Apply” button to finish the set up work.

Step 5 : Configure the WEP security setting. Please go to the WEP page in “Wireless” of utility software.

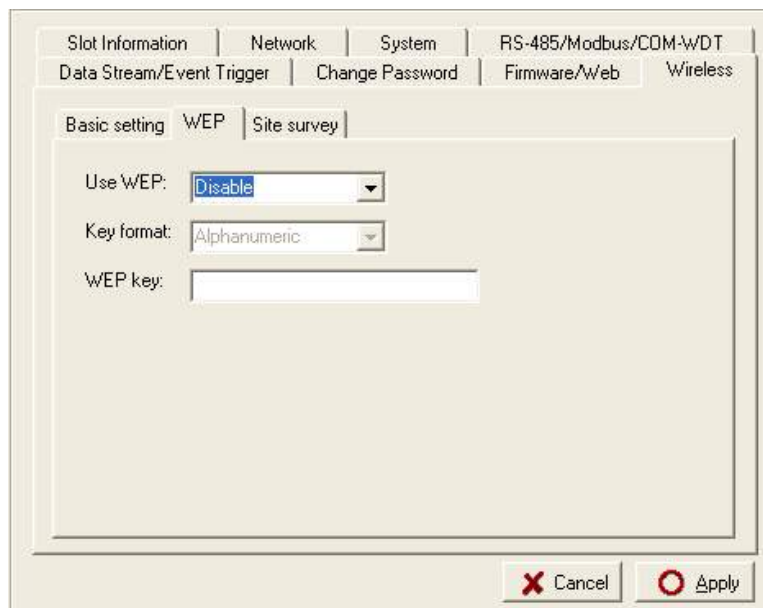


If user want to use the WEP security function, please enable the WEP function in “User WEP” then select the Key format and key in the WEP key for this requirement.

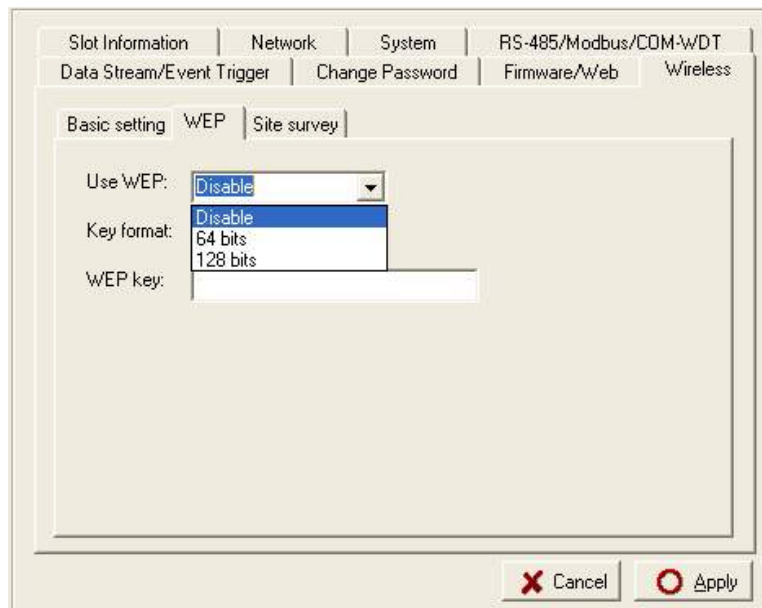

Step 6 : Data Stream Configuration

In addition to TCP/IP communication protocol, ADAM-6000 supports UDP communication protocol to regularly broadcast data to specific host PCs.

Click the tab of Data Stream, then configure the broadcasting interval and the specific IP addresses which need to receive data from the specific ADAM-6000 I/O module. This UDP Data Stream function broadcasts up to 8 host PCs simultaneously, and the interval is user-defined from 50ms to 7 Days.

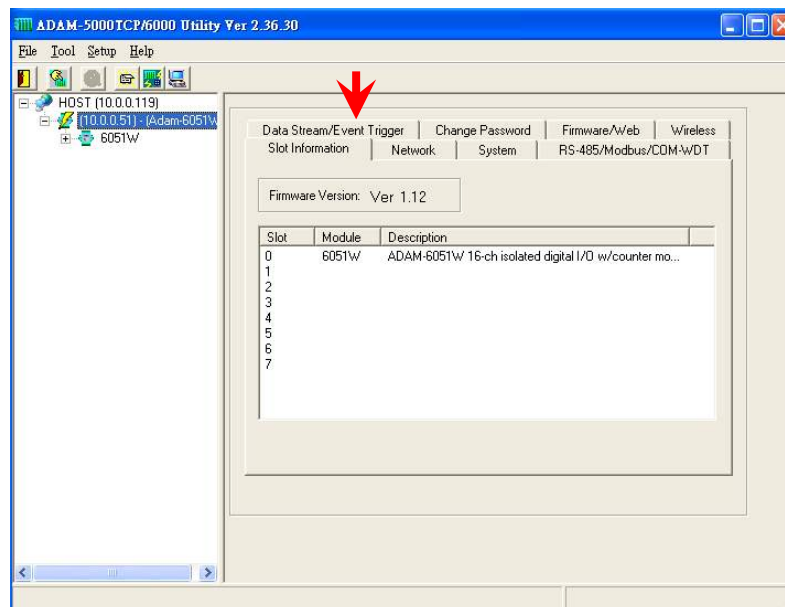

Please Enter the data streaming interval:

Days:	Hours:	Minutes:	Seconds:	mSeconds	
0	0	0	0	100	Update

To active hosts to accept the stream data:

0: ☐	255.255.255.255	Update	4: ☐	255.255.255.255	Update
1: ☐	255.255.255.255	Update	5: ☐	255.255.255.255	Update
2: ☐	255.255.255.255	Update	6: ☐	255.255.255.255	Update
3: ☐	255.255.255.255	Update	7: ☐	255.255.255.255	Update

Data Stream Monitoring

After finishing the configuration of Data Stream, you can select the item “Monitor Data Stream” in the function bar or click icon to call up operation display as below Figure.

IP Address: 172.18.1.194 Port: 5168 Start Stop


Receiving Stream Data:

Time	Count	Host	Data	Max	Min
At AM 09:23:04	Count=0	HOST (172.18.1.194) 6017	DO DATA:0000		
At AM 09:23:05	Count=1		CH00: Data:7fff	Max:8bf9	Min:7fff
At AM 09:23:06	Count=2		CH01: Data:7fff	Max:8ae6	Min:7fff
At AM 09:23:08	Count=3		CH02: Data:7fff	Max:89c9	Min:7fff
At AM 09:23:09	Count=4		CH03: Data:7fff	Max:88dd	Min:7fff
At AM 09:23:10	Count=5		CH04: Data:7fff	Max:9136	Min:7fff
At AM 09:23:11	Count=6		CH05: Data:7fff	Max:9064	Min:7fff
At AM 09:23:12	Count=7		CH06: Data:7fff	Max:8eee	Min:7fff
At AM 09:23:13	Count=8		CH07: Data:7fff	Max:8d17	Min:7fff
			Avg CH: Data:7fff	Max:b82c	Min:7fff

Select the IP address of the ADAM-6000 you want to read data, then click “Start ” button. The Utility software will begin to receive the stream data on this operation display.


Firmware/Web Page Configuration

Step 1 : Please go to the “Firmware/Web” configuration page

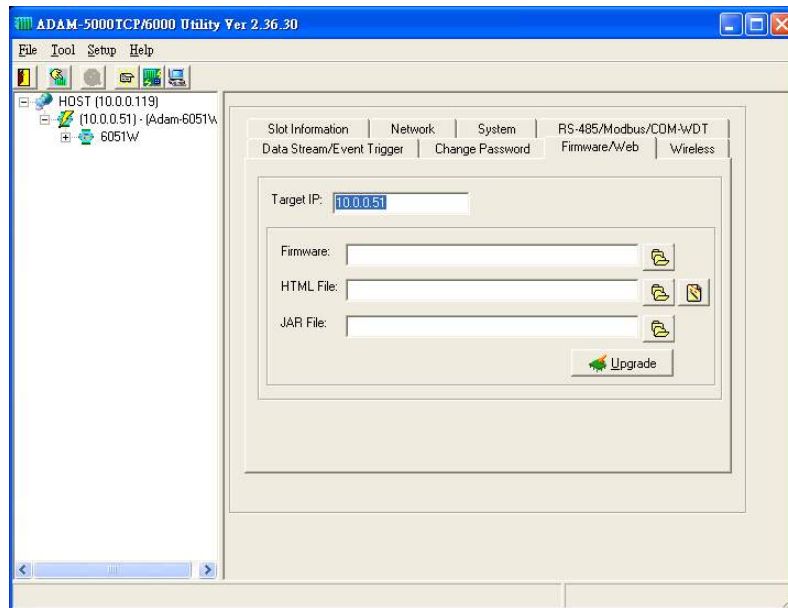

Step 2 : The ADAM-6000W modules support the configurable web page feature. Users don't have to learn the Java language to write the Java program to make the customized web page. Users can use the utility software to easily configure the web page that you want. Please follow the below instruction to configure the web page inside ADAM-6000W modules.

Press the web page configuration bottom.

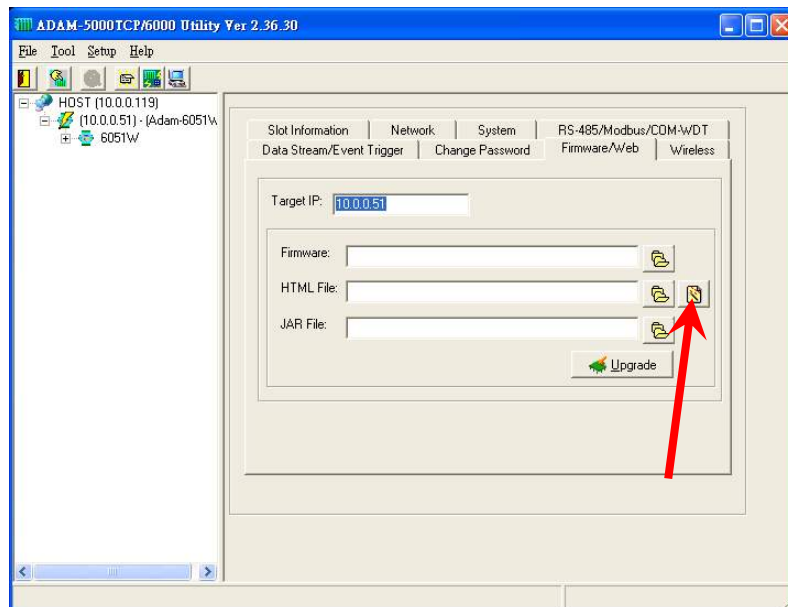

Key in the Tag Name of input channel.

The screenshot shows the 'ADAM-6051W Web Page' configuration window. The 'DI Group Msg' table is visible, with the 'Tag' column containing values from DI 0 to DI 11. The 'Desc' column for all entries is 'DI Channel 0'. The 'Status' column shows 'ON' for all entries, and the 'Log '0'' column shows red indicator lights.



	Tag	Desc	Status	Log '0'
[1]	DI 0	DI Channel 0	ON	
[2]	DI 1	DI Channel 0	ON	
[3]	DI 2	DI Channel 0	ON	
[4]	DI 3	DI Channel 0	ON	
[5]	DI 4	DI Channel 0	ON	
[6]	DI 5	DI Channel 0	ON	
[7]	DI 6	DI Channel 0	ON	
[8]	DI 7	DI Channel 0	ON	
[9]	DI 8	DI Channel 0	ON	
[10]	DI 9	DI Channel 0	ON	
[11]	DI 10	DI Channel 0	ON	
[12]	DI 11	DI Channel 0	ON	

Key in the description of input channel


The screenshot shows the 'ADAM-6051W Web Page' configuration window. The 'DI Group Msg' table is visible, with the 'Tag' column containing values from DI 0 to DI 11. The 'Desc' column for all entries is 'DI Channel 0'. The 'Status' column shows 'ON' for all entries, and the 'Log '0'' column shows red indicator lights. The 'Desc' field for the first row is highlighted.

	Tag	Desc	Status	Log '0'
[1]	DI 0	DI Channel 0	ON	
[2]	DI 1	DI Channel 0	ON	
[3]	DI 2	DI Channel 0	ON	
[4]	DI 3	DI Channel 0	ON	
[5]	DI 4	DI Channel 0	ON	
[6]	DI 5	DI Channel 0	ON	
[7]	DI 6	DI Channel 0	ON	
[8]	DI 7	DI Channel 0	ON	
[9]	DI 8	DI Channel 0	ON	
[10]	DI 9	DI Channel 0	ON	
[11]	DI 10	DI Channel 0	ON	
[12]	DI 11	DI Channel 0	ON	


Press the label bottom to configure the label description of input channel.

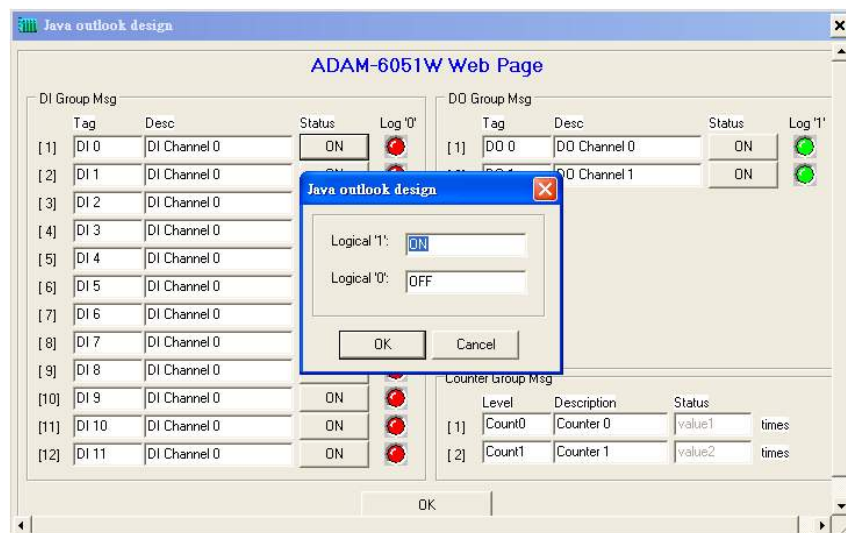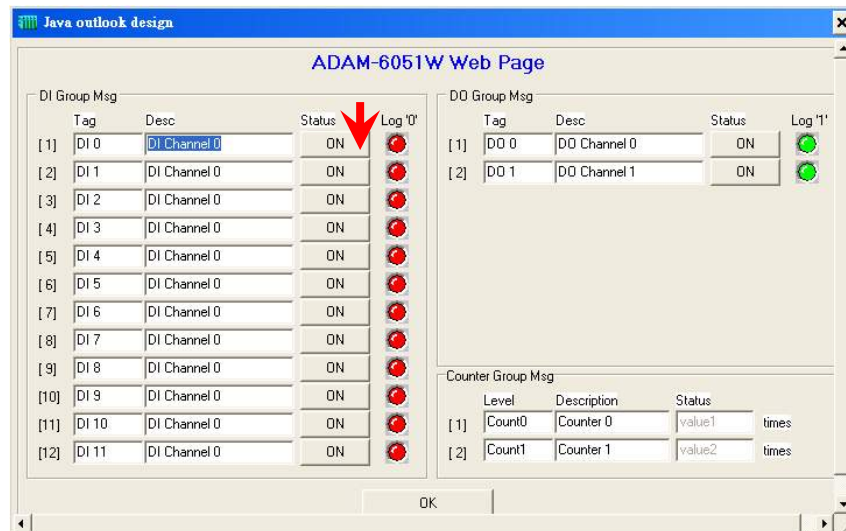



Key in the Tag Name of output channel

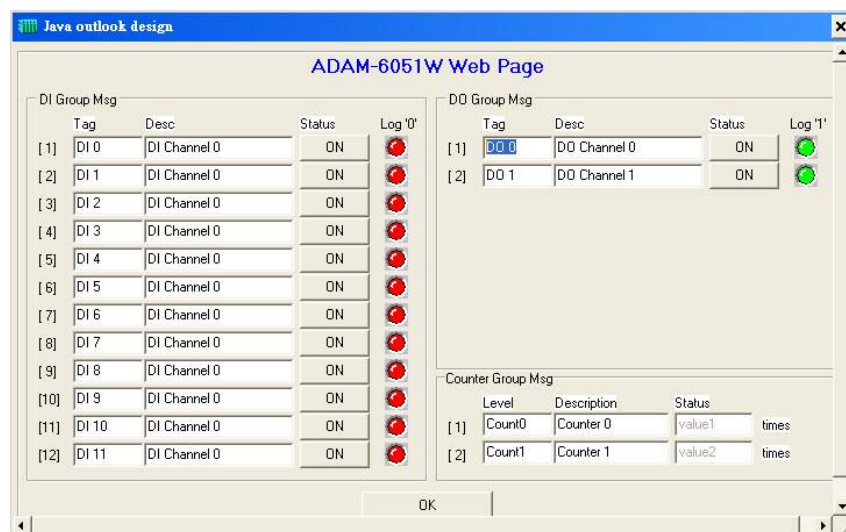

Key in the description of output channel

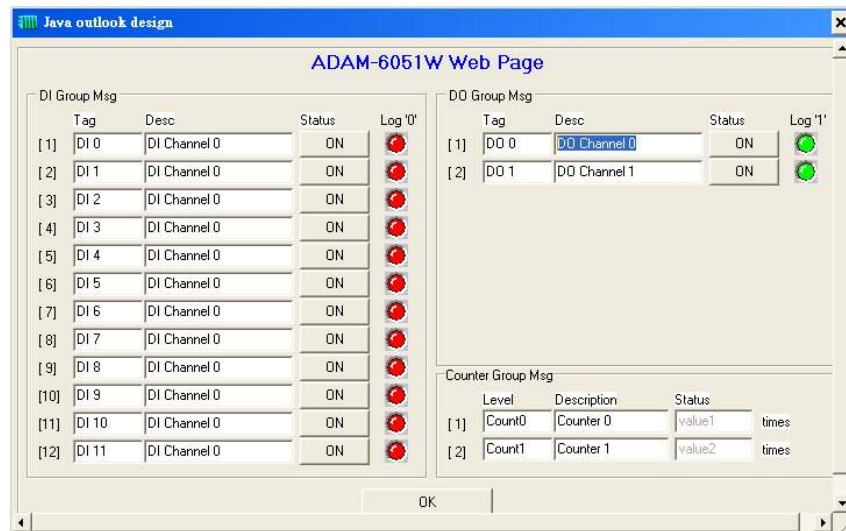

Press the label bottom to configure the label description of output channel

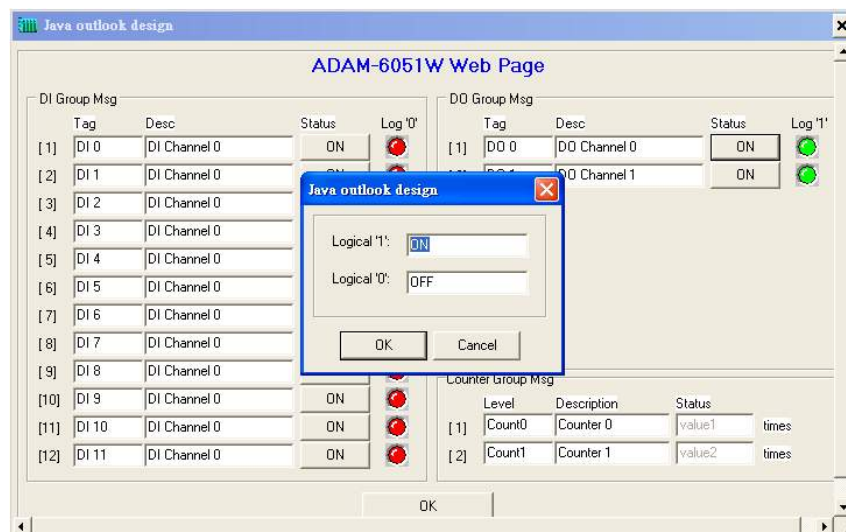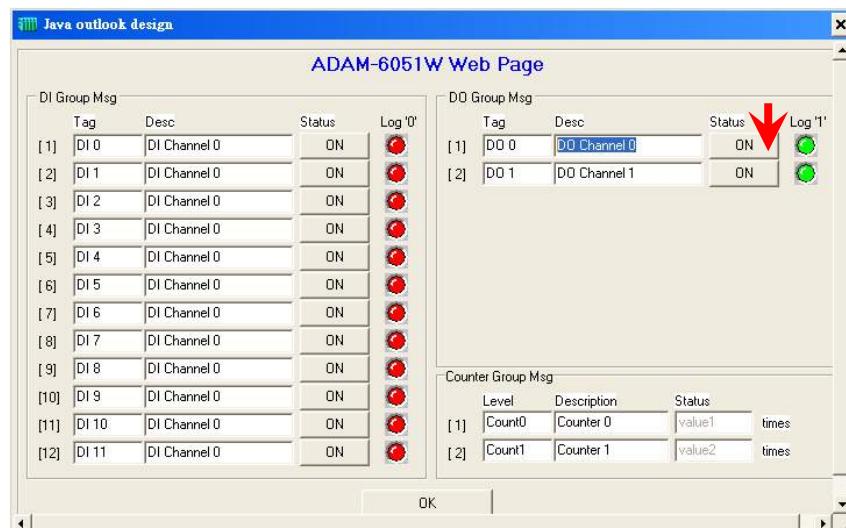

Key in the Tag Name of counter channel

Java outlook design

ADAM-6051W Web Page

DI Group Msg

	Tag	Desc	Status	Log '0'
[1]	DI 0	DI Channel 0	ON	
[2]	DI 1	DI Channel 0	ON	
[3]	DI 2	DI Channel 0	ON	
[4]	DI 3	DI Channel 0	ON	
[5]	DI 4	DI Channel 0	ON	
[6]	DI 5	DI Channel 0	ON	
[7]	DI 6	DI Channel 0	ON	
[8]	DI 7	DI Channel 0	ON	
[9]	DI 8	DI Channel 0	ON	
[10]	DI 9	DI Channel 0	ON	
[11]	DI 10	DI Channel 0	ON	
[12]	DI 11	DI Channel 0	ON	

DO Group Msg

	Tag	Desc	Status	Log '1'
[1]	DO 0	DO Channel 0	ON	
[2]	DO 1	DO Channel 1	ON	

Counter Group Msg

	Level	Description	Status	
[1]	Count0	Counter 0	value1	times
[2]	Count1	Counter 1	value2	times

OK

Key in the description of counter channel

Java outlook design

ADAM-6051W Web Page

DI Group Msg

	Tag	Desc	Status	Log '0'
[1]	DI 0	DI Channel 0	ON	
[2]	DI 1	DI Channel 0	ON	
[3]	DI 2	DI Channel 0	ON	
[4]	DI 3	DI Channel 0	ON	
[5]	DI 4	DI Channel 0	ON	
[6]	DI 5	DI Channel 0	ON	
[7]	DI 6	DI Channel 0	ON	
[8]	DI 7	DI Channel 0	ON	
[9]	DI 8	DI Channel 0	ON	
[10]	DI 9	DI Channel 0	ON	
[11]	DI 10	DI Channel 0	ON	
[12]	DI 11	DI Channel 0	ON	

DO Group Msg



	Tag	Desc	Status	Log '1'
[1]	DO 0	DO Channel 0	ON	
[2]	DO 1	DO Channel 1	ON	

Counter Group Msg


	Level	Description	Status	
[1]	Count0	Counter 0	value1	times
[2]	Count1	Counter 1	value2	times

OK



Click the title position to configure the page title description

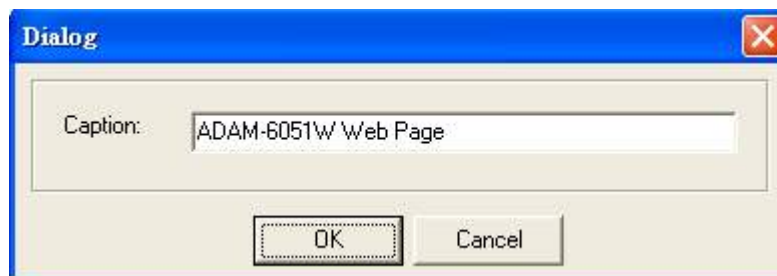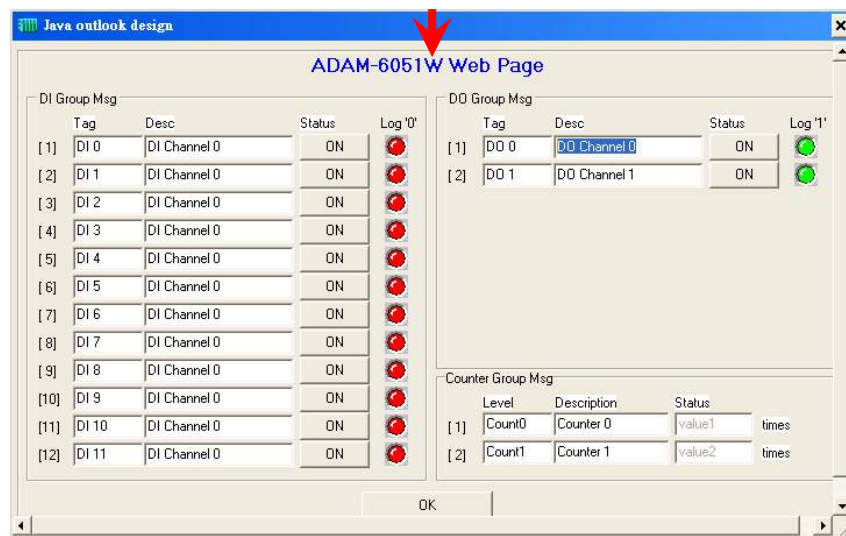


Please press "OK" after finishing all of the web page configuration.

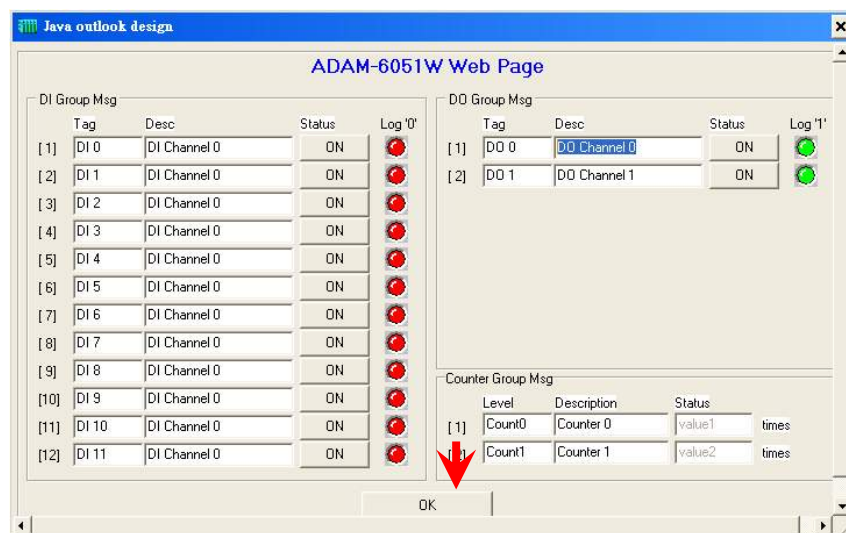

Press "Update" button to download the web page configuration into ADAM-6000W module. And system will save the configuration data as a file in C:\Programs\ADAM-5000TCP-6000 Utility\Program\Firmware\ADAM-6051W\ADAM6051W.html

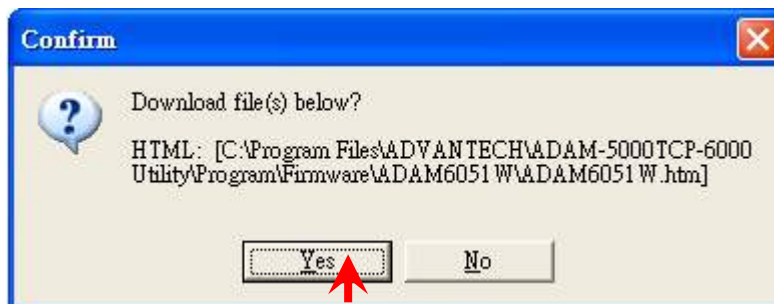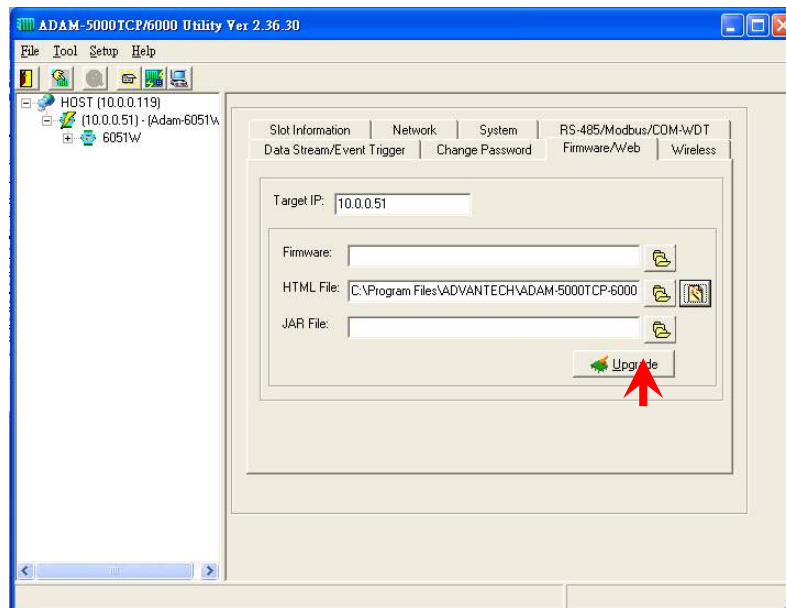

User can also retrieve the previous web page configuration file to download to ADAM-6000W Module.

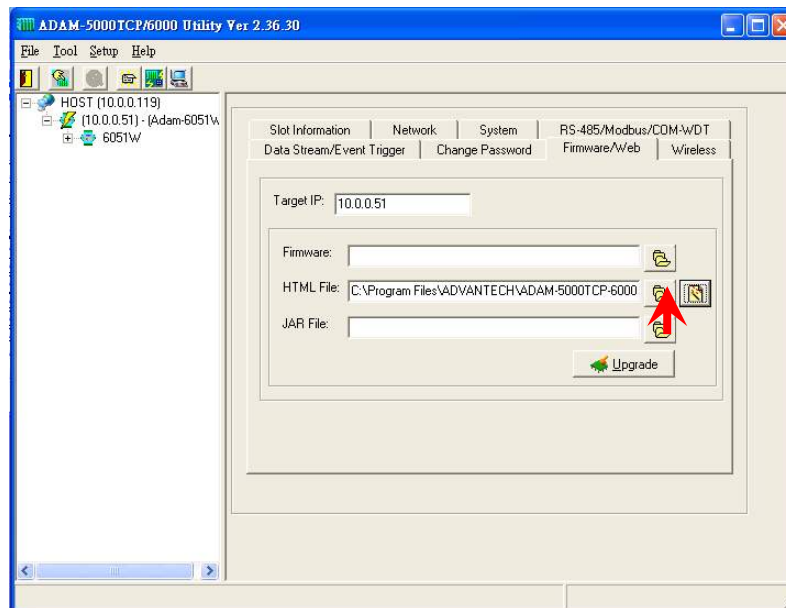


Select the stored web page configuration file then press “Open”




Follow the above action to download the selected file into ADAM-6000W module.

Firmware Update


Step 1 : Press the browse bottom of firmware

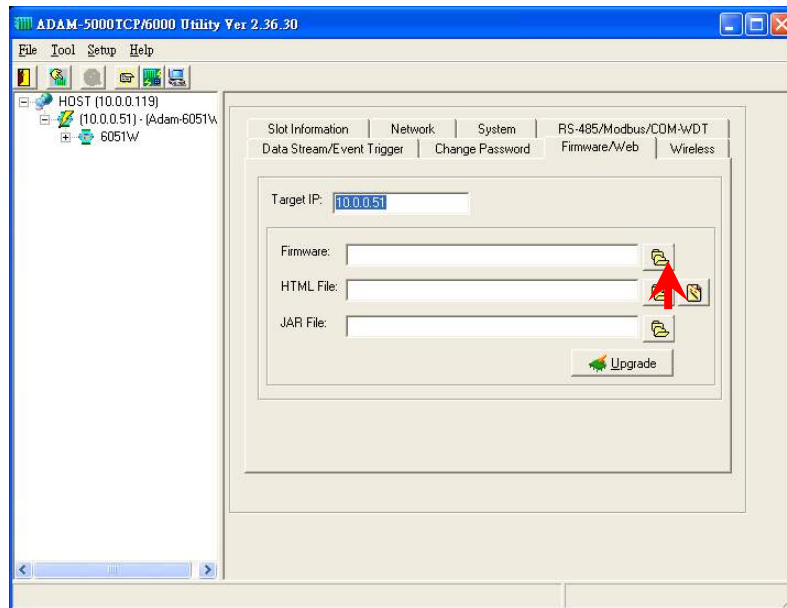

Step 2 : Select the firmware file to be downloaded

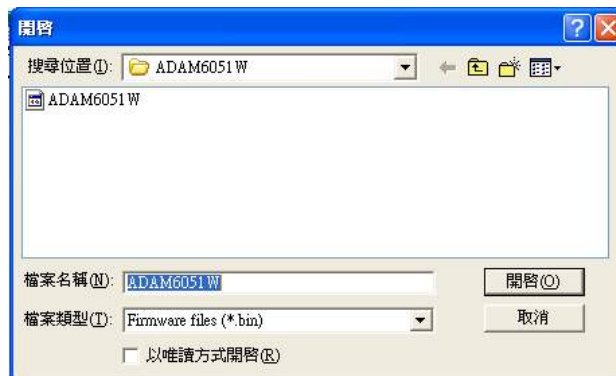


Step 3 : Press "Update" bottom to finish the firmware update action

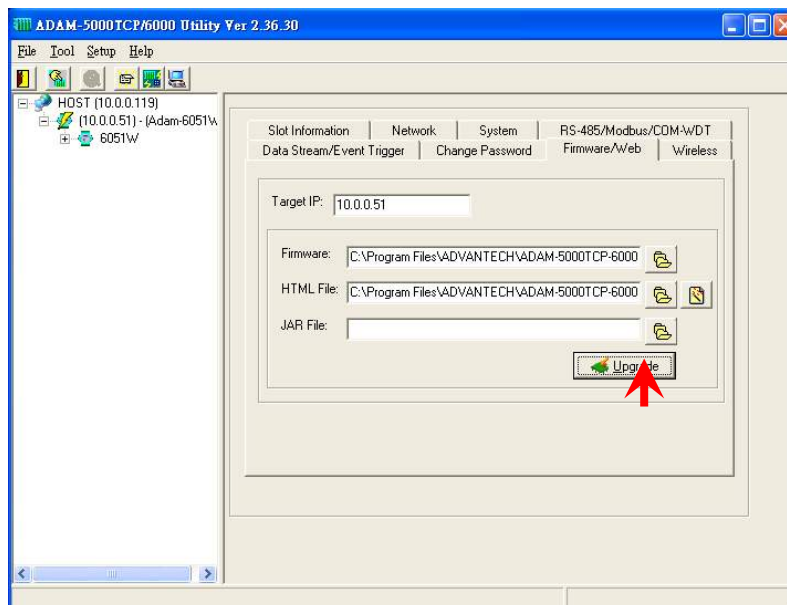


Input/Output Channel Configuration

Step 1 : Please click on the “6051W” to go to the ADAM-6051W configuration main page.

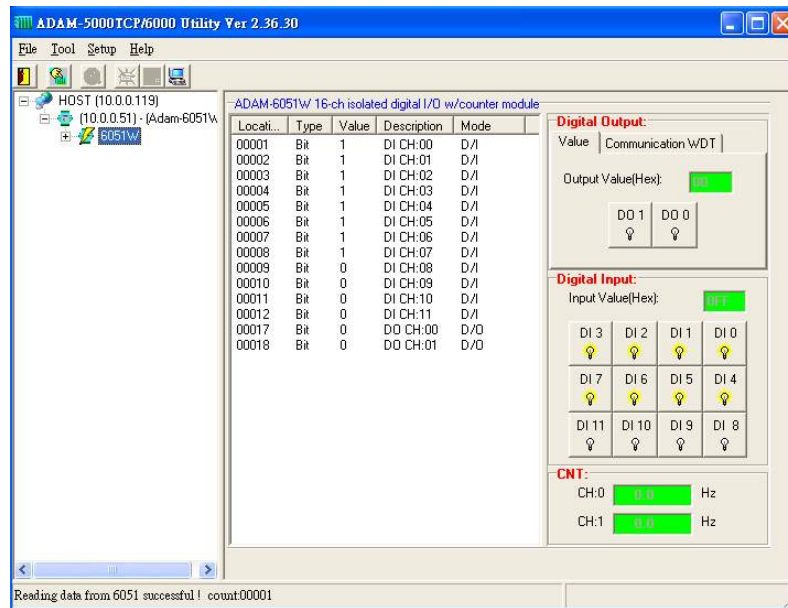


Step 7 : Please go to “Communication WDT” to set up the communication watchdog timer setting. This function is used for security protect, it means sometimes, noise or other reasons will cause the communication fail, and the host PC won't control the modules anymore, but the modules will keep the latest output status, and this status may cause dangerous, so while this situation happen, the communication WDT will detect it till timeout then reset the module and set the output to safety value to prevent the dangerous, user can set the safety value by themselves.

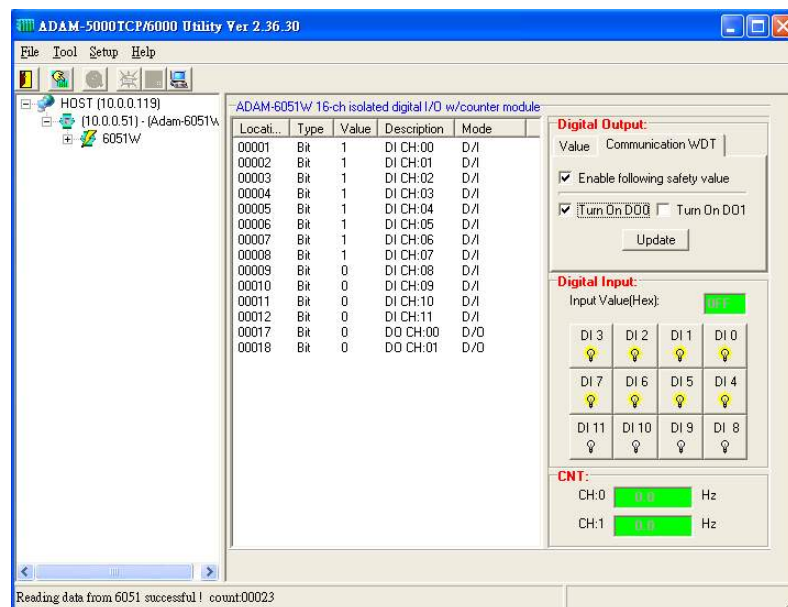


Step 3 : Please click on “DO:XX” to access the digital output channel configuration page. The digital output channel of ADAM-6051W can be configured as typical DO output, pulse output, DO with LO to Hi delay or DO with Hi to LO delay:



For typical DO setting :

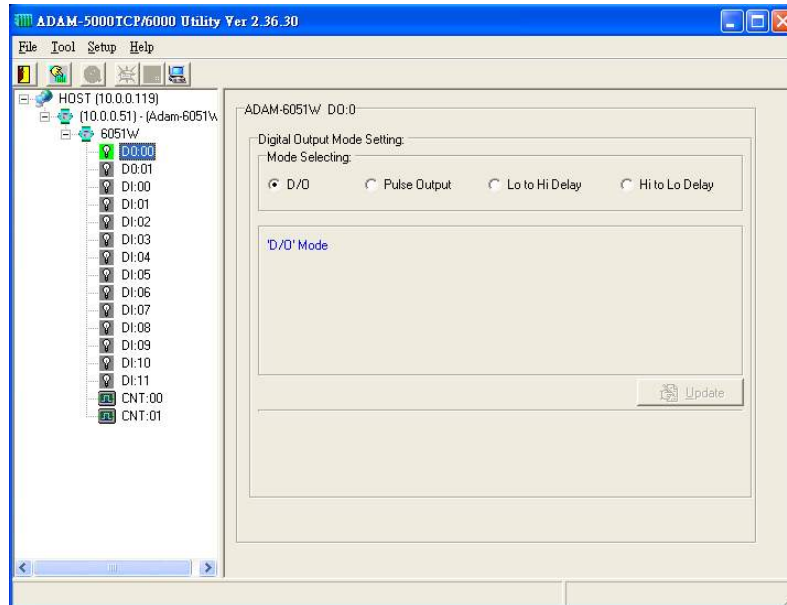

For Pulse Output setting :

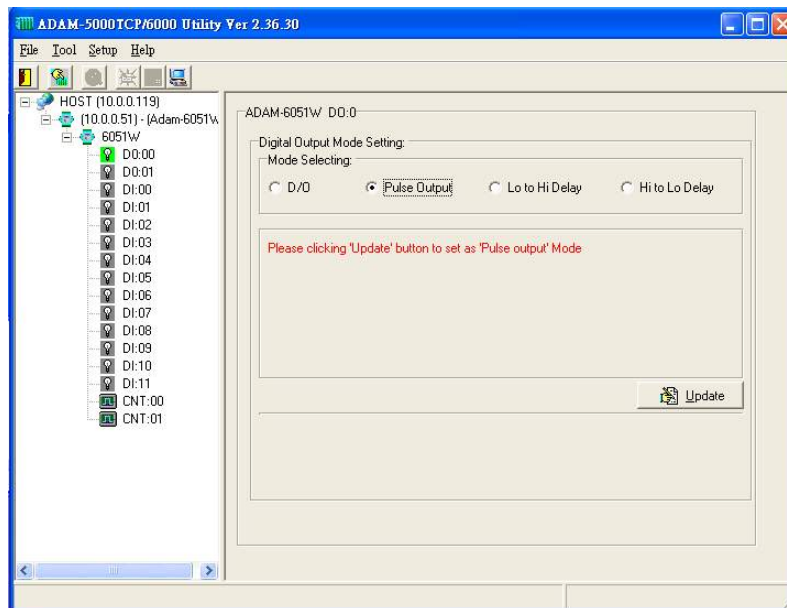


For “Lo to Hi delay” and “Hi to Lo delay” function :

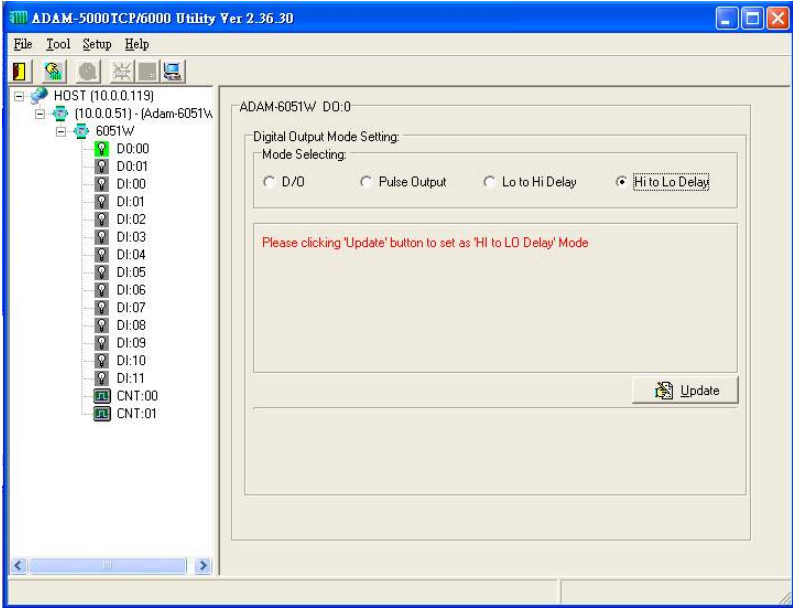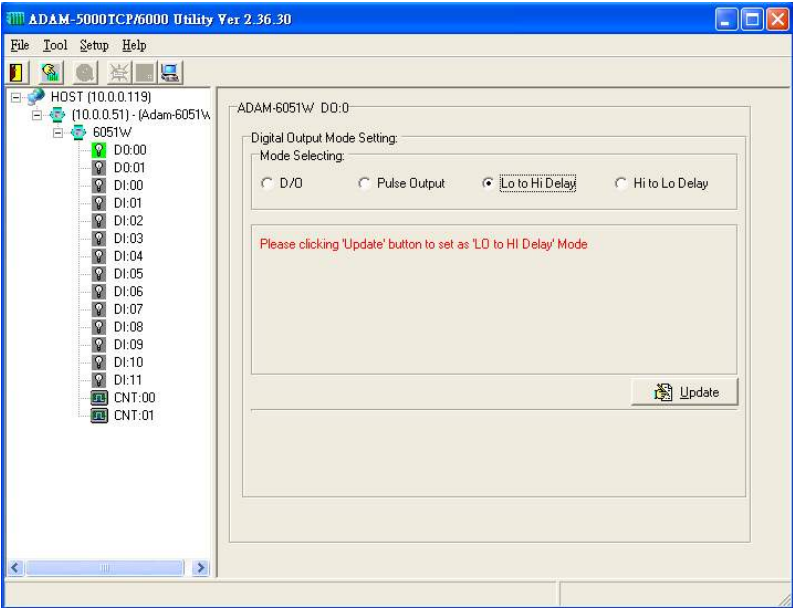


Step 4 : Please click on “DI:XX” to access the digital input configuration page. The digital input channel of ADAM-6068 supports typical DI, counter, frequency, Lo to Hi Latch and Hi to Lo Latch.


For typical DI setting :

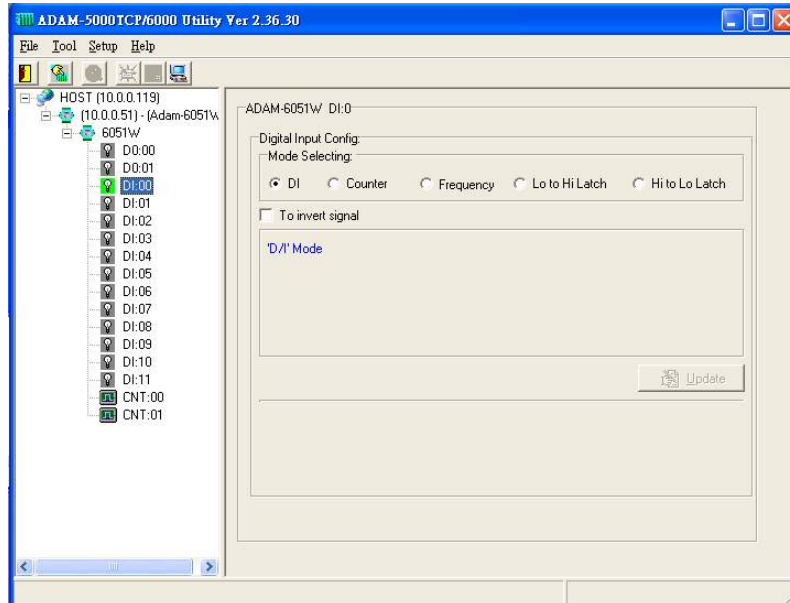



For Counter setting :

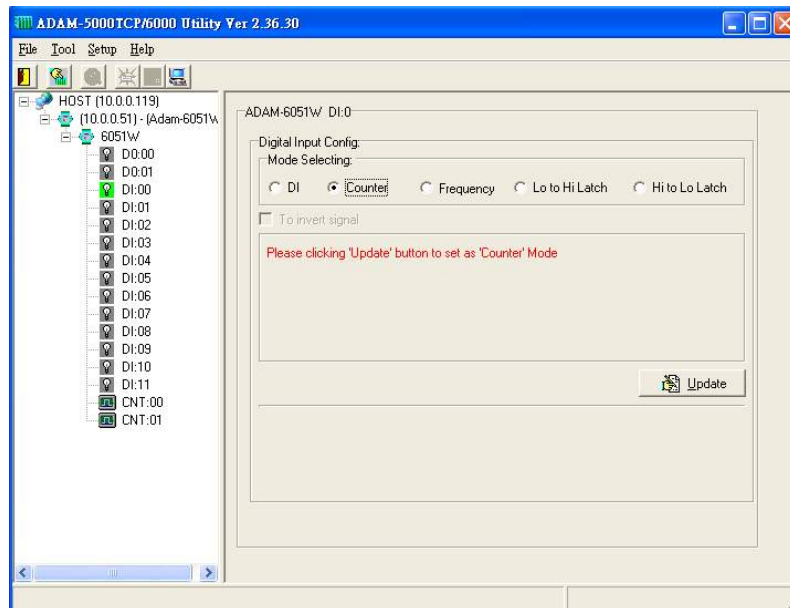

For Frequency setting :

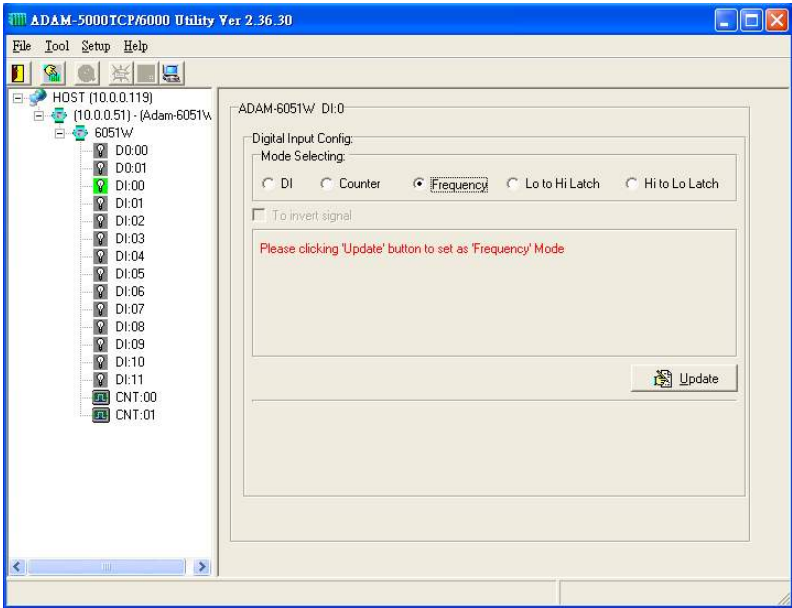


For “Lo to Hi Latch” and “Hi to Lo Latch” setting :

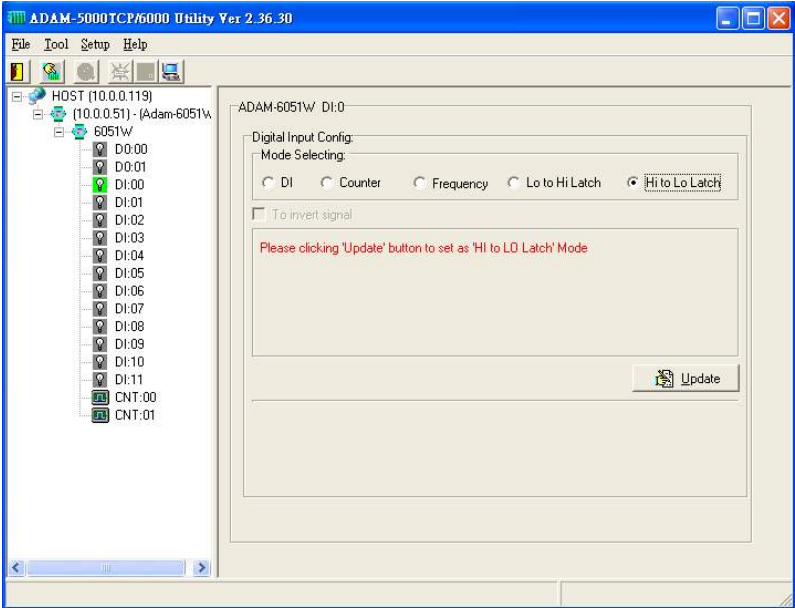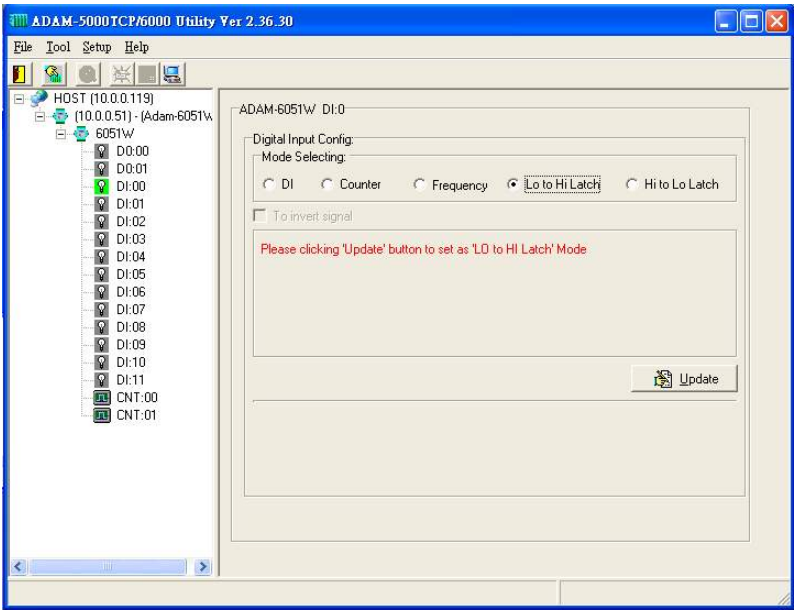


Step 4 : Please click on “CNT:XX” to access the counter channel configuration page.


For Counter setting :

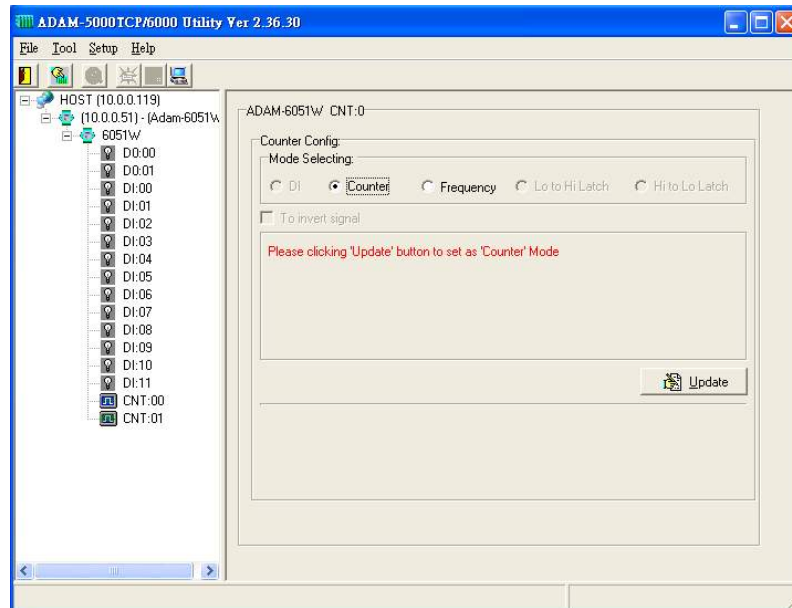

For Frequency Mode setting :

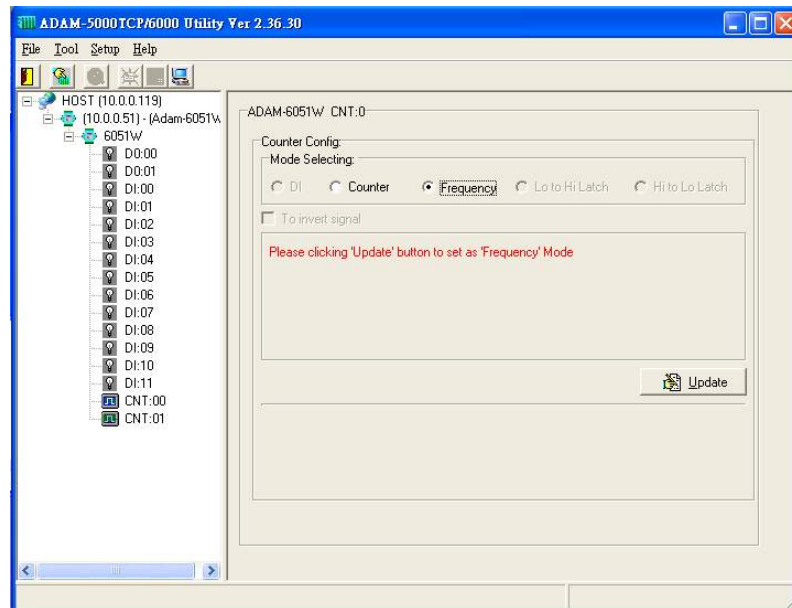

Appendix : Adam-6000W Mode Setting

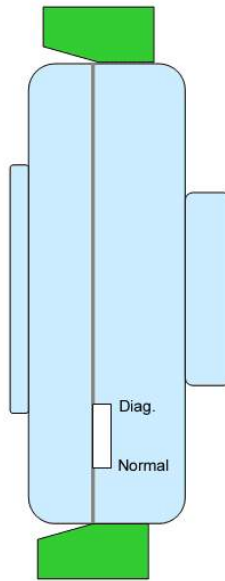

switch

Mode 1 (Normal Mode): In this mode, you can use Utility to configure module to Infrastructure or Ad hoc mode.

Mode 2 (Diagnostic Mode): The purpose of this mode is used to recover the Adam-6000W module from error state. User can switch module to diagnostic Infrastructure/Ad hoc mode that has temporary wireless setting and default IP, subnet mask. Therefore, user can re-configure the wireless setting when module's communication is dead. (*Note: the temporary wireless setting will be cleared after reboot to Normal mode)

Diagnostic-mode default settings:

Diagnostic Ad hoc mode setting:

Temporary SSID: WLAN

Temporary Channel: 10

Temporary Wep: No

IP: 10.0.0.1

Subnet mask: 255.0.0.0

Gateway: 0.0.0.0

Diagnostic Infrastructure mode setting:

Temporary SSID: <ANY>

Temporary Channel: 10

Temporary Wep: No

IP: 10.0.0.1

Subnet mask: 255.0.0.0

Gateway: 0.0.0.0

Assigning addresses for the ADAM-6051W Modules

	ADDR 0X	CH	ITEM	Attribute	ADDR 4X	CH	ITEM	Attribute
	00001	0	DI	R	40001~40002	0	*Counter	R
	00002	1	DI	R	40003~40004	1	*Counter	R
	00003	2	DI	R	40005~40006	2	*Counter	R
	00004	3	DI	R	40007~40008	3	*Counter	R
	00005	4	DI	R	40009~40010	4	*Counter	R
	00006	5	DI	R	40011~40012	5	*Counter	R
	00007	6	DI	R	40013~40014	6	*Counter	R
	00008	7	DI	R	40015~40016	7	*Counter	R
	00009	8	DI	R	40017~40018	8	*Counter	R
	00010	9	DI	R	40019~40020	9	*Counter	R
	00011	10	DI	R	40021~40022	10	*Counter	R
	00012	11	DI	R	40023~40024	11	*Counter	R
	00013	12	DI	R	40025~40026	12	*Counter	R
	00014	13	DI	R	40027~40028	13	*Counter	R
	00017	0	DO	R/W	40029~40030	0	Pulse Output Low Level	R
	00018	1	DO	R/W	40031~40032	1	Pulse Output Low Level	R
	00033	0	Counter Start(1)/Stop(0)	R/W	40033~40034	0	Pulse Output High Level	R
	00034	0	Clear Counter(1)	R/W	40035~40036	1	Pulse Output High Level	R
	00035	0	Clear Overflow	R/W				
	00036	0	Latch Status/ Clear Status	R/W				
	00037	1	Counter Start(1)/Stop(0)	R/W	40037~40038	0	Set Absolute Pulse (0=Continue Mode)	R
	00038	1	Clear Counter(1)	R/W	40039~40040	1	Set Absolute Pulse (0=Continue Mode)	R
	00039	1	Clear Overflow	R/W				
	00040	1	Latch Status/ Clear Status	R/W				
	00041	2	Counter Start(1)/Stop(0)	R/W	40041~40042	0	Set Incremental Pulse	R
	00042	2	Clear Counter(1)	R/W	40043~40044	1	Set Incremental Pulse	R
	00043	2	Clear Overflow	R/W				
	00044	2	Latch Status/ Clear Status	R/W				

	00045	3	Counter Start(1)/Stop(0)	R/W				
	00046	3	Clear Counter(1)	R/W				
	00047	3	Clear Overflow	R/W				
	00048	3	Latch Status/ Clear Status	R/W				
	00049	4	Counter Start(1)/Stop(0)	R/W				
	00050	4	Clear Counter(1)	R/W				
	00051	4	Clear Overflow	R/W				
	00052	4	Latch Status/ Clear Status	R/W				
	00053	5	Counter Start(1)/Stop(0)	R/W				
	00054	5	Clear Counter(1)	R/W				
	00055	5	Clear Overflow	R/W				
	00056	5	Latch Status/ Clear Status	R/W				
	00057	6	Counter Start(1)/Stop(0)	R/W				
	00058	6	Clear Counter(1)	R/W				
	00059	6	Clear Overflow	R/W				
	00060	6	Latch Status/ Clear Status	R/W				
	00061	7	Counter Start(1)/Stop(0)	R/W				
	00062	7	Clear Counter(1)	R/W				
	00063	7	Clear Overflow	R/W				
	00064	7	Latch Status/ Clear Status	R/W				
	00065	8	Counter Start(1)/Stop(0)	R/W				
	00066	8	Clear Counter(1)	R/W				
	00067	8	Clear Overflow	R/W				
	00068	8	Latch Status/ Clear Status	R/W				
	00069	9	Counter Start(1)/Stop(0)	R/W				
	00070	9	Clear Counter(1)	R/W				
	00071	9	Clear Overflow	R/W				
	00072	9	Latch Status/ Clear Status	R/W				
	00073	10	Counter Start(1)/Stop(0)	R/W				
	00074	10	Clear Counter(1)	R/W				
	00075	10	Clear Overflow	R/W				
	00076	10	Latch Status/ Clear Status	R/W				

	00077	11	Counter Start(1)/Stop(0)	R/W				
	00078	11	Clear Counter(1)	R/W				
	00079	11	Clear Overflow	R/W				
	00080	11	Latch Status/ Clear Status	R/W				
	00081	12	Counter Start(1)/Stop(0)	R/W				
	00082	12	Clear Counter(1)	R/W				
	00083	12	Clear Overflow	R/W				
	00084	12	Latch Status/ Clear Status	R/W				
	00085	13	Counter Start(1)/Stop(0)	R/W				
	00086	13	Clear Counter(1)	R/W				
	00087	13	Clear Overflow	R/W				
	00088	13	Latch Status/ Clear Status	R/W				

***Note : How to retrieve the counter/frequency value on Modbus address mapping**

Example :

Counter(dec) = (value of 40002) x 65536 + (value of 40001)

Frequency(dec) = (value of 40001)/10 Hz

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

CE Declaration of Conformity

CE 0984!

Is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (89/336/EEC), Low-voltage Directive (73/23/EEC) and the Amendment Directive (93/68/EEC), the procedures given in European Council Directive 99/5/EC and 89/3360EEC.

The equipment was passed. The test was performed according to the following European standards:

- EN 300 328 V.1.6.1 (2004-04)
- EN 301 489-1 V.1.4.1 (2002-04) / EN 301 489-17 V.1.2.1 (2002-04)
- EN 50371: 2002
- EN 60950: 2000