

WX-1500 / 1520 Wireless LAN Access Point

User Manual

Version 1.2 – June 2000

CE 0122



Important Notice

This device is a 2.4 GHz low power Wireless Access Point transceiver intended for use in all EU memberstates, except for France where restrictive use applies.
Please refer to page 4 of this manual for further details.

User Manual

WX-1500 / 1520 Wireless LAN Access Point

Version 1.1 – June 2000

Copyright statement

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photocopying, recording, or otherwise without the prior writing of the publisher.

Printed in Taiwan, June 2000

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with the minimum distance between your body and the antenna as shown in the table below:

Low gain indoor antennas ($\leq 6\text{dBi}$)	4.5cm (1.8 inches)

Note: Detached antennas, whether installed indoors or out, should be installed **ONLY** by experienced antenna installation professionals who are familiar with local building and safety codes and, wherever applicable, are licensed by the appropriate government regulatory authorities.

R&TTE Compliance Statement

This equipment complies with all the requirements of the DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of 9 March 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE).

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this manual and of the computer manufacturer must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries intended for use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Denmark, Finland, France (with Frequency channel restrictions), Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden and United Kingdom.

The ETSI version of this device is also authorized for use in EFTA member states Iceland, Liechtenstein, Norway and Switzerland.

EU Countries Not intended for use

None.

Potential restrictive use

France: Only channels 10,11,12, and13



GemTek Technology Co., Ltd.

Declaration of Conformity

We, the undersigned,

Company	GEMTEK Technology Co., Ltd.
Address, City	No.1, Jen Ai Road, Hsinchu Industrial Park Hukuo Hsiang, Hsinchu Hsien
Country	Taiwan, R.O.C
Phone number	886-3-598-5535 x1030
Fax number	886-3-598-5585

certify and declare under our sole responsibility that the following equipment:

Product description / Intended use	2.4 GHz Low Power RLAN Access Point transceiver
EU /EFTA memberstates intended for use	EU: Austria, Belgium, Denmark, Finland, France, Germany Greece, Ireland, Italy, Luxembourg, the Netherlands, Portugal, Spain, Sweden, United Kingdom EFTA: Switzerland, Iceland, Lichtenstein, Norway
Restrictive use	France (operating band restricted to 2446.5-2483.5MHz)
Manufacturer	GEMTEK Technology Co., Ltd.
Brand	GEMTEK
Type	WX1500 and WX1520

is tested to and conforms with the essential radio test suites included in following standards:

Standard	Issue date
ETS 300 328	Ed.2, Nov.1996
ETS 300 826	Ed.1, Nov. 1997
EN 60950	(1992), incl. A1(1993), A2(1993),A3(1995), A4(1997)

and therefore complies with the essential requirements and provisions of the **Directive 1999/5/EC** of the European Parliament and of the council of 9 march 1999 on Radio equipment and Telecommunications Terminal Equipment and the mutual recognition of their conformity and Annex IV (Conformity Assessment procedure referred to in article 10(4)).


The following Notified Bodies have been consulted in the Conformity Assessment procedure:

Notified Body number	Name and address
0122	NMi Certin B.V., POB 15, 9822 ZG Niekerk, The Netherlands

The technical documentation as required by the Conformity Assessment procedure is kept at the following address:

Company	NoWiresNeeded B.V.
Address, City	Rembrandtlaan 1a, Bilthoven
Country	The Netherlands
Phone number	+31 30 2296060
Fax number	+31 30 2296061

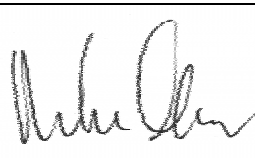

Drawn up in	Hsinchu Hsien, Taiwan R.O.C.
Date	1 June 2000
	
Name and position	Mike Chen, Vice President, GemTek Technology Co., Ltd.

1 Contents

1	Contents	6
2	Introduction	7
3	Installation	8
4	APManager™ Features	9
4.1	APManager™ Main Window	10
4.2	Quick Start to Wireless Networking.....	11
4.3	Managing WLANs	11
4.4	Managing Access Points.....	12
4.4.1	Network Settings Dialog.....	14
4.4.2	Searching for Access Points	14
4.4.3	Manually programming IP addresses	15
4.5	Managing Security	16
4.5.1	Access Control	17
4.6	Updating Access Point Settings	18
4.7	IEEE 802.11 WEP Security.....	19
4.8	More about Cells	19
4.9	Compatibility.....	20
5	Glossary	21
6	Technical specifications of WX-1500 / 1520	22
6.1	Standards supported	22
6.2	Environmental	22
6.3	Power specifications	22
6.4	Radio specifications	22
6.5	Specific features.....	22
6.6	Physical Dimensions	22

2 Introduction

Thank you for purchasing your WX-1500 / 1520 Wireless LAN Access Point. This manual will assist you with the installation procedure.

The package you have received should contain the following items:

- User manual
- WX-1500 / 1520 Access Point
- Power adapter
- Diskette containing APManger Software

Note: if anything is missing, please contact your vendor

A wireless LAN is normally used in a predefined environment. In such a network, Access Points are mounted at assigned places, each covering its own area in which wireless nodes can operate. These Access Points are connected to a wired network to communicate with each other and with servers and clients on that network.

The WX-1500SB Access Point can be connected to a 10 Mbps Ethernet network through a RJ45 (UTP) connector.

3 Installation

1. Mount the Access Point firmly to the wall on the position that is determined during the site survey. A drill model is supplied as a separate sheet with this manual.
2. Make sure the antennas are in a vertical position (if not, rotate over 90 degrees).
3. Insert the power connector.
4. Attach the UTP Ethernet cable to the Access Point.
5. Switch on the Access Point.

At the front of the Access Point you will see three LEDs.

If all goes well, the middle LED (power) is green and the leftmost (WLAN) and rightmost (wired network) LEDs flash whenever there is traffic on the respective networks which is at least ten times per second for the wireless LAN because of so-called 'beacons'.

The Access Point automatically selects the medium attached. When the cable network is detected, the network LED will turn yellow.

You can reset the Access Point's settings to factory defaults by pushing a paperclip in the little hole next to the power switch. The sequence of the ACT is on, and holding until the LED being off.

When you push a paperclip in the reset hole while the Access Point is switched on, only the lock set by APManger™ (Par 4.5) is deactivated.

4 APManger™ Features

APManger™ provides a consistent view of the Wireless network. The systems administrator can use APManger™ to control a large number of WX-1500 / 1520 Access Points from a single location. The Access Points are remotely updated via the SNMP (Simple Network Management Protocol).


Among the supported features are:

- Adding and removing Access Points
- Restricting access to the Wireless network
- Managing data protection options such as IEEE 802.11 WEP
- Assigning radio channels for optimal cell management
- Grouping the wireless network into multiple WLANs with individual access control and security options
- Programming an Access Point with a specified IP address
- Setting the SNMP Write Community string
- Storing the Access Point configurations on disk
- Verifying the status of all Access Points in the network

4.1 APManger™ Main Window

The Main Window of APManger™ may look like this. Before going into detail it is good to have an idea of what kind of information to expect.

You may wish to skip to Quick Start to Wireless Networking.

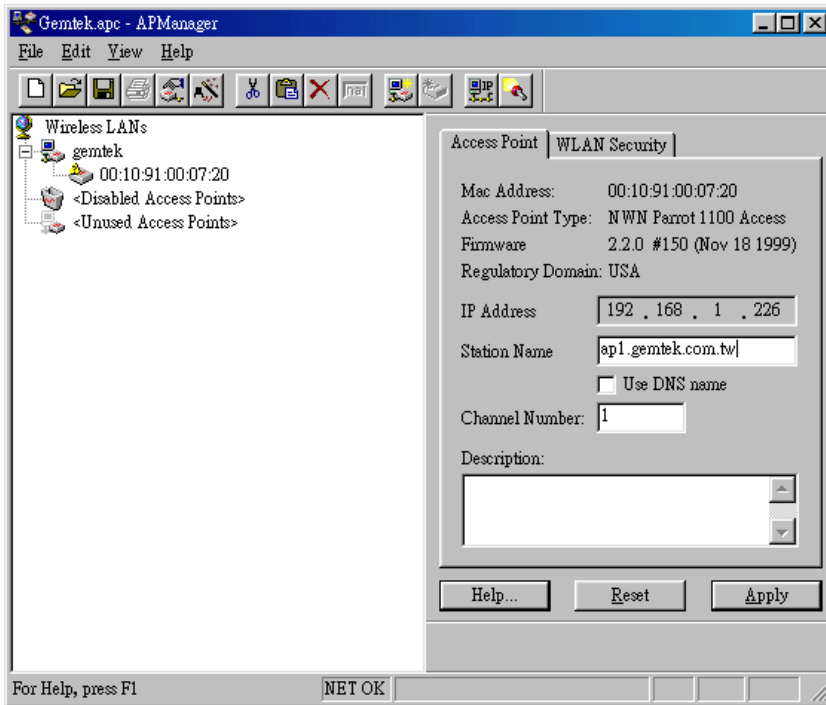

The tree structure on the left of the window shows a list of WLANs (Wireless LANs) and the Access Points that are part of each WLAN. The sample image above shows a single Access Point with hardware address 00:10:91:00:07:20 that is assigned to the WLAN named "gemtek". The icons indicate the status of the WLANs and their associated Access Points.

You can use clicking, double clicking, dragging etc. to view Access Point properties or move an Access Point to another WLAN etc. See Managing WLANs.

The name (or ESSID) of the WLAN is used for identifying the WLAN. Client stations can roam freely over Access Points that have the same ESSID. Therefore the security options for all Access Points with the same ESSID are identical. Security options can be managed through the WLAN Security property sheet. See the section on Managing Security.

The Access Point property sheet will mainly be used to select a radio channel for each Access Point. See *Managing Access Points below*.

4.2 Quick Start to Wireless Networking

Configuring a Wireless Network for the very first time, involves the following seven steps:

1. Physically connect the Access Points to the Ethernet LAN. Make sure they are switched on. The GemTek wireless network will be up and running immediately. If you are content with the default settings of the Access Points, you can stop right here. It is more likely however, that you want to assign different radio frequencies to each Access Point, or impose some restrictions on the use of your wireless network.
2. To be able to manage the Access Points via SNMP, every Access Point needs a unique IP address. If you provide a DHCP or BOOTP service on your LAN (and have sufficient free IP addresses available) this will be taken care of automatically. If not, please read the section Manually programming IP addresses.
3. Fire up APManger™ and configure the Network Settings to reflect your situation (Use the Edit/Network Settings... menu item). See the section Network Settings Dialog for details.
4. Create at least one WLAN (Edit/Insert Wireless LAN) and select the desired security configuration options.
5. Apply the built-in scanning function under Edit/Search Access Points to collect information about the Access Points. See the section Searching for Access Points for more information about the scanning function. Drag the new Access Points to the WLAN of your choice.
6. Select the radio channels of the Access Points according to your cell plan. See also More about Cells. Add descriptive information about each Access Point for later reference.
7. Save the configuration information to disk, and commit the new settings to the Access Points in your network. Using this button.

Note that the actual settings of the Access Points will not be affected until the Commit to Network function is executed. If you quit APManger™, you will be asked to both save and commit.
See Updating Access Point Settings.

You can open the saved configuration file anytime you to make changes to the network.

4.3 Managing WLANs

A WLAN or “Wireless Local Area Network” consists of a number of access to any wireless stations that are in reach of any of the



Access Points that together provide seamless Access Points.



Create a WLAN

Select the Edit/Insert Wireless LAN menu item to insert a new WLAN into the list. Type the name (ESSID) of the new WLAN.



Destroy a WLAN

Remove an empty WLAN by pressing Delete or selecting the Edit/Clear menu item.



Rename a WLAN

Click on the label of the WLAN to change its name (ESSID). Note that client stations use the name to identify the WLAN.

You can move an Access Point from one WLAN to another by dragging it with the mouse or by selecting Edit/Cut followed by Edit/Paste.

There are two WLANs that have a special meaning in APManger™. These are the Unused Access Points and Disabled Access Points special WLAN's.



Unused
Access Points

APManger™ does not manage the Unused Access Points within the context of the current document. In other words, these Access Points are ignored. You can view some information about them (e.g. radio channel), but not modify any of their properties. APManger™ does not change the settings of these Access Points when File/Commit to Network is selected. This is useful when different people manage different sets of Access Points.



Disabled
Access Points

Access Points that are moved to this folder will be made inaccessible for any client station as soon as they are updated.

4.4 Managing Access Points

Individual Access Points are identified by their hardware address (or MAC address). To insert a new Access Point into the APManger™ document by hand, its hardware address must be known. You can search for Access Points in your network automatically; see Searching for Access Points.



Insert an
Access Point

Select the Edit/Insert Access Point menu item to insert a new Access Point into the selected WLAN. APManger™ will ask for the hardware address of the Access Point.



Disable an
Access Point

Move an Access Point to the “Disabled” special WLAN by pressing Delete or selecting the Edit/Clear menu item. Access Points in this special WLAN will not be accessible for any client station. See Managing WLANs.

The Access Points are shown with one of the following icons.



On-line

The Access Point is accessible on-line.



Off-line

The Access Point is currently not accessible, or the IP address is not known or incorrect.



Locked

The Access Point is permanently locked. Its properties cannot be changed.

Select the Access Point property sheet to view or modify the settings of the selected Access Point. The main function is to be able to program the Access Point's radio channel to match the cell plan. See the section “More about Cells” for details.

Read-only features shown include hardware address, brand and version, and the regulatory domain.

Access Point | WLAN Security

Mac Address: 00:10:01:00:07:00

Access Point Type: NWN Parrot 1100 Access

Firmware: 2.2.0 #150 (Nov 18 1999)

Regulatory Domain: USA

IP Address: 192.168.1.220

Station Name: apl.gemtek.com.tw

☐ Use DNS name

Channel Number: 1

Description:

Hardware address (MAC address)

Brand, type, and version information.

The regulatory domain for which the Access Point has been configured (factory setting). Note that it is illegal to use the Access Point outside the designated domain. See Regulatory Domains for details.

The IP address and the hostname of the Access Point.

The radio channel number. The permissible channels depend on the Regulatory Domain.

An optional description field for easy reference.

4.4.1 Network Settings Dialog




Selecting the Edit/Network Settings... menu item (or clicking the corresponding toolbar button) pops up the Network Settings dialog. Use this dialog to inform APManger™ about your network configuration. APManger™ needs this information to be able to scan for Access Points.

Add your network addresses (subnets) by entering the correct information in the Network address, mask and default gateway fields in the dialog, and clicking the Set button for each network/subnet. To view the details of a particular network, click on the Address field in the list. Click the Remove button to delete a network from the list.

If the computer on which APManger is running is connected to all your networks directly, you can try Auto Add Local Networks to insert them in the list. Note: if subnetting is used, the network addresses and masks generated by this function may not be correct and should be adjusted manually.

4.4.2 Searching for Access Points

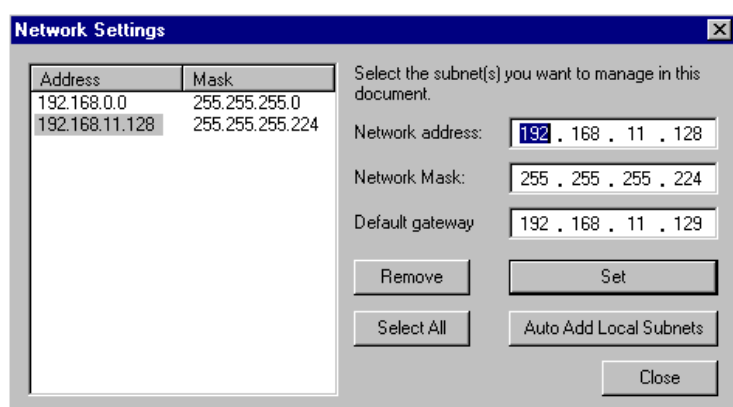

APManger™ has an easy-to-use Access Point discovery function that simplifies the administration of the Access Points in your network. You normally apply the Search function in one of the following situations:

- New Access Points have been added to the network
- The IP address of one or more Access Points is no longer valid or known, possibly because the DHCP or BOOTP server has assigned it a different IP address. You may be informed of this fact because the Access Points will be reported off-line by APManger™.

Invoke the Search function by selecting the menu command Edit/Search Access Points, or pressing the associated toolbar button. While APManger™ is scanning the network, you may continue work on the document. If necessary you can abort a scan by clicking on the Abort Search button.

A progress indicator will be shown in the status bar.



4.4.3 Manually programming IP addresses

The preferred method of providing IP addresses for your Access Points is applying a DHCP or BOOTP server in your network. If you do, the Access Points will acquire an IP address automatically from this server.

If you do not have a DHCP server it is possible to set the IP address of your Access Points from APManger™.

1. Physically connect the Access Points and the computer on which you run APManger™ to the same Ethernet segment.
2. Make sure there is no DHCP or BOOTP server running.
3. Switch the Access Points on. The network LED should light up in red.
4. Configure the network you want your Access Points to be part of. See Network Settings Dialog for details.
5. Enter the hardware addresses of the Access Points by hand using the Edit/Insert Access Point menu command or clicking the appropriate toolbar button.
6. For each Access Point select Edit/Set IP Address menu command and enter the required IP address manually. As soon as you press apply, the Access Point should acquire the designated IP address. Within a few seconds the network LED on the Access Point should light up green.

Note that you may or may not be able to communicate with the Access Point, depending on the validity of the IP address in the current Ethernet segment.

4.5 Managing Security


Maintaining security in a wireless LAN environment is somewhat different from a wired network, because the radio waves do not stop at your office walls. Eavesdropping or unauthorised access from outside your building can be a serious threat.

There are three types of actions involved:

- Protecting your data while it is transferred from one station to another. Encryption techniques will be necessary in most environments (Data Privacy).
- Control who can make use of the wireless network (Access Control).
- Protecting your network configuration against tampering from both inside and outside your organisation (Secure Management).

Data Privacy	An WX-1500SB Access Point supports three different data privacy algorithms: unencrypted data; standardised IEEE 802.11 WEP (based on a 40 bit shared key), and No Wires Needed AirLock™ (based on automatically generated 128 bit session keys).
Access Control	The IEEE 802.11 standard allows for Access Control rules based on the client station's hardware address, and is fully implemented by the WX-1500SB. If AirLock™ is enabled, the hardware address is also verified using cryptographic techniques. See the section on AirLock™ Security Architecture.
Secure Management	The primary protection against tampering for any SNMP agent is the Write Community String (WCS), which functions as a password for network management commands. The WCS is sent over your network in plain text, making it vulnerable to eavesdropping from within your organisation. The WCS is never sent over the radio, however. If you want you can lock your Access Points. After being locked they can no longer be managed via SNMP. Press the pinhole Reset switch on the back-panel of the Access Point to unlock the Access Point.

Select the required security options in the WLAN Security property sheet.

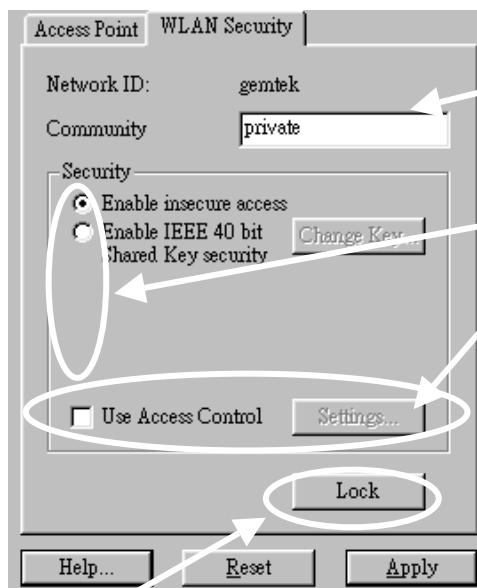

Edit the Community String field to modify the SNMP Write Community String for all Access Points in the selected WLAN.

Select the data privacy algorithm(s) you want to support in the Access Points.

See the section Access Control for details.


Use this button to lock the settings of the Access Points (almost) permanently

4.5.1 Access Control

Within the IEEE 802.11 framework, Access Control is based on the hardware address of the client stations. Per client you can select whether or not it will be allowed access to your wireless network infrastructure. On the WLAN Security tab, check the Use Access Control box to enable Access Control. If this box is not checked, any client station can associate with your network.

Click the Access Control Settings... button on the WLAN Security tab to pop up the Access Control Dialog. Press Add... to enter the client stations you want to grant access.


A default rule determines whether unregistered stations can join. You can move clients between Access Granted and Access Denied lists by clicking the >> and << buttons or pressing the left and right arrow keys. Press Apply to confirm your changes and close the dialog.

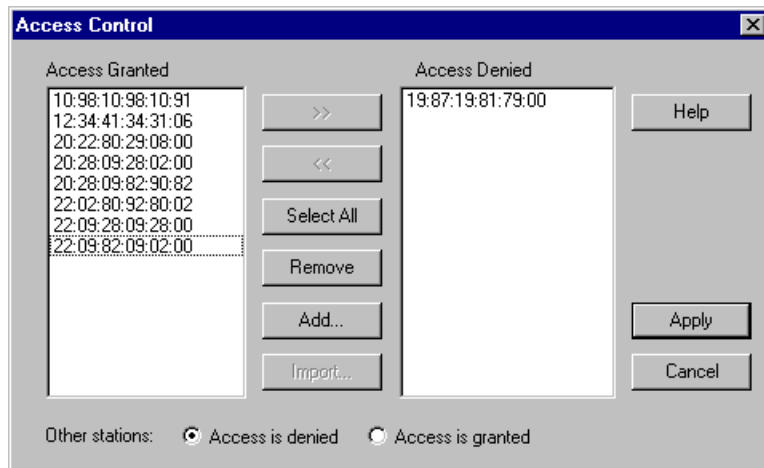

4.6 Updating Access Point Settings



After modifying the open APManger™ document you should update the Access Points in your network with the new settings. This is done for all Access Points simultaneously by selecting the File/Commit to Network menu command. Or clicking the associated toolbar button. During the update the following Dialog is displayed:

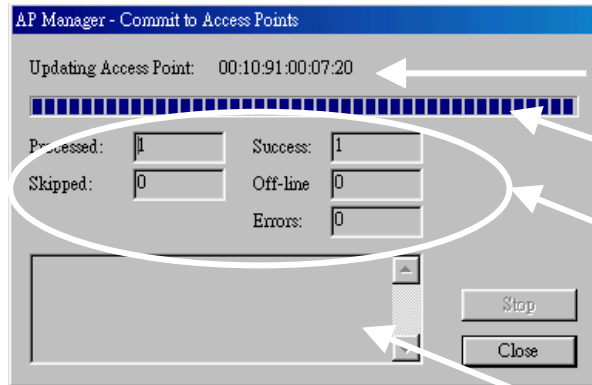

Access Point that is currently being processed.

Progress indicator

Update result counters. The 'Skipped' count refers to Access Points in the 'Unused' special WLAN.

Specific error messages.

Within 10 seconds after the Access Point has been successfully updated it will disconnect all client stations that are joined with it, and restart with the new settings. While restarting it will show red LEDs for a short period of time.

4.7 IEEE 802.11 WEP Security

The IEEE 802.11 standard includes a Shared Key data privacy mechanism, called 'Wired Equivalent Privacy'.

Features of WEP are:

- Data encryption using a 40 bit shared key
- No key distribution mechanism. The shared key (password) must be distributed manually to all personnel and either be remembered or stored somewhere on the hard disk.
- Simple authentication of clients based on hardware address.

4.8 More about Cells

Each Access Point in the network forms the centre of a cell, or BSS. The Cells should overlap slightly to guarantee seamless wireless connectivity everywhere. Nearby Access Points should preferably send and receive on different channels for maximum throughput.

Creating a cell plan for your site can be complicated, and is usually done by experts employing special measuring equipment. Furthermore, the radio channels you may use depend on both the capabilities of the PC-Cards you are deploying, as well as the regulations in your area.

The following table may be of help:

Regulatory Domain	Area	Permissible Channels
FCC	United States	1 – 11
DOC	Canada	1 – 11
ETSI	Europe except Spain and France	1 – 13
MKK	Japan	1-14

4.9 Compatibility

The APManager utility version 1.1.0 is compatible with the GemTek WX-1500SB Access Points only.

5 Glossary

BSS	"Basic Service Set". De facto an alias for Access Point.
Cell	Area in which the radio signal of an Access Point is sufficiently good to join with it.
ESS	"Extended Service Set". A group of Access Points with identical settings among which a client system can roam. An ESS forms the heart of a WLAN.
Shared Key Algorithm	Encryption scheme for which both sender and receiver need to know the (same) encryption key.
SNMP	"Simple Network Management Protocol"
WLAN	"Wireless LAN" The set of Access Points and Wireless Clients that form a local area network.
Write Community String	SNMP password
WEP	"Wired Equivalent Protection" Data privacy mechanism based on a 40 bit shared key algorithm, as described in the IEEE 802.11 standard

6 Technical specifications of WX-1500 / 1520

6.1 Standards supported

- IEEE 802.11 standard for Wireless LAN
- All major networking standards (including IP, IPX)

6.2 Environmental

Operating temperature (ambient):

- -10 ~ 50°C

Humidity:

- Max. 95% Non-condensing

6.3 Power specifications

DC power supply

- Input : DC 100-240 50-60 Hz 1A
- Output: 5V DC 1A converter incl.

6.4 Radio specifications

Range:

- per cell indoors approx. 35-100 meters
- per cell outdoors up to 100-300 meters

Transmit power:

- Nominal Temp Range: 14 dBm, 12min.
- Extend Temp Range: 14 dBm, 11 dBm min.
- Transmit Power, 2.7 v to 3v: 14 dBm max, 11 dBm min.

Frequency range:

- 2.4-2.4835 GHz, direct sequence spread spectrum

Number of Channels:

- Most European countries: 13
- US and Canada: 11 (3 non-overlapping)
- France: 4 (1 non-overlapping)
- Japan : 14

Antenna system:

- Dual antenna diversity system; 2dB gain with swivel neck

6.5 Specific features

Supported bit rates:

- 11 Mbps : CCK
- 5.5 Mbps : CCK
- 1 Mbps : DBSK
- 2 Mbps : DQPSK

Data encryption:

- 40-bit WEP Encryption

Utility Software:

- AP Manager to manage wireless LAN, network connection and client access control

6.6 Physical Dimensions

136 x 126 x 40 mm, 227 x 126 x 40 mm with antennas extended