



U740 USER MANUAL



The information contained in this document is subject to change without notice and should not be construed as a commitment by Novatel Wireless Inc. unless such commitment is expressly given in a covering document.

DRAFT DRAFT DRAFT



1	Getting started	3
1.1	Your UMTS account.....	3
1.2	Your U740 Merlin	3
1.3	The UMTS package	3
1.4	Getting Started	4
1.5	System Requirements.....	4
1.6	Care of your Merlin	4
1.7	Installing MobiLink	6
1.7.1	Windows 2000 Installation	6
1.7.2	Windows 2000 detects your U740 Merlin	9
1.7.3	Windows XP Installation	11
1.7.4	Windows XP detects your U740 Merlin	14
2	MobiLink	17
2.1	MobiLink Overview.....	17
2.2	Starting MobiLink	17
2.2.1	Main Display Window	18
2.2.2	Main Display Window Description	18
2.2.3	MobiLink Buttons	19
2.2.4	Features.....	19
2.2.5	Creating a data session.....	20
3	Sending and Receiving SMS messages	25
3.1	What is SMS	25
3.2	MobiLink's SMS window	25
3.2.1	Sending SMS Messages.....	26
3.2.2	Receiving and Reading SMS Messages	27
4	Determine Merlin States	28
5	Troubleshooting	30
1.1	Cannot install MobiLink.....	31
1.2	Problem: When I run the MobiLink software, I get the message "No Card Detected".....	31
1.3	Problem: When I insert the modem, I get Unknown_PCMCIA_Manufacturer" instead of "Novatel_ Wireless Merlin_UMTS_Modem	33
1.4	Problem: When I run the MobiLink software, I get the message "SIM not Found – Check Orientation.....	33
1.5	Problem: Modem cannot read SIM. LED flashing RED.....	33
1.6	Problem: When I run MobiLink software, the Window "searching for network" will be displayed continuously ...	34
1.7	Problem: Cannot connect to network	34
1.8	problem: Cannot browse the web	34
6	Product Specification	37
6.1	Technical Specification	37
6.2	Environmental Specification	39
7	Safety and Regulations	40
7.1	Wireless Communications	40
	IMPORTANT NOTICE	40
7.2	Safety hazards.....	40
7.3	Regulatory notices	41
7.4	Regulatory notices	44
8	Appendix A	45
8.1	Unlocking a simlocked modem with MobiLink	45
9	Document Control	47



GETTING STARTED

In This Section

- Description of Your HSDPA Wireless Broadband PC card Modem – The Merlin U740
 - The UMTS Package
 - System Requirements
 - Care of Your Merlin U740
 - Installing MobiLink on Windows 2000
 - Windows 2000 detects your Merlin U740
 - Installing MobiLink on Windows XP
 - Windows XP detects your U740 Merlin
-

This section will walk you through how to get started using your U740 Merlin, including software and driver installation, inserting the card so Microsoft Windows is able to detect and install the drivers for your U740 Merlin and setting up a data session to connect to the Internet.

1.1 YOUR UMTS ACCOUNT

For information about your UMTS account, User Name, Password and Access Point Name, please contact your UMTS Service Provider.

1.2 YOUR U740 MERLIN

Your U740 Merlin is an HSDPA(High Speed Downlink Packet Access) Wireless Broadband PC card Modem that fits into the PC card slot (PCMCIA Type II, CardBus 3.3V) of most Windows based laptop computers. The U740 utilizes HSDPA capable UMTS (Universal Mobile Telecommunications System) Networks to connect to the Internet transferring data at rates up to 1.8Mbps (Note: Data rates are Network dependant). The Merlin U740 runs on Microsoft Windows 2000 and Microsoft Windows XP.

The MobiLink software will allow you to control and monitor your connection to the UMTS network. It will also allow you to send and receive SMS (Short Messaging Service), get online help and has an address book.

1.3 THE UMTS PACKAGE

- U740 Merlin PC Card Protection Case
- U740 Merlin PC Card
- SIM (Subscriber Identification Module) -- Depending on Service Provider
- MobiLink software on installation CD
- Quick Start Guide



1.4 GETTING STARTED

Before you use your U740 Merlin, you must first:

1. Have an active UMTS account with a UMTS Service Provider
2. Have a properly configured SIM (Provided by the Service Provider) - facilitates permission to use network.
3. Install the MobiLink software, located on the installation CD.
4. Insert SIM card into the U740 Merlin SIM card slot.
5. Insert Merlin into the PC card slot on your PC for Microsoft Windows to detect and configure.
6. Launch MobiLink, create a profile if necessary and select the Connect button.

IMPORTANT NOTICES: DO NOT INSERT THE MERLIN INTO THE PC CARD SLOT UNTIL YOU HAVE UNINSTALLED ANY PREVIOUSLY EXISTING UMTS SOFTWARE FROM YOUR COMPUTER AND INSTALLED THE MOBILINK SOFTWARE. MOBILINK WILL NOT INSTALL UNLESS PREVIOUS VERSIONS OF MOBILINK ARE REMOVED. USE WINDOWS ADD/REMOVE PROGRAMS TO REMOVE.

1.5 SYSTEM REQUIREMENTS

- 133 MHz or faster Pentium- compatible
- Windows 2000 and XP (Home and Professional)
- 64 MB RAM
- 16 MB available hard drive space
- CD-ROM drive
- Type II, PC CARD slot --- 3.3V

1.6 CARE OF YOUR MERLIN

Novatel Wireless recommends the following handling guidelines:

- Handle with care.
- Avoid storing your U740 Merlin in extreme temperatures.
- Store the PC card in a dry and clean environment.
- Avoid spilling any liquid or immersing the card in water.
- Do not place any labels on the Antenna as this may alter the sensitivity of the antenna.
- Do not place any labels on the card or the SIM as this may interfere with the PC card slot/SIM slot when inserting.
- Do not force the Merlin into the PC card slot.
- Ensure the edges of the SIM are smooth before inserting into SIM slot.
- Do not force the SIM into the SIM slot.
- Do not apply force on the top or bottom of the U740 Merlin.
- When transporting your laptop, remove the U740 Merlin from the PC card slot.



NOTE: TO REMOVE YOUR U740 MERLIN, YOU MUST EXIT MOBILINK , THEN STOP THE MERLIN USING THE PC CARD

TRAY ICON  LOCATED IN THE BOTTOM-RIGHT CORNER OF YOUR PC. CLICK THE ICON AND SELECT STOP FROM THE DIALOG BOX. ONCE YOUR CARD HAS BEEN STOPPED, PRESS THE PC CARD EJECT BUTTON LOCATED ON YOUR PC AND REMOVE THE CARD COMPLETELY FROM THE PC CARD SLOT.

Add the stuff about rebooting if you do not do this.




1.7 INSTALLING MOBILINK

This portion of the guide will instruct you how to install the MobiLink software from the Installation CD.

1.7.1 Windows 2000 Installation

1. Insert the installation CD in the CD drive of your PC.
2. If the auto-run does not start, double-click on the Autorun.exe on the CD.
3. The "Preparing to Install" window will appear as below.

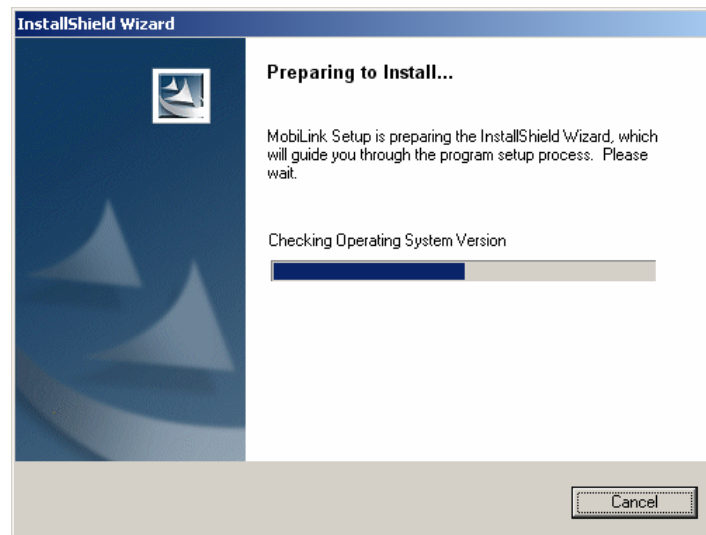

PREPARING TO INSTALL WINDOW

4. Following preparation the "Welcome to the InstallShield Wizard for MobiLink" will appear. See Figure 1.

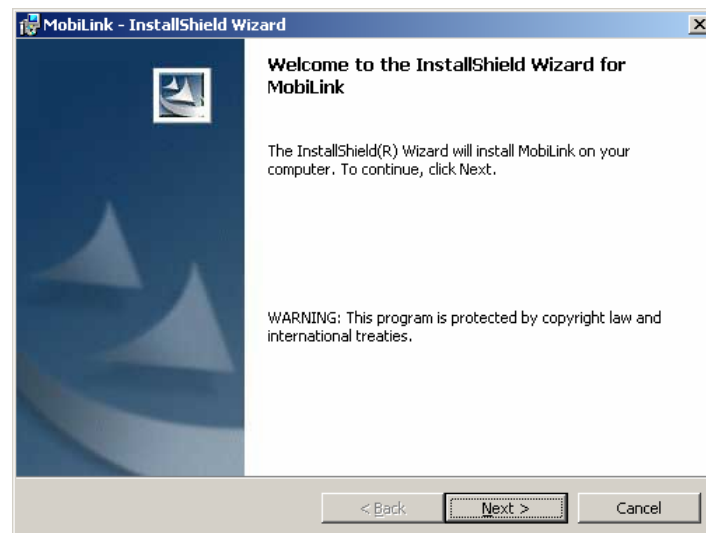


FIGURE 1

5. Read the information and click **Next**.



6. The "License Agreement" window will appear next. See Figure 2.

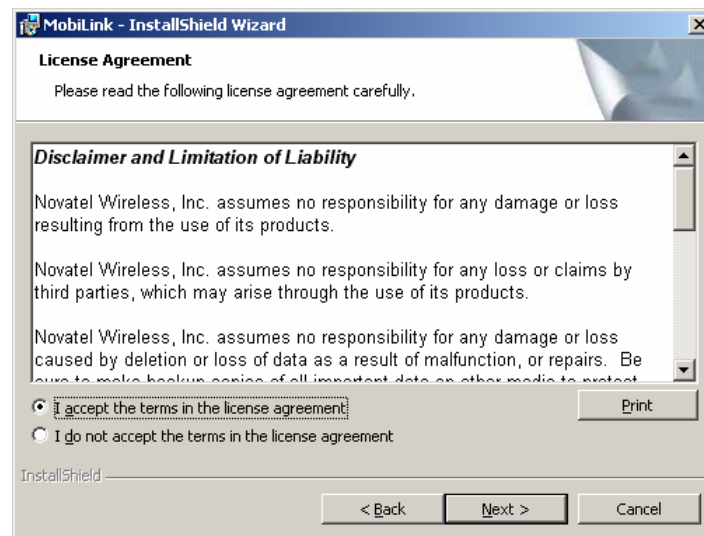


FIGURE 2

7. Read the License Agreement and acknowledge your agreement by selecting "I accept the license agreement". Then click **Next**.
8. The "Ready to Install the Program" window will appear. See Figure 3.

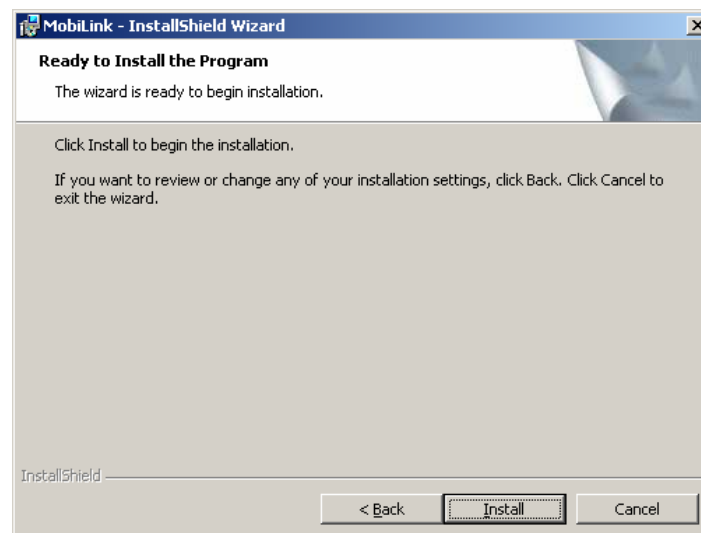


FIGURE 3

9. Click **Install**



10. The "Installing MobiLink" window will appear while MobiLink is being installed. See Figure 4.

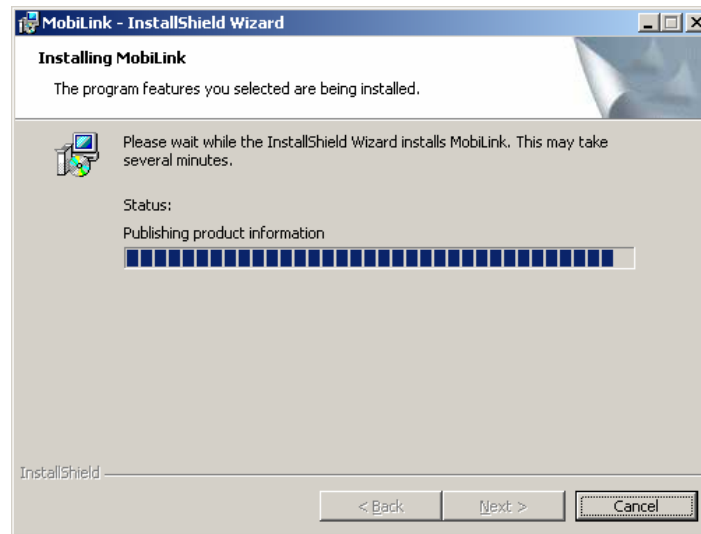


FIGURE 4

11. When the installation is complete, the "InstallShield Wizard Completed" window will appear. See Figure 5.

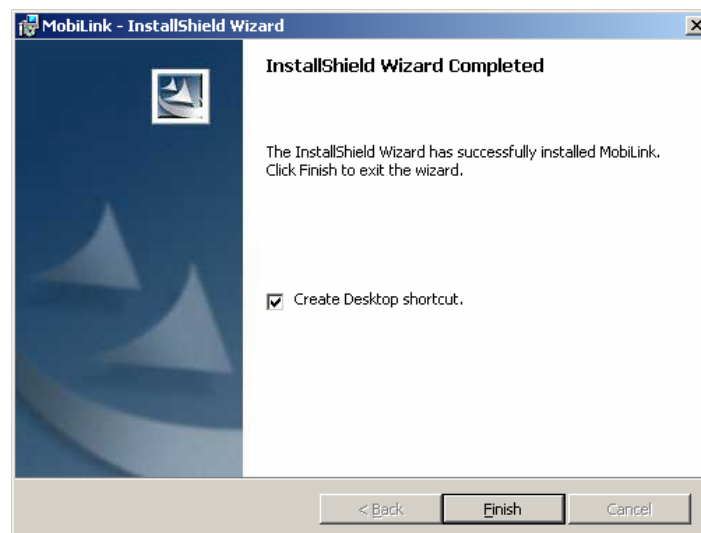


FIGURE 5

12. Click **Finish**.
13. You are prompted to restart your PC. Restart your PC.



1.7.2 Windows 2000 detects your U740 Merlin

1. Insert the SIM card into the modem. The SIM card is required to connect to the Network.

NOTE: SIM CARD CONTACT POINTS MUST FACE UPWARDS, AND THE ORIENTATION NOTCH MUST BE POSITIONED AS SHOWN IN THE PICTURE. PLEASE SEE SECTION 1.6 ON SIM CARE AND INSERTION



2. Insert the U740 Merlin into the PC card slot of your PC. Windows reads the information from the Modem and installs drivers for each function of your U740 Merlin.

You will see the following windows as Windows 2000 detects and loads the drivers. See Figures 6 -13

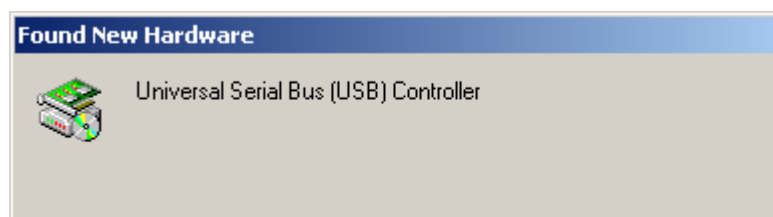


FIGURE 6

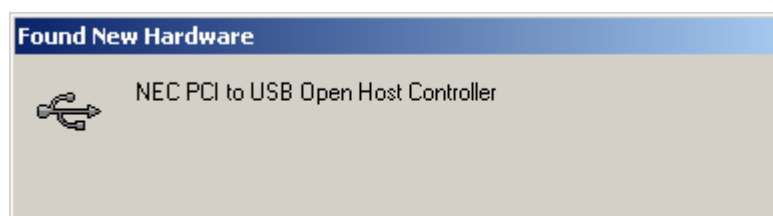


FIGURE 7



FIGURE 8

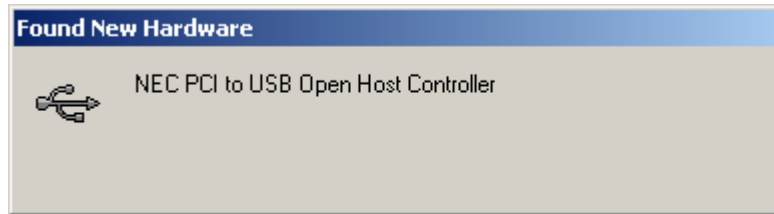


FIGURE 9

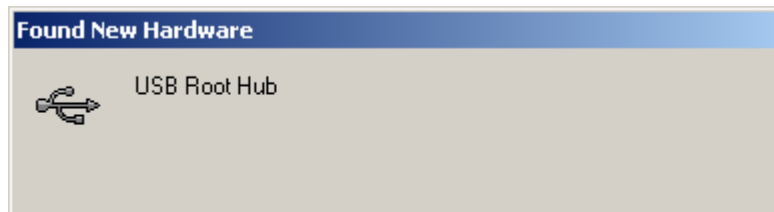


FIGURE 10

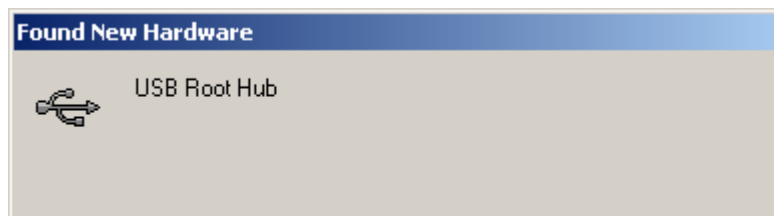


FIGURE 11

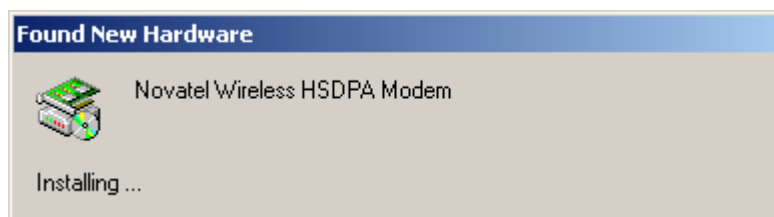


FIGURE 12

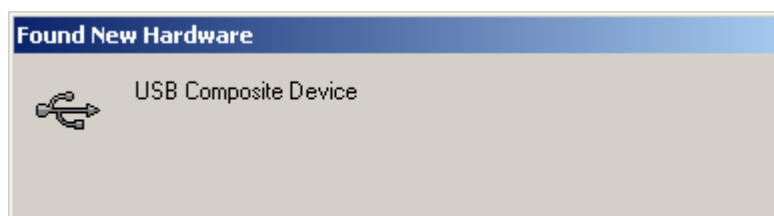


FIGURE 13

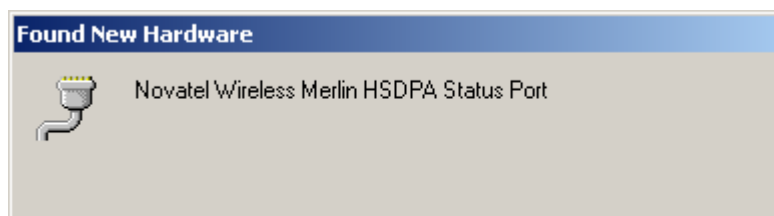



FIGURE 14

Windows has now detected and installed the drivers for your UMTS Merlin. Proceed to Section 2.



1.7.3 Windows XP Installation

1. Insert the installation CD in the CD drive of your PC.
2. If the auto-run does not start, double-click on the Autorun.exe on the CD.
3. The "Preparing to Install" window will appear as below.

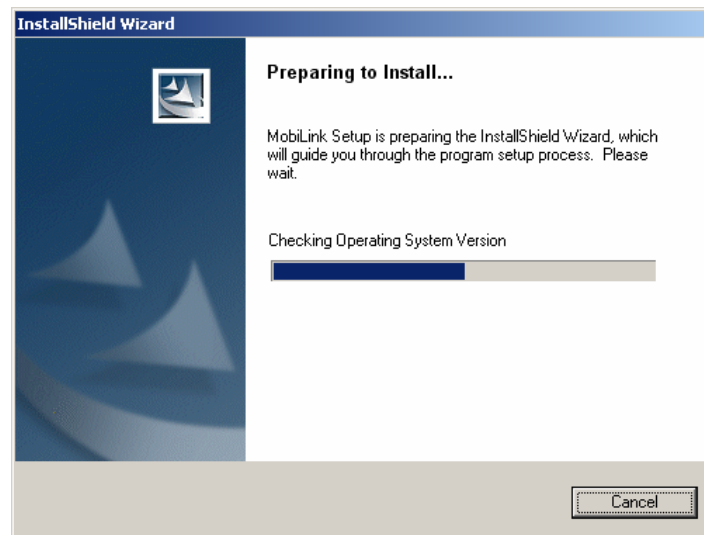

PREPARING TO INSTALL WINDOW

4. Following preparation, the "Welcome to the InstallShield Wizard for MobiLink" will appear. See Figure 15.

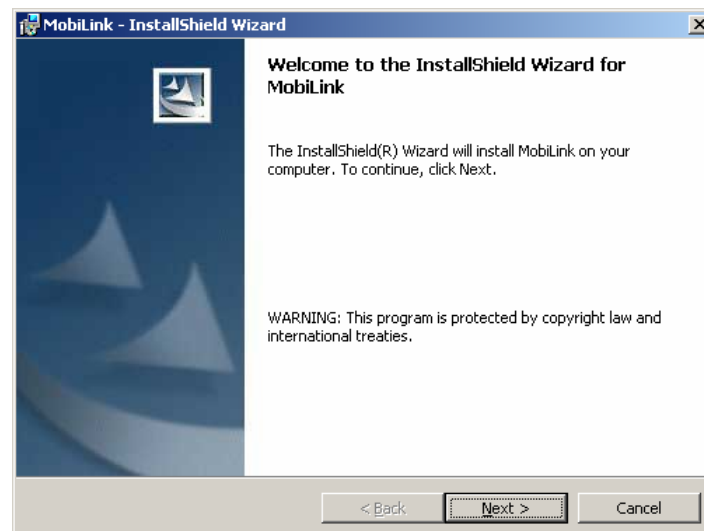


FIGURE 15

5. Read the information and click **Next**



6. The "License Agreement" window will appear next. See Figure 16.

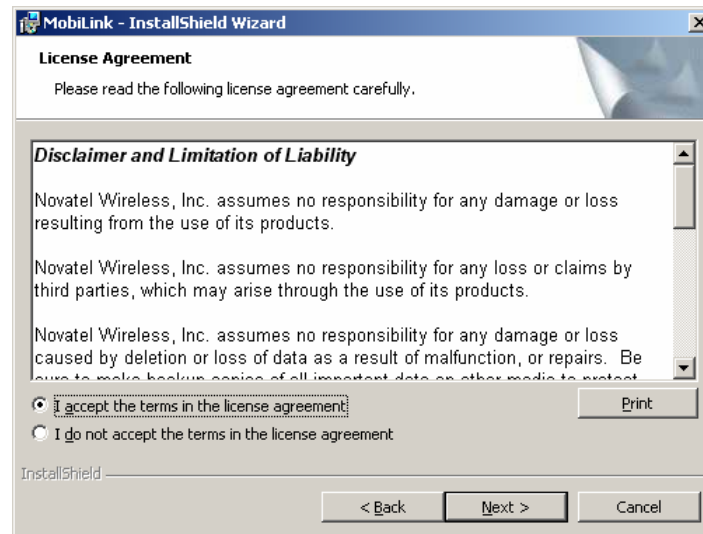


FIGURE 16

7. Read the License Agreement and acknowledge your agreement by selecting "I accept the terms in the license agreement". Then click **Next**.
8. The "Ready to Install the Program" window will appear. See Figure 17.

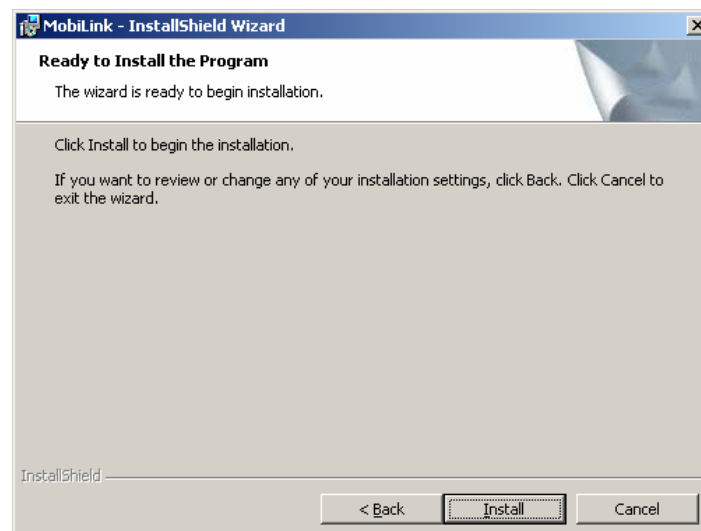


FIGURE 17

9. Click **Install**



10. The "Installing MobiLink" window will appear while MobiLink is being installed. See Figure 18.

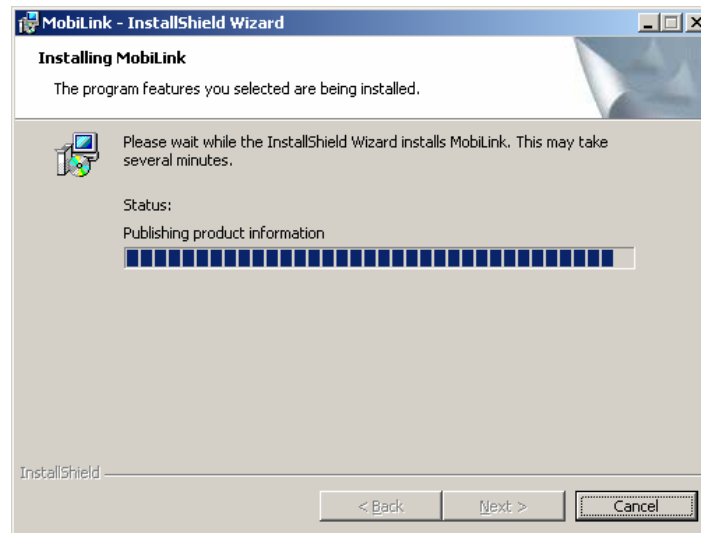


FIGURE 18

11. When the installation is complete, the "InstallShield Wizard Completed" window will appear. See Figure 19.

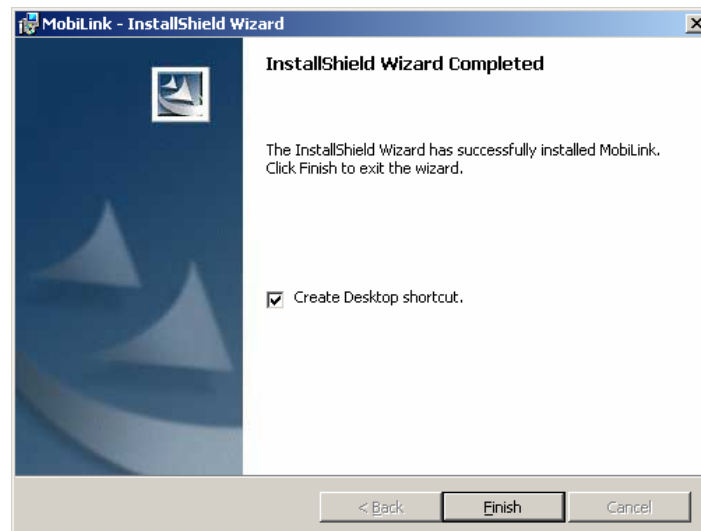


FIGURE 19

12. Click **Finish**.
13. **You are prompted to restart your PC.** Restart your PC.



1.7.4 Windows XP detects your U740 Merlin

1. Insert the SIM card into the modem. This is required to connect to the Network.

NOTE: SIM CARD CONTACT POINTS MUST FACE UPWARDS, AND THE ORIENTATION NOTCH MUST BE POSITIONED AS SHOWN IN THE PICTURE. (SEE PICTURE IN SECTION 1.7.2). PLEASE SEE SECTION 1.6 "CARE OF YOUR MERLIN" ON ADDITIONAL SIM CARE AND INSERTION POINTS.

2. Insert the modem into the PC card slot of your PC. Windows reads the information from the Modem and connects drivers for each function of your U740 Merlin. You will see a sequence of callouts near the bottom right of your computer screen as Windows connects all drivers for your U740 Merlin. See Figure 20 through Figure 29.



FIGURE 20

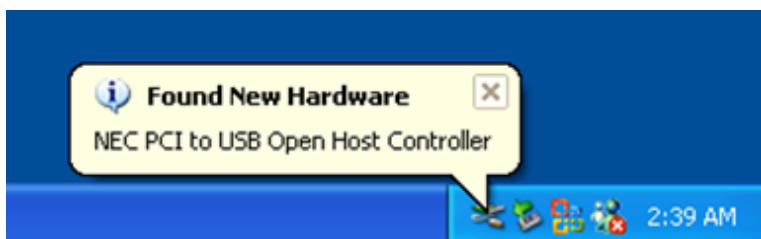


FIGURE 21



FIGURE 22



FIGURE 23



FIGURE 24

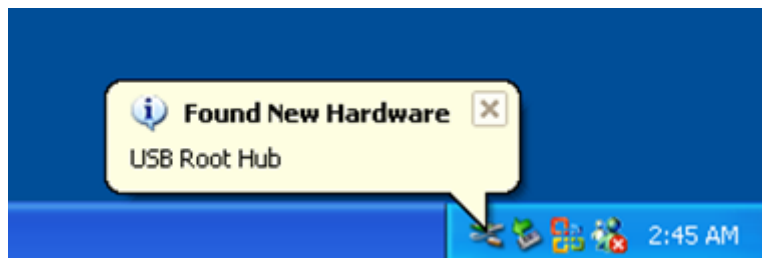


FIGURE 25



FIGURE 26



FIGURE 27



FIGURE 28


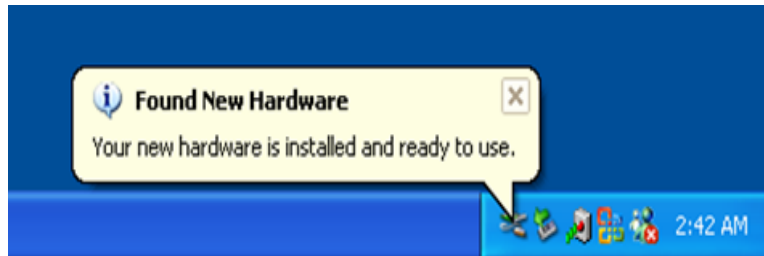


FIGURE 29

Windows has now detected and installed the drivers for your U740 Merlin. Proceed to Section 2.

You may verify all the drivers in Windows Device Manager.



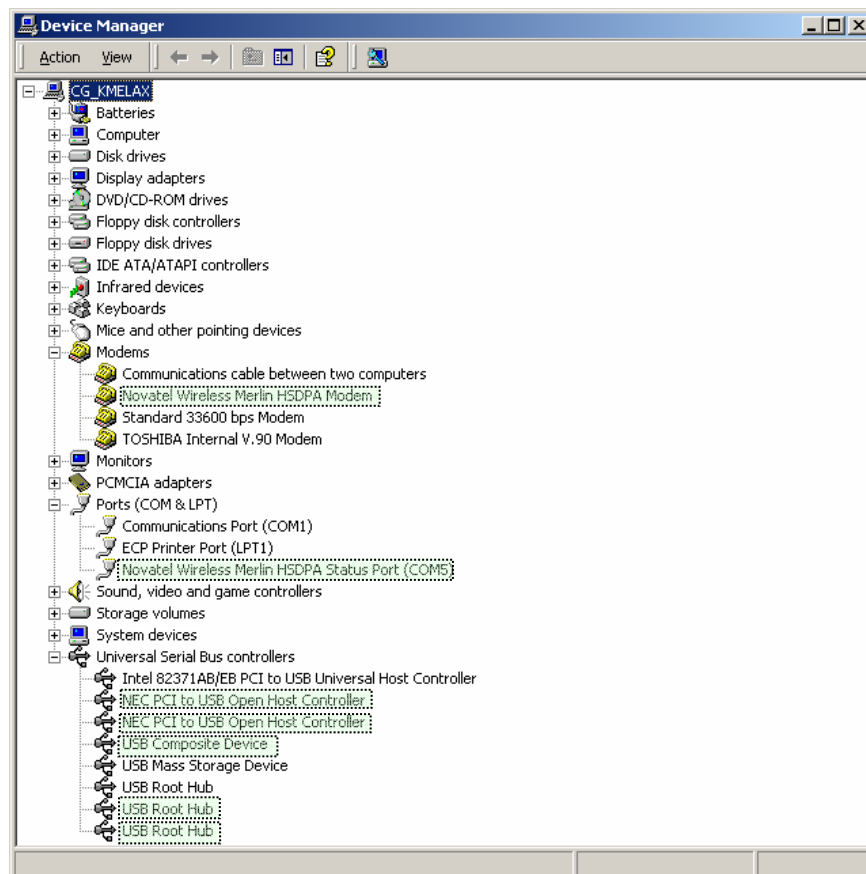

2 MOBILINK

In This Section

- Describing MobiLink Software Suite
- Starting MobiLink
- MobiLink's Main Window
- Using MobiLink to connect to and disconnect from the Network
- MobiLink's features
- Create a data session with MobiLink

This section will describe the MobiLink Software Suite, how to use MobiLink to connect to and disconnect from the Network along with the various functions associated with the buttons and the menu.

2.1 MOBILINK OVERVIEW

The Novatel Wireless MobiLink™ Communications Software Suite is a family of wireless connectivity applications that connect mobile devices using, Wireless Wide Area Networks (WWAN) i.e 3G UMTS networks, Wireless Local Area Networks (Wi-Fi) and Ethernet in a single application to allow quick and easy access to email, the Internet and corporate networks anytime, anywhere.


The MobiLink Communications Software Suite of applications contains a messaging client that manages 2 way Short Message Service (SMS), an address book client that manages contacts and phone numbers, a connection manager that manages the various connections, and a customization utility to manage and generate pre-loaded profiles. The following section will detail the features of each application.

2.2 STARTING MOBILINK

To start MobiLink, double-click on the MobiLink icon  that MobiLink places on your desktop during the installation process.



2.2.1 Main Display Window

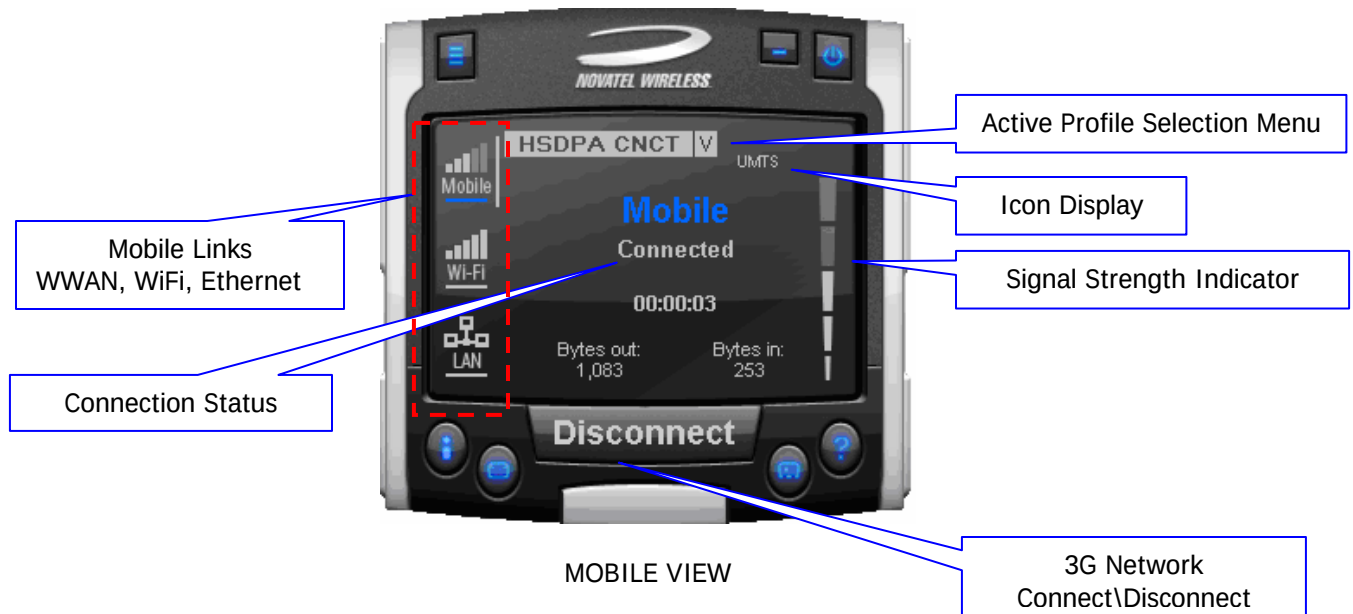

2.2.2 Main Display Window Description

Mobile Links:

Active icon selection to change main display, as well as status indication for all the three types of connections. The blue line indicates which connection Windows is using to connect to the Internet.

Mobile View: (select Mobile icon)



Connect/Disconnect Button:

Connects or Disconnects you from the Network.

Signal Strength Indicator:

Indicates the strength of the RF signal in your vicinity or area.

Active Profile Selection:

Choose a profile (Username, Password, APN, QoS) among many.

Icon Display will display:

WWAN Technology Display:



HSDPA, UMTS, GPRS, GSM , IS95a, 1XRTT or EVDO

Indicates Roaming, device is away from the home network

3G in dormant mode (May not be applicable for all MAs)

New SMS message available.

Device is locked – Connection will be disabled in this state.

Displays information about the Wi-Fi connection. See MobiLink help for more information.

Wi-Fi View: (Select Wi-Fi icon)



LAN View: (Select LAN icon)



Displays information about the LAN connection. See MobiLink help for more information.



2.2.3 MobiLink Buttons

Menu button:



Displays the various features of MobiLink

Web browser button:



Launches your Web browser

SMS Client button:



Launches MobiLink's SMS client

Address Book Client button:



Launches MobiLink's address book client

Online help button:



Launches MobiLink's online help

Minimize button:



Will minimize MobiLink

Exit button:



Will exit out of MobiLink

2.2.4 Features

Click on the Menu Button will display various features of MobiLink.

NOTE: SEE MOBILINK ONLINE HELP FOR MORE DETAILS ON THE FEATURES

PROFILE MANAGER:

This menu item enables you to create, edit and delete a 3G profile.
(See MobiLink's online help for more details)

CONFIGURATION ITEM:

General tab:

This menu item enables you to manage MobiLink's settings, including;
Settings of the user interface preferences.

Mobile tab:

Settings of the connection preferences; locking card and Network
selection. (See MobiLink's online help for more details)

WiFi tab:

Displays all Wi-Fi adapters on system. Clicking on **PROPERTIES** will
launch standard Windows Wireless Network Connection properties
dialog window.

LAN tab:

Displays all Ethernet adapters on system. Clicking on **PROPERTIES** will
launch standard Windows LAN Connection properties dialog window.

PROPERTIES ITEM:

Firmware Version:

This menu item will display;
This is software programmed in the modem.

IMEI:

A unique number that identifies your modem on the network

Mobile Number:

SIM Number (a numeric number)

Manufacturer:

Novatel Wireless

Modem Type:

Merlin U740

Technology:

UMTS

REPORT ITEM:

Statistical information about the current connection (See MobiLink's
online help for more details)

TRANSPARENCY:

Transparency in percent of the application (See MobiLink's online help
for more details)

ABOUT BUTTON DISPLAYS:

MobiLink's version

EXIT:

Exit MobiLink



2.2.5 Creating a data session

NOTE: PLEASE ENSURE YOU HAVE AN ACTIVE UMTS DATA ACCOUNT WITH A UMTS SERVICE PROVIDER, THE SIM MUST BE ENABLED FOR UMTS AND SMS AS REQUIRED.

1. Double-click on the MobiLink icon  that MobiLink places on your desktop during the installation process.
2. The MobiLink software will then initialize your UMTS Merlin. See Figure 30.



FIGURE 30

3. If your SIM is locked, you will be prompted for a SIM PIN code/number (originally provided by your Service Provider. You may change this – Menu > Configuration > Mobile tab >) Enter the SIM code and press **OK**. See Figure 31.

NOTE: IF YOU ARE NOT PROMPTED FOR A SIM PIN CODE CONTINUE TO STEP 4.

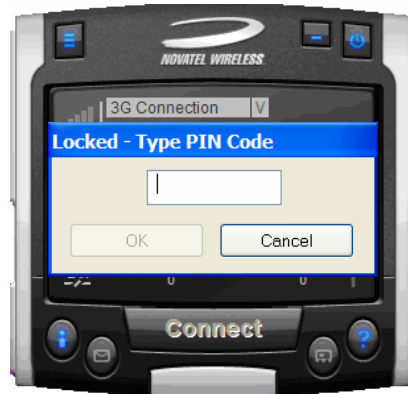


FIGURE 31

NOTE: SEE TROUBLESHOOTING SECTION FOR UNLOCKING YOUR DATA CARD IF IT IS SIM LOCKED.



4. The Merlin will now search for available networks. See Figure 32.



FIGURE 32

5. The Merlin will then attempt to "ATTACH" to the network, and if successful, you will see Figure 33. Depending on which technology it was originally set to the LED should blink green for GPRS or blue for UMTS.



FIGURE 33

NOTE: ONCE ATTACHED TO THE NETWORK, YOU CAN CHOOSE AN AVAILABLE PROFILE TO CONNECT TO THE NETWORK FROM THE ACTIVE PROFILE SELECTION MENU (CLICKING ON V SYMBOL) OR CREATE A PROFILE IF NECESSARY.

NOTE: BEFORE PROCEEDING TO THE NEXT STEP, IF YOU ARE REQUIRED TO CREATE A NEW PROFILE (I.E YOU CANNOT CONNECT TO THE NETWORK OR YOU DON'T SEE ANY PROFILES, YOU WILL NEED THE FOLLOWING INFORMATION FROM YOUR SERVICE PROVIDER TO CREATE A PROFILE. A BASIC PROFILE CONSISTS OF;

- Profile Name – Your Name of choice
- User Name – (if required by your service provider)
- Password – (if required by your service provider)
- APN (Access Point Name) – Obtained by your Service Provider
- Phone Number – You might have to enter the standard phone number *98# (Please check with your service provider and confirm the appropriate phone number, the default is *98#, however you service provide may use a slight alteration.

To create a new profile, click on the Menu Button, and choose Profile Manager from the drop down menu. The Profile Manager Window will appear. See Figure 34.

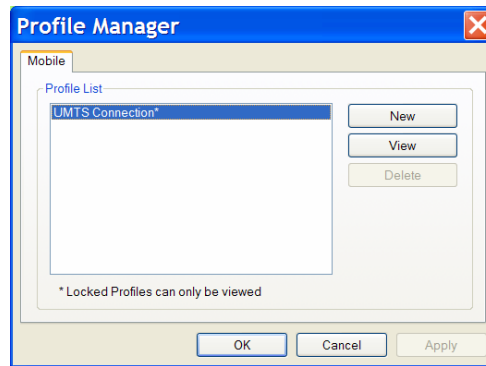


FIGURE 34

Click **New**. The Profile Wizard Window Step 1 of 3 will appear. See Figure 35.

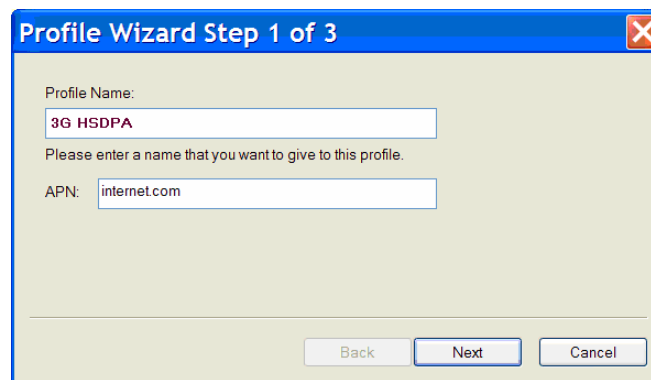


FIGURE 35

Enter your name of choice for the profile, example, 3G HSDPA and your APN provided to you by your service provider, example, internet.com. Click **Next**. The Profile Wizard Window Step 2 of 3 will appear. See Figure 36.

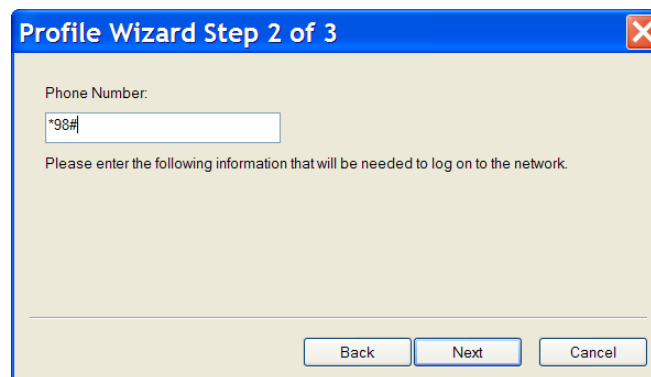


FIGURE 36

Enter the phone number *98# (or network specified phone # if necessary). Click **Next**. The Profile Wizard Window Step 3 of 3 will appear. See Figure 37

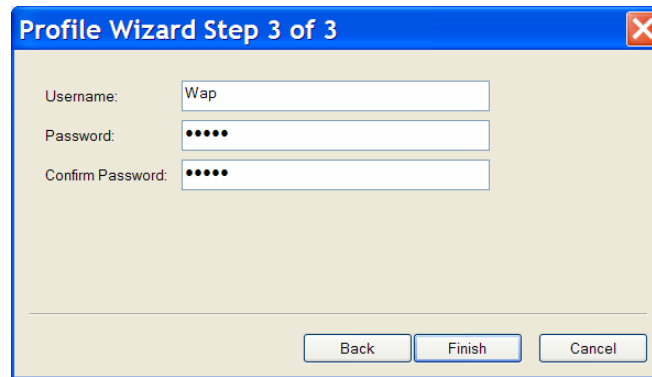


FIGURE 37

If required enter your Username, Password and Confirm password. Click **Finish**. You will now see your profile in the profile list. See Figure 38. Click **OK**.

NOTE: MOST EUROPEAN SERVICE PROVIDERS DO NOT REQUIRE A USERNAME AND PASSWORD. LEAVE THESE FIELDS BLANK IF YOUR SERVICE PROVIDER DOES NOT REQUIRE A USERNAME AND PASSWORD

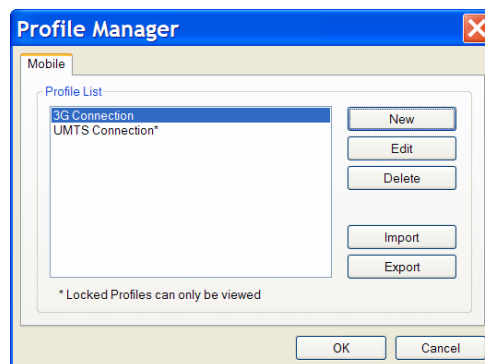


FIGURE 38

You have now created a profile that will appear in the Active Profile Selection Menu. See Figure 39.



FIGURE 39



6. Select the available profile or a profile that you created from the Active Profile Menu (clicking on V symbol) See Figure 39 above.
7. Click **Connect**.

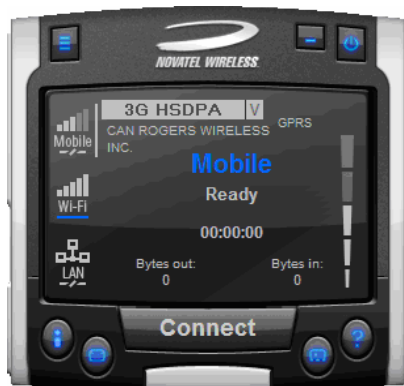


FIGURE 40

8. Your Merlin will attempt to connect to the network. See Figure 41

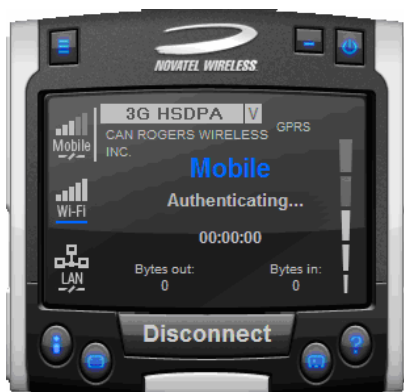


FIGURE 41

9. Following successful authentication, your Merlin will connect to the network. See Figure 42



FIGURE 42

10. To disconnect from the network, click the **Disconnect** button.



3 SENDING AND RECEIVING SMS MESSAGES

In This Section

- What is SMS
- Use The SMS client in MobiLink to send SMS messages
- Use the SMS client in MobiLink to read messages

This section will assist you in using the Short Messaging System client in MobiLink

3.1 WHAT IS SMS

Short Message Service (SMS) is the transmission of short text messages to and from mobile devices. Messages cannot be longer than 160 alpha-numeric characters and cannot contain any images or graphics.

To send or receive an SMS message you only have to be attached to the Network. You may also send and receive SMS messages while connected to the Network.

NOTE: ANY SMS MESSAGES WILL BE SUBJECT TO THE TERMS AND AGREEMENTS OF YOUR SERVICE WIRELESS PROVIDER. THIS MEANS THE SENDING OF SMS MESSAGES MAY BE CHARGED AN ADDITIONAL FEE BY YOUR WIRELESS PROVIDER

NOTE: THE SMS CLIENT ICON WILL ONLY BECOME ACTIVE ONCE YOU ARE ATTACHED, HENCE YOU MAY SEND AND RECEIVE SMS MESSAGES WHILE ATTACHED TO THE NETWORK.

ATTACHED TO NETWORK: YOU CANNOT TRANSFER DATA.

CONNECTED TO NETWORK: YOU CAN TRANSFER DATA (BROWSE INTERNET, CHECK EMAIL ETC...)

3.2 MOBILINK'S SMS WINDOW

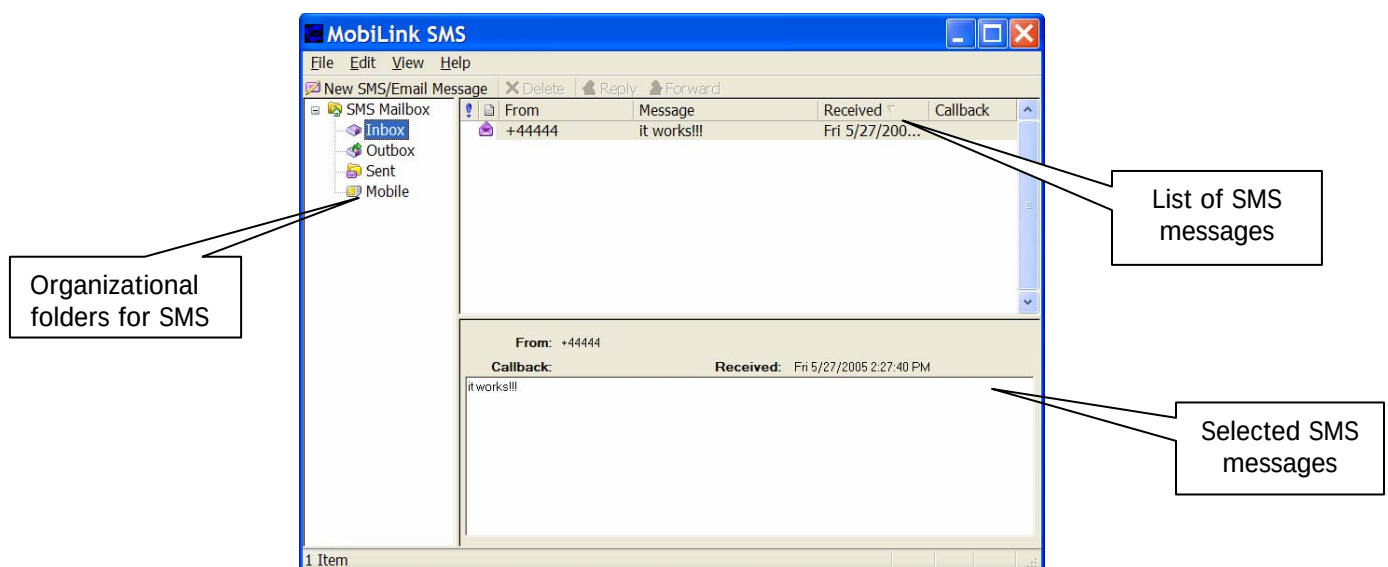


FIGURE 43



MobiLink SMS Toolbar Description

New SMS/Email Message:	Creates a new message
Delete:	Deletes the selected SMS message(s)
Reply:	Copies the sender field to a new message
Forward	Copies the message contents to a new message

SMS Mailbox Description

Inbox:	contains received messages
Outbox:	is a temporary storage place for messages waiting to be sent
Sent:	stores the SMS messages that have been sent

3.2.1 Sending SMS Messages

1. Launch the MobiLink application (See section 2.2.5 Creating a data session). After your Merlin has attached to the network (Step 5 of section 2.2.5), the SMS button will become active. See figure 44.

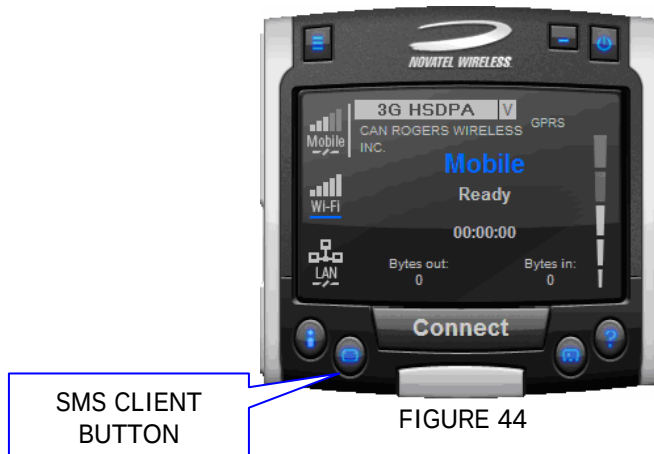


FIGURE 44

NOTE: AT THIS POINT YOU WILL NOT BE ABLE TO SEND OR RECEIVE DATA (BROWSE WEB OR CHECK EMAILS) UNLESS YOU CONNECT TO THE NETWORK BY CLICKING THE CONNECT BUTTON

2. Click on the SMS client icon, see Figure 44, and the MobiLink SMS window will appear. See Figure 43 .
3. Click on the New SMS/Email message button to create a new message. See Figure 43.

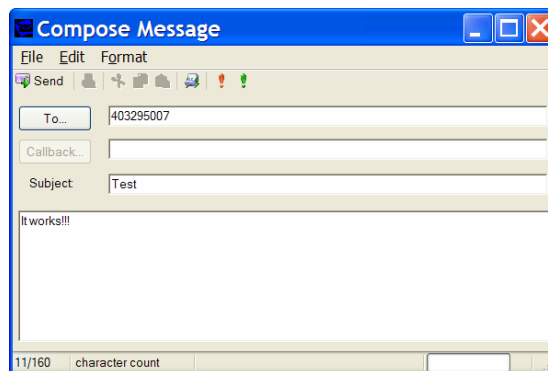


FIGURE 45



4. In the **To** box, type the phone number of each recipient, separating names with a semicolon (;). To add phone numbers from the Address Book, click the **To** button and then select the phone number.
5. Type your message, and then click **Send** on the toolbar.

3.2.2 Receiving and Reading SMS Messages

Once you are attached to the Network, you are able to receive SMS messages. MobiLink will notify you when you receive an SMS message. See Figure 46.



FIGURE 46

After the SMS Client receives your messages, you can read messages by launching the SMS client. MobiLink's SMS window will appear. See Figure 37 above.

Click the **Inbox** icon in the Folders list.

To view the message in the lower pane, click the **message** in the message list.

You may also view messages from the **Outbox** and **Sent** folders.



4 DETERMINE MERLIN STATES

In This Section

- Determine the current state of your UMTS Merlin, by interpreting the cadence (flashing sequence) and colour of the Light Emitting Diode

The Light Emitting Diode (LED) is a device that lights up when power is applied to it. Interpreting the LED's flashing sequence and color, will provide you with the current state of your UMTS Merlin. See Table 1 below.

Cadence (flashing sequence)	LED Display	Merlin State	Cause	Remedy
(1/4sec) 250ms ON (1/4sec) 250ms OFF	RED	Merlin trying to read SIM	The modem is unable to read the SIM. An error has occurred in the modem firmware.	See Section 5, Problem 5
ON (Not flashing)	RED	Merlin Searching for wireless service	The Merlin is not receiving a signal from the wireless network	See Section 5, Problem 6
(1/4sec) 250ms ON (1 3/4sec) 1750ms OFF	BLUE	Your Merlin is currently receiving a UMTS circuit switched (CS) signal from the network and has registered on the circuit switched (CS) domain		
(1/4sec) 250ms ON (1/4sec) 250ms OFF (1/4sec) 250ms ON (1 3/4sec) 1750ms OFF	BLUE	Your Merlin is currently receiving a UMTS packet switched (PS) signal from the network and has registered on the packet switched (PS) domain (also CS i.e PS or PS+CS)		
ON (Not flashing)	BLUE	Your Merlin is currently PDP context activated on the UMTS system.		
(1/4sec) 250ms ON (1 3/4sec) 1750ms OFF	GREEN	Your Merlin is currently receiving a GSM circuit switched (CS) signal from the network and has registered on the GSM circuit switched (CS) domain		
(1/4sec) 250ms ON (1/4sec) 250ms OFF (1/4sec) 250ms ON (1 3/4sec) 1750ms OFF	GREEN	Your Merlin is currently receiving a GSM/GPRS packet switched (PS) signal from the network and has registered on the GSM/GPRS packet switched (PS) domain. (also CS i.e PS or CS)		
ON (Not flashing)	GREEN	Your Merlin is currently PDP (Packet Data Protocol) context activated on the GSM/GPRS system		



NOTE: WHEN THE MODEM TRANSITIONS FROM ONE STATE TO ANOTHER, THE ACTUAL LED DISPLAY WILL NOT CHANGE IMMEDIATELY, RATHER, IT WILL ONLY CHANGE ONCE THE MODEM HAS CONFIRMED THAT THE NEW STATE IS VALID. FOR EXAMPLE, WHEN THE MODEM IS TAKEN OUT OF A SERVICE AREA IT MIGHT TAKE THE MODEM 10 TO 90 SECONDS TO CONFIRM THAT NO SERVICE IS AVAILABLE AT WHICH TIME THE LED DISPLAY WILL CHANGE STATES ACCORDINGLY

PDP (Packet Data Protocol) Context Activation Process: To connect to a PDN (Packet Data Network), such as the Internet, some sort of session description information needs to exist (i.e. type of IP network, quality of service, IP address etc...) to enable agreement on the characteristics of any data flow between the network and the mobile terminal. This is essentially, what PDP 'context' activation is.

Circuit Switched (CS) Data connection is basically similar to a land line modem dial up call. A dedicated connection is set up for the duration of the call regardless of whether data is transferred or not.

A Packet Switched (PS) Data connection is typically set up once. Within packet-switched networks, data is divided (disassembled and packaged) into packets before it is sent. Packets are routed through the networks based on a destination address contained within each packet. Once all the packets arrive at their respective destinations, the data is recompiled (unpacked and assembled). There is no need to re-establish the connection before each transmission.



5 TROUBLESHOOTING

In This Section

- Troubleshooting common problems
-

This section will assist you in resolving common problems that might arise during installation or connecting to the network.

[Problem 1.1: Cannot install MobiLink](#)

[Problem 1.2: When I run the MobiLink software, I get the message “No Card Detected” what does this mean?](#)

[Problem 1.3: When I insert the modem, I get “Unknown_PCMCIA_Manufacturer” instead of “Novatel_Wireless Merlin_UMTS_Modem”](#)

[Problem 1.4: When I run the MobiLink software, I get the message “SIM not Found – Check Orientation?”](#)

[Problem 1.5: Modem cannot read SIM. LED Flashing RED](#)

[Problem 1.6: When I run MobiLink software, the Window “searching for network” is displayed continuously](#)

[Problem 1.7: Cannot connect to network](#)

[Problem 1.8: Cannot browse web](#)



1.1 CANNOT INSTALL MOBILINK

POSSIBLE CAUSE: YOU DON'T HAVE ADMINISTRATIVE PRIVILEGES

RESOLUTION:

Windows 2000 and XP

1. Talk to your system administrator if applicable
2. Log onto your computer as an administrator, or create an user account with administrator privileges


1.2 PROBLEM: WHEN I RUN THE MOBILINK SOFTWARE, I GET THE MESSAGE "NO CARD DETECTED"

POSSIBLE CAUSES: YOU HAVE NOT INSERTED YOUR UMTS MERLIN PROPERLY INTO THE PC CARD SLOT OF YOUR PC, OR WINDOWS DID NOT INSTALL THE DRIVERS CORRECTLY, OR YOU MIGHT HAVE A CONFLICT.


RESOLUTION:

For Windows 2000 and XP

1. Restart MobiLink again, or remove Card, reboot PC and try again or go to step 2
2. Insert your Novatel Wireless UMTS U740 modem into your PC CARD slot to install the drivers onto your computer. If you have already done so and still receive this error then you must check to see if the drivers have been installed properly.
3. Right click **My Computer Icon** (for Windows 2000 this is usually on the desktop, and for Windows XP this is usually in the Start menu) > **Manage** --- See Window 1
4. Select **Device Manager** --- See Window 2

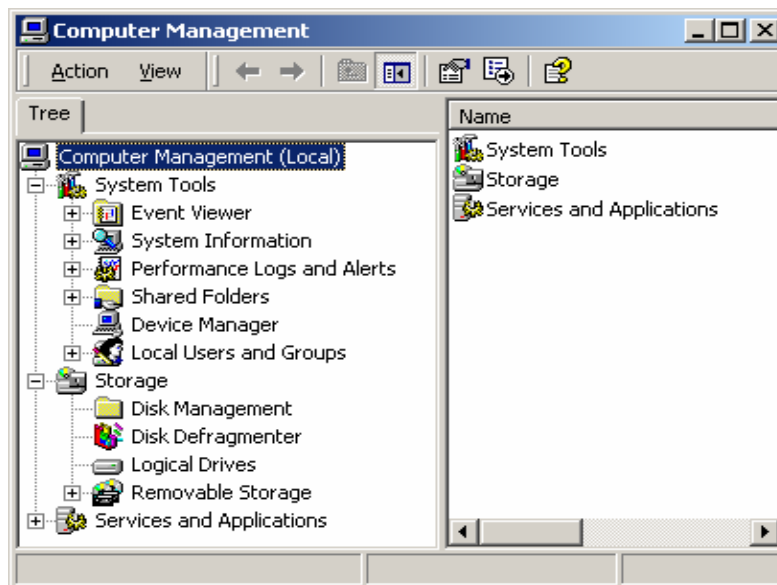


WINDOW 1

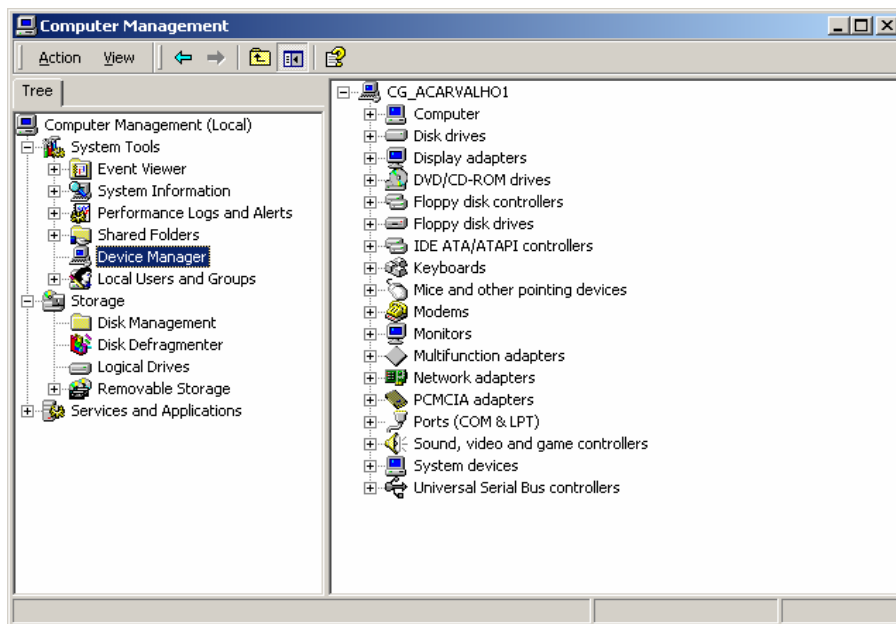

WINDOW 2

5. Expand Modems, Ports and USB Serial Bus Controllers category by clicking on the + sign. See Window 3

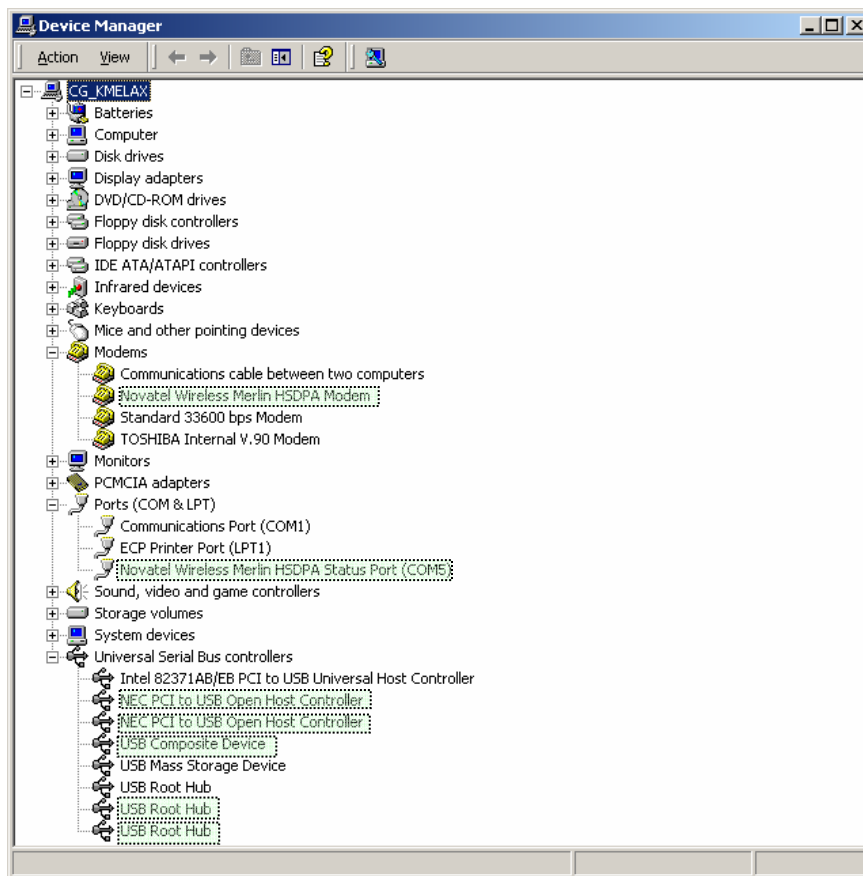

WINDOW 3

NOTE: DEVICES HIGHLIGHTED. THEY WILL NOT BE HIGHLIGHTED ON YOUR MACHINE.



6. Check and see if you have a yellow exclamation mark or red X on any device. If you do, try the following.
 - Reboot your PC or
 - Uninstall and reinstall the drivers (Do not have the Merlin plugged in when reinstalling)

To Uninstall follow these steps. For Windows 2000 and XP

1. Go to **Start > settings > control panel > Add or remove programs > Select **MobiLink** and click **Remove**.**
Make sure your modem is plugged in while uninstalling. (See Windows help if necessary)
2. Remove the modem from the PC slot
3. Reboot and reinstall. Go to Section 1.7 Installing MobiLink

1.3 PROBLEM: WHEN I INSERT THE MODEM, I GET UNKNOWN_PCMCIA_MANUFACTURER" INSTEAD OF "NOVATEL_ WIRELESS MERLIN_UMTS_MODEM

POSSIBLE CAUSE: HARDWARE FAILURE INSIDE THE MODEM

RESOLUTION: REPLACE MODEM

1.4 PROBLEM: WHEN I RUN THE MOBILINK SOFTWARE, I GET THE MESSAGE "SIM NOT FOUND – CHECK ORIENTATION

POSSIBLE CAUSE: PROBLEM WITH YOUR SIM CARD.

RESOLUTION:

1. Make sure you have inserted the SIM card exactly as the picture in this manual, or on the back of Merlin or Quick Start Guide, noting the location and orientation of the bevel corner
2. Make sure the contacts of the SIM card are clean

1.5 PROBLEM: MODEM CANNOT READ SIM. LED FLASHING RED

POSSIBLE CAUSE: SIM LOCKED OR SIM SELF DESTRUCTED

RESOLUTION

1. Enter in your PIN as required. See Section 2.2.5 Creating a data session
2. Contact your Service Provider if you entered your PIN number incorrectly 3 times. You will require a PUK code.
3. If you enter the PUK code incorrectly 10 times, the SIM is designed to self destruct. You will have to be issued a new SIM. Contact your Service Provider.
4. Depending on where you purchased your Modem, the Modem could have a Service Provider Lock (SIMLOCK) which ties the modem to a particular set of SIMs. Please contact the Service Provider to unlock the Modem.



1.6 PROBLEM: WHEN I RUN MOBILINK SOFTWARE, THE WINDOW “SEARCHING FOR NETWORK” WILL BE DISPLAYED CONTINUOUSLY

POSSIBLE CAUSE 1: OUT OF GSM COVERAGE AREA

RESOLUTION: RELOCATE TO AN AREA OF COVERAGE. CONTACT YOUR SERVICE PROVIDER FOR DETAILS OF THEIR COVERAGE AREAS.

POSSIBLE CAUSE 2: CONFIGURATION SET TO MANUAL NETWORK SELECTION

RESOLUTION: CHANGE BACK TO AUTOMATIC

1.7 PROBLEM: CANNOT CONNECT TO NETWORK

POSSIBLE CAUSE 1: INCORRECT USER NAME, PASSWORD OR ACCESS POINT NAME (APN).

RESOLUTION 1: CHECK YOUR PROFILE FOR AN INCORRECT ENTRY OF THE ABOVE PARAMETERS. RE-ENTER THE PARAMETERS OR CONTACT YOUR SERVICE PROVIDER IF NECESSARY TO CONFIRM.


1.8 PROBLEM: CANNOT BROWSE THE WEB

POSSIBLE CAUSE 1: INCORRECT SERVER SETTINGS

1. In Internet Explorer go to **Tools > Internet Options > Connections** tab




2. In Dial Up and Virtual Private Network Setting double click on 3G Connection – See Window 5

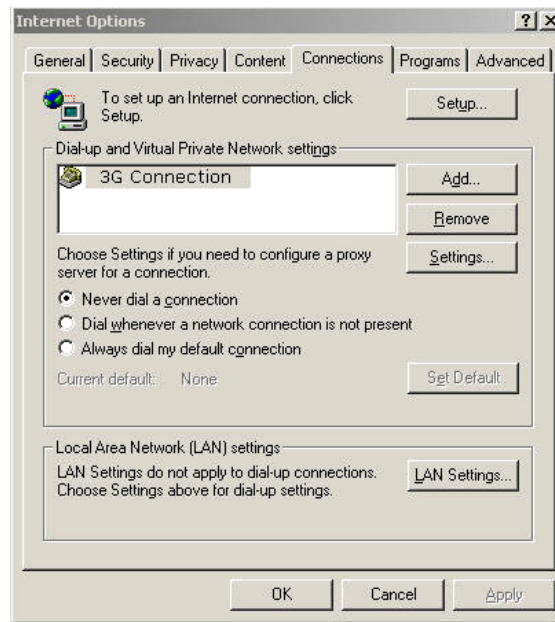

WINDOW 5

3. Check appropriate boxes if you are using a proxy server. See Window 6

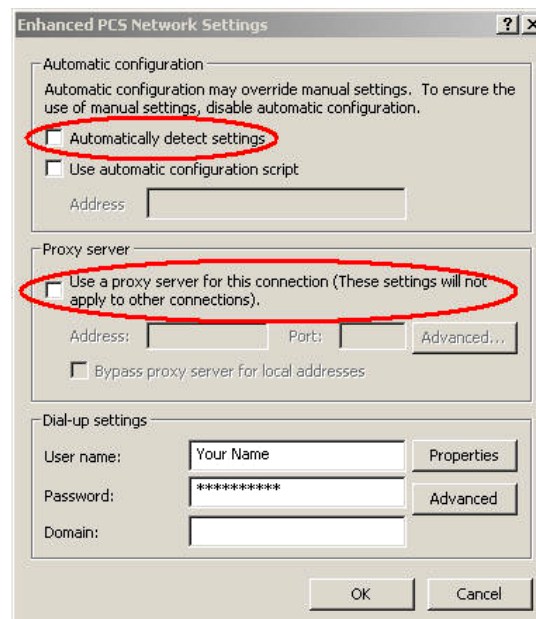


WINDOW 6

POSSIBLE CAUSE 4: DNS SERVER PROBLEMS

RESOLUTION 4:

Windows 2000 and XP

1. Click **Start** > **Run** and type in **Command** in the Run Window. A DOS window should open. See Window 7

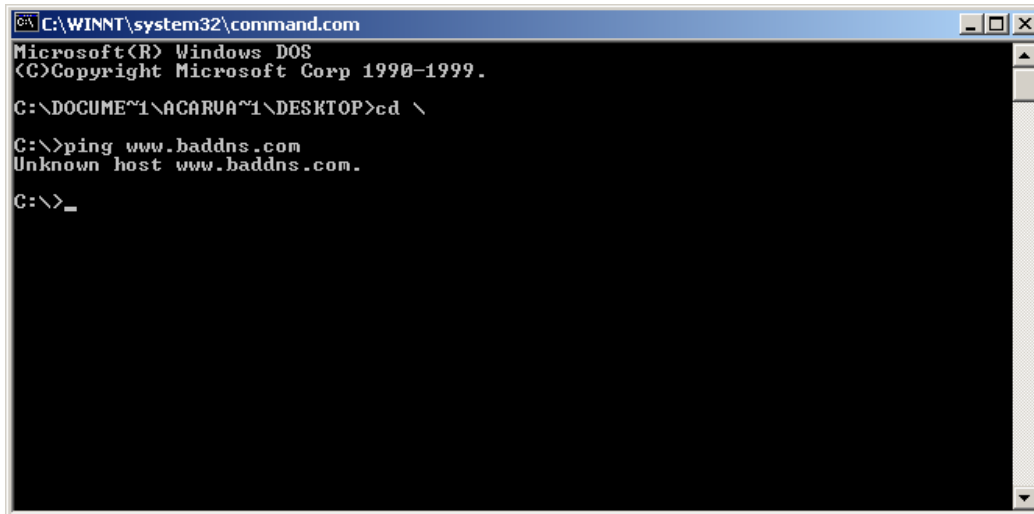

WINDOW 7

2. At the C prompt type in PING www.nvtl.com

- Response: Unknown host www.nvtl.com --- Usually faulty DNS. Call your Network Provider
- Response: Pinging nvtl.com [216.65.221.49] with 32 bytes of data. --- DNS ok even if you don't get reply from ping.



6 PRODUCT SPECIFICATION

In This Section

- Technical and Environmental Specifications

6.1 TECHNICAL SPECIFICATION

This section outlines the technical and environmental specifications of your Merlin U740

Name:	Merlin U740
Model:	NRM-U740
Approvals:	CE Mark (Europe), FCC (North America)
Dimensions:	120.6 x 54 x 10.8 mm
Wireless Network – Dual Mode:	UMTS/HSDPA and GPRS/EDGE
PC Card Standard:	Type II PC Card 3.3V

Technology:	WCDMA (FDD) /HSDPA
Band Designation:	UMTS (2100MHz)
Transmit Band:	1920MHz – 1980MHz
Receive Band:	2110MHz – 2170MHz
Power Output – Transmit Power:	Class 3 (+24dBm)



Technology:	GPRS/EDGE
Band Designation:	GSM (850MHz)
Multi Class	MS-10 (maximum : 4 RX, 2 TX, 5 slots)
Transmit Band:	824MHz – 849MHz
Receive Band:	869MHz – 894MHz
Power Output – Transmit Power:	Class 4 (+33dBm)
Power Output (EDGE) – Transmit Power	E2 (+27dBm)
Band Designation:	E-GSM (includes standard GSM 900MHz)
Multi Class	MS-10 (maximum : 4 RX, 2 TX, 5 slots)
Transmit Band:	880MHz – 915MHz
Receive Band:	925MHz – 960MHz
Power Output – Transmit Power:	Class 4 (+33dBm)
Power Output (EDGE) – Transmit Power:	E2 (+27dBm)
Band Designation	DCS (1800MHz)
Transmit Band	1710MHz – 1785MHz
Receive Band	1805MHz- 1880MHz
Power Output – Transmit Power:	Class 1 (+30dBm)
Power Output (EDGE) – Transmit Power:	E2 (+26dBm)
Band Designation	PCS (1900MHz)
Transmit Band	1850MHz – 1910MHz
Receive Band	1930MHz- 1990MHz
Power Output – Transmit Power:	Class 1 (+30dBm)
Power Output (EDGE) – Transmit Power:	E2 (+26dBm)



6.2 ENVIRONMENTAL SPECIFICATION

Operating Temperature	0° Celsius to +55° Celsius
Storage Temperature	-20° Celsius to +65° Celsius
Relative Humidity	95% maximum – Non Condensing
Vibration	147 m/s ² (15Gpeak) 10hz-2000hz



7 SAFETY AND REGULATIONS

In This Section

- Wireless Communication
 - Safety and Hazards
 - Regulatory Information
-

This section will inform you of the important safety measures you should be aware, including the standards that the modem complies to.

7.1 WIRELESS COMMUNICATIONS

IMPORTANT NOTICE

Due to the transmission and reception properties of wireless communications, data can occasionally be lost or delayed. This can be due to the variation in radio signal strength that results from changes in the characteristics of the radio transmission path. Although data loss is rare, the environment where you operate the modem may adversely affect communications.

Variations in radio signal strength are referred to as fading. Fading is caused by several different factors including signal reflection, the ionosphere, and interference from other radio channels.

Novatel Wireless or its partners will not be held responsible for damages of any kind resulting from the delays or errors in data transmitted or received with the Merlin U740, or failure of the Merlin U740 to transmit or receive such data

7.2 SAFETY HAZARDS

Do not operate the Merlin U740 in an environment that may be susceptible to radio interference resulting in danger specifically;

- Areas where prohibited by the law
 - o Follow any special rules and regulations and obey all signs and notices. Always turn off the host device and remove the modem from the card slot when instructed to do so, or when you suspect that it may cause interference or danger.
- Where explosive atmospheres may be present
 - o Do not operate your modem in any area where a potentially explosive atmosphere may exist. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Be aware and comply with all signs and instructions.
 - o Users are advised not to operate the modem while at a refuelling point or service station. Users are reminded to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.
 - o Areas with a potentially explosive atmosphere are often but not always clearly marked. Potential locations can include gas stations, below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.



- Near Medical and life support equipment
 - o Do not operate your modem in any area where medical equipment, life support equipment, or near any equipment that may be susceptible to any form of radio interference. In such areas, the host communications device must be turned off. The modem may transmit signals that could interfere with this equipment.
- On an aircraft, either on the ground or airborne
 - o In addition to FAA requirements, many airline regulations state that you must suspend wireless operations before boarding an airplane. Please ensure that the host device is turned off and your modem is removed from the card slot prior to boarding aircraft in order to comply with these regulations. The modem can transmit signals that could interfere with various onboard systems and controls.
- While operating a vehicle
 - o The driver or operator of any vehicle should not operate a wireless data device while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some countries, operating such communications devices while in control of a vehicle is an offence.
- Electrostatic Discharge (ESD)
 - o Electrical and electronic devices are sensitive to electrostatic discharge (ESD). The MobiLink software will attempt to re-initialize the device should a substantial electrostatic discharge reset the device. If the software is not operational after an ESD occurrence, then restart MobiLink. See section 2.1.4.

7.3 REGULATORY NOTICES

This device has been tested to and conforms to the regulatory requirements of the European Union and has attained CE Marking. The CE Mark is a conformity marking consisting of the letters "CE". The CE Mark applies to products regulated by certain European health, safety and environmental protection legislation. The CE Mark is obligatory for products it applies to: the manufacturer affixes the marking in order to be allowed to sell his product in the European market.

This product conforms to the essential requirements of the R&TTE directive 1999/5/EC in order to attain CE Marking. A notified body has determined that this device has properly demonstrated that the requirements of the directive have been met and has issued a favorable certificate of expert opinion. As such the device will bear the notified body number 1313 after the CE mark.

The CE Marking is not a quality-mark. Foremost, it refers to the safety rather than to the quality of a product. Secondly, CE Marking is mandatory for the product it applies to, whereas most quality markings are voluntary.

Marking: The product shall bear the CE mark, the notified body number(s) and the Class II identifier (alert sign) as depicted to the right, when all the essential requirements have been met.



The applicable sections of the following standards were used to demonstrate compliance to this requirement.



R&TTE REQUIREMENT	DISCIPLINE	APPLIED STANDARD
Article 3.1(a)	Health	ICNIRP 1998 European Council Rec. 1999/519 EC
Article 3.1(a)	Safety	IEC 60950-1
Article 3.1(b)	EMC	EN 301 489-1 EN 301 489-7 EN 301 489-24
Article 3.2	Spectrum	EN 301 511 EN 301 908-1 EN 301 908-2

ICNRP 1998

International Commission on Non-Ionizing Radiation Protection

ETSI EN 60950

Safety of Information Technology Equipment

ETSI EN 301 489-01

Electromagnetic compatibility and Radio Spectrum Matters (ERM) Electromagnetic Compatibility (EMC) standard for radio equipment and services.

Part 1: Common Technical requirements

ETSI EN 301 489-07

Electromagnetic compatibility and Radio Spectrum Matters (ERM) ElectroMagnetic Compatibility (EMC) standard for radio equipment and services.

Part 7: Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS)

ETSI EN 301 489-24

Electromagnetic compatibility and Radio Spectrum Matters (ERM) ElectroMagnetic Compatibility (EMC) standard for radio equipment and services.

Part 24: Specific conditions for IMT-2000 CDMA Direct Spread (URTA) for Mobile and portable radio and ancillary equipment.

ETSI EN 301 511

Global System for Mobile communications (GSM):

Harmonized EN for mobile stations in the GSM 900 and GSM1800 bands covering essential requirements under article 3.2 of the R&TTE directive (1999/5/ED)

ETSI EN 301 908-01

Electromagnetic compatibility and Radio Spectrum Matters (ERM) Base Stations (BS) and User Equipment (UE) for IMT-2000 Third-Generation cellular networks.

ETSI EN 301 908-02

Electromagnetic compatibility and Radio Spectrum Matters (ERM) Base Stations (BS) and User Equipment (UE) for IMT-2000 Third-Generation cellular networks.

Part 2: Harmonized EN for IMT-2000,

CDMA Direct Spread (UTRA FDD) (UE) covering essential requirements of article 3.2 of the R&TTE Directive



FEDERAL COMMUNICATIONS COMMISSION NOTICE (FCC -- UNITED STATES)



Electronic devices, including computers and wireless modems, generate RF energy incidental to their intended function and are therefore subject to FCC rules and regulations.

This equipment has been tested to, and found to be within the acceptable limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment.

This equipment generates radio frequency energy and is designed for use in accordance with the manufacturer's user manual. However, there is no guarantee that interference will not occur in any particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help

This device complies with Part 15 of the Federal Communications Commission (FCC) Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.



WARNING: DO NOT ATTEMPT TO SERVICE THE WIRELESS COMMUNICATION DEVICE YOURSELF. SUCH ACTION MAY VOID THE WARRANTY. THE MERLIN PC CARD MODEM OEM IS FACTORY TUNED. NO CUSTOMER CALIBRATION OR TUNING IS REQUIRED. CONTACT NOVATEL WIRELESS TECHNICAL SUPPORT FOR INFORMATION ABOUT SERVICING YOUR WIRELESS COMMUNICATION DEVICE.

FCC CAUTION: Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: The Radio Frequency (RF) emitter installed in your modem must not be located or operated in conjunction with any other antenna or transmitter, unless specifically authorized by Novatel Wireless Technologies.

MODIFICATIONS: The FCC requires that you be notified that any changes or modifications made to this device that are not expressly approved by Novatel Wireless, Inc. may void your authority to operate the equipment.

7.4 REGULATORY NOTICES

This product has been evaluated for SAR and meets the FCC Guidelines for exposure to radio waves.

FCC Equipment Authorization ID: **NBZNRM-U740**

Your wireless modem is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless devices including mobile phones and wireless modems uses a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standard operating positions reviewed by the FCC with the device under test transmitting at its highest certified power level in all frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone or modem while operating can be well below the maximum value. This is because the phone or modem is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before this device is made available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear or worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for this wireless modem with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The highest SAR value for this modem when tested for compliance against FCC standards was 0.857W/kg



8 APPENDIX A

8.1 UNLOCKING A SIMLOCKED MODEM WITH MOBILINK

The term SIMLOCK is often used by the industry when a modem/data card is configured for use only with SIMs of a particular carrier. Technically speaking, when a modem/data card is SIMLOCKED it is actually NETWORK LOCKED. Carriers usually request specific configurations for the modem/data card, one of which is for the modem to be SIMLOCKED. An algorithm generates a Mobile Equipment Personalization code (MEP), which deactivates the mechanism that restricts the modem to SIMs of a particular carrier.

Novatel Wireless cannot, and does not provide the MEP code. Any request for the MEP code configuration must be made through the carrier from whom the modem or data card was purchased.

If your modem/ data card is SIMLOCKED, and you have obtained the MEP code from your carrier or service provider, follow the steps below to unlock it.

1. Launch MobiLink . See section "Creating a data session" if necessary.
2. MobiLink will initialize the card, and might ask you for a PIN code. Enter PIN code in the box and click OK. This code is particular to your SIM and is different from your MEP code. See Figure 47.

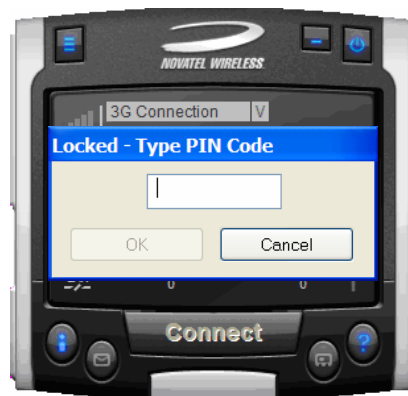


FIGURE 47

3. MobiLink will now request the MEP code. Enter MEP code and click OK. See Figure 48.



FIGURE 48



4. After approximately 30 seconds MobiLink will request that you enter the SIM PIN again. As in step 2 . See Figure 41 above. Enter PIN code in the box and click OK.
5. After a little while the Modem/data card should start searching for available networks. At this point you have successfully unlocked the modem/data card.

NOTE: YOU ONLY HAVE TO ENTER THE MEP CODE ONCE AND THE MODEM/DATA CARD WILL BE PERMANENTLY UNLOCKED.



9 DOCUMENT CONTROL

REVISION CONTROL

Revision Number	Revision History
DRAFT	DRAFT

Draft Note Revisit Product Specifications and Safety and Regulations sections.