

EXHIBIT 7
USER'S MANUAL OF EUT

**Wake-On-LAN
10/100 Fast Ethernet PCI
Adapter**

User's Guide
Ver. 2.0

振曜科技股份有限公司
機密文件

FCC Statement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning! This Equipment has been tested and found to comply with the limits for a class B digital device, Pursuant to Part 15 of the FCC rules. These Limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and no, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocated the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

You are cautioned that changes or modification not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

CE-Mark Warning

In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Copyright © 1999, All right Reserved.

Document Version: 2.0

All Trademarks and trade names are the properties of their respective owners.

1. Introduction

Congratulations on the purchasing of your new 10/100 N-Way Fast Ethernet PCI adapter. This document describes the network adapter installation. This adapter supports 10BASE-T/100BASE-TX Fast Ethernet and Wake-On-LAN features and complies with the electrical and protocol requirements of the PCI Local Bus Specification, Revision 2.0 and 2.1.

1.1 Features

The 10/100 Fast Ethernet PCI adapter is a cost effective, high-performance network interface card. It operates in 10BASE-T and 100BASE-TX modes and integrates easily with Fast Ethernet hub and switch.

- **Wake-On-LAN** supported
- IEEE 802.3 standards 10BASE-T and 100BASE-TX standards
- 32bit bus master for high throughput and low CPU utilization
- Full-duplex operation at both 10Mbps and 100Mbps
- Support 10/100Mbps auto-sensing capability
- Rich diagnostic LED mounted on bracket for easily viewing and troubleshooting
- Single shield RJ-45 connector for using at either Speed (Category 3, 4 or 5 UTP cable for 10Mbps Operation, and Category 5 UTP cable for 100Mbps Operation)
- Plug and Play Installation.
- Test program (include **Wake-On-LAN** events)
- Network driver on the diskette for Windows 95, 98, NT, NetWare, SCO Unix and Packet driver.
- FCC,CE certification

1.2 System Requirements

To use the adapter, you need the following components:

- A PCI-based computer
- A PCI master mode expansion slot that is compliant with PCI bus specifications, revisions 2.0 and 2.1
- A 3.5-inch, 1.44MB diskette drive
- The following cables:
 - To operate at 10Mb/s, a Category 3, 4, 5 UTP Cable
 - To operate at 100Mb/s, a Category 5 UTP cable

振曜科技股份有限公司
機密文件

2. Installation

This section describes how to install the adapter. For connecting to the network, you must have the following:

1. Network adapter card installed to your computer.
2. Cabling (compatible with network topology)
3. Connect the Wake-On-LAN cable to the mother board (If the WOL is necessary)
4. Software for the adapter card contains both configuration utilities and drivers

2.1 Unpack and Inspect

Caution:

Under ordinary circumstances, this adapter card will not be affected by static charge as may be received through your body during handling of the unit. In special circumstances where you may carry an extraordinarily high static charge, it had better reduce the charge by touching a ground before handling the adapter card.

Open the shipping gift box and carefully remove all items. In addition to this User's guide, please check the following items:

- One 10/100 Fast Ethernet PCI Adapter Card
- One WOL (Wake-On-LAN) cable
- One 3.5" Drivers and Utilities diskette

Note:

If any of the listed items are missing, please contact your distributor or reseller

振曜科技股份有限公司
機密文件

2.2 Install the Adapter

1. Turn off the computer.
2. Remove the computer's cover, in accordance to its manual.
3. Insert the contact edge of the adapter card into the connector of any available PCI Bus master expansion slot. Press the card firmly into the connector to PCI slot. Please make sure that the card's contacts are fully seated in the PCI slot.
4. Install the bracket screw that secures the card to the Computer chassis.
5. Connect the WOL cable to the mother board, if the WOL feature is required.
6. Replace the computer's cover.
7. Connect the CAT3 or CAT5 UTP cable to the RJ45 network connector.
8. Remove [Drivers and Utilities] diskette from the PC diskette drive.
9. Turn on the computer.
10. If the BIOS section of your computer's boot program is Plug and Play compliant, then at power up the BIOS will configure any newly installed adapter automatically.


Note:

Due to some Plug-n-Play BIOS programs' problem, it happens occasionally that a newly installed adapter is assigned an Interrupt Number which is already used by another device adapter. In such a case, the conflict of Interrupt Number will cause faults in the behavior of both devices. Then it is necessary to run the CMOS Setup utility, and manually assign a non-conflict Interrupt Number.

振曜科技股份有限公司
機密文件


2.3 Connect Fast Ethernet

Category 5 UTP cable is required for Fast Ethernet operation. The maximum cable run between the adapter and the supporting hub is 300ft (100m). Make the network connection by plugging one end of the cable into the RJ-45 receptacle of the adapter, and the other end into one port in the hub.

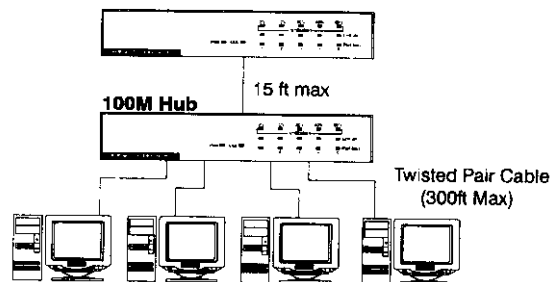

2.4 Connect 10Mbps Ethernet

Category 3, Category 4, and Category 5 UTP cable, as well as EIA/TIA 568 100 ohm STP cable, all qualification under Ethernet cabling rules. The maximum cable length run between this adapter and the supporting hub is 300 ft. Make the network connection by plugging one end of the cable into the RJ-45 receptacle of this adapter, and the other end into the hub.

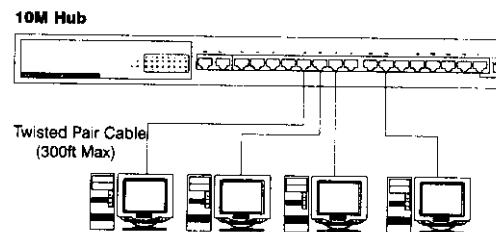

振曜科技股份有限公司
機密文件

To wake up Target Machine with Magic Packet

Step1: Target Machine:

Target Machine is necessary to use the WOL cable link the Wake On LAN connector on adapter with your motherboard. Check BIOS <POWER MANAGEMENT SETUP> ACPI, Wake On LAN function must be enable.

Step2: Target Machine:

Select <Target Machine> then the system will setup wakeup event and wait a magic packet to do system wakeup

Step3: Master Machine:

Select <Magic Packet> to send a magic packet and wake up the target machine. The MAC address of target machine will be asked for key-in, like 00 e0 7d c0 00 02.

Step4: Target Machine:

ACPI Testing events will be show

Device State 1:	PASS
Device State 2:	PASS
Device State 3:	PASS

Step5: Target Machine:

Put the Target Machine to power down mode.

Step6: Master Machine:

Send a magic packet to wake up Target Machine.

Test the Wakeup Frame

Step1: Target Machine:

Select <Target Machine> then the system will setup wakeup event and wait a magic packet to do system wakeup

Step2: Master Machine:

Select<WakeUp Frame> to send a wakeup frame.

Step3: Target Machine :

ACPI Testing events will be show

Device State 1:	PASS
Device State 2:	PASS
Device State 3:	PASS

Note:

Adapter testing program can not be used in Windows 95/98 DOS mode. Do not load any device drivers, memory manager, and anti-virus software. The testing program only can work in clean DOS prompt.

振曜科技股份有限公司
機密文件

After choosing the <Run Diagnostics on Board> item, the screen will display like,

```
Node ID.....: 00 e0 7d c0 00 01
Network Speed..: 100Mbps
I/O Base .....: E000H
Interrupt .....: 11
Full-Duplex ....: Disabled


Pass Count  Fail Count

A. I/O Register
B. 100Mbps Loopback
C. 10Mbps Loopback
D. Cable Connection
```

<Cable Connection> test reminds you that the connection link might be fail, either the cable is not connected or the cable link fails.

For the <Run Diagnostics on Network> test, it is necessary to connect your computer with its supporting hub or another computer. This is a "Ping-Pong" test. This test cannot be completed except two computers on the LAN for sending or receiving the test packets between computers.

For the <Run Diagnostics On Network> test

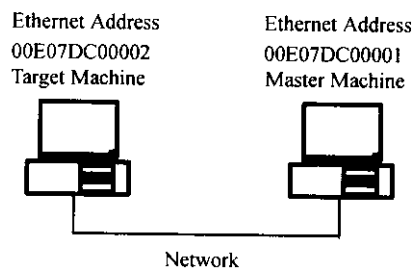

Master Machine: Master machine sends magic packet or Wake up frame through the network.

Target Machine: Target machine is notified whenever a A qualified wakeup packet is received.

振曜科技股份有限公司
機密文件

Quick Installation Guide

Please take the following steps for driver installation.

Microsoft Windows 95/Windows 98/Windows NT

1. Turn off the computer.
2. Insert the adapter into the available PCI slot.
3. Restart the computer.
4. After Microsoft Windows reboot, the PCI Ethernet Controller will be found.
5. The system will prompt for driver installation.
6. Insert the "Driver and Utilities" diskette into diskette driver and press <Enter>.
7. The Windows system will install the driver automatically.
8. Reboot the Windows system.

Novell Netware System

Please execute the following commands:

For Netware Client

LSL
NETODI
IPXODI
NETX or VLM
F:
LOGIN <USERNAME>

For Netware Server

LOAD NETSRV
BIND IPX TO NETSRV

The help file help1210.exe in the diskette will describe the detail driver installation information for all popular operating systems.

振曜科技股份有限公司
機密文件

2.5 Drivers and Utilities Diskette

The [Divers and Utilities] diskette contains all the popular operating system drivers.

- Novell NetWare(client /server)
- NT 3.5 , NT4.0
- Windows 95/98
- Microsoft Client (NDIS 2.0 DOS/OS2)
- Windows For Workgroup 3.11
- and so on

2.6 Software Installation

Please refer to "Quick Installation Guide"

2.7 Test Program

This test program verifies configuration of the adapter and assists the isolation of any faults in operation. Test procedure are optional, and will only be useful in the unusual event that there is a fault, such as an interrupt number conflict among your computer's add on cards, if your installation provides normal operation, you do not need these test procedures.

At your DOS prompt, type the following command:

a:\rset1210.exe <Enter>

The opening screen is displayed as following:

View Current Configuration
Set Up New Configuration
Run Diagnostics
Exit RSET1210

Choose <Set Up New Configuration> item allows you to set up the Network Speed, 10 or 100M, and Transmission Mode, Full or Half Duplex, and so on. Choose <Run Diagnostics> item to run the adapter test program.

Adapter test program includes:

<EEPROM Test>.

<Run Diagnostics on Board>.

<Run Diagnostics on Network>, and

<Run Power Management Test>.

The Power Management Test is available for WOL adapter only.

振曜科技股份有限公司
機密文件