

Everon™ 6000 G2 v1.0

User Manual

CORNING

Corning Optical
Communications

www.corning.com

Everon™ 6000 G2 v1.0

User Manual

Warranties

Hardware Warranty

Corning Optical Communications Wireless, Inc. ("Corning") warrants to the original purchaser ("Customer") that for the duration of the warranty period, one (1) year, commencing on the date of shipment of the Hardware, unless otherwise agreed in writing by Corning (the "Hardware Warranty Period"), the Hardware furnished by Corning shall be free in all material respects from defects in material and workmanship, and shall conform to the applicable portions of the Specifications, as defined below (the "Hardware Warranty"). If notified by Customer of any such defects in material or workmanship or nonconformity with applicable portions of the Specifications within the Hardware Warranty Period, Corning shall promptly, at its own election and expense, repair or replace any such Hardware proven to be defective under the terms of this Hardware Warranty. Such repair or replacement shall be Customer's sole remedy and Corning's sole obligation in the event this Hardware Warranty is invoked. If any components comprising a part of the Hardware are replaced or repaired during the Hardware Warranty Period, the Hardware Warranty Period for such repaired or replaced components shall extend to the longer of (i) the balance of the Hardware Warranty Period or (ii) three (3) months from the date of repair or replacement. For purposes of this Warranty, "Specifications" shall mean the specifications and performance standards of the Products as set forth in documents published by Corning and delivered to Customer which contain technical specifications or performance standards for the Products.

If Customer invokes this Hardware Warranty, it shall notify Corning promptly of the claimed defect. Customer will allow Corning to inspect the Hardware at Customer's location, or to return the Hardware to Corning's closest repair facility. For Hardware returned to Corning's repair facility, Customer shall be responsible for payment of all transportation and freight costs (including insurance) to Corning's repair facility, and Corning shall be responsible for all transportation and freight costs (including insurance) incurred in connection with the shipment of such Hardware to other repair facilities of Corning and/or its return to Customer.

Notwithstanding the foregoing, in no event will Corning be liable for damage to Products resulting from improper handling during or after shipment, misuse, neglect, improper installation, operation or repair (other than by authorized Corning personnel), alteration, accident, or for any other cause not attributable to defects in materials or workmanship on the part of Corning. Corning shall not reimburse or make any allowance to Customer for any labor charges incurred by Customer for replacement or repair of any goods unless such charges are authorized in advance in writing by Corning.

Software Warranty

Corning warrants to the original purchaser ("Customer") that for the duration of the warranty period, one (1) year, commencing on the date of shipment of the Software, unless otherwise agreed in writing by Corning (the "Software Warranty Period"), the Software shall conform with, and perform the functions set forth in the Specifications, and shall be free from defects in material or workmanship (the "Software Warranty"). In the event the Software is proven to be defective under the terms of this Software Warranty, Corning shall correct such defects or failure and ensure that the Software conforms with, and performs the functions set forth in, the Specifications. Customer will allow Corning to inspect the Software at Customer's location or to return it to Corning's closest repair facility. Notwithstanding the foregoing, Corning shall have no obligation under the Software Warranty if the Software is modified or used with hardware or software not supplied or approved by Corning or if the Software is subject to abuse, improper installation or application, accident, electrical or environmental over-stress, negligence in use, storage, transportation or handling. Third-party software distributed with the Software may carry certain warranties which, to the maximum extent allowed by law, Corning hereby assigns, transfers and otherwise conveys to Customer, provided, however, that Corning itself provides no warranty of any kind, express, implied, statutory or otherwise, for any third-party software provided hereunder.

Corning does not warrant any hardware, software or services not provided by Corning.

This warranty is the only warranty made by Corning and is in lieu of all other warranties, express or implied including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Corning shall not be liable for any other damage including, but not limited to, indirect, special or consequential damages arising out of or in connection with furnishing of goods, parts and service hereunder, or the performance, use of, or inability to use the goods, parts and service. Corning sales

Corning Restricted - Controlled content (R2)

agents or representatives are not authorized to make commitments on warranty returns.

Returns

above warranty, the following procedure shall be followed:

1. Return authorization is to be received from Corning prior to returning any unit. Advise Corning of the model, serial number, and discrepancy. The unit may then be forwarded to Corning, transportation prepaid. Devices returned collect or without authorization may not be accepted.
2. Prior to repair, Corning will advise the customer of our test results and any charges for repairing customer-caused problems or out-of-warranty conditions etc.
3. Repaired products are warranted for the balance of the original warranty period, or at least 90 days from date of shipment.

Limitations of Liabilities

Corning's liability on any claim, of any kind, including

negligence for any loss or damage arising from, connected with, or resulting from the purchase order, contract, quotation, or from the performance or breach thereof, or from the design, manufacture, sale, delivery, installation, inspection, operation or use of any device covered by or furnished under this contract, shall in no case exceed the purchase price of the device which gives rise to the claim.

Except as expressly provided herein, Corning makes no warranty, expressed or implied, with respect to any goods, parts and services provided in connection with this agreement including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Corning shall not be liable for any other damage including, but not limited to, indirect, special or consequential damages arising out of or in connection with furnishing of goods, parts and service hereunder, or the performance, use of, or inability to use the goods, parts and service.

Reporting Defects

The units were inspected before shipment and found to be free of mechanical and electrical defects. Examine the units for any damage that may have been caused in transit. If damage is discovered, file a claim with the freight carrier immediately. Notify Corning as soon as possible in writing.

Note: Keep all packing material until you have completed the inspection.

Warnings and Admonishments

There may be situations, particularly for workplace environments near high-powered RF sources, where recommended limits for safe exposure of human beings to RF energy could be exceeded. In such cases, restrictive measures or actions may be necessary to ensure the safe use of RF energy.

The device has been designed and constructed to prevent, as far as reasonably, practicable danger. Any work activity on or near device involving installation, operation or maintenance must be, as far as reasonably, free from danger.

Where there is a risk of damage to electrical systems involving adverse weather, extreme temperatures, wet, corrosive or dirty conditions, flammable or explosive atmospheres, the system must be suitably installed to prevent danger.

Device provided for the purpose of protecting individuals from electrical risk must be suitable for the purpose and properly maintained and used. This covers a range of activities including lifting, lowering, pushing, pulling, carrying, moving, holding or restraining an object, animal or person from the equipment. It also covers activities that require the use of force or effort, such as pulling a lever, or operating power tools.

Where some of the abovementioned activities are required, the device must be handled with care to avoid being damaged.

Observe standard precautions for handling ESD-sensitive devices. Assume that all solid-state electronic devices are ESD-sensitive. Ensure the use of a grounded wrist strap or equivalent while working with ESD-sensitive devices. Transport, store, and handle ESD-sensitive devices in static-safe environments.



WARNINGS!

According to the device type:

- **For DLRU-678, dHRU-dHPAM-7, dHRU-dHPAM-85:**
- **WARNING: THIS IS A 90.219 CLASS B DEVICE.** This is NOT a CONSUMER device. It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You MUST have an FCC LICENSE or express consent of an FCC License to operate this device. You MUST register Part 90 Class B signal booster (as defined in 47 CFR 90.219) online at www.fcc.gov/signal-boosters/registration. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of

\$100,000 for each continuing violation.

- **For DLRU-G2-17192325, DLRU-G2-25, DLRU-G2-35, dHRU-dHPAM-6, dHRU-dHPAM-17, dHRU-dHPAM-19, dHRU-dHPAM-23, dHRU-dHPAM-25, DMRU-G2-678, DMRU-G2-1719, DMRU-G2-2325, DMRU-G2-25, DMRU-35:**
- **WARNING:** This is NOT a CONSUMER device. It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You MUST have an FCC LICENSE or express consent of an FCC License to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

For all devices:

Warning info: Preclude indications that the device supports home/personal use

For **dMRU** and dHRU:

- For pluggable equipment, the electrical outlet shall be easily accessible.
- The product shall have connection of the device protective earthing conductor to the installation protective earthing conductor (for example, by means of a power cord connected to an electrical outlet with earthing connection).

RF Safety

To comply with FCC RF exposure compliance requirement, adhere to the following warnings:

Warning! Antennas used for this product must be fixed mounted on indoor permanent structures, providing a separation distance of at least 80 and above cm from all persons during normal operation.

Warning! Each individual antenna used for this transmitter must be installed to provide a minimum separation distance of 50 cm or more from all persons and must not be co-located with any other antenna for meeting RF exposure requirements.

Warning! Antenna gain should not exceed 10 dBm.

Warning! The design of the antenna installation needs to be implemented in such a way so as to ensure RF radiation safety levels and non-environmental pollution during operation.

Compliance with RF Safety Requirements:

CAUTION! Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Power Requirements for DC Inputs

Warning! Only use a special DC supply cable with connector

Warning! Always keep DC IN connectors connected during the product operation

Warning! Disconnect all power from the device by means of an external circuit breaker before connecting or disconnecting the DC IN connectors.

RF Parameters

Frequency Range Name	Uplink	Downlink
600-band 71	663-698 MHz	617-652 MHz
700L (Lower Band)- band 12	698-716 MHz	728-746 MHz
700U (Upper Band)-band 13	776-787 MHz	746-757 MHz
FirstNet (700)-band 14	788-798 MHz	758-768 MHz
800/850 -band 26	817-849 MHz	862-894 MHz
1900 (PCS)-band 25	1850-1915 MHz	1930-2020 MHz
EAWS-band 66	1695-1780 MHz	2110-2200 MHz
WCS-band 30	2305-2315 MHz	2350-2360 MHz
2500-band 41	2496-2690 MHz (TDD)	
3500-band 77	3450-3980 MHz (TDD)	

Revision History

Revision	Date	Created by	Reviewed by	Changes
0.1	Sep 2022			First issue

Contents

1. Introduction	11
1.1 Key Features and Capabilities	11
1.2 Terminology, Acronyms, and Abbreviations	12
1.3 Everon™ 6000 G2 Architecture Overview	14
1.4 Internal Sub-units	14
1.4.1 RIU	14
1.4.2 DCU	18
1.4.3 DEU	22
1.4.4 Remote Units	26
1.4.5 System topology and gain assignment	30
2. System Installation	32
2.1 Head End Units – Architecture Example	34
2.2 RIU Installation	34
2.2.1 Verify Box Contents	34
2.2.2 Mount the RIU	36
2.2.3 RIU Cable Connection	37
2.3 DCU Installation	37
2.3.1 Verify Box Contents	38
2.3.2 Mount the DCU	39
2.3.3 DCU Cable Connection	40
2.4 DEU Installation	40
2.4.1 Verify Box Contents	41
2.4.2 Mount the DEU	43
2.4.3 DEU Cable Connection	44
2.5 dLRU Installation	45
2.5.1 Verify box Contents	45
2.5.2 Mount the dLRU	46
2.5.3 Power+ SPF+ Cable	55
2.5.4 Connect the Ground and Antenna Cables	57
2.5.5 Combiner cables	58
2.5.6 Verify normal operation	59
3. GUI – General Description	60
3.1 Screen Layout	60

3.2 Function Options	61
3.3 Supported Access Options	61
4. Session Access and first-time settings	62
4.1 Open a Local Session	62
5. Commissioning	66
5.1 RIU Config	66
5.1.1 RIU WEB overview	66
5.1.2 RIU Parameter Config	67
5.2 DCU Config	68
5.2.1 DCU -> Dashboard	68
5.2.2 DCU Alarm	68
5.2.3 DCU -> RIU	73
5.2.4 DCU -> Function	73
5.2.5 DCU -> UserInfo	79
5.2.6 Program	81
5.3 DEU Config	82
5.3.1 DEU -> Dashboard	82
5.3.2 DEU -> Function	84
5.3.3 DEU -> UserInfo	88
5.4 dLRU Config	90
5.4.1 RU -> Overview&Alarm	90
5.4.2 RU Parameter config	91
6. APPENDIX A: Specifications	93
7. APPENDIX B: LED Functionality and Colour Definition	97

1. Introduction

Corning Everon™ 6000 G2 is an advanced cellular service solution for small, medium, and large size venues, supporting a broad range of cellular generations, including 3G, 4G and 5G.

Corning Everon™ 6000 G2 is based on venues, advanced digital transport and processing, and channelized implementation, enabling efficient utilization of digital links. It is designed to support multi-band, multi-technology, and multi-operator networks through the single fiber-based infrastructure.

Corning Everon™ 6000 G2 is a high bandwidth distribution architecture that provides preparedness for future radio technologies, broader spectrum, and new frequency bands. Due to its modular design and configuration flexibility, this solution is highly scalable in terms of supported capacity (number of sectors, frequency bands, channels) and remote units (coverage), and can be easily configured to support a large variety of deployment scenarios including single and multi-building (“campus”) network topologies.

This solution offers multiple types of digital remote units, supporting a variety of frequency band combinations, with different power levels ranging from 20 dBm per band to 46 dBm per band. Advanced network configuration and management capabilities enable on-site and remote end-to-end configuration, system diagnostics, maintenance, and support network operations center (NOC) connectivity.

1.1 Key Features and Capabilities



- **Comprehensive service Support** - 600 MHz, 700 MHz, FirstNet, 800/850 MHz, 1900 MHz (PCS), 2100 MHz (EAWS), 2300 MHz (WCS), 2500 MHz (TDD), 3500 MHz (TDD). Supports MIMO services, FDD and TDD. Supports 3G, 4G, and 5G technologies.
- **Multi-X system** - Supports multi-operator, multi-band, multi-technology services through a single infrastructure. Supports single and multi-building (“campus”) network solutions.
- **Highly modular/ Highly scalable** - Can be easily expanded to support additional capacity: sectors, frequency bands, channels, and coverage areas, by increasing the number of remotes.
- **Advanced Digital Signal Processing** - Provides higher dynamic range, enables per-channel granularity, delivers enhanced overall power efficiency, and improves overall system performance.
- **Digital CPRI based Transport** - Provides robust signal distribution with flexible scalability.
- **Digital Service and capacity routing** - Enables advanced capacity and coverage management through flexible routing configuration management.
- **Carrier-grade network management** - Network configuration and management capabilities enable on-site and remote end-to-end configuration, system diagnostics, maintenance, support management and control by network management system.

1.2 Terminology, Acronyms, and Abbreviations

Table 1 Abbreviations

Abbreviation	Full Name
RIU	Radio Interface Unit
DCU	Digital Conversion Unit
DEU	Distributed Extension Unit
DLRU	Digital low Power Remote Unit
DMRU	Digital Medium power Remote Unit
DHRU	Digital High-power Remote Unit
NOC	Network Operation Center
SMV	Small Medium Venues
CPRI	Common Public Radio Interface
DSP	Digital Signal Processing
EARFCN	E-UTRA Absolute Radio Frequency Channel Number
EPC	Evolved Packet Core
EUTRA	Evolved Universal Terrestrial Radio Access
EUTRAN	Evolved Universal Terrestrial Radio Access Network
FPGA -	Field Programmable Gate Array
GE / GigE	Gigabit Ethernet
GPS	Global Positioning System
LTE	Long Term Evolution
MNO	Mobile Network Operator
PLMN	Public Land Mobile Network
RF	Radio Frequency
SNMP	Simple Network Management Protocol
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
UE	User Equipment
UL	Uplink
UTRAN	Universal Terrestrial Radio Access Network
UDP	User Datagram Protocol

Table 2 Images

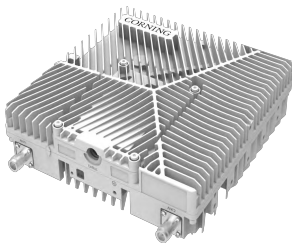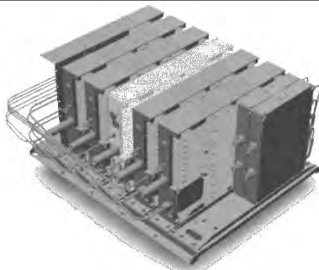Abbreviation	Image
RIU	
DCU	
DEU	
DLRU	
DMRU	
DHRU	

1.3 Everon™ 6000 G2 Architecture Overview

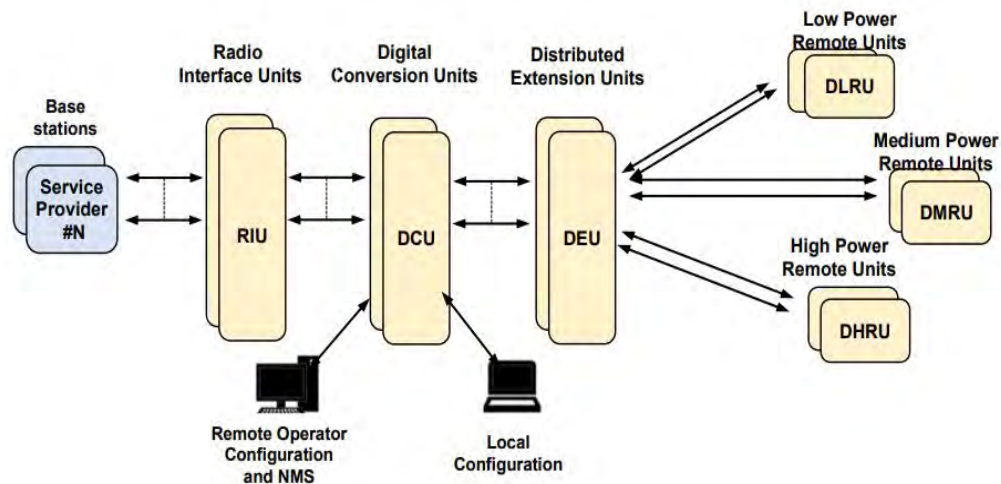


Figure 1 Architecture diagram

Corning Everon™ 6000 G2 features a fully advanced digital system, which incorporates the RIU (Radio Interface Unit), DCU (Digital Conversion Unit), DEU (Distributed Extension Unit) and multi-type of remotes. All the devices in the system are managed via a web session to the DCU, which provides local and remote management capabilities for all connected system devices using both web GUI (HTTPs) and SNMP interfaces.

1.4 Internal Sub-units

1.4.1 RIU



Figure 2. RIU image

Radio Interface Units (RIU) are modular design used for radio-radio interface between the base stations and the Everon™ 6000 G2. The RIU interfaces up to 8 RF duplexed ports to the base station, and up to 8 simplex ports to the Digital Conversion Unit (DCU) with the following functions:

- Signal combination: the RIU combines different base station signals into one wideband signal, the combination matrix of which is software-controllable, listed as figure 3 to figure 5.
- Downlink/Uplink attenuation: With an embedded fixed attenuator with 30dB in downlink and 40dB in uplink, the RIU bears up to 37dBm average input power (with PARP no more than 10dB).
- Gain control: In addition to the fixed attenuator, the RIU includes an internal digital attenuator controlling the gain between the input and output in the range of 0-25dB.
- Device management: Remote control and monitor of RIU is available on the DCU via the 2xRJ45 connections. In the case of multiple RIU applications, the management can be achieved with a cascading topology, shown in figure 6.

Figure 7 and figure 8 shows the RIU interfaces. Table 3 lists the interfaces description.


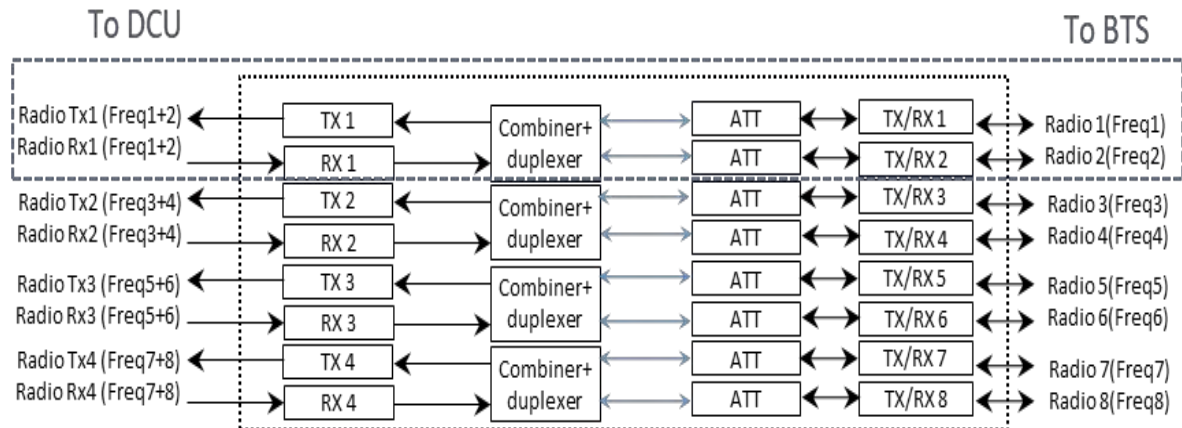


Figure 3. 2 TO 1 matrix

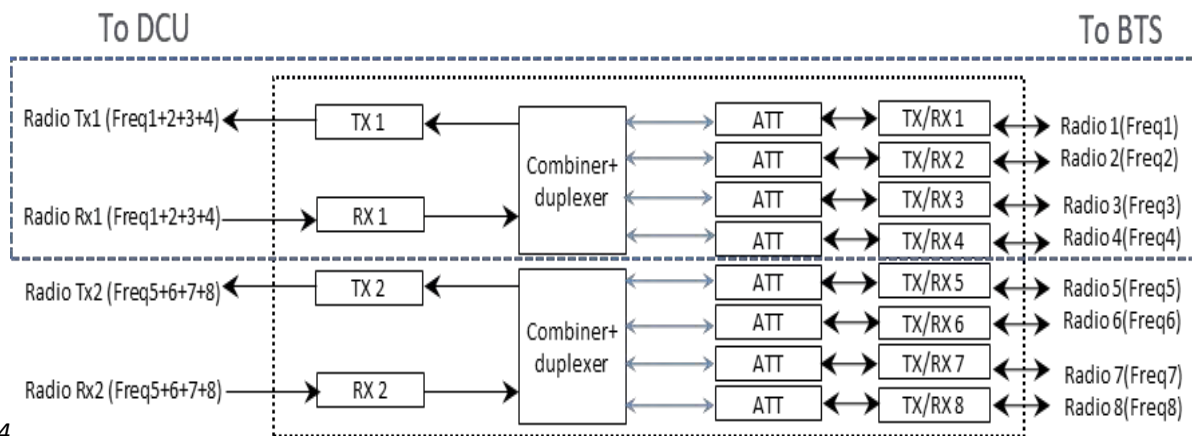

4

Figure 4. 4 TO 1 matrix

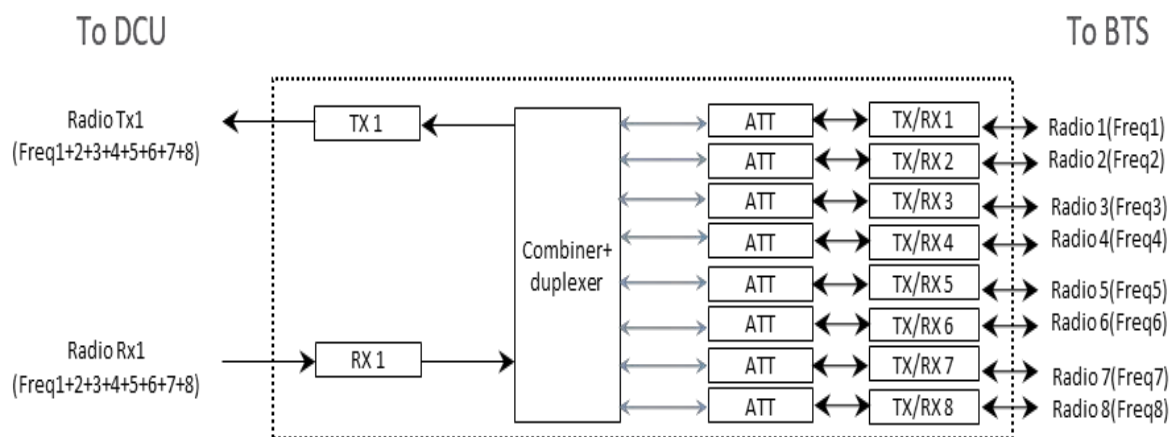


Figure 5. 8 TO 1 matrix

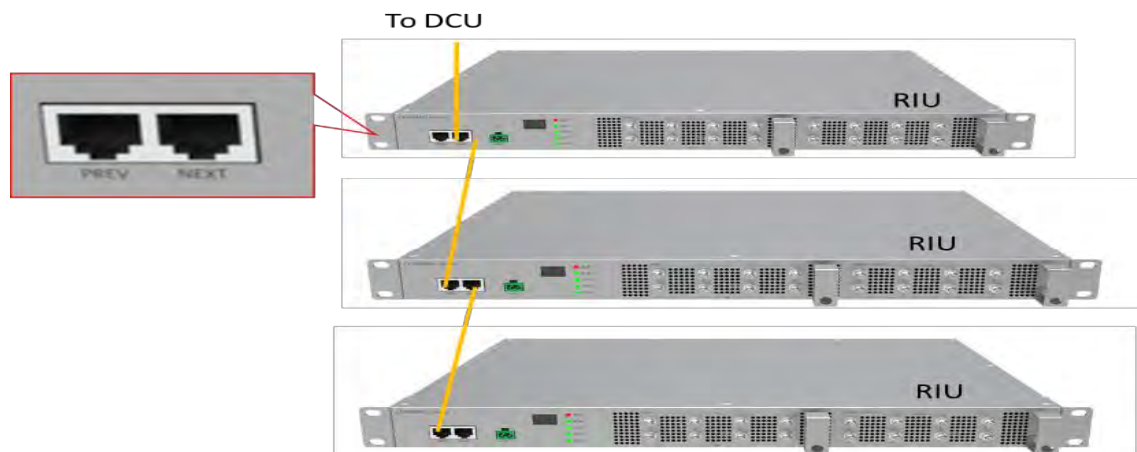


Figure 6. RIU monitoring diagram

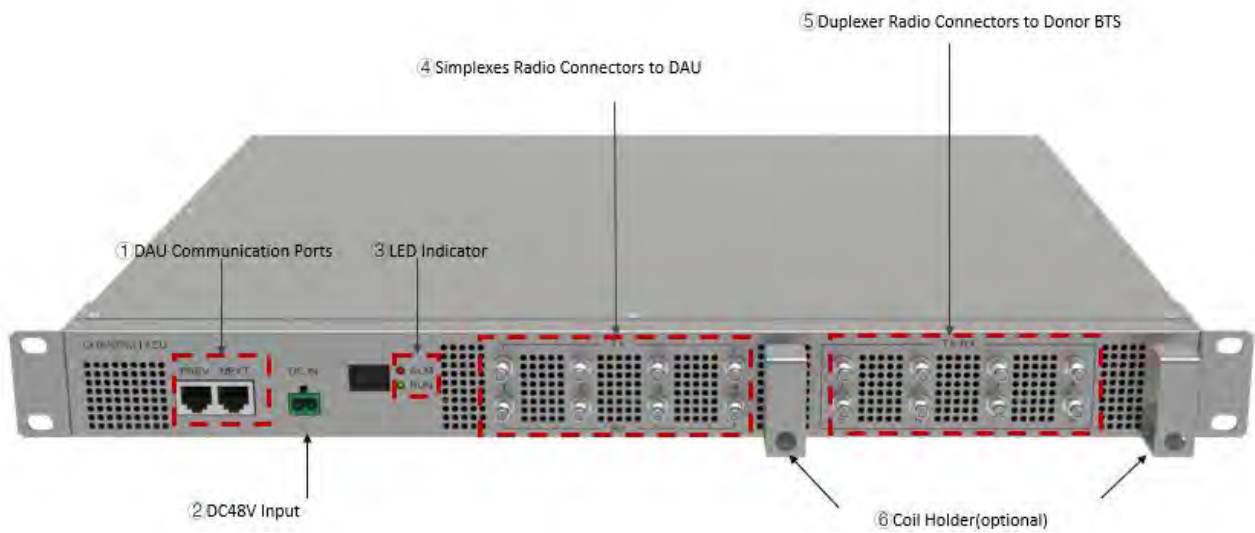


Figure 7. RIU Interface(front view)



Figure 8. RIU Interface (back view)

Table 3. RIU Interfaces

SN	Interface	Interface Type	Silk Screen	Description
1	DCU communication port	RJ45 x 2	PREV NEXT	PREV: Upper cascade port to DCU or upper level RIU NEXT: Lower cascade port to other RIU
2	DC input	Phoenix connector x 1	DC_IN	48V DC
3	LED indicator	LED x 2	ALM RUN	Please check the "RIU LED Definition" (table 4) for the color definition
4	Radio connectors to DCU	QMA x 8	TX 1~4 RX 1~4	Simplex QMA interface to DCU
5	Radio connector to donor signal	4.3-10 x 8(FDD RIU) QMA x 8(TDD RIU)	TX/RX 1~8	Duplex QMA interface to BTS, small cells or other donor signals
6	Coil holder	Coil holder x 2		The holder for the cable roasting
7	GND	Two holes M4 x 2	GND	Connect to the ground

Table 4. RIU LED Definitions

LED	Description	Color	State
ALM	Alarm	Red	Solid
	Device detection (Identified and controlled by the DCU)	Red	Flash (1Hz, 10s)
	No alarm	OFF	Off
RUN	The system is up and running	Green	Flash(1Hz)
	Software or hardware failure	OFF	Off
2TO1	Working mode: 2 TO 1	Green	Solid
	Other working modes	OFF	Off
4TO1	Working mode: 4 TO 1	Green	Solid
	Other working modes	OFF	Off
8TO1	Working mode: 8 TO 1	Green	Solid
	Other working modes	OFF	Off
LED displayer	Cascade level, displayed as "1" or "2" 1 - First cascade level 2 - Secondary cascade level A maximum of 16 devices can be cascaded	-	-

1.4.2 DCU



Figure 9. DCU

Digital Conversion Units (DCU) is the Everon™ 6000 G2 central controller. The DCU interfaces between the RIU and DEU, implementing signal processing and routing to the Distributed Extension Unit (DEU), major functionalities of which include:

- RF signal processing and routing: The DCU transfers the RIU radio signal to digital signal in CPRI format. One DCU supports up to 8 RIUs of different bands with 2x2 MIMO, and configures all the radio signal features including frequency, attenuation, operation mode (TDD/FDD).
- Optical port router controlling: The DCU controls the digital signals of different DEUs at different CPRI line rates of 10Gbps or 25Gbps.
- TDD synchronization: The DCU introduces a TDD baseband signal processing module, demodulates TDD-LTE or NR RF signals and recovers the TDD switch time in the remote units. For a fast detection and commissioning, parameters in table 5 and table 6 are needed.
- Center management of the complete system: the DCU is the main management entity of the entire system. All the device and operation information are centrally collected by the DCU, and the DCU interfaces to operators' management system through the SNMP interface.
- Flexible networking for different deployment strategies: The DCU supports daisy chain and/or star connections* as shown in figure 10 and figure 11, where distributed deployments can be enabled, e.g., remote slave site deployment.

Figure 12 and figure 13 shows the DCU interfaces. Table 9 lists the interfaces description.

**Note: please check the software release note for the DCU daisy chain/star connection limitations and supported version.*

Table 5. Uplink-Downlink configurations

Uplink-downlink configuration	Downlink-to-Uplink Switch-point periodicity	Subframe number									
		0	1	2	3	4	5	6	7	8	9
0	5 ms	D	S	U	U	U	D	S	U	U	U
1	5 ms	D	S	U	U	D	D	S	U	U	D
2	5 ms	D	S	U	D	D	D	S	U	D	D
3	10 ms	D	S	U	U	U	D	D	D	D	D
4	10 ms	D	S	U	U	D	D	D	D	D	D
5	10 ms	D	S	U	D	D	D	D	D	D	D
6	5 ms	D	S	U	U	U	D	S	U	U	D

Corning Restricted - Controlled content (R2)

Table 6. Configuration of special subframe (lengths of DwPTS/GP/UpPTS)

Special subframe configuration	Normal cyclic prefix in downlink			Extended cyclic prefix in downlink		
	DwPTS	UpPTS		DwPTS	UpPTS	
	/	Normal cyclic prefix in uplink	Extended cyclic prefix in uplink	/	Normal cyclic prefix in uplink	Extended cyclic prefix in uplink
0	$6592 \cdot T_s$	$2192 \cdot T_s$	$2560 \cdot T_s$	$7680 \cdot T_s$	$2192 \cdot T_s$	$2560 \cdot T_s$
1	$19760 \cdot T_s$			$20480 \cdot T_s$		
2	$21952 \cdot T_s$			$23040 \cdot T_s$		
3	$24144 \cdot T_s$			$25600 \cdot T_s$		
4	$26336 \cdot T_s$			$7680 \cdot T_s$	$4384 \cdot T_s$	$5120 \cdot T_s$
5	$6592 \cdot T_s$	$4384 \cdot T_s$	$5120 \cdot T_s$	$20480 \cdot T_s$		
6	$19760 \cdot T_s$			$23040 \cdot T_s$		
7	$21952 \cdot T_s$			-	-	-
8	$24144 \cdot T_s$			-	-	-

Special subframe configuration	Normal cyclic prefix in downlink		
	DwPTS	GP	UpPTS
0	3	10	1
1	9	4	1
2	10	3	1
3	11	2	1
4	12	1	1
5	3	9	2
6	9	3	2
7	10	2	2
8	11	1	2

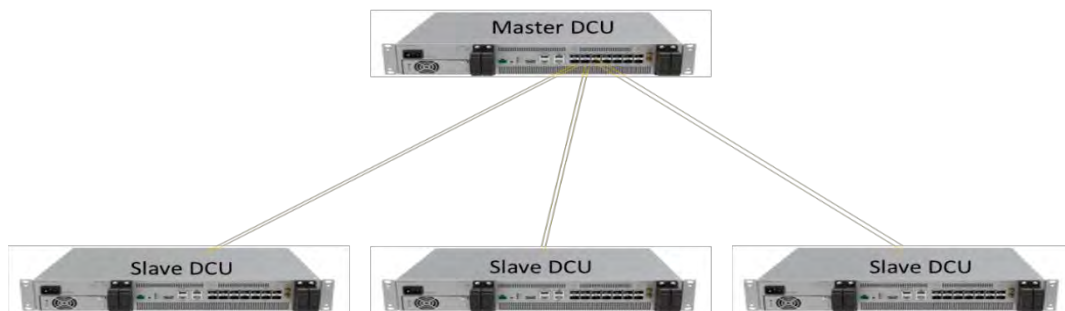


Figure 10. DCU Star Connection



Figure 11. DCU Daisy Connection

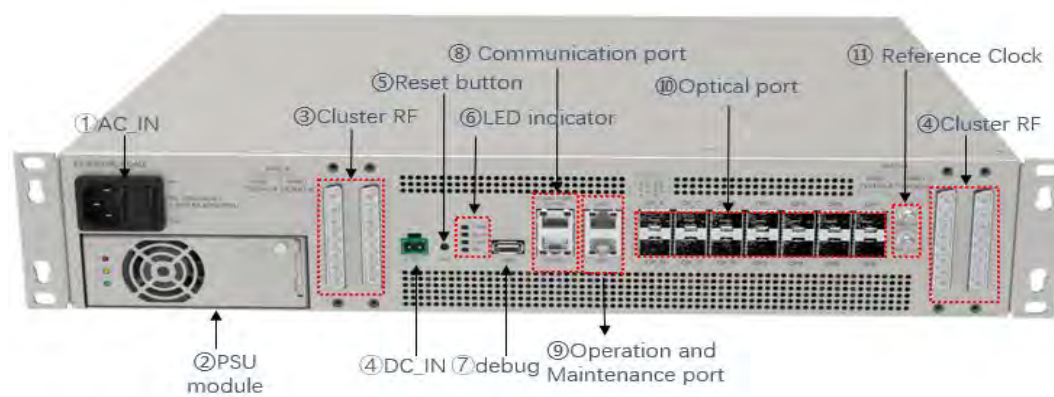


Figure 12. DCU Interface (front view)



Figure 13. DCU interface (back view)

Table 7. DCU Interface Introduction

SN	Interface	Interface Type	Silk Screen	Description
1	AC_IN	US Type socket	AC IN 100V~240V, 3A, 50/60Hz	AC input connector with switch, 100~240V
2	PSU Module	PSU module x 1		PSU module with replaceable design
3	Cluster RF connector	Cluster RF connector x 4	IRFC1~4 SISO TX/RX 1~4 SISO TX/RX 5~8 MIMO TX/RX 1~4 MIMO TX/RX 5~8	IRFC: Integrated Radio Frequency Cluster There are totally 4 pcs of cluster and each one has 8 radio ports. The operation frequency range of each radio port is listed in table 10
4	DC_IN	Phoenix connector	DC_IN	48V DC input
5	Reset button	Button x 1	RST	Reset button for the system setup to factory config
6	LED indicator	LED x 4	PWR/ALM/RUN/PRI	Please check the 'Appendix B' for LED definition
7	Debug	USB	USB	For internal debug purpose
8	Communication port	RJ4 5 x 2	COMM Port/RIU/PSU	Communication port for RIU and PSU
9	Operation and Maintenance port	RJ45 x 2	OMT OMC	1 for local monitor and config (OMT), 1 for remote monitor (OMC)
10	Optical port	SFP x 14	OP_A~OP_F (LOS A~F / SYNC A~F) OP1~OP8 (LOS 1~8 / SYNC 1~8)	24.3 Gbps CPRI interface, connects to DEU (port 1~8) or cascade DCU (port A~F) Please check the 'Appendix B' for Optical LED definition
11	Reference clock	QMA x 2	REF_IN REF_OUT	10MHz reference signal, input and output clock
12	GND	Two holes M4 x 2	GND	Connect to the ground

Table 8. Radio Spec of Cluster RF port

DCU Input Port	Cluster RF Port number	IBW	Frequency Range
SISO/MIMO TX/RX 1~2	4	300MHz	1710~4000MHz, TDD/FDD
SISO/MIMO TX/RX 3~4	4	300MHz	1710~4000MHz, TDD/FDD
SISO/MIMO TX/RX 5~6	4	200MHz	600~2700MHz, TDD/FDD
SISO/MIMO TX/RX 7~8	4	200MHz	600~2700MHz, TDD/FDD

1.4.3 DEU



Figure 14 DEU diagram

Distributed Extension Units (DEU) is the central Hub and Distribution element. The DEU interfaces between the DCU modules and the remote unit, enabling to receive the operators service signals in CPRI format, and to route these signals to the remote units. The DEU supports all Corning digital remote antenna units' styles, for all services, power levels and antenna configurations. Each DEU includes 4 F/O CPRI ports connected to the DCUs or cascaded DEUs, and 24 F/O CPRI ports for connection to the remote units. When additional remote antenna units are needed, the system can be scaled up easily by adding additional system modules, major functionalities of which include:

- Channelization function: The DEU is the channel controller of Everon™ 6000 G2 system. Tables 5(TDD 2.5GHz + TDD 3.5GHz) and Table 6(Full FDD + TDD 2.5GHz) list the possible channel capacities of the DEU.
- CPRI signal router and transfer: The DEU transfers the dedicated carrier signal to dedicated remote units*. DEU supports 10Gbps or 25Gbps line rate and various kinds of remote units. The line rates and remote units supported are listed in table 11.
- Flexible network architecture: One DCU supports up to 16 DEUs* by star and/or daisy chain connections, which meets flexible site deployment requirement. The DEU connection topology is shown in figure 15.
- The DEU manages all connected remote radios which can be monitored and controlled by the user via SNMP trap.

Figure 16 and figure 17 shows the DEU interfaces. Table 12 lists the interfaces description.

*Note: please check the software release note for the DEU signal router features and its supporting range of remote units

**Note: please check the software release note for the DEU cascade features and limitation on each software version*

Table 9. Carrier Config Option 1. Full FDD band + TDD 2.5GHz band

Band	Maximum Carrier Number (2T2R)				Maximum Total Carrier Number	Maximum Total BW
	10/20MHz	30/40/50MHz	60/80/100MHz	150/200MHz		
2.5GHz	3	2	2	0	5	190MHz
3.5G-A (3450~3700MHz)	8	3	3	1	8	250MHz
3.5G-B (3700~3980MHz)	8	3	3	1	8	280MHz

Table 10. Carrier Config Option 2. Full FDD band + TDD 2.5GHz band

Type	Band	Maximum Carrier Number (2T2R)			Maximum Total Carrier Number	Maximum Total BW
		5/10MHz	15/20MHz	40/60/80/100MHz		
DMRU –678 DLRU-678	600M	3	1	0	12	35MHz
	700L+700U	4	1	0		40MHz
	850M	3	1	0		32MHz
DMRU –1921 DLRU-19212325	PCS	4	4	0	14 (Each sub-band ≤8)	90MHz
	EAWS	4	4	0		90MHz
DMRU-2325 DLRU-19212325	WCS	1	0	0	6	10MHz
	2500M	0	3	2		190MHz

Table 11. DEU Line Rate Application

DEU Line Rate	Remote Unit Type
10Gbps	DLRU-G2-678/DLRU-G2-17192125/DHRU-G2-600/DHRU-G2-700/DHRU-G2-800/DHRU-G2-1900/DHRU-G2-2100/DHRU-G2-2300
25Gbps	DLRU-G2-25/DLRU-G2-35/DMRU-G2-678/DMRU-G2-1719/ DMRU-G2-2325/DMRU-G2-25/DMRU-G2-35/DHRU-G2-25/DHRU-G2-35

1. DEU supports flexible network architecture of 4 level daisy chain connections as shown in figure 15.




Figure 15. DEU Daisy chain connection

**Note: Please check the software release note for the DEU cascading features and limitation of each software version.*

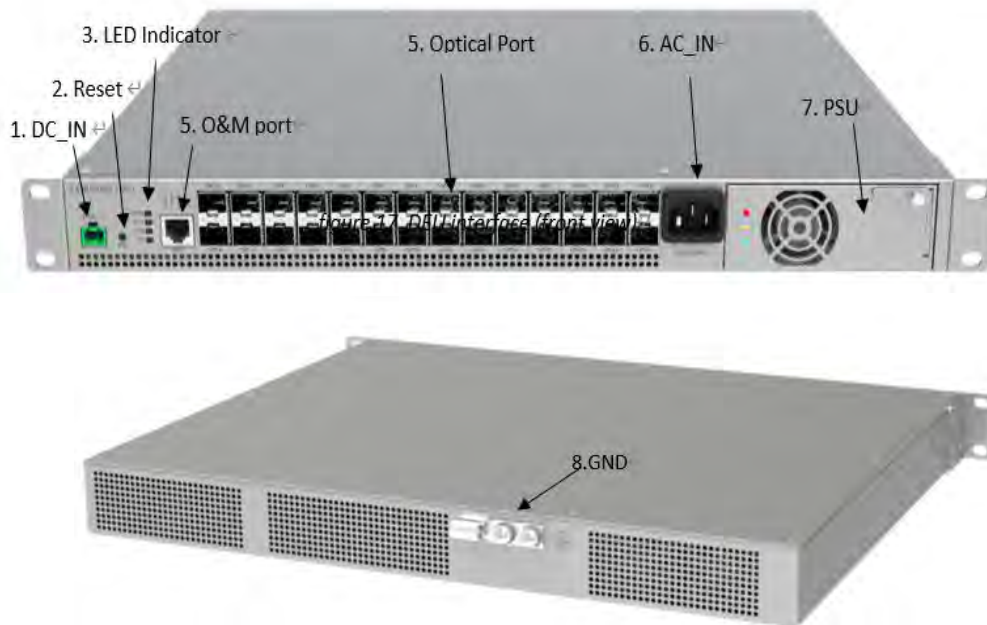


Figure 17. DEU interface (back view)

Table 12. DEU interface introduction

NO.	Interface	Interface Type	Silk Screen	Description
1	DC_IN	Phoenix connector	DC_IN	48V DC input
2	Reset Button	Button x 1	RST	Reset button for the system reset to factory config
3	LED Indicator	LED x 4	PWR RUN ALM 25G	ALM/RUN/PWR: Indicates the DEU working mode and alarm status 25G: Indicates the DEU is running in 24.3Gbps line rate
4	Operation and Maintenance port	RJ45 x 1	OMT	Ethernet connection for a local setup session
5	Optical Port	SFP x 28	OP_A~OP_D OP1~OP24	24 ports (1~24) for RU connection, 10.1Gbps/24.3 Gbps CPRI interface, 2 ports(A~B) for upper unit connection, 2 ports(C~D) for lower unit cascade, 24.3 Gbps CPRI interface,
6	AC_IN	US Type socket + Switch x 1	AC IN 100V~240V, 3A,50/60Hz	AC input connector, Max current 3A, 100~240V
7	PSU Module	PSU module x 1	POWER MODULE	PSU module with easy assembly installation design
8	GND	Two holes M4 x 2	GND	Connect to the ground

1.4.4 Remote Units

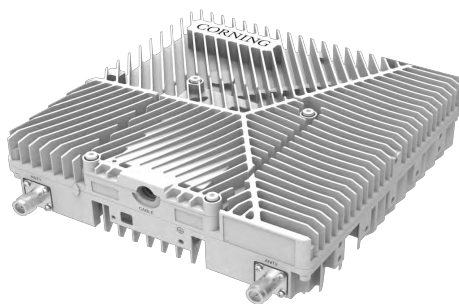


Figure 18. DLRU image



Figure 19. DLRU image

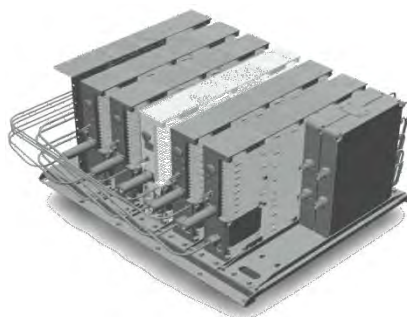


Figure 20. DLRU image

Remote Unit (RU) is the radio coverage unit located at the end of the DAS system. The Remote unit interfaces between DEU and the UE (User Equipment), enabling to receive the operator service signals in CPRI format, transfer to RF signal and send to UE. Corning digital remote antenna units includes three power level types: DLRU/DMRU/DHRU. The power levels vary from 20dBm to 43dBm to meet different coverage scenarios. The major functionalities include:

- Digital and analog signal transfer: the RU transfer digital and analog signal between DEU and antenna port. The DU supports up to 530 IBW signal in C-band with its powerful transceiver
- Multi-band signal process: The RU supports multiple band signal of the single unit. One DLRU supports up to 4 bands, one DMRU supports up to 2 bands and one DHRU supports single band.
- Channel control function: The RU config all emission channels including power level, ON/OFF status and working mode (UL/DL/TDD).
- Control and management function: The RU can be remotely upgraded and monitored. All RU's parameters including the alarm, device status and emission power are all transferred to DEU via CPRI lines in optical ports.

Table 13 shows RU band, CPRI line rate and optical port number.

The DLRU interfaces and the description are shown in figure 21 and table 14.

Corning Restricted - Controlled content (R2)

Table 13. RU Band, CPRI, Optical port list

RU Type	RU	Operation band	CPRI Line Rate	Optical Fiber Number
DLRU	DLRU-G2-678	600 700L 700U FirstNet 800/850MHz	10Gbps	1
	DLRU-G2-19212325	1900(PCS) 2100(EAWS) 2300(WCS) 2500 TDD	10Gbps	2
	DLRU-G2-25	2500 TDD	25Gbps	1
	DLRU-G2-35	3500 TDD	25Gbps	2
DMRU	DMRU-G2-678	600 700L 700U FirstNet 800/850MHz	25Gbps	1
	DMRU-G2-1921	1900(PCS) 2100(EAWS)	25Gbps	1
	DMRU-G2-2325	2300(WCS) 2500 TDD	25Gbps	1
	DMRU-G2-25	2500 TDD	25Gbps	1
	DMRU-G2-35	3500 TDD	25Gbps	2
DHRU	DHRU-G2-06	600	10Gbps	1
	DHRU-G2-07	700L/700U/FirstNet	10Gbps	1
	DHRU-G2-08	800/850MHz	10Gbps	1
	DHRU-G2-19	1900(PCS)	10Gbps	1
	DHRU-G2-21	2100(EAWS)	10Gbps	1
	DHRU-G2-23	2300(WCS)	10Gbps	1
	DHRU-G2-25	2500 TDD	10Gbps	1

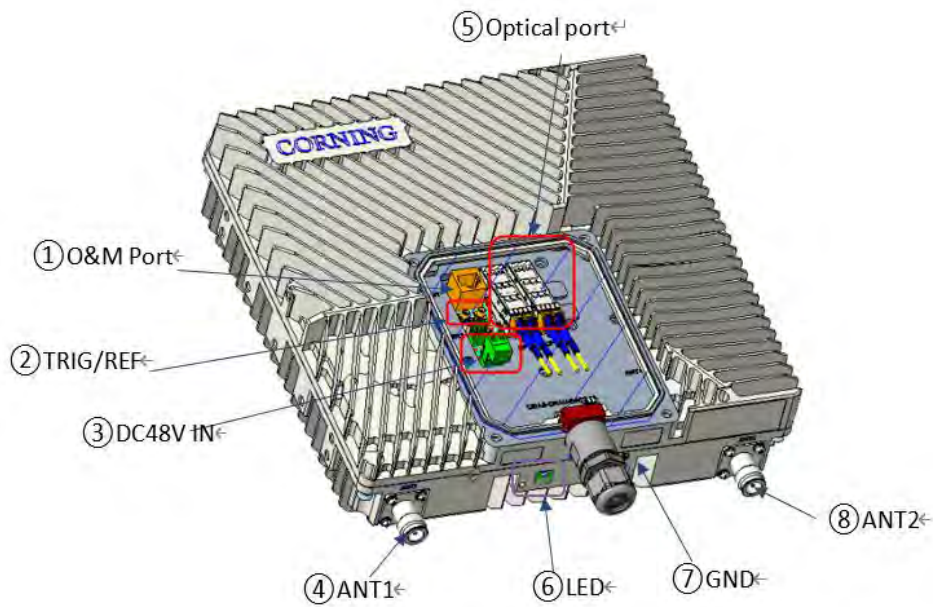


Figure 21. DLRU interface image

Table 14. DLRU interface introduction

NO.	Item	Interface Type	Silk Screen	Description
1	Operation and Maintenance port	RJ45	OMT	Ethernet connection for the local setup
2	TRIG/REF	MCX interface	TRIG/REF	Synchronous trigger signal, used for device test
3	DC48V IN	Power input port	DC48V IN	Power input port, voltage input range 38V~58V, PWR1 and PWR2 will be combined inside the device before supplying power to the device
4/8	ANT	4.3-10 interface	ANT1	RF input and output, used for external antenna connection
			ANT2	
5	Optical Port	SFP optical port	OP1/OP2	24.3/9.8 Gbps CPRI interface for DEU connection
6	Status	LED indicator	STAT	Indicating the operation status of the equipment
7	GND	GND interface		Used for grounding the chassis and the earth, single hole



Figure 22. DMRU Interfaces

Table 15. DMRU Interface Introduction

NO.	Item	Interface Type	Silk Screen	Description
1	ANT	4.3-10 interface	ANT1	RF input and output, used for external antenna connection
			ANT2	
2	Couple port	SMA	Couple 2	RF couple port, used for signal test and debug
3	Optical port	SFP optical port	OP1/OP2	24.3 Gbps CPRI interface for DEU connection
4	Operation and Maintenance port	RJ45	OMT	Ethernet connection for the local setup
5	LED	LED indicator	STAT	The operation status of the equipment
6	AC IN	Power input port	AC IN	Power input port, voltage input range 100V~240V, 3A

1.4.5 System topology and gain assignment

The system topology contains the following network elements:

- One master DCU- All the configs and alarms of RIUs, DCUs, DEUs and remote units are transferred to it, and also interfaces the SNMP server of DAS system.
- Slave DCU - one master DCU connects to 3 slave DCUs
- RIUs – each DCU can connect up to 16 RIUs
- DEU –one master DCU connects up to 4 DEUs, and each DEU connects to 4 DEU in cascade, so that one master DCU supports 16 DEUs
- Remote units – each DEU connects to 12 or 24 remote units, depending on the types and line rates of the remote unit. For more detail, please refer to Table 11.

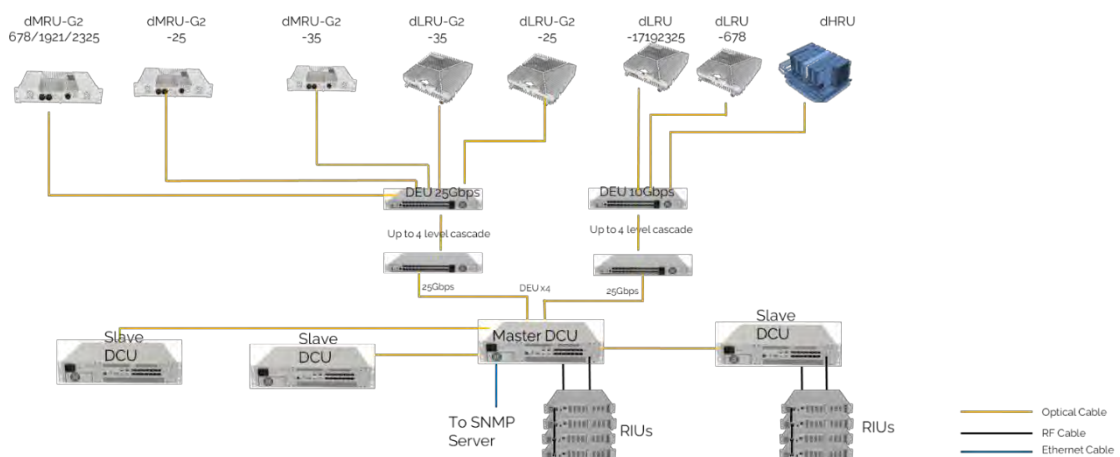


Figure 23. System topology

Two switches for gain control are available in the system— RIU high gain mode switch and DCU high gain mode switch. The suggestions for the switches are listed in the following table.

- The RIU high gain mode will add 30dB insert loss while switching to OFF status
- The DCU high gain mode will add 12dB insert loss while switching to OFF status

Table 16. Gain setting guide

Base station power	RIU high gain mode switch	DCU high gain mode switch	RIU input power	DCU input power	DCU output power	DLRU output power
	30dB IL while OFF; -7dB IL while ON	12dB gain while OFF	RIU ATT range (0~20dB)	DCU ATT range (0~20dB)	-7dBFS mapping to max output power	
37dBm	OFF -30dB	OFF 0	37dBm (RIU ATT set to 14, total IL=44dB)	-7dBm (DCU ATT set to 0)	-7dBFS	24dBm
23~37dBm	OFF -30dB	OFF 0	23~37dBm (RIU ATT set to 0~14, total IL=30~44dB)	-7dBm (DCU ATT set to 0)	-7dBFS	24dBm
0~23dBm	ON -7dB	OFF 0	0~23dBm (RIU ATT set to 0~20, IL=7~27dB)	-7~-4dBm (DCU ATT set to 0~3 dB)	-7dBFS	24dBm
-10~0dBm	ON -7dB	ON +12dB	-10~0dBm (RIU ATT set to 0~12, IL=7~19dB)	-17~-19dBm (DCU ATT set to 0~2dB, gain=10~12 dB)	-7dBFS	24dBm

2. System Installation

This chapter provides installation instructions for the system units. Refer to the specific elements required in your deployment:

- Head End (HEU, HIU), see 2.1
- DRU, see 2.5.
- Remote Units Installation:
- LRU, see 2.5
- MRU, see 2.6.

*Note: Refer to chapter 6 for dimensions and specifications.

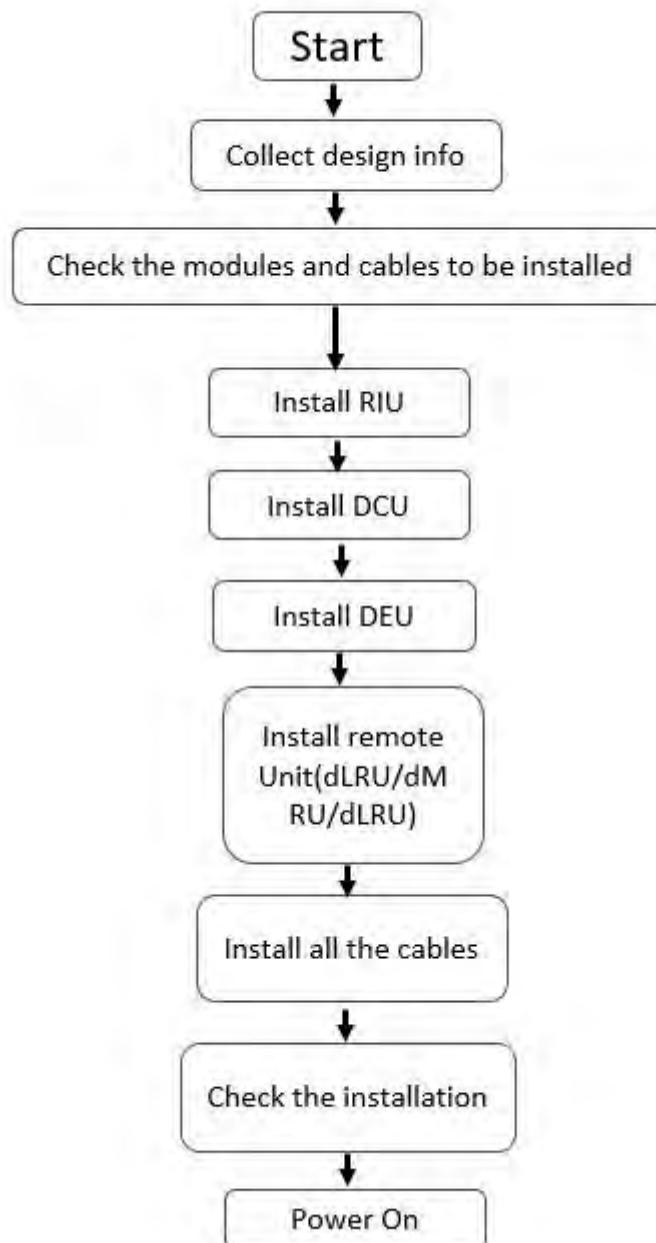


Figure 24 The installation process

2.1 Head End Units – Architecture Example

Example: 2X2 MIMO, 1 Operator

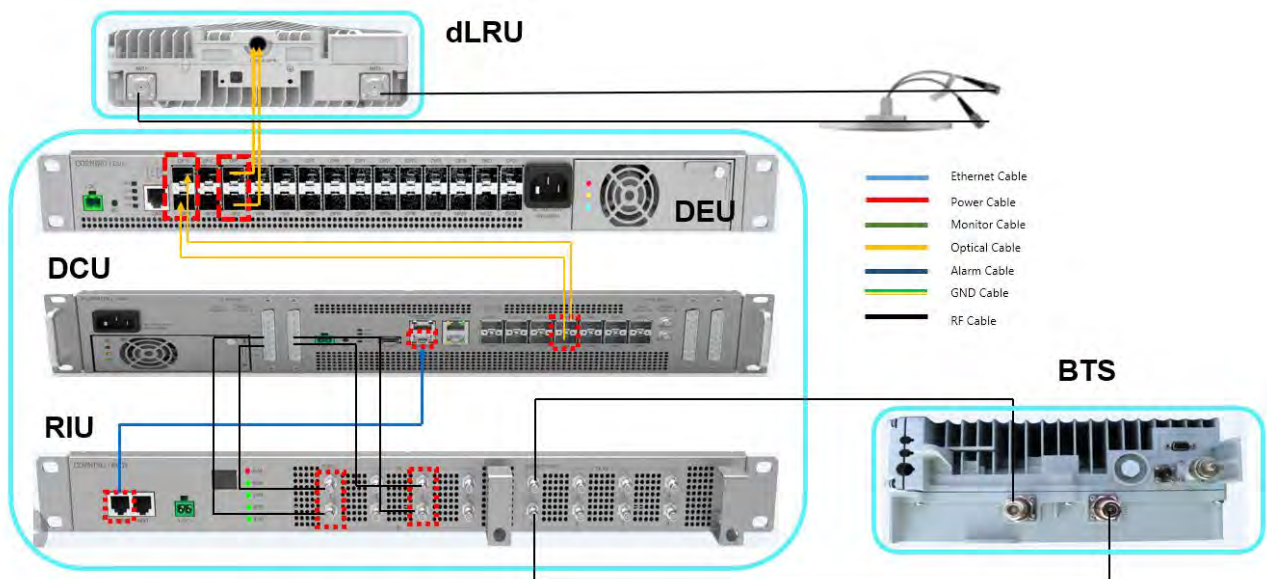


Figure 25 dLRU architecture image

2.2 RIU Installation

➤ Example of system connection

See 2.1 example: 2x2 MIMO

Contact the site designer for cable connection topology of the system.

➤ To install the RIU, follow these steps:

1. Verify the box contents, see 2.2.1
2. Mount the RIU, see 2.2.2
3. Connection RIU cable, see 2.2.3

2.2.1 Verify Box Contents

Open the package and verify that all items in the table below are available.

**Notes:*

- Refer to APPENDIX B: Ordering information for details.
- See the example of package unpacking under the table.

Table 1: RIU Package Items List

Item	Quantity	Image	Part Number
HARDWARE – provided in the box			
RIU unit	1		
Ethernet Communication Cable	1		Connected to the DCU or RIU of next slave device
DC Power Adapter	1		
HARDWARE – not provided			
4 screws #8 or 4mm (For attachment to rack)	4		
SOFTWARE			
NA			
Required TOOLS			
Cross Screwdriver			

2.2.2 Mount the RIU

Place the RIU horizontally in the 19-inch rack, align the four holes on the lugs on both sides of the equipment with the nuts, install the M6 screws and fasten them.

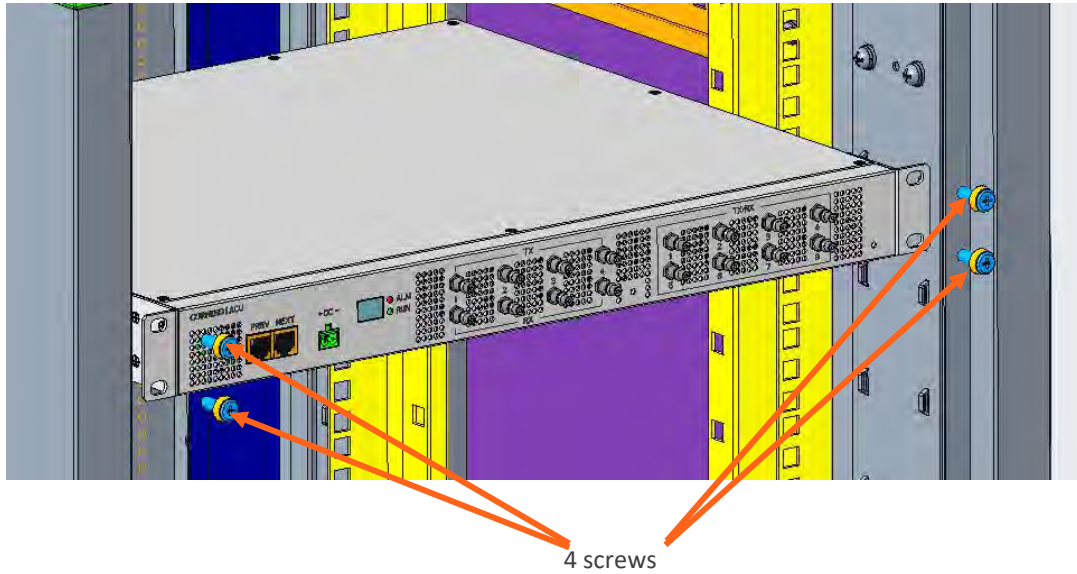


Figure 26. RIU rack Installation

- 1) Connect the RF cables on the chassis with M3 screws, and sort out the RF cables.

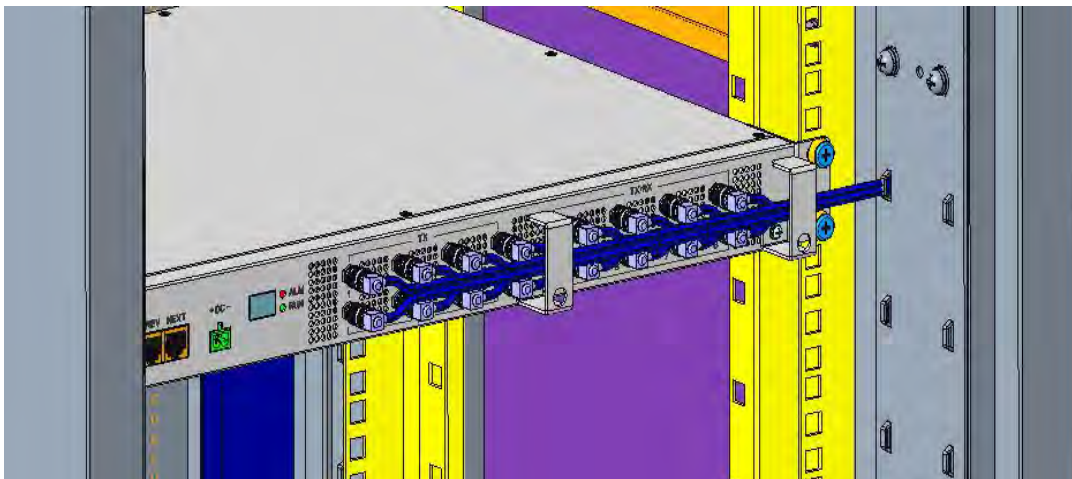


Figure 27 RIU rack Installation with cables

2.2.3 RIU Cable Connection

Connect the external cable as the following diagram shows.

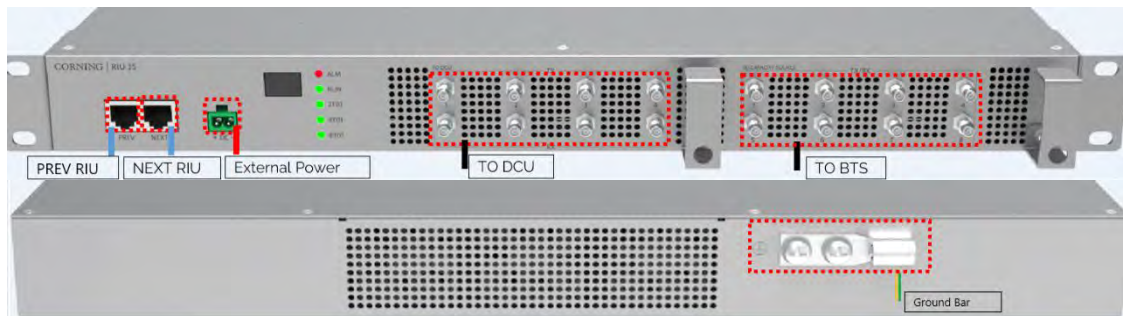


Figure 28 RIU cable connection

Cable list for RIU				
Cable	One End		The Other End	
	Connector	Connected to...	Connector	Connected to...
GND cable	OT terminal (M4)	Ground screw on the RIU	OT terminal (M4)	Ground terminal on the external ground bar
DC power cable (indoor)	Phoenix connector	DC power input socket on the RIU	2-pin plug	External power input socket
RF cable	QMA connector	Simplex radio connectors	Cluster RF connector	DCU
	QMA connector	Duplexer radio connectors	Required for BTS	BTS
Ethernet communication cable	Communication port (RJ45 x 2)	PREV: Upper cascading port to DCU or upper level RIU NEXT: Lower cascade port to other RIU	Communication port (RJ45 x 2)	RIU/DCU

2.3 DCU Installation

➤ Example of system connection

See 2.1 for the installation example (2x2 MIMO).

➤ Follow these steps to install the DCU:


1. Verify the box contents, see 2.3.1
2. Mount the DCU, see 2.3.2
3. Connect the DCU cable, see 2.3.3

Corning Restricted - Controlled content (R2)

2.3.1 Verify Box Contents

Open the package and verify that all the items in the table below are available:

Table: DCU Package Items List

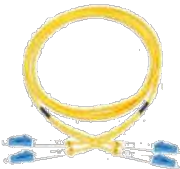Item	Quantity	Image	Part Number
HARDWARE – provided in the box			
DCU unit	1		
Ethernet Communication Cable	1		
DC Power Adapter	1		
HARDWARE – not provided			
4 Screws #8 or 4mm (For ceiling mounting)	4		
SFP+ Pluggable transceivers (Hot-pluggable optical transceiver module) Support 24.3 Gbps line rate, single mode	1		
Optical cables Up to 10km LC/UPC SM DX	1~14		
SOFTWARE			
NA			
Required Tools			
Cross Screwdriver	1		

2.3.2 Mount the DCU

Step 1: Take the DCU out of the package.



Figure 29 DCU image

Step 2: Put the DCU horizontally into the rack, tighten the M6 screws as shown below, and the installation is completed.



Figure 30 Installation diagram of DCU in the Rack

Step 3: Plug in the RF cable plug (RF cable not shown in the below), as shown in Figure 31.



Figure 31 DCU RF cable plug installation

Corning Restricted - Controlled content (R2)

2.3.3 DCU Cable Connection

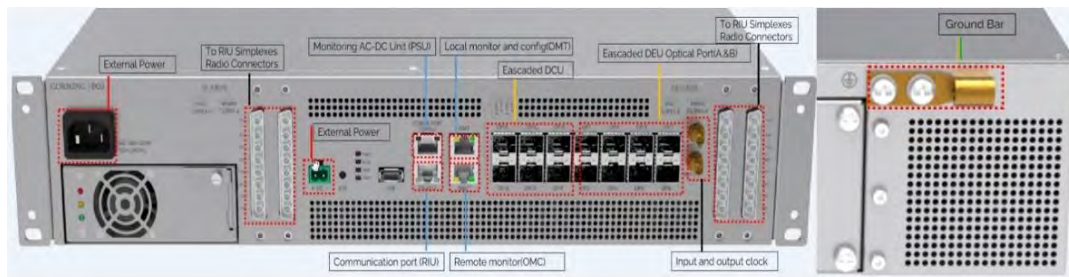


Figure 32 DCU cable connection

Cable List of Dual DCU				
Cable	One End		The Other End	
	Connector	Connected to...	Connector	Connected to...
GND cable	OT terminal (M4)	Ground screw on the RIU	OT terminal (M4)	Ground terminal on the external grounding bar
DC power cable (indoor)	Phoenix connector	DC power input socket on the RIU	2-pin plug	External power input socket
AC power cable (indoor)	US Type socket + Switch x 1	AC IN	Depending on power device	External power device
		100V~240V, 1.3A-0.6A, 50/60Hz	(100V-240V, 50Hz/60Hz)	(100V-240V, 50Hz/60Hz)
RF Cable	Cluster RF connector	IRFC1~8	QMA Connector	RIU
		SISO TX/RX 1~4		
		SISO TX/RX 5~8		
		MIMO TX/RX 1~4		
		MIMO TX/RX 5~8		

2.4 DEU Installation

➤ Example of system connection

See 2.1 for the installation example (2x2 MIMO).

➤ To install the HEU, follow these steps:


- Verify the box contents, see 2.4.1
- Mount the DEU, see 2.4.2
- Connect the DEU cable, see 2.4.3

Corning Restricted - Controlled content (R2)

2.4.1 Verify Box Contents

1. Open the package and verify that all items the table below are available:

Table 1: DEU Package Items List

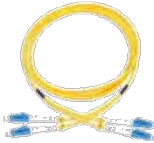Item	Quantity	Image	Part Number
HARDWARE – provided in the box			
DEU unit	1		
DC Power Adapter			
HARDWARE – not provided			
4 Screws #8 or 4mm (For ceiling mounting)	4		
SFP+ Pluggable transceivers (Hot-pluggable optical transceiver module) Support for 24.3 Gbps line rate, single mode	1		
Optical cables Up to 10k meters LC/UPC SM DX			
SOFTWARE			
NA			
TOOLS Required			
Cross Screwdriver			

2.4.2 Mount the DEU

1. Take the DEU out of the package.



Figure 32. Rack Installation -Step1

2. Mount the DEU in the rack with 4 pcs of M6 screws.



Figure 33. Rack Installation- Step 2

3. Install the DEU in the rack.



Figure 34 Rack Installation Step- 3

2.4.3 DEU Cable Connection

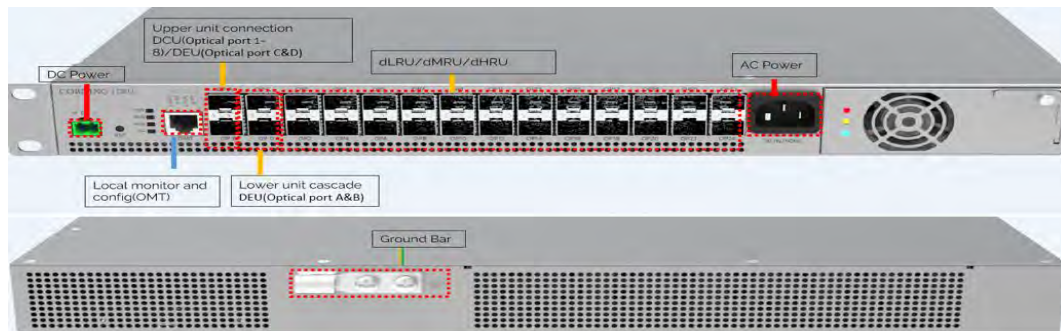


Figure 35 DEU cable connection


Cable List of Dual DEU				
Cable	One End		The Other End	
	Connector	Connected to...	Connector	Connected to...
GND cable	OT terminal (M4)	Ground screw on the RIU	OT terminal (M4)	Ground terminal on the external bar
AC power cable (indoor)	US Type socket + Switch x 1	AC IN	Depending on power device	AC Power device
		100V~240V, 1.3A-0.6A,50/60Hz	(100V-240V,50Hz/60Hz)	(100V-240V,50Hz/60Hz)
Fiber Cable	Optical port	Optical module	Optical port	dLRU/dMRU/dHRU or DEU
				DCU or DEU

2.5 dLRU Installation

2.5.1 Verify box Contents

1. Open the package and verify that all items in the following table are available:

Table 17: dLRU Package Items List

NO.	Description	Model	Image	Quantity
1	dLRU-2.5/3.5 Unit	dLRU unit		1
2		Wall mounting bracket (may also be used for pole)		1
3		Left side brackets for dual-unit configuration		1
4		Right side brackets for dual-unit configuration		1
5		Hinge		1
6		Combiner – for dual unit configuration		1
7		RF jumper cables		1
8		DC power adapter		1


2.5.2 Mount the dLRU

The LRU may be mounted on a wall or on a pole: single or dual.


Select the configuration related to your deployment.

**Note: For dual unit installations, the internal cable must be connected before connected between the units.*

1. Open the cover by unscrewing 4 screws

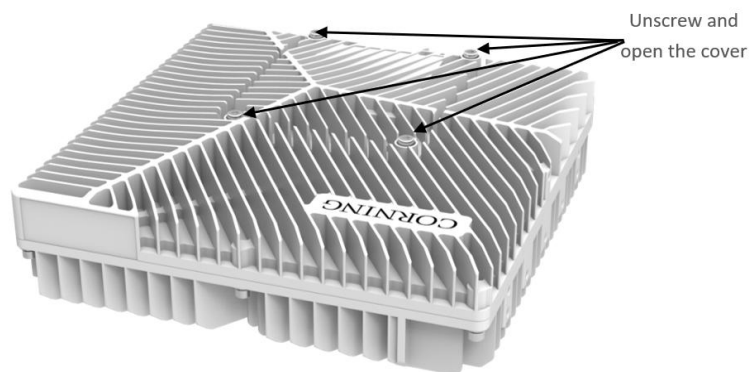

2. Connect the DC wire pair (48V) to any one of the two power connectors, via the DC power adapter (terminal block connector)
3. Remove the rubber stopper from the SFP+ connector located in the dLRU cable port. Connect the SFP+ LC/UPC SM DX optic cable to the dLRU optic connector.

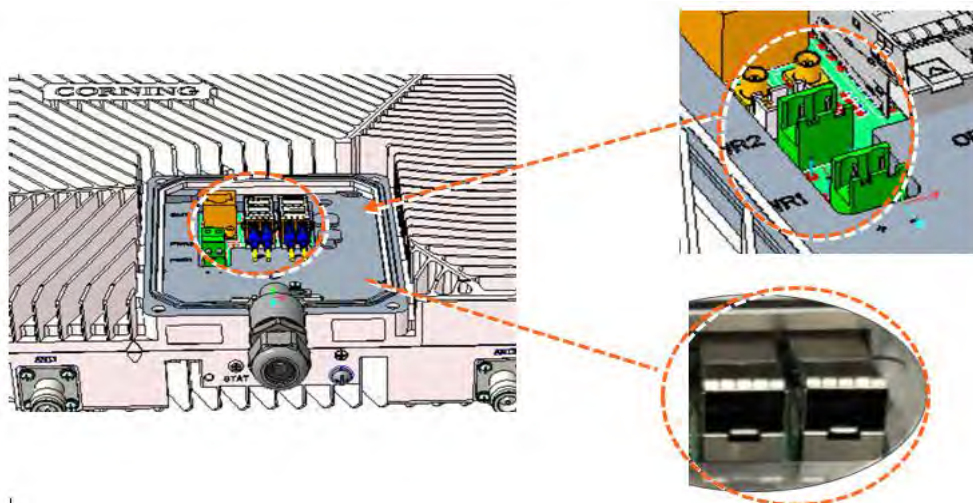


Power Socket /optical ports in dLRU

2.5.2.1 Wall Installation

- For a single unit

- 1) Connect the bracket to the wall with 4 screws, as shown in the figure below:

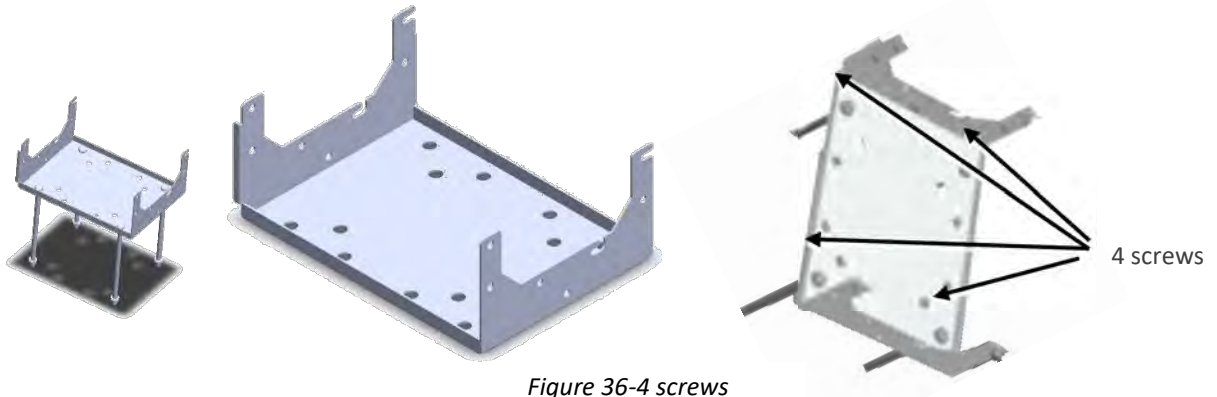

- 2) mount the LRU on the bracket with 4 screws.

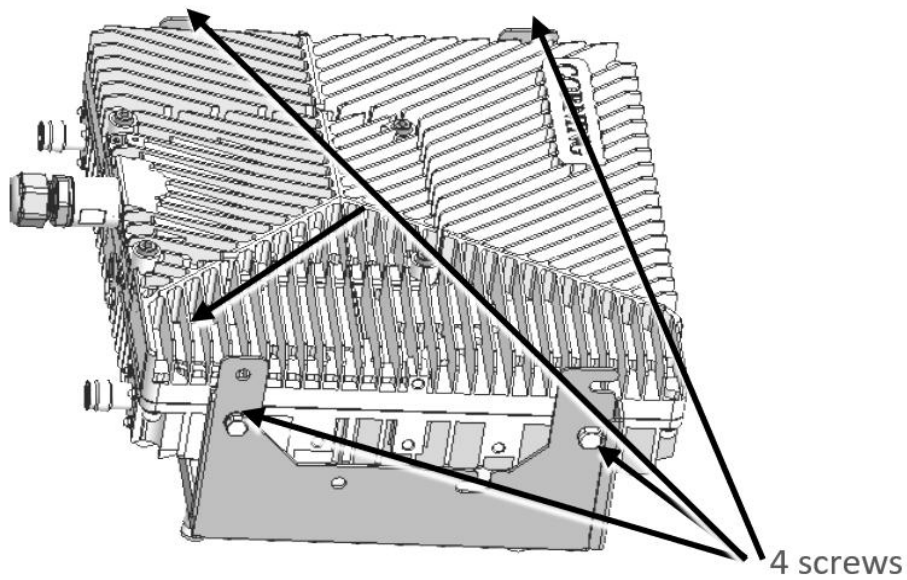


Figure 37-4 screws

- **For a dual unit:**

- 1) Connect the combiner to the mounting bracket with 4 screws.

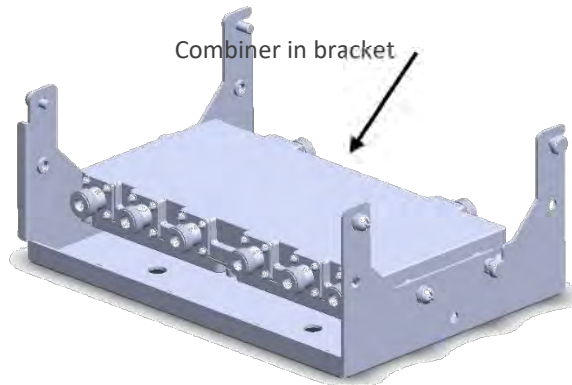


Figure 38 Combiner in the bracket

- 2) Connect between the low band and mid-band units with the side bracket:

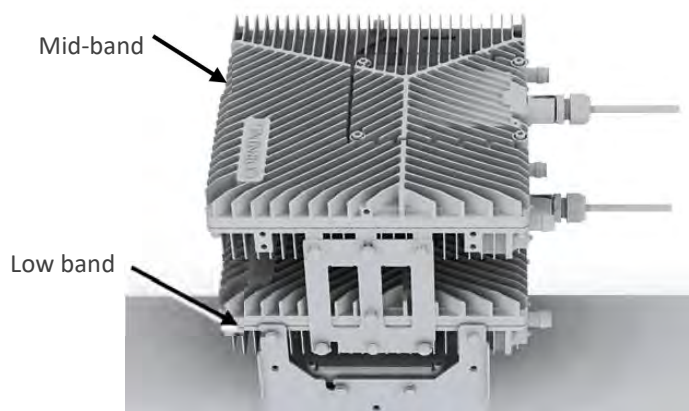


Figure 39 Combiner in the bracket

**Note: Ensure that the low band device is connected at the bottom, and the mid-band at the top.*

Connect between the two devices and the bracket (already carrying the combiner) with 4 screws.

2.5.2.2 Ceiling Installation

- **Single unit ceiling installation**

**Note: The ceiling needs to be cement board or hard wood board which enables to bear the weight of 18 pounds.*

The installation is shown in Figure 41:

- 1) Drill holes on the ceiling at a distance of 200mm*160mm according to the size of the mounting holes of bracket, then drive the expansion bolts into the holes, install the mounting bracket, pad gaskets, and lock the nuts.
- 2) Tighten the M6 bracket screws on the left and right sides of the upper part of the dLRU, and then hang the device on the mounting bracket.
- 3) Lock the device on the mounting frame with M6 combination screws, as shown below

Corning Restricted - Controlled content (R2)

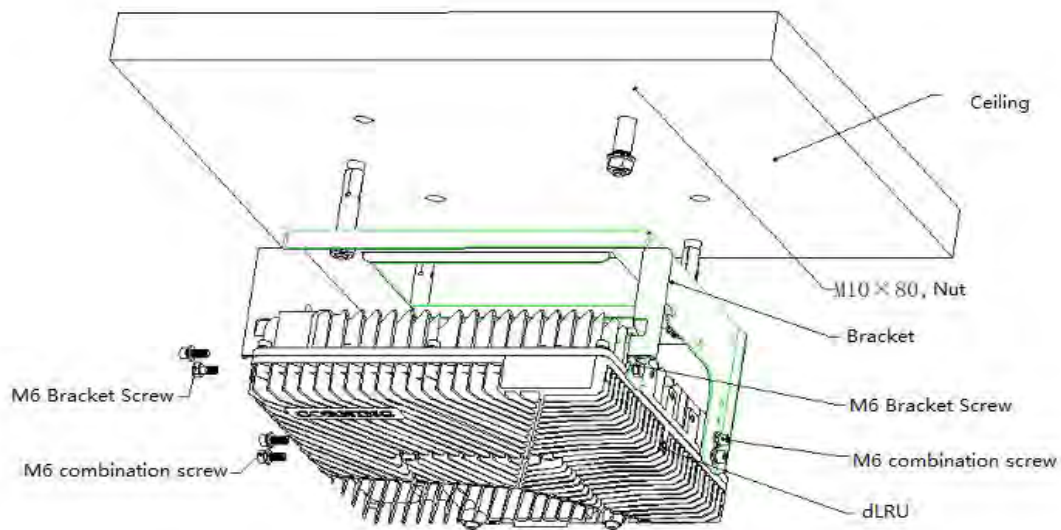


Figure 41 Single unit ceiling installation

- **Dual unit combined ceiling installation**

If the application scenario requires the use of low frequency and intermediate frequency devices, it is suggested to use the cascading installation.

**Note: The ceiling needs to be cement board or hard wood board which enables to bear the weight of 45 pounds.*

The installation steps are as follows:

- 1) Assembly of right bracket and hinge

The installation of the right bracket and hinge is shown in Figure 42.

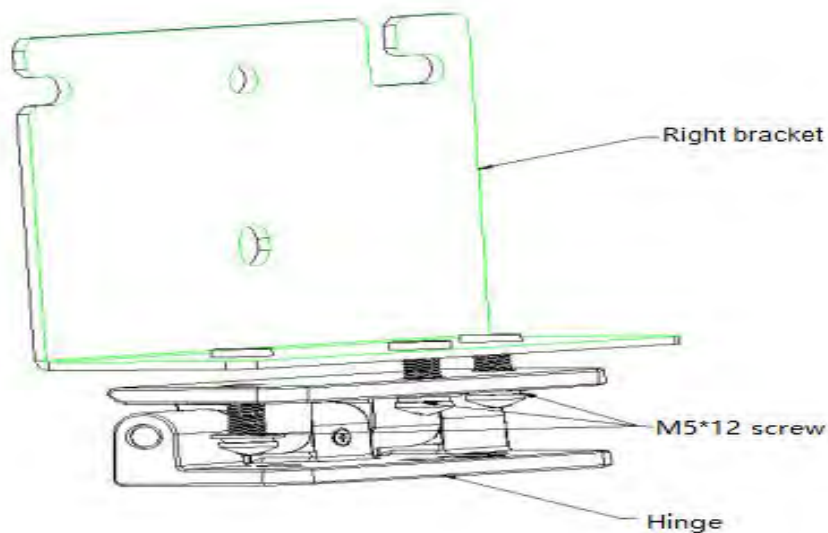


Figure 42 Right bracket and hinge installation

- 2) Assembly of left bracket, right bracket and equipment, as shown in Figure 43.

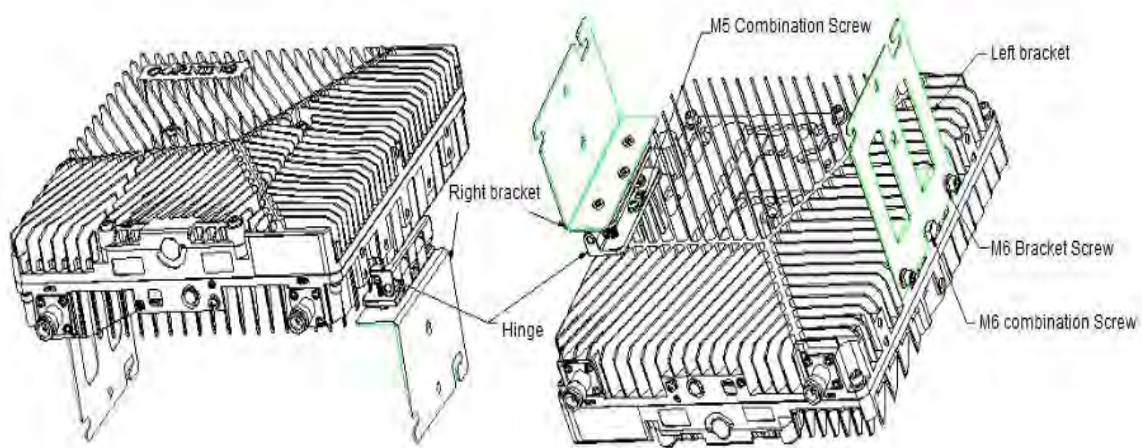


Figure 43 Installation of the left and right brackets and device bracket

- 3) Bracket installation:

Drill holes on the ceiling at a distance of 200mm*160mm according to the size of the mounting holes of bracket, then drive the expansion bolts into the holes, install the mounting bracket, pad gaskets, and lock nuts, as shown in Figure 44.

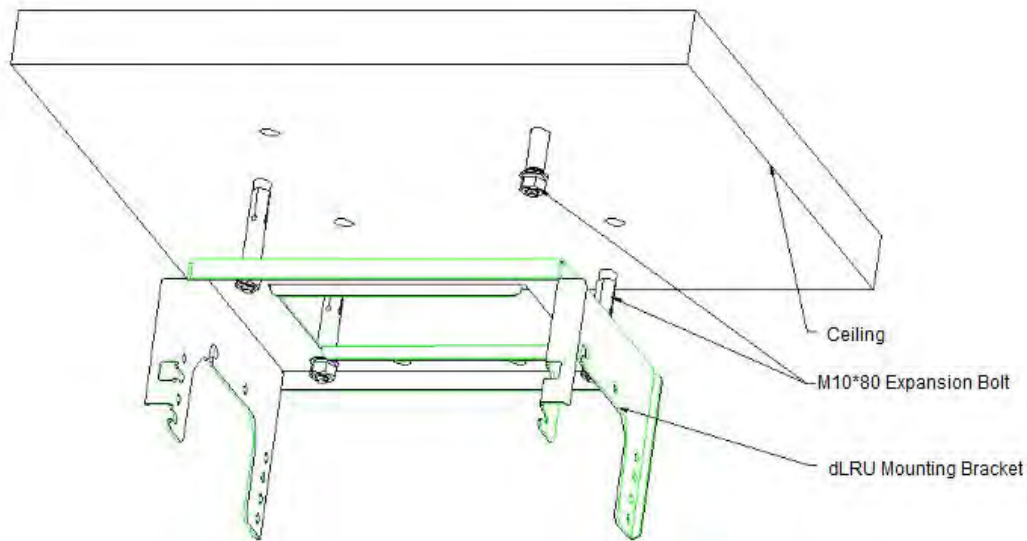


Figure 44 Mounting bracket installation diagram

- 4) Combiner Installation:

Tighten the M6 bracket screws in advance in the left and right screw holes on the upper side of the combiner (the upper side with two RF outlets). Then hang it in the mounting bracket as shown in Figure 45, and fasten it with M6×15 pentagonal combination screws.

**Note: If the device is installed outdoors, please connect the RF jumper cable before installing the combiner, and take waterproof measures for the connector in advance. Otherwise, it is inconvenient to take waterproof measures for the connector after the device is installed.*

Corning Restricted - Controlled content (R2)

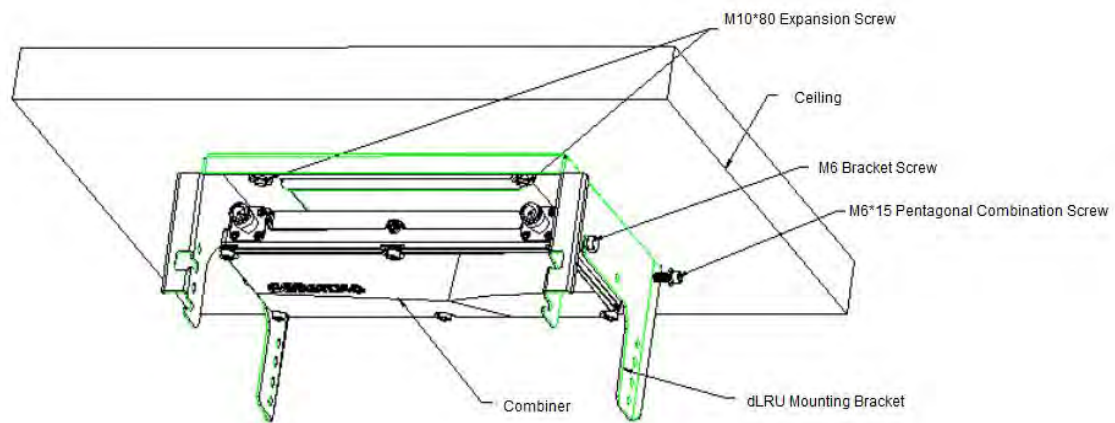


Figure 45 Combiner installation diagram

- **Low Band dLRU installation**

Tighten the M6 bracket screws on the left and right sides of the upper part of the dLRU, and then hang the device on the mounting bracket. as shown in the figure below.

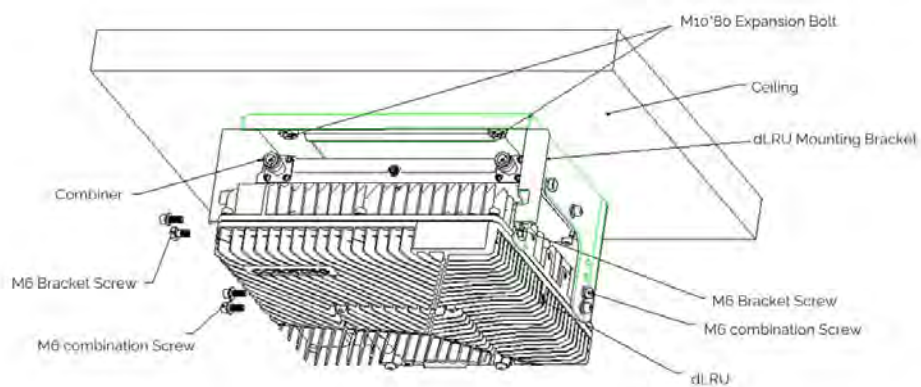


Figure 46 Low band dLRU installation

- **Hang the combination**

Hang the combination of the left and right brackets with four M6 bracket screws, and then use M6×15 pentagonal combination screws to fastened the second dLRU as shown in the figure below.

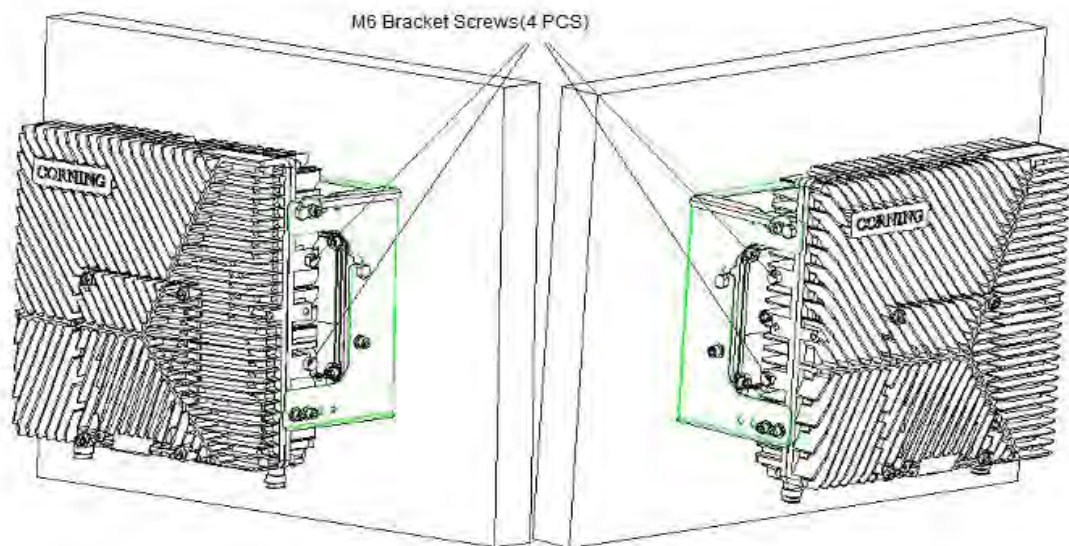


Figure 47 M6 bracket screw holes

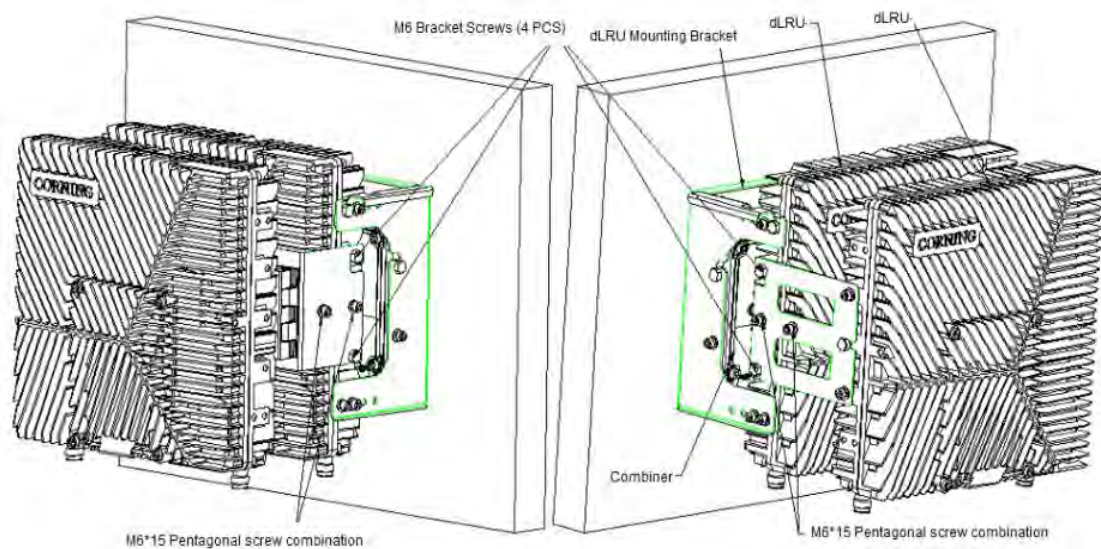


Figure 48 dLRU installation diagram

2.5.2.3 Pole Installation

➤ Single unit pole installation

The pole mounting installation of all device is the same as the wall mounting installation above, except that the equipment is installed on a pole. As shown in Figure 49, M10 bolts, M10 nuts, elastic flat washers, and pole mounting brackets are required. They can be installed on poles from $\phi 65\text{mm}$ to $\phi 140\text{mm}$ depending on the length of the M10 bolts selected (the recommended length is 12cm and 20cm).

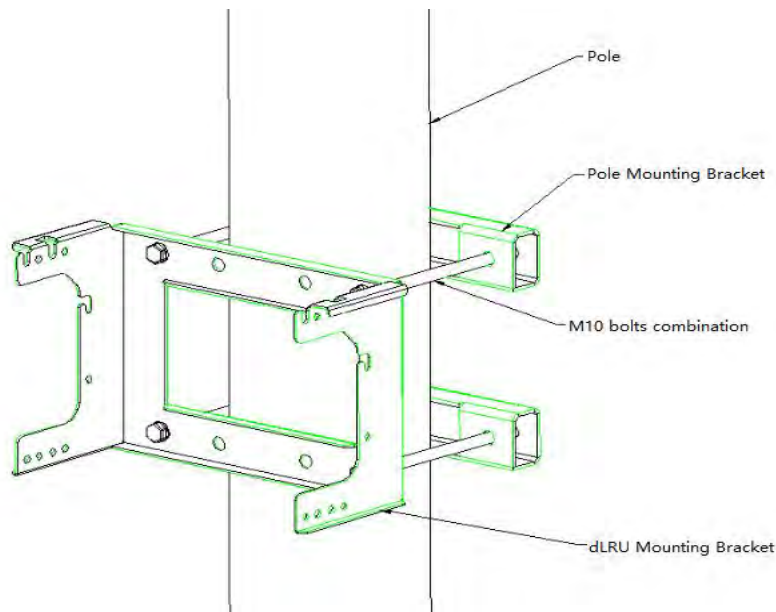


Figure 49 Pole mounting diagram

Tighten the M6 mounting screws on the left and right sides of the upper part of the device, then hang the device on the corresponding positions of the dLRU mounting bracket, and finally tighten the M6 combination screws as shown in Figure 51.

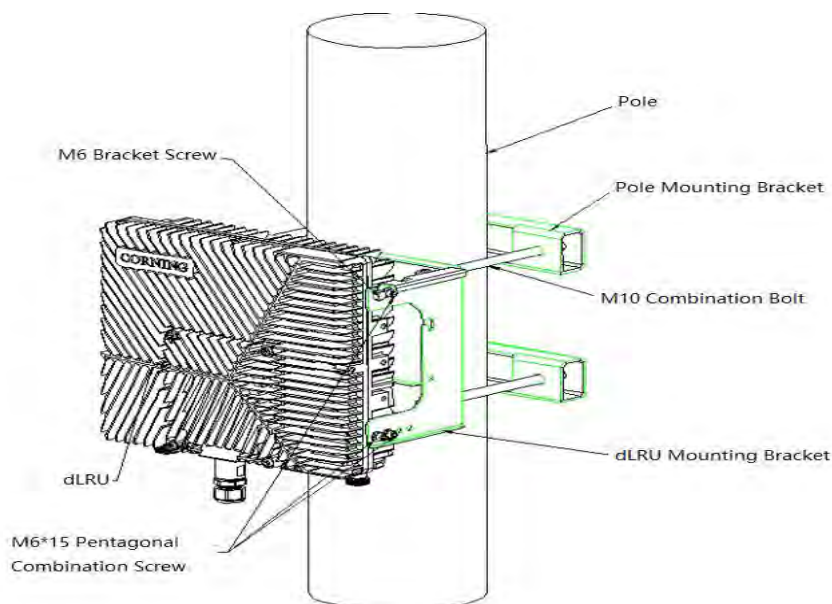


Figure 50 Diagram of pole installation for single unit

Corning Restricted - Controlled content (R2)

➤ Dual unit pole installation

Before installing the bottom device, please install the combiner first. Put the M6 bracket screws on the left and right sides of the combiner, and then hang the combiner on the mounting bracket. Finally, tighten the M6×15 pentagonal combination screws, as shown in the figure below.

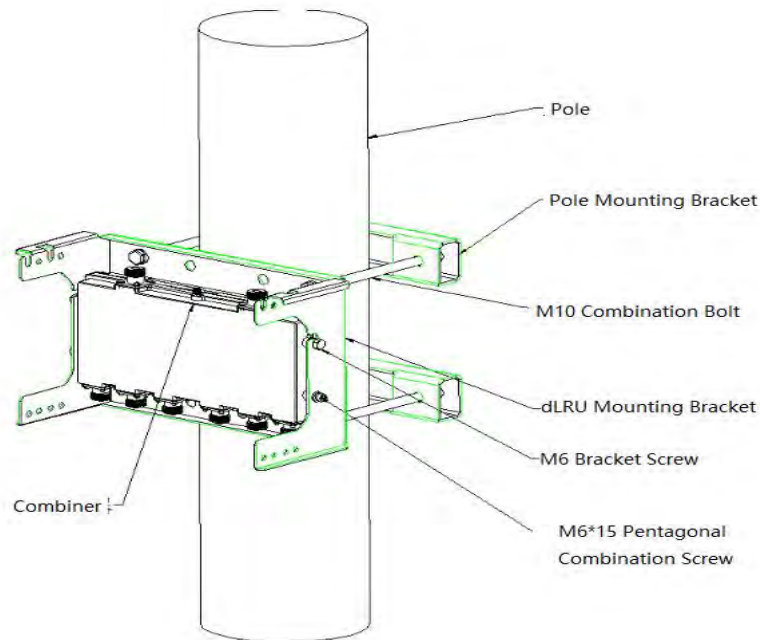


Figure 51 Installation diagram of the combiner

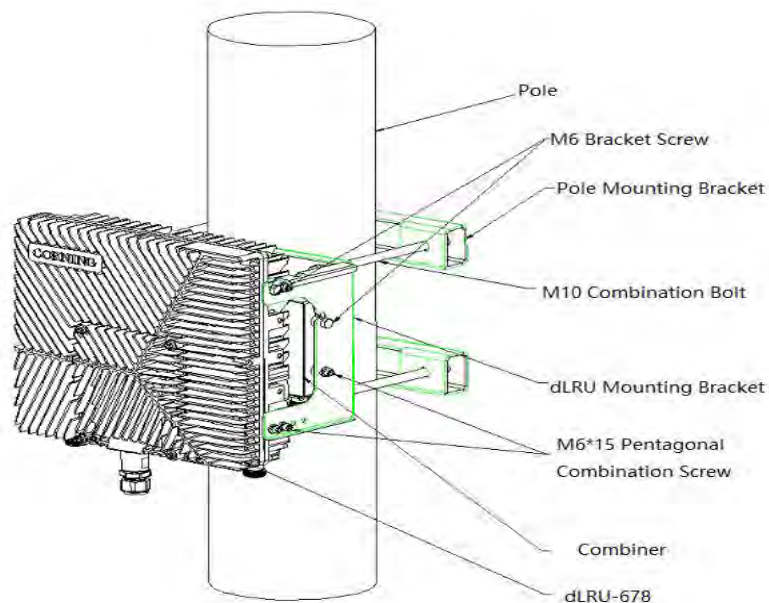


Figure 52 Installation diagram of dLRU pole

Corning Restricted - Controlled content (R2)

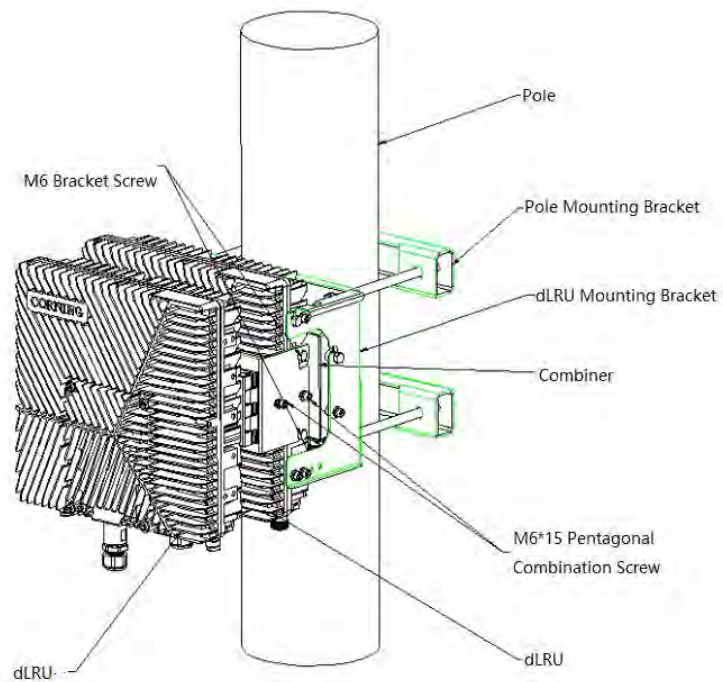


Figure 53 Dual unit installation diagram

2.5.3 Power+ SPF+ Cable

For each unit, open the cover by removing 4 screws:

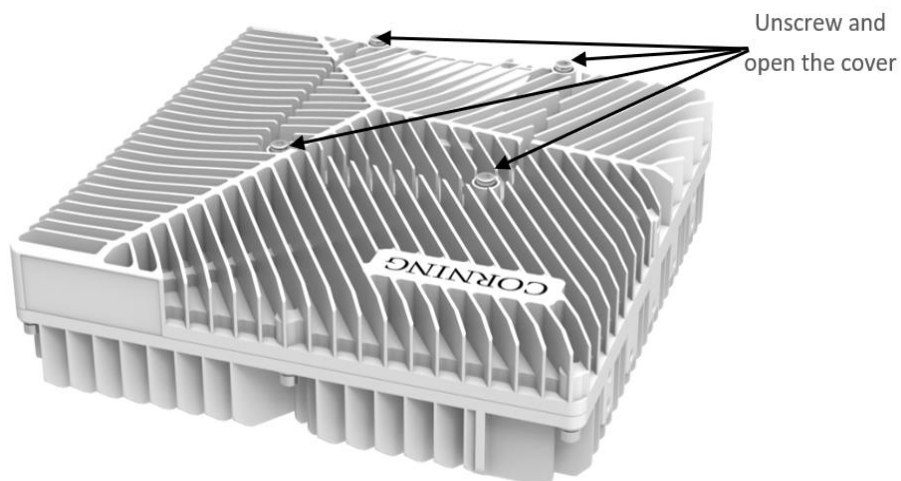


Figure 54 Connection of two units and a combiner

For each unit, connect the internal (under-cover) cables as follows:

- Power socket, see Figure 55.
- SFP+, see Figure 56.

The voltage range of the device power supply is DC36V~57V.

Remove the rubber plug from the SFP+ connector located in the LRU RF port.

Connect the SFP+ LC/UPC SM DX optical cable to the LRU optical connector.

Corning Restricted - Controlled content (R2)

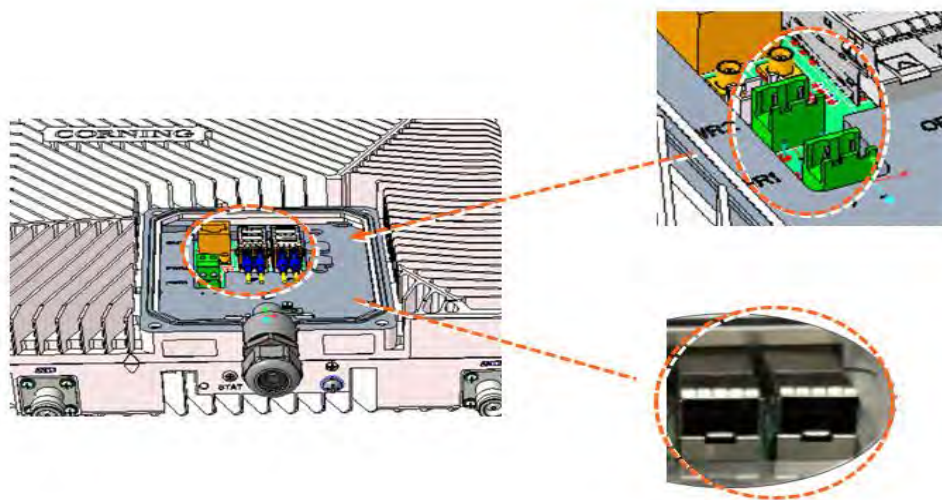


Figure 55 Power socket



Figure 56 Remove rubber plug from the port and insert the SFP+ Pluggable Transceivers (hot-pluggable optical transceiver module) into it.

2.5.4 Connect the Ground and Antenna Cables

2.5.4.1 Ground

**Note: Ground according to local regulations.*

The following additional (not supplied) tools and components are required for connecting the system ground:

- The size of ground shall meet the local and national installation requirements. The provided ground lug supports 14 AWG to 10 AWG stranded copper (or 12 AWG to 10 AWG solid) wire conductors.
- Use a wire-stripping tool to remove approximately 0.4 inch (10.9 mm) of the covering from the end of the ground.
- Insert the stripped end of the ground into the open end of the ground lug.
- Crimp the ground in the barrel of the ground lug. Verify that the ground is securely attached to the ground lug by holding and gently pulling on it.
- Prepare the other end of the ground and connect it to an appropriate ground point.

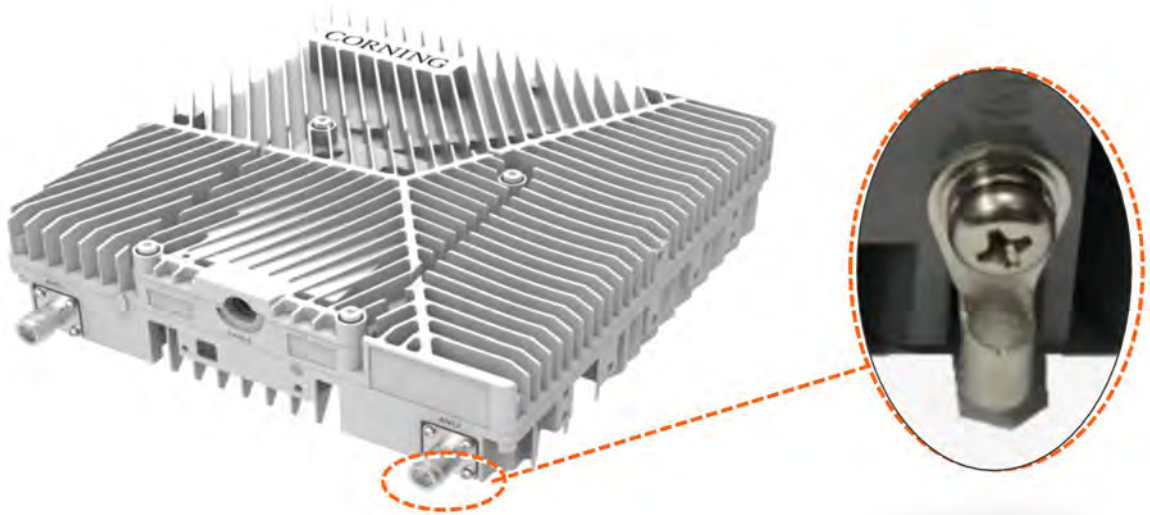


Figure 57 The ground

2.5.4.2 Antenna

Connect the MRU male 4.3-10 Type duplexed RF ANT port to the broadband antenna(s) with proper cables.

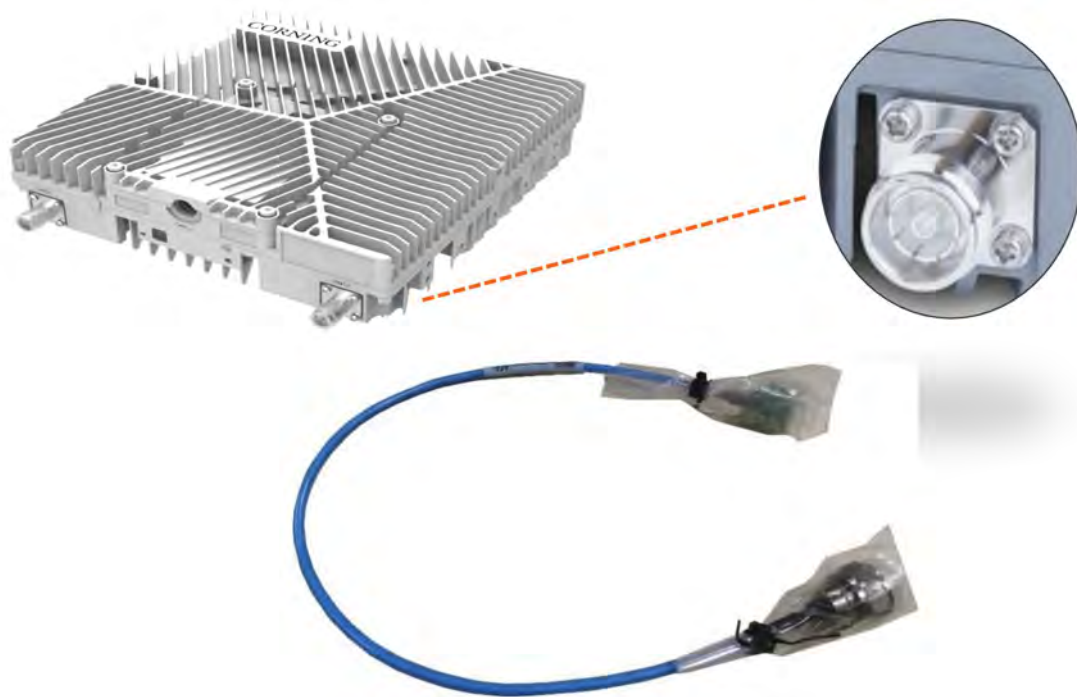


Figure 58 Antenna

**Notes:*

- To avoid MIMO disruption, ensure that the antennas are connected correctly according to the combiner labels.
- There may be some configurations/use-cases which are not required for the combiner, as there is only one type of unit (either low or mid band).

2.5.5 Combiner cables

Connect the Antenna cables as the figure shows below.



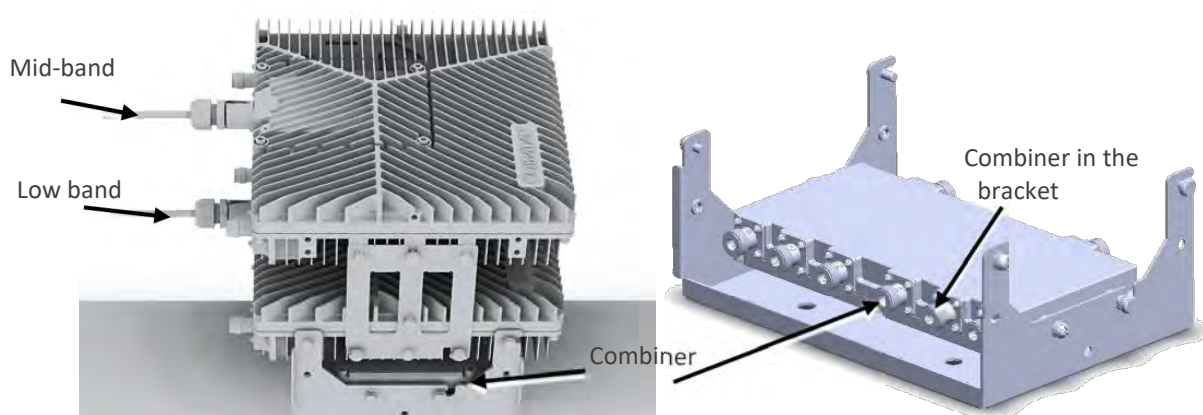


Figure 59 Combiner in the bracket

Corning Restricted - Controlled content (R2)

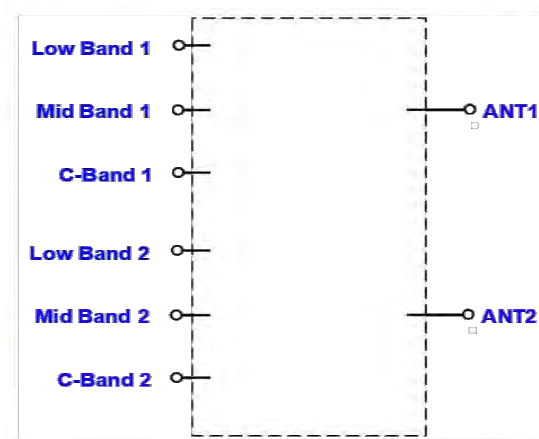

Figure

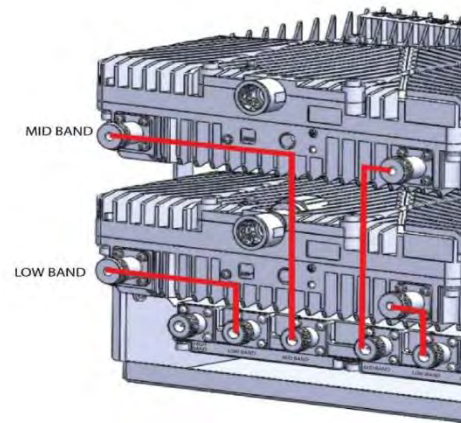

60 The entire system connection

***Notes:**

- To avoid MIMO disruption, ensure that the antennas are connected correctly according to the combiner labels.
- There may be some configurations/use-cases which are not required for the combiner as there is only one type of the unit (either low or mid band).

2.5.6 Verify normal operation

The LED indicator is located on the side panel of the dLRU, as shown in the figure below.



Figure 61 LED Indicator

The indicator status description is shown in table below.

Table 4-1 dLRU Low Power Remote unit LED Indicator

LED Indicator	Status	Description
STAT	Green	Power on or chip configuration process
	Green flashes (1time /second)	Normal operation
	Green flashes (2time /second)	Identify
	Red flashes (1time /second)	Over temperature alarm
	Red	Hardware alarm

3. GUI – General Description

This section provides general guidelines and tools for navigating the system GUI:

- Screen layout, see 3.1
- Main menu options, see 3.2.
- Default network settings, see 3.3.
- Supported access options, see 3.3

3.1 Screen Layout

The information board (located at the top of the window) lists the device information.

The Navigation board (located on the left down of the window) lists the device and their functions.

The Control board (located on the right down of the window) lists the control functions.

The screenshot displays the CORNING EVERON 6000 SOLUTIONS GUI. The top section, labeled 'Information board', shows device details: Equipment Model (RIU-G2-25), Equipment SN (2), System Version (Everon_6000_RIU_P2.V01.00.00.05), Hardware Version (1), and Band (2500T). The left section, labeled 'Navigation board', contains a menu with options: DCU, RIU (selected), Function, User, and Program. The right section, labeled 'Control board', features a table with various parameters and their status.

More	CH	Work Mode	High Gain Mode	Max. Pwr_In	DL P_in	RF Switch	UL ATT	DL ATT	ALC Switch	ALC Level	DL I
>	1	Tx/Rx	ON	37dBm	-25dBm	OFF	20dB	20dB	ON	37dBm	
>	2	Tx/Rx	ON	37dBm	-25dBm	OFF	20dB	20dB	ON	37dBm	
>	3	Tx/Rx	ON	37dBm	-25dBm	OFF	20dB	20dB	ON	37dBm	
>	4	Tx/Rx	ON	37dBm	-25dBm	OFF	20dB	20dB	ON	37dBm	
>	5	Tx/Rx	ON	37dBm	-25dBm	OFF	20dB	20dB	ON	37dBm	
>	6	Tx/Rx	ON	37dBm	-25dBm	OFF	20dB	20dB	ON	37dBm	
>	7	Tx/Rx	ON	37dBm	-25dBm	OFF	20dB	20dB	ON	37dBm	
>	8	Tx/Rx	ON	37dBm	-25dBm	OFF	20dB	20dB	ON	37dBm	

Figure 62 RIU screen layout

3.2 Function Options

The function options on the Web-GUI are listed in the following table.

Function	Description
Device info	View the system topology and info about different system elements
Reset	Software reset for the selected device
Firmware	Upgrade or downgrade the firmware
Alarm Setting	Set the alarm including alarm enable/disable, alarm threshold
Import & Export	Import or export the config file
Log	Import or export the log file
Comm. Setting	Communication setting on the SNMP parameters
IP Setting	IP setting for the device
Site Report	Site information inventory

3.3 Supported Access Options

This section describes the HW and SW required for connecting to the HCM.

First, connecting to the HCM should be done with a laptop or a tablet.

The following browsers are supported:

- Microsoft Internet Explorer 11.0 and above
- Mozilla Firefox 42.0, 43.0 and above
- Google Chrome 45.0, 46.0 and above

After the initial configurations are done, it is recommended to establish remote access to the HCM by using the following:

LAN Ethernet connection to the HCM with a minimum connectivity and throughput capability of 256 Kbps

4. Session Access and first-time settings

When all the system elements are installed, the system administrator can login the system GUI and perform initial configurations.

It is recommended to start using Corning® Everon™ 6000 and the specific steps are as follows:

- **Open a local session to the DCU**, see chapter 4.1.
- **Configure the LAN IP settings** (remote management) to enable remote access, see chapter 4.2.
- **Perform the initial configurations (commissioning)** using the system GUI, see chapter 5.

4.1 Open a Local Session

The following are the instructions for opening a local management session to perform basic system configurations via the system GUI.

➤ To Open the system GUI

- 1) Connect a computer (e.g., laptop) to the DCU OMT port via an RJ45 Cat 5 Ethernet cable as follows:

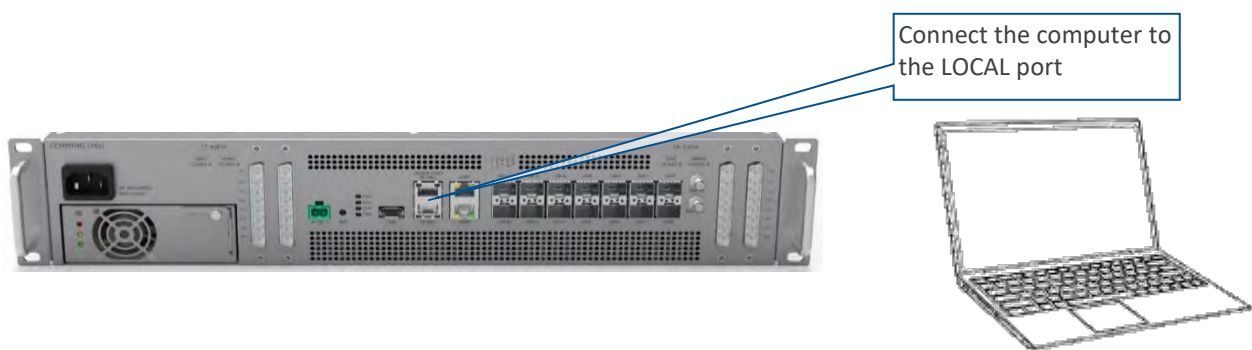


Figure 63 GUI connection

*Notes:

- The LOCAL port is set to a static IP Address by default: 192.168.8.101; Subnet Mask: 255.255.0.0. Your laptop/tablet network parameters must be set to match the subnet of the default IP address.
 - The laptop/tablet IP address must be different from the LOCAL port IP address.
- 2) Set up your laptop/tablet network parameters by following the steps below (the steps may vary slightly depending on the OS version used):
 - a. Click **Start → Settings → Network & Internet**

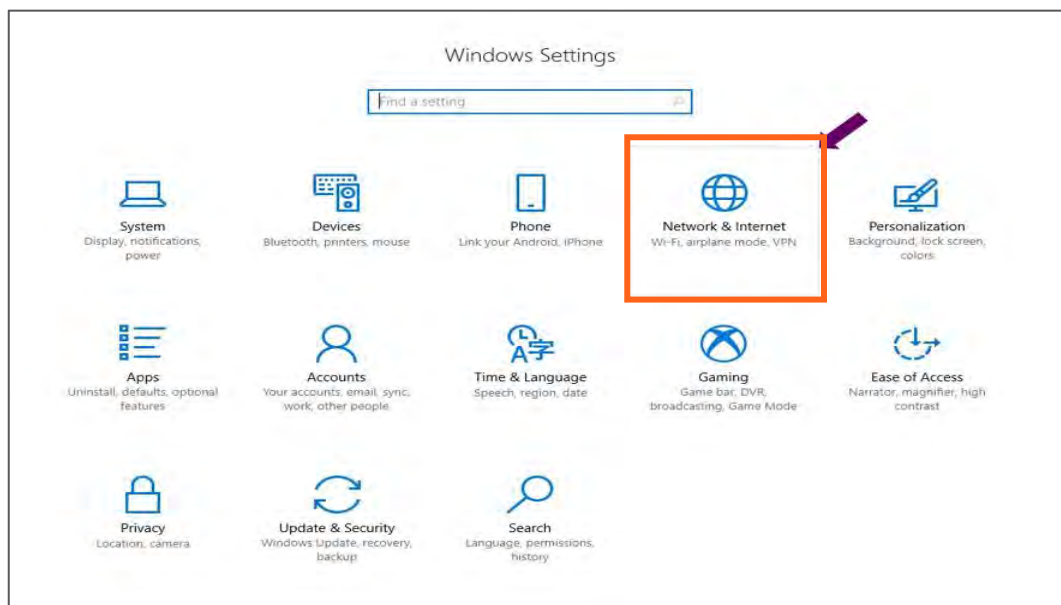


Figure 64 Network & Internet setting

b. Select **Ethernet** → **Change adapter options**

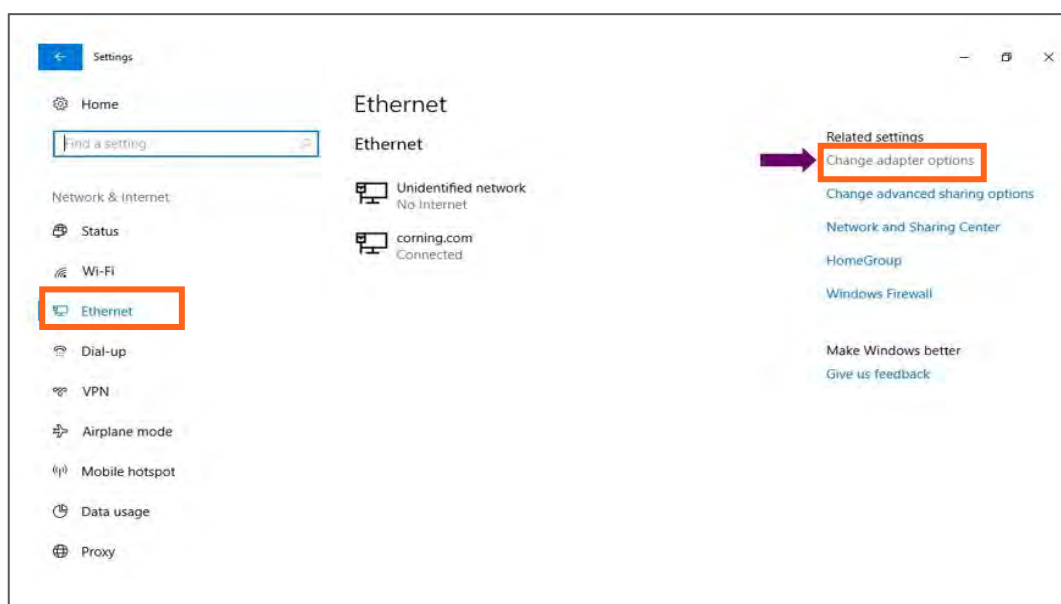


Figure 65 Ethernet setting

c. Right click **Ethernet 3** and select **Properties**.

Corning Restricted - Controlled content (R2)

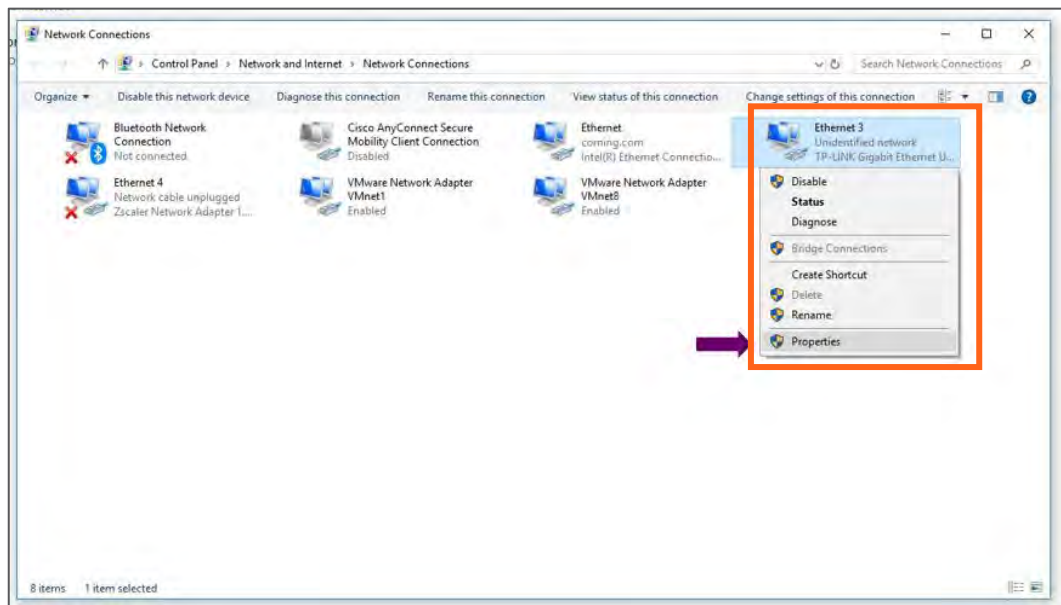


Figure 66 Ethernet 3

- d. Select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**

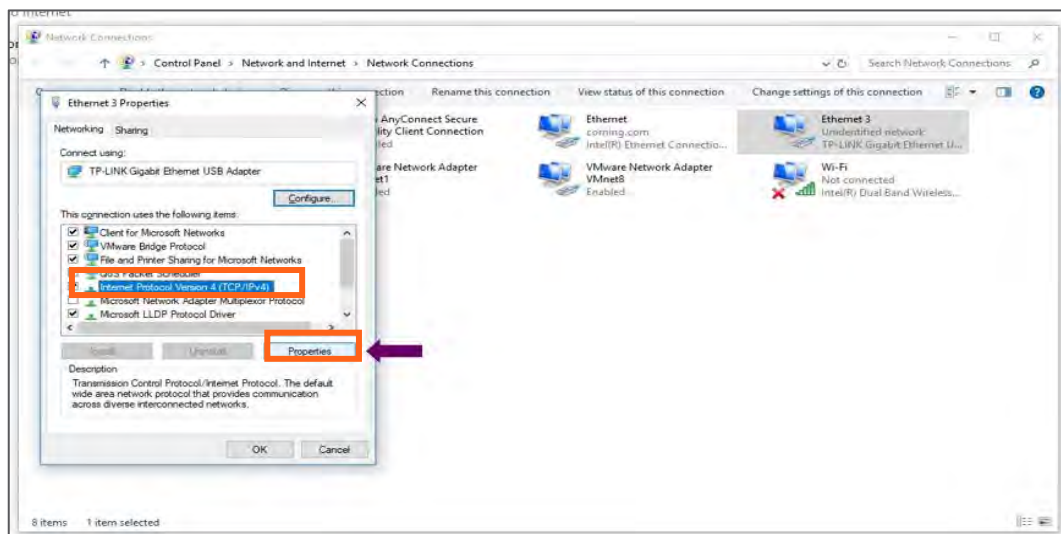


Figure 67 Ethernet 3 properties

- Type in the properties: 192.168.8.3 255.255.0.0 → click **OK**
- Examples of IP addresses:

Corning Restricted - Controlled content (R2)

- **Allowed: 192.168.8.3**
 - **Not allowed: 192.168.8.101 (this IP is used by the LOCAL port).**
- iii. Click **OK** and close the control panel

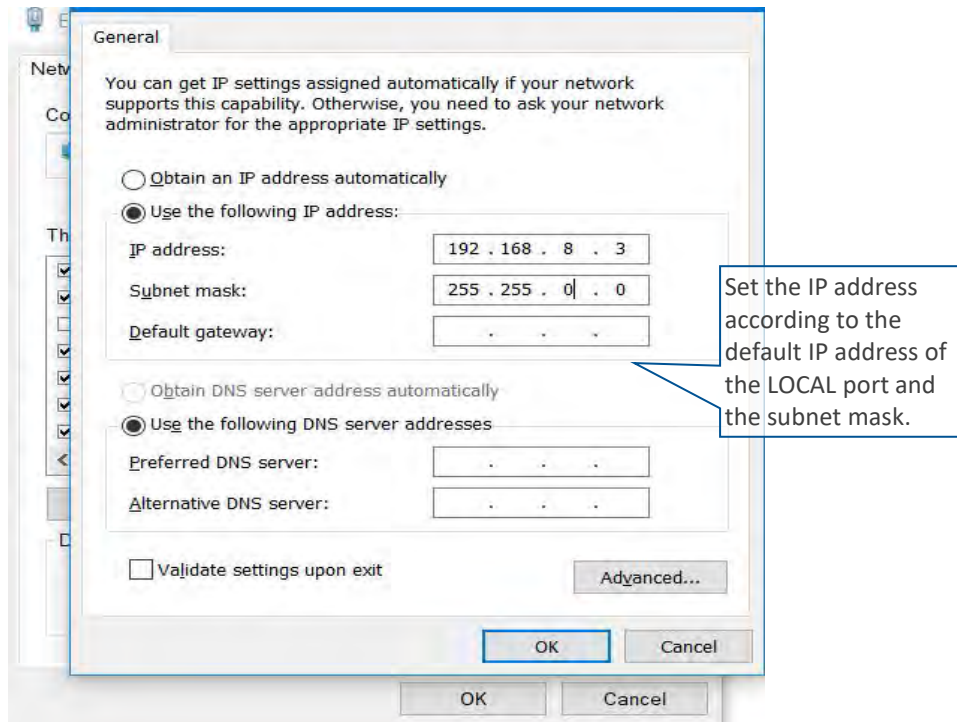


Figure 68 General setting

- 3) When the connection is established (can be verified by accessing through command prompt: cmd → ipconfig), open a browser and type in the LOCAL port default IP address in the address bar: 192.168.8.3. Ping the IP address also works. See section 4.2 for instructions on how to continue.

5. Commissioning

Configure the DAS for each frequency during the commissioning process which requires a basic understanding of link, budgets and RF technology. Most system commissioning scenarios are covered and the process should be adjusted based on the site requirements and instructions of Corning Support.

webGUI Workflow

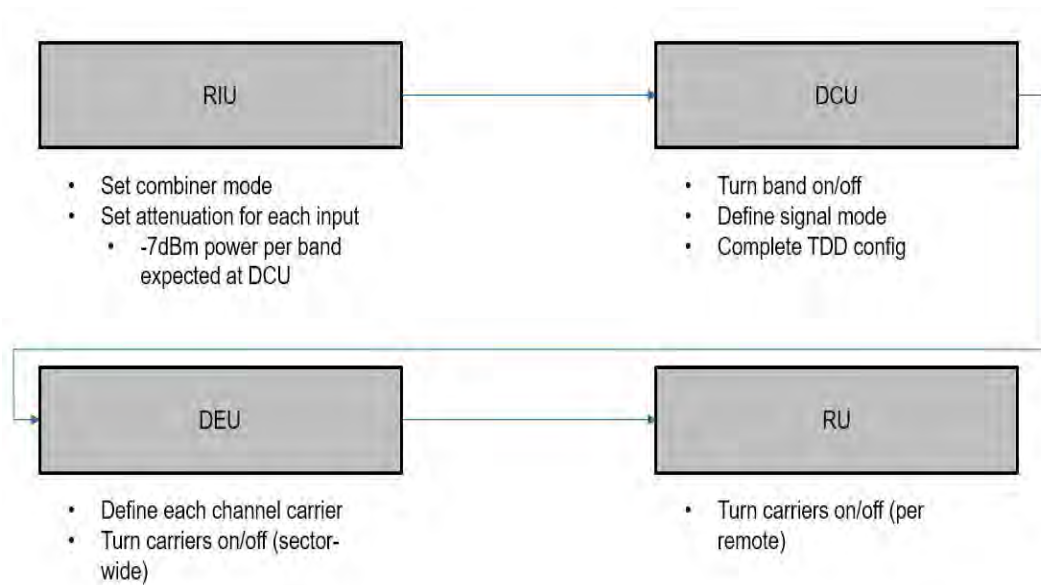


Figure 69 webGUI Workflow

**Note: In order to protect the whole system, please don't input eNodeB signal before commissioning.*

Commissioning tools:

Tools	Description
Laptop	Debug tool
Network cable	Connect DCU OMT port with laptop

5.1 RIU Config

5.1.1 RIU WEB overview

Click RIU on the left side shown in the figure below to enter the RIU overview control interface where the information (e.g., RIU alarm) can be viewed. Drag the scroll bar under the information list box or the arrow in the column of More to view more.

Configure the following parameters:

- Band: Read Only. This shows the current frequency band supported by the RIU

Corning Restricted - Controlled content (R2)

- Combiner Mode: 8TO1/4TO1/2TO1

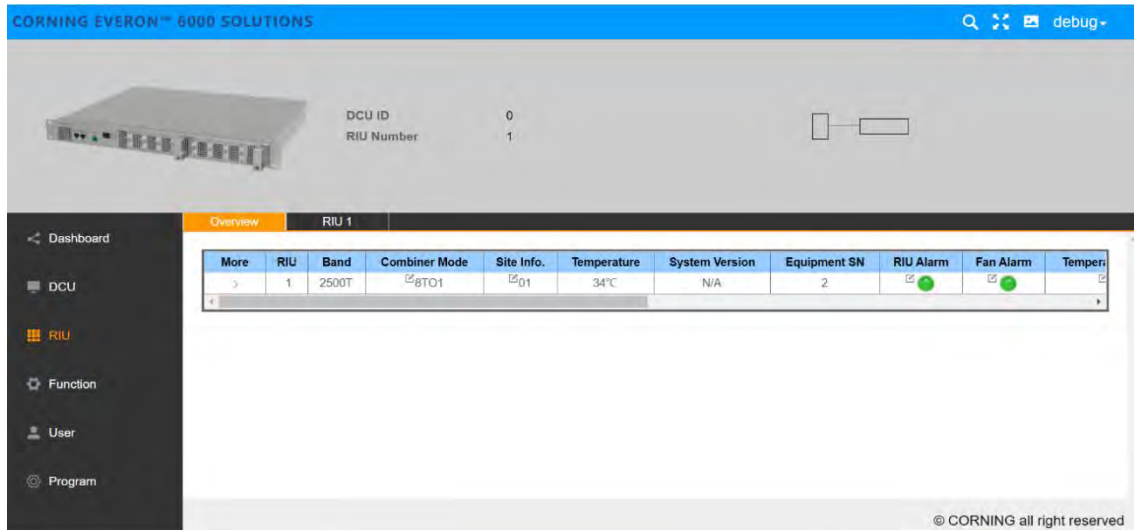


Figure 70 RIU overview

5.1.2 RIU Parameter Config

RIU parameters:

SN	RIU parameters	Ranges	Recommend values
1	Work Mode	TxRx/Tx/Rx	TxRx
2	High Gain Mode	On/Off	On
3	DL P_in	Read only	Read only
4	RF Switch	On/Off	On
5	UL ATT	0-30dB	20
6	DL ATT	0-30dB	20

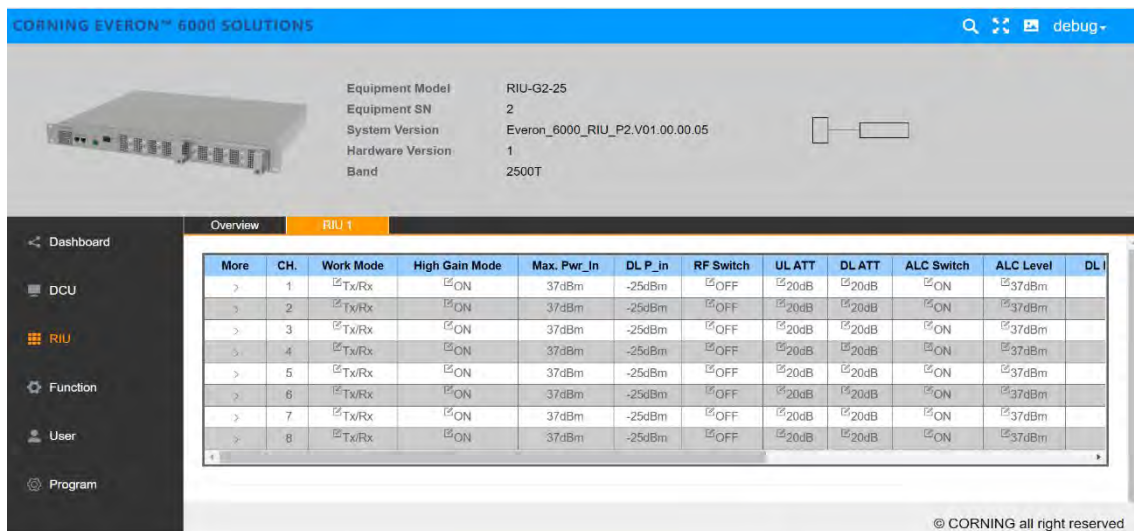


Figure 71 RIU RF information

Corning Restricted - Controlled content (R2)

5.2 DCU Config

5.2.1 DCU -> Dashboard

Click the Dashboard navigation button to enter the dashboard page shown in the figure below, where you can query the full topology of all the dependent NE connected to the DCU unit. Click NE ID in the topology, and switch to the info query and configuration management page of other NE to facilitate the user.

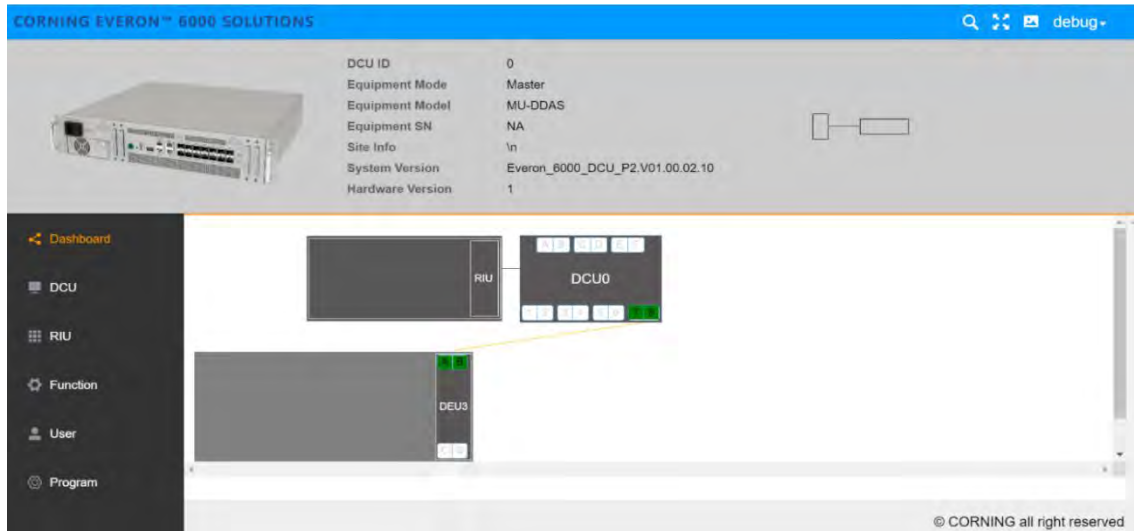


Figure 72 DCU dashboard

5.2.2 DCU Alarm

On the left navigation page of the DCU unit, click DCU → Alarm shown in the figure below. On this page, all alarm quantities of the device are displayed to facilitate the user to query and monitor the alarm info.

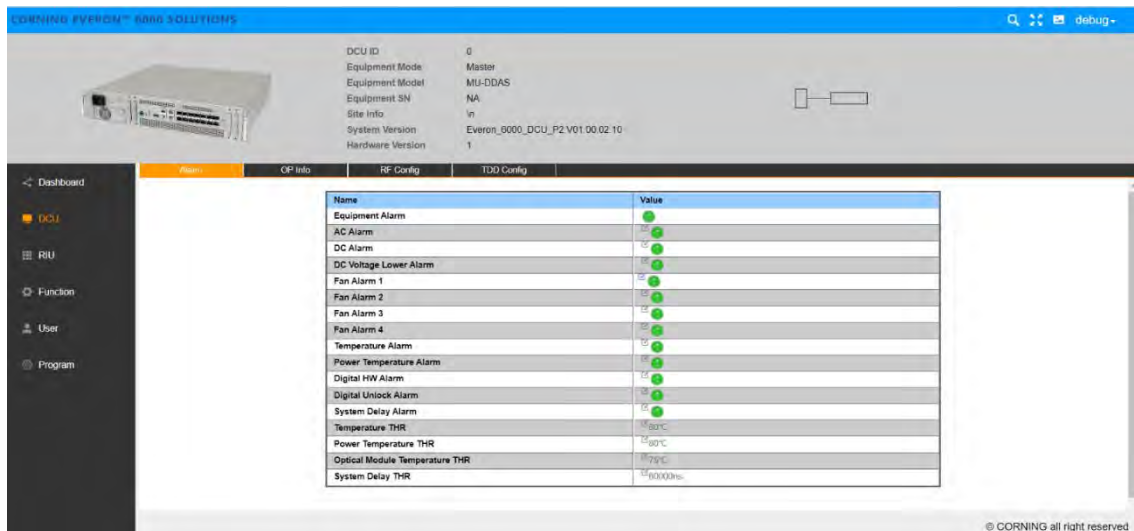


Figure 73 DCU alarm info

5.2.2.1 DCU OP Info

Click the left navigation button DCU→OP Info, as shown in the figure:

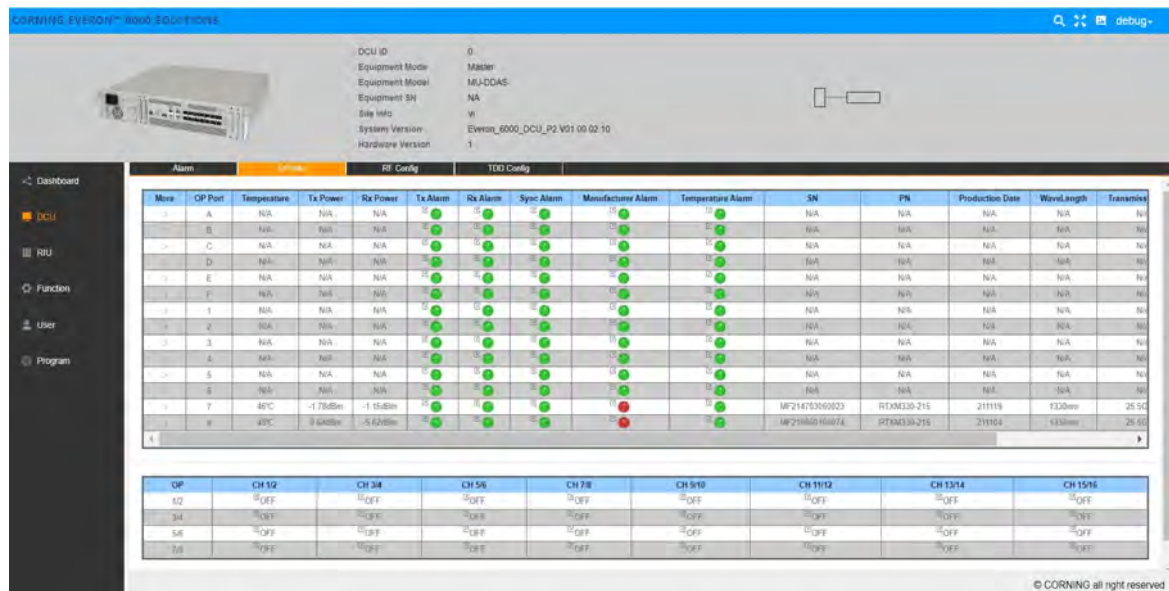
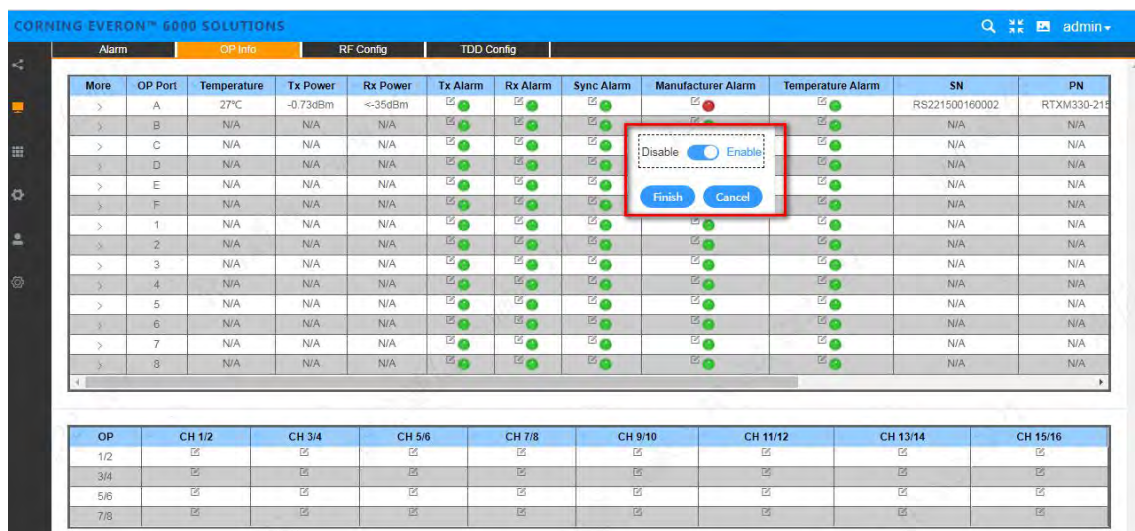


Figure 74 DCU OP info

In this interface, you can view the information of all optical ports which is convenient for users to query the alarm info of optical modules.

Click the edit icon  in front of the alarm indicator to enter the alarm enabling and shielding settings page. Then click Finish to complete the setting, as shown in the following figure:

Figure 75 DCU → OP Info →  → Disable/Enable → Finish/Cancel

Click OP Info → More to view the optical module info, as shown in the figure below:

CORNING EVERON™ 6000 SOLUTIONS

Alarm OP Info RF Config TDD Config

More

Name	Value
PN	RTXM330-215
Production Date	220407
WaveLength	1330nm
Transmission Rate	25.5Gbps
Manufacture	WTD

OP Port	Temperature	Tx Power	Rx Power	Tx Alarm	Rx Alarm	Sync Alarm	Manufacturer Alarm	Temperature Alarm	SN	PN
A	27°C	-0.73dBm	<-35dBm	OK	OK	OK	OK	OK	RS221500160002	RTXM330-215
B	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
C	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
D	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
E	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
F	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
1	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
2	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
3	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
4	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
5	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
6	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
7	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A
8	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A

OP	CH 1/2	CH 3/4	CH 5/6	CH 7/8	CH 9/10	CH 11/12	CH 13/14	CH 15/16
1/2	OK	OK	OK	OK	OK	OK	OK	OK
3/4	OK	OK	OK	OK	OK	OK	OK	OK
5/6	OK	OK	OK	OK	OK	OK	OK	OK
7/8	OK	OK	OK	OK	OK	OK	OK	OK

Figure 76 DCU→ OP Info →More

The optical port source can be select by clicking  shown in the figure below:

CORNING EVERON™ 6000 SOLUTIONS

DCU ID: 0
Equipment Mode: Master
Equipment Model: MU-DCAS
Equipment SN: NA
Site Info: NA
System Version: Everon_6000_DCUI_P2 V01.00.02.10
Hardware Version: 1

Dashboard DCU RIU Function User Program

Alarm OP Info RF Config TDD Config

More	OP Port	Temperature	Tx Power	Rx Power	Tx Alarm	Rx Alarm	Sync Alarm	Manufacturer Alarm	Temperature Alarm	SN	PN	Production Date	WaveLength	Transmission
More	A	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	B	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	C	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	D	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	E	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	F	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	1	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	2	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	3	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	4	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	5	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	6	N/A	N/A	N/A	OK	OK	OK	OK	OK	N/A	N/A	N/A	N/A	N/A
More	7	48°C	-1.75dBm	-1.15dBm	OK	OK	OK	OK	OK	MF214701000023	RTXM330-215	211109	1330nm	25.5G
More	8	48°C	-1.54dBm	-1.52dBm	OK	OK	OK	OK	OK	MF210001000074	RTXM330-215	211104	1330nm	25.5G

OP	CH 1/2	CH 3/4	CH 5/6	CH 7/8	CH 9/10	CH 11/12	CH 13/14	CH 15/16
1/2	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
3/4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
5/6	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
7/8	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

© CORNING all right reserved

Figure 77 DCU→ 

5.2.2.2 DCU RF Config

Click DCU→RF Config, as shown in the figure below:

SN	DCU parameters	Range	Recommend value
1	Band (Set based on RIU type)	2500T (2496-2690) N3500F (3450-3700) N3500G (3700-3980)	Choose based on the RIU BTS connections
2	BW (Set Based on Band)	194 MHz (2500T) 250 MHz (N3500F) 280 MHz (N3500G)	Choose based on the RIU BTS connections
3	DL Center Freq	2593 MHz (2500T) 3575 MHz (N3500F) 3840 MHz (N3500G)	Choose based on the RIU BTS connections
4	Signal Mode	FDD (not used in this release) TDD-NR TDD-LTE TDD-NR + TDD-LTE	Choose based on the RIU BTS connections
5	RF Switch	On/Off	On

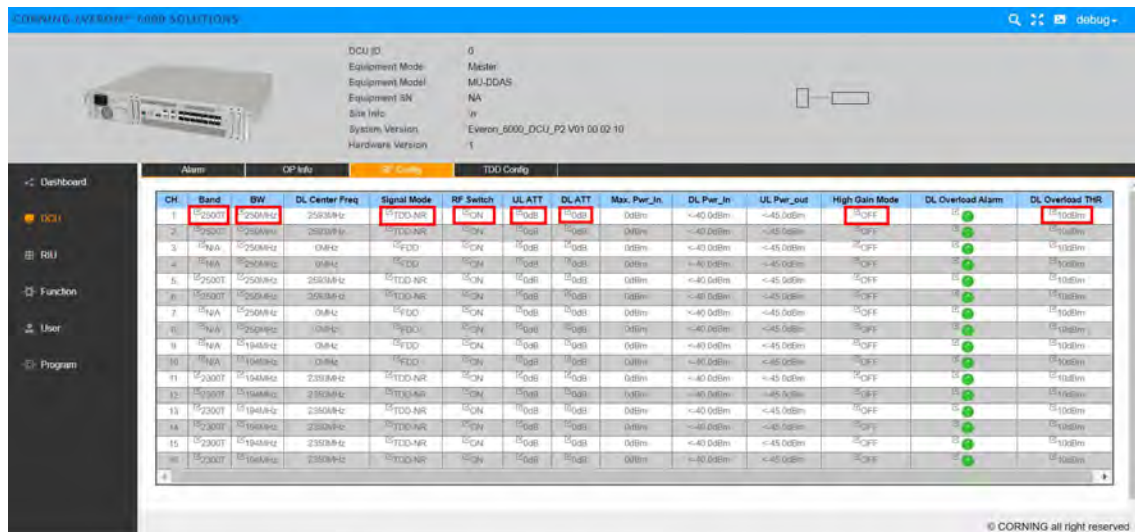


Figure 78 DCU→RF Config1

5.2.2.3 DCU TDD Config

UL/DL Slot Configuration: User-defined parameters are supported, but should be the same as the operator parameters.

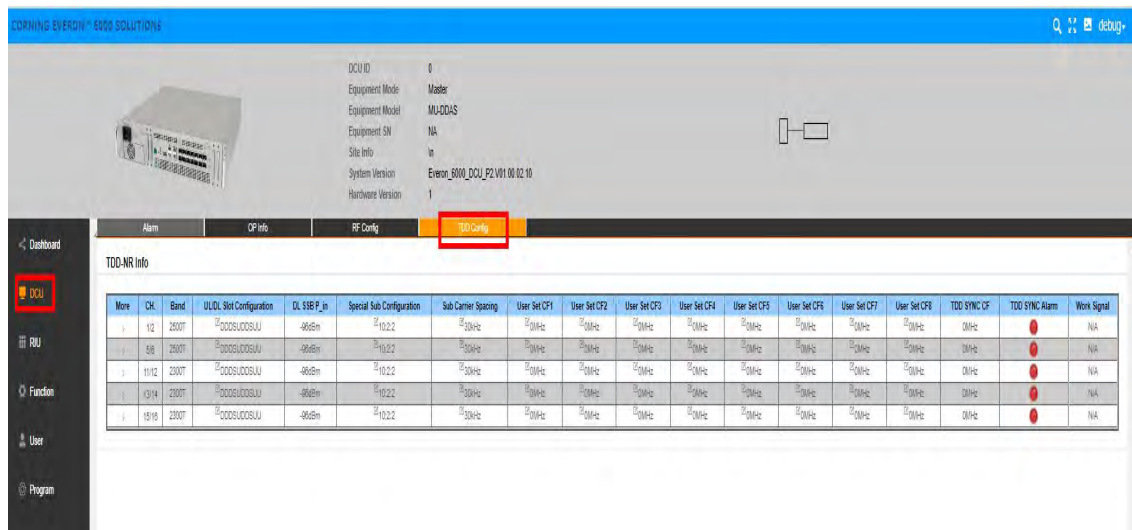


Figure 79 DCU → TDD Info

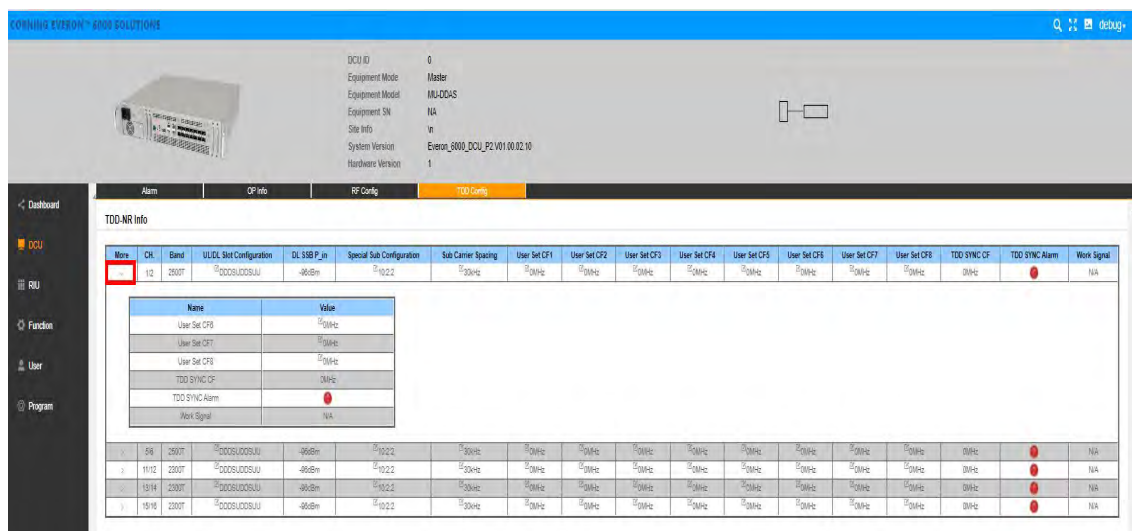


Figure 80 TDD configuration

5.2.3 DCU -> RIU

As shown in the figure, click DCU → RIU to query and set the information of the RIU connected to the DCU unit.

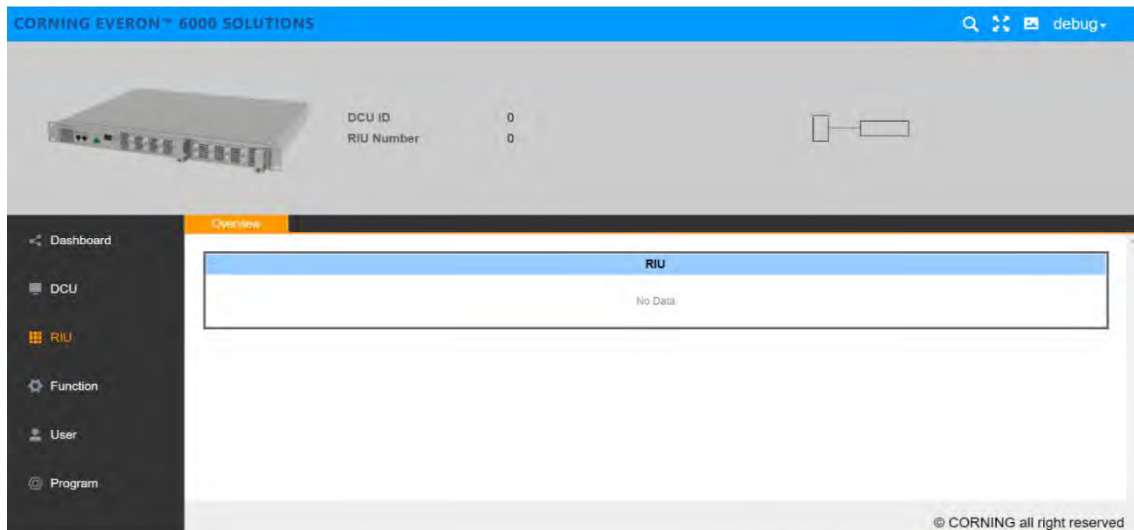


Figure 81 RIU overview

5.2.4 DCU -> Function

Configure the max input according to specific needs.

5.2.4.1 Device Info

Click Function → Device Info to query the names and values of the device, as shown in the figure:

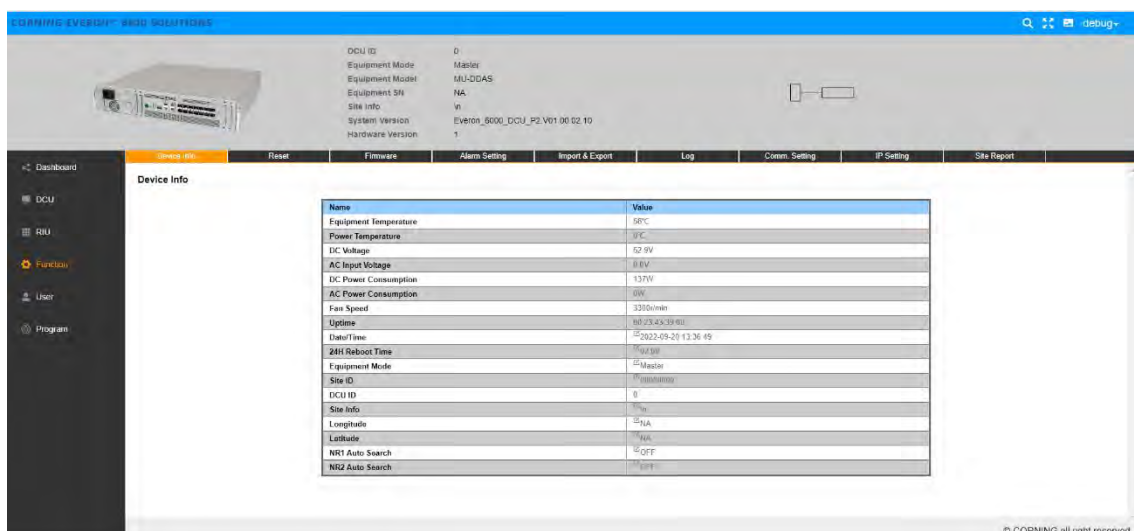


Figure 82 DCU → Function → Device Info

24h reboot time, site info, site ID, user model and device mode can be customized by users.

24H Reboot Time is set by the user which can be reset within 24 hours; Device Mode is used to set the work mode of DCU. (Note: when DCU is in master mode, it can be connected to DEU; when DCU is in slave mode, it fails to connect to DEU and work independently. It can only connect to master DCU for normal use.)

5.2.4.2 Reset

Click Function → Reset to reset the software and hardware of DCU and clear the historical alarms.

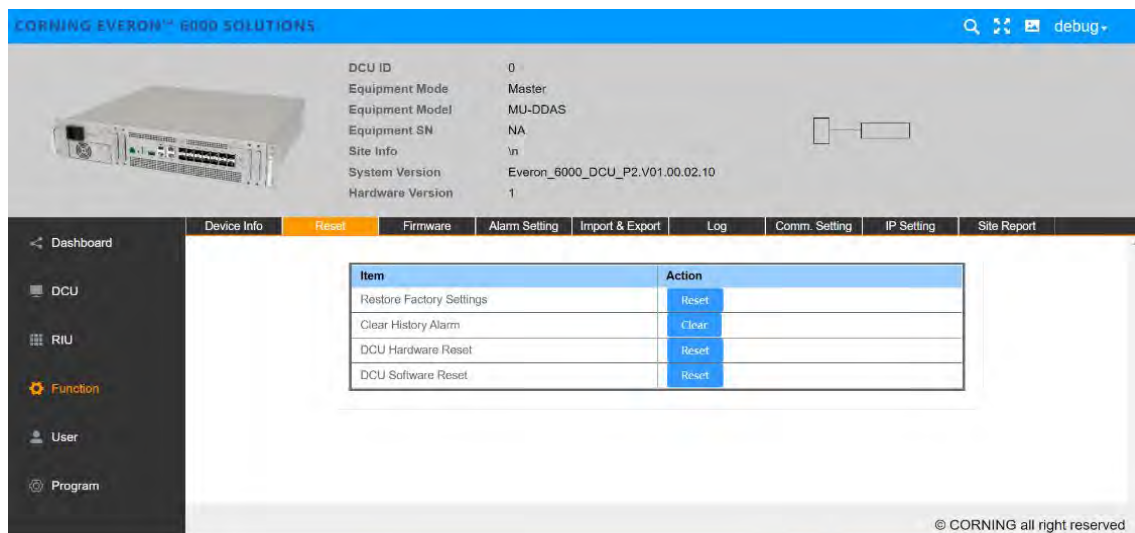


Figure 83 DCU → Function → Reset

5.2.4.3 Firmware

Click Function → Firmware and the firmware info can be viewed and upgraded.

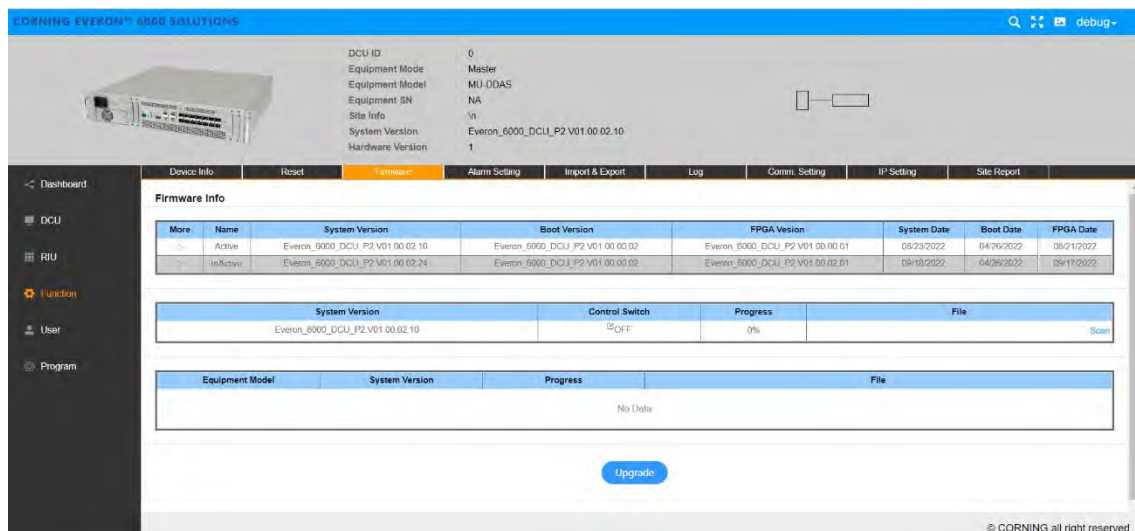


Figure 84 DCU → Function → Firmware

Two upgrade modes are supported by 5G digital DAS products of D430 series of the system software of all NE: centralized upgrade and decentralized upgrade. The settings of the two modes can be configured in Control Switch:

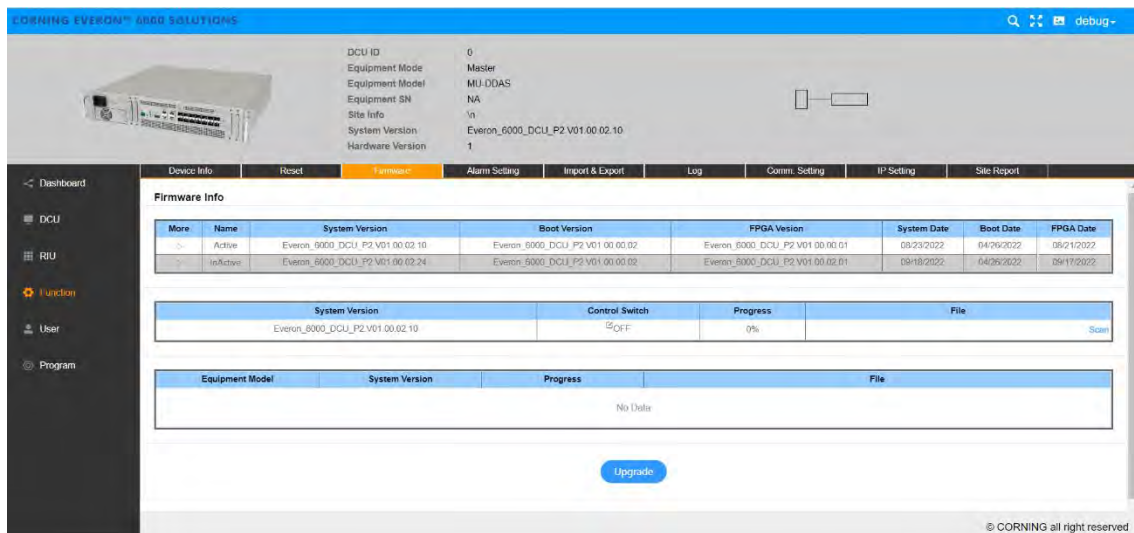


Figure 85 Firmware upgrade configuration

1. Decentralized upgrade : the Control Switch is OFF and only the software of the current DCU unit can be upgraded in this mode. The steps to upgrade the software are the followings:

Step1: Click SCAN to import the software version to be upgraded.

Step2: Click Upgrade. When the progress of downloading the software to the device is 100% and FINISH is prompted, the software is successfully downloaded.

Step3: After the device is reset, the software will be upgraded automatically.

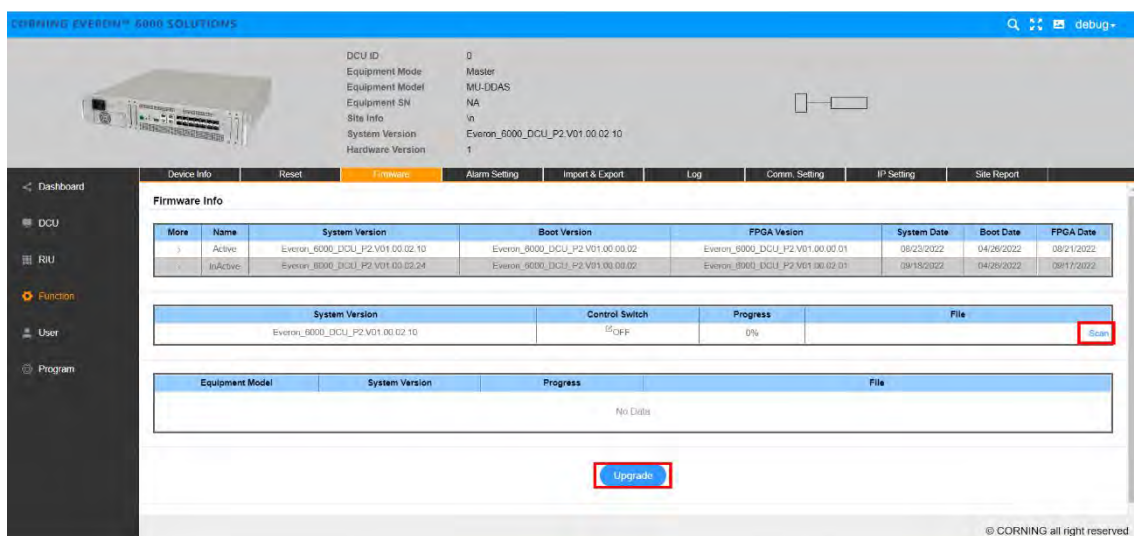


Figure 86 Select file

2. Centralize upgrade: the Control Switch is ON. The system software of seven NE (RIU, DCU, DEU, DLRU-2.5, DLRU-3.5, DMRU-2.5, DMRU-3.5) in the 5G digital DAS products will be stored after they are imported into the internal storage by the users. All the slave NE (slave DCU, DEU, DLRU) connected to this seven NE will automatically take the system software to be upgraded independently.

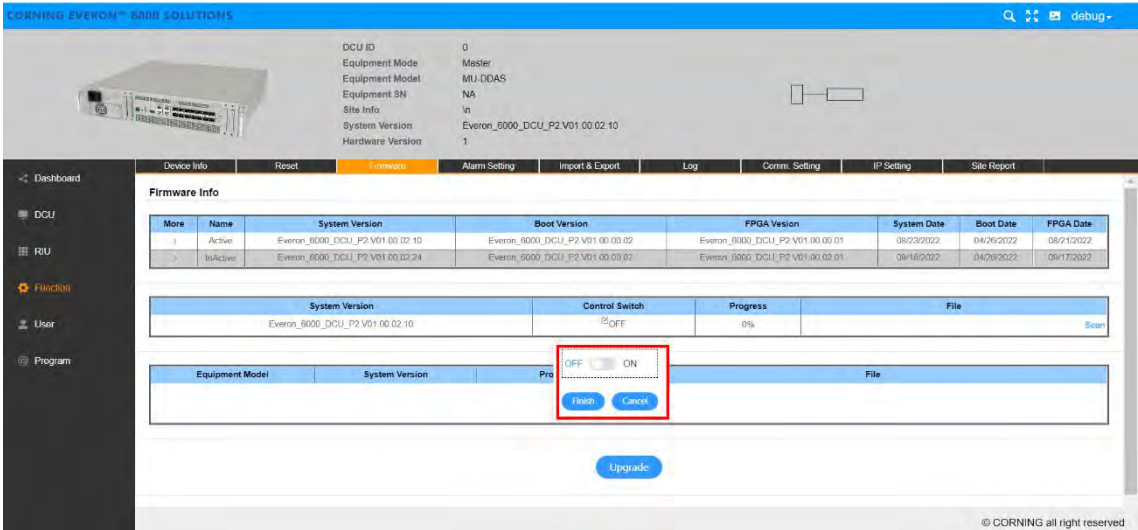


Figure 87 System upgrade on/off

5.2.4.4 Alarm Setting

Through Function → Alarm Setting, setting the alarm duration can be achieved. When it is set to 1~253, it shows alarm duration, with the unit of 10s. Setting to 254 indicates an immediate level alarm; Set to 0 and the alarm will not occur until 3 minutes later;

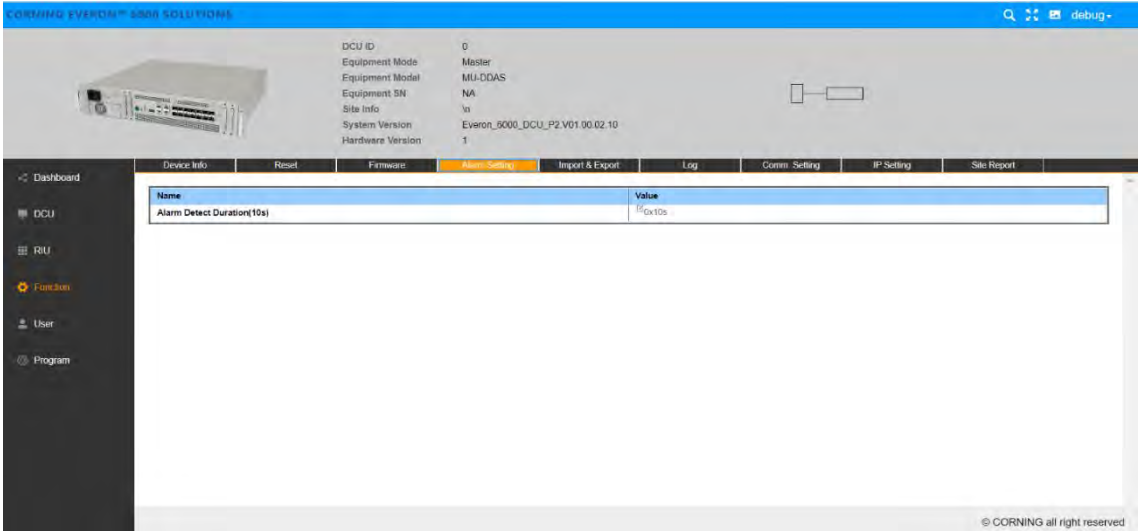


Figure 88 DCU →Function → Alarm Setting→Alarm Detect Duration

5.2.4.5 Import & Export

The user can import and export DCU configuration by clicking Function → Import & Export, as shown in figure:

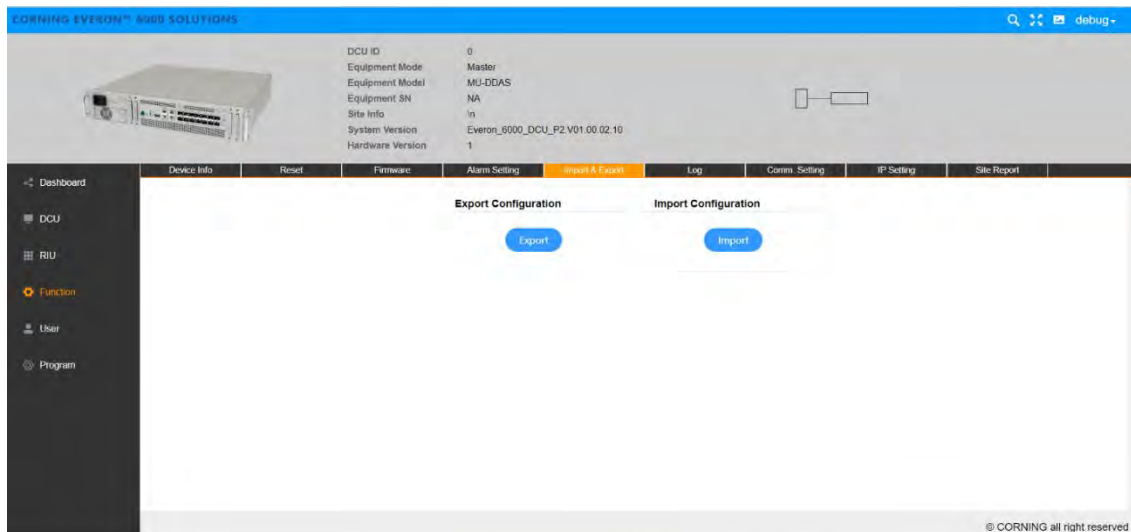


Figure 89 DCU → Function → Import & Export

5.2.4.6 Log

Click Function → Log to export the log of DCU for problem analysis, as shown in the figure:

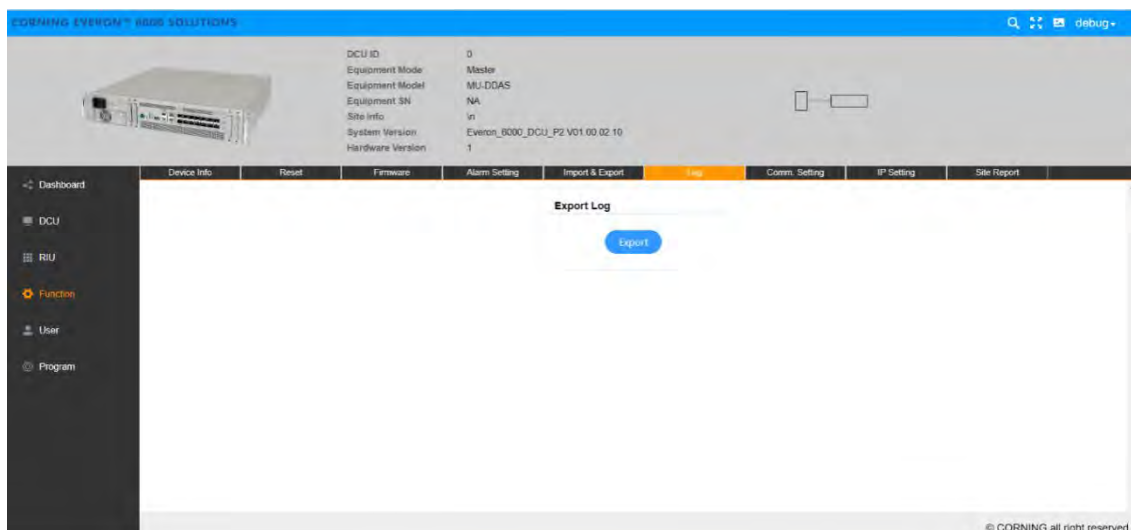


Figure 90 DCU → Function → Log

5.2.4.7 Comm. Setting

Click Function → Comm. Setting to set the network management communication types, as shown in the figure:

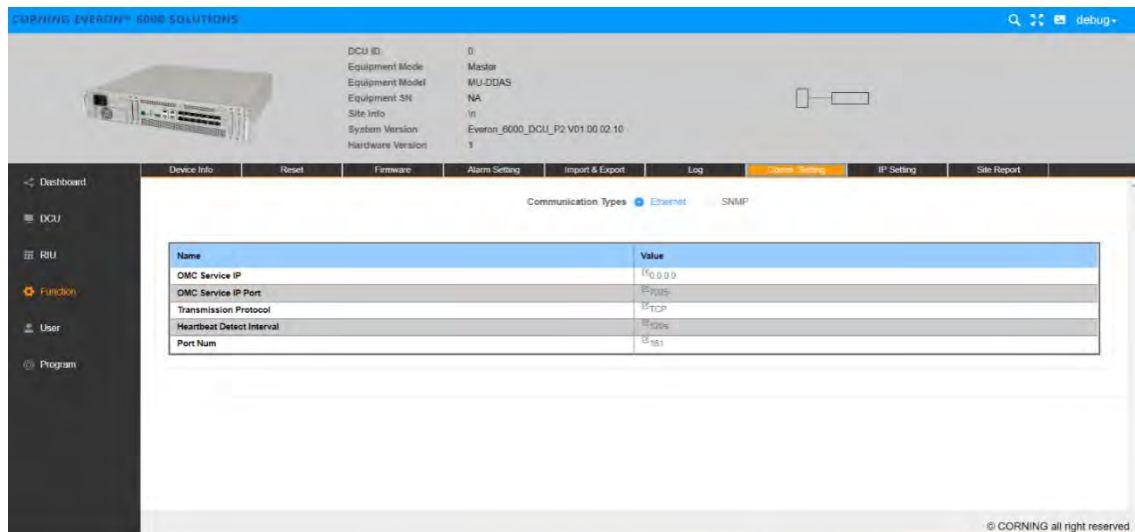


Figure 91 DCU → Function → Comm. Setting

5.2.4.8 IP Setting

Click Function → IP Setting to set DCU IP for OMC communication, as shown in the figure:

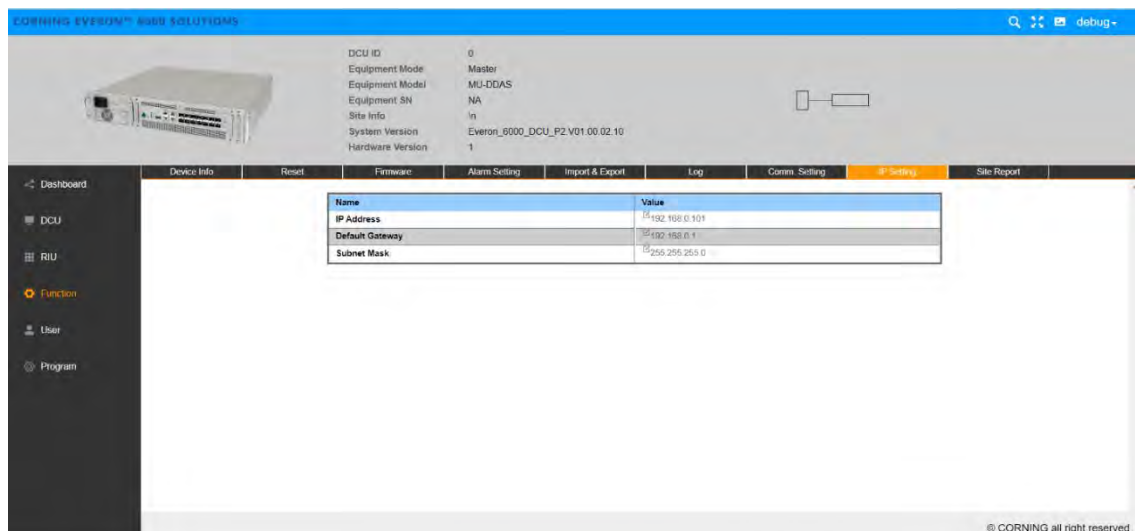


Figure 92 DCU → Function → IP Setting

5.2.4.9 Site Report

Click Function → Site Report and the site report of DCU enables it to be recognized by NMS, as shown in the following figure:

Corning Restricted - Controlled content (R2)

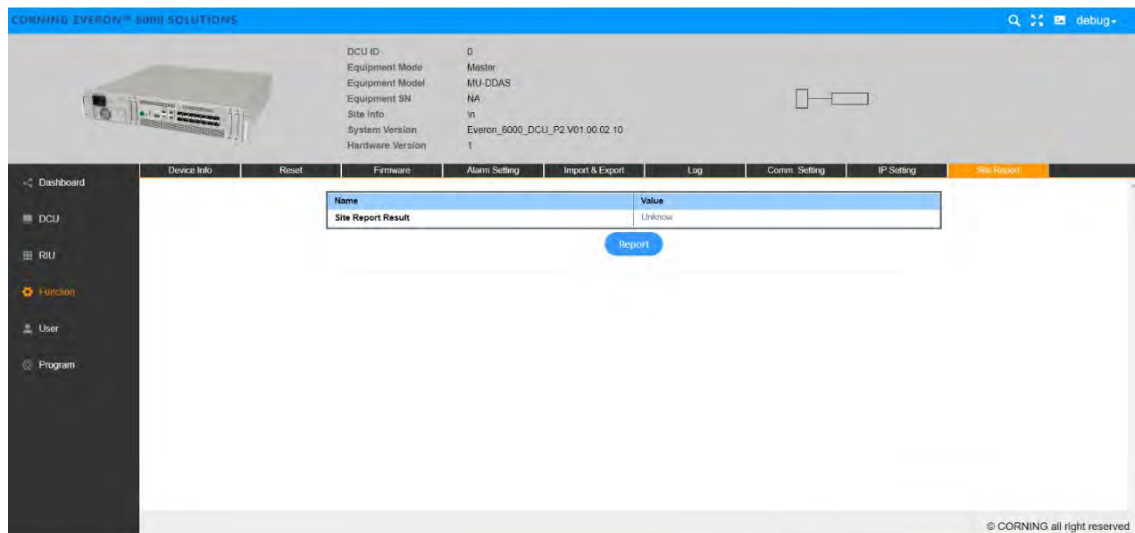


Figure 93 DCU → Function → Site Report

5.2.5 DCU -> UserInfo

5.2.5.1 Password

Click User->Password to reset the DCU password which should include capital and lower-case letters and 13 digits in length, and the recommended password is zaq1XSW2cde34.

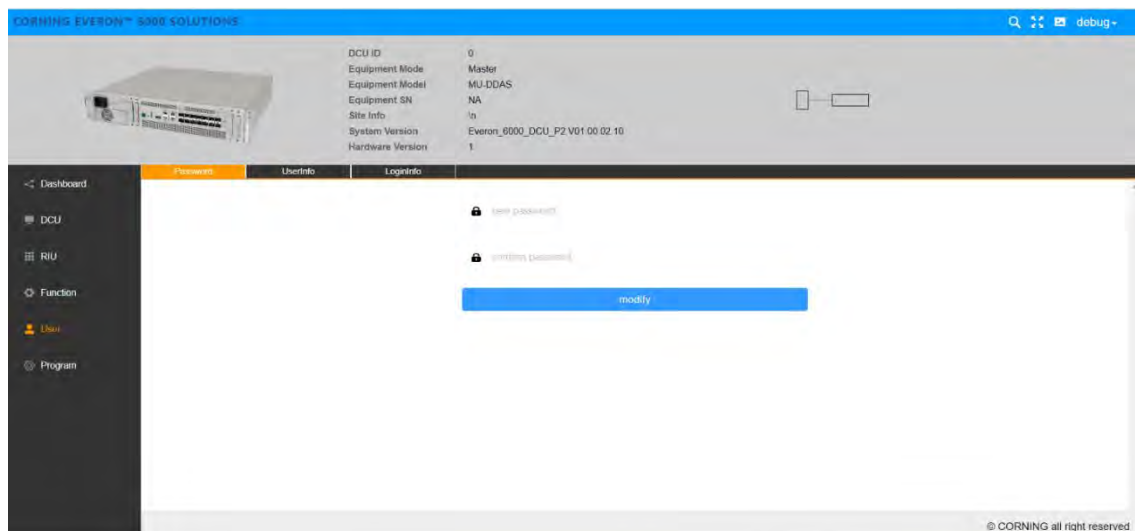


Figure 94 DCU → User → Password

5.2.5.2 UserInfo

Click User->UserInfo to add a user and set the role and password, as shown in the following figure.

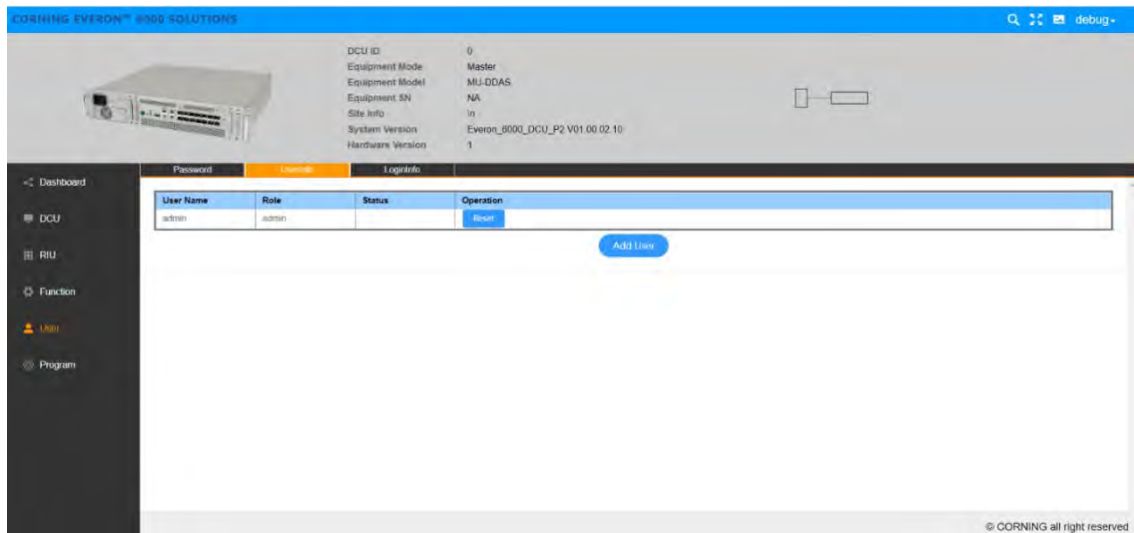


Figure 95 DCU→User→UserInfo

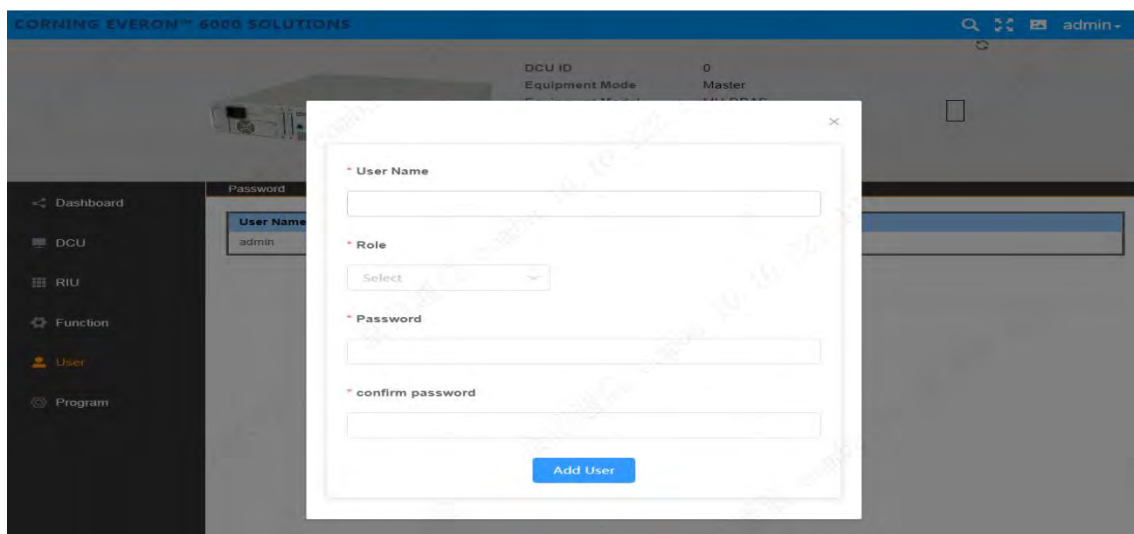


Figure 96 DCU→User→UserInfo→Add User

5.2.5.3 LoginInfo

As shown in figure 91, click User->LoginInfo to set the maximum value of password input attempts. This function indicates that when a user logs in, the system will be locked if the times of password input exceeds the maximum.

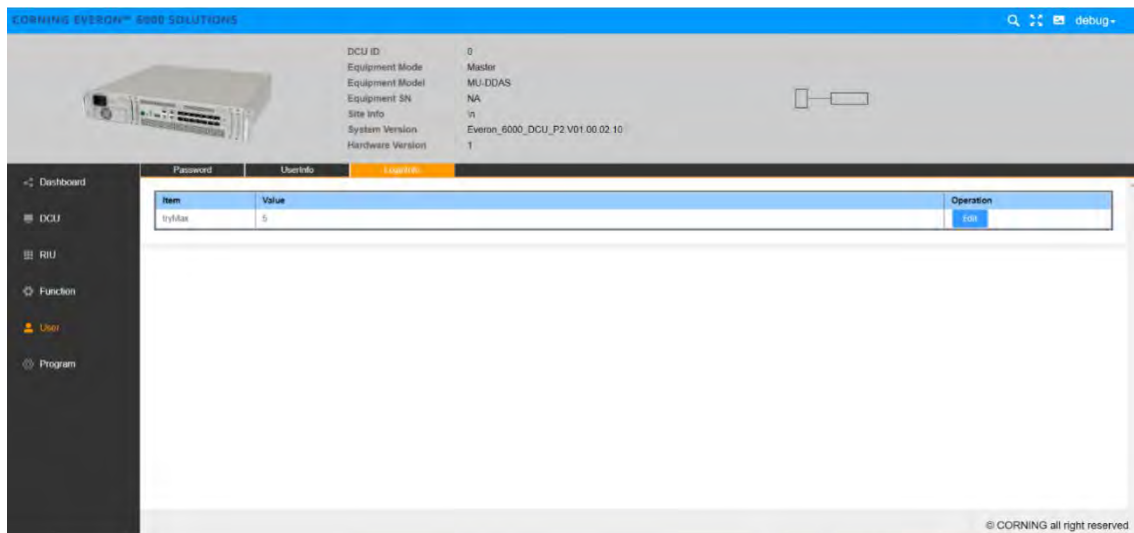


Figure 97 DCU DCU→User→LoginInfo

5.2.6 Program

Click Program→Site Management to clear the site ID of the DCU reported to OMC.

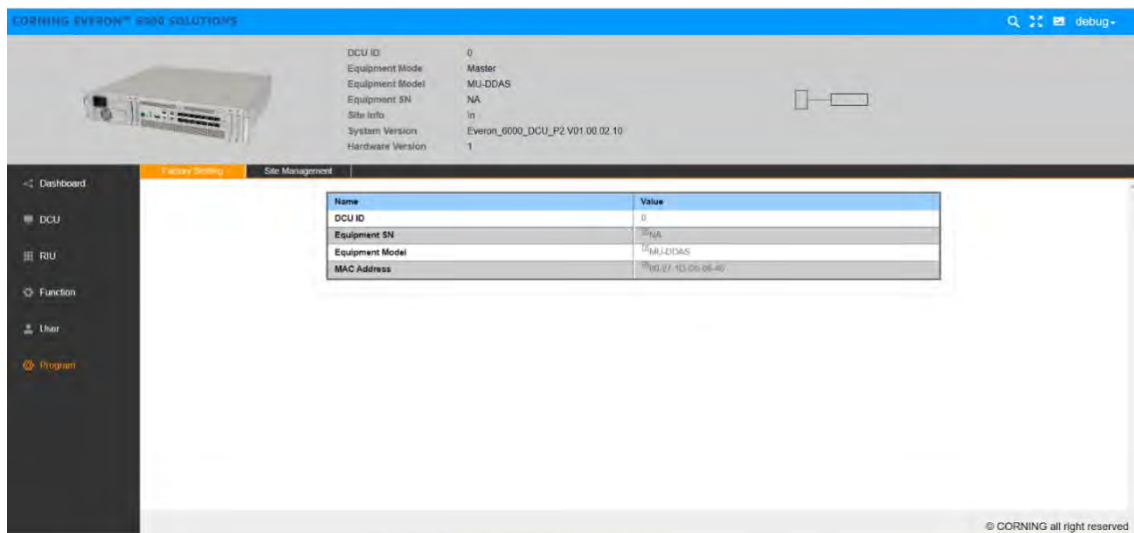


Figure 98 DCU factory setting

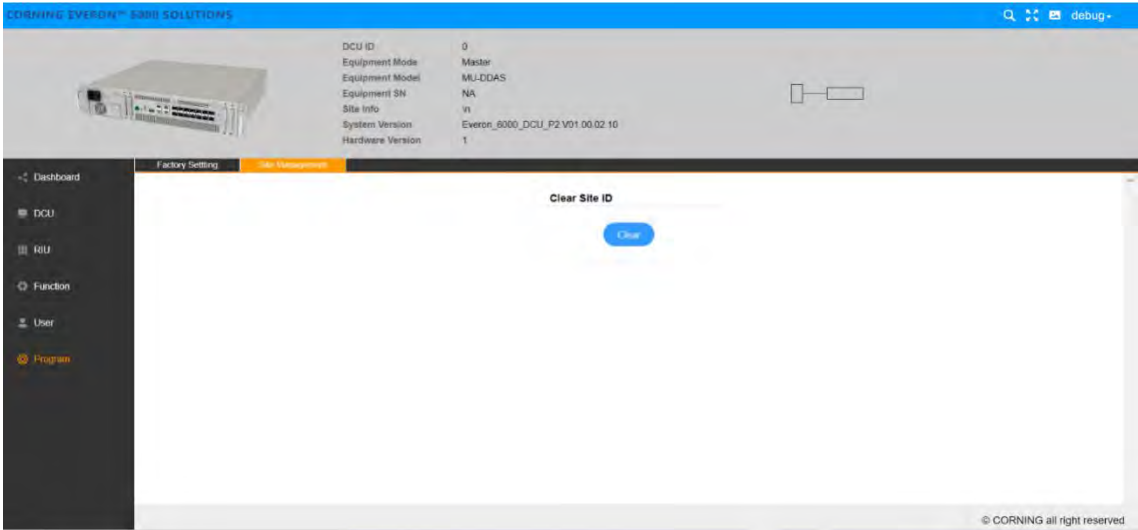


Figure 99 DCU→ Program

5.3 DEU Config

5.3.1 DEU -> Dashboard

Click the Dashboard navigation button to enter the dashboard page shown in the figure below, where you can query the full topology of all the dependent NE connected to the DEU unit. And the info query and configuration management page of other NE can be switched to after clicking NE ID in the topology.

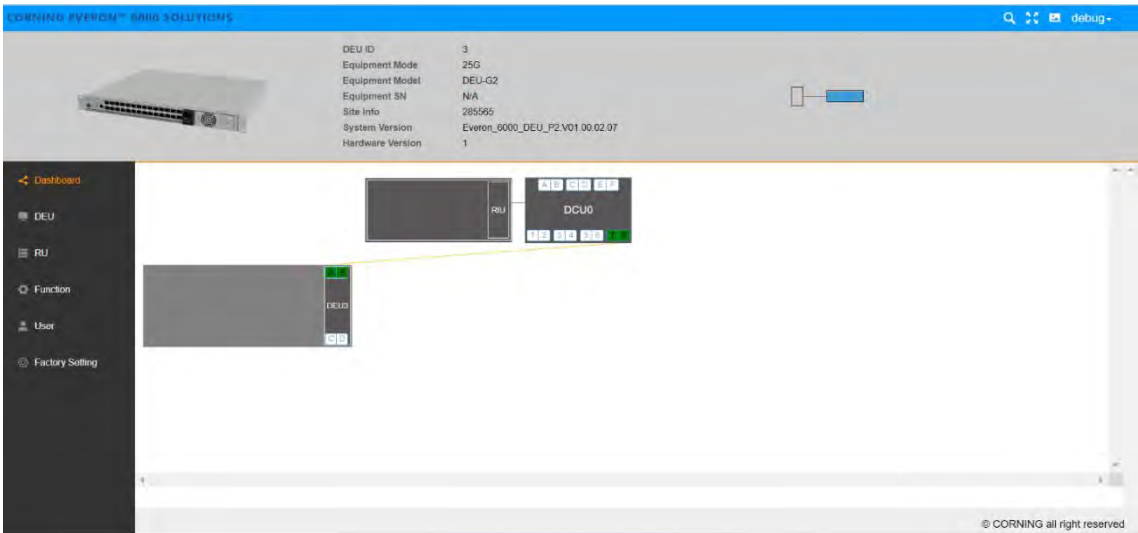


Figure 100 DEU→Dashboard

5.3.1.1 Alarm Info

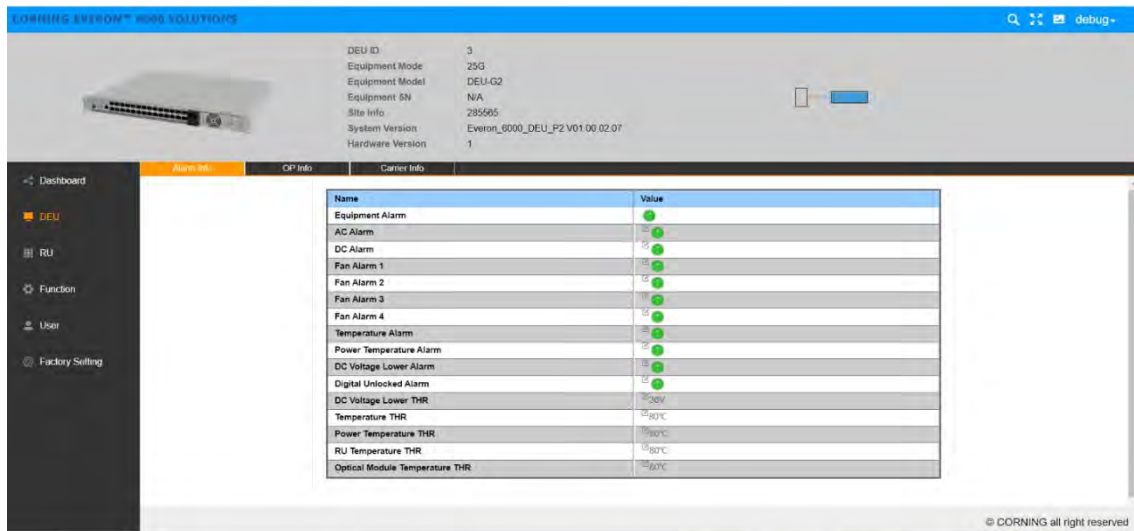


Figure 101 DEU→DEU→Alarm Info

Alarms can be set and viewed in this function which are defined as follows:

- 1) Equipment Alarm: if any alarm is valid, the alarm will take effect.
- 2) AC Alarm: if the input voltage is abnormal, the alarm will take effect.
- 3) DC Alarm: if the output of the power module is abnormal, the alarm will take effect.
- 4) Fan Alarm1~4: if any fan (4 in total) in the fan module is abnormal, the alarm will take effect.
- 5) Temperature Alarm: when the device temperature is higher than the device over temperature THR (80 °C by default), the alarm will take effect.
- 6) Power Temperature Alarm 1~2: when the temperature of any PSE is higher than the device over temperature THR (80 °C by default), the alarm will take effect.
- 7) Digital Unlocked Alarm: when the device is unlocked, the alarm will take effect.

5.3.1.2 OP Info

Index	Unit	Temperature	Fan Power	Fan Power	Fan Alarm	DC Alarm	Temperature Alarm	Manufacturer Alarm	SN	PN	Powerlight	Transmission Rate	Production Date	Manufacturer	Version
1	1	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
2	2	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
3	3	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
4	4	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
5	5	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
6	6	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
7	7	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
8	8	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
9	9	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
10	10	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
11	11	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
12	12	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
13	13	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
14	14	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
15	15	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
16	16	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
17	17	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
18	18	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
19	19	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
20	20	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
21	21	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
22	22	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
23	23	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1
24	24	40°C	1.00W	1.00W	0	0	0	0	0000000000000000	0000000000000000	00000000	00000000	00000000	00000000	0.1

Figure 102 DEU→DEU→OP Info

Corning Restricted - Controlled content (R2)

The range of optical module transmitting power (Tx PWR) is -3dBm~5dBm; The range of Rx PWR shall be greater than -10dBm. The maximum operating temperature must be lower than 80 ° C and the optical module must be correctly matched. Otherwise, an exception may occur. Alarms can be queried on this interface.

Click ">" under the OP Info→More to view the optical module info, as shown in the figure below:

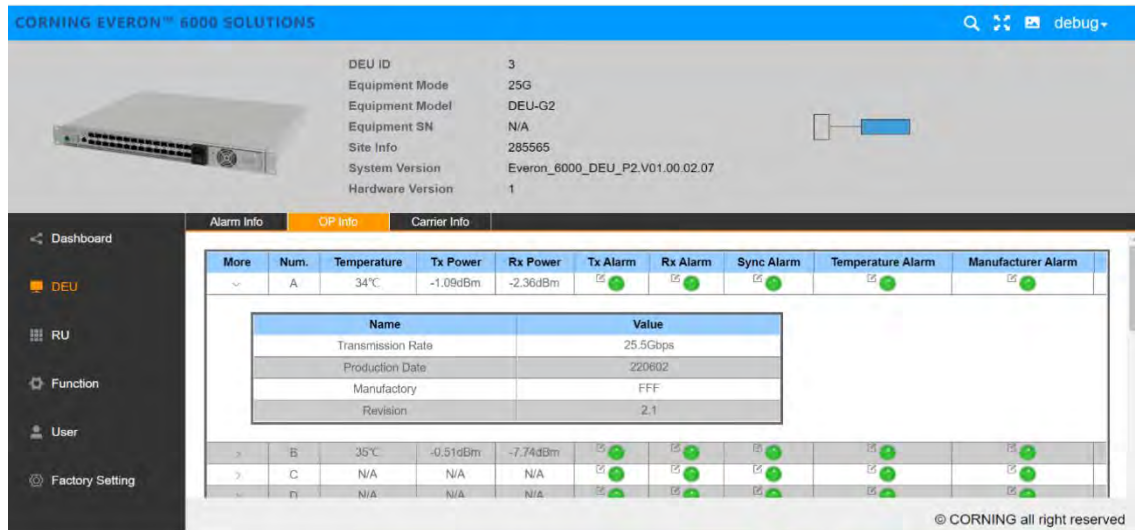


Figure 103 DEU→DEU→OP Info→More

5.3.1.3 Carrier Info

Click Function→Carrier Info→Add to set uplink and downlink band information.

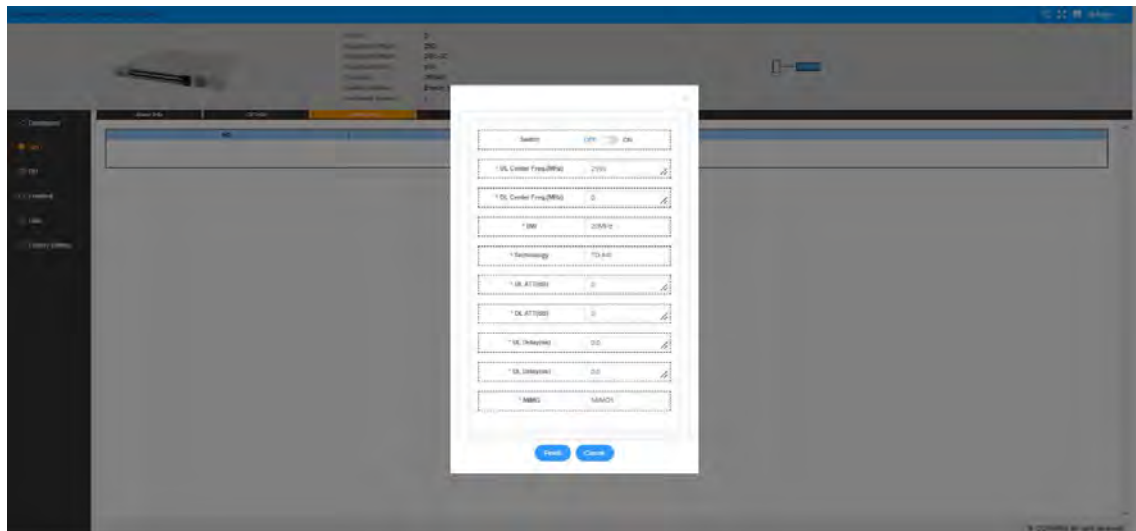


Figure 104 DEU→Function→Carrier Info→Add

5.3.2 DEU -> Function

5.3.2.1 Device Info

Click Function → Device Info to view the time, latitude, longitude, and other information of 10G/25G device. The site info is defined by the user, as shown in the figure below:

Corning Restricted - Controlled content (R2)

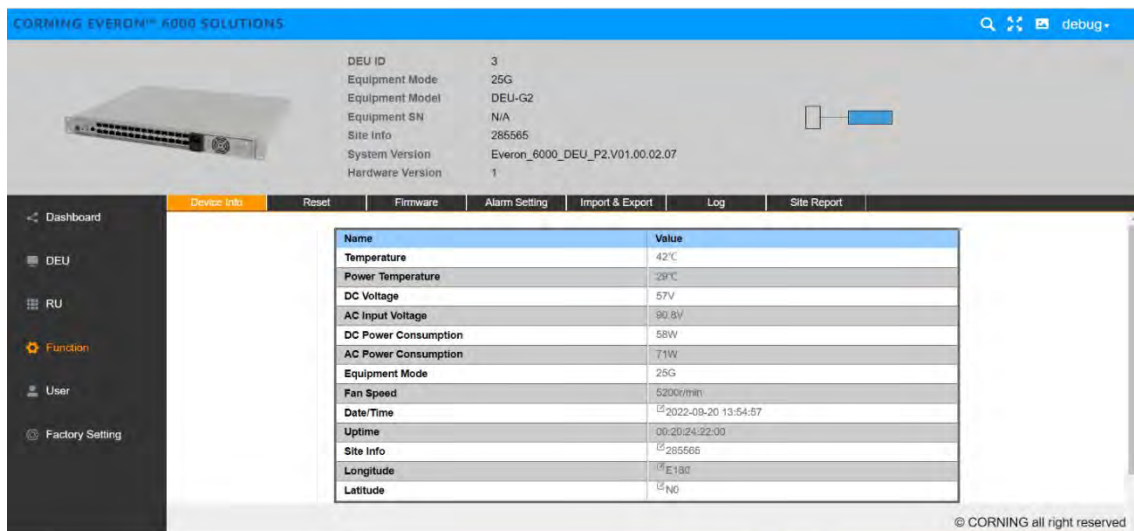


Figure 105 DEU→Function→Device Info

5.3.2.2 Reset

Click Function →Reset to clear the historical alarm, reset the software and hardware of the DEU, and reset the software and hardware of the RU connected to the DEU, as shown in the figure below:

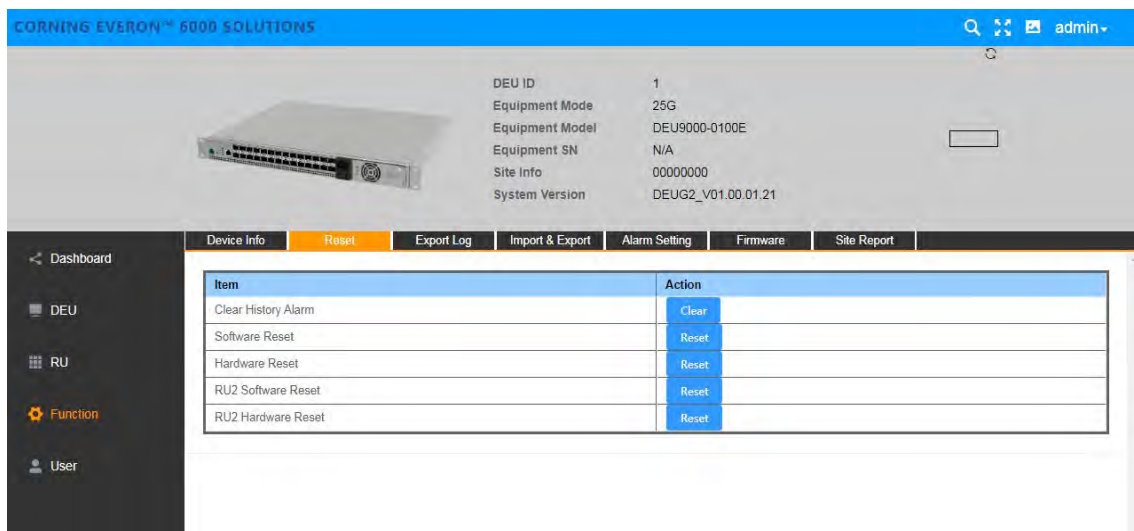


Figure 106 DEU→Function→Reset

5.3.2.3 Export Log

Click DEU→Function→Export Log to export the DEU log for problem analysis, as shown in the figure below:

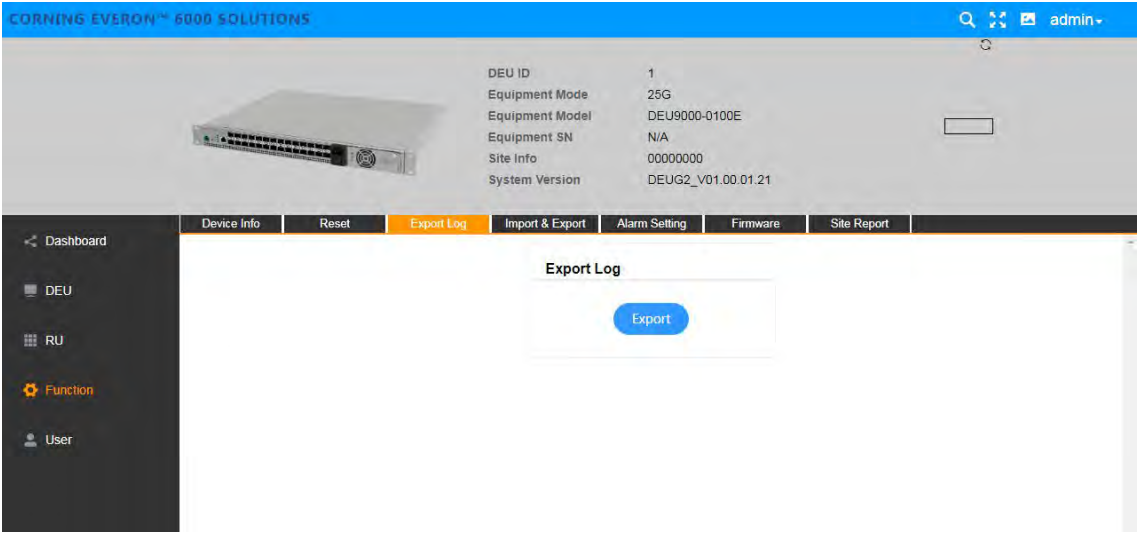


Figure 107 DEU→Function→Export Log

5.3.2.4 Import & Export

Import and export the DEU configuration by clicking Function → Import & Export, as shown in the figure below:

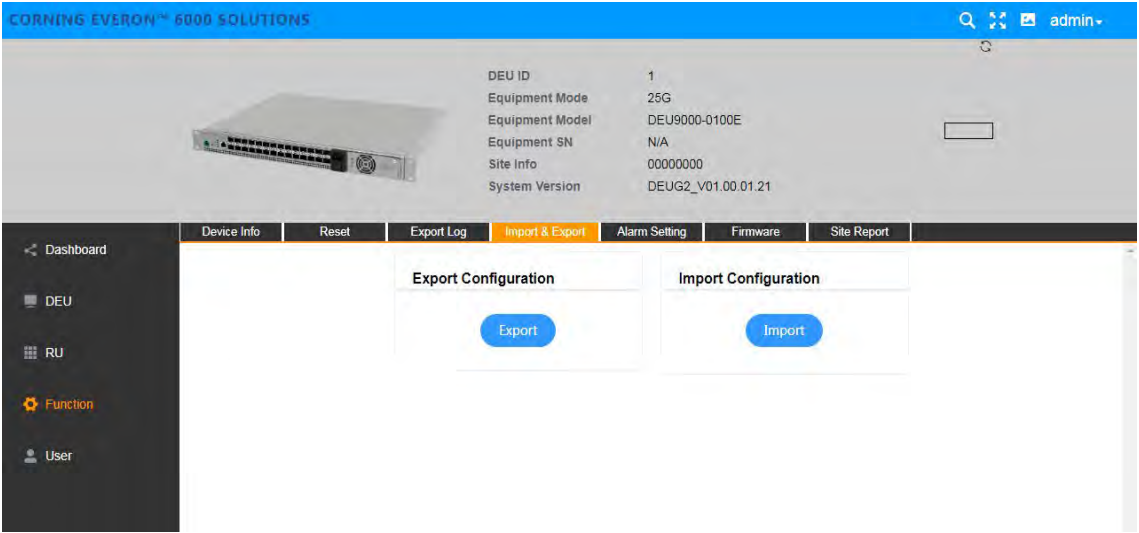


Figure 108 DEU→Function→Import & Export

5.3.2.5 Alarm Setting

Click Function → Alarm Setting to set the DEU alarm detect duration, as shown in the figure below:



Figure 109 DEU→Function→Alarm Setting

5.3.2.6 Firmware

Click Function →Firmware and the firmware info can be viewed and upgraded.

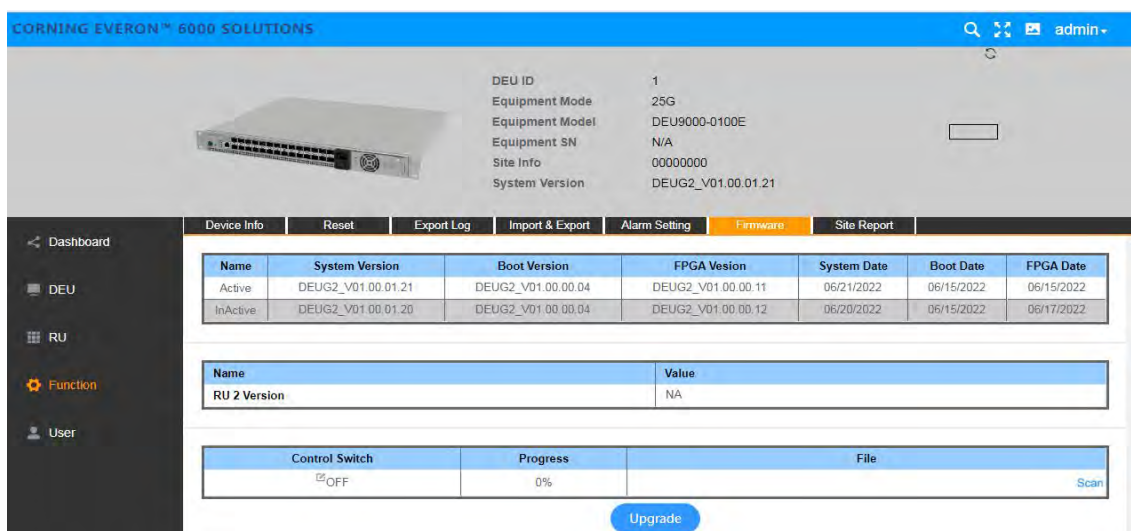


Figure 110 DEU→Function→Firmware

5.3.2.7 Site Report

Click Function→Site Report and The NE of DEU can be recognized only after the site report result is reported, as shown in the figure below:

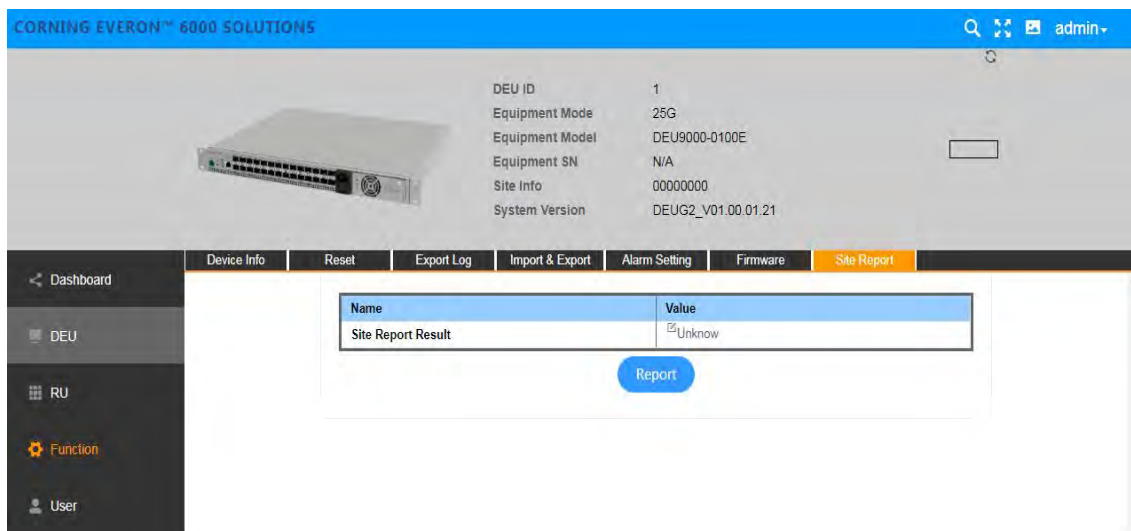


Figure 111 DEU→Function→Site Report

5.3.3 DEU -> UserInfo

5.3.3.1 Password

Click User->Password to reset DEU password, as shown in the figure below:

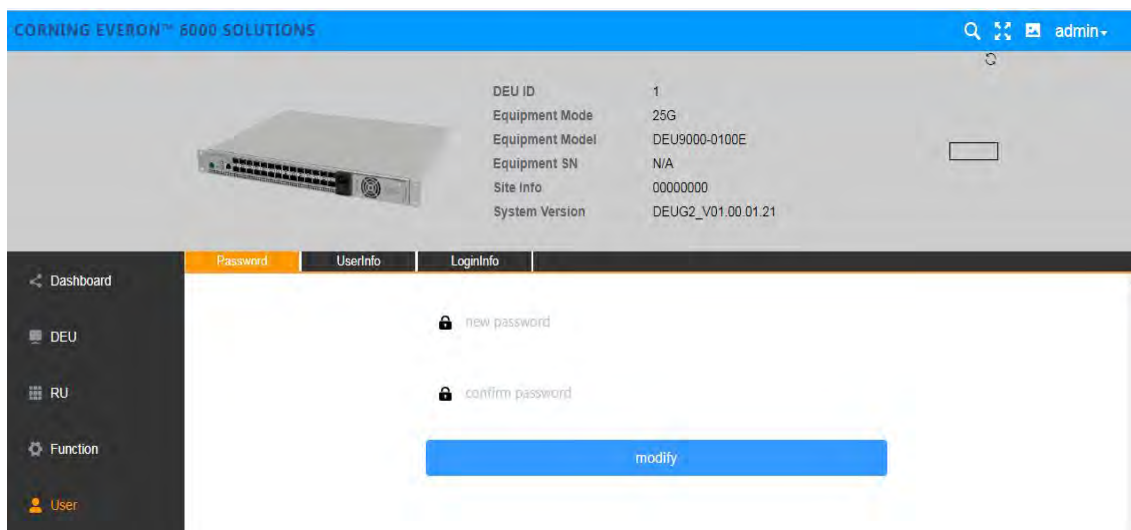


Figure 112 DEU→User→Password

5.3.3.2 UserInfo

Click User->UserInfo to add a user to set the role and password, as shown in the figure below.

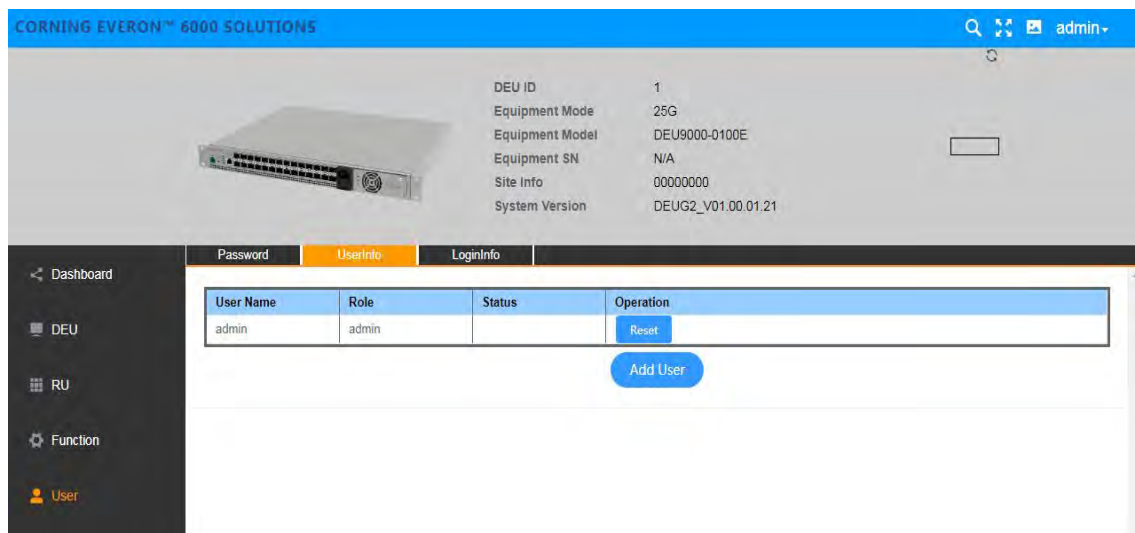


Figure 113 DEU→User→UserInfo

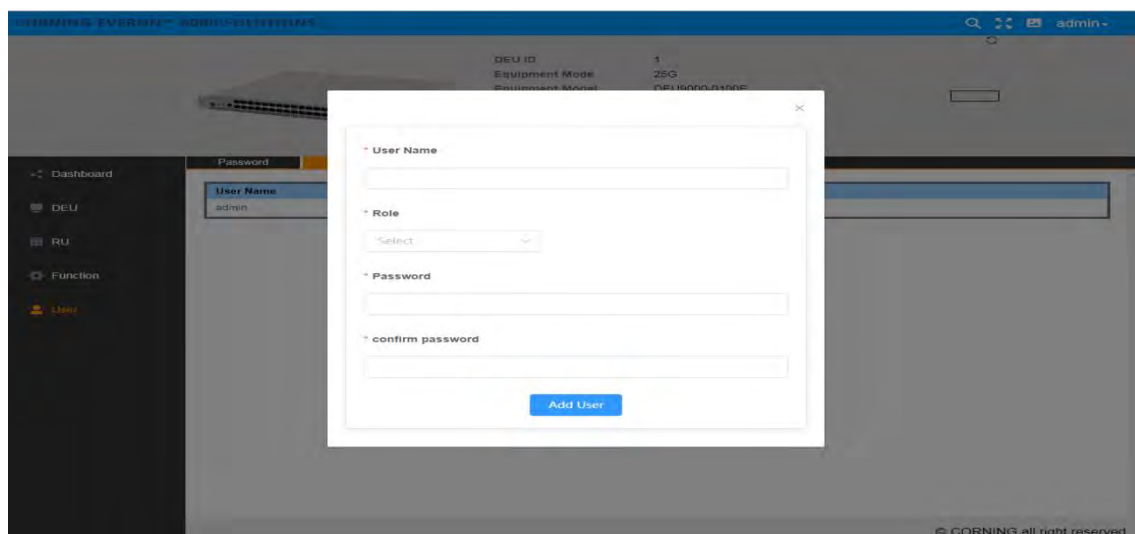


Figure 114 DEU→User→UserInfo→Add User

5.3.3.3 LoginInfo

Click User->Login Info to set the max value of entering the password, as shown in in the figure below:

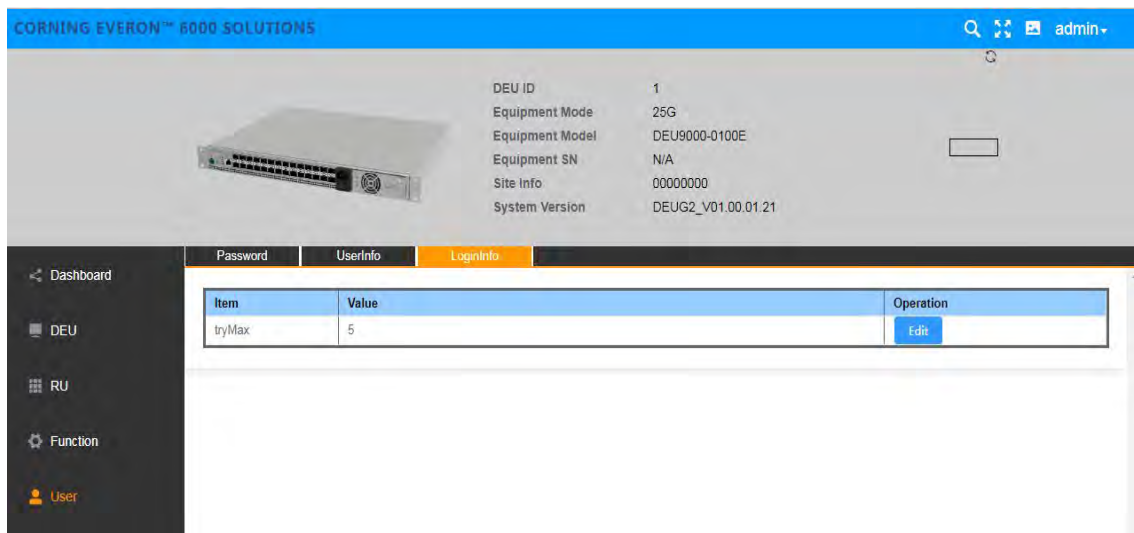


Figure 115 DEU→User→LoginInfo

5.4 dLRU Config

5.4.1 RU -> Overview&Alarm

Click RU to enter the Overview interface and view the current status of RU alarms (e.g., link Alarm).

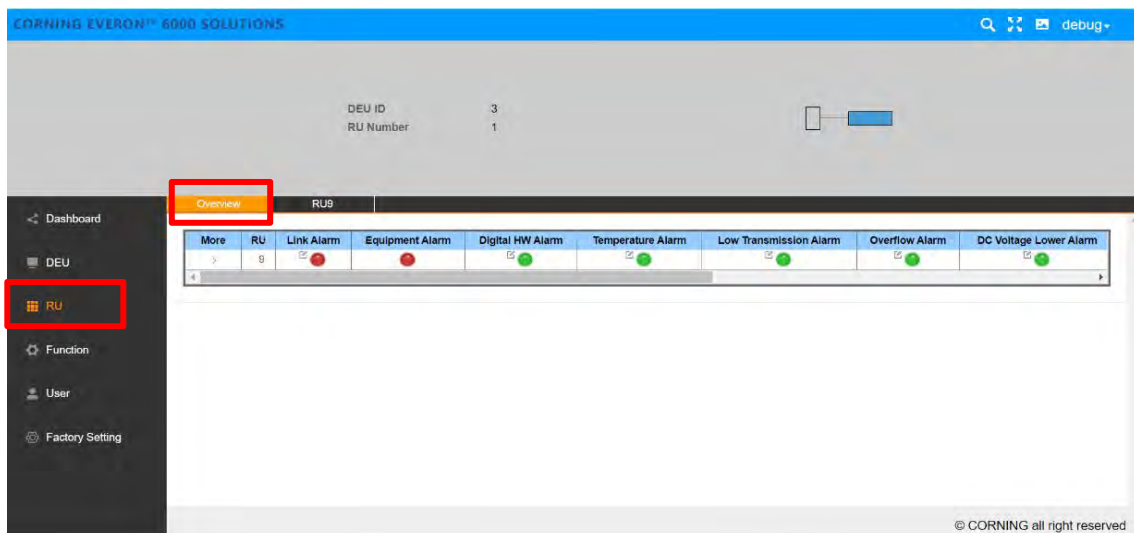


Figure 116 DEU→RU

Each alarm is defined as follows:

- Link Alarm
- RU Device Alarm
- Digital HW ALM
- Temperature Alarm
- Low Transmission Alarm
- Overflow Alarm
- DC Voltage Lower Alarm
- Drag the scroll bar to view more information (e.g., Temperature) as shown in the figure below.

Corning Restricted - Controlled content (R2)

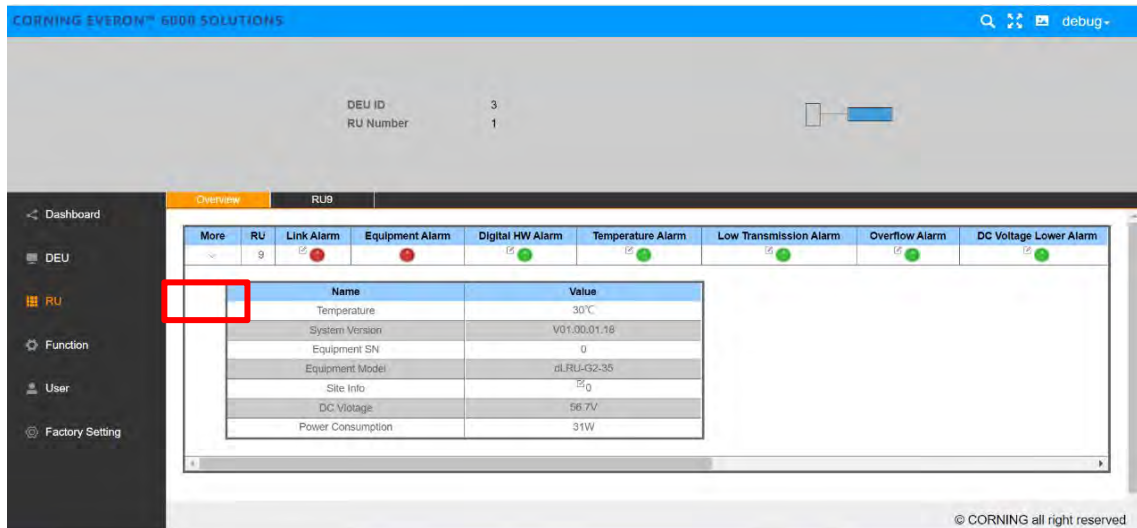


Figure 117 DEU→RU

5.4.2 RU Parameter config

5.4.2.1 OP Info

The OP Info list box displays the current optical port connection status and information reading volume of the device, as shown in the figure below:

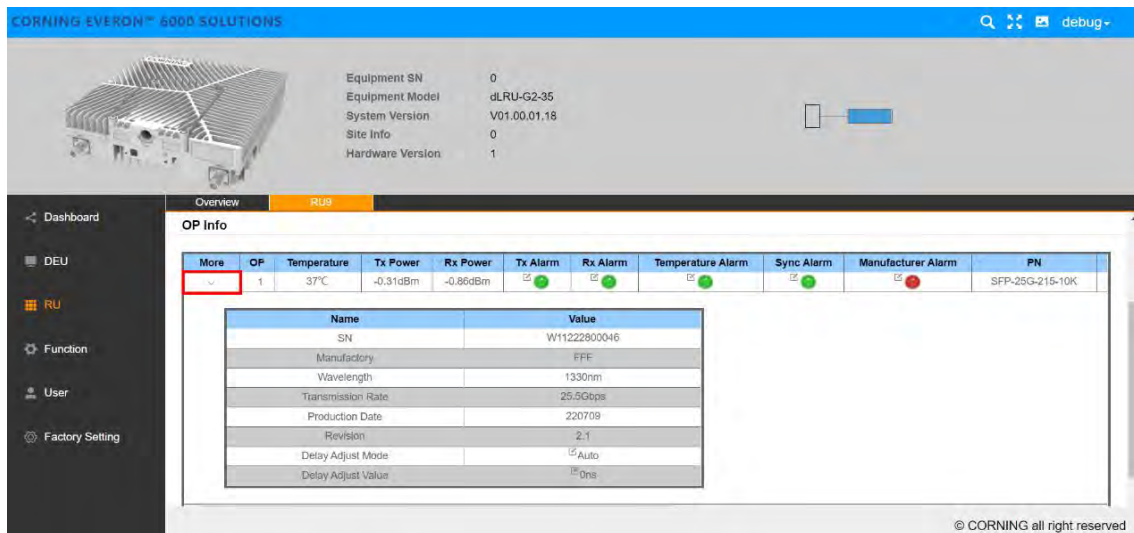


Figure 118 RU9→OP Info

5.4.2.2 RF Info

Click RU → RU01~08 to read various RF information of RU, as shown in the figure below:

SN	DCU parameter	Range	Recommend value
1	RF Switch	ON/OFF	ON
2	DL ATT	(0~20)	10
3	UL ATT	(0~20)	10
4	Work Mode	Normal DL force uplink UL force uplink	Normal

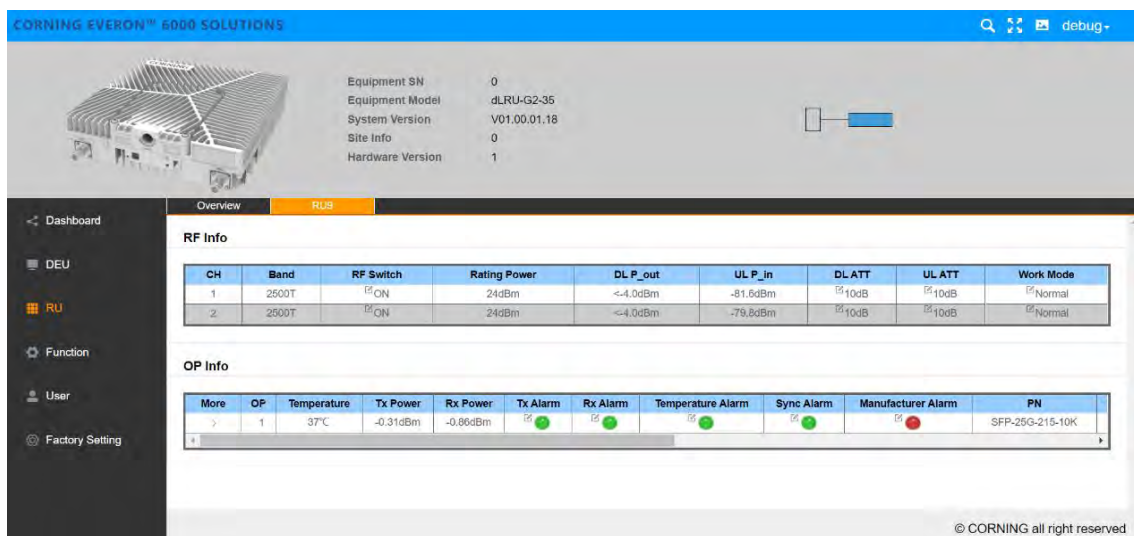


Figure 119 RF info & OP info

6. APPENDIX A: Specifications

➤ Digital Conversion Unit (DCU-G2)

RF donor connection: 600 MHz ~ 4000 MHz

14 x 25Gbps Optical Interface for extension/cascading

Integrated OMT & remote management system



RF Specification		
Bands	Technologies	Frequency Range (MHz)
3500 MHz	LTE/NR	TDD:3400~4000
2500 MHz	LTE/NR	TDD:2496~2690
WCS	LTE/NR	UL:2305~2315, DL:2350~2360
EAWS	LTE/NR	UL:1695~1780, DL:2110~2200
PCS	LTE/NR	UL:1850~1915, DL:1930~2020
850A	LTE/NR	UL:817~849, DL:862~894
700U	LTE/NR	UL:776~798, DL:746~768
700L	LTE/NR	UL:698~716, DL:728~746
600 MHz	LTE/NR	UL:663~698, DL:617~652
Electrical Specification		
Operation Frequency	MHz	RF Cluster 1~2: 2300~4200 MHz, TDD/FDD RF Cluster 3~4: 600~2700 MHz, TDD/FDD
Input Power Range	dBm	-7~ +3
Maximum Instantaneous Bandwidth	MHz	RF Cluster 1~2: 300 MHz RF Cluster 3~4: 200 MHz
VSWR		<1.8

Interfaces and Mechanical		
CPRI Ports		8 x SFP+ (25 Gbps) to DEU
CPRI Ports		6 x SFP+ (25 Gbps) to secondary DCU
Ethernet Ports		2 x RJ45 - local monitor, remote monitor
Ethernet Ports		2 x RJ45 - to RIU, PSU
RF ports		4 x Cluster RF connectors to donor radio head Each Cluster RF connector contains 8 simplex ports to RIU
External Synchronization		2 x QMA, 10 MHz In/Out
Dimensions (H x W x D)	Inch (mm)	3.46 x 19.09 x 15.75 (88 x 485 x 400)
Weight (approx.)	Lbs (kg)	33 (15)
Powering		48V DC or AC 220/110V
Power Consumption	Watt	250
Operating Temperature		-10°C to +45°C (14°F to 113°F)
Operating Humidity		≤ 85%
Ingress Protection		IP30
Cooling		Fan
Mounting and Installation		19-in Rack mount
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1

➤ Distributed Extension Unit (DEU-G2)

Radio hub/router for system extension

28 x 25 Gbps Optical Interface

Support DEU cascading



Interfaces and Mechanical		
CPRI Ports		4 x SFP+ (25 Gbps) for DEU cascading
CPRI Ports		24 x SFP+ (25 Gbps) for dLRU/dMRU/dHRU connection
Ethernet Ports		1 x RJ45 - local & remote monitor
Dimensions (H x W x D)	Inch (mm)	1.73 x 19.09 x 14.17 (44 x 485 x 360)
Weight (approx.)	Lbs (kg)	16.75 (7.6)
Power Supply		48V DC or AC 220/110V
Power Consumption	Watt	200
Operating Temperature		-10°C to +45°C (14°F to 113°F)
Operating Humidity		≤ 85%
Ingress Protection		IP30
Cooling		Fan
Mounting and Installation		19-in Rack mount
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1

➤ **Distributed Extension Unit (DEU-G2-PS)**

Radio hub/router for system extension

28 x 25 Gbps Optical Interface

Support DEU cascading

PSU for dLRU



Interfaces and Mechanical		
CPRI Ports		4 x SFP+ (25 Gbps) for DEU cascading
CPRI Ports		24 x SFP+ (25 Gbps) for dLRU/dMRU/dHRU connection
Ethernet Ports		1 x RJ45 - local & remote monitor
Dimensions (H x W x D)	Inch (mm)	3.46 x 19.09 x 14.17 (88 x 485 x 360)
Weight (approx.)	Lbs (kg)	26.46 (12)
Power Supply		Input 48V DC or AC 220/110V PSU output : 48V DC (works with AC 220/110V input)
Power Consumption	Watt	1500
Operating Temperature		-10°C to +45°C (14°F to 113°F)
Operating Humidity		≤ 85%
Ingress Protection		IP30
Cooling		Fan
Mounting and Installation		19-in Rack mount
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1

7. APPENDIX B: LED Functionality and Colour Definition

Table 18. Optical LED definition

		Green	Amber
		(SYNC)	(LOS)
SFP Plug out	SFP Plug out	OFF	OFF
Optic Link Fail	1. Optic cable disconnected	OFF	ON
	2. SFP fail	OFF	ON
	2.1 SFP fault	OFF	ON
	2.2 SFP warning	OFF	ON
	2.3 SFP alarm	OFF	ON
Optic Link Ok	3. CPRI link down	OFF	ON
	1. Optic cable connected	ON	ON
	2. SFP ok	ON	ON
	3. CPRI link down	ON	ON
CPRI Link Ok	1. Optic cable connected	ON	OFF
	2. SFP ok	ON	OFF
	3. CPRI link up	ON	OFF

Table 19. ALM/RUN/Power LED definition


LED	Description	Color
ALM	1.Alarm	Red
	2.Device detect (Identify and is controlled from DCU)	Red Flash (1Hz, 10s)
	3.No alarm	OFF
RUN	1.The system is up and running	Green Flash(1Hz)
	2.Software or hardware failure	OFF
Power	1.Power on	Green
	2.Power off	OFF

➤ **Digital Low-power Remote Units-2.5G (dLRU-G2-25)**

194 MHz IBW with 2T2R MIMO

1 x 25 Gbps Optical Interface to DEU

Compact design for easy installation

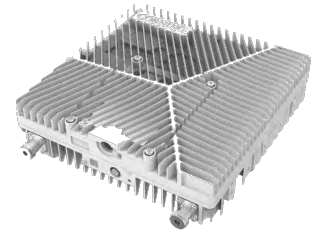

RF Specification		
Frequency Range	MHz	2496-2690
Max. Operating Bandwidth-Noncontiguous		Full band
Unit Configuration		2T2R
Instantaneous Bandwidth	MHz	194
Downlink Output Power	dBm	23
Attenuator Adjustable Range (1dB step)	dB	0-20
Channel Bandwidth	MHz	10/20/40/60/80/100
Uplink Noise Figure (typical)	dB	8
Uplink IIP3 (typical)	dBm	-12
VSWR		≤ 1.6
EVM (256 QAM) (TM3.1A @ Rated power)	%	< 3.5
Spurious Emission		3GPP TS 36.106; 3GPP TS 38.104 V15.5.0 (sections 6; 7)
Interfaces and Mechanical		
CPRI Port		1 x SFP+ (25 Gbps) to DEU
Antenna Ports		2 x 4.3-10 female to external antenna
Dimensions (W x H x D)	Inch (mm)	10.6 x 10.6 x 2.95 (270 x 270 x 75)


Weight (approx.)	Lbs (kg)	11 (5)
Powering		48V DC
Power Consumption	Watt	65
Operating Temperature		-40°C to +55°C (-40°F to 131°F)
Operating Humidity		≤ 95%
Ingress Protection		IP66
Cooling		Convection
Mounting and Installation		Ceiling/Wall/Shell
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1
Radio		FCC CFR 47, Part 27

➤ **Digital Low-power Remote Units High Band (dLRU-G2-35)**

530 MHz IBW with 2T2R MIMO

2 x 25 Gbps Optical Interface to DEU

Compact design for easy installation

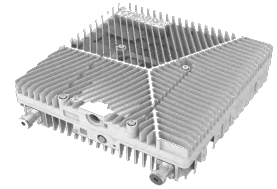**RF Specification**

Frequency Range	MHz	3450-3980
Max. Operating Bandwidth-Noncontiguous		Full band
Unit Configuration		2T2R
Instantaneous Bandwidth	MHz	530
Downlink Output Power	dBm	27
Attenuator Adjustable Range (1dB step)	dB	0-20
Channel Bandwidth	MHz	10/20/40/50/60/80/100
Uplink Noise Figure (typical)	dB	8
Uplink IIP3 (typical)	dBm	-12
VSWR		≤ 1.6
EVM (256 QAM) (TM3.1A @ Rated power)	%	< 3.5
Spurious Emission		3GPP TS 36.106; 3GPP TS 38.104 V15.5.0 (sections 6; 7)

Interfaces and Mechanical		
CPRI Port		2 x SFP+ (25 Gbps) to DEU
Antenna Ports		2 x 4.3-10 female to external antenna
Dimensions (W x H x D)	Inch (mm)	10.6 x 10.6 x 2.95 (270 x 270 x 75)
Weight (approx.)	Lbs (kg)	11 (5)
Powering		48V DC
Power Consumption	Watt	75
Operating Temperature		-40°C to +55°C (-40°F to 131°F)
Operating Humidity		≤ 95%
Ingress Protection		IP66
Cooling		Convection
Mounting and Installation		Ceiling/Wall/Shell
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1
Radio		FCC CFR 47, Part 27

➤ **Digital Medium-power Remote Unit-2.5GHz (dMRU-G2-25)**

194 MHz IBW with 2T2R MIMO

1 x 25 Gbps Optical Interface to DEU

Compact design for easy installation



RF Specification		
Frequency Range	MHz	2496-2690
Max. Operating Bandwidth-Noncontiguous		Full band
Unit Configuration		2T2R
Instantaneous Bandwidth	MHz	194
Downlink Output Power	dBm	39
Attenuator Adjustable Range (1dB step)	dB	0-20
Channel Bandwidth	MHz	10/20/40/60/80/100
Uplink Noise Figure (typical)	dB	6
Uplink IIP3 (typical)	dBm	-12
VSWR		≤1.5
EVM (256 QAM) (TM3.1A @ Rated power)	%	< 3.5
Spurious Emission		3GPP TS 36.106; 3GPP TS 38.104 V15.5.0 (sections 6; 7)
Coupling value	dB	35

Interfaces and Mechanical		
CPRI Port		1 x SFP+ (25 Gbps) to DEU
Antenna Ports		2 x 4.3-10 female to external antenna
Coupling port		2 x QMA for testing
Dimensions (W x H x D)	Inch (mm)	17.3 x 3.5 x 14.6 (440 x 88 x 370)
Weight (approx.)	Lbs (kg)	30.8 (14)
Powering		AC 220/110V
Power Consumption	Watt	140
Operating Temperature		-40°C to +55°C (-40°F to 131°F)
Operating Humidity		≤ 95%
Ingress Protection		IP65
Cooling		Convection Fan (Optional for extreme cases)
Mounting and Installation		Wall/19-in Rack mount
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1
Radio		FCC CFR 47, Part 27

➤ **Digital Medium-power Remote Unit High Band (dMRU-G2-35)**

530 MHz IBW with 2T2R MIMO

2 x 25 Gbps Optical Interface to DEU

Compact design for easy installation



RF Specification		
Frequency Range	MHz	3450-3980
Max. Operating Bandwidth-Noncontiguous		Full band
Unit Configuration		2T2R
Instantaneous Bandwidth	MHz	530
Downlink Output Power	dBm	40
Attenuator Adjustable Range (1dB step)	dB	0-20
Channel Bandwidth	MHz	10/20/40/50/60/80/100
Uplink Noise Figure (typical)	dB	8
Uplink IIP3 (typical)	dBm	-12
VSWR		≤1.5
EVM (256 QAM) (TM3.1A @ Rated power)	%	< 3.5
Spurious Emission		3GPP TS 36.106; 3GPP TS 38.104 V15.5.0 (sections 6; 7)
Coupling value	dB	35

Interfaces and Mechanical		
CPRI Port		1 x SFP+ (25 Gbps) to DEU
Antenna Ports		2 x 4.3-10 female to external antenna
Coupling port		2 x QMA for testing
Dimensions (W x H x D)	Inch (mm)	17.3 x 3.5 x 14.6 (440 x 88 x 370)
Weight (approx.)	Lbs (kg)	33 (15)
Powering		AC 220/110V
Power Consumption	Watt	250
Operating Temperature		-40°C to +55°C (-40°F to 131°F)
Operating Humidity		≤ 95%
Ingress Protection		IP65
Cooling		Convection Fan (Optional for extreme cases)
Mounting and Installation		Wall/19-in Rack mount
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1
Radio		FCC CFR 47, Part 27

➤ **Radio Interface Unit-2.5 GHz (RIU-G2-25)**

8 input ports for donor RF signal connection

Active ATT, input power detection & ALC protection for RF module

Max. input power of 37 dBm/port



RF Specification		
Frequency Range	MHz	2496-2690 (LTE/NR)
Downlink Input Power	dBm	-10~37
Insert Loss	Downlink	dB
	Uplink	dB
ATT Adjustable Range (1dB step)	dB	0-25
Return Loss	dB	≤ -15
Interfaces and Mechanical		
RF input ports		8 x QMA (Duplexer) to donor signal
RF Output ports		8 x QMA (Simplex) to DCU
Ethernet Ports		2 x RJ45 - Upper cascade / Lower cascade
Dimensions, H x W x D	Inch (mm)	1.73 x 19.09 x 14.2 (44 x 485x 360)
Weight (approx.)	Lbs (kg)	13.2 (6)
Powering		48V DC
Power Consumption	Watt	20
Operating Temperature		-10°C to +45°C (14°F to 113°F)
Operating Humidity		≤ 85%

Ingress Protection		IP30
Cooling		Fan
Mounting and Installation		19-in Rack mount
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1

➤ **Radio Interface Unit-3.5 GHz (RIU-G2-35)**

8 input ports for donor RF signal connection

Active ATT, input power detection & ALC protection for RF module

Max. input power of 37 dBm/port



RF Specification

Frequency Range		MHz	3400-4000 (LTE/NR)
Downlink Input Power		dBm	-10~37
Insert Loss	Downlink	dB	30
	Uplink	dB	40
ATT Adjustable Range (1dB step)		dB	0-25
Return Loss		dB	≤ -15

Interfaces and Mechanical

RF input ports		8 x QMA (Duplexer) to donor signal
RF Output ports		8 x QMA (Simplex) to DCU
Ethernet Ports		2 x RJ45 - Upper cascade / Lower cascade
Dimensions, H x W x D	Inch (mm)	1.73 x 19.09 x 14.2 (44 x 485x 360)
Weight (approx.)	Lbs (kg)	13.2 (6)
Powering		48V DC
Power Consumption	Watt	20
Operating Temperature		-10°C to +45°C (14°F to 113°F)
Operating Humidity		≤ 85%

Ingress Protection		IP30
Cooling		Fan
Mounting and Installation		19-in Rack mount
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1

➤ **Antenna Multiplexer (COMB-G2-FDD-25-35)**

6-in/2-out multiplexer for 2X2 MIMO

6 input ports for low, medium, and high band remote radio unit connection

2 output ports for antenna connection

Compatible with both low- and medium-power remote radio unit



Electrical Characteristics


Port		Port1, Port4 (FDD Bands)	Port2, Port5 (2.5 Band)	Port3, Port6 (3.5 Band)
Frequency Range	MHz	617-2360	2496-2690	3450-4000
Bandwidth	MHz	1743	194	550
Insert Loss	dB	≤0.6(25°C) ≤1(-40 to +85°C)	≤0.6(25°C) ≤1(-40 to +85°C)	≤0.6(25°C) ≤1(-40 to +85°C)
Pass Band Ripple	dB	≤0.5	≤0.5	≤0.5
Out of Band Attenuation	dB	≥50@2496-2690 ≥50@3450-4000	≥50@617-2360 ≥50@3450-4000	≥50@617-2360 ≥50@2496-2690
Maximum Input Power (Per Port, Average)	W	50	15	15
PIM	dBc	-155 (@ 2x10W)		
Return Loss	dB	≥18		
Isolation	dB	≥40		
Port Type		4.3-10 F		
Impedance	Ω	50		

Mechanical Characteristics

Corning Restricted - Controlled content (R2)

Dimensions, H x W x D	Inch (mm)	10.6 x 6.6 x 1.6 (270 x 168 x 41)
Weight (approx.)	Lbs (kg)	4.8 (2.2)
Operating Temperature		-40°C to +85°C (-40°F to 185°F)
Ingress Protection		≤ 95%
Environmental		IP66
Regulation		
EMC		EMC FCC 47 CFR Part 15 sub part B
Safety		UL62368-1

- **HRU -High-Power Remote Unit**
- **System performance (Head End to High power Remote Unit)**

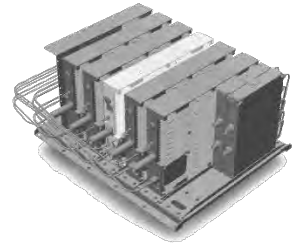

RF										
Frequency Range Name			600	700L & 700U & FirstNet		800 /850	1900	EAWS	WCS	2500
Frequency Range	Uplink	MHz	663-698	698-716	777-798	817-849	1850-1915	1695-1780	2305-2315	2496-2690
	Downlink		617-652	728-746	746-768	862-894	1930-1995	2110-2180	2350-2360	
Max. Operating Bandwidth- Non-contiguous	MHz		Full Band							
Instantaneous Bandwidth	MHz		35	18	21	32	65	70	10	100
Downlink Output Power	dBm		43	43		43	43	43	43	43
Attenuator Adjustable Range (1 dB step)	dB		0-20							
Pass Band Ripple (p-p)	dB		≤ 4							
Channel Bandwidth	MHz		5/10/15/20							5/10/15/20 for 4G 40 or 60 for 5G
Uplink Noise Figure (typical)	dB		6							
Uplink IIP3 (typical)	dB		-20							
VSWR			≤ 1.8							

Corning Restricted - Controlled content (R2)

EVM (256 QAM) (TM3. 1A@ Rated power)	%	< 3.5	
Spurious Emission		3GPP TS 36.106/25.106; 3GPP TS 38.104 V 15. 5. 0 (sections 6; 7)	
Electrical Specifications			
Power Consumption (Typical)	Watt	OEU (Optical Expansion Unit) – connected to RFU’s	50
		RFU (RF Unit) – MIMO 2:2 for the bands 600,700,800/850, 1700. 1900, 2300, 2500TDD	220
AC voltage	AC	100-240	

Interfaces and Mechanical			
CPRI Port		4, SFP+ 10. 1Gbps	
Antenna Ports		1 ,4.3-10 female	
Dimension (W x H x D)	Inch (mm)	OEU	14.6 x 3.2 x 13.8 (370 x 80 x 355)
		RFU except 700	19.7 x 3.2 x 13.8 (500 x 80 x 355)
		RFU 700	19.7 x 4. 8 x 13.8 (500 x 121 x 355)
Mounting and installation		Wall mount	
Weight	Lbs (Kg)	OEU	26.4 (12)
		RFU except 700	39.6 (18)
		RFU 700	44 (20)
Cooling		Convection	
Environmental			
Operational Temperature	°F (°C)	-40° to 131° (-40° to 55°)	
Outdoor installation (Ingress Protection)		IP 65	

*Technical specs are subject to change without notice

Low Bands Combiner specifications

The Low band combiner is designed to combine the following services :600MHz,700MHz, 800/850MHz and high frequencies from the Medium Band combiner

Frequency Name		600	700	800/850	High Freq
Port Name		Port 1	Port 2	Port 3	Port 4
Frequency Range	MHz	617-716	728-798	817-894	1695-2690
Insertion Loss	dB	≤0.3			
Port Isolation	dB	≥50			
Return Loss	dB	≤20			
Pass band ripple	dB	≤0.2			
PIM	dBc	≤155@2×43dBm			
Power Capacity	Watt	250 per port			
Interface					
Connector		4.3-10 Mini DIN-Female			

Corning Restricted - Controlled content (R2)

*Technical specs are subject to change without notice.

Medium Bands Combiner specifications

The medium band combiner is designed to combine the services: 1900, EAWS, WCS and 2.5GHz.

If a single module is required, a single input (2500) is used.

If 2 * 2.5GHz RF modules are used (to support 4G and 5G services), 2 inputs are required (2500 IN1 and 2500 IN2) .

Frequency Name		1900	EAWS	WCS	2500	2500 IN1	2500 IN 2	2500 OUT
Port Name		Port 1	Port 2	Port 3	Port 4	Port 5	Port 6	Port7
Frequency Range		MHz	1850-2020	1695-1780 2110-2200	2305-2360	2496-2690		
Insertion Loss	dB	≤ 0.3				≤3.3		
Port Isolation	dB	≥50				≥20, 2500 IN1 to 2500 IN2 ≥50 to other ports		
Return Loss	dB	≤20						
Pass band ripple	dB	≤ 0.2						
PIM	dB	≤155@2 ×43 dBm						
Power Capacity	Watt	250 per port						
Interface								
Connector		4.3-10 Mini DIN-Female						

*Technical specs are subject to change without notice.