




SpotCell™ 141/142 Quick Installation Guide

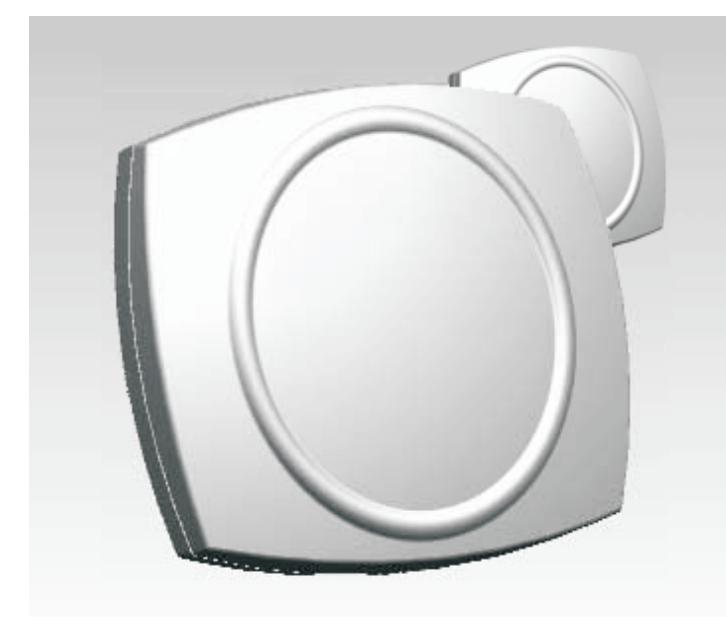

www.spotwave.com

Spotwave Wireless Inc. 1 Hines Road, Ottawa ON K2K 3C7 Canada

© 2004 Spotwave Wireless Inc. All rights reserved. Printed in Canada
Spotwave and SpotCell are trademarks of Spotwave Wireless Inc. Patents pending.

780-0000x-01-01

For quick installation of SpotCell:


If required, more detailed information on installing a SpotCell system can be found in the User Manual which is also available for downloading at www.spotwave.com/2003/support/manuals.htm.

WARNING

For your safety beware of power lines and ensure that appropriate safety measures are maintained at all times during the installation of the SpotCell 100 equipment. Contact with high-voltage power lines could result in death or serious injury.

1. Parts List

- Donor Unit (DU) x 2
- Cables
- Mounting kit
- Coverage Unit (CU)
- Power supply

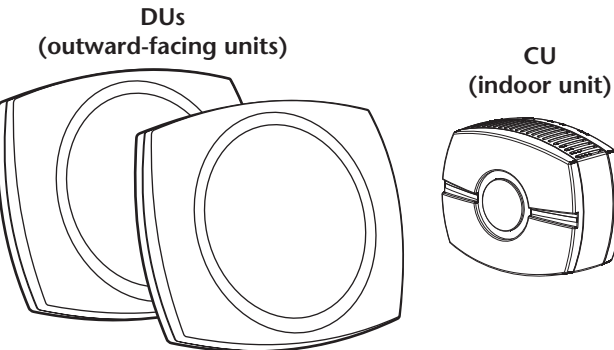


2. Location

The DUs can be mounted anywhere your cell phone works. This may be on a rooftop (typical rural set-up), on the side of a building, or inside a building (typical downtown set-up). The CU will be mounted inside the building where your cell phone does not work. (The illustration at the right depicts a typical installation.)


To start the installation, place the DUs and CU in the general areas where they are to be located. Do not physically mount them at this time.

Maximum separation between the DUs and CU, and back-to-back positioning are optimal when both are mounted indoors.

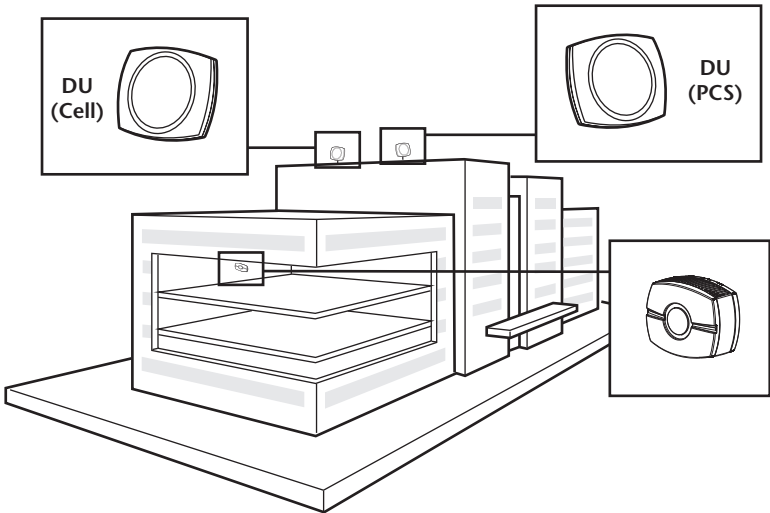


3. Connect CU to PCS DU

Connect the CU and PCS DU with the longer cable provided.

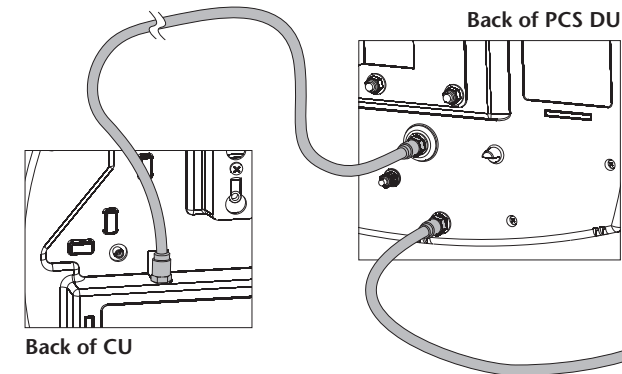


4. Connect Cell DU to PCS DU

Connect the Cell DU and the PCS DU with the shorter cable provided.

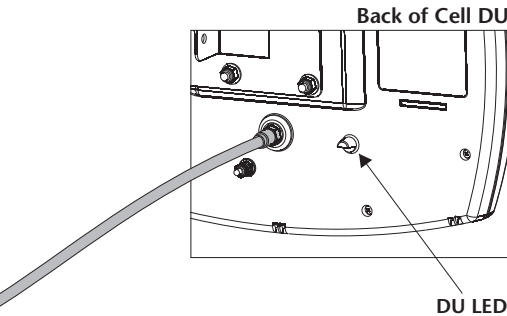


5. Set Mode and AP switches

Set the switch on the bottom of the CU to "1" (install) and then set the adaptive processor switch to "AP1" (Cell). Connect the power supply to the CU, and then plug the adapter into the AC outlet.

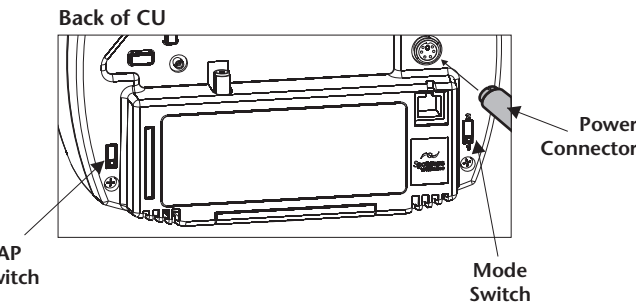


7. Mount DUs

Now mount the two DUs. Typical installations are pictured below.

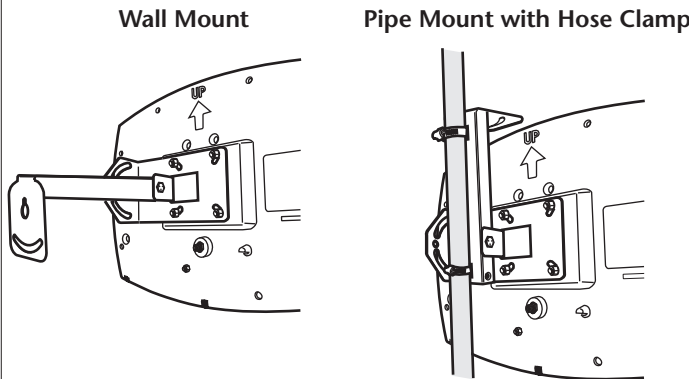


8. Set CU to Active

Move the switch on the bottom of the CU to "2" (active). Hold the CU in the location to be mounted. The LCD on the bottom of the CU indicates coverage (▣) by the number of bars; more bars indicate better coverage.

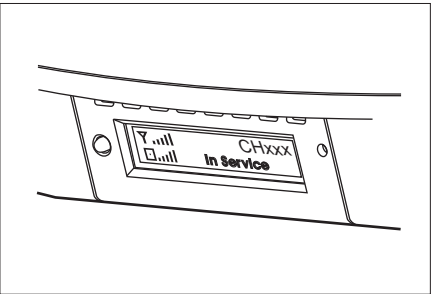


9. Mount CU

Mount the CU from a wall or ceiling, close to the center of the area requiring coverage.

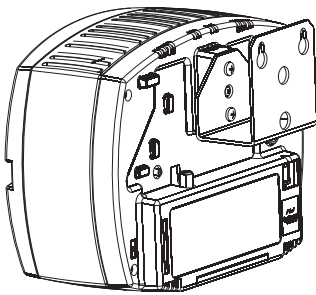

6. Align DUs

In the location where the Cell DU is to be mounted, rotate the unit in a complete circle. The LED on the back will turn red or green during the rotation. Again rotate the DU. When the LED turns green, stop the rotation. This is the direction the Cell DU must face when mounted.

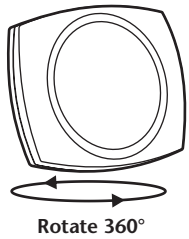

Set the CU adaptive processor switch on the CU to "AP2" (PCS). In the location where the PCS DU is to be mounted, rotate the unit in a complete circle. The LED on the back will turn red or green during the rotation. Again rotate the DU. When the LED turns green, stop the rotation. This is the direction the PCS DU must face when mounted.

10. Final Checklist

1. Properly ground the DUs via the grounding bolts.
2. Ensure that there is a drip loop on the cable connecting to the DUs.
3. Firmly affix the cable to the building where it runs between the Cell DU to PCS DU and PCS DU to CU.