



User Guide


WRT3200ACM
Dual-Band
Gigabit Wi-Fi Router

Contents


Product Overview	3
Front view.....	3
Back view.....	5
Avoid Overheating.....	7
Wall-Mounting Placement.....	7
Setting Up: Basics	10
Where to find more help	10
How to install your router	10
How to Use Linksys Smart Wi-Fi	13
How to connect to Linksys Smart Wi-Fi.....	13
Network Map.....	14
Guest Access.....	14
Parental Controls.....	15
Media Prioritization.....	15
Speed Test.....	16
External Storage.....	16
Connectivity	17
Troubleshooting	17
Wireless.....	18
Security.....	18
Troubleshooting	19
Your router was not successfully set up.....	19
Your Internet cable is not plugged in message.....	19
Cannot access your router message.....	20
After setup.....	22
Specifications	24
Linksys WRT3200ACM.....	24
Environmental.....	24

Product Overview

Front view

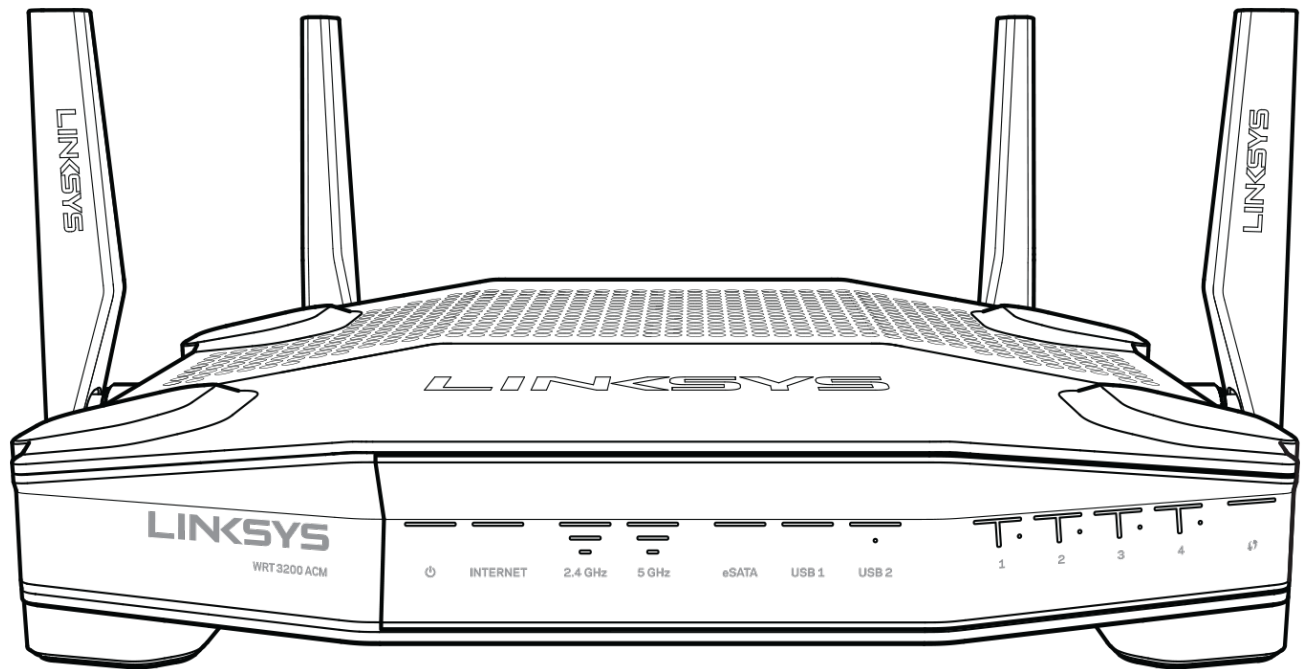

Front panel

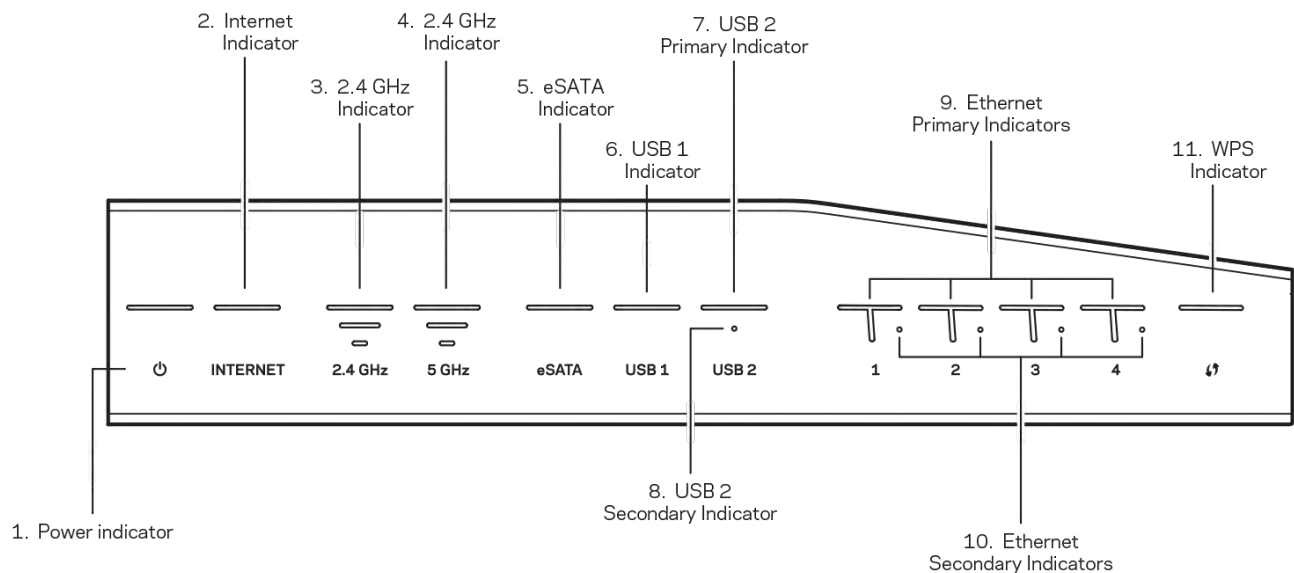

(1) Power indicator—(White) The icon LED is solid white while the router is powered on. It will blink when the router goes through its self-diagnostic mode during every boot-up.

(2) Internet Indicator—(White/Amber) The Internet LED is solid white when connected to the Internet. It blinks white while the router works to establish a connection. A solid amber LED indicates the connection is down due to configuration issues. Amber blinking indicates that the connection is down due to hardware issues.

(3) 2.4 GHz Indicator—(White) The Wireless LED is solid white when one or more clients are connected to the 2.4 GHz network. If the LED is blinking white, the router is sending or receiving data over the 2.4 GHz network.

(4) 5 GHz Indicator—(White) The Wireless LED is solid white when one or more clients are connected to the 5GHz network. If the LED is blinking white, the router is sending or receiving data over the 5 GHz network.

(5) eSATA Indicator—(White) When off, the USB/eSATA port is off or a USB device is connected. The LED is solid white when an eSATA device is connected. A blinking white LED indicates activity through the eSATA port.

(6) USB1 Indicator—(White) When off, the USB /eSATA port is off or an eSATA device is connected. The LED is solid white when a USB device is connected. A blinking white LED indicates activity on the port.

(7) USB2 Primary Indicator—(White) When off, the USB 3.0 port is off. The LED is solid white when a USB device is connected. A blinking white indicates activity on the port.


(8) USB2 Secondary Indicator—(White) When off, a USB 1.0 or USB 2.0 device is connected. A solid white LED indicates a USB 3.0 device is connected.

(9) ETHERNET 1 through 4 (Primary)—(White) These numbered LEDs correspond with the numbered ports on the router's back panel. If the white LED is solid, the router is connected to a device through that port. A flashing white LED indicates network activity over that port.

(10) ETHERNET 1 through 4 (Secondary)—(White) If the white LED is off, the router is successfully connected to a device through that port at 10/100 Mbps. A solid white LED indicates that the router is successfully connected to a device at 1000 Mbps.

(11) WPS Indicator—(White/Amber) The LED blinks slowly for up to two minutes during Wi-Fi Protected Setup. It will be solid white for five seconds to indicate a successful connection. The LED blinks amber if the Wi-Fi Protected Setup process fails. Make sure the client device supports Wi-Fi Protected Setup. Wait until the LED is off, and then try again. The router supports one session at a time.

Back view

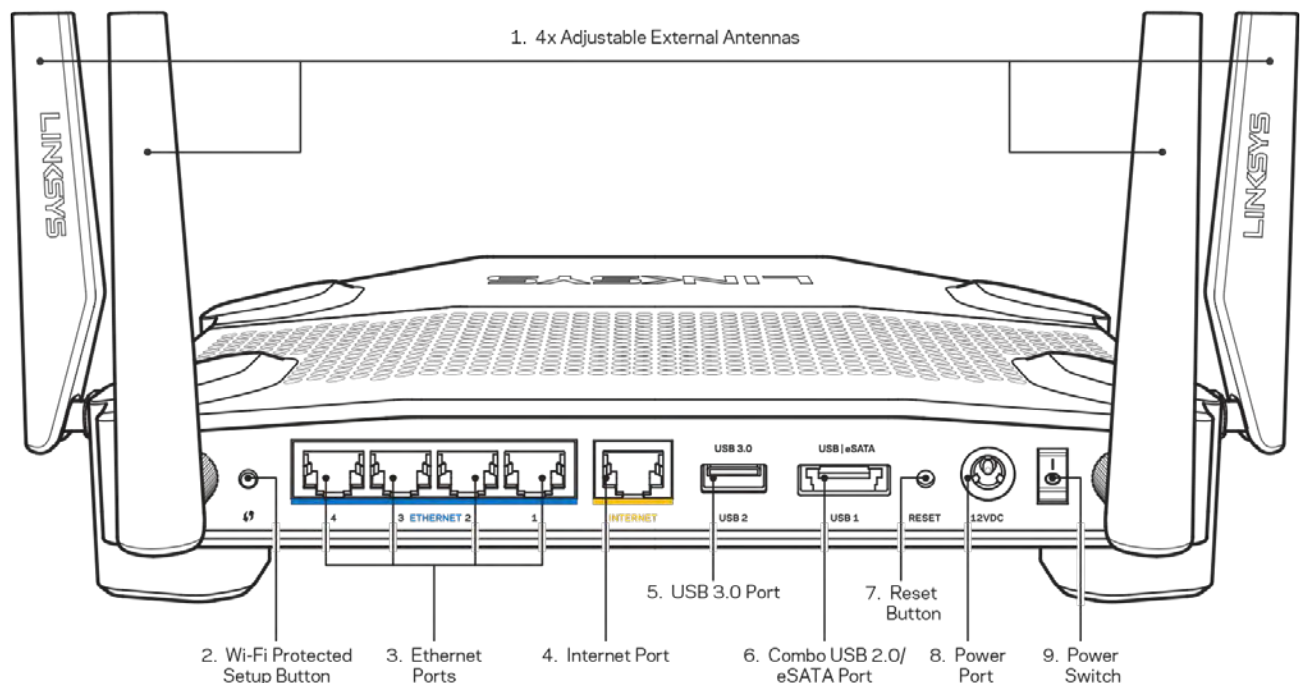

(1) Adjustable antennas—This router ships with four adjustable external antennas that should be connected to the router before powering it on. To connect the antennas, twist the antenna connector clockwise onto the antenna port on the router.

Note—For best performance, position the side antennas vertically as shown in the picture on the left.

(2) Wi-Fi Protected Setup™ button—Press to configure wireless security on Wi-Fi Protected Setup-enabled network devices.

(3) Ethernet ports—Connect Ethernet cables to these blue gigabit (10/100/1000) ports, and to wired devices on your network.

Note—*For best performance, use CAT5e or higher rated cables on the Ethernet ports.*

(4) Internet port—Connect an Ethernet cable to this yellow gigabit (10/100/1000) port, and to a broadband Internet cable/DSL or fiber modem.

Note—*For best performance, use CAT5e or higher rated cables on the Internet port.*

(5) USB 3.0 port—Connect and share a USB or eSATA drive on your network or on the Internet.


(6) USB 2.0/eSATA combo port—Connect and share a USB or eSATA drive on your network or on the Internet. You can also connect a USB printer and share it across your network.

(7) Reset button—Press and hold for 10 seconds (until the power LED starts flashing) to reset the router to factory settings. You can also restore the factory settings using Linksys Smart Wi-Fi on the Internet or mobile app.

(8) Power port—Connect the included AC power adapter.


(9) Power button (EU models only)—Press to turn on the router.

Avoid Overheating

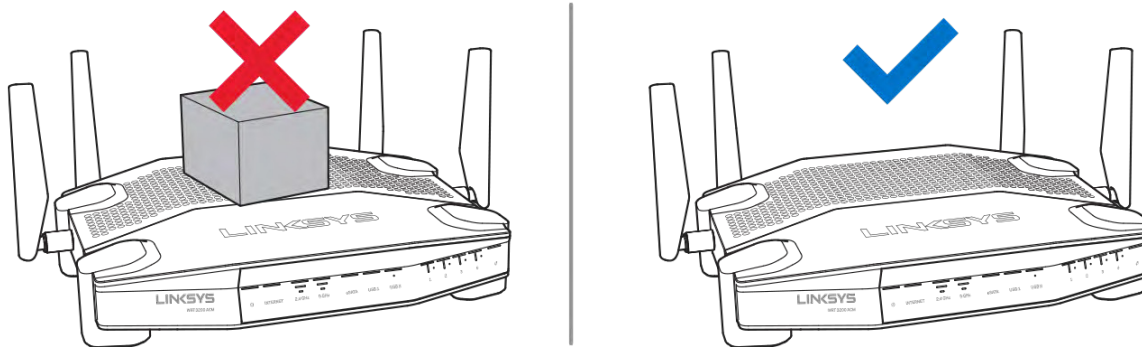

Wall-Mounting Placement

The router has wall-mount slots on the bottom of each foot for flexibility in mounting the router on the wall. The distance between the slots on the short side is 104 mm. The distance between the slots on the longer side is 210 mm. Two screws are needed to mount the router.

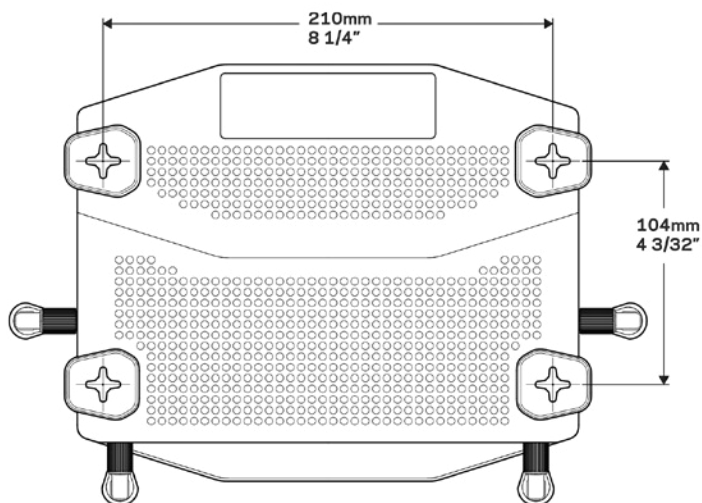

Suggested Mounting Hardware	
 6-7 mm 1/4"	 1.5-2 mm 1/16"

Note—Linksys is not responsible for damages incurred by unsecured wall-mounting hardware.

Mounting Instructions

1. Determine where you want to mount the router and which side you should use to mount it. Make sure that the wall you use is smooth, flat, dry, and sturdy. Make sure the location is within reach of an electrical outlet.

2. Before drilling holes, choose the template (short side or long side) that fits your installation. Drill the holes using the correct template.
3. Insert a screw into each hole and leave 4 mm of its head exposed.
4. Position the router so the wall-mount slots line up with the two screws.
5. Place the wall-mount slots over the screws and slide the router down until the screws fit snugly into the wall-mount slots.

Wall-Mounting Template

Print this page at 100% size.

Place on the wall with desired router position and mark screw locations.




Setting Up: Basics

Where to find more help

In addition to this user guide, you can find help at these locations:

- Linksys.com/support/WRT3200ACM (documentation, downloads, FAQs, technical support, live chat, forums)
- Linksys Smart Wi-Fi help (connect to Linksys Smart Wi-Fi, then click Help at the top of the screen)

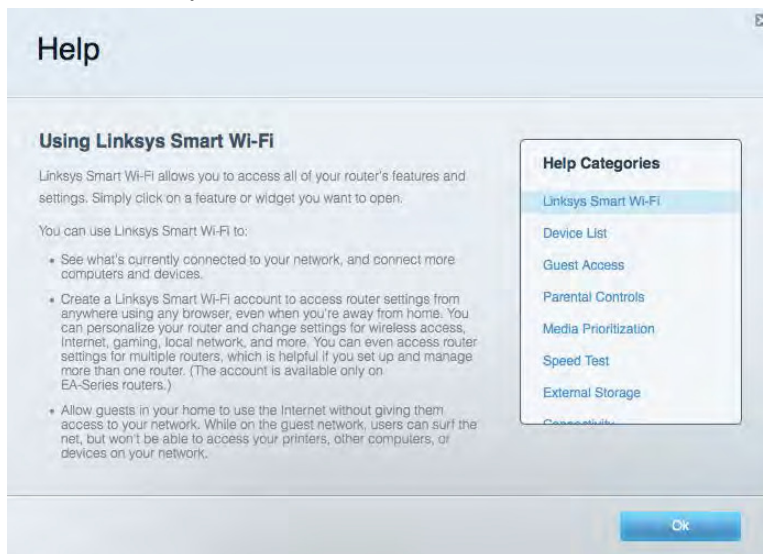

Note—Licenses and notices for third party software used in this product may be viewed on <http://support.linksys.com/en-us/license>. Please contact <http://support.linksys.com/en-us/gplcodecenter> for questions or GPL source code requests.

How to install your router

1. If replacing an existing router, disconnect that router first.
2. Turn the antennas so they are positioned straight up and plug in your router to a power source. European versions: press the power switch to I (on).
3. Connect the Internet cable from your modem to the yellow Internet port on your router. Wait until the indicator light on your router is solid.
4. Connect to the secure wireless name shown in the Quick Start Guide that came with your router. (You can change the network name and password later.) If you need help connecting to the network refer to your device documentation on the provided CD.

Note—You will not have Internet access until router setup is complete.

5. Open a web browser to launch the Linksys Smart Wi-Fi Router setup instructions. If you don't see the instructions, type linksysmartwifi.com in the address bar.

At the end of setup, follow the on-screen instructions to set up your Linksys Smart Wi-Fi account. Use Linksys Smart Wi-Fi to configure your router from any computer with an Internet connection.

Manage your router's settings:

- Change your router's name and password
- Set up guest access
- Configure parental controls
- Connect devices to your network
- Test your Internet connection speed

Note—*As part of Linksys Smart Wi-Fi account setup, you will be sent a verification e-mail. From your home network, click the link in the email to associate your router with the Linksys Smart Wi-Fi account.*

Tip—*Print the next page, then record your router and account settings in the table as a reference. Store your notes in a safe place.*

2.4 GHz Network Name	
Network Password	
5 GHz Network Name	
Network Password	
Router Password	
Guest Network Name	
Guest Network Password	
Linksys Smart Wi-Fi Username	
Linksys Smart Wi-Fi Password	


How to Use Linksys Smart Wi-Fi

You can configure your router from anywhere in the world by using Linksys Smart Wi-Fi, but you can also configure your router directly from your home network. Linksys Smart Wi-Fi may be available for your mobile device, as well. See your device's app store for information.

How to connect to Linksys Smart Wi-Fi

To connect to Linksys Smart Wi-Fi:

1. Open your computer's web browser.
2. Go to www.linksysmartwifi.com and log in to your account.

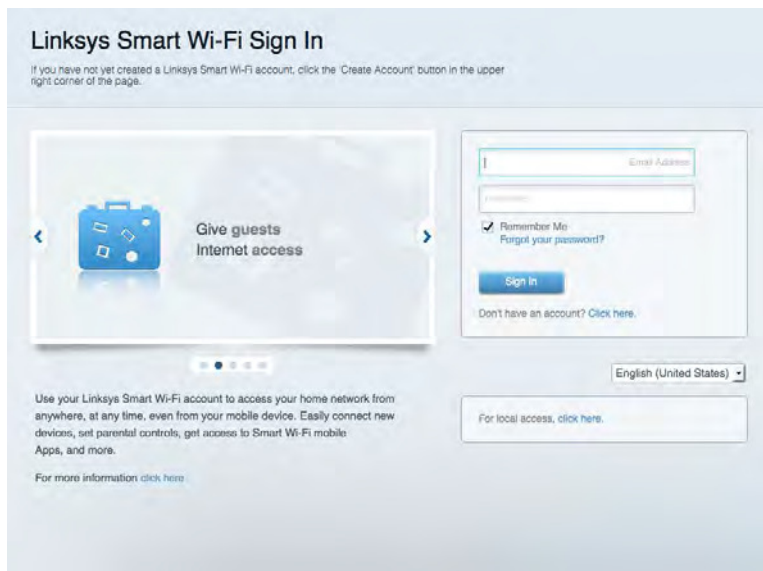

The screenshot shows the Linksys Smart Wi-Fi Sign In page. At the top, it says "Linksys Smart Wi-Fi Sign In" and includes a note: "If you have not yet created a Linksys Smart Wi-Fi account, click the 'Create Account' button in the upper right corner of the page." Below this is a large banner with a blue suitcase icon and the text "Give guests Internet access". To the right of the banner is a sign-in form with fields for "Email Address" and "Password". There is a checkbox for "Remember Me" and a link for "Forgot your password?". A blue "Sign In" button is at the bottom of the form. Below the button is a link: "Don't have an account? Click here." At the bottom right of the page is a language dropdown menu set to "English (United States)" and a link: "For local access, click here."

If you can't remember your password, click *Forgot your password?* and follow the on-screen instructions to recover it.

Network Map

Lets you display and manage all network devices connected to your router. You can view devices on your main network and your guest network, or display information about each device.




Guest Access

Lets you configure and monitor a network that guests can use without accessing all of your network resources.

The screenshot shows the 'Guest Access' configuration page. At the top, there's a title 'Guest Access' and a checkbox 'Show widget on the homepage' which is checked. Below the title, there's a subtitle 'Guest access allows visitors to connect to your wireless guest network and access the Internet, without giving access to your other computers or personal data.' The page has a section 'Allow guest access' with a toggle switch set to 'ON'. Below this, there's a section 'Guest network names and password' with an 'Edit' link. It shows '2.4 GHz SSID: EA635Q-guest' and 'Guest network password: cabbage74'. At the bottom, there's a section 'Total guests allowed' with a dropdown menu set to '5 guests'. At the bottom right, there are 'Ok' and 'Cancel' buttons. A warning box on the right side says: 'Your guest should first connect to your guest network, open a web browser, and then enter the guest password.'


Parental Controls

Lets you block web sites and set Internet access times.

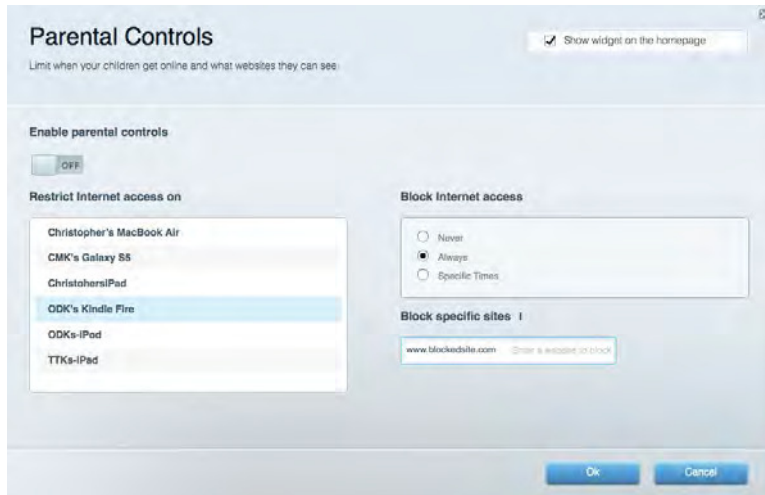

Media Prioritization

Lets you set which devices and applications have top priority for your network traffic.

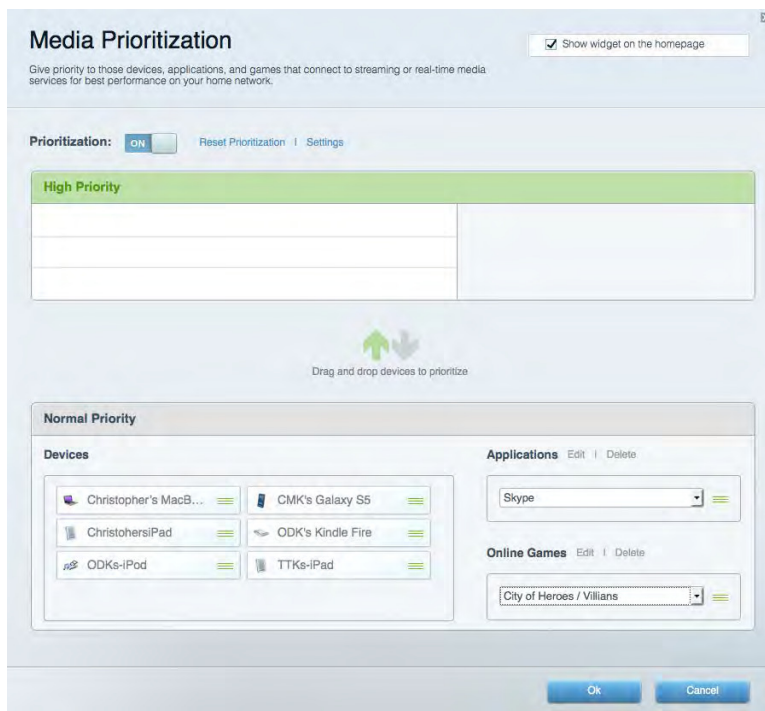

Speed Test

Lets you test your network's Internet connection speed.



External Storage

Lets you access an attached USB drive (not included) and set up file sharing, a media server, and FTP access.

The External Storage configuration interface includes the following sections:

- External Storage Drive:** Shows the volume name "ROUND DRIVE" and a progress bar indicating "Space used: 656 MB used of 959 MB total." Buttons for "Safely remove drive" and "Refresh" are present.
- Secure Folder Access is OFF:** A warning that "Any user can access content via shared folders." It lists "PC access (File explorer): \\192.168.1.1" and "Mac access (Finder): smb://192.168.1.1".
- FTP Server is OFF:** A warning that "Content is not accessible to any user via FTP." The status is "FTP server: Disabled".
- Media Server (DLNA) is ON:** A confirmation that "Media content is accessible to DLNA clients." The DLNA server name is "EA6360".
- A "Show widget on the homepage" checkbox is checked.
- An "Ok" button at the bottom right.

Connectivity

Lets you configure basic and advanced network settings.

The screenshot shows the 'Connectivity' settings page of a router. It features a navigation bar with tabs: Basic, Internet Settings, Local Network, Advanced Routing, and Administration. The 'Internet Settings' tab is active. The page is divided into two main sections. The left section, titled 'Network Name and Password', contains fields for 2.4 GHz and 5 GHz network names and passwords, and a 'Router Password' field. The right section, titled 'Router Firmware Update', includes a 'Router Firmware Update' section with an 'Automatic' checkbox checked and a 'Check for Updates' button. Below this is a 'Manual' section with a 'Choose File' button. The 'Time Zone' section shows a dropdown menu set to '(GMT-05:00) Indiana East, Colombia, Panama' and an unchecked checkbox for 'Automatically adjust for Daylight Savings Time'. The 'Activity Lights' section has an 'ON' button and a description: 'Enable/disable activity lights. Power light will remain on.' At the bottom, there are 'OK', 'Cancel', and 'Apply' buttons.


Troubleshooting

Lets you diagnose problems with your router and check the status of the network.

The screenshot shows the 'Troubleshooting' settings page of a router. It features a navigation bar with tabs: Status, Diagnostics, and Logs. The 'Diagnostics' tab is active. The page is divided into two main sections. The left section contains 'Ping IPv4' and 'Trace route' tools. The 'Ping IPv4' tool has a text input for 'IP or host name', a dropdown for 'Number to ping' set to 5, and a 'Start to Ping' button. The 'Trace route' tool has a text input for 'IP or host name' and a 'Start to Traceroute' button. The right section contains 'Router configuration', 'Router Firmware', 'Internet Address', and 'Factory reset' options. The 'Router configuration' section has 'Backup' and 'Restore' buttons. The 'Router Firmware' section has a 'Restore previous firmware' button. The 'Internet Address' section shows 'IPv4: 10.0.0.253' and 'IPv6: 2601:0540:c000:0019:0000:0000:0000:314e', each with a 'Release and Renew' link. The 'Factory reset' section has a 'Reset to factory default settings' link. At the bottom, there is an 'OK' button.

Wireless

Lets you configure your router's wireless network. You can change the security mode, password, MAC filtering, and connect devices using Wi-Fi Protected Setup™.

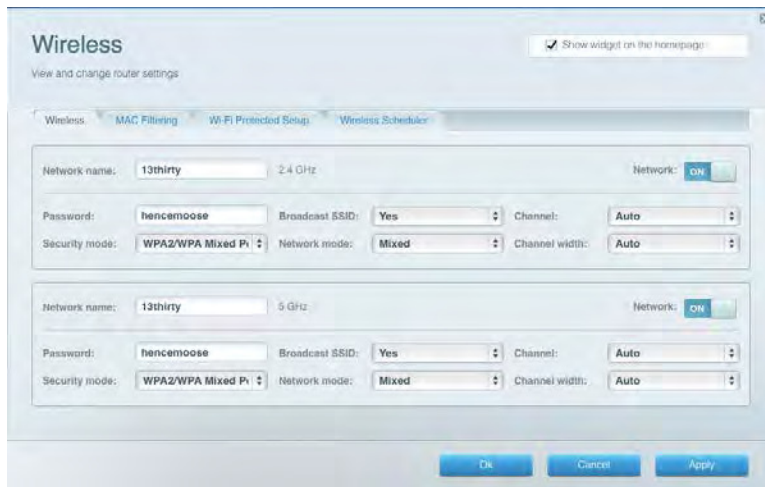


The Wireless configuration window shows settings for two radio bands: 2.4 GHz and 5 GHz. Both bands are configured with the same parameters: Network name '13thirty', Password 'hencemoose', Security mode 'WPA2/WPA Mixed P', Network mode 'Mixed', and Channel 'Auto'. The Network toggle is set to 'ON' for both. A checkbox 'Show widget on the homepage' is checked. At the bottom are 'Ok', 'Cancel', and 'Apply' buttons.

Band	Network name	Password	Security mode	Network mode	Channel	Channel width	Network
2.4 GHz	13thirty	hencemoose	WPA2/WPA Mixed P	Mixed	Auto	Auto	ON
5 GHz	13thirty	hencemoose	WPA2/WPA Mixed P	Mixed	Auto	Auto	ON

Security

Lets you configure your router's wireless security. You can set up the firewall, VPN settings, and make custom settings for applications and games.

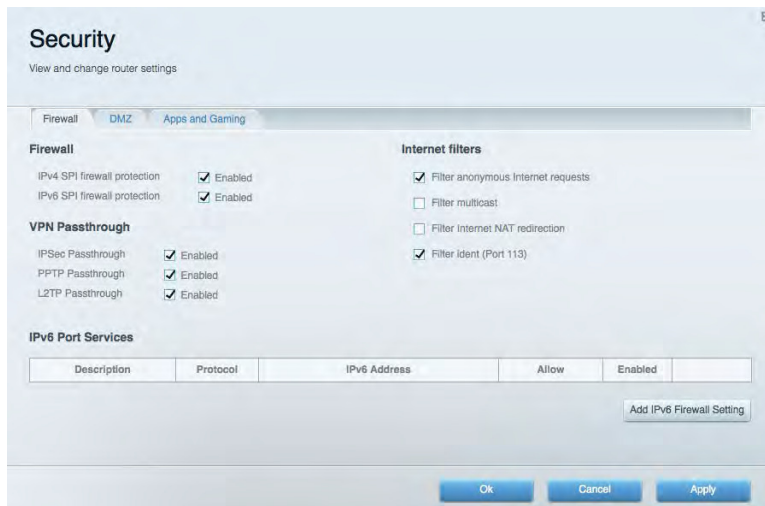

The Security configuration window has tabs for Firewall, DMZ, and Apps and Gaming. The Firewall tab is active, showing settings for IPv4 SPI firewall protection (Enabled), IPv6 SPI firewall protection (Enabled), VPN Passthrough (IPSec, PPTP, L2TP all Enabled), and Internet filters (Filter anonymous Internet requests, Filter multicast, Filter Internet NAT redirection, Filter ident (Port 113)). There is also a table for IPv6 Port Services.

Description	Protocol	IPv6 Address	Allow	Enabled
Add IPv6 Firewall Setting				


Troubleshooting

You can find more help from our award-winning customer support at Linksys.com/support/WRT3200ACM.

Your router was not successfully set up

If Linksys Smart Wi-Fi did not complete the setup, you can try the following:

- Press and hold the Reset button on your router with a paperclip or pin until the LED starts blinking (about 10 seconds). Install the router again.

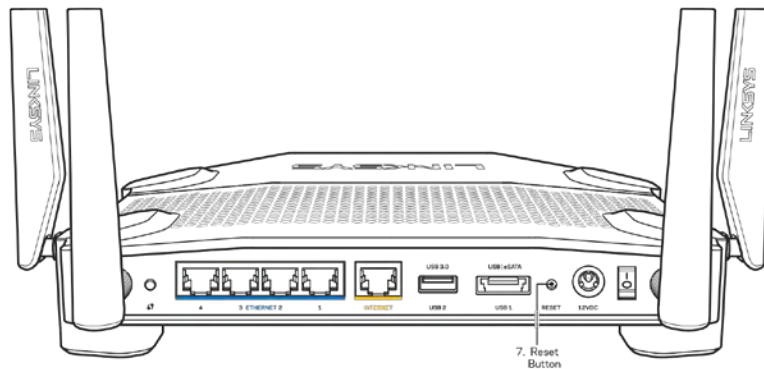


- Temporarily disable your computer's firewall (see the security software's instructions for help). Install the router again.
- If you have another computer, use that computer to install the router again.


Your Internet cable is not plugged in message

If you get a "Your Internet cable is not plugged in" message when trying to set up your router, follow these troubleshooting steps.


- Make sure that an Ethernet or Internet cable (or a cable like the one supplied with your router) is securely connected to the yellow Internet port on the back of the router and to the appropriate port on your modem. This port on the modem is usually labeled Ethernet, but may be named Internet or WAN.

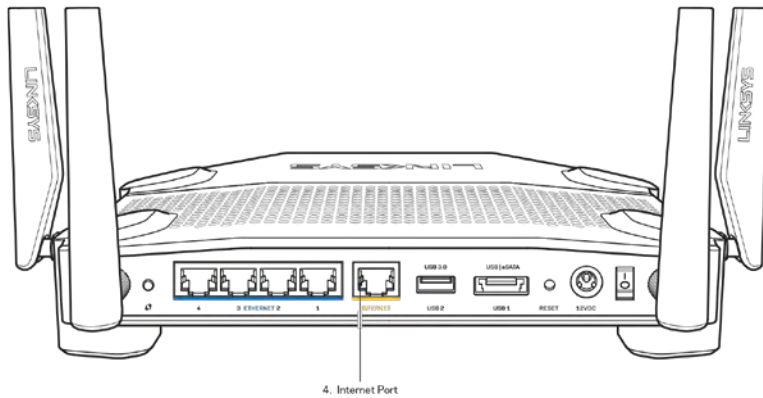

- Make sure that your modem is connected to power and is turned on. If it has a power switch, make sure that it is set to the ON or I (as opposed to O) position.
- If your Internet service is cable, verify that the cable modem's CABLE port is connected to the coaxial cable provided by your ISP.

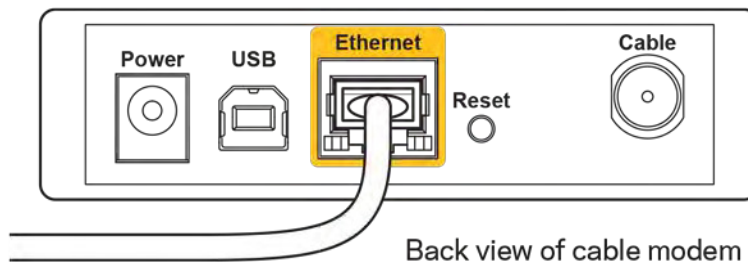

- If your Internet service is DSL, make sure that the DSL phone line is connected to the modem's DSL port.

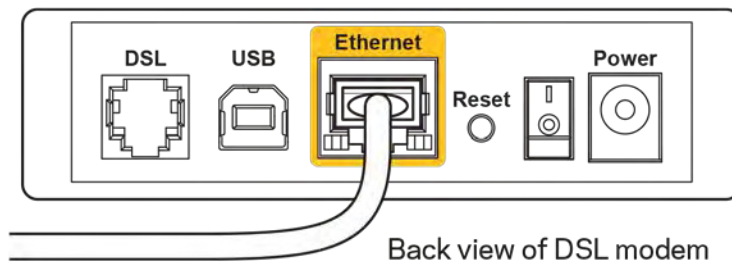

- If your computer was previously connected to your modem with a USB cable, disconnect the USB cable.
- Install the router again.

Cannot access your router message

To access your router, you must be connected to your own network. If you currently have wireless Internet access, the problem may be that you have accidentally connected to a different wireless network.

To fix the problem on Windows computers, do the following*:

1. On your Windows desktop, click on the wireless icon in the system tray. A list of available networks will appear.
2. Click your own network name. Click **Connect**. In the example below, the computer was connected to another wireless network named wraith_5GHz. The wireless network name of the Linksys WRT3200ACM router, Damaged_Beez2.4 in this example, is shown selected.




3. If you are prompted to enter a network key, type your password (Security Key) into the Network key and Confirm network key fields. Click **Connect**.
4. Your computer connects to the network, and you should now be able to access the router.

**Depending on your version of Windows, there could be some differences in wording or icons in these steps.*

To fix the problem on Mac computers, do the following:

1. In the menu bar across the top of the screen, click the Wi-Fi icon. A list of wireless networks will appear. Linksys Smart Wi-Fi has automatically assigned your network a name.
2. In the example below, the computer was connected to another wireless network named `wraith_5GHz`. The wireless network name of the Linksys WRT3200ACM router, `Damaged_Beez2.4` in this example, is shown selected.

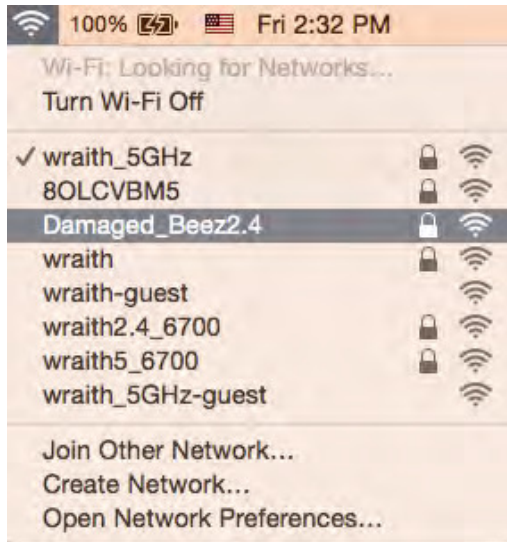

3. Click the wireless network name of your Linksys WRT3200ACM router (`Damaged_Beez2.4` in the example).
4. Type your wireless network password (Security Key) into the *Password* field. Click **OK**.

After setup

The Internet appears to be unavailable

If the Internet has difficulty communicating with your router, the problem may appear as a “Cannot find [Internet address]” message in your Web browser. If you know that the Internet address is correct, and if you’ve tried several valid Internet addresses with the same result, the message could mean that there’s a problem with your ISP or modem communicating with your router.

Try the following:

- Make sure that the network and power cables are securely connected.
- Make sure that the power outlet that your router is connected to has power.
- Reboot your router.
- Contact your ISP and ask about outages in your area.

The most common method of troubleshooting your router is to turn it off, then back on again. Your router can then reload its custom settings, and other devices (such as the modem) will be able to rediscover the router and communicate with it. This process is called rebooting.

To reboot your router using the power cord, do the following:

1. Disconnect the power cord from the router and the modem.
2. Wait 10 seconds, and reconnect the power cord to the modem. Make sure it has power.
3. Wait until the modem's online indicator has stopped blinking (about two minutes). Reconnect the power cord to the router.
4. Wait until the power indicator stops blinking. Wait two minutes before trying to connect to the Internet from a computer.

To reboot your router using Linksys Smart Wi-Fi, do the following:

1. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Under *Router Settings*, click *Troubleshooting*.
3. Click the *Diagnostics* tab.
4. Under *Reboot*, click Reboot.



5. Click **Yes**. The router will reboot. While the router is rebooting, all connected devices will lose their Internet connection, and will automatically reconnect when the router is ready again.

Linksys Smart Wi-Fi does not open in your web browser

The latest versions of Google Chrome™, Firefox®, Safari® (for Mac® and iPad®), Microsoft Edge, and Internet Explorer® version 8 and newer work with Linksys Smart Wi-Fi.

Specifications

Linksys WRT3200ACM

Model Name	Linksys Dual-Band Gigabit Wi-Fi Router
Description	Dual-Band AC Router with Gigabit and 2×USB
Model Number	WRT3200ACM
Switch Port Speed	10/100/1000 Mbps (Gigabit Ethernet)
Radio Frequency	2.4 GHz and 5 GHz
# of Antennas	4 external adjustable antennas
Ports	Power, USB 3.0, Combo USB 2.0/eSATA, Internet, Ethernet (1-4), RP-SMA (4)
Buttons	Reset, Wi-Fi Protected Setup, Power
Front Panel Indicators	Power, Internet, 2.4 GHz, 5 GHz, eSATA, USB1, USB2, Ethernet (1-4), Wi-Fi Protected Setup,
UPnP	Supported
Security Features	WPA, WPA2, RADIUS
Security Key Bits	Up to 128-bit encryption
Storage File System Support	FAT, NTFS, and HFS+
Browser Support	Latest versions of Google Chrome™, Firefox®, Safari® (for Mac® and iPad®), Microsoft Edge, Internet Explorer® version 8 and newer

Environmental

Dimensions	9.68" x 7.64" x 2.05" (without antennas) (246 x 194 x 52 mm)
Unit Weight	31 oz. (883 g)
Power	12V, 3.0A
Certifications	FCC, IC, CE, Wi-Fi a/ac/b/g/n, Windows 7, Windows 8, DLNA
Operating Temperature	32 to 104°F (0 to 40°C)
Storage Temperature	-4 to 140°F (-20 to 60°C)
Operating Humidity	10% to 80% relative humidity, non-condensing
Storage Humidity	5% to 90% non-condensing

Notes:

For regulatory, warranty, and safety information, see the CD that came with your router or go to Linksys.com/support/WRT3200ACM.

Specifications are subject to change without notice.

Maximum performance derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

BELKIN, LINKSYS and many product names and logos are trademarks of the Belkin group of companies. Third-party trademarks mentioned are the property of their respective owners.

Licenses and notices for third party software used in this product may be viewed here:

<http://support.linksys.com/en-us/license>. Please contact <http://support.linksys.com/en-us/gplcodecenter> for questions or GPL source code requests.

© 2016 Belkin International, Inc. and/or its affiliates. All rights reserved.

LNKPG-00113 Rev. B00 (update)