

Nokia 3620 and Nokia 3660 User Guide

The wireless phones described in this guide are approved for use in the GSM network.

LEGAL INFORMATION

Part No. 9310245, Issue No. 1

Copyright ©2003 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 3620, Nokia 3660, and the Nokia Original Accessories logos are trademarks or registered trademarks of Nokia Corporation. All other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Printed in Canada October 2003

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2003. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

The information in this user guide was written for the Nokia 3620 and Nokia 3660 phones. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS," EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. This device contains a radio transceiver and digital circuitry that supports its features. Operation of the digital device circuitry is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications to this device not authorized by Nokia may void the authority granted for operation of this device and should not be made.

Contents

1	For your safety	1
2	General information	3
	Register your phone	3
	Follow graphic clues	3
	Network services	3
	Contact Nokia	4
	Learn about accessibility solutions	5
	Nokia 3620 and Nokia 3660 phones at a glance	6
	Understand your phone	7
	Menu	16
	Options lists	17
	Navigation bar	18
	Actions common to all applications	18
	Volume control	20
	Loudspeaker	20
	Headset	21
	Shared memory	21
3	Your phone	22
	Make a call	22
	Answer a call	25
	Log—Call log and general log	27
	SIM folder	33
4	Settings	34

	Change general settings.....	34
	Phone settings	34
	Call settings	36
	Connection settings.....	38
	Access points	40
	Date and time.....	45
	Security	46
	Call restriction (system service).....	50
	System.....	51
	Accessory settings	51
5	Contacts.....	52
	Create contact cards	52
	Copy between SIM card and phone memory.....	52
	Edit contact cards.....	53
	View a contact card	54
	Manage contact groups.....	59
	Import data from other Nokia phones	60
6	Camera and images	61
	Take pictures.....	61
	Store pictures in images	65
7	Video recorder	69
	Record a video clip.....	69
	Watch a video clip	70
8	RealOne Player™	71
	Play media files.....	71

Send media files	73
Change the settings	73
9 Messaging	75
Messaging—General information	77
Write text	78
Copy text	82
Create and send new messages	82
Text messages	83
Multimedia messages	85
E-mail messages	88
Inbox	90
My folders	94
Remote mailbox	95
Outbox	100
View messages on a SIM card	101
Cell broadcast (system service)	101
Service command editor	101
Messaging settings	102
10 Profiles	109
Change the profile	109
Customize profiles	109
11 Favorites	111
Add shortcuts	111
Shortcut options	112
12 Calendar and To-do	113

Create calendar entries	113
Set calendar alarms	116
Send calendar entries.....	117
To-do.....	117
Import data from other Nokia phones	118
13 Extras.....	119
Calculator	119
Composer.....	120
Converter.....	121
Notes.....	123
Clock	123
Recorder	124
Memory card.....	124
14 Services (XHTML).....	128
Basic steps for accessing the web.....	128
Phone browser service settings.....	129
Browsing	132
View saved pages	133
Download through the browser.....	134
End a connection	135
Browser settings.....	135
15 Java™ Applications.....	137
Install a Java application.....	138
Java application settings	139
16 Manager.....	140

Install applications and software	140
Install software	141
Remove software	142
View memory consumption	143
17 Connectivity	144
Bluetooth connection	144
Infrared connection	150
Connect your phone to a computer	152
Use your phone as a modem	153
18 PC Suite	154
PC Suite documentation and help	154
Software and hardware requirements	155
Install PC Suite	155
Connect your phone to the PC	157
Start PC Suite	157
Online and offline modes	158
Connection status	158
PC Suite applications	159
Remove PC Suite from your PC	161
19 Reference information	163
Battery statements	163
Use proper care and maintenance	164
Understand important safety information	165
Certification information (SAR)	169
Accessories	170
Nokia 3620 technical information	176

Nokia 3660 technical information	177
Troubleshooting	178
Message from the CTIA	187
Message from the FDA.....	191
Index	197

FCC Draft

1 For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.



Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



INTERFERENCE

All wireless phones may get interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACKUP COPIES

Remember to make backup copies of all important data.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.

2 General information

Congratulations on your purchase of a Nokia mobile phone. Your phone provides many functions which are practical for daily use, such as a digital camera, a video recorder, messaging, e-mail, a clock, an alarm clock, a calculator, and a calendar. A variety of Xpress-on™ color covers are also available. Your phone can connect to a PC, laptop, or other device using a data cable, Bluetooth technology, or the built-in IR port. For more information on connectivity, refer to the PC Connectivity Guide. The PC Connectivity guide, Nokia PC Suite, and all related software can be downloaded from the U.S. Mobile Phone products section of www.nokia.com.

- **REGISTER YOUR PHONE**

Make sure to register your phone at www.warranty.nokiausa.com or call 1-888-NOKIA-2U (1-888-665-4228) so that we can serve your needs better if you should need to call the center or have your phone repaired.

When you register your phone, you can sign up for the Nokia e-newsletter, Nokia Connections. You will receive tips and tricks on using your phone, accessory information, and special offers.

- **FOLLOW GRAPHIC CLUES**

This guide uses certain icons to alert you to important information.



Note: Explains a feature or points out an important concept.



Important: Indicates critical information on using a feature.



Warning: Helps you avoid personal injury, damage to the phone, or property damage.

- **NETWORK SERVICES**

The wireless phones described in this guide are approved for use on the following networks:

- Nokia 3620: GSM 850 and 1900
- Nokia 3660: GSM 900, 1800, and 1900

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.



Note: Some networks may not support all language-dependent characters and/or services.



Warning: All of the features in this device, other than the alarm, require the phone to be switched on to use the features. Do not switch the phone on when wireless phone use may cause interference or danger.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-12U, ACP-8U, LCH-9, and LCH-12.



Warning: Use only batteries, chargers, and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

For availability of approved accessories, please check with your dealer.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

• CONTACT NOKIA

To help Nokia promptly answer your questions, please have the following information available before contacting the Nokia Customer Care Center:

- Your phone model number:
Nokia 3620
Nokia 3660

- Type number
- IMEI number
- Your local zip code
- The phone or accessory in question



Note: The model, type, and IMEI numbers are located on the back of your phone under the battery and memory card.

Nokia Customer Care Center, USA	Customer Care, Canada
Nokia Mobile Phones 7725 Woodland Center Blvd. Suite #150 Tampa, Florida 33614 Tel: 1-888-NOKIA-2U (1-888-665-4228) Fax: 1-813-249-9619 For TTY/TDD users: 1-800-24-NOKIA (1-800-246-6542)	Nokia Products Ltd. 601 Westney Road South Ajax, Ontario L1S 4N7 Tel: 1-888-22-NOKIA (1-888-226-6542) Website: www.nokia.ca

• LEARN ABOUT ACCESSIBILITY SOLUTIONS

Nokia is committed to making mobile phones easy to use for all individuals including those with disabilities. For more information, visit www.nokiaaccessibility.com.

For more information on accessibility accessories, see "Mobile Inductive Loopset LPS-3" on p. 173 and "Phone Adapter HDA-9" on p. 173.

• NOKIA 3620 AND NOKIA 3660 PHONES AT A GLANCE

- 1 **Power key** (⏻)
(on top of the phone)

- 2 Earpiece

- 3 Display screen

- 4 **Left selection key**

- 5 **Send key** (✓)

- 6 **Edit key** (⌨)
Insert numbers, symbols, or punctuation into text messages.

- 7 **Menu key** (☰)
Opens the main menu screen. Accesses all applications.

- 8 *** key** (✱)

- 9 **# key** (✱)

- 10 **Clear key** (⌫)

- 11 **End key** (📞)

- 12 **Right selection key**

- 13 **Scroll key**

Used to navigate up, down, left, and right on the display screen and adjust volume during a call. Press the center to select or open items, snap pictures, etc.



• UNDERSTAND YOUR PHONE

Insert the SIM card and load the battery






Important: Keep all miniature SIM cards out of the reach of small children.




Note: Before removing the covers, always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.

- 1 Open the cover with the back of the phone facing you. Press the locking catch (1) in the direction of the arrow and slide the cover (2).
- 2 Remove the battery and find the SIM card slot (3).
- 3 Place the SIM card carefully into the slot. Make sure that the beveled corner on the SIM card faces the bottom of the phone and that the golden contact area on the card faces downward.

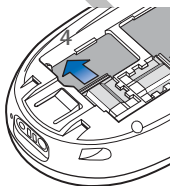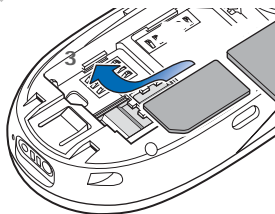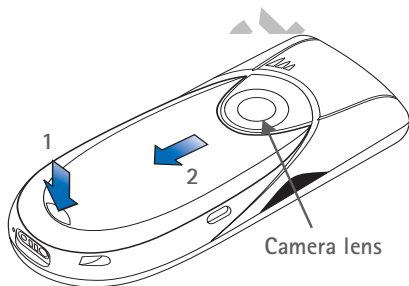


- 4 Slide the silver catch over the SIM card to secure it. (4).

- 5 Replace the battery (5). Align the golden contacts of the battery with the corresponding connectors on the phone, and push the opposite end of the battery until it snaps into place. Replace the cover.

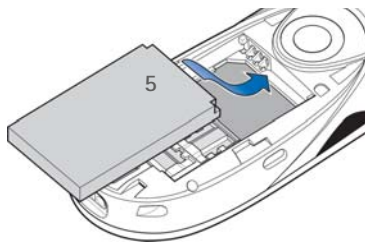

Charge the battery

- 1 Connect the lead to the charger. You will hear it click into place.
- 2 Connect the charger to an ac wall outlet.
- 3 Connect the lead from the charger to the base of the phone. The battery indicator bar starts scrolling. Note, that you can use the phone while charging.
- 4 When the battery is fully charged, the bar stops scrolling. Disconnect the charger from the phone and then from the ac outlet. See also "Battery statements" on p. 163.

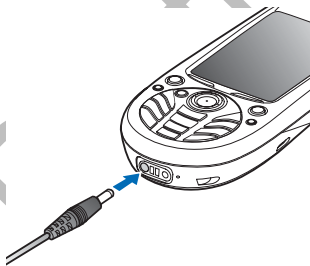


Note: Remove the battery only when the phone is switched off.

Switch the phone on or off

Press and hold the power key  located on top of the phone.




Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

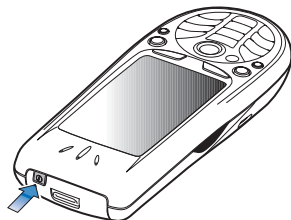

Antenna

Your phone has a built-in antenna (gray area in picture). As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on.

Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimizes the antenna performance and the talk time of your phone.

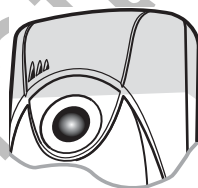

PIN code

The PIN code is usually supplied with the SIM card. If you are requested to enter a PIN code, key in the code (displayed as ****) and press  OK.

Security code

If you are requested to enter a security code, key in the security code (displayed as *****) and press  OK.


The factory setting for the security code is **12345**. For more information on the access codes, see "Security" on p. 46.

Time and date

Use the number keys **1–9** to key in the current time and then the date.
Press  **OK** to accept the settings.

The Scroll key

Press the **Scroll** key on the top , bottom , left  and right  (shown with blue arrows 1 to 4) to move in the Menu. Scroll to an application or a folder and press the **Scroll** key in the middle  (shown with blue arrow 5) to open it. For example:

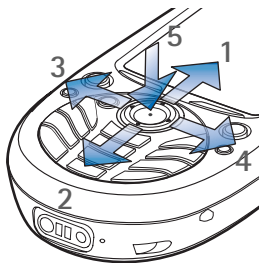

- 1 To open an Options list, press  **Options**. The small arrow at the bottom of the display (1) indicates if the list contains more items. The lighter the arrow, the fewer the items left in the list.

- 2 To scroll down the Options list, press . A small arrow to the right (2) indicates a sublist. To open a sublist, press .

To start an action, scroll to a command and press .

- 3 Press  to go to a tab (3), a new page, or view in an application.



Make a call

- 1 In the standby mode, key in the phone number, including the area code. If you make a mistake, press  to clear numbers.
- 2 Press  and wait for the answer.
- 3 Press  to finish the call (or to cancel the call attempt).

Copy from SIM card to phone memory

If you have stored names and phone numbers on a SIM card, you can copy them to the phone memory.

- 1 Press  to open the main Menu.
- 2 Use the **Scroll** key to move to **Contacts**.
- 3 Press  to open **Contacts**.
- 4 When you open **Contacts** for the first time, the phone asks you if you want to copy all your contact data from the SIM card to the phone memory. Press  OK.

See also "Copy between SIM card and phone memory" on p. 52.

Keyguard

Use the keyguard (keypad lock) to prevent the keys from being accidentally pressed.

To lock: Press  and the * key. When the keys are locked,  appears on the display.

To unlock: Press  and the * key.

When the keyguard is on, press  to answer a call. During a call, the phone can be operated normally.

 **Note:** When Keyguard is on, calls to the emergency number programmed into your phone (for example, 911) may be possible. Key in the emergency number and press . The number is displayed after you have keyed in the last digit.

Shortcuts in the standby mode

- Press  to open the main Menu.
- Press  to open a list of the last dialed numbers. You can then press  to view received and missed calls lists.
- Press  to open **Contacts**.
- To change the profile, press  briefly and select the profile.
- Press the 1 key and  to call your voice mailbox. See "Call your

voice mailbox" on p. 23.

Shortcuts in editors

- Press  to open a list of commands related to writing and editing text. Press  to switch between predictive, traditional text input and number mode (**Predictive text**→ *Predictive text on, Alpha mode, or Number mode*).
- As you write, press the **1** key repeatedly to access different kinds of special characters, or press the ***** key to open a list of special characters.
- Press the **0** key to enter a space.
- Use  to mark items. Press and hold  and at the same time, move the **Scroll** key to mark text to be copied or erased.


Other shortcuts

In the main Menu, press and hold  to view all the applications that are currently open. From this view, you can switch between applications by scrolling to one and pressing .

Standby mode

The indicators described are shown when the phone is ready for use, with no characters keyed in. In this state, the phone is in the standby mode.

- A Shows the signal strength of the cellular network at your current location. The higher the bar, the stronger the signal. The antenna symbol is replaced with the GPRS symbol  when the

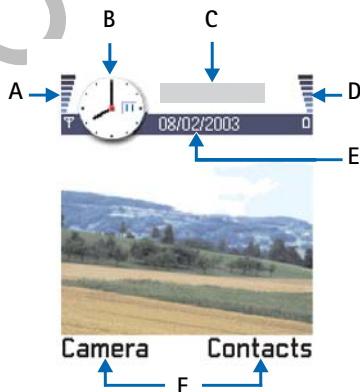

GPRS connection has been set to *When available* and a connection is available in the system or in the current cell. See "GPRS Packet data" on p. 39, and "GPRS" on p. 45.

- B Shows an analog or a digital clock. Also see settings for "Date and time" on p. 45 and settings for Background image in "Standby mode" on p. 36.
- C Indicates which cellular system the phone is currently using.
- D Shows the battery charge level. The higher the bar, the more charge there is left in the battery.
- E Navigation bar: shows the currently active profile. If the selected profile is *Normal*, the current date is displayed instead of the profile name. For further information, see "Navigation bar" on p. 18 and "Profiles" on p. 109.
- F Shows the current shortcuts assigned for the selection keys  and .



Note: Your phone has a screen saver. If there are no actions for five minutes, the display is cleared and a screen saver becomes visible. To deactivate the screen saver, press any key. See "Display" on p. 36.

You can change the selection key shortcuts and the background image. See the settings for "Standby mode" on p. 36.

Icons

Several icons may appear on the main screen while the phone is in the standby mode. The icons that are displayed depend on whether they are related to activity, data connections, or accessories.

ACTIVITY INDICATORS

One or more of the following icons may be shown to indicate that an activity has occurred:



Indicates that you have received new messages to the Inbox in Messaging. If the indicator is blinking, the phone memory is low and you must delete some data. For further information, see "Memory low" on p. 178.



Indicates that you have received new e-mail.



Indicates that you have received one or more voice messages. See "Call your voice mailbox" on p. 23.



Indicates that there are messages waiting to be sent in Outbox. See "Outbox" on p. 100.



Indicates that Ringing options has been set to Silent and Message alert tone to None in the currently active profile. See "Profiles" on p. 109.



Indicates that the phone's keypad is locked.



Indicates that you have an active alarm. See "Clock" on p. 123.



Indicates that a Bluetooth connection is active. Note that, when data is transmitted using a Bluetooth connection, (📶) is shown.



Indicates that all calls to the phone are forwarded. Indicates that all calls to the phone are forwarded to a voice mailbox. See "Settings for call forwarding" on p. 27. If you have two phone lines, the forward indicator for the first line is 1 and for the second line 2. See "Line in use (system service)" on p. 37.



Indicates that you can make calls using phone line 2 only (system service). See "Line in use (system service)" on p. 37.

DATA CONNECTION INDICATORS

When an application is establishing a data connection, one of the indicators below blinks in the standby mode. When an indicator is shown continuously, the connection is active.

-  for a data call
-  for a high-speed data call
-  shown instead of the antenna symbol when there is an active GPRS connection
-  for when the GPRS connection is put on hold during voice calls
-  for a fax call
-  for a Bluetooth connection
-  for an infrared connection

 **Note:** Check with your service provider for availability of high-speed data calls.

ACCESSORY INDICATORS

The following icons indicate that an accessory is connected to your phone:


-  a headset is connected
-  a Loopset is connected

• MENU

Press  (Menu key) to open the main Menu. In the Menu, you can access all the applications in your phone.

Options in the Menu are: *Open, List view / Grid view, Move, Move to folder, New folder, Help, and Exit.*

- Move in the Menu—Press the **Scroll** key on the top , bottom , left  and right  (shown with blue arrows 1 to 4) to move in the Menu.
- Open applications or folders—Scroll to an application or a folder and press the **Scroll** key in the middle  to open it.
- Close applications—Backstep by pressing  Back or Exit as many times as is needed to return to the standby mode or select **Options**→ *Exit*.

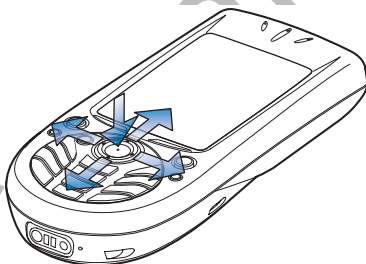

Use the Scroll key to move

If you press and hold , the phone returns to the standby mode and the application is left open in the background.

Pressing  always ends a call, even if another application is active and displayed.


When you switch the phone off, applications are closed and any unsaved data is saved automatically.

Select **Options**→ *List view* if you want to view the applications in a list.

Rearrange the Menu

You can rearrange the Menu in any order you like. You can move applications that you use more often from a folder to the Menu, and place applications you use less often in folders. You can also create new folders.

- 1 Scroll to the item you want to move and select **Options**→ *Move*. A check mark is placed beside the application.
- 2 Move the selection where you want the application to be and press **OK**.

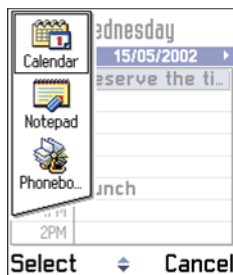

Switch between applications

If you have several applications open and want to switch from one application to another press and hold  (Menu key). The application switching window opens showing a list of open applications. Scroll to an application and press .

 **Note:** If memory is getting low, the phone may close some applications. The phone saves any unsaved data before an application is closed.

• OPTIONS LISTS

In this user guide, you can see the Options list commands that tell you what commands are available in different views and situations. The available commands change depending on the view you are in. In some situations, when you press the **Scroll** key, a shorter options list appears showing only the main commands available in the view.

Online help

Your phone has a help function that you can access from any application or view. Press  **Options**→ *Help* to access the online help.

• NAVIGATION BAR

In the navigation bar, you can see:

- Small arrows or tabs which tell you if there are more views, folders, or files you can move to.
- Editing indicators, see "Write text" on p. 78.
- Other information, for example, 2/14 in the following figure means that the current picture is the second of 14 pictures in the folder. Press  to see the next picture.



• ACTIONS COMMON TO ALL APPLICATIONS

Open items for viewing

If you want to open an item when you are viewing a list of files or folders, scroll to the item and press the **Scroll** key, or select **Options**→ *Open*.

Edit items

To open an item for editing, you sometimes need to first open it for viewing and then select **Options**→ *Edit*, if you want to change its contents.

Rename items

To give a new name to a file or folder, scroll to it and select **Options**→ *Rename*.

Remove, delete items

Scroll to the item and select **Options**→ *Delete* or press . To delete many items at a time, you first need to mark them.

Mark an item

There are several ways to select items when you are in a list.

- To select one item at a time, scroll to it and select **Options**→ *Mark/Unmark*→ *Mark* or press  and the **Scroll** key at the same time. A check mark is placed next to the item.
- To select all items in the list, select **Option**→ *Mark/Unmark*→ *Mark all*.

For information on how to insert text and numbers, see "Write text" on p. 78.

Mark multiple items

Press and hold  and at the same time move the **Scroll** key down or up. As the selection moves, a check mark is placed next to the items. To end the selection, stop the scrolling with the **Scroll** key and then release .

- After you have selected all the items you want, you can move or delete them by selecting **Options**→ *Move to folder* or *Delete*.
- To unmark an item, scroll to it and select **Options**→ *Mark/Unmark*→ *Unmark* or press  and the **Scroll** key at the same time.

Create folders

To create a new folder, select **Options**→ *New folder*. You are asked to give a name to the folder (max. 35 letters).

Move items to a folder

To move items to a folder or between folders, select **Options**→ *Move to folder* (not shown if there are no folders available). When you select *Move to folder*, a list of available folders opens and you can also see the root level of the application (for moving an item out of a folder). Select the location you want the item to be moved to and press OK.

Search for items

You can search for a name, file, folder, or shortcut by using the search field. In some situations the search field is not visible automatically, and you can activate it by selecting **Options**→ *Find* or just by starting to key in letters.

- 1 To search for an item, start to key in text in the search field. The phone immediately starts to search for matches and moves the selection to the best match.



To make the search more accurate, key in more letters and the selection moves to the item that best matches the letters.

- 2 When the correct item is found, press  to open it.

● VOLUME CONTROL

When you have an active call or are listening to a sound, press  to increase or  to decrease the volume level.

● LOUDSPEAKER

Your phone has a loudspeaker for handsfree use. The loudspeaker allows you to speak and listen to the phone from a short distance without having to hold the phone to your ear. The loudspeaker can be used during a call, with sound applications, and when viewing multimedia messages. RealOne Player™ uses the loudspeaker by default when you watch a video. Using the loudspeaker makes it easier to use other applications during a call.


Voice volume icons:

 —for earpiece mode.

 —for loudspeaker mode.

ACTIVATE THE LOUDSPEAKER

To use the loudspeaker during an already active call, select **Options**→*Activate loudsp.* or press  **Loudsp..** A tone is played,  is shown in the navigation bar, and the volume indicator changes.



Volume indicators for earpiece and loudspeaker modes are shown in the navigation bar.



Note: The loudspeaker cannot be activated when you have a headset connected to the phone.



Important: Do not hold the phone near your ear when the loudspeaker is in use because the volume may be extremely loud.

The loudspeaker needs to be activated separately each time for phone calls, but the sound applications such as Composer and Recorder use the loudspeaker by default.

TURN OFF THE LOUDSPEAKER

When you have an active call or a sound is playing, select **Options**→*Activate handset* or press  **Handset**.

- **HEADSET**

To adjust the volume level when a headset is connected to your phone, press  or  or use the headset's keys.

- **SHARED MEMORY**

The following features in your phone use shared memory: contacts, text, text messages, multimedia messages, images and ringing tones, video recorder and player, calendar and to-do notes, and downloaded applications. Using any of these features leaves less memory for other features. This is especially true with heavy use of any of the features. For example, saving many images may take all of the shared memory and your phone may display that the memory is full. In this case, delete some of the information or entries reserving the shared memory.

3 Your phone



• MAKE A CALL

- 1 In the standby mode, key in the phone number, including the area code. Press or to move the cursor. Press to remove a number.

For international calls, press the * key twice for the international prefix (the + character replaces the international access code) and then key in the country code, the area code without 0, and the phone number.

To adjust the volume during a call, press to increase and to decrease the volume level.

Note: Calls described here as international may, in some cases, be made between regions of the same nation.

- 2 Press to call the number.
- 3 Press to end the call (or to cancel the call attempt).

Normal position: Hold the phone as you would hold any other telephone.

Note: Pressing will always end a call, even if another application is active and displayed on the display.

Make a call using the Contacts directory

- 1 To open the Contacts directory, go to **Menu**→ *Contacts*.
- 2 To find a contact, scroll to the desired name, or key in the first letters of the name. The Search field opens automatically and matching contacts are listed.
- 3 Press  to start the call.

If the contact has more than one phone number, scroll to the number and press  to start the call.



Call your voice mailbox

The voice mailbox (system service) is an answering machine where callers who are unable to reach you can leave you voice messages.

- To call your voice mailbox, press the **1** key and  in the standby mode.
- If the phone asks for the voice mailbox number, key it in and press **OK**. You can obtain this number from your service provider.

See also "Settings for call forwarding" on p. 27.

Each phone line may have its own voice mailbox number, see "Line in use (system service)" on p. 37.

If your voice mail requires you to enter a password every time you call to listen to your voice messages, you may want to add a touch tone number after the voice mailbox number. This way the password is given automatically every time you call your voice mail. For example, 1234567p1234# where 1234 is the password and 'p' inserts a pause.

Change the voice mailbox number

To change the phone number of your voice mailbox, go to **Menu**→ *Tools*→ *Voice mail* and select **Options**→ *Change number*. Key in the number (obtained from your service provider) and press **OK**.

1-touch dialing

To view the 1-touch dialing grid, go to **Menu**→ *Tools*→ *1-touch dial*.

- Assign a phone number to one of the 1-touch dialing keys (the **2–9** keys), see "Assign 1-touch dialing keys" on p. 57.
- To call the number: In the standby mode, press the corresponding 1-touch dialing key and . If the 1-touch dialing function is set to *On*, press and hold the corresponding 1-touch dialing key until the call is started.

Make a conference call

Conference calling is a system service that allows you to make a conference call with a maximum of six participants, including yourself.

- 1 Make a call to the first participant.
- 2 To make a call to a new participant, select **Options**→ *New call*.
- 3 Key in or search the memory for the phone number of the participant and press **OK**. The first call is automatically put on hold.
- 4 When the new call has been answered, join the first participant in the conference call. Select **Options**→ *Conference*.
- 5 To add a new person to the call, repeat step 2 and then select **Options**→ *Conference*→ *Add to conference*.
 - To have a private conversation with one of the participants: Select **Options**→ *Conference*→ *Private*. Scroll to the desired participant and press **Private**. The conference call is put on hold in your phone, and the other participants can still continue talking with each other while you have a private discussion with one participant only. Once you have finished the private conversation, select **Options**→ *Add to conference* to return to the conference call.
 - To drop one participant from the conference call, select **Options**→ *Conference*→ *Drop participant*; then scroll to the participant and press **Drop**.
- 6 To end the active conference call, press .

A conference call with two participants is shown.

The quickest way to make a new call is to dial the number and press  to start the call. The existing call is automatically put on hold.



• ANSWER A CALL

- To answer an incoming call, press .
- To end the call, press .

If you do not want to answer a call, press . The caller will be directed to voice mail.

 **Note:** If you have activated the Call forward → *If busy* function to forward calls, for example, to your voice mailbox, rejecting an incoming call will also forward the call. See "Settings for call forwarding" on p. 27.

When a call comes in, press  Silence to quickly mute the ringing tone. If you then want the call to be directed to voice mail, press  again for Decline.

To adjust the ringing tones for different environments and events, for example, when you want your phone to be silent, see "Profiles" on p. 109.

 **Note:** It is possible that the phone assigns a wrong name for the phone number. This happens if the phone number of the caller is not stored in Contacts but the seven last digits of the number match another number that is stored in Contacts. In this case, call identification is not correct.

Call waiting (system service)

If you have activated the Call waiting service, the system will notify you of a new incoming call while you have a call in progress. See "Call waiting (system service)" on p. 37.

- 1 During a call, press  to answer the waiting call. The first call is put on hold.
To switch between the two calls, press **Swap**.
- 2 To end the active call, press .

To end both calls at the same time, select **Options**→ *End all calls* and press **OK**.



Options during a call

Many options that you can use during a call are system services. Press **Options** during a call for some of the following options:

Mute or Unmute, End active call, End all calls, Hold or Unhold, Handset, BT handsfree, New call, Conference, Private, Drop participant, Answer, and Decline.

Swap is used to switch between the active call and the call on hold.

Transfer is used to connect an incoming call or a call on hold with an active call and to disconnect yourself from both calls.

Send touch tones is used to send touch tone strings, for example, passwords or bank account numbers.

- 1 Key in the digits with the **0–9** keys.

Each keystroke generates a touch tone, which is transmitted while the call is active. Press the ***** key repeatedly to produce: *****, **p** (inserts a pause of about two seconds before, or between touch tone characters.), and **w** (if you use this character, the remaining sequence is not sent until you press **Send** again during the call). Press the **#** key to produce **#**.

- 2 To send the tone, press **OK**.

You can also store a sequence of touch tones for a contact card. When you make a call to the contact, you can retrieve the sequence. Add touch tones to the phone number or **Touch tone** fields in a contact card.



Note: Touch tones are the tones you hear when you press the number keys on the phone keypad. Touch tones allow you to communicate with voice mailboxes and computerized telephony systems.

Settings for call forwarding

When call forwarding is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider.

Go to **Menu**→ *Tools*→ *Forward*.

- Select one of the forward options, for example, select *If busy* to forward voice calls when your number is busy or when you decline incoming calls.
- Select **Options**→ *Activate* to set the forward setting on, *Cancel* to set the forward setting off, or *Check status* to check whether the forward is activated or not.
- To cancel all active forwards, select **Options**→ *Cancel all forwards*.

For information about the forward indicators, see "Activity indicators" on p. 14.



Note: Rejection of incoming calls and call forwarding cannot be active at the same time. See "Call restriction (system service)" on p. 50.

• LOG—CALL LOG AND GENERAL LOG



Go to **Menu**→ *Log*.

In the log you can monitor phone calls, text messages, packet data connections, and fax and data calls registered by the phone. You can filter the log to view just one type of event and create new contact cards based on the log information.



Note: The Log does not track sent messages. To view a list of sent messages, go to **Messaging**→ *Sent*.



Note: Connections to your remote mailbox, multimedia messaging center, or browser pages are shown as data calls or packet data connections in the general communications log.

Recent calls log

Go to **Menu**→ *Log*→ *Recent calls*.

The phone registers the phone numbers of missed, received, and dialed calls. The phone registers missed and received calls only if the system supports these functions, and the phone is switched on and within the system's service area.

Options in the Missed, Received, Dialed views are: *Call, Use number, Delete, Clear list, Add to Contacts, Help, and Exit.*

Icons	
	for missed calls
	for received calls
	for dialed numbers

MISSED CALLS AND RECEIVED CALLS

To view the phone numbers of the last 20 missed calls, go to **Log**→ *Recent calls*→ *Missed calls*.

When you see a note in the standby mode about missed calls, press **Show** to access the list of missed calls. To call back, scroll to the number or name you want and press

To view a list of the 20 numbers or names from which you have most recently accepted calls (system service), go to **Log**→ *Recent calls*→ *Received calls*.

DIALED NUMBERS

Press  in the standby mode to open the Dialed numbers view.

To view the 20 phone numbers that you have most recently called or attempted to call, go to **Log**→ *Recent calls*→ *Dialed numbers*.

ERASING RECENT CALL LISTS

- To clear all recent call lists, select **Options**→ *Clear recent calls* in the Recent calls main view.
- To clear one of the call registers, open the log you want to erase and select **Options**→ *Clear list*.
- To clear an individual event, open a log, scroll to the event, and press .

Call timers

Go to **Menu**→ *Log*→ *Call timers*.

Allows you to view the duration of your incoming and outgoing calls. If you want the call duration timer to be displayed during your active calls, select **Log**→ *Call timers*, and then select **Options**→ *Settings*→ *Show call duration*→ *Yes*.



Note: Some timers, including the life timer, may be reset during service or software upgrades.


Erasing call duration timers—Select **Log**→ *Call timers*, and then select **Options**→ *Clear timers*. For this you need the lock code. See “Security” on p. 46. To clear an individual event, scroll to it and press .

Call costs (system service)

Go to **Log**→ *Call costs*.

Call costs allows you to check the cost of the last call or all calls. The call costs are displayed separately for each SIM card.

The actual invoice for calls and services from your service provider may vary, depending upon system features, rounding-off for billing, taxes, and so forth.

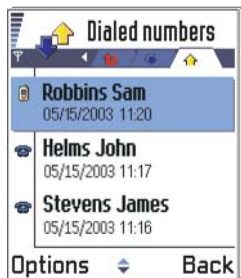

CALL COSTS LIMIT

Your service provider can limit the cost of your calls to a certain amount of charging units or units of currency. When the limited charging mode is active, calls can be made only as long as the preset credit limit (call cost limit) is not exceeded and you are in a system that supports call cost limit. The number of remaining units is shown during a call and in the standby mode. When the charging units have expired, the note *Call cost limit reached* is displayed. Contact your service provider for information on the limited charging mode and charging unit prices.

COST SHOWN AS CHARGING UNITS OR CURRENCY

You can set the phone to show the remaining talk-time in charging units or units of currency. For this, you may need the PIN2 code. See "Security" on p. 46.

- 1 Select **Options**→ *Settings*→ *Show costs in*. The options are *Currency* and *Units*.
- 2 If you choose *Currency*, a note requesting you to write the unit price is shown. Key in the cost of your home system charging or credit unit and press **OK**.
- 3 Write a name for the currency. Use a three-letter abbreviation, for example, USD.



Note: When no more charging units or currency units are left, calls may only be possible to the emergency number programmed into your phone (such as 911 or other official emergency numbers).

SET A CALL COST LIMIT

- 1 Select **Options**→ *Settings*→ *Call cost limit*→ *On*.
- 2 The phone requests you to enter the limit in units. For this you may need the PIN2 code. Depending on the *Show costs in* setting, enter either the amount of charging units or currency.

When the charging limit you have set yourself is reached, the counter stops at its maximum value and the note *Reset all calls' cost counter* is displayed. To be able to make calls, go to **Options**→ *Settings*→ *Call cost limit*→ *Off*. For this you need the PIN2 code. See "Security" on p. 46.



Note: The actual invoice for calls and services from your service provider may vary, depending upon system features, rounding-off for billing, taxes and so forth.

ERASE CALL COST COUNTERS

Select **Options**→ *Clear counters*. For this you need the PIN2 code. To clear an individual event, scroll to it and press

GPRS data counter

Go to **Log**→ *GPRS counter*.

Allows you to check the amount of data sent and received during packet data (GPRS) connections. Check with your service provider for information on how you will be charged.

View the general log

Go to **Menu**→ *Log* and press

In the general log, for each communication event, you can see the sender or recipient name, phone number, name of the service provider, or access point.



Note: Sub-events, such as a text message sent in more than one part and packet data connections, are logged as one communication event.


FILTER THE LOG

- 1 Select **Options**→ *Filter*. A list of filters opens.
- 2 Scroll to a filter and press **Select**.

You cannot get to the Filter option unless there are already calls in the log.

ERASE THE CONTENTS OF THE LOG

To permanently erase all the log contents, recent calls log, and messaging delivery reports permanently, select **Options**→ *Clear log*. Confirm by pressing **OK**.

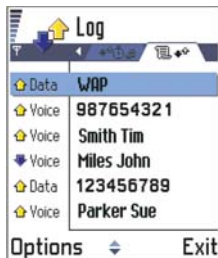

PACKET DATA COUNTER AND CONNECTION TIMER

To view how much data, measured in kilobytes, has been transferred and how long a certain GPRS connection has lasted, scroll to an Incoming or Outgoing event with the access point icon  and select **Options**→ *View details*.

Icons	
	for incoming
	for outgoing
	for missed communication events

LOG SETTINGS

Select **Options**→ *Settings*. The list of settings opens.

- *Log duration*—The log events remain in the phone memory for a set number of days after which they are automatically erased to free memory.

If you select *No log*, all the log contents, Recent calls log, and Messaging delivery reports are permanently deleted.

- For Call duration, Show costs in, Call cost limit, see "Call timers" on p. 29 and "Call costs (system service)" on p. 30.

• SIM FOLDER

Go to **Menu**→ *SIM*.

Your SIM card may provide additional services that you can access in this folder. See also "Copy between SIM card and phone memory" on p. 52, "Confirm SIM service actions" on p. 48, "Fixed dialing" on p. 47, and "View messages on a SIM card" on p. 101.

In the SIM directory, you can see the names and numbers stored on the SIM card, you can add or edit them, and you can make calls. To view the SIM directory, go to **Go to Menu**→ *SIM*→ *SIM direct*.

Options in the SIM directory are: *Open, Call, New SIM Contact, Edit, Delete, Mark/Unmark, Copy to Contacts, Own numbers, SIM details, Help, and Exit.*



Note: For availability, rates and information on using SIM services, contact your SIM card vendor, e.g. system operator, service provider, or other vendor.




4 Settings



• CHANGE GENERAL SETTINGS

Go to Menu→ *Tools*→ *Settings*.

- 1 Scroll to a setting group and press  to open it.
- 2 Scroll to a setting you want to change and press  to
 - switch between options if there are only two (**On/Off**).
 - open a list of options or an editor.
 - open a settings slider such as the Contrast setting. Press  or  to increase or decrease the value.

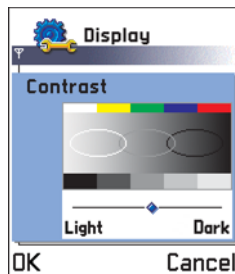

 **Note:** You may be able to receive some settings from your service provider in a text message.

• PHONE SETTINGS

General

Phone language—You can change the language for the display texts in your phone. This change will also affect the format used for date and time and the separators used, for example, in calculations. There are three languages installed in your phone. If you select *Automatic*, the phone selects the language according to the information on your SIM card. After you have changed the display text language, you must restart the phone.

 **Note:** Changing the settings for **Phone language** or **Writing language** affects every application in your phone and the change remains effective until you change these settings again.

Writing language—You can change the writing language of your phone permanently. Changing the language affects:

- The characters available when you press any key (**1–9**).
- The predictive text dictionary used.
- The special characters that are available when you press the ***** and the **1** keys.

You can also make this change in some of the editors. Press  and select **Writing language**.

Example: You are using a phone where the display texts are in English but you want to write all your messages in French. After you change the language, the predictive text dictionary searches for words in French and the most common special characters or punctuation marks used in the French language are available when you press the ***** and **1** keys.

Predictive text—Sets the predictive text input *On* or *Off* for all editors in the phone. You can also change this setting when you are in an editor by pressing  and selecting **Predictive text**→ *Predictive text on* or **Predictive text**→ *Off*.

 **Note:** The predictive text dictionary is not available for all languages.

Welcome note or logo—Press  to open the setting. The welcome note or logo is displayed briefly each time you switch on the phone. Select **Default** if you want to use the default image or animation. Select **Text** to write a welcome note (max. 50 letters). Select **Image** to select a photo or picture from Images.

Orig. phone settings—You can reset some of the settings to their original values. To do this, you need the lock code. After resetting the settings, the phone may take a longer time to power on.

 **Note:** All documents and files that you have created are left as they are.

Standby mode

Background image—You can select any image to be used as a background image in the standby mode. Select **Yes** to select an image from **Images**.

Left selection key and Right selection key—You can change the shortcuts that appear over the left  and right  selection keys in the standby mode. In addition to the applications, you can have the shortcut point to a function, for example, *New message*.

 **Note:** You cannot have a shortcut to an application that you have installed.

Display

Contrast—To change the contrast of the display to lighter or darker.

Color palette—To change the color palette used on the display.

Screen saver timeout—The screen saver is activated when the screen saver time-out period is over. When the screen saver is active, the display is cleared and you can see the screen saver bar.

To deactivate the screen saver press any key.

Screen saver—Select what is shown on the screen saver bar: time and date or a text you have written yourself. The location and background color of the screen saver bar changes in one minute intervals. Also, the screen saver changes to indicate the number of new messages or missed calls.



• CALL SETTINGS

 **Note:** To change the settings for call forwarding, see "Settings for call forwarding" on p. 27.

Send my caller ID

This system service allows you to set your phone number to be displayed (**Yes**) or hidden (**No**) from the person to whom you are calling. Or, the value may be set by your service provider when you make a subscription (default).

Call waiting (system service)

The system will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the system to activate call waiting, **Cancel** to request the system to deactivate call waiting, or **Check status** to check if the function is active or not.

Automatic redial

When this setting is activated, your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt.

Press  to stop automatic redialing.

Summary after call

Activate this setting if you want the phone to briefly display the duration and cost of the last call. To show costs, the Call cost limit must be activated for your SIM card.

1-touch dialing

Select **On**, and the numbers assigned to the 1-touch dialing keys (2–9) can be dialed by pressing and holding the key.

Anykey answer

Select **On**, and you can answer an incoming call by briefly pressing any key except , , and .

Line in use (system service)

This setting is shown only if the SIM card supports two subscriber numbers, that is, two phone lines. Select which phone line (Line 1 or Line 2) you want to use for making calls and sending text messages. Calls on both lines can be answered irrespective of the selected line.

 **Note:** You will not be able to make calls if you select *Line 2* and have not subscribed to this system service.

To prevent line selection, select **Line change**→ *Disable* if supported by your SIM card. To change this setting, you need the PIN2 code.

To switch between the phone lines, press and hold the # key in the standby mode.

Voice message indicators:

, , or  is shown if you have one or more voice messages.

• CONNECTION SETTINGS

Data connections and access points

To define settings for access points, go to **Settings**→ *Connection settings*→ *Access points*.

A data connection is required to connect to an access point. Your phone supports three kinds of data connections:

- GSM data call ()
- GSM high-speed data call ()
- Packet data (GPRS) connection ()

There are three different kinds of access points that you can define: MMS access point, browser access point, and Internet access point (IAP). Check with your service provider for the kind of access point needed for the service you wish to access. You need to define access point settings, if you want to perform the following actions:

- Send and receive multimedia messages
- Send and receive e-mail
- Browse pages
- Download Java applications
- Use Image upload
- Use your phone as a modem



Note: Access point—The point where your phone connects to the Internet by way of a data call or packet data connection. An access point can be provided, for example, by a commercial Internet service provider (ISP), or service provider. For more information, see "Access points" on p. 40.

GSM DATA CALLS

A GSM data call enables data transmission rates to a maximum of 14.4 kb/s. For availability and subscription to data services, contact your service provider.

Minimum settings needed to make a data call

To insert a set of basic GSM data call settings, go to **Settings**→ *Connection*→ *Access points* and select **Options**→ *New access point*. Fill in the following:

- *Data bearer: GSM data*
- *Dial-up number: User defined*
- *Session mode: Permanent*
- *Data call type: Analog*
- *Maximum data speed: Automatic*

See "Access points" on p. 40 for further information on how to create, delete, and edit an access point.

High-speed data call (High-Speed Circuit Switched Data, HSCSD)

High-speed data enables data transmission rates to a maximum of 43.2 kb/s, which is three times faster than the standard data rates of the GSM system. HSCSD is comparable to the speed of many computer modems that communicate with today's fixed telephone systems.

For availability and subscription to high-speed data services, please contact your service provider.



Note: Sending data in HSCSD mode may drain the phone's battery faster than normal voice or data calls, as the phone may send data more frequently to the system.

The Settings wizard program included in the PC Suite can help you configure access point and mailbox settings. You can also copy existing settings, for example, from your computer to your phone. See the CD-ROM supplied in the sales package.

GPRS PACKET DATA

Packet data, or General Packet Radio Service (GPRS), uses packet data technology where information is sent in short bursts of data over the mobile system. The benefit of sending data in packets is that the system

is occupied only when sending or receiving data. Because GPRS uses the system efficiently, it allows for quick data connection set up and fast data transmission speeds.

Minimum settings needed to make a packet data connection

- You need to subscribe to the GPRS service. For availability and subscription to GPRS, contact your service provider.
- Go to **Settings**→ *Connection settings*→ *Access points* and select **Options**→ *New access point*. Fill in the following: *Data bearer*: **GPRS** and *Access point name*: enter the name given to you by your service provider. See "Create an access point" on p. 40 for further information.

Pricing for packet data and applications


Both the active GPRS connection and the applications used over GPRS require a fee (for example, using services, sending and receiving data, and text messages). For more detailed information on fees, contact your service provider.

• ACCESS POINTS

Create an access point

Options in the Access points list are: *Edit*, *New access point*, *Delete*, *Help*, and *Exit*.

You may have preset access point settings in your Nokia mobile phone. Or, you may receive access point settings in a smart message from a service provider.

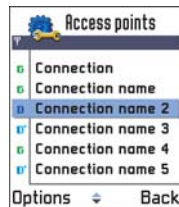

If no access points are defined when you open *Access points*, you will be asked if you want to create one.

If access points are defined, to create a new access point, select **Options**→ *New access point* and select:

- *Use default settings* to use the default settings. Make the needed changes and press **Back** to save the settings.

- *Use existing settings* to use existing setting information as the basis for the new access point settings. A list of existing access points is opened. Select one and press **OK**. Access point settings are opened with some fields already filled.

Delete an access point

In the list of access points, scroll to the access point you want to remove and select **Options**→ *Delete*.

Edit an access point

When you open Access points, the list of already available access points opens. Scroll to the access point you want to edit, and press .

Options when editing access point settings are: *Change, Advanced settings, Help, and Exit.*

Here you can see a short explanation for every setting that may be needed for different data connections and access points.



Note: Start entering settings on **Connection name** and go down the list from there because depending on which data connection you select (**Data bearer**) or whether you need to insert a Gateway IP address, only certain setting fields are available.



Note: Follow the instructions given to you by your service provider very carefully.

Connection name—Give a descriptive name for the connection.

Data bearer—The options are GSM data, High speed GSM, and GPRS.

Depending on what data connection you select, only certain setting fields are available. Fill in all fields marked with **Must be defined**, or marked with a red asterisk. Other fields can be left empty, unless you have been instructed otherwise by your service provider.

See also "Settings for multimedia messages" on p. 103, "Settings for e-mail" on p. 105, and "Phone browser service settings" on p. 129.



Note: To use a data connection, the system service provider must support this feature, and if necessary, activate it for your SIM card.

Access point name (for packet data only)—The access point name is needed to establish a connection to the GPRS system. You obtain the access point name from your service provider.

Dial-up number (for GSM data and high-speed data only)—The modem telephone number of the access point.

User name—Write a user name if required by the service provider. The user name may be needed to make a data connection, and is usually provided by the service provider. The user name is often case-sensitive.

When you are writing, press the * key to open the special characters table. Press the 0 key to enter a space.

Prompt password—If you must key in a new password every time you log on to a server, or if you do not want to save your password to the phone, choose Yes.

Password—A password may be needed to make a data connection, and is usually provided by the service provider. The password is often case-sensitive. When you are writing the password, the characters you enter are shown briefly and then changed to asterisks (*). The easiest way to enter numbers is to press  and select **Insert number** and then continue entering letters.

Authentication—Normal / Secure.

Gateway IP address—The IP address used by required browser gateway.

Homepage—Depending on what you are setting up, enter one of the following:

- the service address
- the address of the multimedia messaging center

 **Note:** ISDN connections are a way to establish a data call between your phone and your access point. ISDN connections are digital from end to end and as such offer quicker set-up times and faster data rates than analog connections. In order to use an ISDN connection, both your service provider and your Internet service provider must support it.

Connection security—Choose whether Transport Layer Security (TLS) is used for the connection. Follow the instructions from your service provider.

Session mode—Permanent / Temporary.

Data call type (for GSM data and high-speed data only)—Analog, ISDN v.110, or ISDN v.120 defines whether the phone uses an analog or digital connection. This setting depends on both your GSM service provider and Internet Service Provider (ISP), because some GSM systems do not support certain types of ISDN connections. For details, contact your ISP. If ISDN connections are available, they establish connections more quickly than analog methods.

Maximum data speed (for GSM data and high-speed data only)—The options are *Automatic / 9600 / 14400 / 19200 / 28800 / 38400 / 43200*, depending on what you have chosen in Session mode and Data call type. This option allows you to limit the maximum connection speed when high-speed data is used. Higher data rates may cost more, depending on the system service provider.

 **Note:** The speeds above represent the maximum speed at which your connection will operate. During the connection, the operating speed may be less, depending on system conditions.

 **Note:** **DNS**—Domain Name Service. An Internet service that translates domain names such as **www.nokia.com** into IP addresses like **192.100.124.195**.

Options → *Advanced settings*

Phone IP address—The IP address of your phone.

Primary name server—The IP address of the primary DNS server.

Second name server—The IP address of the secondary DNS server.

 **Note:** If you need to enter the Phone IP address, Primary name server, or Second name server, contact your Internet service provider to obtain these addresses.

The following settings are shown if you have selected data call and high-speed data as the connection type:

Use callback—This option allows a server to call you back once you have made the initial call, so you have a connection without paying for the call. Contact your service provider to subscribe to this service.

 **Note:** Charges may apply for certain types of received calls, such as roaming and high-speed data calls. Contact your GSM service provider for more information.

 **Note:** The phone expects the callback call to use the same data call settings that were used in the callback-requesting call. The system must support this type of call in both directions, to and from the phone.

Callback type—The options are *Use server no.* / *Use other no.* Ask your service provider for the correct setting; it will depend on the service provider's configuration.

Callback number—Key in your phone's data phone number which the dial back server uses. Usually, this number is the data call phone number of your phone.

Use PPP compression—When set to *Yes*, this option speeds up the data transfer, if supported by the remote PPP server. If you have problems with establishing a connection, try setting this to *No*. Contact your service provider for guidance.

 **Note:** PPP (Point-to-Point Protocol)—a common networking software protocol that enables any computer with a modem and a phone line to connect directly to the Internet.

Use login script—The options are *Yes* / *No*.

Login script—Insert the login script.

Modem initialization—(Modem initialization string)—Controls your phone using modem AT commands. If required, enter characters specified by your GSM system service provider or Internet service provider.

GPRS

Go to **Settings**→ *Connection settings*→ *GPRS*.

The GPRS settings affect all access points using a packet data connection.

GPRS connection—If you select *When available* and you are in a system that supports packet data, the phone registers to the GPRS system and sending text messages will be done using GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select *When needed*, the phone will use a packet data connection only if you start an application or action that needs it. The GPRS connection is closed after it is not used by any application.



Note: If there is no GPRS coverage and you have chosen *When available*, the phone will periodically try to establish a packet data connection.

Access point—The access point name is needed when you want to use your phone as a packet data modem to your computer.

Data call

Go to **Settings**→ *Connection settings*→ *Data call*.

The Data call settings affect all access points using a data call and high-speed data call.

Online time—If there are no actions the data call is dropped automatically after a time-out period. The options are *User defined*, in which case you enter a time, or *Unlimited*.

• DATE AND TIME

The date and time settings allow you to define the date and time used in your phone, as well as change the date and time format and separators. Choose **Clock type**→ *Analog* or *Digital* to change the clock shown in the standby mode. Choose *Auto time update* if you want the mobile phone system to update time, date, and time zone information to your phone (system service).

For the Auto time update setting to take effect, the phone needs to be restarted.

• SECURITY

Phone and SIM

Explanations for the different security codes that may be needed:

- **PIN code (4 to 8 digits)**—The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. After three consecutive incorrect PIN code entries, the PIN code is blocked. If the PIN code is blocked, you need to unblock the PIN code before you can use the SIM card again. See the information about the PUK code.
- **PIN2 code (4 to 8 digits)**—The PIN2 code, supplied with some SIM cards, is required to access some functions, such as call cost counters.
- **Lock code (5 digits)**—The lock code can be used to lock the phone and keypad to avoid unauthorized use.



Note: The factory setting for the lock code is **12345**. To avoid unauthorized use of your phone, change the lock code. Keep the new code secret and in a safe place separate from your phone.

- **PUK and PUK2 codes (8 digits)**—The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code. If the codes are not supplied with the SIM card, contact the operator whose SIM card is in your phone for the codes.

You can change the following codes: lock code, PIN code, and PIN2 code. These codes can only include the numbers from **0** to **9**.



Note: Avoid using access codes similar to the emergency numbers, such as 911, to prevent accidental dialing of the emergency number.

PIN code request—When the PIN code request is active, the code is requested each time the phone is switched on. Note that deactivating the PIN code request may not be allowed by some SIM cards.

PIN code / PIN2 code / Lock code—Open this setting if you want to change the code.

To lock the phone manually, press . A list of commands opens. Select *Lock phone*.

Autolock period—You can set an autolock period, a time-out after which the phone is automatically locked and can be used only if the correct lock code is entered. Key in a number for the time-out in minutes or select *None* to turn off the autolock period. To unlock the phone, key in the lock code.

 **Note:** When the phone is locked, calls may be possible to the emergency number programed into your phone (e.g. 911 or other official emergency number).

Lock if SIM changed—Select *Yes* if you want the phone to ask for the lock code when an unknown, new SIM card is inserted into your phone. The phone maintains a list of SIM cards that are recognized as the owner's cards.

Fixed dialing—You can restrict your outgoing calls to selected phone numbers, if supported by your SIM card. You need the PIN2 code for this function. When this function is active, you can only call those phone numbers that are included in the fixed dialing list or which begin with the same digit(s) as a phone number on the list.

To view the list of Fixed dialing numbers, go to **Menu**→ *SIM*→ *Fixed dialing*.

Options in the Fixed dialing view are:

Open, Call, New contact, Edit, Delete, Add to Contacts, Add from Contacts, Help and Exit.

 **Note:** When Fixed Dialing is set on, calls may be possible to certain emergency numbers programmed into your phone (911 or other official emergency numbers).

To add new numbers to the Fixed dialing list, select **Options**→ *New contact* or *Add from Contacts*.

Closed user group (system service)—You can specify a group of people to whom you can call and who can call you. For more information, contact your service provider. Select *Default* to activate the default group agreed

on with the service provider, On if you want to use another group (you need to know the group index number), or Off.



Note: When calls are limited to Closed User Groups, calls may be possible to certain emergency numbers programmed into your phone (911 or other official emergency numbers).

Confirm SIM services (network service)—You can set the phone to display confirmation messages when you are using a SIM card service.

Certificate management

In the Certificate management main view, you can see a list of authority certificates that have been stored in your phone. To manage certificates, go to **Menu**→ *Settings*→ *Security*→ *Certif. management*. Press  to see a list of user certificates, if available.

Options in the certificate management main view are:

Certificate details, Delete, Trust settings, Mark/Unmark, Help, and Exit.

Digital certificates are used to verify the origin of browser pages and installed software. However, they can only be trusted if the origin of the certificate is known to be authentic.

Digital certificates are needed if you want to:

- Connect to an online bank, another site, or remote server for actions that involve transferring confidential information.
- Minimize the risk of viruses or other malicious software and be sure of the authenticity of software when downloading and installing software.

Authority certificates are used by some services, such as banking services, for checking signatures or server certificates or other authority certificates. User certificates are issued to users by a Certifying Authority.



Important: Although the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available.

VIEWING CERTIFICATE DETAILS—CHECKING AUTHENTICITY

You can only be sure of the correct identity of a browser gateway or a server when the signature and the period of validity of a browser gateway or server certificate have been checked.

You will be notified on the phone's display:

- If the identity of the browser server or gateway is not authentic.
- If you do not have the correct security certificate in your phone.

To check certificate details, scroll to a certificate and select **Options**→*Certificate details*. When you open certificate details, Certificate management checks the validity of the certificate and one of the following notes may appear:

- **Certificate not trusted**—You have not set any application to use the certificate. For more information, see "Change the trust settings of an authority certificate" on p. 50.
- **Expired certificate**—The period of validity has ended for the selected certificate.
- **Certificate not valid yet**—The period of validity has not yet begun for the selected certificate.
- **Certificate corrupted**—The certificate cannot be used. Contact the certificate issuer.



Important: Certificates have a restricted lifetime. If *Expired certificate* or *Certificate not valid yet* is shown even if the certificate should be valid, check that the current date and time in your phone are correct.

CHANGE THE TRUST SETTINGS OF AN AUTHORITY CERTIFICATE

Scroll to an authority certificate and select **Options**→ *Trust settings*. Depending on the certificate, a list of the applications that can use the selected certificate is shown. For example:

Services / Yes—the certificate is able to certify sites.

Application manager / Yes—the certificate is able to certify the origin of new software.

Internet / Yes—the certificate is able to certify e-mail and imaging servers.



Important: Before changing these settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

• CALL RESTRICTION (SYSTEM SERVICE)

Call restriction allows you to restrict the making and receiving of calls with your phone. For this function, get the restriction password from your service provider.

- 1 Scroll to one of the restriction options.
- 2 Select **Options**→ *Activate* to request the system to set call restriction on, *Cancel* to set the selected call restriction off, or *Check status* to check if the calls are restricted or not.
 - Select **Options**→ *Edit restriction passw.* to change the restriction password.
 - Select **Options**→ *Cancel all restrictions* to cancel all active call restrictions.



Note: When calls are restricted, calls may be possible to certain emergency numbers programmed into your phone (911 or other official emergency numbers). Call restricting affects all calls, including data calls. You cannot have restriction of incoming calls and call forwarding or fixed dialing active at the same time.

• SYSTEM

System selection

Choose **Automatic** to set the phone to automatically search for and select one of the cellular systems available in your area, or

Choose **Manual** if you want to select the desired system manually from a list of systems. If the connection to the manually selected system is lost, the phone will sound an error tone and ask you to select a system again. The selected system must have a roaming agreement with your home system, that is, the operator whose SIM card is in your phone.



Note: Roaming agreement—An agreement between two or more system service providers to enable the users of one service provider to use the services of other service providers.

Cell info display

Select **On** to set the phone to indicate when it is used in a cellular system based on Micro Cellular Network (MCN) technology and to activate cell info reception.

• ACCESSORY SETTINGS

Scroll to an accessory folder and open the settings:

- Select **Default profile** to select the profile you want to be activated each time when you connect a certain accessory to your phone.
- Select **Automatic answer** to set the phone to answer an incoming call automatically after five seconds time. If the **Ringing** option is set to **Beep once** or **Silent**, automatic answer cannot be in use.

If you are using a Loopset or a Phone Adapter, you need to activate it separately. Select **Menu**→ **Tools**→ **Settings**→ **Accessory**→ **Accessory in use**→ **Headset/Loopset/TTY**. If you have activated a Loopset, the headset will use the same settings as the Loopset. For more information, see "Accessories" on p. 170.

5 Contacts

To open Contacts, press  in the standby mode or go to **Menu**→ *Contacts*.


In Contacts, you can store and manage contact information, such as names, phone numbers, and addresses. Contacts use shared memory. See "Shared memory" on p. 21.

You can also add a personal ringing tone, voice tag, or a thumbnail image to a contact card. You can create contact groups, which allow you to send text messages or e-mail to many recipients at the same time.



• CREATE CONTACT CARDS

- 1 Open Contacts and select **Options**→ *New contact*. An empty contact card opens.
- 2 Fill in the fields you want and press **Done**. The contact card is saved and closed, and appears in the Contacts directory.

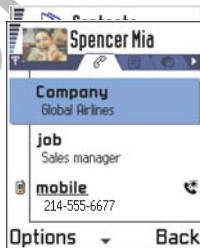

• COPY BETWEEN SIM CARD AND PHONE MEMORY

- To copy names and numbers from a SIM card to your phone, go to **Menu**→ *SIM*→ *SIM directory*. Select the name(s) you want to copy and select **Options**→ *Copy to Contacts*.
- If you want to copy a phone, fax, or pager number from Contacts to your SIM card, go to Contacts, open a contact card, scroll to the number, and select **Options**→ *Copy to SIM direct*.

• EDIT CONTACT CARDS

Options in the Contacts directory are: *Open, Call, Create message, New contact, Edit, Delete, Duplicate, Add to group, Belongs to groups, Mark/Unmark, Send business card, Contacts info, Help, and Exit.*

Options when editing a contact card are:

Add thumbnail / Remove thumbnail, Add detail, Delete detail, Edit label, Help, and Exit.

- 1 In the Contacts directory, scroll to the contact card you want to edit and press  to open it.
- 2 To change the information on the card, select **Options**→ *Edit*.
- 3 To save your changes and to return to the contact card view, press **Done**.

Delete contact cards

In the Contacts directory, scroll to the contact card you want to delete and select **Options**→ *Delete*.

To delete many contact cards

- 1 Mark the cards to be deleted. Scroll to a contact you want to delete and select **Options**→ *Mark*. A check mark is placed next to the contact card.
- 2 When you have marked all the contacts you want to delete, select **Options**→ *Delete*.

You can also mark many items if you press and hold  and simultaneously press . See also "Actions common to all applications" on p. 18.

Add and remove contact card fields

- 1 Open a contact card and select **Options**→ *Edit*.
- 2 To add an extra field, select **Options**→ *Add detail*.
To delete a field you do not need, select **Options**→ *Delete detail*.
To rename a contact card field label, select **Options**→ *Edit label*.

Add a picture to a contact card

There are two different types of pictures you can add to a contact card. See "Camera and images" on p. 61 for more information on how to take and store pictures.

- To attach a small thumbnail image to a contact card, open a contact card, select **Options**→ *Edit* and then select **Options**→ *Add thumbnail*. The thumbnail image is also shown when the contact is calling you.



Note: After you attach a thumbnail image to a contact card, you can select *Add thumbnail* to replace the image with a different thumbnail or *Remove thumbnail* to remove the thumbnail from the contact card.

- To add an image to a contact card, open a contact card, and press  to open the image view (). To attach an image, select **Options**→ *Add image*.

VIEW A CONTACT CARD

Contact information view () shows all information inserted in the contact card. Press



to open the Image view ().

Only fields that have information are displayed in the contact information view. Select **Options**→ *Edit* if you want to see all fields and add more data to the contact.



Options when viewing a contact card (when the selection is on a phone number) are: *Call, Create message, Edit, Delete, Defaults, Add voice tag / Voice tags, Assign 1-touch dial / Remove 1-touch dial, Ringing tone, Copy to SIM direct., Send business card, Help, and Exit.*

Assign default numbers and addresses

If a contact has several phone numbers or e-mail addresses, to speed up calling and sending messages, you can define certain numbers and addresses to be used as the default.

Open a contact card and select **Options**→ *Defaults*. A pop-up window opens, listing the different options.

Example: Scroll to *Phone number* and press **Assign**. A list of phone numbers in the selected contact card is shown. Scroll to the one you want to have as the default and press . When you return to the contact card view, you can see the default number underlined.

Voice dialing

You can make a phone call by saying a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice dialing, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.

Example: You can use a person's name for a voice tag, for example, "John's cell".



Note: You must say the name exactly as you said it when you recorded it. This may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

ADD A VOICE TAG TO A PHONE NUMBER

Voice tags can be any spoken words, for example, a person's first name. Voice tags allow you to make phone calls by simply saying the word aloud.

You can have only one voice tag per contact card. Voice tags can only be added to phone numbers stored in phone memory. See "Copy between SIM card and phone memory" on p. 52.

- 1 In the Contacts directory, scroll to the contact to which you want to add a voice tag and press  to open the contact card.

- 2 Scroll to the number to which you want to add the voice tag and select **Options**→ *Add voice tag*.

Press Start, then speak after tone is displayed.

- 3 Press **Start** to record a voice tag. The phone sounds a starting tone and *Speak now* is displayed.

When recording, hold the phone a short distance from your mouth. After the starting tone, say clearly the word(s) you want to record as a voice tag.

- 4 After recording, the phone plays the recorded tag and *Playing voice tag* is displayed. If you do not want to save the recording, press **Quit**.
- 5 When the voice tag has been successfully saved, *Voice tag saved* is displayed and a beep sounds. A symbol  can be seen next to the number in the contact card.

 **Note:** Your phone may have 30 phone numbers to which voice tags are attached. If the memory becomes full, delete some of the voice tags.

To view a list of voice tags you have defined, select **Options**→ *Contacts info*→ *Voice tags* in the Contacts directory.

MAKE A CALL BY SAYING A VOICE TAG

 **Note:** You must say the voice tag exactly as you said it when you recorded it.

- 1 In the standby mode, press and hold . A short tone is played and the note *Speak now* is displayed.
- 2 When you are making a call by saying a voice tag, the loudspeaker is in use. Hold the phone at a short distance away from your mouth and face and say the voice tag clearly.
- 3 The phone plays the original voice tag, displays the name and number, and after 1.5 seconds dials the number of the recognized voice tag.

If the phone plays the wrong voice tag or to retry voice dialing, press **Retry**.



Note: When an application using a data call or GPRS connection is sending or receiving data, you cannot make a call by using voice dialing. To make a call by using a voice tag, end all active data connections.

REPLAY, ERASE, OR CHANGE A VOICE TAG

- 1 To replay, erase, or change a voice tag, open the Contacts directory and select **Options**→ *Contacts info*→ *Voice tags*.

A list of contacts with voice tags is displayed.

- 2 Scroll to a contact, select **Options**, and then select one of the following:
Playback to listen to the voice tag again.


Delete to erase the voice tag.

Change to record a new voice tag instead of the old one. Press Start to record.

Assign 1-touch dialing keys

1-touch dialing is a quick way to call frequently used numbers. You can assign 1-touch dialing keys to eight phone numbers. Number 1 is reserved for the voice mailbox.

- 1 Open the contact card for which you want a 1-touch dialing key and select **Options**→ *Assign 1-touch no.* The 1-touch dialing grid opens, showing you the numbers from 1–9.
- 2 Scroll to a number and press **Assign**. When you return to the contact information view, you can see the 1-touch dial icon next to the number.

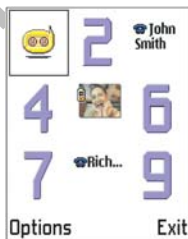

To call the contact by 1-touch dialing, go to the standby mode and press the 1-touch dialing key and .

Add a ringing tone for a contact card or group

You can set a ringing tone for each contact card and group. When that contact or group member calls you, the phone plays the chosen ringing tone (if the caller's telephone number is sent with the call and your phone recognizes it).

- 1 Press  to open a contact card or go to the Groups list and select a contact group.
- 2 Select **Options**→ *Ringing tone*. A list of ringing tones opens.
- 3 Use the scroll key to select the ringing tone you wish to use for the contact or group and press **Select**.

To remove the ringing tone, select *No personal tone* from the list of ringing tones.

 **Note:** For an individual contact, the phone will always use the ringing tone that was assigned last. So, if you first change a group ringing tone and then the ringing tone of a single contact that belongs to that group, the ringing tone of the single contact will be used when the contact calls you the next time.

To listen to a ringing tone, go to Recorder.

Send contact information

You can send contact information through text message, e-mail, Bluetooth connection, or infrared connection.

- 1 In the Contacts directory, scroll to the card you want to send.
- 2 Select **Options**→ *Send* then select the method; the choices are: *Via text message*, *Via e-mail* (available only if the correct e-mail settings are in place), *Via Bluetooth*, or *Via Infrared*.

For further information, see the 'Messaging' chapter, "Send and receive data using infrared" on p. 151, and "Send data using Bluetooth connection" on p. 146.

You can add received contact cards to your Contacts directory. See "Receive smart messages" on p. 92 for further information.



Note: When you send or receive contact information, the term 'business card' is used. A business card is a contact card in a format suitable to be sent in a text message, usually in 'vCard' format.

• MANAGE CONTACT GROUPS

Options in the Groups list view are: *Open, New group, Delete, Rename, Ringing tone, Contacts info, Help, and Exit.*

You can create contact groups that can, for example, be used as distribution lists for sending text messages and e-mail. See "Add a ringing tone for a contact card or group" on p. 58.

Create contact groups

- 1 In the Contacts directory, press  to open the Groups list.
- 2 Select **Options**→ *New group*.
- 3 Write a name for the group or use the default name *Group* and press OK.

Add members to a group

- 1 In the Contacts directory, scroll to the contact you want to add to a group and select **Options**→ *Add to group*. A list of available groups opens.
- 2 Scroll to the group to which you want to add the contact and press .



ADD MULTIPLE MEMBERS AT A TIME

- 1 In the Groups list, open a group and select **Options**→ *Add members*.
- 2 Scroll to a contact and press  to mark it. Repeat this action on all the contacts you want to add and press OK to add them to the selected group.

Remove members from a group

- 1 Go to the Groups list, scroll to the group you want to modify, and press .
- 2 Scroll to the contact you want to remove and select **Options**→
Remove from group.
- 3 Press **Yes** to remove the contact from the group.

• IMPORT DATA FROM OTHER NOKIA PHONES


You can move calendar, contacts, and to-do data from many different Nokia phones to your Nokia 3620 or Nokia 3660 using the PC Suite Data Import application. Instructions for using the application can be found in the PC Suite online help on the CD-ROM.

6 Camera and images



With the camera you can take pictures of people or events while on the move. The pictures are automatically saved in the Images application, where you can rename them and organize them in folders. You can also send photos to your friends in a multimedia message, as an e-mail attachment, or through a Bluetooth or infrared connection. The camera produces JPEG pictures.

Press **Camera** in the standby mode or go to **Menu**→ *Camera*.

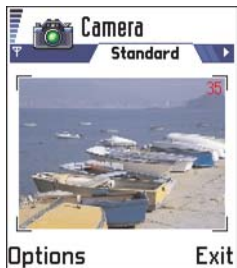

Options before taking a picture are: *Capture, Go to Images, Settings, Help, and Exit.*



Note: JPEG is a standardized image compression format. JPEG files can be viewed with the most common image viewers, image editors, and Internet browsers. You can recognize these files by their *.jpg extension, for example, *boats.jpg*

• TAKE PICTURES



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

- 1 Press **Camera** in the standby mode. The Camera application opens and you can see the view to be captured.

You can see the viewfinder and the cropping lines, which show you the image area to be captured. You can also see the image counter, which shows you how many images, depending on the selected image quality, fit in the memory of your phone.

- 2 To take a picture, press .



Note: Do not move the phone before the Camera application starts to save the photo. The photos are saved automatically in the Images application. The Camera goes into battery saving mode within a minute if there have been no key presses. To continue taking pictures, press .

After the image has been saved:

- If you do not want to save the photo in Images, select **Options**→ *Delete*.
- To return to the viewfinder to take a new picture, press .

Options after a picture has been taken are: *New image, Delete, Send, Rename image, Go to Images, Settings, Help, and Exit.*



Important: Obey all local laws governing the taking of pictures. Do not use this feature illegally.

Settings

In the Camera application settings, you can adjust the image quality setting and change the default image name.

- 1 Select **Options**→ *Settings*.
- 2 Scroll to the setting you want to change:
 - *Image quality*—*High, Normal, and Basic*. The better the image quality, the more memory the image consumes. See also "Images and memory consumption" on p. 64.
 - *Default image name*—By default, the Camera names photos in the JPEG format (for example, 'Image.jpg'). *Default image name* allows you to set a name for the pictures taken.
 - *Memory in use*—Select whether you want to store your images in the phone memory or the memory card, if you use one.

Example: If you set 'Beach' as the default image name, Camera will name all the pictures you take 'Beach', 'Beach(01)', 'Beach(02)', and so on, until you change the setting.

Camera modes

With the different Camera modes, you can affect the size and orientation of the picture to be taken. When you are taking a picture, press  or  to change between the different modes. Choose:

- **Standard** when you want to take normal landscape pictures.
- **Portrait** when you want to take a smaller icon-sized, vertical picture, which can be added to a contact card.
- **Night** when the lighting is dim and the Camera needs a longer exposure time for the picture to be of good quality. Note that, in dim conditions, any movement while taking a picture may cause it to get blurred. The image size and orientation is the same for Standard and Night.

Try out the different Camera modes to see how they affect the picture taken.



IMAGE RESOLUTIONS

- When you are taking a picture in Standard or Night mode, the viewfinder resolution is 160x120 pixels and 80x96 for Portrait mode.
- The images taken in Standard or Night mode are saved in 640x480 pixel (VGA) format and those taken in Portrait mode are saved in 80x96 pixel format.

- When you are viewing images, they are scaled to fit the display, which has 176x208 pixels. This means that Standard and Night mode pictures will appear more detailed when viewed on a higher resolution screen, for example, a computer or when zoomed in Images.



Note: Resolution—A measure for the sharpness and clarity of an image. Resolution refers to the number of dots (pixels) in an image or a display. The more pixels there are, the more detailed the picture is. Resolution is usually measured in pixels, for example, 640x480=300 kilopixels (kpix)=0.3 megapixels (Mpix).

IMAGES AND MEMORY CONSUMPTION

Your phone has approximately 3 MB (megabytes) of free memory for images, contact information, calendar, messages, and so on. See "Shared memory" on p. 21. Portrait images (always taken in High quality) are so small that they take up very little memory. Images taken using the High quality setting and those taken in Night mode take up the most memory.

If 1 MB of memory is used for images only, it would fit approximately 22 Normal quality images taken in Standard mode. In the table below, you can see approximately how many images would fit in 1 MB of memory.

Image quality Image type	Basic	Normal	High
Standard	55	22	15
Night	50	25	18
Portrait	-	-	>300

By using a memory card with your phone you can increase the number of images you can store. To see how much memory is available on your phone and memory card, see "Check memory consumption" on p. 127.

• STORE PICTURES IN IMAGES

Go to **Menu**→ *Images*.

Images allows you to view, organize, delete, and send photos and pictures stored in your phone.

In Images you can organize photos:

- Taken with the camera.
- Sent to your Inbox in a multimedia or a picture message, as an e-mail attachment, through an infrared or Bluetooth connection. After receiving the image in Inbox, you need to save it in Images.

In the Images main view, you can see a list of photos and folders. The list shows:

- The date and time a photo or an image was taken or saved.
- A small thumbnail picture, a preview of the image.
- The number of images inside a folder.
- A tab showing whether the photos or folders are located in the phone's memory or the memory card, if you use one.

Options in Images are: *Open, Send, Image uploader, Delete, Move to folder, New folder, Mark/Unmark, Rename, Receive via infrared* (only from a digital camera that supports the IrTran-P protocol, otherwise use the Infrared application, see "Send and receive data using infrared" on p. 151), *View details, Add to Favorites, Help, and Exit*.

View images



Note: When you open **Images** and you use a memory card, the starting tab is determined by which memory is selected as the Memory in use.



- 1 Press  or  to move from one memory tab to another.
- 2 To browse the images, press  and .
- 3 Press  to open an image. When the image is open, you can see the name of the image and the number of images in the folder on the top of the display.

When you are viewing an image, pressing  or  takes you to the next or previous picture in the current folder.

You can view animated GIF files in the same way as other images. Animations are played only once. When an animation stops, you will see a fixed image. To view the animation again, you must close it and then reopen it.

Options when viewing an image are: *Send, Rotate, Zoom in, Zoom out, Full screen, Delete, Rename, View details, Add to Favorites, Help, and Exit.*

ZOOM IN OR ZOOM OUT

- 1 Select **Options**→*Zoom in* or *Zoom out*.
You can see the zooming ratio at the top of the display. See also the section 'Keyboard shortcuts' later in this chapter.

- 2 Press **Back** to return to the initial view.

The zoom ratio is not stored permanently. You cannot zoom in on GIF animations while they are playing.

Full screen

When you select **Options**→*Full screen*, the panes around the picture are removed so that you can see more of the image. Press  to go back to the initial view.

Move the focal point

When you are zooming or viewing an image in full screen mode, use the **Scroll** key to move the focal point to the left, right, up, or down, so that you can take a closer look at one part of the picture, for example, its upper right corner.



Rotate

Select **Options**→ *Rotate*→ *Left* to rotate an image 90 degrees counterclockwise or *Right* to rotate the image clockwise. The rotation status is not stored permanently.

KEYBOARD SHORTCUTS

- Rotate: **2** key—counterclockwise, **9** key—clockwise.
- Scroll: —up, —down, —left, —right.
- Zoom: **1** key—zoom in, **0** key—zoom out. Press and hold to return to the normal view.
- Change between full screen and normal view: the ***** key.

IMAGE DETAILS VIEW

To view the detailed information about an image, scroll to the image and select **Options**→ *View details*. A list of image information appears:

Format—JPEG, GIF, PNG, TIFF, MBM, BMP, WBMP, OTA, WMF, *Unsupported*, or *Unknown*.

Date and Time—when the image was created or saved, **n x n**—the size of the image in pixels.

Resolutn.—the size of the image in pixels. See "Image resolutions" on p. 63.

Size—in bytes or kilobytes.

Color—*True color*, *65536 colors*, *4096 colors*, *256 colors*, *16 colors*, *Grayscale*, or *Black/white*.

Arrange images and folders

- To remove an image or folder, scroll to it and select **Options**→ *Delete*.
- To rename an image or a folder, scroll to the image or folder you want to rename and select **Options**→ *Rename*. Write the new name and press .

See "Actions common to all applications" on p. 18 for further information on how to create folders and mark and move items to folders.

Send images

You can send photos or images by different messaging services.

- 1 Scroll to the image you want to send and select **Options**→ *Send*.
- 2 Then select the method. The choices are *Via multimedia*, *Via e-mail*, *Via infrared*, or *Via Bluetooth*.
 - If you select to send the image in an e-mail or a multimedia message, an editor opens. Press  to select the recipient(s) from the Contacts directory or write the phone number or e-mail address of the recipient in the **To:** field. Add text or sound and select **Options**→ *Send*. For more information, see "Create and send new messages" on p. 82.
 - If you want to send the image by infrared or Bluetooth connection, see "Send data using Bluetooth connection" on p. 146, and "Send and receive data using infrared" on p. 151 for more information.

Picture messages folder

Options in the Picture messages folder are: *Open, Send, Delete, Mark/Unmark, Rename, View details, Help, and Exit.*

In the Picture messages folder, you can find graphics sent to you in picture messages.

If you want to save a graphic you have received in a picture message, go to **Messaging**→ *Inbox*, open the message, and select **Options**→ *Save picture*.

VIEW PICTURES

- 1 Scroll to the picture you want to view and press . The picture opens. Press  to view the next picture in the folder.
- 2 Press **Back** to return to the Pictures main view.

7 Video recorder



Go to **Menu**→ *Video recorder*.



Note: Obey all local laws governing the taking of videos. Do not use this feature illegally. Your phone must be switched on to use the Video recorder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

With the Video recorder you can record video clips, and play video clips stored on your phone or on a memory card. Also, the Video recorder is integrated with the messaging features allowing you to easily send created clips.

Video recorder uses shared memory. See "Shared memory" on p. 21.

• RECORD A VIDEO CLIP



Note: 3GPP file format (.3gp) is the standard video file format for Multimedia Messaging.

You can record video clips up to 95 KB in size, or approximately 10 seconds in duration.

Recorded video clips are in the .3gp format.

- 1 To begin recording open the Video recorder and select **Options**→ *Record* and you can see the view to record.

- 2 To start recording press .

The progress bar on the bottom of the screen shows you how much recording time remains. To pause recording at any time press .



To immediately play the video clip you just recorded, press .

The video clip is saved to either the phone's memory or the memory card, depending on the setting of your *Memory in use*. See "Set up your Video recorder" on p. 70.

Options in video clip view of Video recorder are: *Play, Record, Send, Delete, Rename, Settings, About product, Help, and Exit.*

● WATCH A VIDEO CLIP

To watch a video clip from the Video recorder video clip list:

- 1 Open the Video recorder.
- 2 Scroll to a video clip and select **Options**→ *Play*.

Once a video clip is playing, you have similar options available to you as when playing a video clip in RealOne Player™. See "RealOne Player™" on p. 71.

Send video clips

You can send video clips by using the **Send** option from your video clip list.

- 1 Scroll to the video clip you want to send and select **Options**→ *Send*.
- 2 Select *Via multimedia, Via e-mail, Via Bluetooth, or Via infrared.*

Set up your Video recorder

You can define whether you store your video clips in the phone's memory or on the memory card, if you have one, and how to name your video clips. Select **Options**→ *Settings* and one of the following:

- *Memory in use*—Choose between *Phone memory* and *Memory card*.
- *Default video name*—Define the default name of your video clips.

Example: If you set 'Holiday' as the default video clip name, Video recorder will name all the video clips you take 'Holiday', 'Holiday(01)', 'Holiday(02)', and so on, until you change the setting again.



8 RealOne Player™



Go to **Menu**→ *RealOne Player*.


With the RealOne Player you can play media files stored in the phone's memory or on a memory card, play music and video files, or stream live content from the internet.

Options in list view are: *Play, Open, Rename, Delete, Move to folder, New folder, Mark/Unmark, Send, Add to Favorites, Settings, Help, About product, and Exit.*

RealOne Player uses shared memory. See "Shared memory" on p. 21.



Note: Streaming is playing sound or video in real time as it is downloaded from the internet, as opposed to storing it in a local file first.

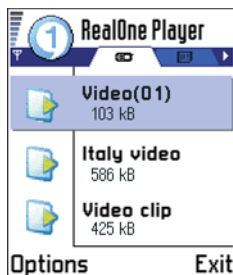

• PLAY MEDIA FILES

You can play any music or video file from the list shown when you start the RealOne Player, or directly from the internet.

To play a media file stored in your phone's memory or memory card, open RealOne Player, scroll to the file and select **Options**→ *Play*.



Note: Media files are video, music or audio clips that you can play on a media player like the RealOne Player. Files with extensions .3gp, .amr, .rm, .ram, .ra, and .rv are supported by the RealOne Player.



To play a media file directly from the internet:

- 1 Select **Options**→ *Open*→ *URL address*.
- 2 Enter the URL of the site from which you want to play or stream content.

Before your media file or stream begins playing, your phone will connect to the site and load the file.



 **Note:** Buffering is the temporary storage of a part of your streaming content into the phone's memory before it is played.

Media guide

You can open a browser page that allows you to access a media guide with links to streaming media sites and files.

To stream from the Internet:

- 1 Configure your RealOne Player default access point (see "Default Access Point setting", p. 74).
- 2 From the main Menu, open Services (XHTML browser).
- 3 In the Bookmarks view, open the Mobile Media Guide bookmark.

 **Note:** In the RealOne Player, you can only open an `rtsp://url` address. You cannot open an [http://url address](#).

- 4 Find a link to a streaming site that interests you, and select the link.

If you are not connected to the server, you will be prompted to connect. Press  **Yes**.

Your streaming session begins.



Note: You cannot stream from a site unless you have correctly configured an Access Point in RealOne Player, see "Default Access Point setting", p. 74. Many service providers require you to use an Internet Access Point (IAP) for your Default Access Point in RealOne Player. Other service providers allow you to use a WAP access point. Contact your service provider for advice and availability.

Volume control

- To increase the volume press , or to decrease the volume press .
- To mute the sound press  and hold until the  indicator is displayed.
- To turn on the sound press  and hold until you see the .

• SEND MEDIA FILES

You can send media files by using the *Send* option from your video clip list.

- 1 Scroll to the file you want to send and select **Options**→ *Send*.
- 2 Select *Via infrared*, *Via Bluetooth*, *Via multimedia* or *Via e-mail*.

• CHANGE THE SETTINGS

To change the Video settings, select **Options**→ *Video* to open the following list of settings:

- Video quality—Choose *Sharp images* to have better picture quality, but slower framerate, or *High framerate* for faster framerate, but lower picture quality.
- Automatic scaling—Choose *On* to have automatic resizing of the video image.

To change the Playback settings, select **Options**→ *Playback* to open the following setting:

- Repeat—Choose *On* to have the playing video or audio file restart automatically once it has finished.

To change the Network settings, select **Options**→ *Network* to open the following list of settings:

- **Default Access Point**—As defined in Connection settings, see “Access points” on p. 40.
- **Bandwidth**—Choose Automatic to have the best delivery rate available.
- **Maximum bandwidth**—Choose the maximum bandwidth for streaming content.
- **Connection time-out**—Open the slider view to change the waiting time for the initial server connection on a streaming session.
- **Server time-out**—Open the slider view to change the time allowed for no response from the server.
- **Highest Port and Lowest Port**—Enter the port numbers for streaming. If you are not sure of the numbers, contact your service provider.

To change the Proxy settings, select **Options**→ *Proxy*→ *Use Proxy / Host address / Port*.

When you select one of the settings, a tab view is opened. Press  or  to move between the different setting tabs. The following icons indicate which setting you are in:



for Video



for Playback



for Network



for Proxy

9 Messaging



Go to **Menu**→ *Messaging*.

Options in the Messaging main view: *Create message*, *Connect* (shown if you have defined settings for the mailbox), or *Disconnect* (shown if there is an active connection to mailbox), *SIM messages*, *Cell broadcast*, *Service command*, *Settings*, *Help*, and *Exit*.

In Messaging you can create, send, receive, view, edit, and organize:

- text messages
- multimedia messages
- e-mail messages
- smart messages (special text messages containing data)

In addition to these, you can receive messages and data by an infrared or Bluetooth connection, receive service messages, cell broadcast messages, as well as send service commands.

Text and multimedia messages use shared memory. See "Shared memory" on p. 21.



Note: Before you can create a multimedia message, write an e-mail, or connect to your remote mailbox, you must have the correct connection settings in place. See "Settings for e-mail" on p. 105 and "Settings for multimedia messages" on p. 103.

When you open Messaging, you can see the *Create message* function and a list of default folders:



Inbox—Contains received messages except e-mail and cell broadcast messages. E-mail messages are stored in the Mailbox. You can read cell broadcast messages by selecting **Options**→ *Cell broadcast*.



My folders—For organizing your messages into folders.

Organize your messages by adding new folders under My folders.

When you have opened one of the default folders, for example, Sent, you can easily move between the folders by pressing  to open the next folder (Outbox), or by pressing  to open the previous folder (Drafts).



Mailbox—When you open this folder, you can either connect to your remote mailbox to retrieve your new e-mail messages or view your previously retrieved e-mail messages offline. See "View e-mail messages when online" and "View e-mail messages when offline" on p. 96 for further information. After you have defined settings for a new mailbox, the name given to that mailbox will replace Mailbox in the main view. See "Settings for e-mail" on p. 105.



Drafts—Stores draft messages that have not been sent.



Outbox—Is a temporary storage place for messages waiting to be sent.



Sent—Stores the last 15 messages that have been sent. To change the number of messages to be saved, see "Settings for the Sent folder" on p. 107.



Reports—You can request the system to send you a delivery report of the text messages, smart messages, and multimedia messages you have sent. To turn on delivery report reception, select **Options**→ *Settings*→ *Text message* or *Multimedia message*, scroll to *Receive report*, and select *Yes*.



Note: Receiving a delivery report of a multimedia message that has been sent to an e-mail address might not be possible.

• MESSAGING—GENERAL INFORMATION

The message status is always either draft, sent, or received. Messages can be saved to the Drafts folder before they are sent. Messages are temporarily placed to Outbox to wait for sending. After a message has been sent, you can find a copy of the message in the Sent folder. Received and sent messages are in read-only state until you select *Reply* or *Forward*, which copies the message to an editor. Note that you cannot forward e-mail messages sent by you.



Note: Messages or data that have been sent by an infrared or Bluetooth connection are not saved in the Draft or Sent folders.

Open a received message

When you receive a message,  and the note 1 new message is shown in the standby mode. Press **Show** to open the message.

If you have more than one new message, press **Show** to open the Inbox to see the message headings. To open a message in Inbox, scroll to it and press .

Add a recipient to a message

When you create a message, there are several ways to add a recipient:

- Add recipients from the Contacts directory. To open the Contacts directory, press  or  in the To: or Cc: fields, or select **Options**→*Add recipient*. Scroll to a contact and press  to mark it. You can mark several recipients at a time. Press **OK** to return to the message. The recipients are listed in the To: field and automatically separated with a semicolon (;).
- Write the phone number or e-mail address of the recipient in the To: field.
- Copy the recipient information from another application and then paste it to the To: field. See "Copy text" on p. 82.

Press  to the left of the cursor if you want to delete a recipient.



Note: If you write many phone numbers or e-mail addresses in the To: field, you must remember to add a semicolon (;) between each item to separate them from each other. When you retrieve recipients from the Contacts directory, the semicolon is added automatically.

Example: 214 123 456; 972 456 876

Sending options

To change how a message is sent, select **Options** → *Sending options* when you are editing a message. When you save the message, its sending settings are also saved.

• WRITE TEXT

You can key in text in two different ways, using the method traditionally used in mobile phones or another method called predictive text input.

Icons: **ABC** and **abc** indicate the selected case. **Abc** means that the first letter of the next word is written in upper case, and all other letters are automatically written in lower case. **123** indicates number mode.

Use traditional text input

The indicator  is shown on the top right of the display when you are writing text using traditional text input.

- Press a number key (**1–9**), repeatedly until the desired character appears. Note, that there are more characters available for a number key than are printed on the key.
- To insert a number, press and hold the number key.
- To switch between letter and number mode, press and hold the **#** key.
- If the next letter is located on the same key as the present one, wait until the cursor appears (or press  to end the time-out period), and then key in the letter.
- If you make a mistake, press  to remove a character. Press and hold

 to clear more than one character.

- The most common punctuation marks are available under the **1** key. Press the **1** key repeatedly to reach the desired punctuation mark.
- Press the ***** key to open a list of special characters. Use the **Scroll** key to move through the list, and press **OK** to select a character.
- To insert a space, press the **0** key.
- To move the cursor to the next line, press the **0** key three times.
- To switch between upper and lower case, press the **#** key.

Use predictive text input

To set predictive text input on or off, press the **#** key twice quickly when writing text.

To activate predictive text input, press  and select Predictive text on. This will activate predictive text input for all editors in the phone. The  indicator is shown at the top of the display.

Write the desired word by pressing the **2–9** keys. Press each key only once for one letter. The word changes after every key press.

 **Note:** Do not pay attention to what appears on the display. The word match is evolving. Wait until you have keyed in the whole word before you check the result.

For example, to write 'Nokia' when English dictionary is selected, press:

the **6** key for N

the **6** key for o

the **5** key for k

the **4** key for i

the **2** key for a



As you can see, the word suggestion changes after each key press.

When you have finished the word, check that it is correct.

- If the word is correct, you can confirm it by pressing  or by pressing the **0** key to insert a space. The underlining disappears and you can begin to write a new word.
- If the word is not correct, you have the following options:
 - Press the ***** key repeatedly to view the matching words the dictionary has found one by one.
 - Press  and select **Predictive text** → *Matches* to view a list of matching words. Scroll to the word you want to use and press  to select it.
- If the **?** character is shown after the word, the word you intended to write is not in the dictionary. To add a word to the dictionary, press **Spell**, key in the word (max. 32 letters) using traditional text input, and press **Save**. The word is added to the dictionary. When the dictionary becomes full, a new word replaces the oldest added word.
- To remove the **?** and clear characters one by one from the word, press .

TIPS ON USING PREDICTIVE TEXT INPUT

- To erase a character, press . Press and hold  to clear more than one character.
- To change between the different character cases **Abc**, **abc**, and **ABC**, press the ***** key. Note that if you press the ***** key quickly twice the predictive text input is turned off.
- To insert a number in letter mode, press and hold the desired number key, or press  and select **Insert number**, key in the numbers you want, and press **OK**.

To switch between letter and number mode, press and hold the **#** key.

- The most common punctuation marks are available under the **1** key. Press the **1** key repeatedly to reach the desired punctuation mark.
- Press and hold the ***** key to open a list of special characters. Use the **Scroll** key to scroll through the list and press **OK** to select a character.

Or press  and select **Insert symbol**.

The predictive text input will try to guess which commonly used punctuation mark (.,?!') is needed. The order and availability of the punctuation marks depend on the language of the dictionary.

- Press the * key repeatedly to view the matching words the dictionary has found one by one.

You can also press , select **Predictive text** and select:

- **Matches**—to view a list of words that correspond to your key presses. Scroll to the desired word and press the .
- **Insert word**—to add a word (max. 32 letters) to the dictionary by using traditional text input. When the dictionary becomes full, a new word replaces the oldest added word.
- **Edit word**—to open a view where you can edit the word, available only if the word is active (underlined).

Write compound words

Write the first half of a compound word and confirm it by pressing . Write the last part of the compound word and complete the compound word by pressing the **O** key to add a space.

Turn off predictive text

Press  and select **Predictive text** → **Off** to turn predictive text input off for all editors in the phone.

Editing options

When you press , the following options appear (depending on the editing mode and situation you are in):

- **Predictive text** (predictive text input), **Alpha mode** (traditional text input), or **Number mode**.
- **Cut, Copy**—available only if text has been selected first.
- **Paste**—available only when text has been either cut or copied to the clipboard.
- **Insert number, Insert symbol**.

- *Writing language*—changes the input language for all editors in the phone. See "Phone settings" on p. 34.

• COPY TEXT


If you want to copy text to the clipboard, the following are the easiest methods:

- 1 To select letters and words, press and hold . At the same time, press  or . As the selection moves, text is highlighted.
To select lines of text, press and hold . At the same time press  or .
- 2 To end the selection, stop pressing the **Scroll** key.
- 3 To copy the text to clipboard, while still holding , press **Copy**.
- 4 Or, release  and then press it once to open a list of editing commands, for example, **Copy** or **Cut**.
- 5 If you want to remove the selected text from the document, press .
- 6 To insert the text into a document, press and hold  and press **Paste**. Or, press  once and select **Paste**.

• CREATE AND SEND NEW MESSAGES

You can start to create a message in two ways:

- Select **New message** → **Create:** → *Text message, Multimedia message, or E-mail* in the Messaging main view.
- Start to create a message from an application that has the option **Send**. In this case the file that was selected (such as an image or text) is added to the message.

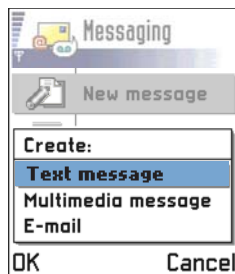



Note: When sending messages, your phone may display the words *Message Sent*. This is an indication that the message has been sent by your phone to the message center programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about the messaging services, check with your service provider.

• TEXT MESSAGES

Options in the text message editor are: *Send, Add recipient, Insert, Delete, Message details, Sending options, Help*, and *Exit*.

- 1 Select **New message**. A list of message options opens.
- 2 Select **Create**→ *Text message*. The editor opens with the cursor in the **To:** field.
- 3 Press  to select recipients from the Contacts directory or write the phone number of the recipient. Press the **#** key to add a semicolon (;) to separate each recipient. Press  to move to the message field.
- 4 Write the message.



Note: Your phone supports sending multiple text messages at the same time; therefore, the normal 160 characters limit for one text message can be exceeded. If your text exceeds 160 characters, it will be sent in two or more messages and message sending may cost you more.

In the navigation bar, you can see the message length indicator counting backwards from 160. For example, 10 (2) means that you can still add 10 characters for the text to be sent as two messages.

- 5 To send the message, select **Options**→ *Send* or press .

Smart messages

Smart messages are special text messages that can contain data. You can send smart messages such as:

- Picture messages
- Business cards containing contact information in generic (vCard) format

- Calendar notes (vCalendar format)

From the text message editor, you may create a smart message containing a picture (see "Create and send picture messages" on p. 84). For other types of smart messages, see "Send contact information" on p. 58, "Send calendar entries" on p. 117, and "Send bookmarks" on p. 131.

You can also receive ringing tones, operator logos, or settings from service providers. See "Receive smart messages" on p. 92.

Create and send picture messages

Your phone allows you to send and receive picture messages. Picture messages are text messages that contain small black-and-white graphics. There are several default pictures available in the **Picture msgs.** folder in **Images**.

 **Note:** This function can be used only if it is supported by your service provider. Only phones that offer picture message features can receive and display picture messages.

To send a picture message:

- 1 There are two possibilities. Choose one of the following:
 - Select **Messaging** → *New message* → *Create* → *Text message*, and then select **Options** → *Insert* → *Picture*.
 - Go to **Images** → *Picture msgs.* and select a picture to be sent. Select **Options** → *Send*.
- 2 Enter recipient information and add text.
- 3 Select **Options** → *Send* or press .



 **Note:** Each picture message is made up of several text messages. Therefore, sending one picture message may cost more than sending one text message.

• MULTIMEDIA MESSAGES

A multimedia message can contain text, images, and either video or sound clips.



Note: This function can be used only if it is supported by your service provider. Only devices that offer compatible multimedia message or e-mail features can receive and display multimedia messages. Devices that don't have these features may receive details of a link to a web page.

Settings needed for multimedia messaging

Options in the multimedia message editor are: *Send, Add recipient, Insert, Preview message, Objects, Remove, Delete, Message details, Sending options, Help, and Exit.*

You may receive the settings as a smart message from your service provider. See "Receive smart messages" on p. 92.

For availability of and subscription to data services, please contact your service provider.

- 1 Go to **Settings**→ *Connection settings*→ *Access points* and define the settings for a multimedia messaging access point:

Connection name—Give a descriptive name for the connection.

Session mode—Select a data connection type: GSM data, High speed GSM, or GPRS.

Gateway IP address—Enter the address.



Example: Domain names such as **www.nokia.com** can be translated into IP addresses like **192.100.124.195**.

Homepage—Enter the address of the multimedia messaging center.

- If you selected GSM data or High speed GSM, fill in **Dial-up number**—a phone number for the data call.

- If you selected GPRS, fill in *Access point name*—the name given to you by your service provider.

For further information on different data connections, see also "Connection settings" on p. 38.

- 2 Go to **Messaging**→ *Options*→ *Settings*→ *Multimedia message*.
- 3 Open *Preferred connection* and select the access point you created to be used as the preferred connection. See also "Settings for multimedia messages" on p. 103.

Set up the messaging store

The messaging store defines whether the phone's memory or the memory card are used as default. To define the messaging store:

Messaging→ *Options*→ *Settings*→ *Messaging store* and select either the phone's memory or the memory card, if one is used.

Create multimedia messages

When you are sending a multimedia message to any phone other than the Nokia 3620 or Nokia 3660, it is recommended to use a smaller image size and a sound clip that is no longer than 15 seconds. The default setting is *Image size: Small*. If you want to check the image size setting, go to **Messaging**→ *Options*→ *Settings*→ *Multimedia message* or select **Options**→ *Sending options* when you are creating a multimedia message. When you are sending a multimedia message to an e-mail address or another Nokia 3620 or Nokia 3660, select **Options**→ *Sending Options*→ *Image size* → *Large* when you are creating a multimedia message.

- 1 In **Messaging**, select **New message**→ *Create*→ *Multimedia message* and press .
- 2 Press  to select the recipient(s) from the Contacts directory or write the phone number or e-mail address of the recipient in the **To:** field. Add a semicolon (;) to separate each recipient. Press  to move to the next field.
- 3 You can add the different objects of the multimedia message in any order you want:

- To add an image, select **Options**→ *Insert*→ *Image* or *New image*.
- To add a sound, select **Options**→ *Insert*→ *Sound clip* or *New sound clip*. When sound has been added, the  icon is shown in the navigation bar.
- To add video, select **Options**→ *Insert*→ *Video clip*.
- To write text, press .
- If you select **Insert**→ *Image*, *Sound clip*, *Video clip*, or *Template*, a list of items opens. Scroll to the item you wish to add and press **Select**.

 **Note:** If you chose *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.

- If you select **Insert**→ *New image*, Camera opens and you can take a new picture. Press **Remove** to remove the picture and take another instead.
- If you select **Insert**→ *New sound clip*, Recorder opens and you can record a new sound. The new photo or sound is automatically saved and a copy is inserted in the message.

 **Note:** A multimedia message can contain only one photo and one sound or video clip.


- 4 To send the message, select **Options**→ *Send* or press .

Preview a multimedia message

To see what the multimedia message will look like, select **Options**→ *Preview message*.

Remove object from a multimedia message

To remove a multimedia object, select **Options**→ *Remove*→ *Image* *Video clip* or *Sound clip*. Press  to remove text.

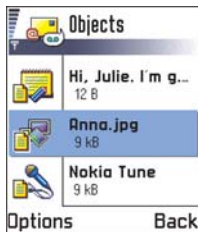

Work with different multimedia objects

To see all the different media objects included in a multimedia message, open a multimedia message and select **Options**→ *Objects* to open the Objects view.

In the Objects view, you can change the order of the different objects, delete objects, or open an object in a corresponding application.

Options in the Objects view are: *Open, Insert, Place image first / Place text first, Remove, Help, and Exit.*

• E-MAIL MESSAGES

Before you can send, receive, retrieve, reply to, and forward e-mail messages, you must:

- Configure an Internet Access Point (IAP) correctly. See "Connection settings" on p. 38.
- Define your e-mail settings correctly. See "Settings for e-mail" on p. 105.



Note: Follow the instructions given by your remote mailbox and Internet Service Provider.

Write and send e-mail messages

Options in the e-mail editor are: *Send, Add recipient, Insert, Attachments, Delete, Message details, Sending options, Help, and Exit.*

- 1 Select **New message**→ *Create*:→ *E-mail*. The editor opens.
- 2 Press  to select the recipient(s) from the Contacts directory or write the e-mail address of the recipient in the **To:** field. Add a semicolon (;) to separate each recipient.
- 3 If you want to send a copy of your e-mail to someone, write the address in the **Cc:** field. Press  to move to the next field.
- 4 Write the message.
- 5 If you want to add an attachment to the e-mail, select **Options**→ *Insert*→ *Image, Sound clip, Video clip, or Note*.
 -  will appear in the navigation bar to indicate that the e-mail

has an attachment. Template adds pre-written text to the e-mail.

- You can also add an attachment to an e-mail by selecting **Options**→ *Attachments* in an open e-mail. The *Attachments* view opens where you can add, view, and remove attachments.
 - To remove an attachment, scroll to the attachment and select **Options**→ *Remove*.
 - If you choose to attach an *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.
- 6 To send the e-mail, select **Options**→ *Send* or press .

E-mail messages are automatically placed in Outbox before sending. In case something goes wrong while the phone is sending the e-mail, the e-mail is left in Outbox with the status *Failed*.

If you want to send files other than photos, sounds, and notes as attachments, open the appropriate application and select the option **Send**→ *Via e-mail*, if available.

Add and remove attachments

To add an attachment to an e-mail, select **Options**→ *Attachments* in an open e-mail. The *Attachments* view opens where you can add, view, and remove attachments.

- To add an attachment, select **Options**→ *Insert*→ *Image*, *Sound clip*, *Video clip*, or *Note*. A list of items opens. Scroll to the one you want to add and press **OK**.  will appear in the navigation bar to indicate that the e-mail has an attachment.
- If you choose *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.
- To remove an attachment, scroll to the attachment and select **Options**→ *Remove*.

• INBOX



Options in Inbox are: *Open, Create message, Delete, Message details, Move to folder, Move to phone memory* (shown if you have defined the memory card as the messaging store), *Move to memory card* (shown if you have defined the phone's memory as the messaging store), *Mark/Unmark, Help, and Exit.*

Messages and data can be received by text message, multimedia service, infrared connection, or Bluetooth connection. When there are unread messages in Inbox, the icon changes to

In Inbox, unread messages appear in bold. The message icons tell you what kind of a message it is. Here are some of the icons that you may see:



for an unread text message



for an unread smart message



for an unread multimedia message



for an unread service message



for data received by infrared



for data received by Bluetooth connection



for an unknown message type

View messages

To open a message, scroll to the message and press

Use the **Scroll** key to move up and down in the message. Press or to move to the previous or next message in the folder.

Options in different message viewers

The available options depend on the type of message you have opened for viewing:

- *Save picture*—saves the picture to **Images**→ *Picture msgs.*
- *Reply*—copies the address of the sender to the **To:** field. Select **Reply**→

To all to copy the address of the sender and Cc field recipients to the new message.

- *Forward*—copies the message contents to an editor.
- *Call*—call by pressing .
- *View image*—allows you to view and save the image.
- *Play sound clip*—allows you to listen to the sound in the message.
- *Objects*—shows you a list of all the different multimedia objects in a multimedia message.
- *Attachments*—shows you a list of files sent as e-mail attachments.
- *Message details*—shows detailed information about a message.
- *Move to folder / Copy to folder*—allows you to move or copy message(s) to My folders, Inbox, or other folders you have created. See "Move items to a folder" on p. 19.
- *Add to Contacts*—allows you to copy the phone number or e-mail address of the message sender to the Contacts directory. Choose whether you want to create a new contact card or add the information to an existing contact card.
- *Find*—searches the message for phone numbers, e-mail addresses, and Internet addresses. After the search, you can make a call or send a message to the found number or e-mail address, or save the data to Contacts or as a bookmark.

View multimedia messages

You can recognize multimedia messages by their icon .

To open a multimedia message, scroll to it and press . You can see an image, read a message and hear a sound, simultaneously.

If sound is playing, press  or  to increase or decrease the sound volume. If you want to mute the sound, press **Stop**.

MULTIMEDIA MESSAGE OBJECTS

Options in the Objects view are: *Open, Save, Send, Call, and Exit*.

To see what kinds of media objects have been included in the multimedia message, open the message and select **Options**→ *Objects*. In the Objects view you can view files that have been included in the multimedia message. You can choose to save the file in your phone or to send it, for example, by infrared to another device.

To open a file, scroll to it and press the .



Warning: Multimedia message objects may contain viruses or otherwise be harmful to your phone or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender. For more information, see "Certificate management" on p. 48.

Example: You can open a vCard file and save the contact information in the file to Contacts.

SOUNDS IN A MULTIMEDIA MESSAGE

Sound objects in a multimedia message are indicated by the  indicator in the navigation bar. Sounds are by default played through the loudspeaker. To stop the sound, press **Stop** while sound is playing. You can change the volume level by pressing  or .

If you want to listen to a sound again after all the objects have been shown and the playing of the sound has stopped, select **Options**→ *Play sound clip*.

Receive smart messages

If you receive a vCard file that has a picture attached, the picture will be saved to Contacts as well.

Your phone can receive many kinds of smart messages, text messages that contain data (also called Over-The-Air (OTA) messages). To open a received smart message, open Inbox, scroll to the smart message () and press .

- **Picture message**—to save the picture in the Picture msgs. folder in **Images** for later use, select **Options**→ *Save picture*.
- **Business card**—to save the contact information, select **Options**→ *Save business card*. If certificates or sound files are attached to business cards, they will not be saved.

- Ringing tone—to save the ringing tone to Composer, select **Options**→ *Save*.
- Operator logo—to save the logo, select **Options**→ *Save*. The operator logo can now be seen in the standby mode instead of the service provider's own identification.
- Calendar entry—to save the invitation to Calendar, select **Options**→ *Save to Calendar*.
- WAP message—to save the bookmark, select **Options**→ *Save to bookmarks*. The bookmark is added to the Bookmarks list in browser service.
- E-mail notification—Tells you how many new e-mails you have in your remote mailbox. An extended notification may list more detailed information such as subject, sender, attachments, and so on.

If the message contains both browser access point settings and bookmarks, to save the data select **Options**→ *Save all*. Or, select **Options**→ *View details* to view the bookmark and access point information separately. If you do not want to save all data, select a setting or bookmark, open the details and select **Options**→ *Save to Settings* or *Save to bookmarks* depending on what you are viewing.

To later change the default access point settings for browser service or multimedia messaging, go to **Services**→ *Options*→ *Settings*→ *Default access point* or **Messaging**→ *Options*→ *Settings*→ *Multimedia message*→ *Preferred connection*.

In addition, you can receive a text message service number, voice mailbox number, profile settings for remote synchronization, access point settings for the browser, multimedia messaging or e-mail, access point login script settings, or e-mail settings. To save the settings, select **Options**→ *Save to SMS sett.*, *Save to Voice mail*, *Save to settings*, or *Save to e-mail sett.*

Service messages

Options when viewing service message are: *Download message*, *Move to folder*, *Message details*, *Help*, and *Exit*.

You can order service messages (pushed messages) from service providers. Service messages are notifications of, for example, news headlines and they may contain a text message or address of a browser service. For availability and subscription, contact your service provider.

Service providers can update an existing service message every time a new service message is received. Messages can be updated even if you have moved them to another folder than Inbox. When service messages expire, they are deleted automatically.

VIEWING SERVICE MESSAGES IN INBOX

- 1 In Inbox, scroll to a service message (🌐) and press (🔍).
- 2 To download or view the service, press **Download message**. The note *Downloading message* is displayed. The phone starts to make a data connection, if needed.
- 3 Press **Back** to return to Inbox.

VIEWING SERVICE MESSAGES IN THE BROWSER

When you are browsing, select **Options**→ *Read service msgs.* to download and view new service messages.

• MY FOLDERS



Options in My folders are: *Open, New message, Delete, Message details, Move to folder, New folder, Rename, Help, and Exit.*

In My folders you can organize your messages into folders, create new folders, and rename and delete folders. Select **Options**→ *Move to folder, New folder, or Rename folder*. For more information, see "Move items to a folder" on p. 19.

Templates folder

You can use text templates to avoid rewriting messages that you send often. To create a new template, select **Options**→ *New template*.



• REMOTE MAILBOX

Select **New message**→ *Create*:→ *E-mail* or *Mailbox* in the Messaging main view. If you have not set up your e-mail account, you will be prompted to do so. See "Settings for e-mail" on p. 105.

When you open this folder, you can connect to your remote mailbox to:

- Retrieve new e-mail headings or messages.
- View your previously retrieved e-mail headings or messages offline.

The Settings wizard program included in the PC Suite can help you configure access point and mailbox settings. You can also copy existing settings, for example, from your computer to your phone. See the CD-ROM supplied in the sales package.

When you create a new mailbox, the name you give to the mailbox automatically replaces *Mailbox* in the Messaging main view. You can have several mailboxes (max. six).

Open the mailbox

When you open the mailbox, you can choose whether you want to view the previously retrieved e-mail messages and e-mail headings offline or connect to the e-mail server.

When you scroll to your mailbox and press , the phone asks you if you want to *Connect to mailbox?* Select *Yes* to connect to your mailbox or *No* to view previously retrieved e-mail messages offline.

Another way to start a connection is to select **Options**→ *Connect*.

VIEW E-MAIL MESSAGES WHEN ONLINE

When you are online, you are continuously connected to a remote mailbox by a data call or a packet data connection. See also "Data connection indicators" on p. 15, "GSM data calls" on p. 39, and "GPRS Packet data" on p. 39.



Note: If you are using the POP3 protocol, e-mail messages are not updated automatically in online mode. To see the newest e-mail messages, you need to disconnect and then make a new connection to your mailbox.

Options when viewing e-mail headings are: *Open, New message, Connect /Disconnect, Retrieve, Delete, Message details, Copy, Mark/Unmark, Help, and Exit.*

VIEW E-MAIL MESSAGES WHEN OFFLINE

When you view e-mail messages offline, your phone is not connected to the remote mailbox. This mode may help you to save on connection costs.

To view e-mail messages offline, you must first retrieve e-mail messages from your mailbox, see the next section. After you have retrieved the e-mail messages to your phone, to end the data connection, select **Options**→ *Disconnect*.

Now you can continue reading the retrieved e-mail headings and/or the retrieved e-mail messages offline. You can write new e-mail messages, reply to the retrieved e-mail messages, and forward e-mail messages. You can order the e-mail messages to be sent the next time you connect to the mailbox. When you open Mailbox the next time and you want to view and read the e-mail messages offline, answer No to the Connect to mailbox? query.

Retrieve e-mail messages from the mailbox

If you are offline, select **Options**→ *Connect* to start a connection to a remote mailbox.

The remote mailbox view is similar to the Inbox folder in Messaging. You can move up and down in the list by pressing  or . The following icons are used to show the status of the e-mail:

—new e-mail (offline or online mode). The content has not been retrieved from the mailbox to your phone (the arrow in the icon is pointing outwards).

—new e-mail, the content has been retrieved from the mailbox (arrow pointing inwards).

—for e-mail messages that have been read.

—for e-mail headings that have been read and the message content has been deleted from the phone.

- 1 When you have an open connection to a remote mailbox, select **Options**→ *Retrieve*,

- *New*—to retrieve all new e-mail messages to your phone.
- *Selected*—to retrieve only the e-mail messages that have been selected. Use the *Mark/Unmark*→ *Mark/Unmark* commands to select messages one by one. See “Mark multiple items” on p. 19 for information on how to select many items at the same time.
- *All*—to retrieve all messages from the mailbox.

To cancel retrieving, press **Cancel**.

After you have retrieved the e-mail messages, you can continue viewing them online.

- 2 Select **Options**→ *Disconnect* to close the connection and to view the e-mail messages offline.



COPY E-MAIL MESSAGES TO ANOTHER FOLDER

If you want to copy an e-mail from the remote mailbox to a folder under My folders, select **Options**→ *Copy*. Select a folder from the list and press **OK**.

Open e-mail messages

When you are viewing e-mail messages either in online or offline mode, scroll to the e-mail you want to view and press  to open it. If the e-mail message has not been retrieved (arrow in the icon is pointing outwards) and you are offline and select *Open*, you will be asked if you want to retrieve this message from the mailbox. Note that the data connection is left open after the e-mail has been retrieved. Select **Options**→ *Disconnect* to end the data connection.

Options when viewing an e-mail message are: *Reply, Forward, Delete, Attachments, Message details, Move to folder, Add to Contacts, Find, Help, and Exit.*

Disconnect from mailbox

When you are online, select **Options**→ *Disconnect* to end the data call or GPRS connection to the remote mailbox. See also "Data connection indicators" on p. 15.

View e-mail attachments

Options in the Attachments view are: *Open, Retrieve, Save, Send, Delete, Help, and Exit.*

Open a message that has the attachment indicator  and select **Options**→ *Attachments* to open the Attachments view. In the Attachments view, you can retrieve, open, or save attachments. You can also send attachments by infrared or Bluetooth connection.



Warning: E-mail attachments may contain viruses or otherwise be harmful to your phone or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender. For more information, see "Certificate management" on p. 48.

Retrieve attachments to the phone

If the attachment has a dimmed indicator, it has not been retrieved to the phone. To retrieve the attachment, scroll to it and select **Options**→ *Retrieve*.



Note: If your mailbox uses the IMAP 4 protocol, you can decide whether to retrieve e-mail headings only, messages only, or messages and attachments. With the POP3 protocol, the options are e-mail headings only or messages and attachments. For further information, see "Settings for e-mail" on p. 105.

To save memory, you can remove attachments from an e-mail while retaining them on the e-mail server. Select **Options**→ *Delete* in the Attachments view.

Open an attachment

- 1 In the Attachments view, scroll to an attachment and press  to open it.
 - If you are online, the attachment is retrieved directly from the server and opened in the corresponding application.
 - If you are offline, the phone asks if you want to retrieve the attachment to the phone. If you answer Yes, a connection to the remote mailbox is started.
- 2 Press Back to return to the e-mail viewer.

Supported image formats are listed on p. 61. To see a list of other file formats supported by the Nokia 3620 and Nokia 3660, see the product information at www.nokia.com.

SAVE ATTACHMENTS SEPARATELY

To save an attachment, select **Options**→ *Save* in the Attachments view. The attachment is saved in the corresponding application. For example, sounds can be saved in Recorder and text files (.TXT) in Notes.

Attachments such as images can be saved on a memory card, if one is used.

Delete e-mail messages

To delete an e-mail from the phone while still retaining it in the remote mailbox, select **Options**→ *Delete*→ *Phone only*.



Note: The phone mirrors the e-mail headings in the remote mailbox. So, although you delete the message content, the e-mail heading stays in your phone. If you want to remove the heading as well, you have to first delete the e-mail message from your remote mailbox and then make a connection from your phone to the remote mailbox again to update the status.

To delete an e-mail from both the phone and the remote mailbox, select **Options**→ *Delete*→ *Phone and server*.



Note: If you are offline, the e-mail will be deleted first from your phone. During the next connection to the remote mailbox, it will be automatically deleted from the remote mailbox. If you are using the POP3 protocol, messages marked to be deleted are removed only after you have closed the connection to the remote mailbox.

UNDELETE E-MAIL MESSAGES WHEN OFFLINE

To cancel deleting an e-mail from both the phone and server, scroll to an e-mail that has been marked to be deleted during the next connection () , and select **Options**→ *Undelete*.

• OUTBOX



The Outbox is a temporary storage place for messages waiting to be sent. Status of the messages in Outbox is displayed as follows:

- **Sending**—A connection is being made and the message is being sent.
- **Waiting/Queued**—For example, if there are two similar types of messages in Outbox, one of them is waiting until the first one is sent.
- **Resend at (time)**—Sending has failed. The phone will try to send the message again after a time-out period. Press **Send** if you want to restart the sending immediately.
- **Deferred**—You can set documents to be 'on hold' while they are in Outbox. Scroll to a message that is being sent and select **Options**→ *Defer sending*.
- **Failed**—The maximum number of sending attempts has been reached. Sending has failed. If you were trying to send a text message, open the message and check that the Sending settings are correct.

Example: Messages are placed in the Outbox, for example, when your phone is outside the system coverage area. You can also schedule e-mail messages to be sent the next time you connect to your remote mailbox.

• VIEW MESSAGES ON A SIM CARD

Before you can view SIM messages, you need to copy them to a folder in your phone.

- 1 In the Messaging main view, select **Options**→ *SIM messages*.
- 2 Select **Options**→ *Mark/Unmark*→ *Mark* or *Mark all* to mark messages.
- 3 Select **Options**→ *Copy*. A list of folders opens.
- 4 Select a folder and press **OK**. Go to the folder to view the messages.

• CELL BROADCAST (SYSTEM SERVICE)



Options in Cell broadcast are: *Open, Subscribe /Unsubscribe, Hotmark / Unhotmark, Topic, Settings, Help, and Exit.*

In the Messaging main view, select **Options**→ *Cell broadcast*.

You can receive messages on various topics, such as weather or traffic conditions from your service provider. For available topics and relevant topic numbers, contact your service provider. In the main view you can see:

- The status of the topic: —for new, subscribed messages and —for new, unsubscribed messages.
- The topic number, topic name, and whether it has been flagged () for follow-up. You will be notified when messages belonging to a flagged topic have arrived.



Note: A packet data (GPRS) connection may prevent cell broadcast reception. Contact your service provider for the correct GPRS settings. For further information on the GPRS settings, see "GPRS Packet data" on p. 39.

• SERVICE COMMAND EDITOR



In the Messaging main view, select **Options**→ *Service command*.

You can send service requests, such as activation commands for system services (also known as USSD commands), to your service provider. For more information, contact your service provider.

To send a request in the standby mode or when you have an active call, key in the command number(s) and press **Send**. If you need to enter letters as well as numbers, select **Messaging**→ *Options*→ *Service command*.

● MESSAGING SETTINGS

The Messaging settings are divided into groups according to the different message types. Scroll to the settings you want to edit and press .

Settings for text messages

Options when editing text message center settings are: *New msg. center, Edit, Delete, Help, and Exit.*

Go to **Messaging** and select **Options**→ *Settings*→ *Text message* to open the following list of settings:

- **Message centers**—Lists all the text message service centers that have been defined. See "Add a new text message center" on p. 103.
- **Msg. center in use (Message center in use)**—Defines which message center is used for delivering text messages and smart messages such as picture messages.
- **Receive report (delivery report)**—When this system service is set to Yes, the status of the sent message (Pending, Failed, Delivered) is shown in the Log.
- **Message validity**—If the recipient of a message cannot be reached within the validity period, the message is removed from the text message service center. Note that the system must support this feature. Maximum time is the maximum amount of time allowed by the system.
- **Message sent as**—The options are Text, Fax, Paging, and E-mail. For further information, contact your service provider.



Note: Change this option only if you are sure that your service center is able to convert text messages into these other formats.

- **Preferred connection**—You can send text messages by the normal GSM system or by GPRS, if supported by the system. See "GPRS Packet data" on p. 39.
- **Reply via same ctr. (system service)**—By setting this option to Yes, if the recipient replies to your message, the return message is sent using the same text message service center number. Note that this may not work between all operators.

ADD A NEW TEXT MESSAGE CENTER

- 1 Open **Message centers** and select **Options**→ *New msg. center*.
- 2 Press , write a name for the service center and press **OK**.
- 3 Press , press  and write the number of the text message service center (**Must be defined**). Press **OK**. You need the message center number to send text and picture messages. You can get the number from your service provider.

To use the new settings, go back to the settings view and scroll to **Msg. center in use**. Press  and select the new service center.

Settings for multimedia messages

Go to **Messaging** and select **Options**→ *Settings*→ *Multimedia message* to open the following list of settings:

- **Preferred connection (Must be defined)**—Select which access point is used as the preferred connection for the multimedia message center. See "Settings for multimedia messages" on p. 103.



Note: If you receive multimedia message settings in a smart message and save them, the received settings are automatically used for the Preferred connection. See "Receive smart messages" on p. 92.

- **Secondary conn.**—Select which access point is used as the secondary connection for the multimedia message center.



Note: Both Preferred connection and Secondary conn. must have the same Homepage setting pointing to the same multimedia service center. Only the data connection is different.

Example: If your preferred connection uses a packet data connection, you may want to use high-speed data or data call for the secondary connection. This way you are able to send and receive multimedia messages even when you are not in a system that supports packet data. For availability of and subscription to data services, please contact your service provider. See also "Data connections and access points" on p. 38.

- Multimedia reception—Select:
 - Only in home net.—if you want to receive multimedia messages only when you are in your home system. When you are outside your home system, multimedia message reception is turned off.
 - Always on—if you want to receive multimedia messages always.
 - Off—if you do not want to receive multimedia messages or advertisements at all.



Note: When you are outside your home system, sending and receiving multimedia messages may cost more. If the settings Only in home net. or Always on have been selected, your phone can make an active data call or GPRS connection without your knowledge.

- On receiving msg.—Select:
 - Retr. immediately—if you want the phone to retrieve multimedia messages instantly. If there are messages with Deferred status, they will be retrieved as well.
 - Defer retrieval—if you want the multimedia messaging center to save the message to be retrieved later. To retrieve the message later, set On receiving msg. to Retr. immediately.
 - Reject message—if you want to reject multimedia messages. The multimedia messaging center will delete the messages.

- Allow anon. messages—Select No, if you want to reject messages coming from an anonymous sender.
- Receive adverts—Define whether you want to receive multimedia message advertisements or not.
- Reports—Set to Yes, if you want the status of the sent message (Pending, Failed, Delivered) to be shown in the Log. When set to No, only the status Delivered is shown in the Log. See “Log—Call log and general log” on p. 27.
- Deny report sending—Choose Yes, if you do not want your phone to send delivery reports of received multimedia messages.
- Message validity—If the recipient of a message cannot be reached within the validity period, the message is removed from the multimedia messaging center. Note that the system must support this feature. Maximum time is the maximum amount of time allowed by the system.
- Image size—Define the size of the image in a multimedia message. The options are: Small (max. of 160*120 pixels) and Large (max. 640*480 pixels).
- Speaker—Choose Loudspeaker or Normal, if you want the sounds in a multimedia message to be played through the loudspeaker or the earpiece. For more information, see “Loudspeaker” on p. 20.

Settings for e-mail

Go to Messaging and select Options→ Settings→ E-mail.

Options when editing e-mail settings are: *Editing options*, *New mailbox*, *Delete*, *Call*, and *Exit*.

Open Mailbox in use to select which mailbox you want to use.

Settings for Mailboxes

Select *Mailboxes* to open a list of mailboxes that have been defined. If no mailboxes have been defined, you will be prompted to do so. The following list of settings is shown:

- Mailbox name—Write a descriptive name for the mailbox.
 - Access point in use (**Must be defined**)—The Internet Access Point (IAP) used for the mailbox. Choose an IAP from the list. For more information on how to create an IAP, see also “Connection settings” on p. 38.
 - My mail address (**Must be defined**)—Write the e-mail address given to you by your service provider. The address must contain the @ symbol. Replies to your messages are sent to this address.
 - Outgoing mail server (**Must be defined**)—Write the IP address or host name of the computer that sends your e-mail.
 - Send message—Define how e-mail is sent from your phone.
Immediately—A connection to the mailbox is started immediately after you have selected Send. During next conn.—E-mail is sent when you connect to your remote mailbox the next time.
 - Send copy to self—Select Yes to save a copy of the e-mail to your remote mailbox and to the address defined in My mail address.
 - Include signature—Select Yes if you want to attach a signature to your e-mail messages and to start to write or edit a signature text.
 - User name—Write your user name, given to you by your service provider.
 - Password—Write your password. If you leave this field blank, you will be prompted for the password when you try to connect to your remote mailbox.
 - Incoming mail server (**Must be defined**)—The IP address or host name of the computer that receives your e-mail.
 - Mailbox type—Defines the e-mail protocol your remote mailbox service provider recommends. The options are POP3 and IMAP4.
-  **Note:** This setting can be selected only once and cannot be changed if you have saved or exited from the mailbox settings.
- Security—Used with the POP3, IMAP4, and SMTP protocols to secure the connection to the remote mailbox.
 - APOP secure login—Used with the POP3 protocol to encrypt the sending of passwords to the remote e-mail server. Not shown if

IMAP4 is selected for Mailbox type:.

- Retrieve attachment (not shown if the e-mail protocol is set to POP3)—To retrieve e-mail with or without attachments.
- Retrieve headers—To limit the number of e-mail headers you want to retrieve to your phone. The options are All and User defined. Used with IMAP4 protocol only.

Settings for service messages

When you go to Messaging and select **Options**→ *Settings*→ *Service message*, the following list of settings opens:

- Service messages—Choose whether or not you want to receive service messages.
- Authentic. needed—Choose if you want to receive service messages only from authorized sources.

Settings for Cell broadcast

Check with your service provider to see if Cell broadcast is available and what topics and numbers are available. Go to **Messaging**→ *Options*→ *Settings*→ *Cell broadcast* to change the settings: Reception—On or Off.

- Language—All allows you to receive cell broadcast messages in every possible language. Selected allows you to choose in which languages you wish to receive cell broadcast messages. If the language you want could not be found in the list, select Other.
- Topic detection—If you receive a message that does not belong to any of the existing topics, **Topic detection**→ On allows you to save the topic number automatically. The topic number is saved to the topic list and shown without a name. Choose Off if you do not want to save new topic numbers automatically.

Settings for the Sent folder

Go to Messaging and select **Options**→ *Settings*→ *Sent folder* to open the following list of settings:

- Save sent messages—Choose if you want to save a copy of every text

message, multimedia message, or e-mail that you have sent to the Sent items folder.

- **No. of saved msgs.**—Define how many sent messages will be saved to the Sent items folder at a time. The default limit is 20 messages. When the limit is reached, the oldest message is deleted.
- **Memory in use**—Define memory store. Choices are phone's memory or memory card, if one is used.

FCC Draft


10 Profiles



Go to **Menu**→ *Profiles*.

In Profiles, you can adjust and customize the phone tones for different events, environments, or caller groups. There are five preset profiles: Normal, Silent, Meeting, Outdoor, and Pager, which you can customize to meet your needs. You can see the currently selected profile at the top of the display in the standby mode. If the Normal profile is in use, only the current date is shown.

The tones can be default ringing tones, tones created in Composer, tones received in a message, or transferred to your phone by infrared, PC, or Bluetooth connection and then saved to your phone.

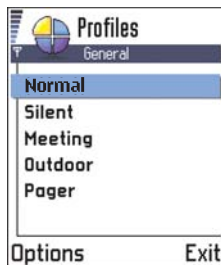


• CHANGE THE PROFILE

- 1 Go to **Menu**→ *Profiles*. A list of profiles opens.
- 2 In the Profiles list, scroll to a profile and select **Options**→ *Activate*.

Shortcut: To change the profile, press **(i)** in the standby mode. Scroll to the profile you want to activate and press **OK**.

• CUSTOMIZE PROFILES

- 1 To modify a profile, scroll to the profile in the Profiles list and select **Options**→ *Customize*. A list of profile settings opens.
- 2 Scroll to the setting you want to change and press **(O)** to open the following choices:
 - **Ringing tone**—To set the ringing tone for voice calls, choose a ringing tone

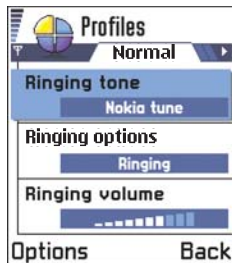

from the list. When you scroll through the list, you can stop on a tone to listen to it before you make your selection. Press any key to stop the sound. If a memory card is used, tones stored on it have the  icon next to the tone name. Ringing tones use shared memory. See "Shared memory" on p. 21.



Note: You can change ringing tones in two places: Profiles or Contacts. See "Add a ringing tone for a contact card or group" on p. 58.

- **Ringing options**—When **Ascending** is selected, the ringing volume starts from level one and increases level by level to the set volume level.
- **Ringing volume**—To set the volume level for the ringing and message alert tones.
- **Message alert tone**—To set the tone for messages.
- **Vibrating alert**—To set the phone to vibrate at incoming voice calls and messages.
- **Keypad tones**—To set the volume level for keypad tones.
- **Warning tones**—The phone sounds a warning tone, for example, when the battery is running out of power.
- **Alert for**—To set the phone to ring only upon calls from phone numbers that belong to a selected contact group. Phone calls coming from people outside the selected group will have a silent alert. The choices are **All calls** / (list of contact groups, if you have created them). See "Create contact groups" on p. 59.
- **Profile name**—You can rename a profile with any name you want. The Normal profile cannot be renamed.

11 Favorites



Go to **Menu**→ *Favorites*.

You can use Favorites to store shortcuts, links to your favorite photos, video clips, notes, Recorder sound files, browser bookmarks, and saved browser pages.

The default shortcuts are:



— opens the Notes editor



— opens the Calendar with the current date selected



— opens the Messaging Inbox



Options in the Favorites main view are:

Open, Edit shortcut name, Delete shortcut, Move, List view / Grid view, Help, and Exit.

• ADD SHORTCUTS

Shortcuts can be added only from the individual applications. Not all applications have this functionality.

- 1 Open the application and scroll to the item that you want to add as a shortcut to Favorites.
- 2 Select **Options**→ *Add to Favorites* and press **OK**.



Note: A shortcut in Favorites is automatically updated if you move the item it is pointing to, for example, from one folder to another.

• SHORTCUT OPTIONS

- **To open a shortcut**, scroll to the icon and press . The file is opened in the corresponding application.
- **To delete a shortcut**, scroll to the shortcut you want to remove and select **Options**→ *Delete shortcut*. Removing a shortcut does not affect the file it is referring to.
- **To change the shortcut heading**, select **Options**→ *Edit shortcut name*. Write the new name. This change affects only the shortcut, not the file or item the shortcut refers to.

12 Calendar and To-do



Go to **Menu**→ *Calendar*.



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Options when editing a calendar entry are: *Delete, Send, Help, and Exit.*

In Calendar, you can keep track of your appointments, meetings, birthdays, anniversaries, and other events. You can also set a calendar alarm to remind you of upcoming events.

Calendar uses shared memory. See "Shared memory" on p. 21.

• CREATE CALENDAR ENTRIES

- 1 Select **Options**→ *New entry* and select from the following options:
 - *Meeting* to remind you of an appointment that has a specific date and time.
 - *Memo* to write a general entry for a day.
 - *Anniversary* to remind you of birthdays or special dates. Anniversary entries are repeated every year.
- 2 Fill in the fields (see "Calendar entry fields" on p. 114). Use the **Scroll** key to move between fields. Press the **#** key to change between upper and lower case.
- 3 To save the entry, press **Done**.

The screenshot shows a form titled "Meeting" with a calendar icon and a search bar labeled "Abe". The form has the following fields:

- Subject:** Dentist
- location:**
- Start time:** 12:30

At the bottom, there are two buttons: "Options" with a dropdown arrow and "Done".

Edit calendar entries

- 1 In the Day view, scroll to the entry and press to open it.
- 2 Edit the entry fields and press **Done**.

- If you are editing a repeated entry, choose how you want the changes to take effect: *All occurrences*—all repeated entries are changed / *This entry only*—only the current entry will be changed.

Delete calendar entries

- In the Day view, scroll to the entry you want to delete and select **Options**→ *Delete* or press . Press **OK** to confirm.
- If you are deleting a repeated entry, choose how you want the change to take effect: *All occurrences*—all repeated entries are deleted / *This entry only*—only the current entry will be deleted.

Example: Your weekly class has been cancelled. You have set the calendar to remind you every week. Choose *This entry only* and the calendar will remind you again next week.

Calendar entry fields

- **Subject / Occasion**—Write a description of the event.
- **Location**—The place of a meeting, optional.
- **Start time, End time, Start date, and End date.**
- **Alarm**—Press  to activate the fields for Alarm time and Alarm date.
- **Repeat**—Press  to change the entry to be repeating. Shown with  in the Day view.

Example: The repeat function is handy if you have a recurring event, a weekly class, a biweekly meeting, or a daily routine you need to remember.


- **Repeat until**—You can set an ending date for the repeated entry, for example, the ending date of a weekly course you are taking. This option is shown only if you have selected to repeat the event.
- **Synchronization**—If you select **Private**, after synchronization the calendar entry can be seen only by you and it will not be shown to others with online access to view the calendar. This is useful when, for example, you synchronize your calendar on a compatible computer at work. If you select **Public**, the calendar entry is shown to others who have access to view your calendar online. If you select **None**, the calendar entry will not be copied to your PC when you synchronize your calendar.

Calendar views

MONTH VIEW

In the Month view, one row equals one week. The current date is underlined. Dates that have calendar entries are marked with a small triangle at the right bottom corner. There is a frame around the currently selected date.

- To open the Day view, scroll to the date you want to open and press .
- To go to a certain date, select **Options** → *Go to date*. Write the date and press OK.

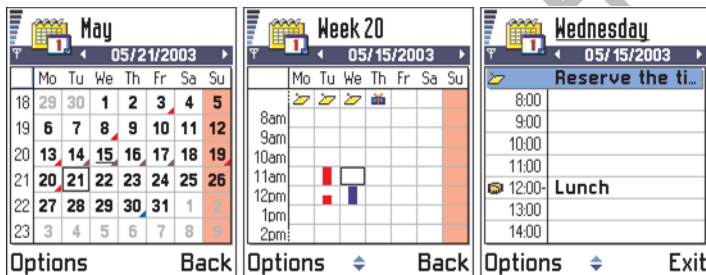

If you press the # key in Month, Week, or Day views, the current date is automatically highlighted.

Calendar entry icons in Day and Week views



Meeting



Memo



Anniversary

Synchronization icons in Month view



Private



Public



None



The day has more
than one view

WEEK VIEW

In the Week view, the calendar entries for the selected week are shown in seven day boxes. The current day of the week is underlined. Memos and Anniversaries are placed before 8 AM. Meeting entries are marked with colored bars according to starting and ending times.

To view or edit an entry, scroll to the cell that has an entry and press  to open the Day view, then scroll to the entry and press  to open it.

Options in the different calendar views are: *Open, New entry, Week view/ Month view, Delete, Go to date, Send, Settings, Help, and Exit.*

DAY VIEW

In the Day view, you can see the calendar entries for the selected day. The entries are grouped according to their starting time. Memos and Anniversaries are placed before 8 AM.

- To open an entry for editing, scroll to it and press .
- Press  to go to the next day or press  to go to the previous day.

SETTINGS FOR CALENDAR VIEWS

Select **Options**→ *Settings* and select:

- **Default view**—To select the view that is shown first when you open Calendar.
- **Week starts on**—To change the starting day of the week.
- **Week view title**—To change the title of the Week view to be the week number or the week dates.

Shortcut: To create a calendar entry, press any key (1–0) in any calendar view. A Meeting entry is opened and the characters you keyed in are added to the Subject field.

• SET CALENDAR ALARMS

- 1 Create a new Meeting or Anniversary entry, or open a previously created entry.
- 2 Scroll to Alarm and press  to open the Alarm time and Alarm date fields.

- 3 Set the alarm time and date.
- 4 Press **Done**. An alarm indicator  is shown next to the entry in the Day view.

Stop a calendar alarm

The alarm duration is one minute. When the alarm time expires, press **Stop** to end the calendar alarm. If you press any other key, the alarm is set to snooze.

• SEND CALENDAR ENTRIES

In the Day view, scroll to the entry you want to send and select **Options**→**Send**. Then select the method, the choices are: *Via text message*, *Via e-mail* (available only if the correct e-mail settings are in place), *Via Bluetooth*, or *Via infrared*. For further information, see the "Messaging" on p. 75, "Send and receive data using infrared" on p. 151, and "Send data using Bluetooth connection" on p. 146.

• TO-DO

Go to **Menu**→*To-do*.

In To-do you can keep a list of tasks that you need to do.

The To-do list uses shared memory. See "Shared memory" on p. 21.

- 1 To start to write a to-do note, press any key (1–9). The editor opens and the cursor blinks after the letters you have keyed in.
- 2 Write the task in the Subject field. Press the * key to add special characters.
 - To set the due date, scroll to the Due date field and key in a date.
 - To set a priority, scroll to the Priority field and press .
- 3 To save the to-do note, press **Done**.





Note: If you remove all characters and press **Done**, the previously saved note will be deleted.

- To open a to-do note, scroll to it and press .
- To delete a to-do note, scroll to it and select **Options**→ *Delete* or press .
- To mark a to-do note as completed, scroll to it and select **Options**→ *Mark as done*.
- To restore a to-do note, select **Options**→ *Mark as not done*.

Priority icons



High



Low

no icon

Normal

Status icons



task completed



task not completed

• IMPORT DATA FROM OTHER NOKIA PHONES

You can move calendar, contacts, and to-do data from many different Nokia phones to your Nokia 3620 or Nokia 3660 using the PC Suite Data Import application. Instructions for using the application can be found in the PC Suite online help on the CD-ROM.

13 Extras



• CALCULATOR



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu**→ *Extras*→ *Calculator*.

Options in Calculator are: *Last result, Memory, Clear screen, Help, and Exit.*

- 1 Enter the first number of your calculation. Press to erase any mistakes.
- 2 Scroll to a function and press to select it.
Use to add, to subtract, to multiply, or to divide.
- 3 Enter the second number.
- 4 To execute the calculation, scroll to and press .



Note: The Calculator has limited accuracy and rounding errors may occur, especially in long divisions.

- To add a decimal, press the # key.
- Press and hold to clear the result of the previous calculation.
- Use and to view previous calculations and move in the sheet.
- Select to save a number to the memory, indicated by **M**. To retrieve the number from the memory, select .
- To retrieve the result of the last calculation, select *Options*→ *Last result*.

Press the # key repeatedly to scroll the functions. You can see the selection change between the functions.

• COMPOSER

Go to *Menu*→ *Extras*→ *Composer*.



Options in the Composer main view are: *Open*, *New tone*, *Delete*, *Mark/Unmark*, *Rename*, *Duplicate*, *Help*, and *Exit*.

Composer allows you to create your own, customized ringing tones. Note that it is not possible to edit a default ringing tone.

1 Select **Options**→ *New tone* to open the editor and to start composing.

- Use the keys to add notes and rests. See the following table.
Or, select **Options**→ *Insert symbol* to open a list of notes and rests.
The default duration for a note is 1/4.
- To listen to the tone, press  or select **Options**→ *Play*. The playback is always started from the beginning of the tone. To stop playing, press **Stop**.
- To adjust the volume while a tone is playing, press  to increase or press  to decrease it. Or, select **Options**→ *Volume* before you start to play the tone.
- To adjust the tempo, select **Options**→ *Tempo*. To increase or decrease the tempo gradually, press and hold  or , respectively. Tempo is measured in beats per minute. The maximum is 250 beats, the default tempo for a new tone is 160 beats, and the minimum is 50 beats.
- To select many notes or rests at the same time, press and hold  and press and hold  or  at the same time.
- To apply different playing styles, select two or more notes and then select **Options**→ *Style*→ *Legato* (notes are played in a smooth and even manner) or select one or more notes and then select *Staccato* (notes are played separately to produce short sharp sounds).
- To move note(s) up or down on the staff by a half step, scroll to the note and press  or .
- For example, press and hold  together with the **1** key to

produce C#.

2 Select **Back** to save.

Options when composing are: *Play, Insert symbol, Style, Tempo, Volume, Help* and *Exit*.

Key	Note	Key and function
1	C	The 8 key shortens the duration of the selected note(s)/rest(s) in steps.
2	D	The 9 key lengthens the duration of the selected note(s)/rest(s) in steps.
3	E	The 0 key inserts a rest.
4	F	Press the * key to open a list of notes and rests.
5	G	The # key switches octaves, all selected note(s) or rest(s) is/are moved to the next octave.
6	A	 deletes selected note(s).
7	B	A long press of keys 0–7 produces a lengthened (dotted) note or rest or shortens a lengthened note.

• CONVERTER



In Converter, you can convert measures such as Length from one unit (Yards) to another (Meters).

Go to **Menu** → *Extras* → *Converter*.

Options in Converter are: *Select unit / Change currency, Conversion type, Currency rates, Help, and Exit.*



Note: The Converter has limited accuracy and rounding errors may occur.

Convert units

- 1 Scroll to the **Type** field and press  to open a list of measures. Scroll to the measure you want to use and press **OK**.
- 2 Scroll to the first **Unit** field and press  to open a list of available units. Select the unit from which you want to convert and press **OK**.
Scroll to the next **Unit** field and select the unit to which you want to convert.
- 3 Scroll to the first **Amount** field and key in the value you want to convert. The other **Amount** field changes automatically to show the converted value.

Press the **#** key to add a decimal and press the ***** key for the **+**, **-** (for temperature), and **E** (exponent) symbols.

 **Note:** The conversion order changes if you write a value in the second **Amount** field. The result is shown in the first **Amount** field.
To rename a currency, go to the **Currency rates** view, scroll to the currency, and select **Options**→ *Rename currency*.

Set a base currency and exchange rates

Before you can make currency conversions, you need to choose a base currency (usually your domestic currency) and add exchange rates.

 **Note:** The rate of the base currency is always 1. The base currency determines the conversion rates of the other currencies.

Example: If you set the United States Dollar (USD) as the base currency, a Euro is 1.00. Thus, you would write 1.00 as the exchange rate for the Euro.

- 1 Select **Currency** as the measure type and select **Options**→ *Currency rates*. A list of currencies opens and you can see the current base currency at the top.
- 2 To change the base currency, scroll to the currency (usually your domestic currency), and select **Options**→ *Set as base curr..*

 **Important:** When you change the base currency, all previously set exchange rates are set to **0** and you need to key in new rates.

- 3 Add exchange rates (see example), scroll to the currency, and key in a

new rate, that is, how many units of the currency equal one unit of the base currency you have selected.

- 4 After you have inserted all the needed exchange rates, you can make currency conversions. See "Convert units" on p. 122.

• NOTES



Go to **Menu**→ *Extras*→ *Notes*.

You can link notes to Favorites and send them to other devices. Plain text files (TXT format) you receive can be saved to Notes.

Press the **1-0** keys to start to write. Press **©** to clear letters. Press **Done** to save.

• CLOCK



Go to **Menu**→ *Extras*→ *Clock*.

Options in Clock are: *Set alarm, Reset alarm, Remove alarm, Settings, Help, and Exit.*

Change clock settings

To change the time or date, select **Options**→ *Settings* in Clock. To change the clock shown in the standby mode, scroll down in the Date and time settings and select **Clock type**→ *Analog or Digital*.

Set an alarm

- 1 To set a new alarm, select **Options**→ *Set alarm*.
- 2 Enter the alarm time and press **OK**. When the alarm is active, the  indicator is shown.

The alarm clock works even if the phone is switched off.

To cancel an alarm, go to clock and select **Options**→ *Remove alarm*.

Turn off an alarm

- Press **Stop** to turn off the alarm.
- When the alarm tone sounds, press any key or **Snooze** to stop the alarm for five minutes, after which it will resume. You can do this a

maximum of five times.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls. Press **No** to switch off the phone or **Yes** to make and receive calls.

 **Note:** Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.

• RECORDER

Go to **Menu**→ *Extras*→ *Recorder*.

Options in Recorder are: *Open, Record sound clip, Delete, Move to phone mem, Move to mem. card, Rename sound clip, Send, Add to Favorites, Help, and Exit.*

The voice recorder allows you to record telephone conversations and voice memos. If you are recording a telephone conversation, both parties will hear a tone every five seconds during recording.

 **Note:** When using this feature, obey all laws and respect the privacy and legitimate rights of others.

Select **Options**→ *Record sound clip* and scroll to a function and press  to select it. Use: —to record, —to pause, —to stop, —to fast forward, —to fast rewind, or —to play an opened sound file.

 **Note:** Recorder cannot be used when a data call or a GPRS connection is active.

• MEMORY CARD

Options in the memory card are: *Backup phone mem., Restore from card, Format mem. card, Memory card name, Set password, Change password, Remove password, Unlock memory card, Mem. in use, Help and Exit.*



If you have a memory card you can use it to store your multimedia files like video clips and sound files, photos, messaging information, and to backup information from your phone's memory.




Important: Keep all memory cards out of the reach of small children.



Note: Details of how you can use the memory card with other features and applications of the Nokia 3620 and Nokia 3660 are given in the sections describing these features and applications.

Insert the memory card

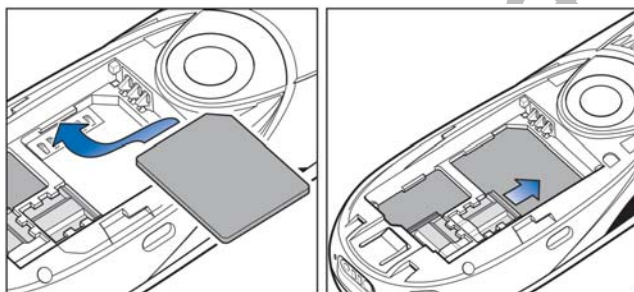

- 1 Make sure the phone is switched off.
- 2 With the back of the phone facing you, slide open the cover and remove the battery, see Quick start 'Insert the SIM card' for instructions on removing the cover.
- 3 Position the memory card in its slot.
Make sure that the gold contacts of the card are facing down.
- 4 Slide the silver catch over the memory card to secure it.
- 5 When you have secured the card in place, replace the battery, then replace the cover by sliding it back into place.




Important: If you are installing an application to the memory card and need to reboot the phone, do not remove the card until the reboot is complete. Otherwise the application files may be lost.

Format the memory card

You must format the memory card before you can use it for the first time.

Select **Options**→ *Format mem. card*.

You will be asked to confirm your request and once you confirm, formatting starts.

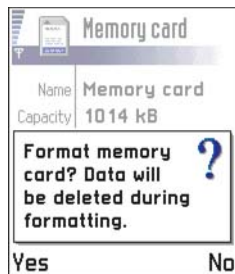

Back up and restore phone memory

You can backup information from your phone's memory to the memory card. Select **Options**→ *Backup phone mem.*

You can restore information from the memory card to the phone's memory. Select **Options**→ *Restore from card*.

Memory card password

You can set a password to protect your memory card against unauthorized use.



Note: The password is stored in your phone and you do not have to enter it again while you are using the memory card on the same phone. If you want to use the memory card on another phone, you will be asked for the password.

To set up, change, or remove your password select **Options**→ *Set password*, *Change password*, or *Remove password*.

The password can be up to eight characters long.



Important: Once the password is removed, the memory card can be used on any phone without a password.

UNLOCK A MEMORY CARD

If you insert another password protected memory card in your phone, you will be prompted to enter the password of the card. To unlock the card, select **Options**→ *Unlock memory card*.

Check memory consumption

Using the *Mem. in use* option, you can check the memory consumption of different data groups and the available memory for installing new applications or software on your memory card.

Select **Options**→ *Mem. in use*.

FCC Draft

14 Services (XHTML)



Go to **Menu**→ *Services* or press and hold the **0** key in the standby mode.


The **0** key is marked with an internet symbol so that you can easily locate it and use it to connect to the internet.



 **Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

XHTML browser supports pages written in the Hypertext Markup Language (XHTML) and the Wireless Markup Language (WML).

Various service providers on the Internet maintain pages specifically designed for mobile phones, offering services such as news, weather reports, banking, travel information, entertainment, and games. With the XHTML browser you can view these services as WAP pages written in WML, XHTML pages written in XHTML, or a mixture of both.

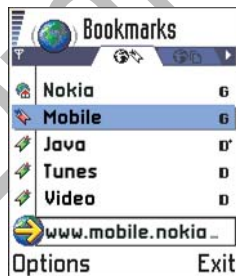

 **Note:** Check the availability of services, pricing, and tariffs with your network operator and/or service provider. Service providers will also give you instructions on how to use their services.

• BASIC STEPS FOR ACCESSING THE WEB

- Save the settings that are needed to access the web service that you want to use. See "Phone browser service settings" on p. 129.
- Connect to the service. See "Make a connection" on p. 129.
- Start browsing the web pages. See "Browsing" on p. 132.
- Disconnect from the service. "End a connection" on p. 135.

• PHONE BROWSER SERVICE SETTINGS

Receiving settings in a smart message

Settings may be available, for example, on the site of a network operator or service provider.

You may receive service settings in a special text message called a "smart message" from the network operator or service provider that offers the service. See "Receive smart messages" on p. 92. For more information, contact your network operator or service provider.

Key in the settings manually

Follow the instructions given to you by your service provider.

- 1 Go to **Settings**→ *Connection settings*→ *Access points* and define the settings for an access point. See "Connection settings" on p. 38.
- 2 Go to **Services**→ *Options*→ *Add bookmark*. Write a name for the bookmark and the address of the browser page defined for the current access point.

Make a connection

To access the Bookmarks view while browsing, press and hold down . To return to the browser view again, select **Options**→ *Back to page*.

Once you have stored all the required connection settings, you can access browser pages.

There are three different ways to access browser pages:

- Select the homepage () of your service provider.
- Select a bookmark from the Bookmarks view.
- Press the **2-9** keys to start to write the address of a browser service. The Go to field at the bottom of the display is immediately activated and you can continue writing the address there.

After you have selected a page or written the address, press  to start to download the page. See also "Data connection indicators" on p. 15.

Connection security

If the security indicator  is displayed during a connection, the data transmission between the phone and the browser gateway or server is encrypted and secure.

 **Note:** The security icon does not indicate that data transmission between the gateway and the content server (the place where the requested resource is stored) is secure. It is up to the service provider to secure data transmission between the gateway and the content server.

View bookmarks

Options in the Bookmarks view (selection on a bookmark or folder) are: *Open, Download, Back to page, Send, Go to URL address / Find bookmark, Add bookmark, Edit, Delete, Read service msgs., Disconnect, Move to folder, New folder, Mark/Unmark, Rename, Clear cache, Details, Add to Favorites, Settings, Help, and Exit.*

A bookmark consists of an Internet address (mandatory), bookmark title, WAP access point, and if the service requires, a user name and password.

 **Note:** Your phone may have some pre-installed bookmarks for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any site.

In the Bookmarks view, you can see bookmarks pointing to different kinds of web pages. Bookmarks are indicated by the following icons:



— The starting page defined for the browser access point. If you use another web access point for browsing, the starting page is changed accordingly.



-  – The last visited page. When the phone is disconnected from the service, the address of the last visited page is kept in memory until a new page is visited during the next connection.
-  – A bookmark showing the title.

When you scroll through bookmarks, you can see the address of the highlighted bookmark in the Go to field at the bottom of the display. See the bookmarks figure in "Keys and commands used in browsing" on p. 132.

Options when browsing are: *Open, Service options, Bookmarks, History, Go to URL address, View images, Read service msgs., Save as bookmark, Send bookmark, Reload, Disconnect, Show images, Clear cache, Save page, Find, Details, Session, Security, Settings, Help, and Exit.*

Add bookmarks

- 1 In the Bookmarks view, select **Options**→ *Add bookmark*.
- 2 Start to fill in the fields (see the bookmarks figure in "Keys and commands used in browsing" on p. 132). Only the address must be defined. The default access point is assigned to the bookmark if no other one is selected. Press  to enter special characters such as /, ., :, and @. Press  to clear characters.
- 3 Select **Options**→ *Save* to save the bookmark.

Send bookmarks



To send a bookmark, scroll to it and select **Options**→ *Send*→ *Via text message*.

● BROWSING

On a browser page, new links appear underlined in blue and previously visited links in purple. Images that act as links have a blue border around them.

Keys and commands used in browsing

- To open a link, press .
- To scroll the view, use the **Scroll** key.
- To enter letters and numbers in a field, press the **0–9** keys. Press the ***** key to enter special characters such as **/**, **.**, **:**, and **@**. Press  to clear characters. (See "Write text" on page 78.)
- To go to the previous page while browsing, press **Back**. If **Back** is not available, select **Options**→*History* to view a chronological list of the pages you have visited during a browsing session. The history list is cleared each time a session is closed.
- To check boxes and make selections, press .
- To retrieve the latest content from the server, select **Options**→*Reload*.
- To open a sublist of commands or actions for the currently open web page, select **Options**→*Service options*.
- Press  to disconnect from a web service and to quit browsing.

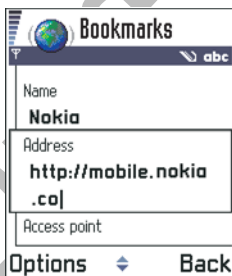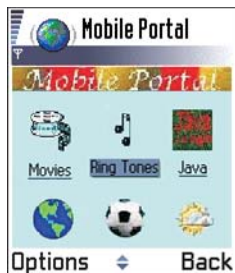

VIEWING NEW SERVICE MESSAGES WHILE BROWSING

To download and view new service messages while browsing:

- 1 Select **Options**→*Read service msgs.* (shown only if there are new messages).
- 2 Scroll to the message and press  to download and open it.

For more information about service messages, see "Service messages" on p. 93.

SAVING BOOKMARKS

- To save a bookmark while browsing, select **Options**→ *Save as bookmark*.
- To save a bookmark received in a smart message, open the message in the Inbox in Messaging and select **Options**→ *Save to bookmarks*. See also "Receive smart messages" on p. 92.

VIEW SAVED PAGES

Options in the Saved pages view are: *Open, Back to page, Reload, Remove, Read service msgs., Disconnect, Move to folder, New folder, Mark/Unmark, Rename, Clear cache, Details, Add to Favorites, Settings, Help, and Exit.*

If you regularly browse pages containing information that doesn't change very often, for example a train timetable, you can save and then browse them when offline. If you have a memory card, you can save web pages on it instead of the phone's memory.

To save a page, while browsing select **Options**→*Save page*.



- Saved web pages are indicated by the  icon.
- In the saved pages view you can also create folders to store your saved web pages. Folders containing saved web pages are indicated by the  icon.
- To open the Saved pages view, press  in the Bookmarks view (see the saved pages figure on p. 133). In the Saved pages view, press  to open a saved page.
- If you want to start a connection to the web service and to retrieve the page again, select **Options**→ *Reload*. You can also arrange the pages into folders.



Note: The phone stays online after you reload the page.

• DOWNLOAD THROUGH THE BROWSER

You can download items such as ringing tones, images, operator logos and video clips through the mobile browser. These items can be provided free or for a price.

Once downloaded, items are handled by the respective applications on your phone, for example a downloaded photo will be saved in the Images.

Download directly from the web page

To download the item directly from a web page scroll to the link and select **Options**→ *Open*.

Purchase an item

Digital Rights Management (DRM) is a system for protecting the copyright of digital content that is distributed online. Copyright protections may prevent some images, ringtones and other content from being copied, modified, transferred or forwarded.

To download the item:

- Scroll to the link and select **Options**→ *Open*.
- Select **Buy** if you want to buy the item.

Check an item before downloading

You can see details about an item before you download it. Details about an item may include the price, brief description and size.



Note: Check with your service provide to see if they offer this service.

- Scroll to the link and select **Options**→*Open*.

Details about the item are displayed on your phone.

- If you want to continue with the downloading, press **Accept** or if you want to cancel the download, press **Cancel**.



• END A CONNECTION

To end a connection, select **Options**→*Disconnect*. You can also press and hold  to quit browsing and to return to the standby mode.

Empty the cache

The information or services you have accessed are stored in the cache memory of the phone.

If you have tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use. To empty the cache, select **Options**→*Clear cache*.



Note: A cache is a buffer memory that is used to store data temporarily.

• BROWSER SETTINGS

- **Default access point**—If you want to change the default access point, press  to open a list of available access points. The current default access point is highlighted. For more information, see "Connection settings" on p. 38.
- **Show images**—Choose if you want to view pictures when you are browsing. If you choose **No**, you can later load images during browsing by selecting **Options**→*Show images*.

- **Font size**—You can choose five text sizes in the browser: Smallest, Small, Normal, Large and Largest.
- **Cookies**—Allow /Reject. You can enable or disable the receiving and sending of cookies.
- **Confirm touch tones**—Always / First sending only. The browser supports functions you can access while browsing. You can make a voice call while you are on a browser page, send touch tones while a voice call is in progress, and save in Contacts a name and phone number from a browser page. Choose whether you want to confirm before the phone sends touch tones during a voice call.
- **Text wrapping**—Choose Off if you don't want the text in a paragraph to automatically wrap, or On if you do.

15 Java™ Applications



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu**→ *Applications*.

Options in the Applications main view are: *Open, View details, Settings, Remove, Go to URL address, Update, Help, and Exit.*

In the Applications main view you can open installed Java applications or remove them. In the Install view you can install new Java applications (file extensions .jad or .jar).



Note: Your phone supports J2ME Java applications. Do not download PersonalJava applications to your phone as they cannot be installed.

When you open Applications, you can see a list of Java applications that have been installed to your phone. Scroll to an application and select **Options**→ *View details* to view:

- **Status**—Installed, Running, or Downloaded (shown only in Install view)
- **Version**—the application version number
- **Supplier**—the supplier or manufacturer of the application
- **Size**—the size of the application file in kilobytes
- **Type**—a brief description of the application
- **URL**—an address of an information page on the Internet
- **Data**—the size of application data such as high scores, in kilobytes

To start a data connection and to view extra information about the application, scroll to it and select **Options**→ *Go to URL address*.

To start a data connection and to check if there is an update available for the application, scroll to it and select **Options**→ *Update*.



Applications uses shared memory. See "Shared memory" on p. 21.

● INSTALL A JAVA APPLICATION

Options in the Install view are: *Install*, *View details*, *Delete*, *Help*, and *Exit*.

Installation files may be transferred to your phone from a computer, downloaded during browsing, or sent to you in a multimedia message as an e-mail attachment using a Bluetooth connection or infrared connection. If you are using PC Suite to transfer the file, place it in the `c:\nokia\installs` folder in your phone.



Warning: Only install software from sources that offer adequate protection against viruses and other harmful software.

- 1 In the Applications main view, to view the installation packages, press  to open the Downloaded view.



Note: In the Install view, you can only install Java software installation files with the extension .jad or .jar.

- 2 To install an application, scroll to an installation file and select **Options** → *Install*.

Alternatively, search the phone memory for the installation file, select the file, and press  to start the installation.

Example: If you have received the installation file as an e-mail attachment, go to your mailbox, open the e-mail, open the Attachments view, scroll to the installation file, and press  to start the installation. Press **Yes** to confirm the installation.

The .jar file is required for installation. If it is missing, the phone may ask you to download it. If there is no access point defined for Applications, you will be asked to select one. When you are downloading the JAR file, you may need to enter a user name and password to access the server. You obtain these from the supplier or manufacturer of the application.

During installation, the phone checks the integrity of the package to be installed. The phone shows information about the checks being carried out, and you are given options whether to continue with or cancel the installation. Once the phone has checked the integrity of the software package, the application is installed on your phone.

The phone informs you when installation is complete. To open the Java application after installation, you must go to the Applications main view.

When you are browsing WAP or browser pages, you can download an installation file and install it immediately. Note, however, that the connection is left running in the background during installation.

OPENING A JAVA APPLICATION

Scroll to an application in the Applications main view and press  to open it.

UNINSTALLING A JAVA APPLICATION

Select the application in the Applications main view and select **Options**→*Remove*.

• JAVA APPLICATION SETTINGS

To define a default access point for downloading missing application components, select **Options**→*Settings*→*Default access point*. For more information on creating access points, see the "Access points" on p. 40.

Select an application and select **Options**→*Settings*, and then select one of the following:

Access point—Select an access point to be used by the application for downloading extra data.

Network connection—Some Java applications may require a data connection to be made to a defined access point. If no access point has been selected, you will be asked to select one. The options are:

- **Allowed**—The connection is created immediately without a notification.
- **Ask first**—You will be asked before the application makes the connection.
- **Not allowed**—Connections are not allowed.

16 Manager

• INSTALL APPLICATIONS AND SOFTWARE



Note: Your phone must be switched on to use the functions in the Tools folder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu**→ *Tools*→ *Manager*.

In Manager you can install new applications and software packages, and remove applications from your phone. You can also check the memory consumption.

Options in the Manager main view are: *View details, View certificate, Install, Remove, View log, Send log, Memory details, Help, and Exit.*

When you open Manager, you can see a list of:

- Installation packages that have been saved to Manager.
- Partially installed applications (indicated by .
- Fully installed applications that you can remove (indicated by .



Note: In Manager, you can only use device software installation files with an .sis extension.

To install Java applications (file extension .jad or .jar), go to Applications. For further information, see “Java™ Applications” on p. 137.

Scroll to an installation file and select **Options**→ *View details* to view the *Name, Version, Type, Size, Supplier, and Status* of the software package.

Scroll to a software package and select **Options**→ *View certificate* to display the security certificate details of a software package. See “Certificate management” on p. 48.



Warning: Only install software from sources that offer adequate protection against viruses and other harmful software.

To help you, the software installation system uses digital signatures and certificates on software packages. Do not install the application if Manager gives a security warning during installation.

Select **Options**→ *View log* to see what software packages have been installed or removed and when.

• INSTALL SOFTWARE

You can install applications that are specifically intended for the Nokia 3620 and Nokia 3660 phones or suitable for the Symbian operating system. A software package is usually one large compressed file containing many component files.



Note: If you install a program that is not intended specifically for the Nokia 3620 and Nokia 3660 phones, it may function and look very different from the usual Nokia 3620 and Nokia 3660 phone applications.



Warning: If you install a file that contains an update or repair to an existing application, you can only restore the original application if you have the original installation file or a full back-up copy of the removed software package. To restore the original application, first remove the application and then install the application again from the original installation file or the back-up copy.

Installation packages may be transferred to your phone from a computer, downloaded during browsing, or sent to you in a multimedia message, as an e-mail attachment, by Bluetooth connection, or by infrared. If you are using PC Suite to transfer the file, place it in the **c:\nokia\installs** folder on your phone.

Example: If you have received the installation file as an e-mail attachment, go to your mailbox, open the e-mail, open the Attachments view, scroll to the installation file, and press  to start the installation.

Start the installation:

To start the installation, open Manager, scroll to the installation package, and select **Options**→ *Install*.

Alternatively, search the phone memory or the memory card for the installation file, select the file, and press  to start the installation.

If you are installing software without a digital signature or a certificate, the phone warns you of the risks of installing software. Continue installation only if you are absolutely sure of the origin and contents of the software package.

During installation, the phone checks the integrity of the package to be installed. The phone shows information about the checks being carried out and you are given options whether to continue or cancel the installation. Once the phone has checked the integrity of the software package, the application is installed on your phone.

To send your installation log to a help desk so that they can see what has been installed or removed, select **Options**→ *Send log*→ *Via text message* or *Via e-mail* (available only if the correct e-mail settings are in place).

• REMOVE SOFTWARE

- 1 To remove a software package, scroll to it and select **Options**→ *Remove*.
- 2 Press **Yes** to confirm the removal.



Warning: If you remove software, you can only re-install it if you have the original software package or a full back-up of the removed software package. If you remove a software package, you may no longer be able to open documents created with that software. If another software package depends on the software package that you removed, the other software package may stop working. Refer to the documentation of the installed software package for details.

- **VIEW MEMORY CONSUMPTION**

To open the memory view select **Options**→ *Memory details*.



Note: If you have a memory card installed on your phone, you will have a choice of two memory views, one for the phone or *Phone memory* and one for the *Memory card*. If not, you will only have the *Phone memory* view.

When you open either of the memory views, the phone calculates the amount of free memory for storing data and installing new software. In the memory views, you can view the memory consumption of the different data groups: Calendar, Contacts, Documents, Messages, Images, Sound files, Video clips, Applications, Mem. in use, and Free memory.

If the phone memory is getting low, remove some documents, or move them to the memory card. See also the "Troubleshooting" on p. 178.

17 Connectivity



Note: Your phone must be switched on to use the functions in the **Connectivity** folder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can transfer data from your phone to another compatible device, for example, a phone or a computer, using a Bluetooth connection or infrared.

• BLUETOOTH CONNECTION

Go to **Menu**→ *Connect*.→ *Bluetooth*.


Bluetooth connectivity enables cost-free wireless connections between electronic devices within a maximum range of 30 feet. A Bluetooth connection can be used to send images, texts, business cards, and calendar notes. It can also be used to connect wirelessly to products with or using Bluetooth wireless technology, such as computers.

Since Bluetooth devices communicate using radio waves, your phone and the other Bluetooth device do not need to be in direct line-of-sight.

The two devices only need to be within a maximum of 30 feet (10 meters) of each other, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

Using the Bluetooth application consumes the battery and the phone's operating time will be reduced. Take this into account when performing other operations with your phone.

There may be restrictions on using Bluetooth devices. Check with your local authorities.

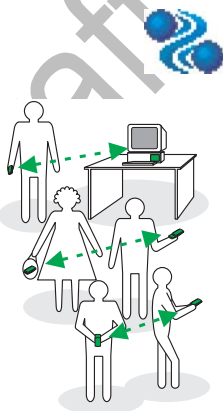

Bluetooth device compatibility

The Nokia 3620 and Nokia 3660 phones are designed to be compliant with and to adapt to Bluetooth Specification 1.1. Compatibility between the phone and other products with Bluetooth wireless technology depends also on the profiles and protocols used by both devices. The current profiles supported by the Nokia 3620 and Nokia 3660 are:

- Dial-Up Networking profile (DUN) as a gateway
- Fax profile (FAX) as a gateway
- Object Push profile (OPP) as a client and server
- File Transfer profile (FTP) as a server
- Handsfree profile (HFP) as an audio gateway
- Generic Object Exchange profile (GOEP)
- Generic Access profile (GAP)
- Serial Port profile (SPP) with the PC connectivity software

For information on compatibility with other Bluetooth devices, contact their manufacturers.


Activate the Bluetooth application for the first time

When you activate the Bluetooth application for the first time, you are asked to give a Bluetooth name to your phone.

After you have set the Bluetooth application to be active and changed My phone's visibility to All, your phone and this name can be seen by other Bluetooth device users.

Write a name (max. 30 letters) or use the default name. If you send data using a Bluetooth connection before you have given an individual Bluetooth name to your phone, the default name will be used.

To send text using a Bluetooth connection (instead of text messages), go to Notes, write the text, and select **Options**→ *Send*→ *via Bluetooth*.

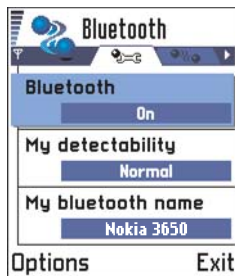

Bluetooth application settings

To modify the Bluetooth application settings, scroll to the setting you want to change and press .

- **Bluetooth**—Select **On** if you want to use Bluetooth wireless technology. If you set the Bluetooth application **Off** all active Bluetooth connections are ended and the Bluetooth application cannot be used for sending or receiving data.
- **My phone's visibility**—If you select **Shown to all**, your phone can be found by other Bluetooth devices during device search. If you select **Hidden**, your phone cannot be found by other devices during device search.
- **My Bluetooth name**—Define a Bluetooth name for your phone. After you have set the Bluetooth application to be active and changed **My phone's visibility** to **All**, this name can be seen by other Bluetooth device users.

When searching for devices, some Bluetooth devices may show only the unique Bluetooth addresses (device addresses). To find out what the unique Bluetooth address of your phone is, enter the code ***#2820#** in the standby mode.

Send data using Bluetooth connection

 **Note:** There can be only one active Bluetooth connection at a time.

- 1 Open an application where the item you wish to send is stored. For example, to send a photo to another device, open the Images application.
- 2 Scroll to the item you want to send, for example, a photo and select **Options**→**Send**→**Via Bluetooth**.



- 3 The phone starts to search for devices within range. Bluetooth enabled devices that are within range start to appear on the display one by one. You can see a device icon, the device's Bluetooth name, the device type, or a short name. Paired devices are shown with .



Note: If you have searched for Bluetooth devices earlier, a list of the devices that were found previously is shown first. To start a new search, select *More devices*. If you switch off the phone, the list of devices is cleared and the device search needs to be started again before sending data.

To interrupt the search, press **Stop**. The device list freezes and you can start to form a connection to one of the devices already found.

- 4 Scroll to the device you want to connect with and press **Select**. The item you are sending is copied to Outbox and the note *Connecting* is shown.
- 5 If required to pair with the other device, consider the following:
 - If the other device requires pairing before data can be transmitted, a tone sounds and you are asked to enter a passcode.
 - Create your own passcode (1-16 characters long, numeric) and agree with the owner of the other Bluetooth device to use the same code. This passcode is used only once and you do not have to memorize it.
 - After pairing, the device is saved to the Paired devices view (see "Paired devices view" on p. 148).



Note: Pairing means authentication. The users of the Bluetooth enabled devices should agree on the passcode and use the same passcode for both devices in order to pair them. Devices that do not have a user interface have a factory set passcode.

When the connection has been successfully established, the note *Sending data* is shown.



Note: Data received by a Bluetooth connection can be found in the Inbox folder in Messaging. See "Inbox" on p. 90 for further information.



Note: If sending fails, the message or data will be deleted. The Drafts folder in Messaging does not store messages sent by a Bluetooth connection.

Icons for different Bluetooth enabled devices



Computer



Phone



Other



Unknown

Check the status of the Bluetooth connection

- When  is shown in the standby mode, the Bluetooth application is active.
- When  is blinking, your phone is trying to connect to the other device.
- When  is shown continuously, the Bluetooth connection is active.

Paired devices view

Options in the paired devices view are: *New paired device, Connect / Disconnect, Assign short name, Delete, Delete all, Set as authorized / Set as unauthorized, Help, and Exit.*

Pairing with a device makes device searches easier and quicker. Paired devices are easier to recognize; they are indicated by  in the search result list. In the Bluetooth application main view, press  to open a list of paired devices (.

PAIR WITH A DEVICE

- 1 Select **Options** → *New paired device* in the Paired devices view. The phone starts to search for devices within range. Or, if you have searched

for Bluetooth devices earlier, a list of the devices that were found previously is shown first. To start a new search, select **More devices**.

- 2 Scroll to the device you want to pair with and press **Select**.
- 3 Exchange passcodes. See "Send data using Bluetooth connection" on p. 146. The device is added to the Paired devices list.

You can also play phone-to-phone games using a Bluetooth connection.

CANCEL PAIRING

- In the Paired devices view, scroll to the device whose pairing you want to cancel and press **C** or select **Options**→ *Delete*. The device is removed from the Paired devices list and the pairing is cancelled.
- If you want to cancel all pairings, select **Options**→ *Delete all*.

 **Note:** If you are currently connected to a device and delete the pairing with that device, pairing is removed immediately but the connection will remain active.

ASSIGN SHORT NAMES FOR PAIRED DEVICES

You can define a short name (nickname, alias) to help you recognize a certain device. This name is stored in the phone memory and cannot be seen by other Bluetooth device users.

Example: Give a short name to your friend's Bluetooth enabled device or to your own computer to be able to recognize it more easily.

To assign a short name, scroll to the device and select **Options**→ *Assign short name*. Write the short name and press **OK**.

 **Note:** Choose a name which is easy to remember and recognize. Later when you are searching for devices or a device is requesting a connection, the name you have chosen will be used to identify the device.


SET A DEVICE TO BE AUTHORIZED OR UNAUTHORIZED

After you have paired with a device, you can set it to be authorized or unauthorized:

Unauthorized (default)—Connection requests from this device need to be accepted separately every time.

Authorized—Connections between your phone and this device can be made without your knowledge. No separate acceptance or authorization is needed. Use this status for your own devices, for example, your PC, or devices that belong to someone you trust. The icon  is added next to authorized devices in the Paired devices view.

In the Paired devices view, scroll to the device and select Options→ *Set as authorized* / *Set as unauthorized*.

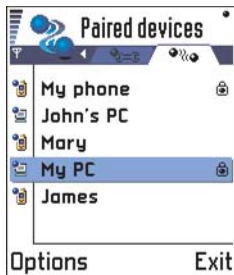

Receive data using a Bluetooth connection

When you receive data through a Bluetooth connection, a tone sounds and you are asked if you want to accept the Bluetooth message. If you accept,  is shown and the item is placed in the Inbox folder in Messaging. Bluetooth messages are indicated by . See "Inbox" on p. 90 for further information.

Disconnect a Bluetooth connection

A Bluetooth connection is disconnected automatically after sending or receiving data.

• INFRARED CONNECTION



To start infrared, go to **Menu**→ *Connect*→ *Infrared*

Using infrared, you can send or receive data such as business cards and calendar notes to and from a compatible phone or data device.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 Laser product.

Send and receive data using infrared



Note: All items which are received by infrared are placed in the Inbox folder in Messaging. New infrared messages are indicated by . See "Inbox" on p. 90 for further information.

- 1 Make sure that the infrared ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices. The preferable distance between the two devices is three feet at most. To find the infrared port, see the picture of the different keys in the General information section of this guide.
- 2 The user of the receiving device activates the infrared port.

To activate the infrared port of your phone to receive data by infrared, go to **Menu** → *Connect* → *Infrared* and press .

- 3 The user of the sending device selects the desired infrared function to start data transfer.

To send data by infrared, select **Options**→ *Send*→ *Via infrared* in an application.

If data transfer is not started within two minutes after the activation of the infrared port, the connection is cancelled and must be started again.

You can also play phone-to-phone games using infrared.

Example: To send a contact card by infrared: (1) Ask the receiver to activate the infrared port in his/her device. (2) Go to Contacts, scroll to a card and select **Options**→ *Send*→ *Via infrared*.

 **Note:** Windows 2000: To be able to use infrared to transfer files between your Nokia 3620 or Nokia 3660 and a compatible computer, go to "Control Panel" and select "Wireless Link". In the "Wireless Link" "File Transfer" tab check the "Allow others" to send files to your computer using infrared.

Check the status of the infrared connection

- When  blinks, your phone is trying to connect to the other device or a connection has been lost.
- When  is shown continuously, the infrared connection is active and your phone is ready to send and receive data through its infrared port.

• CONNECT YOUR PHONE TO A COMPUTER

For further information on how to make a connection to a compatible computer through infrared or a Bluetooth connection and how to install PC Suite, see "PC Suite" on page 154. For further information on how to use the PC Suite application, see the PC Suite online help.

Use the CD-ROM

The CD-ROM should launch itself after you have inserted it into the CD-ROM drive of your compatible PC. If not, proceed as follows:

- 1 Click the Window *Start* button and select **Programs**→ *Windows Explorer*.
- 2 On the CD-ROM drive, locate a file called *Nokia3620_3660.exe* and double-click it. The CD-ROM interface opens.
- 3 You can find PC Suite in the 'Install' section. When you launch the file, an installation wizard will guide you through the installation process.

• USE YOUR PHONE AS A MODEM



To use your phone as a modem, go to **Menu**→ *Connect*.→ *Modem*.

Using your phone as a modem, you can connect to the Internet and send or receive faxes with a computer. You can use an infrared or a Bluetooth connection.

18 PC Suite

With PC Suite you can:

- Share information between your PC and phone.
- Make back-up copies of the phone files to protect data in case of loss or damage.
- Synchronize your calendar, contacts, and tasks with Microsoft and Lotus applications.
- Copy and move files between your PC and phone.
- Copy contacts and calendar information from another Nokia mobile phone, Nokia communicator, or Palm device to your Nokia 3620 or Nokia 3660 phone.
- Configure phone settings.
- Install software on your phone.

Please refer to other sections of this user guide for instructions on operation, care, and maintenance of your Nokia phone, including important safety information.

• PC SUITE DOCUMENTATION AND HELP

The following documentation is available to assist you with installing and using PC Suite:

- *Nokia 3620 and Nokia 3660 User Guide*—This section of the user guide explains how to install PC Suite on a compatible PC, how to connect your phone to the PC, and how to start using PC Suite.
- *PC Suite online help*—For more detailed instructions and troubleshooting on the use of PC Suite, please refer to the online help that is automatically installed on your PC when you install PC Suite. To access the online help, click the **Start** button, select **Programs** and point to **PC Suite for Nokia 3620 and Nokia 3660**, and then click the file with **Help** in the title.

- *PC Suite Readme file*—The Readme file is automatically installed on your PC when you install PC Suite. It is recommended that you read this file before using PC Suite. Also, if you have problems installing or starting the application, you may find some troubleshooting assistance in this file. To access the readme file, click the **Start** button, select **Programs**, point to **PC Suite for Nokia 3620 and Nokia 3660**, and click the file with **Readme.txt** in the title.

• SOFTWARE AND HARDWARE REQUIREMENTS

To install and run PC Suite, you need:

- A compatible PC running Windows 98, Windows ME, Windows 2000 with Service Pack 2, or Windows XP.
- At least 110 MB of free disk space.

To connect your Nokia 3620 or Nokia 3660 phone to the PC, you need to have one of the following:

- An infrared connection: an infrared port on the computer.
- A Bluetooth connection: a Bluetooth card and the required software, or built-in support for Bluetooth connectivity on the PC. To be able to connect your Nokia 3620 or Nokia 3660 phone to your PC, the Bluetooth software needs to support the Serial Port Profile (SPP).

• INSTALL PC SUITE

PC Suite is in the "Install" section of the CD-ROM included in the Nokia 3620 or Nokia 3660 package. The CD-ROM should launch automatically after you have inserted it into the CD-ROM drive of your PC. If not, proceed as follows:

- 1 Click the **Windows Start** button, point to **Programs**, and select **Windows Explorer**.
- 2 Go to the CD-ROM root directory and double-click the **Nokia3620_3660.exe** file. The CD-ROM user interface opens.

When the CD-ROM interface is open, proceed as follows:

- 1 Click Install.
- 2 Locate the Install now section and click PC Suite for Nokia 3620 and Nokia 3660 (depending on your phone model).
- 3 Select the language for the installation and click Next to start the installation wizard. This wizard will guide you through the installation process. It is recommended that you accept the suggested destination folder and program folder.
- 4 As you go through the installation wizard, make sure that the Install the Nokia Connectivity SDK check box is selected in the Data Import dialog box if you want to transfer calendar and contacts data from another Nokia mobile phone to your Nokia 3620 or Nokia 3660 phone. If you do not install the Nokia Connectivity SDK component, you can only transfer data to your Nokia 3620 or Nokia 3660 from the Nokia 3600, Nokia 3650, Nokia 7650, Nokia 9210 Communicator, Nokia 9290 Communicator, a Palm device, or another Nokia 3620 or Nokia 3660.
- 5 In the File Transfer Video and Audio Converters dialog box it is recommended that you leave the Install Video and Audio Converters check box selected. When the converters are installed, video and audio format files that you copy from the PC to your Nokia 3620 or Nokia 3660 are automatically converted to the video and audio formats used by the phone.

If you do not have the CD-ROM, you can download the PC Suite software from www.nokiausa.com. From the home page, select Phones and Software. Enter your phone model and follow screen instructions to download the PC Suite installation file. Once the installation file is downloaded, go to the directory where you downloaded it and double-click it. Follow the instructions on the screen to install the software.

• CONNECT YOUR PHONE TO THE PC

When you use PC Suite for the first time, you must connect your phone to the PC. Thereafter, you can use PC Suite whether or not your phone is connected to your PC. You can connect your phone to the PC through an infrared or Bluetooth connection.

See the following online help topics for details:

- Connecting your Nokia 3620 or Nokia 3660 phone to a PC
- Disconnecting and reconnecting your Nokia 3620 or Nokia 3660 phone to a PC

See "PC Suite documentation and help" on page 154 to locate the online help.



Note: When you connect your phone to your PC, PC Suite automatically synchronizes the clock on the phone with the PC. Therefore, you need to make sure that the clock on your PC is correct.

If you have problems connecting your phone to the PC, check to see if both your phone and PC are switched on and that you have selected the correct communications port. Check the icons on the taskbar to see the connection status. The connection icon  changes to  when your phone is connected to the PC. You can double-click on this icon in your Windows taskbar to open a **Connection Properties** window that identifies which communications port PC Suite is using.

• START PC SUITE

You can start PC Suite from the Start menu: click the Start button, select Programs, select the PC Suite for Nokia 3620 and Nokia 3660 folder, and then click PC Suite for Nokia 3620 and Nokia 3660.

If you are connecting your phone to the PC for the first time, after starting PC Suite you are asked to do two things:

- Name your phone.

You can use more than one Nokia 3620 or Nokia 3660 phone with PC

Suite. To be able to identify individual phones, you must give a name to each phone.

- Select tasks to be created.

To be able to back up and synchronize information between your phone and PC, you must have the appropriate tasks created. During the first connection, PC Suite lists tasks that can be created automatically. You do not have to create these tasks at this point, if you do not want to. However, if you create the tasks, you can edit them later.

For more detailed information, refer to the PC Suite online help (see "PC Suite documentation and help" on page 154).

• **ONLINE AND OFFLINE MODES**

You can use PC Suite either in online mode or in offline mode. You have the following options:

- Work online—Connect your phone to the PC and let PC Suite identify it. In online mode your phone is connected to your compatible PC, and you can work with the information stored on the phone.
- Work offline—Leave your phone disconnected and choose the name of your phone from a list of named devices.

The menus and other available options in offline mode differ from those of online mode.

• **CONNECTION STATUS**

The icon on the right-hand side of the status bar and on the Windows taskbar displays the connection status as follows:



Disconnected



Connected



Transferring data (animated icon)

• PC SUITE APPLICATIONS

A number of icons are displayed on the left-hand side of the main PC Suite window—this area is known as the application bar. To use an application, click its icon. For information on using an application, see the online help.

Backup/Restore

With Backup/Restore, you can back up information on your phone. If you ever lose information from your phone (for example, through accidental deletion), or need to refer to an earlier, backed up version, you can restore it to your phone. Backup/Restore supports Memory cards.



Note: Operator logos, ringing tones (polyphonic ringing tones (MIDI) and single tones) and Java-applications that you have installed on your phone after you first started using it are not saved during backup. Therefore, these items cannot be restored. Only the original Nokia 3620 and Nokia 3660 ringing tones are saved.

Control Panel

You can use Control Panel to change some of the general settings of PC Suite. The following features are included in Control Panel:

- **Connection** enables you to specify the port that PC Suite uses when attempting to connect to a phone.
- **Data Location** enables you to specify where you want to store backups and synchronization files.
- **File Converters** enables you to select which, if any, video and audio converters are used when files are copied to the phone using File Transfer.
- **Device Manager** enables you to see which phones have been connected to your PC, and to remove details of phones that you no longer want to connect.



Important: You cannot restore information that you have removed using Device Manager.

Data Import

With Data Import, you can transfer contacts and calendar data to your Nokia 3620 or Nokia 3660 from the Nokia 3320, Nokia 3360, Nokia 3600, Nokia 3620, Nokia 3650, Nokia 3660, Nokia 6210, Nokia 6250, Nokia 6310, Nokia 6310i, Nokia 6320, Nokia 6340, Nokia 6360, Nokia 6370, Nokia 6385, Nokia 6510, Nokia 6590, Nokia 6610, Nokia 6650, Nokia 7110, Nokia 7160, Nokia 7190, Nokia 7210, Nokia 7650, Nokia 8210, Nokia 8290, Nokia 8310, Nokia 8390, Nokia 8810, Nokia 8850, Nokia 8890, Nokia 8910, Nokia 9210 Communicator, Nokia 9290 Communicator, or Palm device.

Synchronize

With Synchronize, you can synchronize your phone contacts and calendar data with Microsoft and Lotus applications.

To be able to synchronize, you must have tasks created for synchronization. When you connect your phone to your PC for the first time, PC Suite identifies your phone and creates a number of tasks. You can modify these tasks and create other tasks if you want. You can also schedule tasks to be run at regular intervals, every time you connect your phone to your PC, or on command only.

The  animated icon appears on the Windows taskbar when synchronization is in progress. The icon indicates that the data on your phone is being synchronized with the data on the PC.

File Transfer

With File Transfer, you can copy files between your phone and your PC, as well as delete and rename selected files. With the Multimedia converters, video and audio format files that you copy from the PC to your phone are automatically converted to the video and audio format used by the phone.

Image Transfer

With Image Transfer, you can copy, move, rename, and delete image files on your phone and your PC. You can also view image files if there is an associated viewer application.

Settings wizard

With the Settings wizard, you can configure the e-mail account, remote connection, message center, and multimedia message center settings of your phone. For example, you can manage settings manually or copy a working configuration from the PC to the phone. You can also back up your phone settings to a file.

Install software on your phone

With PC Suite, you can install Java and device software on your phone. These applications do not have an icon on the application bar. Instead, you can start these applications from the Tools menu. See the [Installing software](#) online help topic for details.

Installation packages can be received in a multimedia message, as an e-mail attachment, by Bluetooth connection, or by infrared and downloaded to your phone. If you are using PC Suite to transfer the file, save it to the **c:\nokia\installs** folder.



Note: You can only use Java installation files with the extension .jad or .jar, and device software installation files with the extension .sis.



Important: Only install software from sources that offer adequate protection against viruses and other harmful software.

• REMOVE PC SUITE FROM YOUR PC

Uninstalling PC Suite removes all files and folders that were added by the PC Suite installation program, but does not remove backed-up and archived files or synchronization information. Therefore, if you reinstall PC Suite you can back up, restore, and synchronize using the same settings as before.



Note: If you want to remove backed-up files, synchronizations, and other information relating to the phones you have connected, you must do this before removing PC Suite. For further information, see the [Viewing and removing details of a Nokia 3620 or Nokia 3660](#) online help topic.

To remove PC Suite, proceed as follows:

- 1 Click the Windows Start button, point to Settings, and click Control Panel.
- 2 Double-click Add/Remove Programs.
- 3 Select PC Suite for Nokia 3620 and Nokia 3660 from the list of installed programs, and click Add/Remove.

A confirmation dialog box opens.

- 4 Confirm that you want to remove the PC Suite software from your PC.

After confirming that you want to remove PC Suite, the uninstall program removes the program files and informs you that you need to restart your PC to complete the uninstall process. When your PC restarts, the uninstall program completes the removal of PC Suite from your PC.



Note: Uninstalling PC Suite does not remove the Nokia Connectivity SDK. You can remove the Nokia Connectivity SDK from your PC using the Add/Remove Programs application of the Windows Control Panel.

The uninstall program leaves some files on your PC that contain information about the Nokia devices you have connected to your PC. If you decide to reinstall PC Suite, you will be able to continue using PC Suite as before.



Note: Remember to make back-up copies of all important data to protect against possible loss or alteration.

19 Reference information



• BATTERY STATEMENTS

Charging and discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose.

Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

Remove the battery only when the phone is switched off.

● USE PROPER CARE AND MAINTENANCE

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility. The personnel there will assist you and, if necessary, arrange for service.

• UNDERSTAND IMPORTANT SAFETY INFORMATION

Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder, because metallic materials may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of 6 in (15.3 cm) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. To minimize the potential for interference, persons with pacemakers should

- Always keep the device more than 6 in (15.3 cm) from their pacemaker when the device is switched on

- Not carry the device in a breast pocket
- Hold the device to the ear opposite the pacemaker

If you have any reason to suspect that interference is taking place, switch off your device immediately.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquified petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your phone while in the air is prohibited. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action or both.

Emergency calls



Note: This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

- 1 If the phone is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the phone.
- 2 Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
- 3 Key in the emergency number for your present location (e.g. 911 or other official emergency number). Emergency numbers vary by location.
- 4 Press the  key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident—do not cut off the call until given permission to do so.

• CERTIFICATION INFORMATION (SAR)

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for the Nokia 3620 model phone as reported to the FCC when tested for use at the ear is 1.12 W/kg, and when worn on the body, as described in this user guide, is 1.28 W/kg. The highest SAR value for the Nokia 3660 model phone as reported to the FCC when tested for use at the ear is 0.77 W/kg, and when worn on the body, as described in

this user guide, is 1.13 W/kg. (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID **QFXNHM-10X** for the Nokia 3620 model and FCC ID **QFXNHL-8X** for the Nokia 3660 model.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with a carry case, belt clip, or holder that contains no metal and that positions the handset a minimum of 5/8-inch (1.5 cm) from the body. Use of other carry cases, belt clips, or holders may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 5/8 inch (1.5 cm) from your body when the phone is switched on.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at www.nokia.com/us.

• ACCESSORIES

Original Nokia accessories ensure the best possible operation of your Nokia mobile phone in various conditions.

Specifications are subject to change without notice. The availability of particular products and services may vary by region. Please check with the Nokia dealer nearest you. Operations and some features are network

dependent. Nokia enhancements enable the best possible operation of your mobile phone in various conditions. Variation in operation times will occur depending on SIM card, network and usage settings, usage style and environments. Please check the availability of WAP services with your network operator and/or WAP service provider. The availability of Bluetooth wireless technology may vary by country and Bluetooth products are not approved for use everywhere. Please check with the local authorities.

Use accessories safely

A few practical rules for accessory operation:

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.
- Use only batteries, chargers, and accessories that have been approved by the phone manufacturer. The use of any other types could invalidate any approval or warranty applying to the phone and could be dangerous.

Audio accessories

WIRELESS HEADSET HDW-2

The Nokia Wireless Headset HDW-2 is designed with Bluetooth technology and is compatible with the Nokia 3620 and Nokia 3660 phones and other phones supporting the Bluetooth 1.1 specification and Headset or Handsfree profiles.



The compact headset gives hands-free control of your phone without cables or wires. The earpiece fits in either ear allowing for convenient and discreet access to all basic call controls. The Answer/End button lets you answer and make calls, redial, and switch the audio back and forth between the handset and headset. A separate volume control lets you change the call volume as necessary while moving from place to place.

To maximize call security, the headset also supports encryption of the wireless connection for compatible phone models.

HEADSET HDE-2

The HDE-2 headset is a small and lightweight portable headset for easy handsfree operation. It has a clip to hold the headset firmly in place.



HEADSET HDC-5

The HDC-5 headset, with a remote button, connects directly to the phone. No extra adaptor is required, and the remote control is provided.

DUAL HEADSET HDD-1

The HDD-1 Dual Headset provides comfortable handsfree operation with a remote control button for answering and ending calls.

RETRACTABLE HEADSET HDC-10

The HDC-10 Retractable Headset is a compact headset with a retractable mechanism and remote control.

BOOM HEADSET HDB-5


HDB-5 Headset provides handsfree functionality and a new "over the ear" concept providing excellent audio quality.



MOBILE INDUCTIVE LOOPSET LPS-3

The LPS-3 Mobile Loopset gives people with T-coil equipped hearing aids the ability to make and receive calls without noise interference.

The Loopset is easy to use and gives hearing-impaired users clear access to digital telephony. You wear the Loopset around your neck, connect it to your phone, and speak directly toward the microphone.

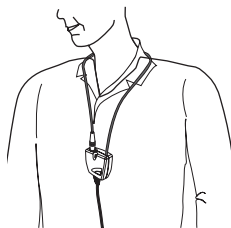

If you are using a Loopset, you must activate it on your mobile phone by selecting **Menu**→ *Tools*→ *Settings*→ *Accessory*→ *Accessory in use*→ *Loopset*




Note: The Loopset can be purchased separately as an accessory. For operating instructions, refer to the booklet that comes with the LPS-3.

For more information, see "Learn about accessibility solutions" on p. 5.

PHONE ADAPTER HDA-9

The HDA-9 Phone Adapter is a Nokia accessory that allows you to connect your mobile phone to a Telecommunications Device for the Deaf (TTY/TDD) to make a call in digital mode.

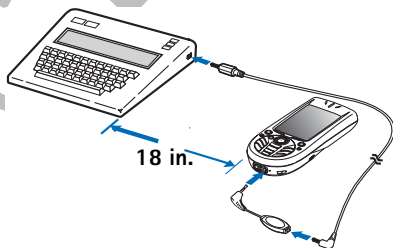

If you are using a Phone Adapter, you must activate it on your mobile phone by selecting **Menu**→ *Tools*→ *Settings*→ *Accessory*→ *Accessory in use*→ *TTY*.

In addition to the Nokia 3620 or Nokia 3660 phone, you'll need the following for TTY/TDD communication:

- A TTY/TDD device that is "cellular ready" or "cellular compatible"

- A cable for connecting the TTY/TDD to your phone, usually supplied by the manufacturer of the TTY/TDD device
- The Phone Adapter (HDA-9), which can be purchased separately as an accessory at www.nokia.com

For more information, see "Learn about accessibility solutions" on p. 5.

Battery

The 850 mAh, Li-Ion based BL-5C battery provides power in a thin and light package. It provides a talk time of up to 2–4 hours and up to 150–200 hours standby time. Charging time is 1 hour and 35 minutes.



Variation in operation times will occur depending on SIM card, network and usage settings, usage style and environments. Talk time is reduced by 5 percent if Enhanced Full Rate is active, and increased by up to 30 percent if Half Rate is active.

Chargers

The Nokia 3620 and Nokia 3660 use the ACP-12U standard charger and mobile chargers LCH-9 and LCH-12. The LCH-12 mobile charger can be used with 12 Vdc or 24 Vdc. The Nokia 3620 and Nokia 3660 phones are also compatible with the ACP-12U and ACP-8U travel chargers.



ACP-12U

Car accessories

WIRELESS CAR KIT CARK-112

The wireless car kit offers a convenient handsfree option in a car, with a remote control button. The kit includes the Remote Control Button CUW-2, Handsfree Unit HFW-1, Microphone HFM-8, HF Speaker HFS-12, and power cable PCU-4.

MOBILE HOLDER MBC-16

The MBC-16 Mobile Holder has ergonomic release buttons and a swivel mount. It supports use with the mobile charger and Plug-in HF Car Kit.

PLUG-IN HF CAR KIT PPH-1

This handsfree car kit includes a built-in speaker. It uses the phone microphone, but also has a connector for an external microphone, HFM-8.

HEADREST HANDSFREE BHF-2

This headrest installs on a car headrest for handsfree audio. The terminal charges with the LCH-9 or LCH-12 mobile charger.

MICROPHONE HFM-8

This HFM-8 is a small, directional microphone.

Memory card

The 64 MB memory card provides removable storage for your phone. The memory card increases available memory and storage for your multimedia files like video clips, and sound files, photos, messaging information, or to backup information from your phone's memory.



• NOKIA 3620 TECHNICAL INFORMATION

Feature	Specification
Weight	4.5 oz (130 g) with 850-mAh Li-Ion battery
Size	139 cc
Frequency range	Lowband 850 824–849 MHz (TX) 869–894 MHz (RX) Highband 1900 1850–1910 MHz (TX) 1930–1990 MHz (RX)
Transmitter output power	Lowband up to 2 W Highband up to 1 W
Battery voltage	3.7 V nominal
Operating temperature	14°F to + 131°F (-10°C to + 55°C)
Number of channels	124 lowband 299 highband

• NOKIA 3660 TECHNICAL INFORMATION

Feature	Specification
Weight	4.5 oz (130 g) with 850-mAh Li-Ion battery
Size	139 cc
Frequency range	Lowband 900 880–915 MHz (TX) 925–960 MHz (RX) Highband 1800 1710–1769 MHz (TX) 1805–1864 MHz (RX) Highband 1900 1850–1910 MHz (TX) 1930–1990 MHz (RX)
Transmitter output power	Lowband up to 2 W Highband up to 1 W
Battery voltage	3.7 V nominal
Operating temperature	14°F to + 131°F (-10°C to + 55°C)
Number of channels	194 lowband 299 highband

• TROUBLESHOOTING

If you experience problems with your phone, the information below may help you resolve the problem. If you cannot find a solution in this user guide, contact the Nokia Customer Care Center for further assistance. See "Contact Nokia" on p. 4.

Memory low

When following notes are shown, the phone memory is low and you must start to delete some data: *Not enough memory to perform operation.*

Delete some data first. or Memory low. Delete some data.

- To view what kind of data you have and how much memory the different data groups consume, go to **Manager** and select **Options**→ *Memory details*. Delete the following items regularly:
 - messages from the Inbox, Drafts, and Sent folders in Messaging
 - retrieved e-mail messages from the phone memory
 - saved browser pages
 - images and photos in Images
- If you want to delete contact information, calendar notes, call timers, call cost timers, game scores, or any other data, go to the respective application to remove the data.



Note: If you are deleting multiple items and another of the following notes is shown: *Not enough memory to perform operation. Delete some data first. or Memory low. Delete some data. try deleting items one by one (starting from the smallest item).*

Clearing calendar memory

To remove more than one event at a time, go to the Month view, select **Options**→ *Delete*, and select one of the following:

- *Before date*—to delete all calendar notes which take place before a certain date. Enter the date before which all calendar notes will be deleted.

- *All entries*—to delete all calendar notes.

Erasing log information

To erase all the log contents, Recent calls log, and Messaging delivery reports permanently, go to Logs and select **Options**→ *Clear log* or go to *Settings*→ *Log duration*→ *No log*.

Different ways to store data

- Use PC Suite to take a backup copy of all data to your computer.
- Send images to your e-mail address and then save the images to your computer.
- Send data by infrared or a Bluetooth connection to another device.

• **Nokia ONE-YEAR LIMITED WARRANTY**

Nokia Inc. ("Nokia") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

- 1 The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product. This one year period is extended by each whole day that the Product is out of your possession for repair under this warranty.
- 2 The limited warranty extends only to the original purchaser ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end-user.
- 3 The limited warranty extends only to Consumers who purchase the Product in the United States of America.
- 4 During the limited warranty period, Nokia will repair, or replace, at Nokia's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. Nokia will also pay for the labor charges incurred by Nokia in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. Nokia's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. Nokia shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.
- 5 Upon request from Nokia, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.

- 6 The Consumer shall bear the cost of shipping the Product to Nokia in Melbourne, Florida. Nokia shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
- 7 The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
 - a) The Product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Nokia, including damage caused by shipping.
 - b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, bugs, worms, Trojan Horses, cancelbots or damage caused by the connection to other products not recommended for interconnection by Nokia.
 - c) Nokia was not advised in writing by the Consumer of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
 - d) The Product serial number plate or the accessory data code has been removed, defaced or altered.
 - e) The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna, or viruses or other software problems introduced into the Product.
- 8 Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
 - a) The Consumer shall return the Product to the place of purchase for repair or replacement processing.

- b) If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:
Nokia Inc., Attn: Repair Department
795 West Nasa Blvd.
Melbourne, FL 32901
- c) The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.
- d) The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
- e) Nokia will repair the Product under the limited warranty within 30 days after receipt of the Product. If Nokia cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, Nokia at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage. In some states the Consumer may have the right to a loaner if the repair of the Product takes more than ten (10) days. Please contact the Customer Service Center at Nokia at the telephone number listed at the end of this warranty if you need a loaner and the repair of the Product has taken or is estimated to take more than ten (10) days.
- f) If the Product is returned during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned after the expiration of the limited warranty period, Nokia's normal service policies shall apply and the Consumer will be responsible for all shipping charges.

- 9 You (the Consumer) understand that the product may consist of refurbished equipment that contains used components, some of which have been reprocessed. The used components comply with Product performance and reliability specifications.
- 10 ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NOKIA SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NOKIA KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NOKIA SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.
- 11 Some states do not allow limitation of how long an implied warranty lasts, so the one year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.

- 12 Nokia neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
- 13 This is the entire warranty between Nokia and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
- 14 This limited warranty allocates the risk of failure of the Product between the Consumer and Nokia. The allocation is recognized by the Consumer and is reflected in the purchase price.
- 15 Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following purchase of the Product.
- 16 Questions concerning this limited warranty may be directed to:
Nokia Inc.
Attn: Customer Service
7725 Woodland Center Blvd., Ste. 150
Tampa, FL 33614
Telephone: 1-888-NOKIA-2U (1-888-665-4228)
Facsimile: (813) 287-6612
TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)
- 17 The limited warranty period for Nokia supplied attachments and accessories is specifically defined within their own warranty cards and packaging.

Manufactured or sold under one or more of the following US patents:

4868846	4945633	5001372	5101175	5151946	5173927	5212834	5230091
5241583	5311151	5317283	5331638	5335362	5353328	5371481	5378935
5384782	5396657	5400949	5416435	5442521	5446364	5479476	5526366
5553125	5557639	5565821	5570369	5581244	5600708	5625274	5677620
5692032	5729541	5760568	5794142	5802465	5809413	5827082	5839101
5844884	5845219	5870683	5884103	5889770	5907823	5912570	5914690
5914796	5917868	5920826	5956332	5956625	5956633	5966378	5977887
5987137	5991857	6006114	6011853	6014551	6014573	6026161	6035189
6038238	6043760	6047196	6049796	6050415	6055439	6060193	6069923
6072787	6081732	6084920	6084962	6094587	6097964	6105784	6112099
6115617	6119180	6121846	6128509	6138091	6140966	6144243	6144676
6148209	6151485	6151507	6163609	6164547	6167248	6185295	6188909
6249584	6259312	6266330	6272361	6282436	6292668	6295286	6311054
6314166	6324389	6324412	6347218	6363259	6370362	6370389	6377820
6381468	6392660	6400958	6453179	6463278	6470470	6487397	6522670
6198928	4969192	5266782	5390223	5444816	5487084	5640395	5664053
5699482	5701392	5722074	5754976	5805301	5835889	5857151	5859843
5862178	5898925	5930233	5946651	5960354	5960389	5963901	6005857
6011971	6031827	6118775	6128322	6137789	6167248	6170073	6178535
6195338	6199035	6240076	6266321	6285888	6356759	6377803	6430163
6438370	6456237	RE32580	5818437	5953541	6011554	4558302	

FCC Draft

Appendix A

Message from the CTIA (Cellular Telecommunications & Internet Association) to all users of mobile phones.

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved. 1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036. Phone: (202) 785-0081

Safety is the most important call you will ever make.

A Guide to Safe and Responsible Wireless Phone Use

Tens of millions of people in the U.S. today take advantage of the unique combination of convenience, safety and value delivered by the wireless telephone. Quite simply, the wireless phone gives people the powerful ability to communicate by voice--almost anywhere, anytime--with the boss, with a client, with the kids, with emergency personnel or even with the police. Each year, Americans make billions of calls from their wireless phones, and the numbers are rapidly growing.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle--whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense--keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seatbelts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need.

When it comes to the use of wireless phones, *safety is your most important call.*

Wireless Phone "Safety Tips"

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember.

- 1 Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2 When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3 Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5 Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip--dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix--they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8 Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations--with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
- 9 Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

The wireless industry reminds you to use your phone safely when driving.

For more information, please call 1-888-901-SAFE.

For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved.
1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036.
Phone: (202) 785-0081

FCC Draft

Appendix B

Message from the FDA (U.S. Food and Drug Administration) to all users of mobile phones.

July 18, 2001 For updates: <http://www.fda.gov/cdrh/phones>

Consumer Update on Wireless Phones

U.S. Food and Drug Administration

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell mobile or PCS phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called cordless phones, which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5.What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United

Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a accompanied hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones
<http://www.fda.gov/cdrh/phones/index.html>
- Federal Communications Commission (FCC) RF Safety Program
<http://www.fcc.gov/oet/rfsafety>
- International Commission on Non-Ionizing Radiation Protection
<http://www.icnirp.de>
- World Health Organization (WHO) International EMF Project
<http://www.who.int/emf>
- National Radiological Protection Board (UK)
<http://www.nrpb.org.uk/>

July 18, 2001 For updates: <http://www.fda.gov/cdrh/phones>

Index

Numerics

1-touch dialing

Assign a phone number 57

Making calls 24

A

Access codes 46

Access points 38

Advanced settings 43

Settings 40

Accessibility solutions 5

See also *Accessory (LPS-3 and HDA-9)*

Accessory 170

Activating 51, 173

HDA-9 Phone Adapter 173

LPS-3 Loopset 173

Settings 51

Activate loudspeaker 20

Alarm clock 123

Snooze 123

Animations 66

Answering a call 25

Automatic answer 51

Applications 137

Install a Java application 138

Java application settings 139

Open a Java application 139

Uninstall a Java application 139

Attachments 98

Audio files, See *Media files*

Automatic answer 51

B

Battery information 163

Battery saving mode 62

Bluetooth connection 144

Cancel pairing 149

Connection requests 147

Connection status indicators 148

Device icons 148

Disconnect 150

Paired devices short names 149

Pairing requests 147

Passcode 147

Receive data 150

Send data 146

Settings 146

Bookmarks

Add 131

Send 131

View 130

Browser

Access points, see *Access points*

Browsing 132

Connect 129

Empty memory 135

End connections 135

- WAP pages 128
- XHTML pages 128
- Buffering 72
- Business card, sending 58
- C**
 - Cache, emptying 135
 - Calculator 119
 - Calendar 113
 - Alarm 116
 - Calendar entry fields 114
 - Sending entries 117
 - Settings 116
 - Stopping alarms 117
 - Views 115
 - Call cost limit
 - Resetting the counter 31
 - Set by a service provider 30
 - Call register, See *Log*
 - Call restrictions 50
 - Calling 22
 - Calls
 - 1-touch dialing 24
 - Answer 25
 - Charging units 30
 - Conference calls 24
 - Cost limit 30
 - Declining 25
 - Dialed 29
 - Duration 29
 - Forwarding 27
 - International 22
 - Missed 28
 - Options during a call 26
 - Received 28
 - Settings 36
 - Transferring 26
 - Using the Contacts directory 23
 - Camera 61
 - Battery saving mode 62
 - Image types 63
 - Memory card 64
 - Memory consumption 64
 - CD-ROM 152
 - Cell broadcast messages 101
 - Cell info display 51
 - Certificates 48
 - Trust settings 50
 - Charges
 - Packet data 40
 - Clearing memory
 - Calendar entries 178
 - Log information 179
 - Clip, See *Video recorder*
 - Clock 123
 - Alarm 123
 - Settings 123
 - Composer 120
 - Adjusting sound volume 120
 - Adjusting tempo 120
 - Changing tone style 120

- Listening to tones 120
- Computer connections 152
- Conference calls 24
- Connection indicators, See *Icons*
- Connection settings 38
- Contact cards
 - Adding voice tags 55
 - Assigning 1-touch dialing numbers 57
 - Assigning default numbers and addresses 54
 - Attaching ringing tones 58
 - Changing voice tags 57
 - Creating 52
 - Deleting voice tags 57
 - Listening to voice tags 57
 - Remove ringing tones 58
 - Voice tags 55
- Contact groups 59
 - Adding many members at the same time 59
 - Adding ringing tones 58
 - Removing members 60
- Converter 121
 - Adding exchange rates 122
 - Converting currencies 122
 - Converting units 122
- Copying
 - Contacts between the SIM card and phone memory 52
 - Text 82
- Customer care 5
- Cutting text 81
- D**
- Data connections
 - Icons 15
 - Settings 38
- Date, settings 45
- Declining calls 25
- Delete all entries 178
- Deleting
 - Calendar entries 114
 - Contact cards 53
 - Delivery reports 76
 - Dialed numbers 29
 - Digital rights management 134
 - Display settings 36
 - DNS, Domain Name Service 43
 - DRM 134
 - DTMF tones 27
- E**
- Editing
 - Calendar entries 113
 - Contact cards 53
 - Text 78
- E-mail 88
 - Attachments 98
 - Deleting 99
 - Offline 96
 - Online 95

- Opening 97
- Remote mailbox 95
- Retrieving from mailbox 96
- Saving attachments 99
- Settings 105

Emergency calls 168

Erasing

- Call cost counters 31
- Log 32
- Recent calls log 29

F

Favorites 111

- Adding a shortcut 111

File formats

- JAD and JAR 140
- RealOne Player 71
- SIS file 140
- Supported 99

Fixed dialing 47

Folders 19

Forwarding calls 25

G

General settings 34

GIF animations 66

GPRS, *See Packet data*

H

Handsfree, *See Loudspeaker*

Headset 21

High speed data 39

HSCSD, *See High speed data*

I

Icons

- Accessory 15
- Activity 14
- Bluetooth connection 148
- Browser 130
- Calendar entries 115
- Data connection 15
- E-mail status 96
- Favorites 111
- In standby mode 13
- Infrared 152
- Messaging 90
- Synchronization 115
- To-do 118

Idle state, *See Standby mode*

Image modes 63

Images 65

- Formats 67
- Full screen 66
- Keyboard shortcuts when viewing images 67
- Memory consumption 64
- Moving the focal point 66
- Organizing 67
- Picture messages folder 68
- Receive from a digital camera 65
- Rotating 67
- Viewing image details 67
- Zooming 66

Indicators, *See Icons*
Info service 101
Infrared 150
Installing software 141
Internet access points (IAP)
 See Access points
Internet service provider 38
IP address 43
ISDN 42
ISP, *See Internet service provider*

J

JAD and JAR files 140
Java, *See Applications*
JPEG 61

L

Language, for writing 35
Limit for call costs 30
Lock code 46
Log
 Erasing contents 32
 Filtering 32
 Recent calls 28
 Settings 33
Loopset, *See Accessory*
Loudspeaker
 Activating 20
 Turning off 21

M

Mailbox 95
 Disconnecting 98

Making calls 22

Media files

 File formats 71
 Playing 71
 Sending 73

Memory card 125

 Camera 64
 Consumption 127
 Format 126
 Password 126
 Restore 126
 Video clips 125

Memory low

 Troubleshooting 178
 Viewing memory consumption
 127, 143

Menu 16

 Menu key 16
 Rearrange the main Menu 17

Messaging

 Delivery reports 76
 General settings 107
 Inbox 90
 Main view 75
 Messages on the SIM card 101
 Multimedia messages 85
 My folders 94
 Outbox 100
 Picture messages 84
 Save picture message graphics 68

- Settings 102
- Text messages 83
- Writing e-mail 88
- Writing text 78

Missed calls 28

Modem

- GPRS access point 45
- Initialization 44
- Using your phone as a modem 153

Multimedia messages 85

- Playing sounds 92
- Re-playing sounds 92

Music files, See *Media files*

My folders 94

N

Notes 123

O

Offline 96

Online 95

Organizing, Menu 17

Outbox 100

P

Packet data 39

- Connection timer 32
- Data counter 32
- Pricing 40
- Settings 45

Pairing 147

Password, memory card 126

Pasting text 81

PC, connecting to 152

Phone Adapter, See *Accessory*

Phonebook, See *Contacts*

Pictures

- Taking 61
- Viewing 65

PIN code 46

- Unblocking 46

Playing video 70, 71

Predictive text input

- Tips 80
- Turning off 81

Prepaid SIM cards 30

Prices for packet data 40

Profiles 109

- Renaming 110
- Settings 109

R

RealOne Player™ 71

- File formats 71
- Volume control 73

Received calls 28

Receiving

- Data via infrared 151
- Ring tones, operator logos, and settings, See *Smart messages*

Recent calls log 28

- Call charging units 30
- Call cost limit 30

- Call costs 30
- Call duration 29
- Dialed numbers 29
- Erasing call lists 29
- Missed calls 28
- Received calls 28
- Recorder, recording sounds 124
- Recording video 69
- Remote mailbox 95
 - Disconnecting 98
- Removing software 142
- Reports 76
- Resolution 64
- Restricting calls 50
- Ringling tones 109

- Adding a personal ringing tone 58
 - Muting 25
 - Receiving in a smart message 93
 - Settings 109

S

- Safety information
 - Care and maintenance 164
 - Electronic devices 165
 - Emergency calls 168
 - Operating environment 165
 - Potentially explosive atmospheres 166
 - Traffic safety 165
 - Vehicles 167
- Screen saver, settings 36

- Search field 19
- Security
 - Access codes 46
 - Security certificates 48
 - Settings 46
- Sending
 - Calendar entries 117
 - Contact cards, business cards 58
 - Data via infrared 151
 - Media files 73
 - Video clips 70, 73
- Service command editor 101
- Service messages
 - Service message settings 107
 - Service messages 93
- Service provider for data connections 38
- Settings 34
 - Access codes 46
 - Accessory 51
 - Applications (Java) 139
 - Bluetooth connection 146
 - Calendar 116
 - Call restrictions 50
 - Call settings 36
 - Certificates 48
 - Clock 123
 - Connection 38
 - Date and time 45
 - Display 36

- E-mail 105
- Fixed dialing 47
- General settings for Messaging
 - 107
- Info service 107
- Lock code 46
- Log 33
- Messaging 102
- Phone settings 34
- PIN code 46
- RealOne Player 73
- Security 46
- Service messages 107
- Sounds 109
- Text messages 102
- Video recorder 70

Shortcuts

- in Favorites 111
- in Images 67

SIM card

- Copying names and numbers 52
- Messages 101
- Names and numbers 33
- Viewing messages on SIM 33

SIS file 140

Smart messages

- Receiving 92
- Sending 83

Snooze 123

Software

- Installing 141
- Removing 142
- Transferring a .sis file to your phone 141

Sound files, See *Media files*

Sounds 109

- Remove personal ringing tone 58

Standby mode 12

- Icons 14
- Settings 36

Stopping

- Alarm clock 123
- Calendar alarm 117

Streaming 71

Switching between applications 17

T

- Taking pictures 61
- Text input 78
- Text message service center
 - Adding new 103
- Text messages 83
 - Writing and sending 83
- Text templates 64
- Time, settings 45
- To-do 117
- Tones 109
- Tools
 - 1-touch, See *1-touch dialing*
 - Forward 27
 - Manager 140

Settings, See *Settings*
Voice mail, See *Voice mail*
Traditional text input 78
Transferring calls 26
Troubleshooting 178
TTY/TDD communication 173

U

Unit converter 121
USSD commands 101

V

Video clips, See *Media files*
Video player, See *RealOne Player™*
Video recorder 69
 Memory card 70
 Saving video clips 69
 Sending video clips 70
 Settings 70
 Video clips 70
Viewing
 GIF animations 66
 Images 65
Voice dialing 55
Voice mail
 Changing mailbox number 23
 Check messages 23
 Forwarding calls to 27
Voice recorder 124
Voice tags 55
 Adding 55
 Changing 57

Deleting 57
Listening 57
Making calls 56
Volume control 20
 During a call 22

W

WAP pages, browser 128
Writing 78
 Predictive text input 79
 Traditional text input 78

X

XHTML browser 128

Z

Zooming 66

NOTES

FCC Draft

NOTES

FCC Draft

Para obtener un manual del usuario en español favor de llamar o enviar un fax al teléfono 1-888-NOKIA-2U, fax 813-249-9619.

FCC Draft

FCC Draft

FCC Draft