

THANK YOU!

We are grateful for your purchase of HYT product. We believe this easy-to-use radio will provide you with dependable and reliable communications. This HYT portable two-way radio is a precision device. Treat it with care, and you will enjoy years of reliable operation.

MODELS COVERED IN THIS MANUAL

TC3000 VHF Radio

TC3000 UHF Radio

Contents

User Safety, Training, and General Information

Compliance with RF Energy Exposure Standards

FCC Compliance

Precautions

Product Inspection

Battery Information

Accessory Installation

Battery

Antenna

Belt Clip

Earplug Cover

External Earphone/Microphone (optional)

Getting Started

Features and Operation

Turn on/off the radio

Adjust the Volume

Select Channel

Transmit

Receive

Monitor

Repeater/Talk Around

Repeater/ Reverse Frequency

Selectable Power

Scan

Call

Selective Call

Emergency Siren

VOX Feature

Built-in Modem

Patrol Record

Low Battery Alert

Troubleshooting Guide

Care and Cleaning

Optional Accessories

Frequency Chart

User Safety, Training, and General Information

READ THIS IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION BEFORE USING YOUR HYT PORTABLE TWO-WAY RADIO.

Compliance with RF Energy Exposure Standards

Your **HYT** two-way radio is designed and tested to comply with a number of national and international standards and guidelines (listed below) regarding human exposure to radio frequency electromagnetic energy. This radio complies with the IEEE (FCC) and ICNIRP exposure limits for occupational/controlled RF exposure environment at duty cycles of up to 50% talk-50% listen and should be used for occupational use only. In terms of measuring RF energy for compliance with the FCC exposure guidelines, your radio radiates measurable RF energy only while it is transmitting (during talking), not when it is receiving (listening) or in standby mode.

Note: The approved batteries supplied with this radio are rated for a 5-5-90 duty cycle (5% talk-5% listen-90% standby), even though this radio complies with the FCC occupational RF exposure limits at duty cycles of up to 50% talk.

Your HYT two-way radio complies with the following of RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J (Body 0.00975 mW/g; Head 0.01135 mW/g)
- American National Standards Institute (ANSI)/Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1999 Edition
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998

Operational Instructions and Training Guidelines

To ensure optimal performance and compliance with the occupational/controlled environment RF energy exposure limits in the above standards and guidelines, users should transmit no more than 50% of the time and always adhere to the following procedures:

Transmit and Receive

To transmit (talk), push the Push-To-Talk (PTT) button; to receive, release the PTT button.

Hand-held radio operation

Hold the radio in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.

Body-worn operation

- Always place the radio in an HYT approved clip, holder, holster, case, or body harness for this product. Use of non-HYT-approved accessories may exceed FCC RF exposure guidelines.
- If you do not use an HYT approved body-worn accessory and are not using the radio in the intended use position in front of the face, then ensure the antenna and the radio are kept one inch (2.5 cm) from the body when transmitting.

Antennas & Batteries

- Use only HYT approved, supplied antenna or HYT approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.
- Use only HYT approved, supplied batteries or HYT approved replacement batteries. Use of non- HYT -approved batteries may exceed FCC RF exposure guidelines.

Approved Accessories

For a list of HYT approved accessories, see the accessories page of this user manual or visit the following website which lists approved accessories: <http://www.HYT.com.cn>

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved in writing may cause harmful interference and void the user's authority to operate this equipment.

FCC Requirements

Your radio must be properly licensed Federal Communications Commission prior to use. Your HYT Wireless dealer can assist you in meeting these requirements. Your dealer will program each radio with your authorized frequencies, signaling codes, etc., and will be there to meet your communications needs as your system expands.

Precautions

- Only qualified technicians are allowed to maintain this product.
- Do not use the radio or charge a battery in explosive areas such as coal gas, dust, steam, etc.
- Switch OFF the radio while refueling or parking at gas station.
- Do not modify or adjust this radio without permission.
- Do not expose the radio to direct sunlight over a long time, nor place it close to

heating source.

- Do not place the radio in excessively dusty, humid areas, nor on unstable surfaces.

Safety: It is important that the operator is aware of and understands hazards common to the operation of any radio.

Product Inspection

Thank you for your use of HYT portable two-way radio TC3000. Before use, you are recommended to inspect the product as follows.

First check the shipping carton for any signs of damage. If any damage has occurred, please contact your dealer immediately. Confirm the supplied product against the packing slip to assure accuracy.

Available Accessories

Item	Qty. (pcs)
Antenna *	1
Belt Clip	1
Strap	1
Battery	1
Desktop Charger	1
AC Adapter	1
Owner's Manual	1

*Antenna Mark:

TC3000-U(1) (400-430MHz) : Dark red

TC3000-U(2) (440-470MHz) :Milk White

TC3000-V(1) (130-150MHz) : Sky Blue

TC3000-V(2) (145-175MHz) : Grass Green

TC3000-U(5) (350-370MHz) : Saffron

TC3000-U(6) (370-390MHz) : Background Color

Battery Information

Battery Charging Information

The battery is not charged by the manufactory. Charge the newly purchased battery or out of use for more than 2 months battery before use. The battery capacity will be optimum only after being charged/discharged for two or three times. When the battery power is lower, please charge it or replace it with a new one.

Notices:

Do not short out the battery terminals or dispose of the battery by fire.

Turn off the radio when charging the battery inside the radio.

Remove the radio and the battery from the charger when charging cycle is over.

Overcharging will shorten the battery life.

Do not continue charging the battery if it is already fully charged. Or the battery life


will be shortened.

Store the battery in a place about 25°C. Charging the battery in less than 10°C temperature will cause the electrolyte leakage and damage the battery.

Charging the battery in over 35°C temperature will affect the battery capacity.

Charging the Battery

You are recommended to use HYT authorized charger. Charger LED will indicate the charging status.

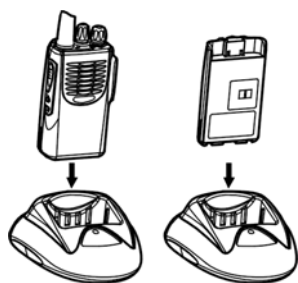

LED	Meaning
Red LED flashes	Power voltage too low
Red LED glows	Charging
Green LED glows	Done

Accessory Installation

Battery

Attach the battery

Insert the two tabs on bottom of the battery into the slots at the bottom of the radio. Push top of the battery towards the radio until a click is heard. (See figure 1)

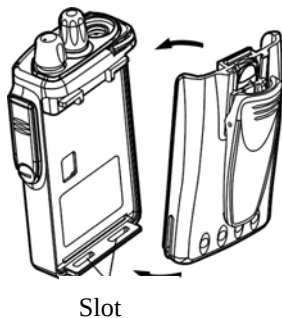


Fig.1

Remove the battery

Turn off the radio. Push the battery latch on the middle of the radio to remove the upper side of the battery away from the radio. And then remove the battery. (See figure2)


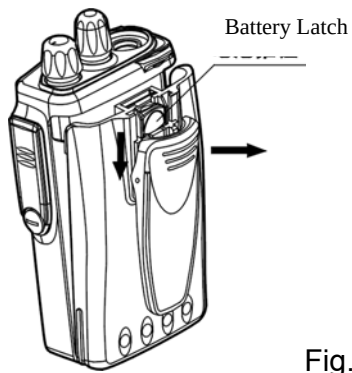


Fig.2

Antenna

Insert the threaded end of the antenna into the connector on top of the radio. Rotate the antenna clockwise to fasten it.

Rotate the antenna counterclockwise to remove it. (See the following figure)

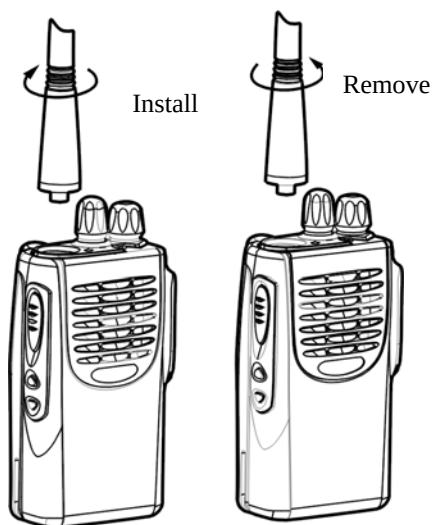

Belt Clip

Attach Belt Clip

Align the slot of the belt clip with the T-slot at the battery cover and press the belt clip downwards until it is locked. (See figure 3)


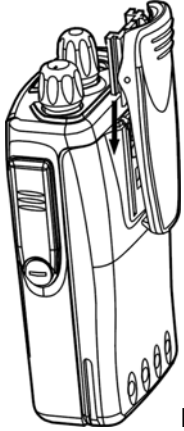


Fig.3

Remove the belt clip

Press the disassembly release upwards with a key until it releases and then push the belt clip upwards with your thumb to remove it. (See figure 4)

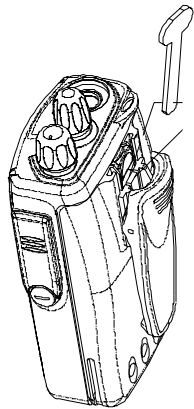

Disassembly Release

Fig.4

Earplug Cover

Rotate the screw at the bottom of the cover counter clockwise by a screwdriver until it is out of the nut to remove the Earphone/Microphone jack cover. (See figure 5)

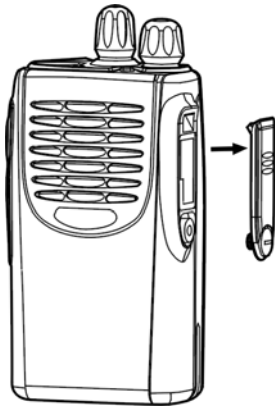


Fig.5


External Earphone/Microphone (Optional)

Insert the tab at the bottom of the earphone/microphone into the slot on top of the radio. (See figure 6). Align the nuts at top of the earphone/microphone with the holes on the radio and then turn them clockwise to fasten.



Fig.6

Getting Started

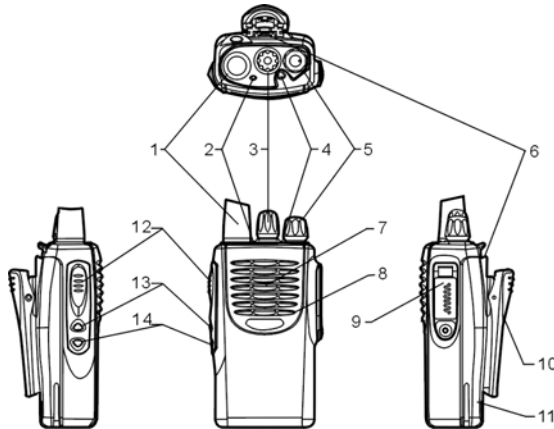

(1) Antenna

Used to transmit/receive signals.

(2) LED

Following table indicates LED indication and corresponding radio status.

LED	Status
No display	Standby
Green	Receive
Red	Transmit
Flashing green	Scan
Flashing red	Low battery voltage
Flashing orange	Call waiting

(3) Channel Selector

Used to select wanted channel.

(4) Programmable key [A]

(5) Power/Volume Control Knob

Rotate the Power/Volume Knob clockwise until a “click” is heard to turn the radio on, fully counter clockwise to turn the radio off. When the radio is on, turn the knob to adjust volume.

(6) Battery Latch

Used to fasten the battery.

(7) Speaker

Used to output sounds.

(8) Microphone

Used to input sounds.

(9) External Jack

Used to connect with external earphone or programming cable.

(10) Belt Clip

Used to clip the radio on your belt.

(11) Battery Pack

(12) PTT key

Press and hold PTT, radio operates in transmit mode. Release PTT, radio returns to receive mode.

(13) Programmable Key [B]

(14) Programmable Key [C]

The following table shows the key function when

1. Briefly press;
2. Press and hold (more than one second);
3. Hold down and monitor.

Key function

Key Function	Briefly Press	Press and Hold	Hold Down
Emergency Siren	Enable emergency siren	Disable emergency siren	—
Monitor	—	—	Monitor
Scan	Enable/Disable scan	Enable/Disable scan	—
Nuisance Delete	Delete nuisance channel in scan	Delete nuisance channel in scan	—
Select High/Low Power	Select High/Low Power	Select High/Low Power	—
Repeater/Talk Around	Select Repeater or Talk Around Mode	Select Repeater or Talk Around Mode	—
Repeater/Reverse Frequency	Select Repeater or Reverse Frequency Mode	Select Repeater or Reverse Frequency Mode	—
Call	Transmit a Call	Transmit a Call	—

Please contact your dealer for more details about programmable key.

Features and Operation

Note:

TC3000 provides a series of audible alert tones. A series of tones may be sounded with the following conditions:

Alt  Bourdon 

Operation	Description	Audible Tone
Turn on the radio	Power on-Ready	
Turn on the radio	Power on-Failure	
Repeater/Talk Around	Repeater	
Repeater/Talk Around	Talk Around	
Repeater/Reverse Frequency	Repeater	
Repeater/Reverse Frequency	Reverse Frequency	
Select Power	High Power	
Select Power	Low Power	
	Low Battery Alert Tone	
	Idle Channel Tone	
	PLL Unlock Tone	

Turn On/Off the Radio

Rotate "Power/Volume" knob clockwise. An alert tone indicates that the self-test of the radio has been completed satisfactorily. LED glows green at the same time. If self-test fails and/or the selected channel is not set, you will also hear an alert tone.

Rotate "Power/Volume" knob counterclockwise until a click is heard to turn the radio off.

Adjust the Volume

Rotate "Power/Volume" knob to adjust the volume.

Select Channel

TC3000 provides 16 conventional channels. Some of the channels may be not programmed and can't be used. Please contact your dealer for more details.

Rotate "Channel Selector" knob to select wanted channel.

Transmit

1. Turn on the radio.
2. Rotate "Channel Selector" knob to select wanted channel.
3. Press PTT and speak into the microphone with your mouth 2.5-5 centimeters away from the radio. LED glows red during transmission.
4. Release PTT key to finish speaking.

Receive

1. Turn on the radio.
2. Rotate "Channel Selector" knob to select wanted channel.
3. Adjust the volume.

4. Then you can receive a valid call. LED glows green during receiving.
5. If CTCSS/CDCSS or squelch tail elimination feature is set by your dealer:
 - 1) Noise will be removed by the end of a conversation if roger tone is disabled.
 - 2) Beep tone sounds by the end of a conversation if roger tone is enabled;Please contact your dealer for more details.

Monitor

1. Press MONI key to monitor the current channel.
2. Release MONI key to exit.

Repeater/Talk Around

When the repeater doesn't work or you are out of the communication range of the repeater and within the communication range of your group member, you can bypass the repeater and talk directly to your group member.

Press programmed "Repeater/Talk Around" key to select between repeater and talk around mode. An alert tone indicates that radio operates in talk around mode. A different alert tone indicates that you are talking via a repeater.

Repeater/Reverse Frequency

When you are out of the communication range of the repeater and within the communication range of your group member, you can talk with your group member by reverse frequency if your group member is within the communication range of the repeater.

Press programmed "Repeater/Reverse Frequency" key to select between repeater and reverse frequency. An alert tone indicates that radio operates in reverse frequency mode. A different alert tone indicates that you are talking via a repeater.

Note: "Repeater/Talk Around" and "Repeater/Reverse Frequency" can't be set simultaneously in one radio.

Selectable Power

Each channel of the radio is set as different power levels that are user selectable. (High power is forbidden in certain channels).

1. High power allows your talk to be heard from further distance.
2. Low power helps to save battery power.

Press programmed "power select" key to select high/low power. An alert tone indicates that the radio operates at high power and another alert tone indicates low power.

Scan

Scan feature allows you to monitor all channels.

When scan feature is enabled, the radio will detect all channels. If an active channel is detected, the radio will remain on that channel and you will be able to hear the conversation.

Disable/Enable Scan Feature

1. Press scan key, scanning begins.
2. Press scan key again, scanning ends.

LED flashes green in scan mode.

Callback

Pressing PTT during scanning can callback on the callback channel. Please contact your dealer for more details about callback channel.

Nuisance Delete

Nuisance delete feature allows you to temporarily delete an unwanted channel from the scan list.

When the radio stops on the nuisance channel, press the programmed “nuisance delete” key until an alert tone is sounded to delete this channel.

When scan feature is enabled again. The deleted channel will return to the scan list.

Note: Priority channel can't be deleted.

Priority Channel Scan

This feature allows you to scan important channels. The dealer can program a channel as priority channel through the programming software. Please contact your dealer for more details.

Channel Scan: Ch1→Ch2→Ch3→Ch4→...Ch1

Priority Channel Scan (Ch2 is priority channel) :
Ch2→Ch1→Ch2→Ch3→Ch2→Ch4→Ch2→...Ch1

Note: The radio will constantly monitor the priority channel when it stops on a non-priority channel. If an activity is detected on the priority channel, the radio will move to and remain on the priority channel.

Call

Press the programmed call key, the radio will sound a series of rings to call and wake the radio that has the same channel and signaling to draw the user's attention.

Selective Call

The radio can call selected radios if selective call feature is set. It includes selective call and group call. Selective call is used to call a selected radio and group call will call a group of radios.

Transmit

1. Hold down PTT key and then press programmable key [B], the radio will transmit a series of programmed selective call signaling code.
2. Hold down PTT and then press programmable key [C], the radio will transmit a series of programmed group call signaling code.
3. When transmission ends, the radio enters call waiting mode. When the called radio receives the signaling, it will send a confirmation tone to your radio.
4. Then press PTT to talk.
5. When the call waiting reset time elapses, MONI key is pressed or channel selector knob is rotated, the radio will exit from the call waiting mode.

Receive

1. When your radio receives a selective call signaling code or group call signaling code that is the same as your preset one, it will send a confirmation tone.
2. After transmitting the confirmation tone, the radio enters call waiting mode.
3. Then pressing PTT can talk.
4. When the call waiting reset time elapses, MONI key is pressed or channel selector knob is rotated, the radio will exit from the call waiting mode.

Note: LED flashes orange in call waiting mode.

Emergency Siren

The radio can be programmed to send emergency siren. When the emergency siren is

enabled, the radio will sound continuously at highest volume.

1. Press Emergency Siren key to activate Emergency Siren feature.
2. Press and hold Emergency Siren key to disable Emergency Siren feature.
3. Press Emergency Siren key again to activate Emergency Siren feature.

VOX Feature

Plug an earphone with VOX feature into the radio to enable VOX feature.

1. VOX feature enables you to transmit automatically by speaking into the microphone.
2. Transmission stops automatically when you stop speaking.
3. Press PTT to disable VOX feature.
4. Turn the radio on again, VOX feature will be activated.

Built-in Modem

MSK modulator with speed of 1200/2400bit/s inside the radio supports data transmission. Please contact your dealer for details.

Patrol Record

An accessory is added to the radio to automatically record the identity, place, time and times of beat officer such as watchman. Please contact your dealer for details.

Low Battery Alert

When the battery voltage becomes low, the red LED will flash and beeps sound. You need to replace or recharge the battery.

Troubleshooting Guide

Trouble	Solution
No power	● Battery may be used up. Please replace or recharge the battery. ● Battery may not be attached properly. Remove the battery and attach again.
Power doesn't last long even if fully charged.	● Battery life cycle is over. Please replace it with a new one.
Can't talk to or hear other users in your group.	● Make sure you are using the same frequency and CTCSS tone as other users in your group. ● Other users may be too far away. Make sure you are within the communication range.
Voice of other users (non-group user) appears on the channel.	● Please change your CTCSS tone. Be sure to change the tone on all the other radios in your group.

Care and Cleaning

- ✧ Do not carry your radio by the antenna or remote microphone;
- ✧ Wipe the battery with a lint-free cloth to remove dirt, grease, or other material that may prevent good electrical connection;
- ✧ When not in use, keep the accessory jacks covered with the protective caps;
- ✧ Clean the shell, controls and keys of your radio with neutral detergent and warm water after a long period of usage. Avoid using strong chemicals.

Optional Accessories

Strap

Earholder style ear microphone 158Z-G

Earbud style ear microphone 158Z-S

Horizontal Leather case PT-23

Handhold Microphone SM-05

Handhold Microphone SM-06

Vertical Leather Case PT-20

Antenna UHF-VHF

Frequency Chart

Model:

Serial Number:

Chan nel	Transmit Frequency	Transmit CTCSS	Transmit CDCSS	Transmit 2-Tone	Transmit 5-Tone	Transmit ANI DTMF	Receive Frequency	Receive CTCSS	Receive CDCSS	Receive 2-Tone	Receive 5-Tone
1											
2											
3											
4											
5											
6											
7											
8											
9											
10											
11											
12											
13											
14											
15											
16											

HYT endeavor to achieve the accuracy and completeness of this manual, but cannot guarantee its accuracy at all times. All the above specifications and design are subject to change by HYT without notice.

All the reproduction and translation of this manual without authorization of HYT is not allowed.