

ITX-3370-1(BK)TEL

ITX-3370-1W(BK)TEL

IP Multimedia Phone for Android™

User Guide



WARNING

Please do not use a different power adaptor with devices as it may cause damage to the products and void the manufacturer warranty.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with FCC radiation exposure limits set forth in an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE DECLARATION OF CONFORMITY

This transmitter complies with the essential requirements and provisions of directives 2014/53/EU, 2014/30/EU, 2015/35/EU and subsequent amendments, according to standards
ETSI EN 300 328 V2.1.1 (2016-11); EN 301 893 V2.1.1 (2017-05)
ETSI EN 301 489-1 V2.1.1 (2017-02); ETSI EN 301 489-17 V3.1.1 (2017-02)
EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 62311: 2008; EN62479: 2010




Manufacturer:

EUT Feature				
Tx/Rx Frequency Range	2402~2480 MHz	2402~2480 MHz	2412~2472 MHz	5150~5250 MHz 5250~5350 MHz 5470~5725 MHz
Number of Channels	79	40 (37 hopping + 3 advertising channels)	13	UNII Band I: 802.11a/n-HT20-VHT20: 4 channels 802.11n-HT40: 2 channels UNII Band II: 802.11a/n-HT20: 4 channels 802.11n-HT40: 2 channels UNII Band III: 802.11a/n-HT20: 11 channels 802.11n-HT40: 5 channels
Carrier Frequency of Each Channel	f=2402+k MHz (k=0,1,2,...,78)	f=2402+k MHz (k=0,2,4,...,39)	-	-
Antenna Type/Gain	Internal PCB Antenna / gain 3 dBi	Internal PCB Antenna / gain 3 dBi	Internal PCB Antenna / gain 3 dBi	Internal PCB Antenna / gain 4 dBi
Type of Modulation	Bluetooth BR 1Mbps: GFSK Bluetooth EDR 2Mbps: $\pi/4$ -DQPSK Bluetooth EDR 3Mbps: 8DPSK	Bluetooth LE: GFSK	802.11b: DSSS (DBPSK / DQPSK / CCK) 802.11g/n: OFDM (BPSK / QPSK / 16QAM / 64 QAM)	802.11a/n: OFDM (BPSK / QPSK / 16QAM / 64QAM)
Operation temperature	0 °C ~ +40 °C			
Storage temperature	-10 °C ~ +60 °C			
Humidity	10 ~ 90% non-condensing			
Domestic use	Industrial use Class B			

Caution: Exposure to Radio Frequency Radiation

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

CE Authentication

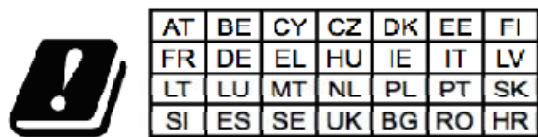

In all EU member states, operation of 5150
- 5350 MHz is restricted to indoor use only.

Hereby, we declares that the radio equipment ITX-3370-1(BK)TEL/ITX-3370-1W (BK)TEL is in compliance with Directive 2014/53/EU.

GNU GPL INFORMATION

ITX-3370-1(BK)TEL/ITX-3370-1W (BK)TEL firmware contains third-party software licensed under the GNU General Public License (GPL). We use software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license.

Table of Content

DOCUMENT PURPOSE	13
WELCOME	14
PRODUCT OVERVIEW.....	15
Feature Highlights.....	15
ITX-3370 Technical Specifications.....	16
GETTING STARTED	18
Equipment Packaging	18
ITX-3370 Phone Setup	18
<i>Using the Phone Stand</i>	<i>19</i>
<i>Using the Slots for Wall Mounting.....</i>	<i>19</i>
Connecting the ITX-3370	19
Description of the ITX-3370.....	21
<i>Front View</i>	<i>21</i>
<i>Back View.....</i>	<i>22</i>
<i>Side View.....</i>	<i>23</i>
Connecting and Setting Up the ITX-3370	23
<i>Using the Phone Stand</i>	<i>23</i>
<i>Using the Slots for Wall Mounting.....</i>	<i>24</i>
Connecting the ITX-3370	25
GETTING TO KNOW ITX-3370	26
Use the Touchscreen	26
Use the Desktop	28
<i>Desktop Menu.....</i>	<i>28</i>
<i>Add Widget to Desktop</i>	<i>29</i>
<i>Manage Desktop Items</i>	<i>30</i>
<i>Set Wallpapers</i>	<i>32</i>
<i>Manage Running Applications.....</i>	<i>32</i>
Idle Screen	33
<i>Switch Idle Screens</i>	<i>33</i>
<i>Set Up Idle Screen.....</i>	<i>34</i>

Use the Status Bar	35
Notifications in Status Bar	38
<i>System Settings in Status Bar</i>	40
Use the ITX-3370 Keys	41
<i>Keypad Shortcut Functions</i>	41
Use the On-Screen Keyboard	42
Use the Message Waiting Indicator	44
MAKE PHONE CALLS	45
Register SIP Accounts	45
<i>Account Status</i>	45
<i>Configure SIP Account</i>	46
Dial a Number Directly	47
Redial	48
Dial a Number via Contact	48
Dial a Number via Call History	48
Answer a Call	49
<i>Single Incoming Call</i>	49
<i>Multiple Calls/Call Waiting</i>	51
<i>Call Progress Status</i>	52
Call Hold	52
Call Recording	53
Mute	53
Turn on Video during Audio Call	54
Switch Audio Channel During Call	55
Call Transfer	56
<i>Blind Transfer</i>	56
<i>Attended Transfer</i>	57
7-Way Conference	60
<i>Initiate Conference</i>	60
<i>Remove Party from Conference</i>	63
<i>End Conference</i>	64
<i>Hold and Resume Conference</i>	64
<i>Auto Conference Mode</i>	64

Missed Call	64
DND (Do Not Disturb)	65
Voicemail/Message Waiting Indication.....	66
Call Forward	67
Call Features	69
CONTACT	72
Local Contacts.....	72
Add Single Contacts	72
Import/Export Contacts	73
Download Contacts.....	75
Search Contacts	76
Use Contacts	77
<i>Make a Call to Contacts</i>	77
<i>Select Contacts</i>	77
<i>Add Contacts to Favorites</i>	77
<i>Edit Contacts</i>	78
<i>Send Contacts to Desktop Shortcut</i>	78
<i>Share Contacts Via Bluetooth</i>	79
<i>Add Contacts to Blacklist</i>	79
<i>Add Group</i>	79
<i>Add contacts to Group</i>	80
<i>Contacts Storage Status</i>	80
HARASSMENT INTERCEPTION.....	82
Blocked Contacts.....	82
Block History.....	82
<i>Delete Block History</i>	83
<i>Edit Blacklist</i>	83
Intercept Anonymous calls	85
CALL HISTORY	86
Local Call History.....	86
<i>Dial Out from Call History</i>	87
<i>Call History Options</i>	87
<i>Delete Call History</i>	87

<i>Call History Details</i>	88
FILE MANAGER	89
Files Operations.....	89
<i>Copy and Paste Files</i>	89
<i>Move Files</i>	90
<i>Send Files</i>	91
<i>Delete Files</i>	92
<i>Rename a File</i>	92
File Categories	93
GS MARKET	94
CAMERA.....	95
Take Picture.....	95
Record Video	95
Angle Adjustment.....	96
Gallery.....	96
Screensaver	99
BROWSER.....	101
ACTION URL	103
CONNECTING ITX-3370 TO GDS3710 DOOR SYSTEM.....	104
CONNECT TO NETWORK AND DEVICES	105
Ethernet.....	105
WI-FI	105
<i>Turn On/Off Wi-Fi</i>	105
<i>Connect to Wi-Fi Networks</i>	105
<i>Wi-Fi Settings Shortcut</i>	107
Bluetooth	108
<i>Turn On/Off Bluetooth</i>	108
<i>Change Bluetooth Device Name</i>	108
<i>Pair ITX-3370 with a Bluetooth Device</i>	109
<i>Unpair a Bluetooth Device</i>	110
<i>Bluetooth Settings Shortcut</i>	110

EHS Headset.....	111
USB Headset.....	112
USB.....	113
SD Card	114

Table of Tables

Table 1: ITX-3370 Features in a Glance	15
Table 2: ITX-3370 Technical Specifications.....	16
Table 3: Equipment Packaging	18
Table 4: ITX-3370 Front View	21
Table 5: ITX-3370 Back View	22
Table 6: ITX-3370 Side View	23
Table 7: ITX-3370 Status Bar Notification Icons.....	38
Table 8: ITX-3370 Keys.....	41
Table 9: ITX-3370 MWI LED Status.....	44
Table 10: ITX-3370 Feature Code	69

Table of Figures

Figure 1: Built in Stand and Mounting Slots on The ITX-3370.	18
Figure 2: Tab on the Handset Cradle	19
Figure 3: ITX-3370 Back / Side View	20
Figure 2: ITX-3370 Front.....	21
Figure 3: ITX-3370 Back View.....	22
Figure 4: ITX-3370 Side View	23
Figure 5: Built in Stand and Mounting Slots on ITX-3370	24
Figure 6: Tab on The Handset Cradle	24
Figure 7: ITX-3370 Back / Side View	25
Figure 8: ITX-3370 Default Home Screen.....	26
Figure 9: ITX-3370 Onscreen Menu	27
Figure 10: ITX-3370 Finger Gestures on the Touch Screen	27
Figure 11: ITX-3370 Desktop Menu.....	29
Figure 12: Add Widget to the Desktop	30
Figure 13: Open Clock Widget	30
Figure 14: Resize Digital Clock Widget.....	31
Figure 15: Move Clock Widget	31
Figure 16: ITX-3370 Choose Wallpaper	32
Figure 17: ITX-3370 Recent Applications	33

Figure 18: ITX-3370 Switch Idle Screens	33
Figure 19: Set up Home Idle Screen	34
Figure 20: Add an Idle Screen.....	35
Figure 21: Delete an Idle Screen.....	35
Figure 22: ITX-3370 Top Status Bar	36
Figure 23: Status Bar - More Options	36
Figure 24: ITX-3370 Top Status Bar – Notification	37
Figure 25: ITX-3370 Top status Bar - Get more information	37
Figure 26: ITX-3370 Top status Bar – Wi-Fi.....	38
Figure 27: System Settings in Status Bar	40
Figure 28: ITX-3370 Keys	41
Figure 29: ITX-3370 Onscreen Keyboard - English Keyboard.....	43
Figure 30: ITX-3370 Onscreen Keyboard - Lowercase and Uppercase.....	43
Figure 31: English Keyboard - Number and Symbols	43
Figure 32: English Keyboard - More Symbols.....	44
Figure 33: ITX-3370 Account Widget.....	45
Figure 34: ITX-3370 Dial Screen	46
Figure 35: Disable Video Call Feature on Dial Screen	47
Figure 36: ITX-3370 View Contacts.....	48
Figure 37: ITX-3370 Call History	49
Figure 38: Single Incoming Call – Audio	49
Figure 39: Single Incoming Call – Video.....	50
Figure 40: Single Incoming Call – Preview-1	50
Figure 41: Single Incoming Call – Preview-2	51
Figure 42: Call Waiting.....	51
Figure 43: Touch to Return to Call Screen	52
Figure 44: Call on Hold	52
Figure 45: ITX-3370 Call Recording	53
Figure 46: ITX-3370 Call Mute	53
Figure 47: Turn on Video During Audio Call.....	54
Figure 48: Accept Video During Audio Call	54
Figure 49: Switch Audio Channel during Call	55
Figure 50: Blind Transfer	56
Figure 51: Attended Transfer.....	57
Figure 52: Attended Transfer - Transferring	58
Figure 53: Attended Transfer – Split	58
Figure 54: Attended Transfer.....	59
Figure 55: Add Conference Members from Dial Screen	60
Figure 56: Add Conference Members from Dial Screen 2	61
Figure 57: ITX-3370 Conference Screen	62
Figure 58: ITX-3370 Conference - Add Existing Call to Conference	62
Figure 59: 3-Way Conference Call Established	63
Figure 60: ITX-3370 Conference - Remove Party from Conference	63

Figure 61: Missed Call Screen	65
Figure 62: Enable/Disable DND	66
Figure 63: Retrieve Voicemail	67
Figure 64: Unconditional Call Forward	67
Figure 65: Call Forward – Unconditional.....	68
Figure 66: Call Forward - Time Based	68
Figure 67: Call Forward - Busy/No Answer/DND	69
Figure 68: ITX-3370 Contacts	72
Figure 69: ITX-3370 Contacts - Add New Contact	73
Figure 70: Add to Contacts from Dial Pad.....	73
Figure 71: ITX-3370 Contacts - Import Contacts.....	74
Figure 72: ITX-3370 Contacts - Export Contacts	75
Figure 73: ITX-3370 Contacts - Download Contacts	76
Figure 74: ITX-3370 Contacts - Search Contacts	76
Figure 75: ITX-3370 Contacts - Select Contacts.....	77
Figure 76: Add Contacts to Favorites	78
Figure 77: ITX-3370 Contacts - Add New Group.....	80
Figure 78: ITX-3370 Contacts - Storage Status	81
Figure 79: List of blocked contacts	82
Figure 80: Block History.....	83
Figure 81: ITX-3370 Blacklist - Add Number to Blacklist	84
Figure 82: Manually Add Number to Blacklist	84
Figure 83: Intercept Anonymous Calls	85
Figure 84: ITX-3370 Call History	86
Figure 85: ITX-3370 Call History – Options	87
Figure 86: ITX-3370 Call History - Details	88
Figure 87: ITX-3370 File Manager – Copy File	89
Figure 88: Paste File.....	90
Figure 89: ITX-3370 File Manager - Move	90
Figure 90: ITX-3370 File Manager - Options.....	91
Figure 91: Delete File(s) via File Manager	92
Figure 92: Rename File	93
Figure 93: GS Market - Onscreen Menu.....	94
Figure 94: ITX-3370 Camera.....	95
Figure 95: Recent pictures and videos page.....	96
Figure 96:Edit picture.....	97
Figure 97: Access to the Gallery.....	97
Figure 98: ITX-3370 Gallery	98
Figure 99: ITX-3370 Gallery - Picture Options	98
Figure 100: Screensaver settings.....	99
Figure 101: Use Network Images	100
Figure 102: Network Image Path.....	100
Figure 103: ITX-3370 Web Browser	101

Figure 104: ITX-3370 Browser Menu Options.....	101
Figure 105: Open New Window in Browser	102
Figure 106: ITX-3370 Web Browser-Bookmarks.....	102
Figure 107: ITX-3370 Connect to Wi-Fi	106
Figure 108: ITX-3370 Connect to Wi-Fi-Show Advanced Options	106
Figure 109: Wi-Fi - Add network	107
Figure 110: Wi-Fi Settings Shortcut	107
Figure 111: Wi-Fi Shortcut - Wi-Fi List	108
Figure 112: ITX-3370 Bluetooth - Paired Device	110
Figure 113: Bluetooth Settings Shortcut	110
Figure 114: Bluetooth Setting shortcut 2.....	111
Figure 115: EHS headset	111
Figure 116: USB Headset Connected.....	112
Figure 117: USB Headset Used for Call	112
Figure 118: Switch Between Speaker and USB mode	113
Figure 119: USB Storage Device Connected to ITX-3370.....	114

DOCUMENT PURPOSE

This document describes how to configure the ITX-3370-1(BK)TEL/ITX-3370-1W (BK)TEL (we call it ITX-3370 for short) via phone's LCD menu and web UI menu to fully manipulate phone's features. The intended audiences of this document are VoIP administrators. To learn the basic functions of ITX-3370, please check the latest "ITX-3370 Administration Guide".

This guide covers following topics:

- [Product Overview](#)
- [Getting started](#)
- [Getting to know ITX-3370](#)
- [User Guide/Setup Wizard](#)
- [Make phone calls](#)
- [Contacts](#)
- [Harassment Interception](#)
- [Call history](#)
- [File manager](#)
- [GS Market](#)
- [Camera](#)
- [Browser](#)
- [Action URL](#)
- [Connecting ITX-3370 to GDS3710 Door System](#)
- [Connect to network and devices](#)

WELCOME

Thank you for purchasing ITX-3370-1(BK)TEL, ITX-3370-1W(BK)TEL, we call it ITX-3370 for short, IP Multimedia Phone for Android™, which combines a 16-line IP video phone with a multi-platform video conferencing solution and the functionality of an Android tablet to offer an all-in-one communication solution. The phone features a 7" 1024x600 capacitive touch screen TFT LCD, Mega pixel camera, dual Gigabit ports with PoE/PoE+, HD audio and video, integrated Wi-Fi (802.11a/b/g/n) & Bluetooth, rich peripheral interfaces, and Android 7.0. By combining a state-of-the-art IP video phone, an advanced video conferencing solution, and the functionality of a tablet, businesses throughout the world can now use the ITX-3370 for all communication and productivity needs.

PRODUCT OVERVIEW

Feature Highlights

The following table contains the major features of the ITX-3370:

Table 1: ITX-3370 Features in a Glance

ITX-3370-1(BK)TEL ITX-3370-1W(BK)TEL	• 16 lines with up to 16 SIP, up to 7-way audio conference and 3-way 720p 30fps HDvideo conference, phonebook with up to 1000 contacts, call history with up to 1000 records • Dual switched 10/100/1000Mbps network ports, Dual band 2.4 & 5GHz Wi-Fi (802.11a/b/g/n), PoE/PoE+, Bluetooth 4.0+EDR, USB, SD, HDMI, EHS with Plantronics headsets support • 7" (1024x600) capacitive (5 points) touch screen TFT LCD, mega pixel CMOS sensor camera with privacy shutter • HD wideband audio, full-duplex Hands-free speakerphone with HD acoustic chamber, advanced acoustic echo cancellation and excellent double-talk performance • Runs the Android™ Operating System 7.0. • Built-in support for video surveillance cameras, and GDS370x series of access control devices. • Create Android applications for any business need to run on ITX-3370 using Google's API and SDK toolkit.
---	---

ITX-3370 Technical Specifications

The following table resumes all the technical specifications including the protocols / standards supported, voice codecs, telephony features, languages and upgrade/provisioning settings for the phone ITX-3370.

Table 2: ITX-3370 Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, NTP, STUN, SIMPLE, LLDP-MED, LDAP, TR-069, 802.1x, TLS, SRTP, IPv6, OpenVPN®.
Network Interfaces	Dual switched 10/ 100/ 1000 Mbps ports with integrated PoE/PoE+
Graphic Display	7" 1024x600 capacitive touch screen (5 points) TFT LCD
Camera	Tiltable mega-pixel CMOS camera with privacy shutter, 720P@30fps
Bluetooth	Yes, integrated. Bluetooth 4.0 + EDR.
Wi-Fi	Yes, dual-band 2.4 & 5GHz with 802.11 a/b/g/n
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets), 3.5mm stereo headset with microphone, USB port, SD, HDMI-out(1.4 up to 720p30fps)
Feature Keys	2 function touch keys VOLUME +/-, 3 dedicated Android touch keys HOME, MENU, and BACK
Voice Codec	G.711µ/a, G.722 (wide-band), G.726-32, iLBC, Opus, G.729A/B in-band and out-of-band DTMF (In audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC, ANS
Video Codec and Capabilities	H.264 BP/MP/HP, video resolution up to 720p, frame rate up to 30 fps, bit rate up to 2Mbps, 3-way video conference (720p@30fps), anti-flickering, auto focus and auto exposure
Telephony Features	Hold, transfer, forward (unconditional/no-answer/busy), call park/pickup, 7-way audio conference (including the host), shared-call-appearance (SCA) / bridged-line-appearance (BLA), virtual MPK, downloadable contacts (XML, LDAP, up to 1000 items), call record, call log (up to 1000 records), call waiting, auto answer, XML customization of screen, click-to-dial, flexible dial plan, hot desking, personalized music ringtones and music on hold, server redundancy & fail-over
Sample Applications	Local apps: Contacts, Call History, File Manager, MPK, Settings, Browser, Voicemail, Clock, Recorder, SMS, etc. Support 3rd party apps: Skype, Google Hangouts, Skype for Business, etc. API/SDK available for advanced custom application development.
Applications Deployment	Allow Android 7.0 compliant applications to be developed, downloaded and run in the embedded device with provisioning control

HD Audio	Yes, HD handset and speakerphone with support for wideband audio
Base Stand	Yes, integrated stand with multiple adjustable angles. Wall mountable
QoS	Layer 2 QoS (802.1Q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 and MD5-session based authentication, 256-bit AES encrypted configuration file, TLS, SRTP, HTTPS, 802.1x media access control
Multi-language	English, German, Italian, French, Spanish, Portuguese, Russian, Croatian, Chinese, Korean, Japanese, and more
Upgrade/ Provisioning	Firmware upgrade via TFTP / HTTP / HTTPS or local HTTP upload, mass provisioning using TR-069 or AES encrypted XML configuration file
Power and Green Energy Efficiency	Universal power adapter included: Input: 100-240VAC 50-60Hz; Output 12VDC 1.5A Integrated PoE* 802.3af Class 3, PoE+802.3at, Class 4 <i>*When using PoE to power up phone, the USB port won't work.</i>
Physical	Dimension : 252mm (W) x 211mm (L) x 84mm (H) Unitweight: 1.08kg Packageweight: 1.77kg
Temperature and Humidity	Operation: 0°C to 40°C Storage: -10°C to 60°C Humidity: 10% to 90% Non-condensing
Compliance	FCC: Part 15 (CFR 47) Class B; UL 60950 (power adapter); Part68 (HAC) CE : EN55022 Class B, EN55024, EN61000-3-2, EN61000-3-3, EN60950-1, EN62479, RoHS RCM: AS/ACIF S004; AS/NZS CISPR22/24; AS/NZS 60950; AS/NZS 4268 IC: ICES 003, RSS 247, CS 03, RSS 102

GETTING STARTED

This chapter provides basic installation instructions including the list of the packaging contents and also information for obtaining the best performance with the ITX-3370.

Equipment Packaging

Table 3: Equipment Packaging

ITX-3370
• 1 x ITX-3370 Main Case • 1 x Handset • 1 x Phone Cord • 1 x Wall Mount • 1 x Screen Cleaning Cloth • 1 x EULA leaflet • 1 x DoC leaflet

Note: Check the package before installation. If you find anything missing, contact your system administrator.

ITX-3370 Phone Setup

The ITX-3370 can be installed on the desktop using the built-in stand or attached on the wall using the slots for wall mounting.

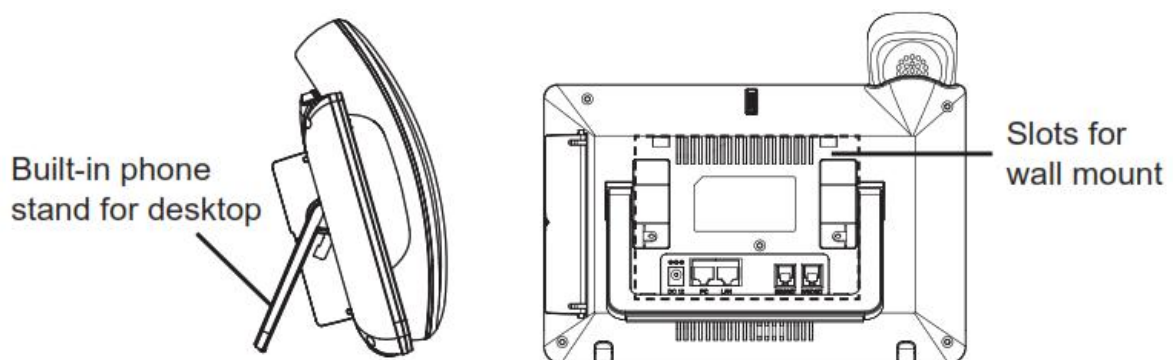


Figure 1: Built in Stand and Mounting Slots on The ITX-3370.

Using the Phone Stand

The ITX-3370 has a built-in phone stand. To use it, pull out the phone stand handle on the back of the phone. Adjust the angle as preferred and make sure the phone stands still on the desktop

Using the Slots for Wall Mounting

1. Attach the wall mount to the slots on the back of the phone;
2. Attach the phone to the wall via the wall mount hole;
3. Pull out the tab from the handset cradle (see figure below);
4. Rotate the tab and plug it back into the slot with the extension up to hold the handset while the phone is mounted on the wall.

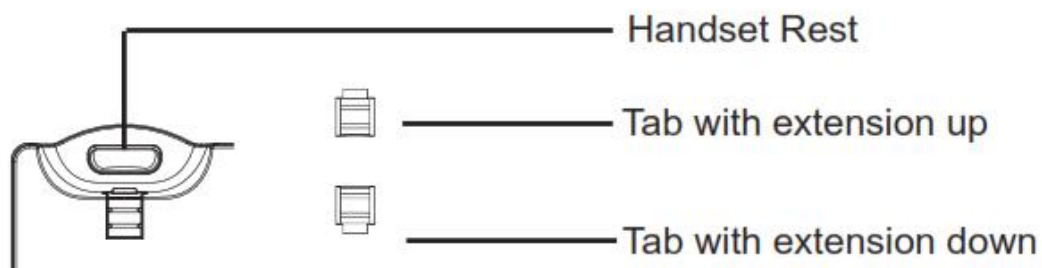


Figure 2: Tab on the Handset Cradle

Connecting the ITX-3370

To setup your ITX-3370, please follow the steps below:

1. Connect the handset and main phone case with the phone cord;
2. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable;
3. Connect the 12V DC output plug to the power jack on the phone; plug the power adapter into an electrical outlet. If PoE switch is used in step 2, this step could be skipped;
4. The LCD will display booting up or firmware upgrading information. Before continuing, please wait for the main screen display to show up;
5. Using the web configuration interface or from the menu of the touch screen, you can further configure network connection using static IP, DHCP and etc.

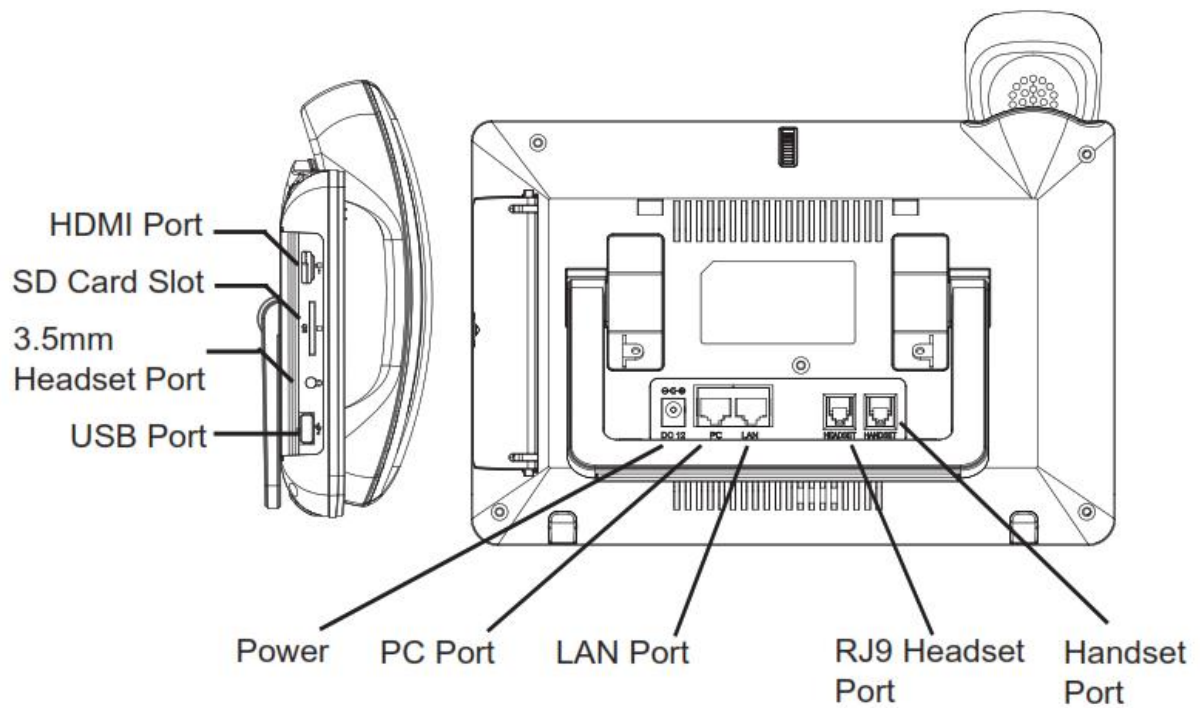


Figure 3: ITX-3370 Back / Side View

Description of the ITX-3370

Front View

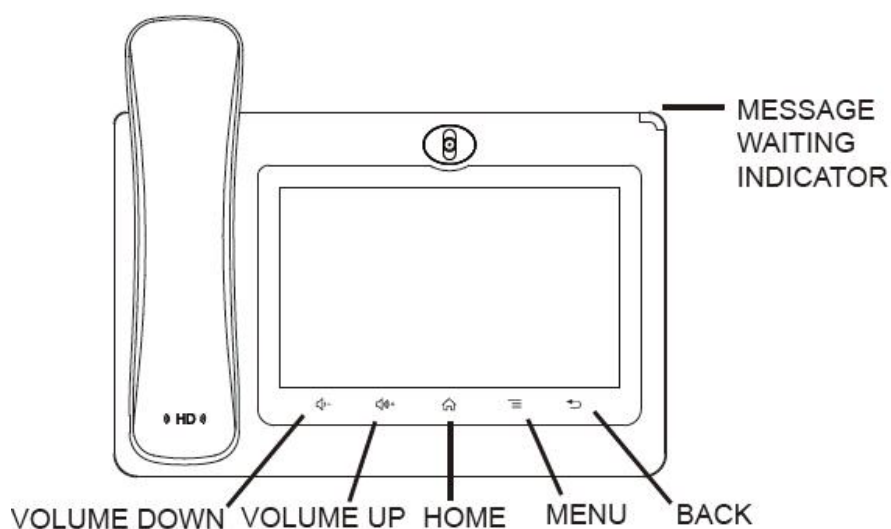


Figure 4: ITX-3370 Front

Table 4: ITX-3370 Front View

Item	Name	Description
1	Front Camera	Mega pixel front camera. The angle can be adjusted, and the camera can be blocked by scrolling up/down the wheel on the back of the camera.
2	MWI LED Indicator	To indicate message status, call status and phone's system status using the LED indicator.
3	LCD	7" (1024x600) capacitive (5 points) touch screen.
4	Back	Tap to go back to the previous menu.
5	Menu	Press MENU key to access phone's display settings, edit widgets and thread manager. Or press and hold on the MENU key for 2 seconds to enter managing application interface directly.
6	Home	Tap to go back to Home screen; or touch and press for about 2 seconds to take a screenshot of phone's screen.
7	Volume Up	Tap to turn up the call volume and media volume.
8	Volume Down	Tap to turn down the call volume and media volume.
9	Handset	Off hook to use handset as the audio channel for calls and media.

Back View

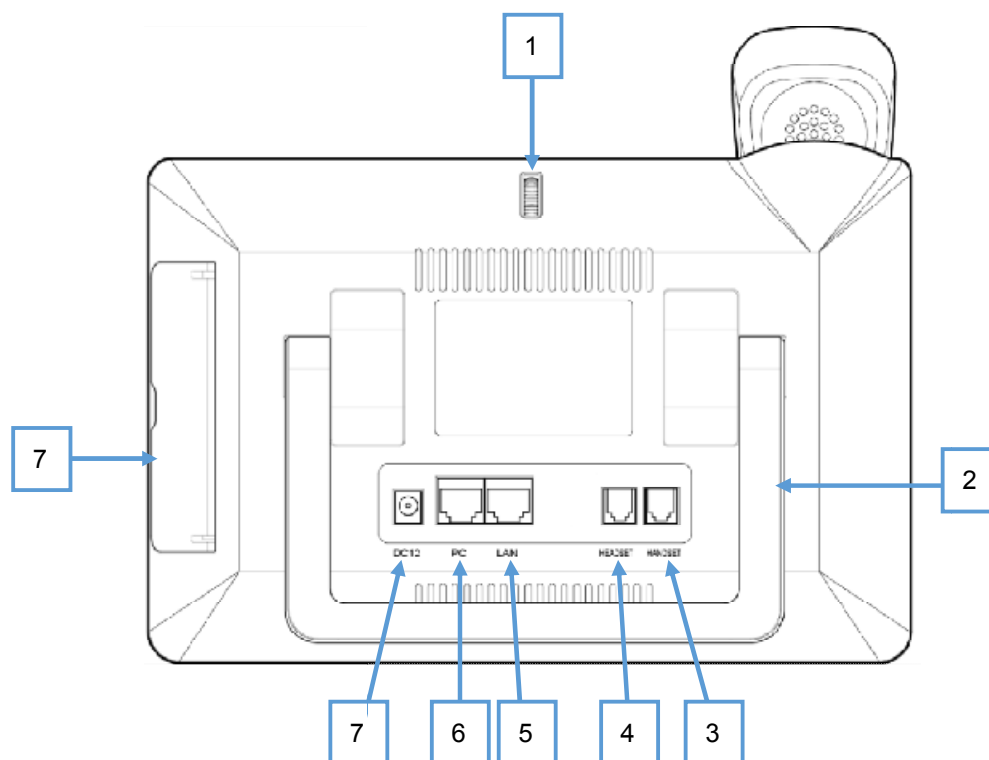


Figure 5: ITX-3370 Back View

Table 5: ITX-3370 Back View

Item	Name	Description
1	Camera Adjusting Wheel	Scroll up/down to adjust the camera angle.
2	Phone Stand (built-in)	Adjust the phone stand angle to place the phone on the desk.
3	Handset Port	RJ9 handset connector port.
4	Headset Port	RJ9 headset connector port (supporting EHS with Plantronics headset).
5	LAN Port	10/100/1000Mbps RJ-45 port connecting to Ethernet. PoE/PoE+ is supported.
6	PC Port	10/100/1000Mbps RJ-45 port connecting to PC.
7	Power Jack	12V DC Power connector port.
8	Side Connectors Cover	Open the cover for USB port, SD card slot, 3.5mm headset port and mini HDMI port.

Side View

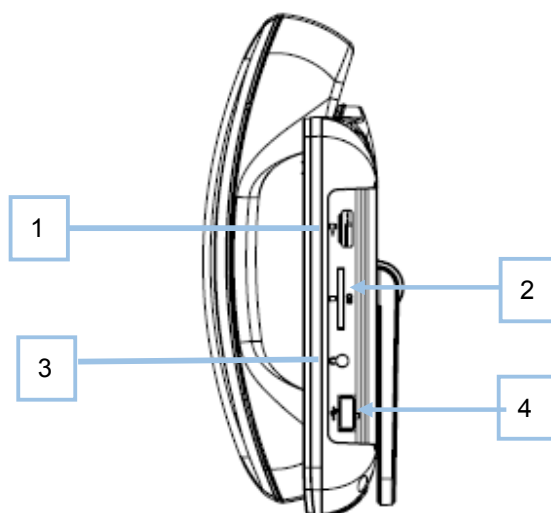


Figure 6: ITX-3370 Side View

Table 6: ITX-3370 Side View

Item	Name	Description
1	HDMI Port	Connect display device to the HDMI port via HDMI cable.
2	SD Card Port	Connect SD storage device to the SD Card Slot.
3	3.5mm Headset Port	Connect 3.5mm headset.
4	USB Port	USB devices can be connected via the USB port. For example, connect a USB flash drive to save captured pictures.

Connecting and Setting Up the ITX-3370

The ITX-3370 can be installed on the desktop using the built-in stand or attached on the wall using the slots for wall mounting.

Using the Phone Stand

The ITX-3370 has a built-in phone stand. To set up the ITX-3370 as your desk phone, follow the steps below:

1. Take the phone stand out on the back and adjust the angle to place the phone steady on the desk;
2. Connect the handset and main phone case with the phone cord;
3. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable;

4. Connect the 12V DC output plug to the power jack on the phone; plug the power adapter into an electrical outlet. If PoE switch is used in step 3, this step could be skipped;

The LCD will display the booting up screen or firmware upgrading information. Before continuing, please wait for the main screen display to show up.

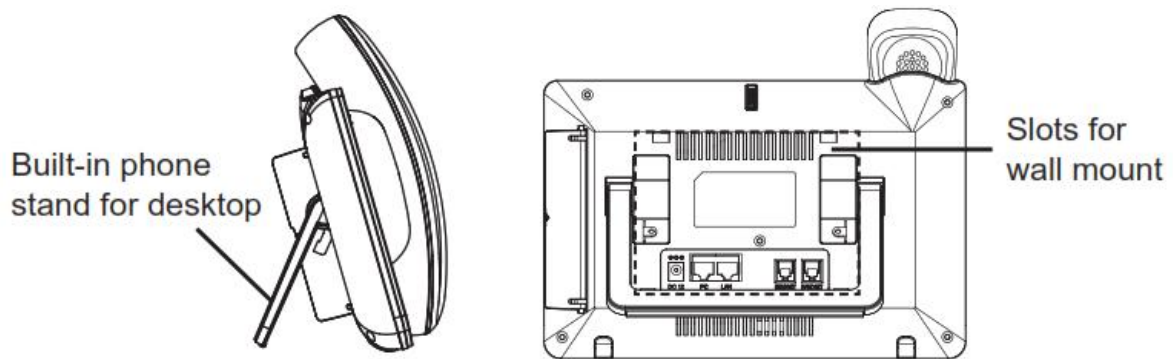


Figure 7: Built in Stand and Mounting Slots on ITX-3370

Using the Slots for Wall Mounting

5. Attach the wall mount to the slots on the back of the phone;
6. Attach the phone to the wall via the wall mount hole;
7. Pull out the tab from the handset cradle (see figure below);
8. Rotate the tab and plug it back into the slot with the extension up to hold the handset while the phone is mounted on the wall.
9. Connect the handset and main phone case with the phone cord;
10. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable;
11. Connect the 12V DC output plug to the power jack on the phone; plug the power adapter into an electrical outlet. If PoE switch is used in step 3, this step could be skipped;

The LCD will display the booting up screen or firmware upgrading information. Before continuing, please wait for the main screen display to show up.

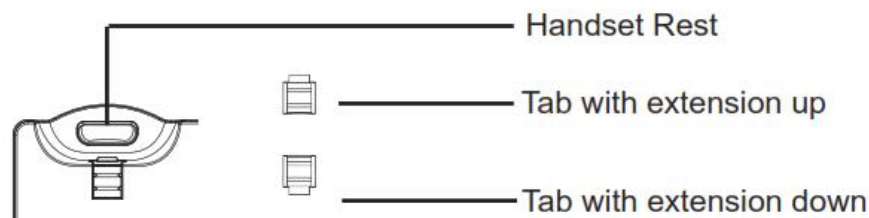


Figure 8: Tab on The Handset Cradle

Connecting the ITX-3370

To setup your ITX-3370, please follow the steps below:

6. Connect the handset and main phone case with the phone cord;
7. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable;
8. Connect the 12V DC output plug to the power jack on the phone; plug the power adapter into an electrical outlet. If PoE switch is used in step 2, this step could be skipped;
9. The LCD will display booting up or firmware upgrading information. Before continuing, please wait for the main screen display to show up;
10. Using the web configuration interface or from the menu of the touch screen, you can further configure network connection using static IP, DHCP etc.


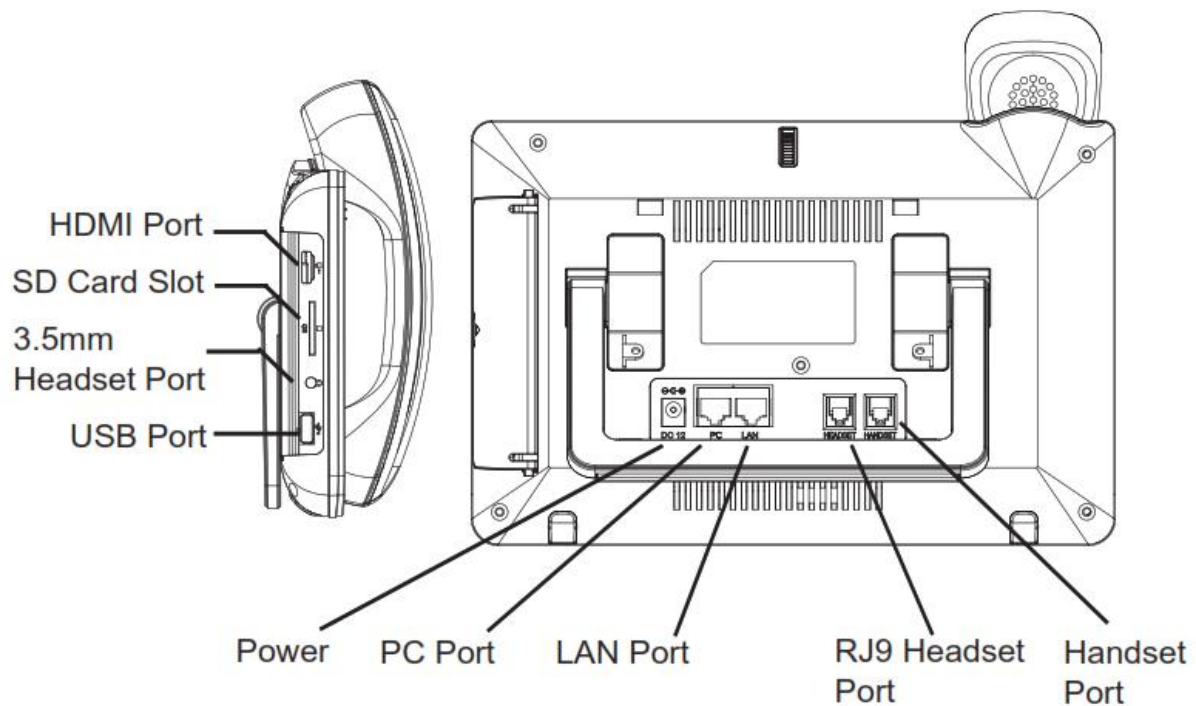


Figure 9: ITX-3370 Back / Side View

GETTING TO KNOW ITX-3370

Use the Touchscreen

When the phone boots up in HOME screen, the LCD will display as below. A registered account is shown in the following figure and users might need register their own account to have the account status displayed.

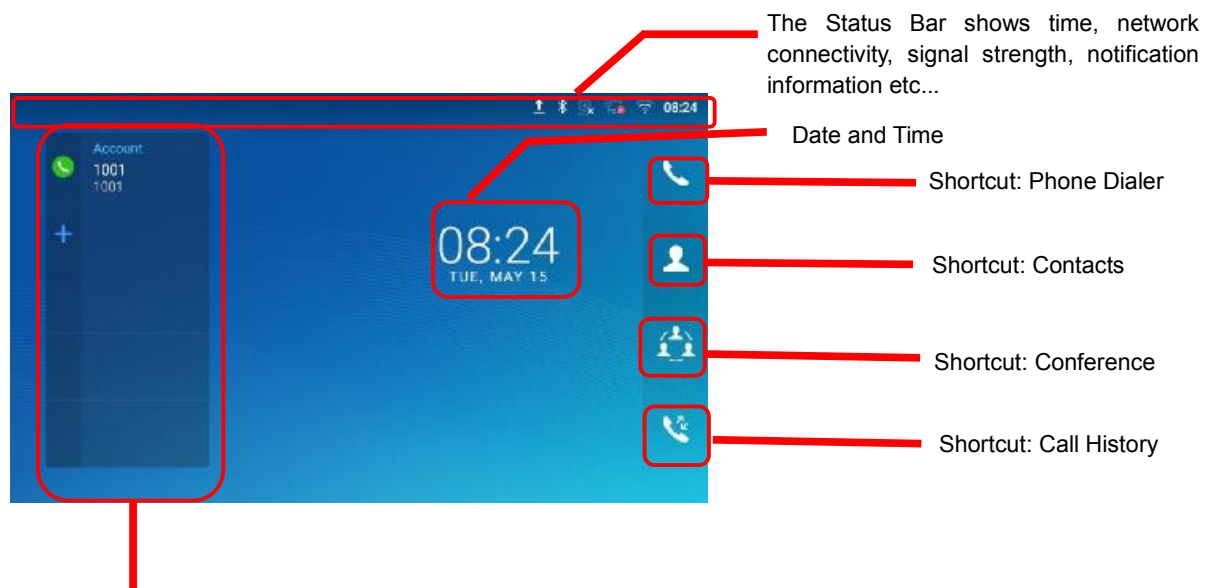

Account information Widget. Up to 8 accounts/Programmable-keys can be displayed.

Figure 10: ITX-3370 Default Home Screen

Swipe from right to left to show the application menu of the phone. The settings and applications installed will be brought up as shown below.



Figure 11: ITX-3370 Onscreen Menu

To fully manipulate the ITX-3370 capacitive touch screen, use your fingers to operate the following on the ITX-3370 icons, buttons, menu items, onscreen keyboard etc.

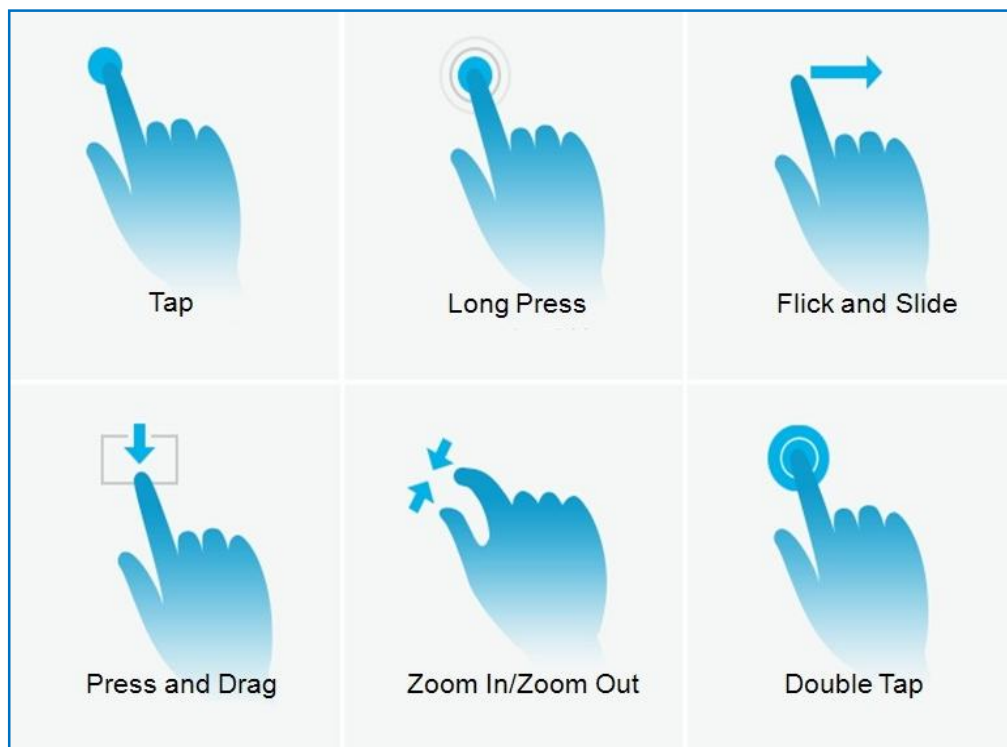


Figure 12: ITX-3370 Finger Gestures on the Touch Screen

- **Tap**
Slightly touch the screen with fingertip to initiate menu, options or applications. For example, to select items on the screen (e.g., setting options, apps etc.); to press onscreen buttons (e.g., "End" or "Options" softkey during the call); to type letters and symbols using the onscreen keyboard.
- **Long Press**
Touch the screen with fingertip and press for about 2 seconds without lifting your finger from the screen till an action occurs. For example, long press on a picture to bring up selection option.
- **Flick and Slide**
Touch the screen with fingertip and slide over the screen. For example, user could slide up to scroll up the page, slide down to open dropdown menu, slide left or slide right to delete an item from the list. If your finger stays on the screen for too long, the item may be selected, and sliding won't occur.
- **Press and Drag**
Touch and press the item, then move it by dragging it up, down, left or right, without lifting your finger from the screen.
- **Zoom In/Zoom Out**
Place two fingers on the screen, then pinch them together (zoom out) or spread them apart (zoom in).
- **Double Tap**
Quickly touch the screen twice with fingertip to switch between default display and zoomed-in display. This is usually used when viewing photos or web pages.

Use the Desktop

Desktop Menu

When the ITX-3370 is on idle screen, press the MENU key  to bring up phone's menu. Users can access the following in the desktop menu:

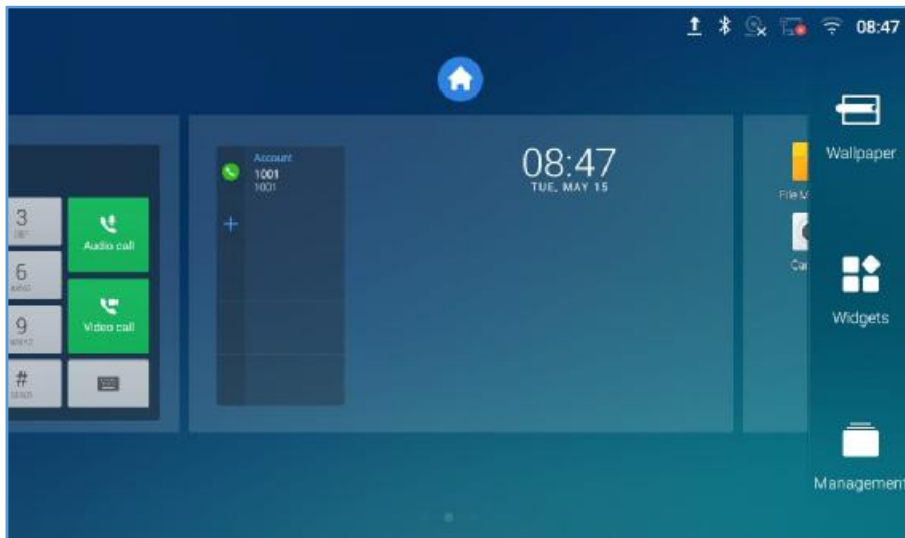


Figure 13: ITX-3370 Desktop Menu

- **Desktop page**
Add, delete or edit desktop pages, set Home page and change the screen sequence.
- **Wallpaper**
Select wallpaper from Local gallery or from the available system Wallpapers
- **Widgets**
Add widgets to the desktop by touching and holding the widget from the widget menu.
- **Management**
Manage running applications on the ITX-3370. For more details, please refer to section **[Manage Running Applications]**.

Add Widget to Desktop

The ITX-3370 provides widgets like account bar, clock, contactsetc. Users could conveniently add those widgets to the desktop as preferred. To add a widget:

1. Press the Menu key  or long press on an empty space on the idlescreenand select "Widgets".
2. Different widgets will be displayed on theright side of the screen.
3. Select and drag the widget to the desired spot to be placed on the desktop. Please make sure there is enough space on the desktop. Otherwise, the widget won't be added.



Figure 14: Add Widget to the Desktop

Manage Desktop Items

On the ITX-3370 desktop, users could tap on the desktop items to manage shortcuts and widgets. The following operations can be done:

- **Tap on the shortcut icon to open the application.**

For example, tap on "File Manager" icon  to access file manager application.

- **Tap on the widget to open and edit it.**

For example, tap on the digital clock on the desktop. The clock settings will be brought up for users to set up timer, stopwatch or alarm.

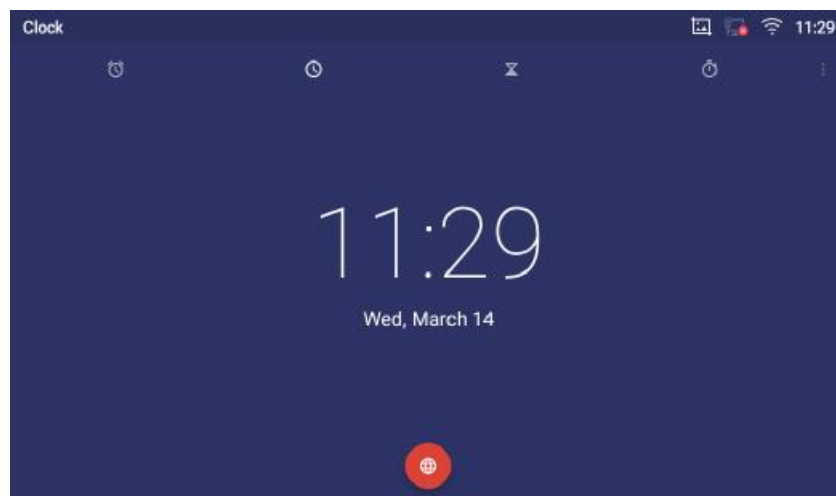


Figure 15: Open Clock Widget

- **Certain widgets such as Clock can be resized on the desktop.**

To resize a widget, touch and press the widget for about 2 seconds. Then lift your finger from the screen. This will bring up the white frame as shown in [Figure 16: Resize Digital Clock Widget]. Touch and drag the border of the frame to adjust the size.



Figure 16: Resize Digital Clock Widget

- **Move/delete Application/Widget**

To move a shortcut/widget to a different spot on the desktop or to a different idle screen, touch and press the item for about 1 second until a recycle bin icon shows up on the top of the screen. Drag the item up/down/left/right to the destination spot on the screen. Lift your finger once done. To delete the item/widget, press on it for about 1 second then move it to the recycle bin on the top of the screen.



Figure 17: Move Clock Widget

**Note:**

Deleting an application icon will systematically pop up a window asking the permission to uninstall the application from the screen. Press ok to uninstall or press cancel to abort.

Set Wallpapers

On the ITX-3370 desktop, touch and press on an empty spot for about 2 seconds or users could press menu key  and select "Wallpaper" to set up the wallpaper for the desktop. Users could select wallpaper from different categories:

- **Local**

Open Gallery application and tap on the picture to preview. Touch and drag the picture to adjust the frame that will be used as wallpaper. Then tap on "Set Wallpaper" to set the selected area of the picture as wallpaper.

- **Wallpapers**

On the right side of the Wallpaper menu of the ITX-3370. Select the picture from the default wallpapers available to preview and then tap on "Set wallpaper".

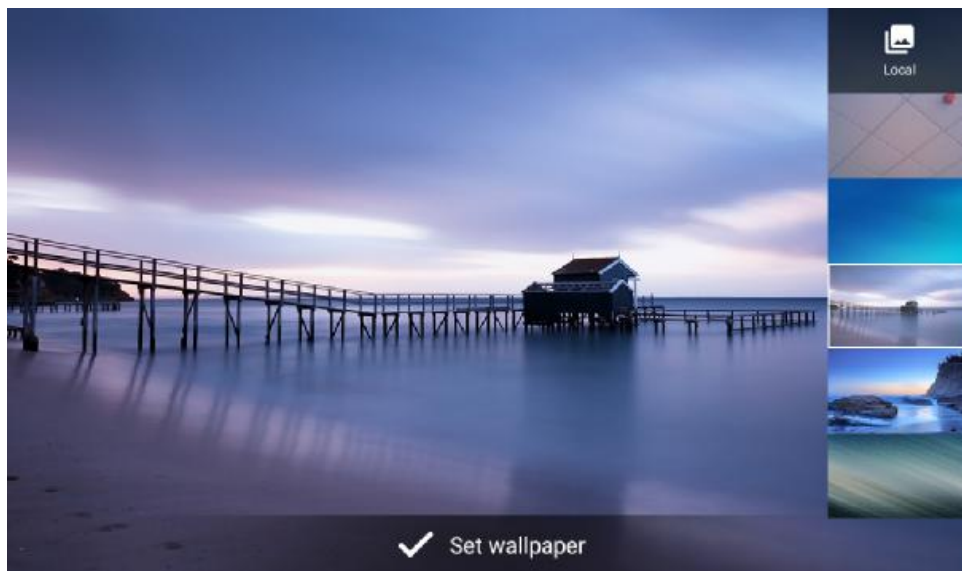


Figure 18: ITX-3370 Choose Wallpaper

Manage Running Applications

On the ITX-3370 desktop, press an empty spot for about 2 seconds then select "Management" or select "Management" after pressing Menu button .

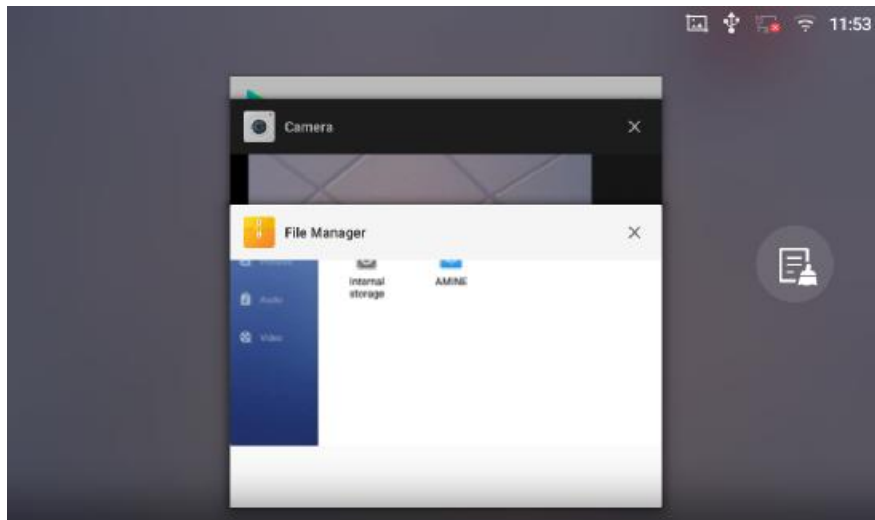


Figure 19: ITX-3370 Recent Applications

Users could use the thread manager to do the following:

- Slide the running thread to the left or right to stop the application.
- Tap on icon  to delete all running threads.
- Tap on "Application" softkey to access application menu for advanced management options.

Idle Screen

Switch Idle Screens

The ITX-3370 supports multiple idle screens by sliding the screen horizontally. On the ITX-3370 screen, slightly touch an empty area and slide to the left or right using your finger to switch between different idle screens.

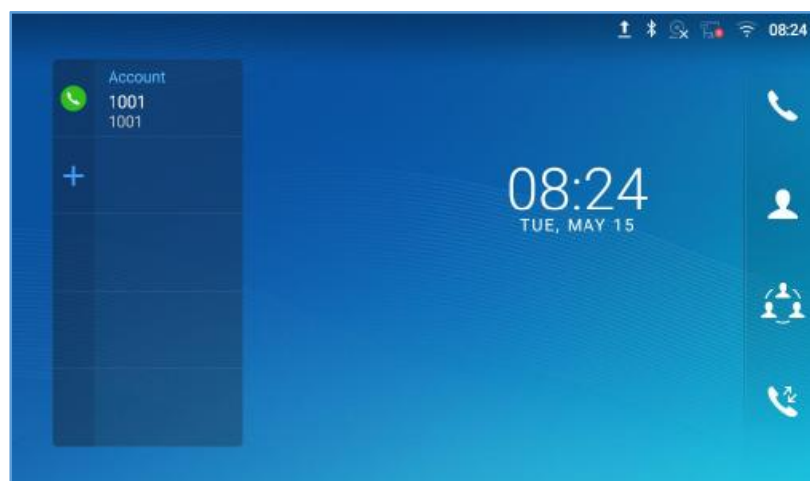


Figure 20: ITX-3370 Switch Idle Screens

Set Up Idle Screen

- **Set home screen**

Follow the steps below to set up the HOME screen.

1. ITX-3370 is up and running on idle screen.
2. Press the MENU button . This will zoom out all the screens as shown in **[Figure 21: Set up Home Idle Screen]**.
3. The screen with  displayed is the HOME screen. Others are shown with icon . Tap on the icon  to select the corresponding screen as the new HOME screen.

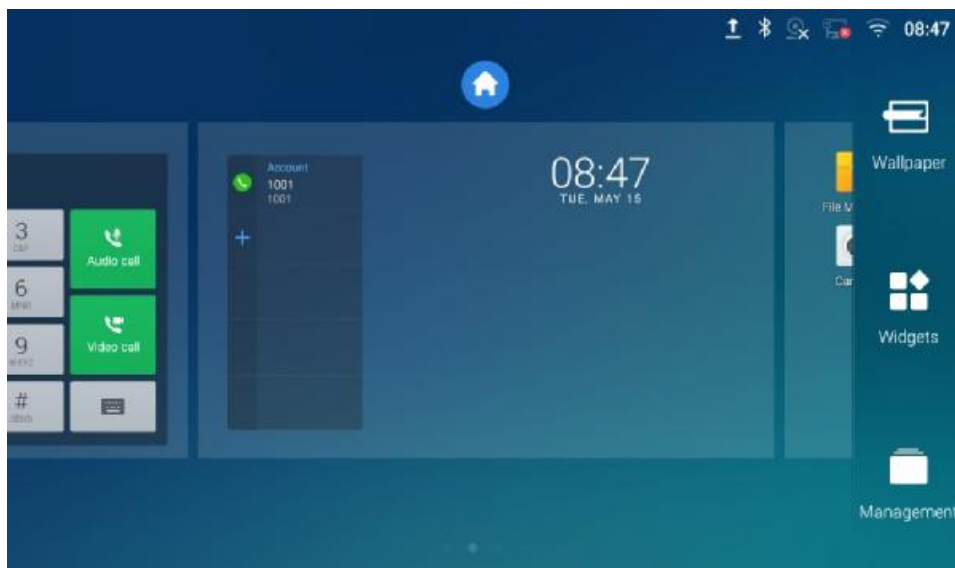


Figure 21: Set up Home Idle Screen

- **Add/Delete idle screen**

As shown in **[Figure 21: Set up Home Idle Screen]**, this section shows the available desktop screens. Users could add or delete idle screen.

- Add idle screen.

Tap on  to add a new idle screen.

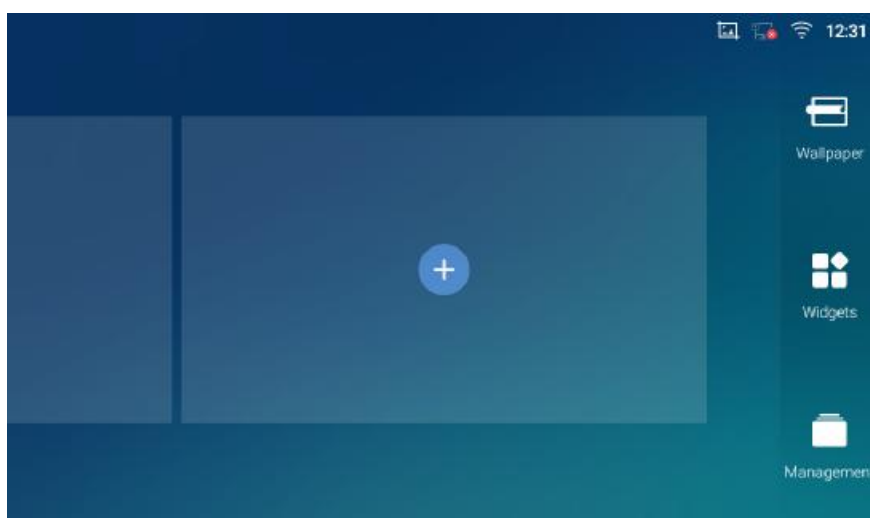


Figure 22: Add an Idle Screen

- Delete idle screen.

Tap on  to delete the Idle screen. Please make sure the apps, shortcuts or widgets on the idle screen are removed first. Otherwise, the  icon won't show for the idle screen.

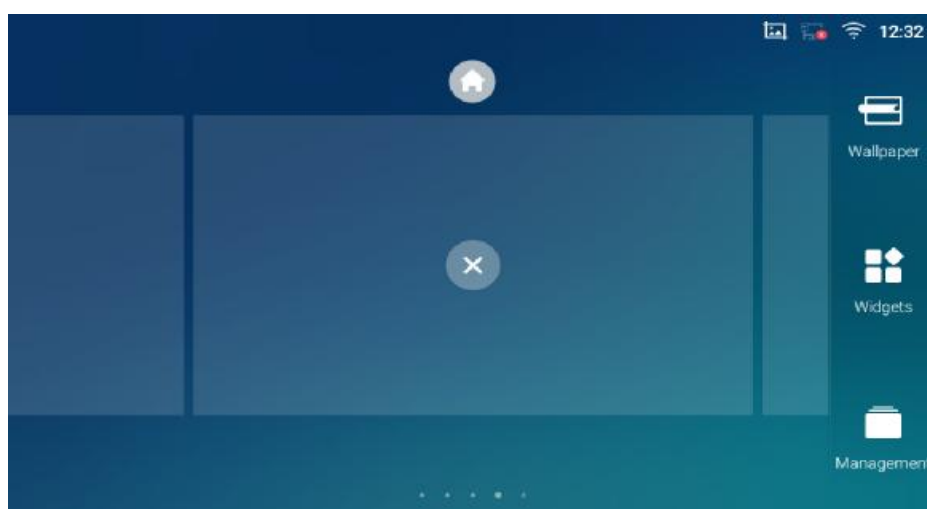


Figure 23: Delete an Idle Screen

Use the Status Bar

The status bar on the top of the ITX-3370 screen provides visual notifications for the system settings and status, as well as quick access for important system settings. To access it, on the ITX-3370 idle screen, slowly slide down from the top to the bottom of the screen as the following figure shows.

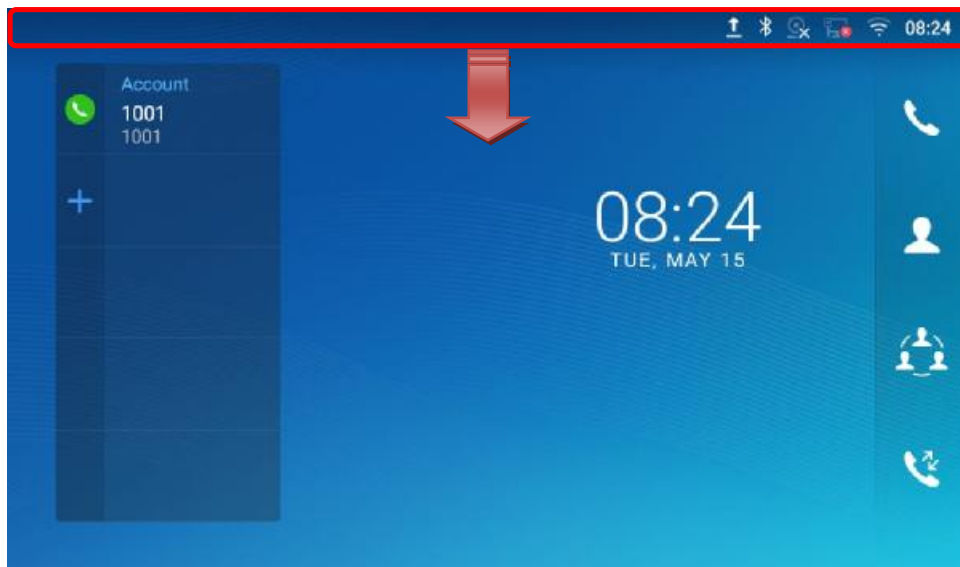


Figure 24: ITX-3370 Top Status Bar

For more options on the Status Bar (brightness, call forward, Hotspot...) users can pull down the status bar twice, or once with two fingers.

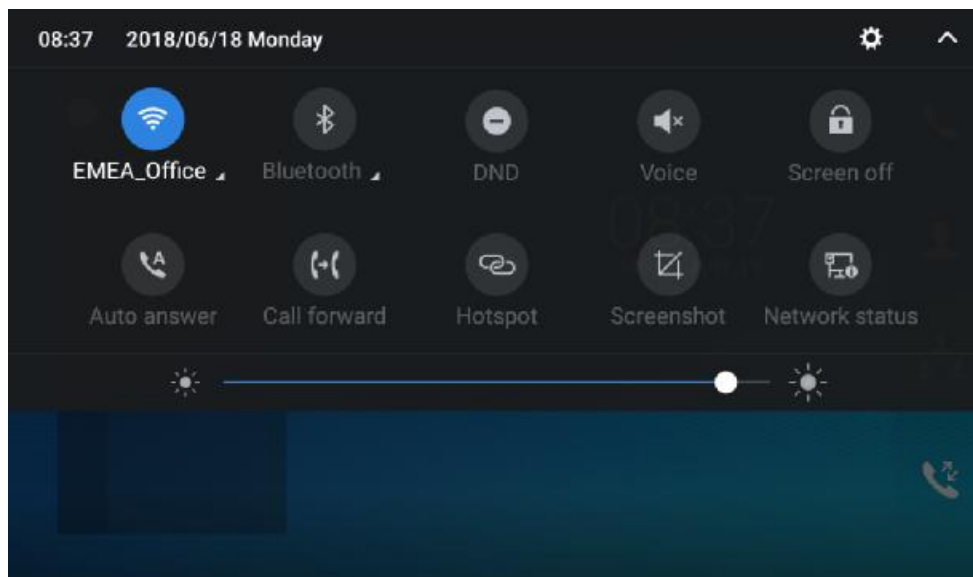


Figure 25: Status Bar - More Options

The running process and notifications will show up in the list. For example, the following figures indicate that there is a notification for an available Wi-Fi network.

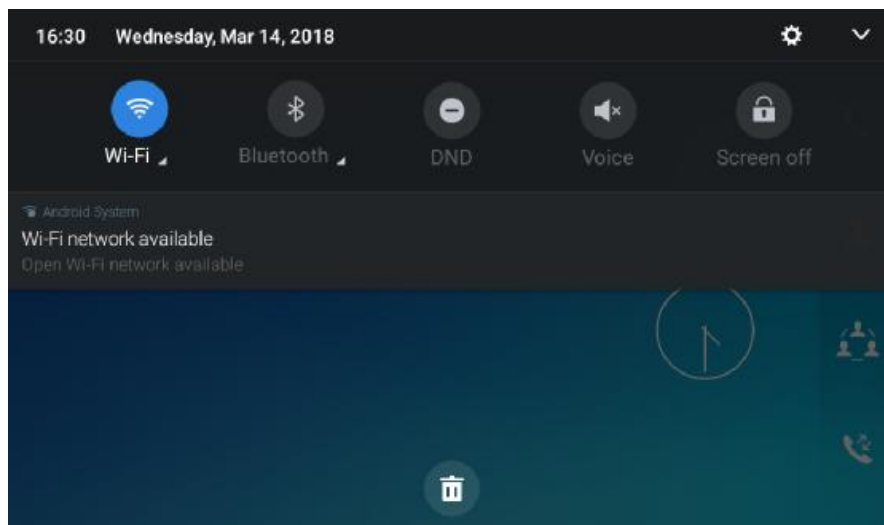


Figure 26: ITX-3370 Top Status Bar – Notification

- Tap on the notification message to view the details.
- Slide the notification message to the left or the right side to remove it.

For more information about specific features in the notification bars, you can press the bottom right of the feature in question.

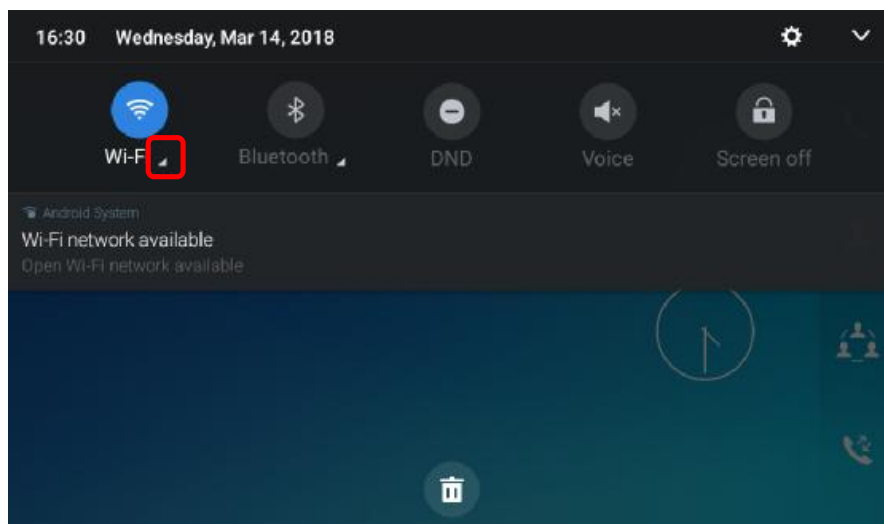


Figure 27: ITX-3370 Top status Bar - Get more information

For example, you can see the available Wi-Fi Networks.

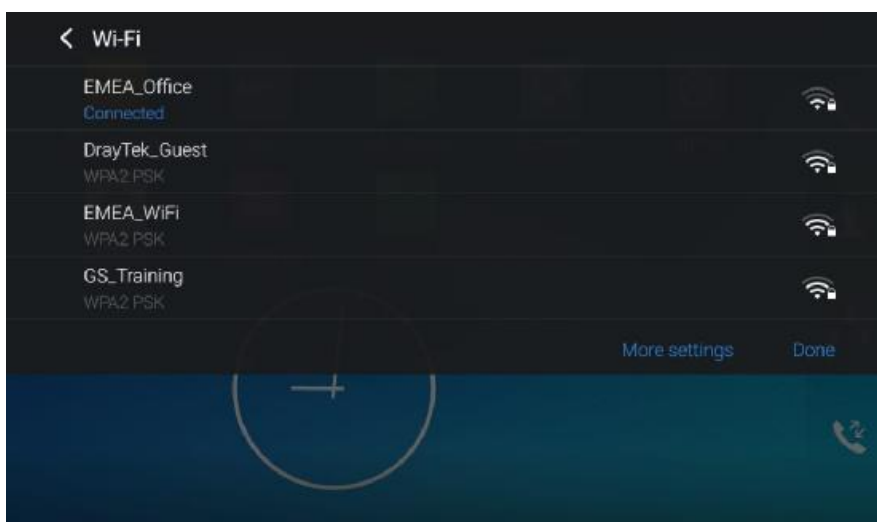


Figure 28: ITX-3370 Top status Bar – Wi-Fi

Notifications in Status Bar

The following table describes the icons used on the status bar for notification purpose.

Table 7: ITX-3370 Status Bar Notification Icons

	Network connected via Ethernet cable.	
	Trying to connect to the network via Ethernet cable.	
	Handset is off hook.	
	Speaker is being used. (x)	
	RJ9 headset is connected.	
	RJ9 headset is being used for calls.	
	3.5mm earphone is connected.	
	3.5mm earphone is being used for calls.	
	Wi-Fi is enabled and still not connected.	

	Wi-Fi network is available.	
	Wi-Fi is enabled and connected.	
	Onscreen keyboard is activated.	
	Bluetooth is enabled but not connected.	
	Bluetooth is enabled and connected.	
	Bluetooth headset is connected.	
	Bluetooth headset is being used for calls.	
	Downloading files via Bluetooth.	
	Alarm is set up and enabled.	
	DND is enabled.	
	Silent mode is enabled. When it's on, the incoming call/message won't produce ring tone/notification tone from phone's speaker.	
	SD Card is inserted.	
	SD Card space full.	
	USB flash drive is inserted.	
	Downloading files via Internet connection.	
	Unread voicemail to be retrieved.	
	Incoming call from blacklist contact.	
	Camera is disabled.	
	Contact storage is full.	
	HDMI cable is connected to display device.	

	The phone is powered up using PoE.
	Call forward is set up.
	PPPoe is connected.
	PPPoe is not connected.
	Warning message.

System Settings in Status Bar

Slide down the top status bar and select **System Settings**. Users will see the following settings.

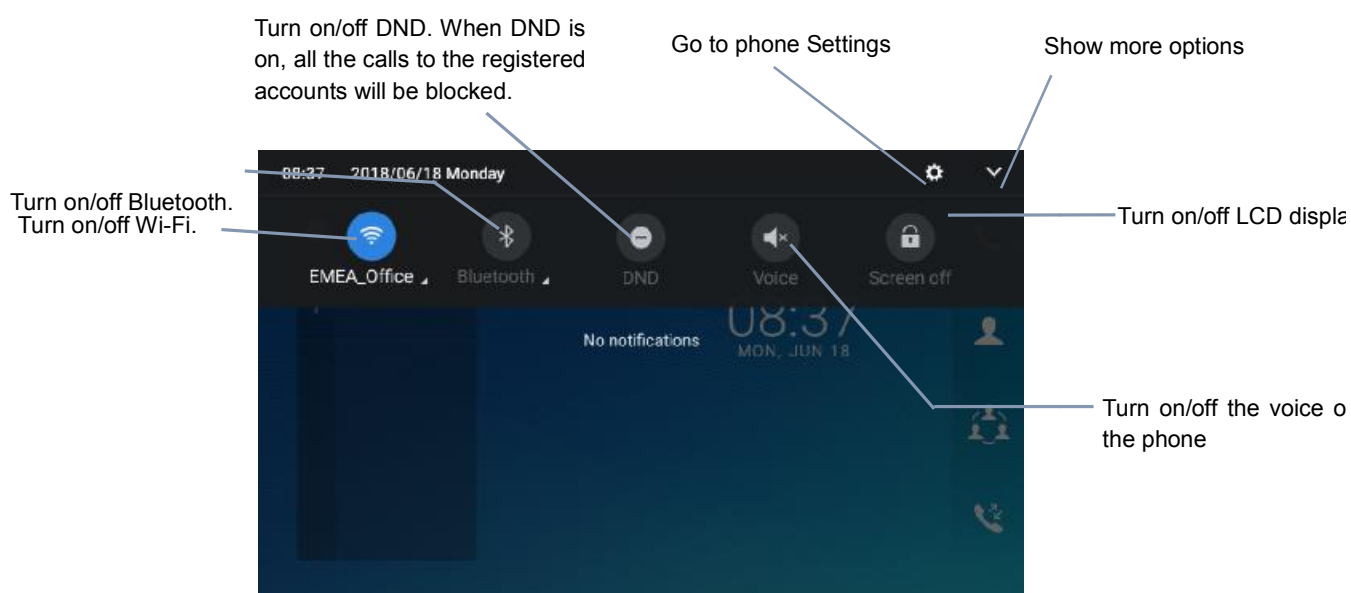


Figure 29: System Settings in Status Bar

Use the ITX-3370Keys

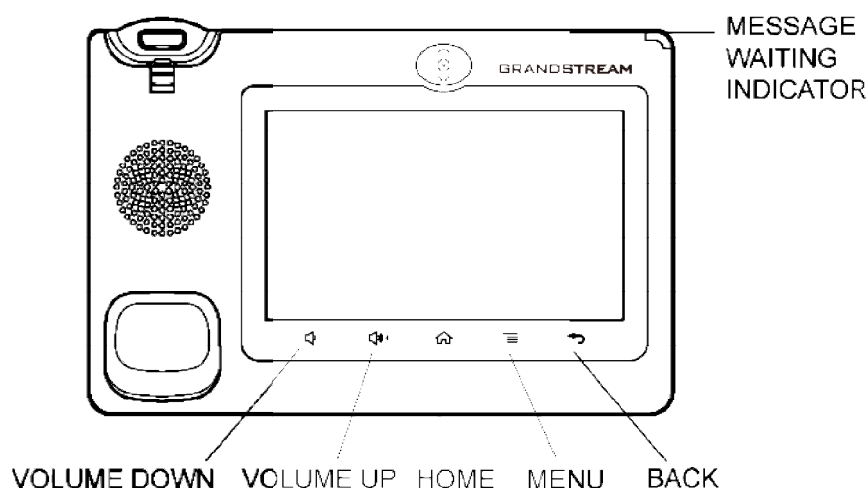


Figure 30: ITX-3370 Keys

Table 8: ITX-3370 Keys

Volume Down	Tap to turn down the call volume and media volume.
Volume Up	Tap to turn up the call volume and media volume.
Home	Tap to go back to Home screen; or touch and press for about 2 seconds to take a screenshot
Menu	Tap to view options for different screens or applications.
Back	Tap to go back to the previous menu.

Keypad Shortcut Functions

The ITX-3370 supports keys shortcuts for certain special system functions.

- **Screenshot**

Press and hold the Home button  for about 2 seconds to capture screenshot. The screenshot can be accessed via **FileManager→Pictures**. The screenshot picture size is 1024x600 pixels.

- **Firmware upgrade via SD card**

For users that could not use remote upgrade or could not access the phone's Web GUI to upload firmware, upgrading via external SD card is an alternative. Follow the steps below to upgrade ITX-3370 via SD card.

1. Download the firmware file to PC and save it in SD card.
2. Insert the SD card to ITX-3370.
3. Power cycle the ITX-3370 and the 5 LCD keys on the bottom of the screen will light up.
4. Wait for the LCD keys light to turn off.
5. Once the light is off, immediately press and hold both keys  (the first LCD key from the left) and  (the third LCD key from the left) at the same time while booting up.
6. Release the keys when the LCD screen displays the upgrading bar.
7. The ITX-3370 will start upgrading and display the upgrading process in the screen.
8. Wait until the upgrading is done.
9. The ITX-3370 will reboot itself.
10. Check the firmware status and remove the SD card.

- **Hard reset**

For users that want to factory reset the device manually, hard reset is an alternative:

1. Power cycle the unit and the 5 LCD Keys on the bottom of the screen will light up.
2. Wait for the LCD keys light to turn off.
3. Once the light is off, immediately press and hold VOLUME UP and MENU keys at the same time.
4. Release the keys when the LCD screen displays “Factory reset, please wait”.
5. The unit will reboot with factory default settings.



Note:

Upgrading via USB storage device is not supported on the ITX-3370.

Use the On-Screen Keyboard

The ITX-3370 onscreen keyboard can be activated by tapping on an input field.

- **English Keyboard**

This is the default keyboard on ITX-3370.

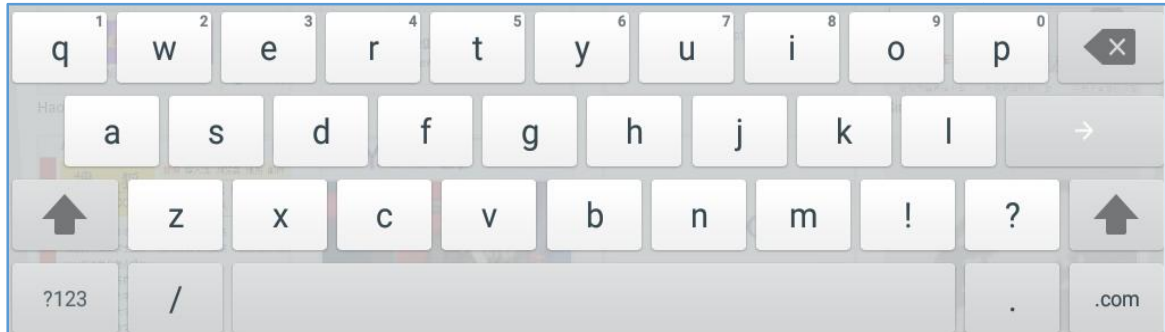


Figure 31: ITX-3370 Onscreen Keyboard - English Keyboard

To switch input between lowercase and uppercase, tap on  (lowercase) or  (uppercase).

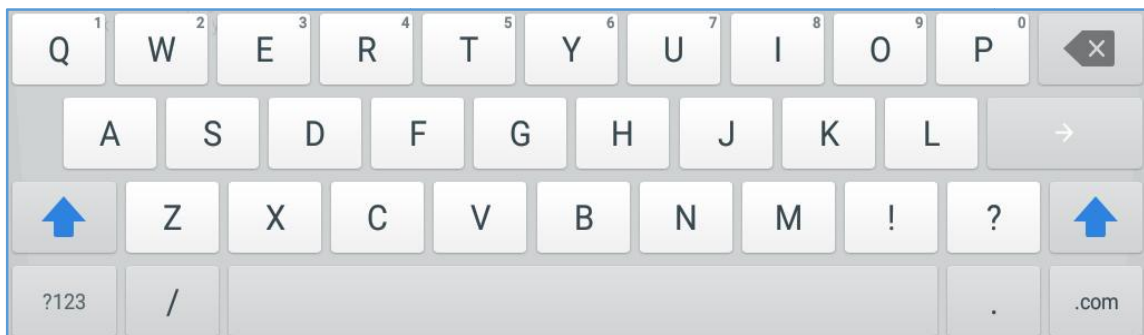


Figure 32: ITX-3370 Onscreen Keyboard - Lowercase and Uppercase

- **Number and symbols**

To input number and symbols, tap  on the default keyboard to switch to number/symbols. Tap on  to switch back.

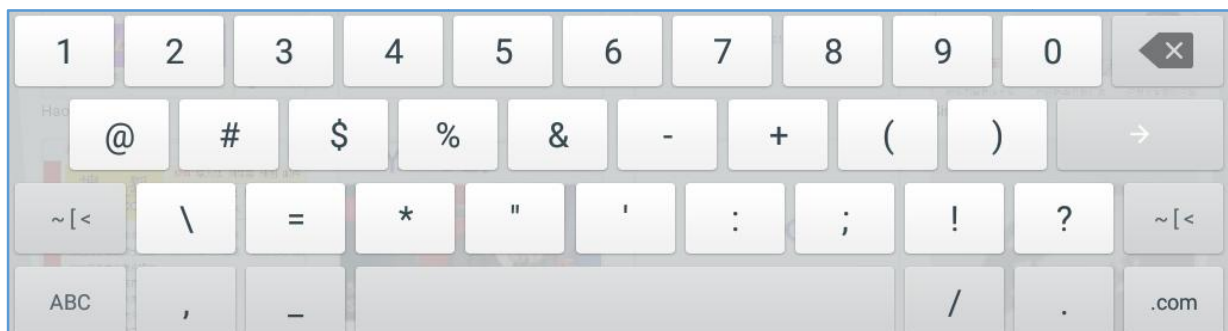


Figure 33: English Keyboard - Number and Symbols

Tap on  to access more symbols.

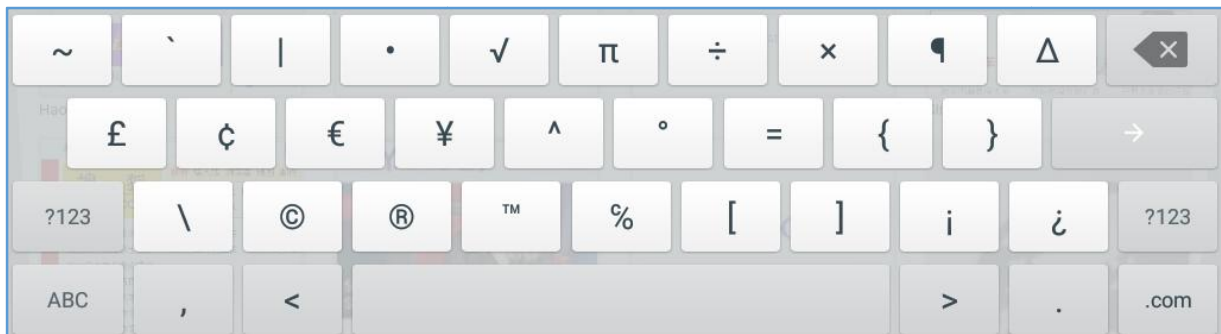


Figure 34: English Keyboard - More Symbols

Note:

- To configure keyboard and input options, go to **Settings→Basic→Language & Keyboard Keyboard & Input Methods**.
- Users could touch and press the key on the keyboard for about 2 seconds to input the alternative character. For example, touch and press the "+" key for about 2 seconds can get the selection "±".

Use the Message Waiting Indicator

The ITX-3370 message waiting indicator LED is on the upper right corner of the device. It could notify the users with different messages and status of the phone. Please refer to the status description below. **The priority for the LED indicator is from high to low in the following table.**

Table 9: ITX-3370 MWI LED Status

Color	LED Status	Description
	Fast Flashing	Incoming call
	Solid	Calling, Talking, Conferencing, Screensaver on when the LCD is off
	Slow Flashing	A call is on hold
	Flashing	Missed call (s), New voicemail (s), New SIP Message (s)
	Solid	High memory usage, Maximum contact storage, Network disconnect
	Fast Flashing	Upgrading
OFF	OFF	Normal

MAKE PHONE CALLS

Register SIP Accounts

The ITX-3370 supports up to 16 independent SIP accounts. Each account can have separate SIP servers, usernames and NAT configurations.

Account Status

On the idle screen, the account widget shows the account name, and registration status.

- The following figure shows the account is successfully registered (account icon is green).
- If the account icon is grey, it's still trying to register or unable to register.

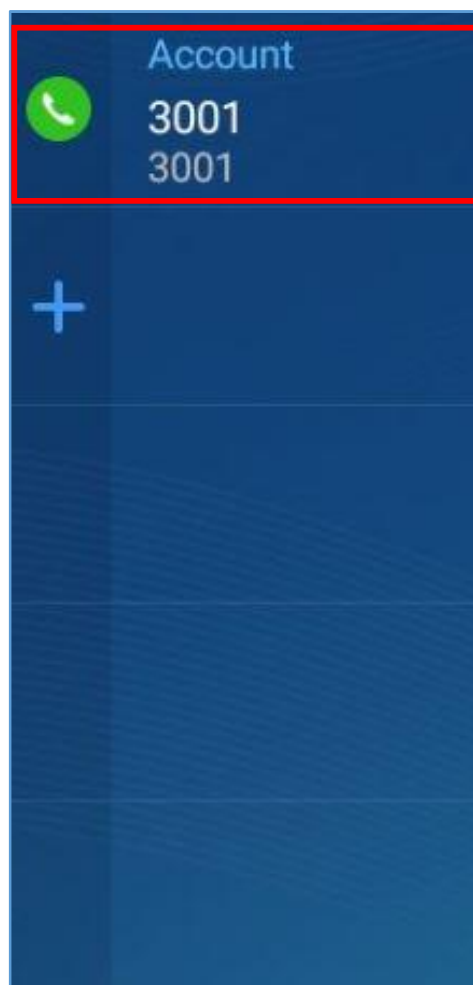


Figure 35: ITX-3370 Account Widget

Configure SIP Account

To register a SIP account, users can access phone's LCD menu→**Settings**→**Advanced** →**Account Settings**

Or users could log in the ITX-3370 web GUI→**Account** page to fill in the necessary registration information, i.e., Account active, Account name, SIP Server, SIP User ID, SIP Authentic ID, SIP Authentic Password, etc. Once the correct information is entered and saved, the account registration status will show on the main screen.

Note:

For web GUI login and configuration information, please refer to ITX-3370 Administration Guide.

If the account is successfully registered, users could use one of the following ways to bring up dial screen to start making calls.

- Take the handset off hook.
- Select an account from the account widget in the idle screen.
- On the shortcuts menu of the idle screen, tap on  icon to open dial screen.

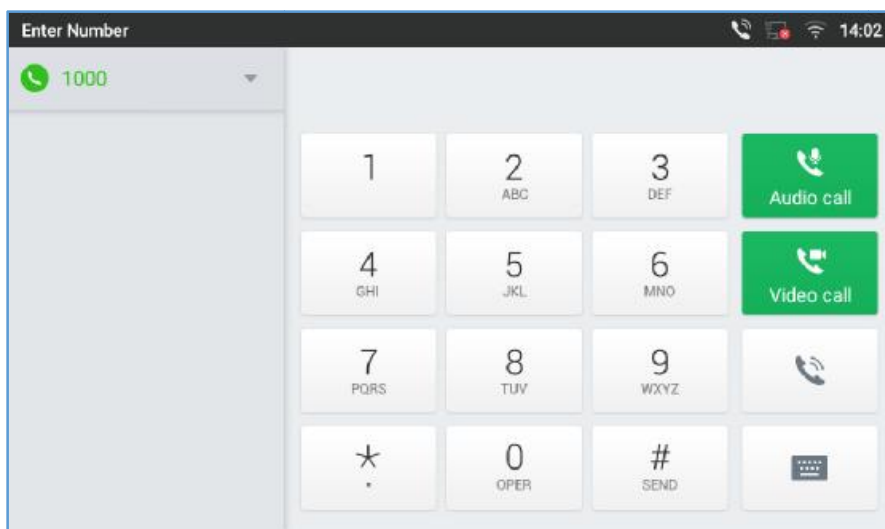


Figure 36: ITX-3370 Dial Screen

If **Disable Video Call Feature** option is enabled, the **Video Call** option on ITX-3370 dial screen won't be available

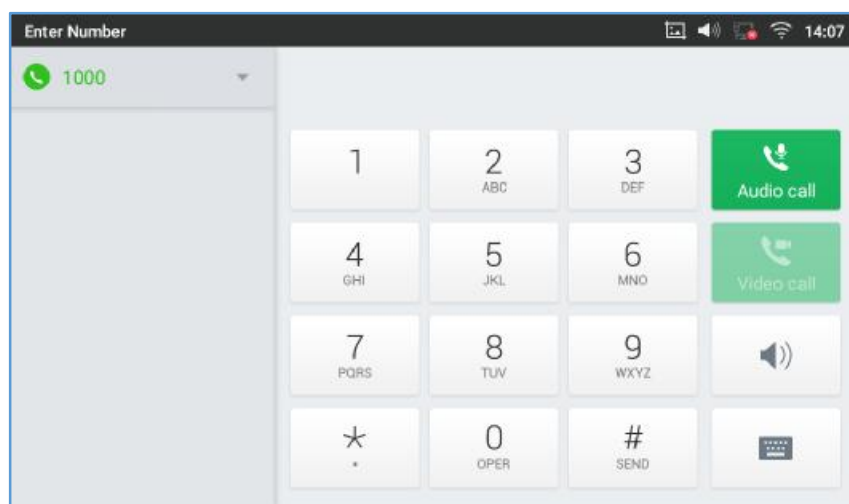


Figure 37: Disable Video Call Feature on Dial Screen

Dial a Number Directly

1. Use the methods mentioned above to open dial screen **[Figure 36: ITX-3370 Dial Screen]**.
2. Select the account to dial out on the left panel of the dial screen. The selected account will be displayed in green.
3. Enter the digits to be dialed out using the keypad. If the digit matches call history, a list of numbers will be displayed for users to select from.
4. Tap on  (audio call only) or  (video call) to send the number. If no key is pressed, by default the call will be automatically dialed out after 4 seconds timeout.

Note:

- By default, the "No Key Entry Timeout" is 4 seconds, meaning if no key is pressed after entering a number, the call will be automatically sent out after the timeout. The timeout interval can be configured under web GUI → **Account** → **Call Settings**.
- ITX-3370 allows users to press # key as SEND key. This behavior can be disabled via option "Use # as Dial Key" under web GUI → **Account** → **Call Settings**.
- When the user enters the digit on the dial screen, if there is digit matching call history, or contacts name/number, the drop-down list will show the numbers. For example, if "John" is saved in the contacts, entering 5 (JKL) 6 (MNO) 4 (GHI) 6 (MNO) will show call log with 5646 as the first four digits, as well as John's number. Users could then directly select one of them from the list, instead of entering all the digits.

Redial

Users can dial out the last dialed number if there is dialed call log, using the same SIP account making the call last time.

1. Enter the dial screen.
2. A list of dialed calls will be displayed on the left side of the dial pad. Tap on the number you would like to call, the number will be added to the dialing field, press Audio call or Video call to redial.

Dial a Number via Contact

Follow the steps below to dial a number via Contact.

1. Access Contacts by tapping on  icon on the left side of the idle screen.
2. Navigate in the contacts entries by sliding up/down on the screen.
3. Tap on the dial icon for the contact .

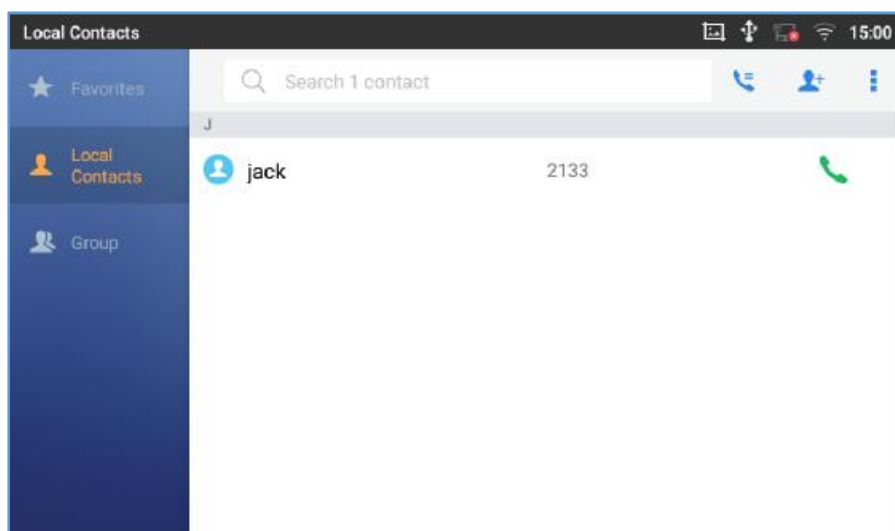


Figure 38: ITX-3370 View Contacts

Dial a Number via Call History

1. Access Call History by tapping on  icon on the bottom of the idle screen.
2. The LCD will display all call history types: "All", "Missed", "Outgoing" and "Incoming" calls.
3. Navigate in the call history list by selecting the call history category and sliding up/down on the screen.
4. Tap on the entry to show more details or tap on  to dial out.

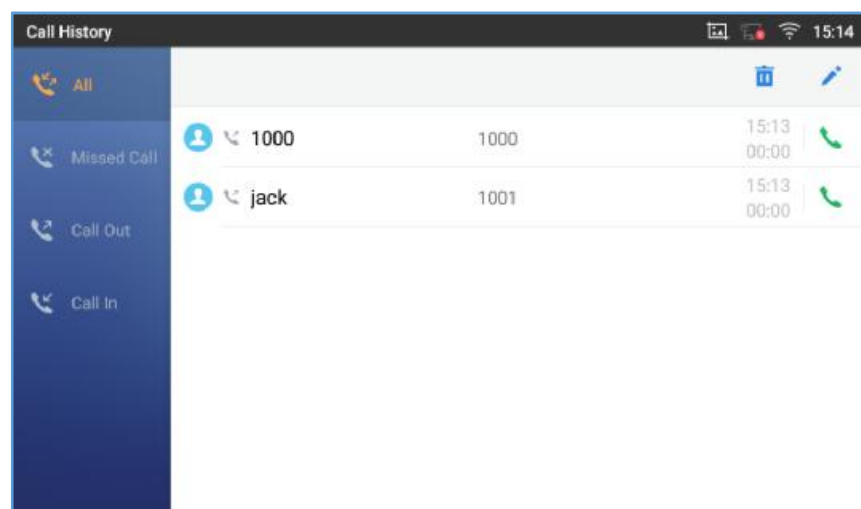


Figure 39: ITX-3370 Call History

Answer a Call

Single Incoming Call

- When the phone is in idle and there is an incoming audio call, the phone will show the call screen as below. Tap on "Answer" softkey to answer the call via speaker or pick up the handset the answer the call.

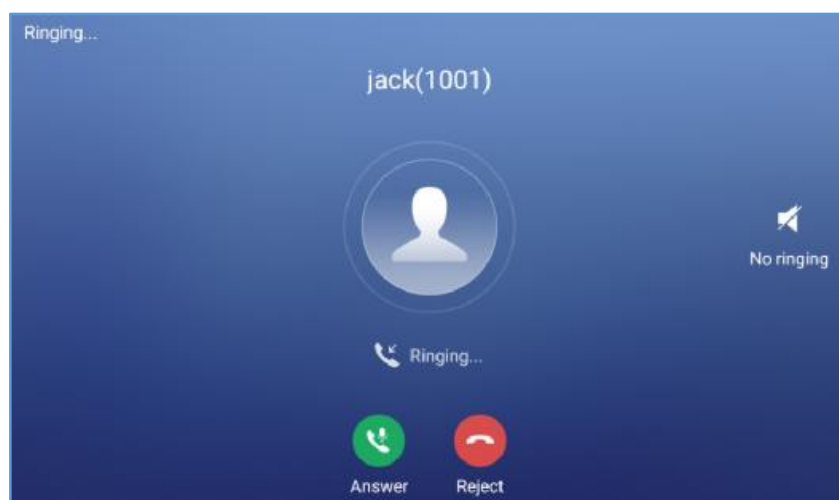


Figure 40: Single Incoming Call – Audio

- When the phone is in idle and there is an incoming video call, the phone will show the call screen as below. To answer the call with audio only, tap on "Audio" to answer the call via speaker. To answer the call with both audio and video, tap on "Video". During video call or pick up the handset. the audio will switch to handset if picking up the handset.

Note: Users could select the **Video Display Mode** on phone's Web UI→**Phone Settings**→**Video Settings**. Set the video display mode to "Original proportion", "Equal proportional cutting" or "Proportional add black edge".

If set to **"Original proportion"**, the phone displays video in its original proportion. If the video display proportion is different from the one of the phone, the phone will stretch or compress video to display it. If set to **"Equal proportional cutting"**, the phone will cut video to meet its own display proportion. If set to **"Proportional add black edge"**, the phone will display video in its original proportion, if still exists spare space, the phone will add black edge on it.

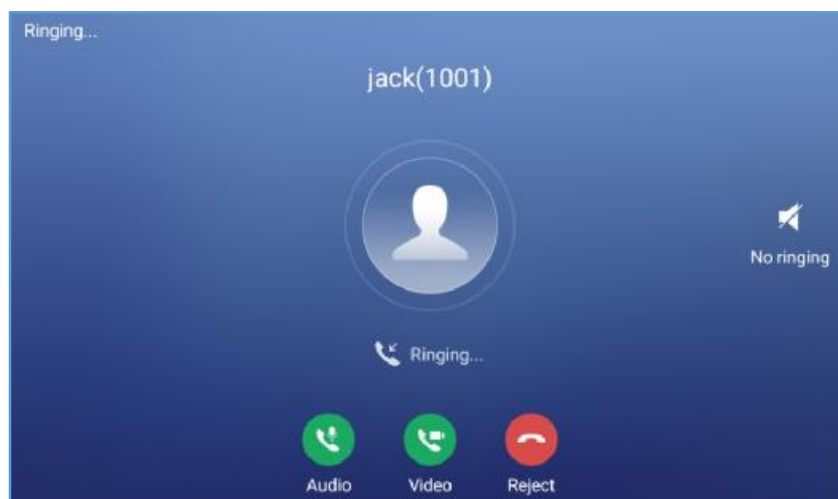


Figure 41: Single Incoming Call – Video

- If the phone set the "Preview" feature for the incoming call from Web UI, the phone will display one more key "Preview" when there is an incoming video call. End users will preview the remote end without answering the video call. After previewing, end user can tap on Answer key to answer the video call, or "Reject" key to reject it. This feature should be supported by the SIP server. Please contact service provider for more information.

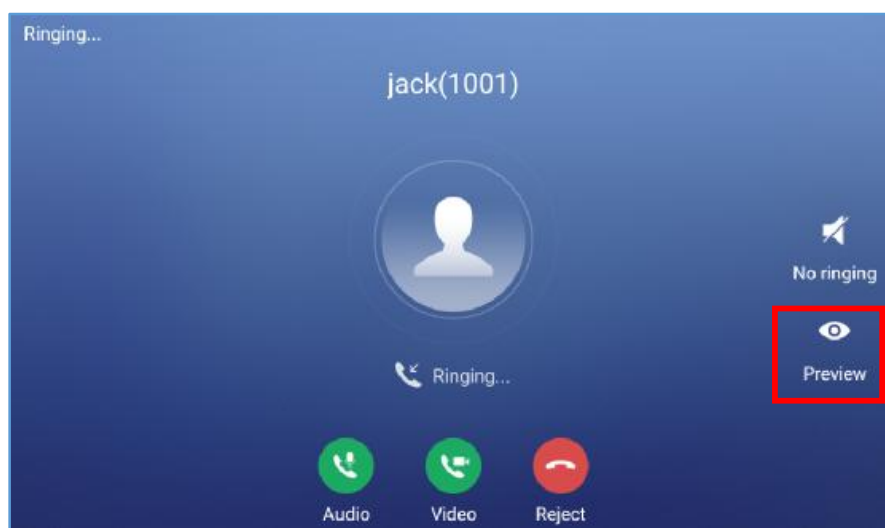


Figure 42: Single Incoming Call – Preview-1



Figure 43: Single Incoming Call – Preview-2

Multiple Calls/Call Waiting

1. When there is another incoming call during active call, users will hear a call waiting tone, with the LCD displaying the caller name and ID for the incoming call. In the prompt window, it shows new incoming call from "Jack" with the caller number; the account bar in purple is the current active call with "1004".

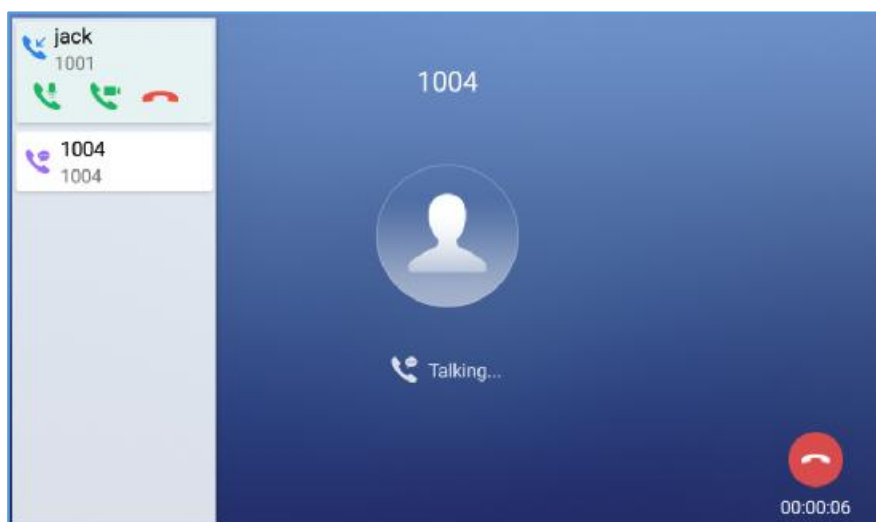


Figure 44: Call Waiting

2. Similar to single incoming call, if the incoming call is video call, users can choose to Audio Answer or to Video Answer
3. Once the new call is answered, the current active call will be placed on hold. If the new call is rejected by tapping on "Reject" softkey, the current active call will not be interrupted.

Call Progress Status

During an active call if Home Button is pressed, the phone will go back to the home screen and the call-in-progress status will be shown on the ITX-3370 status bar, once clicking the bar it will go back to call screen.

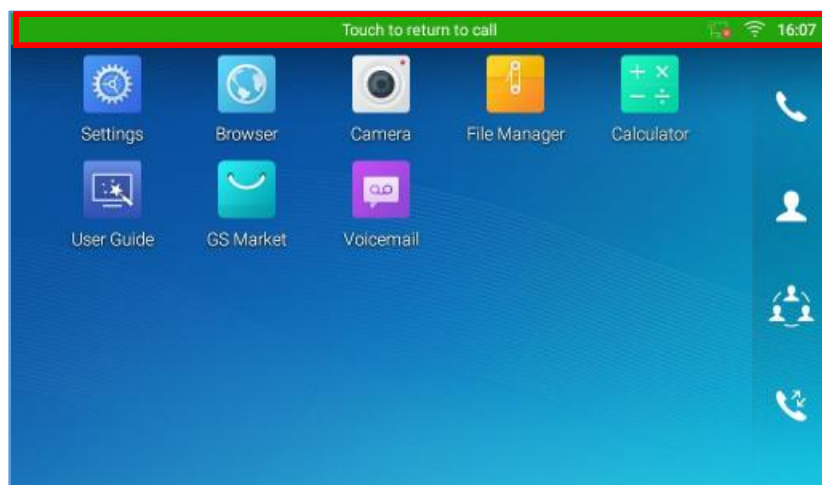


Figure 45: Touch to Return to Call Screen

Call Hold

During the active call, press HOLD softkey on the bottom of the screen to put the call on hold. The LCD screen will show as below. To resume the call, press UNHOLD softkey on the bottom of the screen.

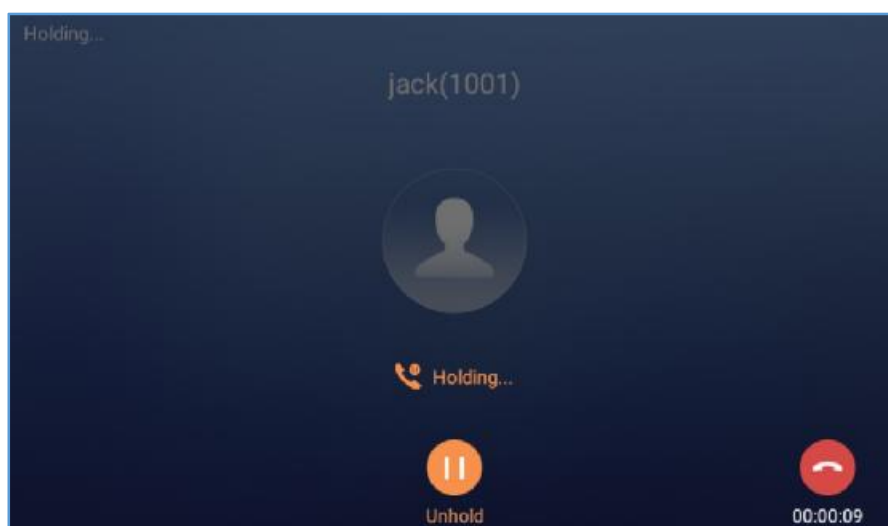


Figure 46: Call on Hold

Call Recording

1. During the call, users could record the conversation to the phone by tapping on "More"→"Start Recording" on the call screen.
2. If need to stop the recording, tap on "More"→"Stop Recording" or hang up the call.
3. The recording files can be retrieved from the ITX-3370Web GUI → Applications → Recordings.

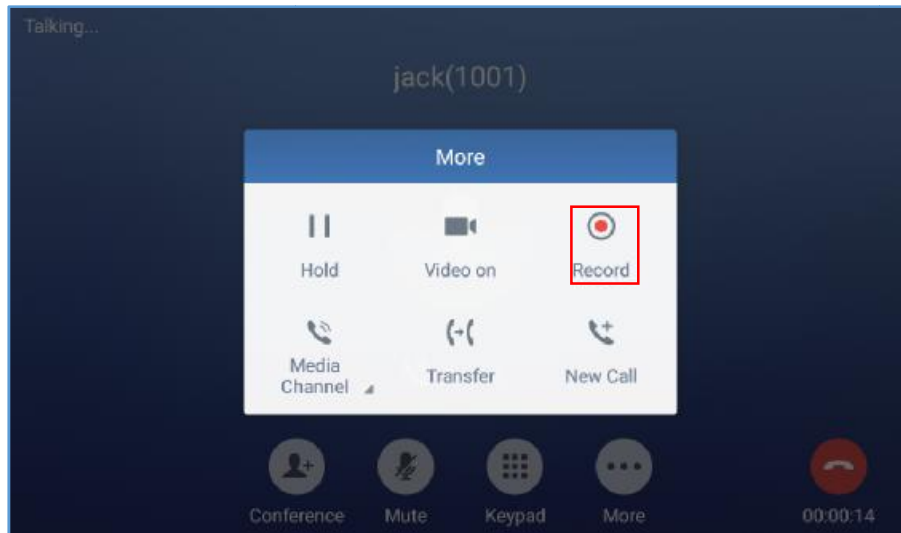


Figure 47: ITX-3370 Call Recording

Mute

During an active call, press the MUTE softkey on the bottom of the screen to mute the call. The mute icon  will be displayed in the status bar on the top of the screen. Press the UNMUTE softkey on the bottom of the screen to unmute the call.

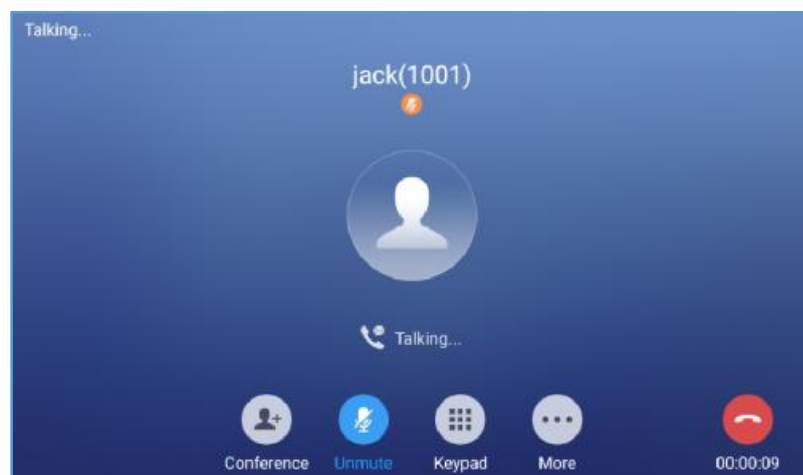


Figure 48: ITX-3370 Call Mute

Turn on Video during Audio Call

Users could establish audio call first and then turn on video or accept video request during the call if the other party supports video call as well.

- **Turn on video during audio call**

During an active audio call, on the call screen, tap on "More" and select "Video On", a video request will be sent to the other party.

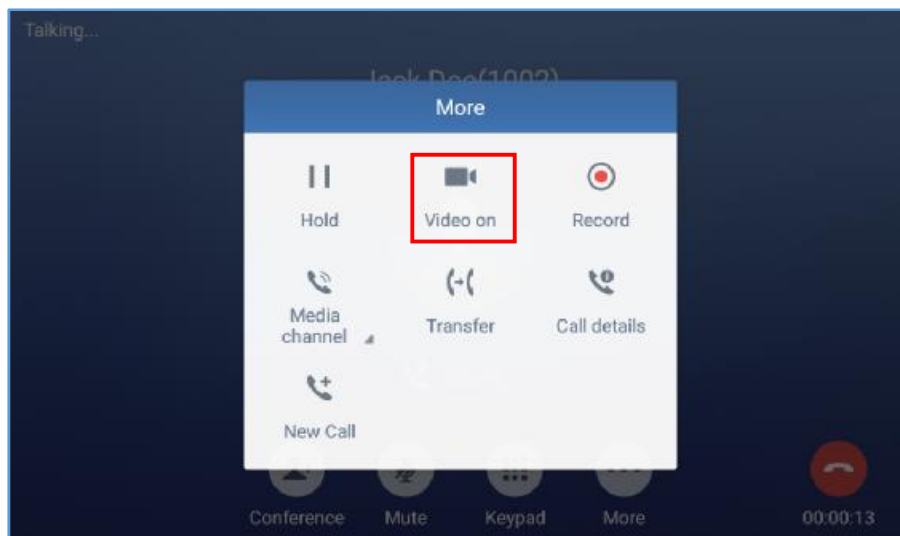


Figure 49: Turn on Video During Audio Call

- **Accept video request**

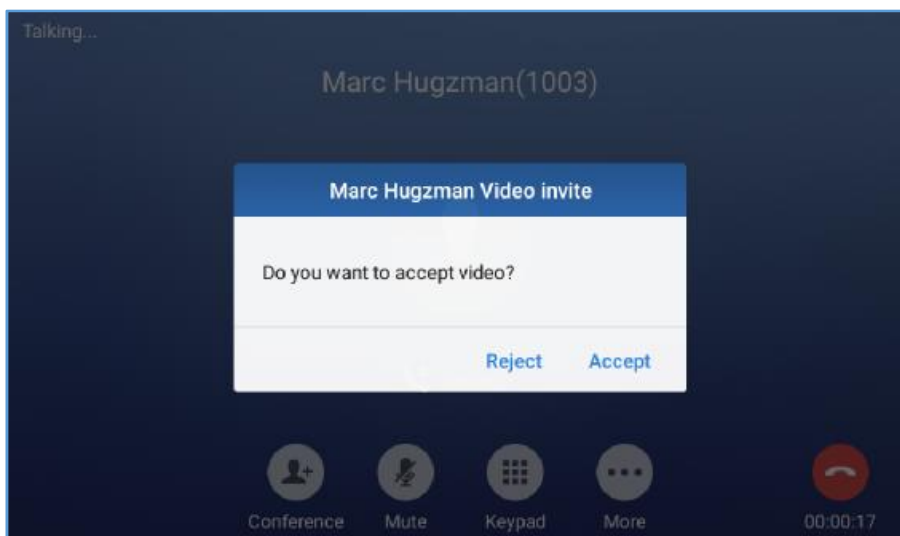


Figure 50: Accept Video During Audio Call

If the ITX-3370 receives video request during the audio call, a message "Do you want to accept video?" will be prompted. Select "Yes" to establish video during the call. If the **Disable Video Call Feature** is enabled on ITX-3370, the "Video On" option on ITX-3370 will be hidden during the audio call. However, if the ITX-3370 receives video request during the audio call, users could tap to accept the video request.

Switch Audio Channel During Call

- The ITX-3370 allows users to switch among handset, speaker or headset (RJ9 headset, 3.5mm earphone, Plantronics EHS headset and Bluetooth headset) when making calls.
- During a call, tap on the first softkey on the bottom to switch audio channel. Tap on icon  to use handset; tap the icon  to switch to RJ9 headset; tap on icon  to switch to speaker; tap on  to switch to 3.5mm earphone; tap on  to switch to Bluetooth headset.
- If Bluetooth headset is connected, the audio will be automatically switched to Bluetooth headset once the call is established.
- The status bar on the top or the screen shows the current audio channel being used during the call.

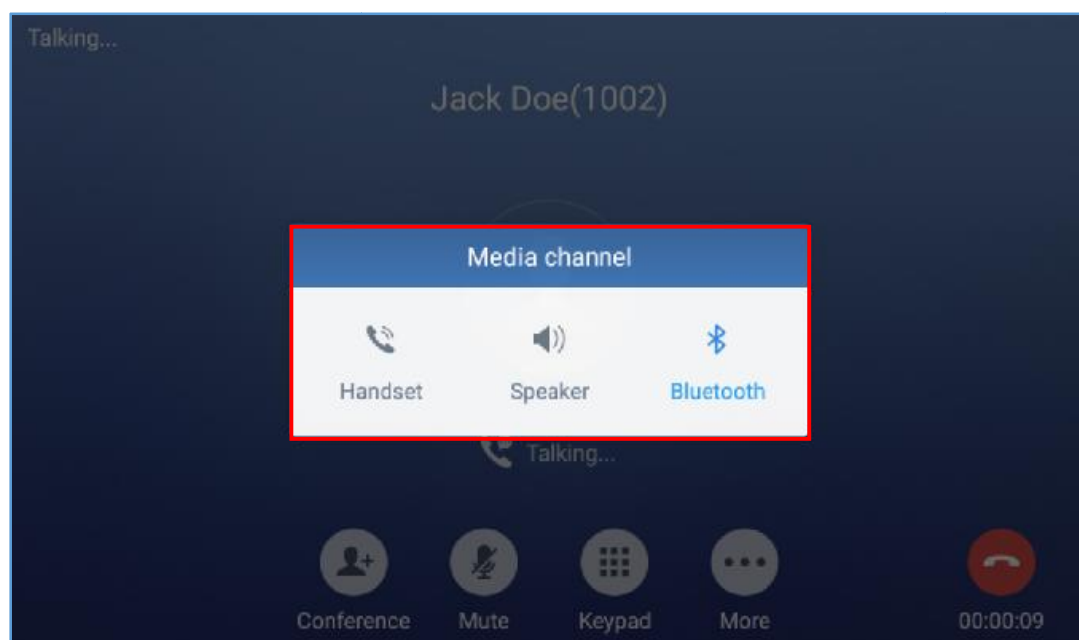


Figure 51: Switch Audio Channel during Call

Call Transfer

A call can be transferred to another party during the call. The ITX-3370 supports blind transfer and attended transfer.

Blind Transfer

1. During the active call, tap on "More" softkey.
2. Select "Transfer" to bring up the transfer screen.
3. Select transfer mode as "Blind" by tapping on the highlight area in **[Figure 52: Blind Transfer]**. The default transfer mode is "Blind".
4. Enter the digits.
5. Tap on "Transfer" softkey.
6. The call will be transferred and ITX-3370 will hang up the call.

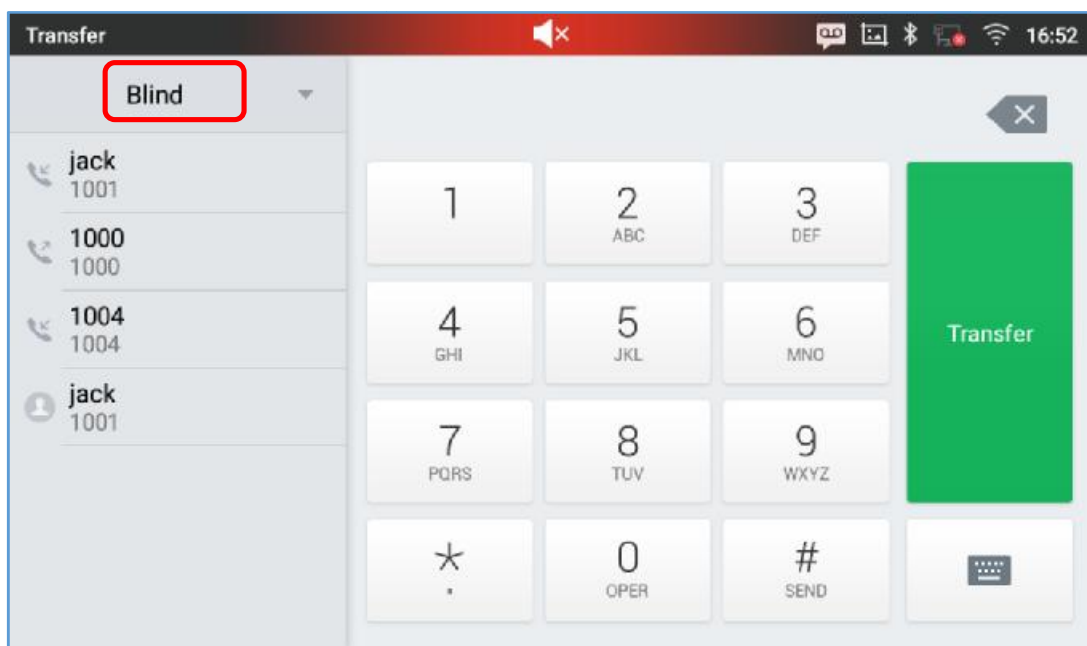


Figure 52: Blind Transfer



Note:

- If wrong digits are entered, tap on  to delete the digit one by one;
- If users would like to cancel the transfer, press  button to go back to the previous talking screen.

Attended Transfer

ITX-3370 supports attended transfer:

1. During the active call, tap on **"More"** softkey. Select **"Transfer"** to bring up transfer screen.
2. Select transfer mode as "Attended" by tapping on the mode selection area (see figure below).

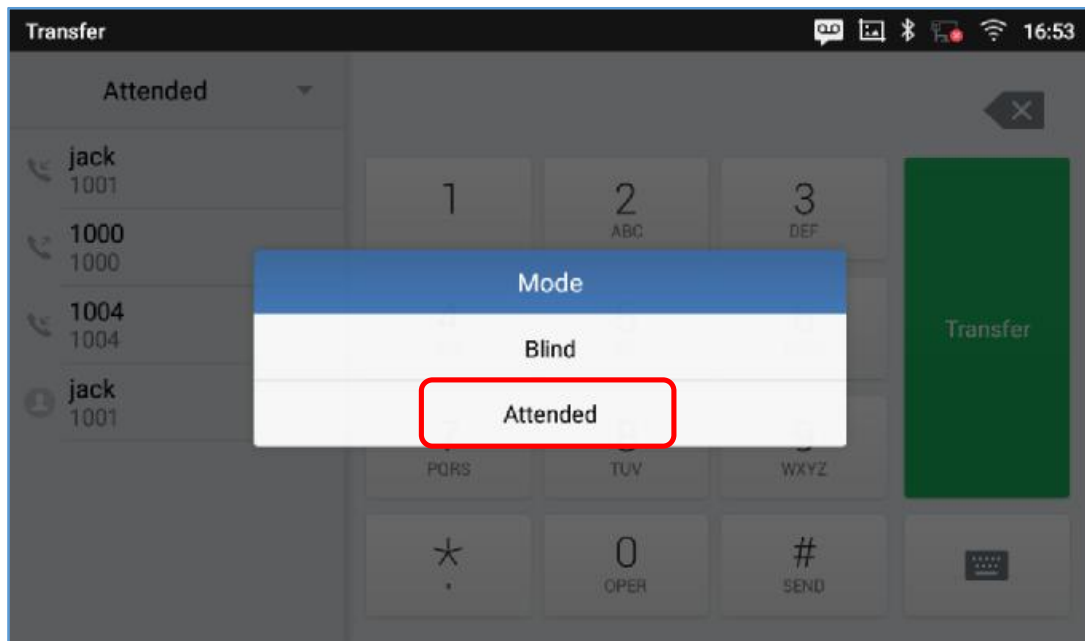


Figure 53: Attended Transfer

3. Enter the transfer target number, and then press the "Send" soft key on the right.
4. Before transfer target answers the call, ITX-3370 hears the ringback tone, and the touch screen prompts shown as below. Users could tap on "Cancel" to cancel the transfer, tap on "End" or simply hang up the call to complete call transfer.

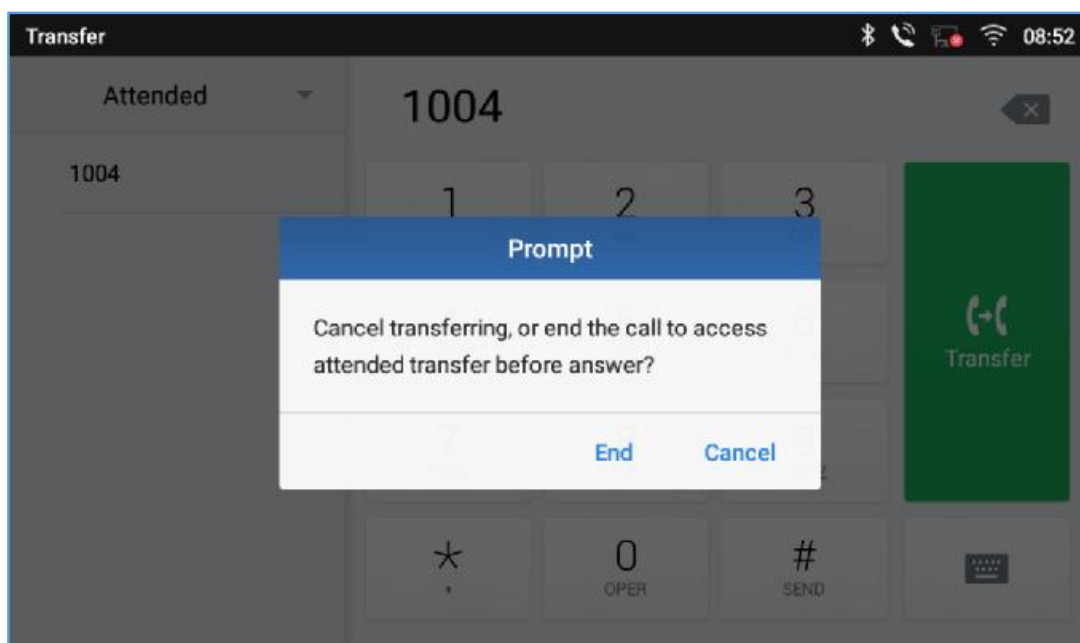


Figure 54: Attended Transfer - Transferring

5. After transfer target answers the call, the following screen will be shown up. If the user simply hangs up or taps on “End” soft key, the call will be transferred, and ITX-3370 will hang up the call. If the user taps on “Split” soft key to separate the calls, the user will talk to the second established call while the first call is on hold.

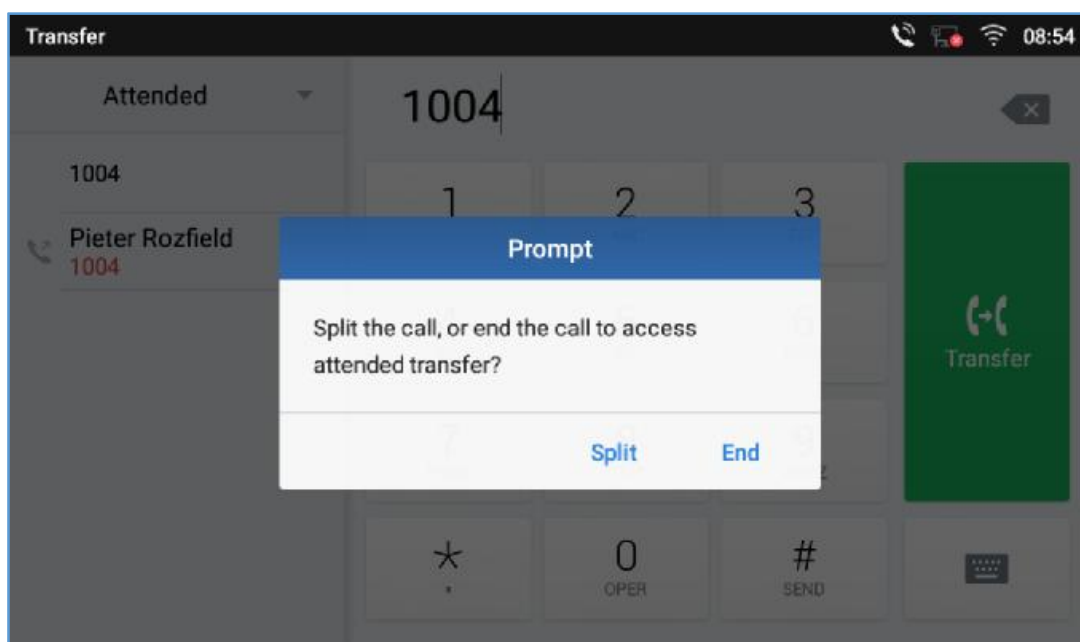


Figure 55: Attended Transfer – Split

6. Besides attended transfers above, users could also consult the third party first before transferring the call.

7. During the active call, tap More then New Call to make the second call. This will place the current call on hold.
8. The second call establishes after the call is answered.
9. During the active call, tap on **"More"** softkey.
10. Select "Transfer" to bring up transfer screen. The other call on hold will be displayed such as 
11. Select transfer mode as "Attended" in the transfer mode bar and tap on the call on hold such as  to transfer the call.
12. The call will be transferred, and ITX-3370 will hang up the call.

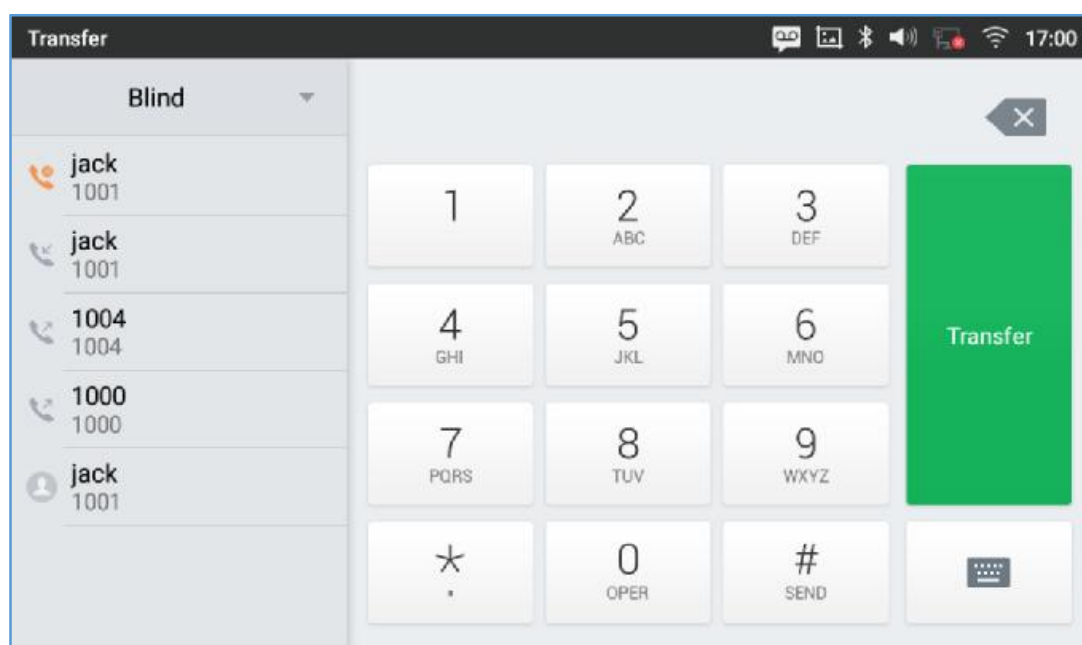


Figure 56: Attended Transfer

⚠ Note:

- To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains;
- If users would like to cancel the transfer, press  button to go back to the previous talking screen.

7-Way Conference

The ITX-3370 supports up to 7-way audio conferencing.

Initiate Conference

There are three ways to initiate a conference call.

- **Initiating conference from dial screen**

1. Bring up the dial screen using one of the methods described previously *[Figure 36: ITX-3370 Dial Screen]*.
2. Enter the extension number then press on it on the left panel of the screen

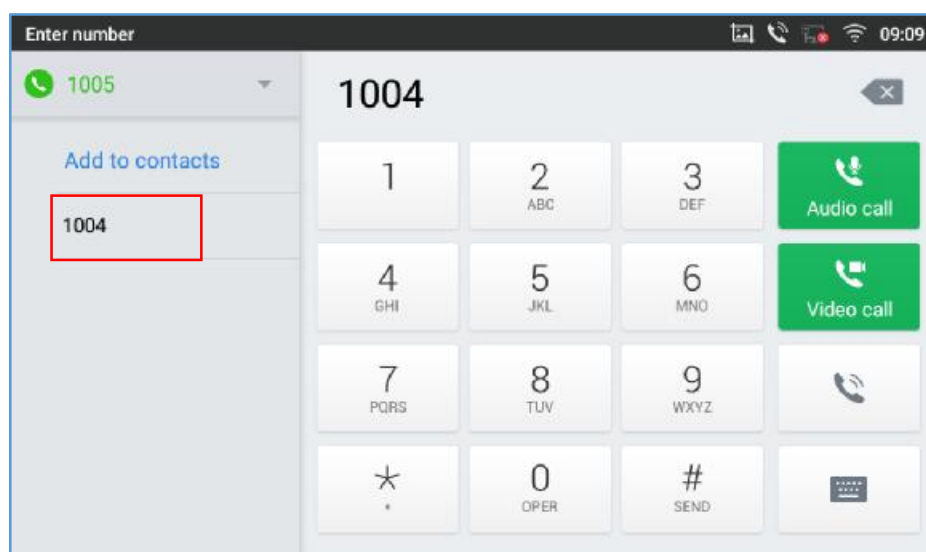


Figure 57: Add Conference Members from Dial Screen

3. The extension number will be added to dialing field and users can dial another number

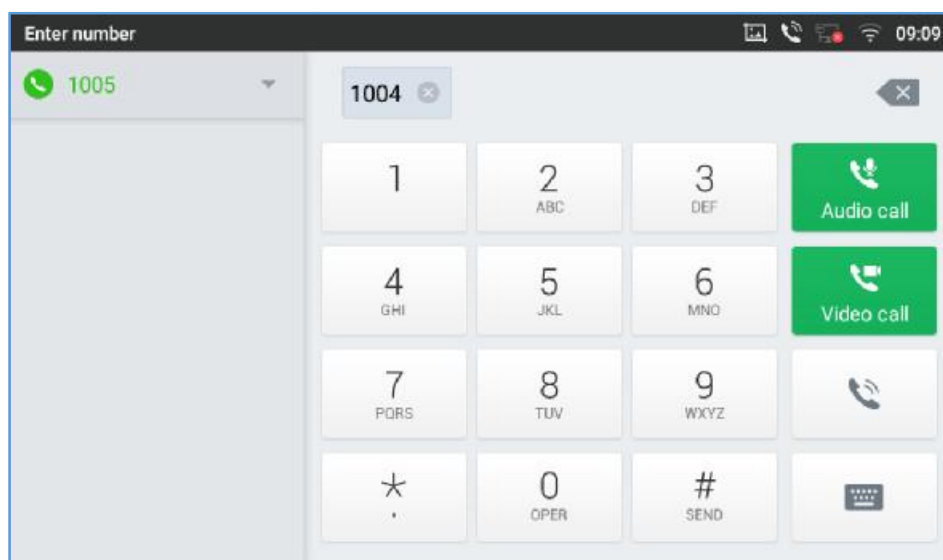


Figure 58: Add Conference Members from Dial Screen 2

4. Using the same method add the other members then press “Audio Call” for an Audio conference or “Video Call” for a video Conference

- **Initiating conference during a phone call**

1. When the phone is on call screen, tap on "Conference" softkey;
2. Enter the third-party number or choose an available number on the left menu from call history or contacts to form a conference of 3. After the call is established, the conference screen is brought up;
3. Tap on  to add another member to the conference;

- **Initiating conference directly using conference soft key**

1. On idle screen, press conference soft key .
2. Tap on  to add the members of the conference.

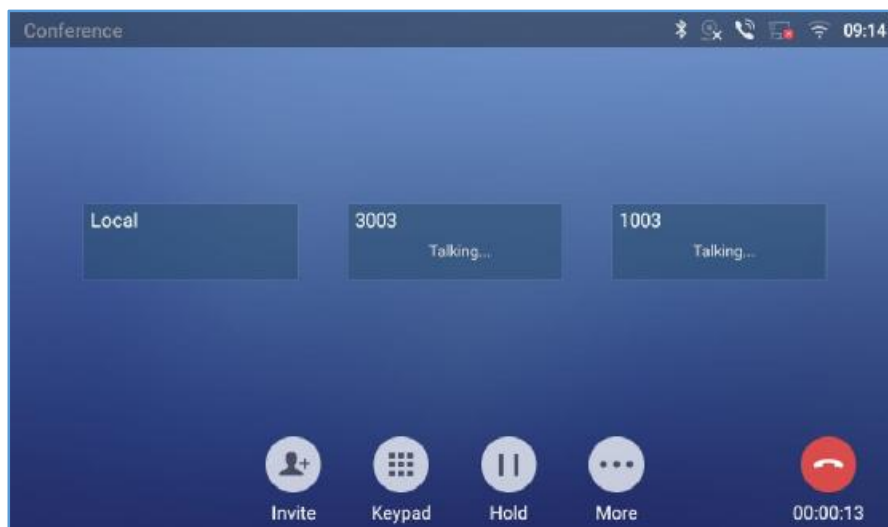


Figure 59: ITX-3370 Conference Screen

If there are calls on hold, they will show up when adding member to the conference. Users could then tap on the call to add it to the conference directly.

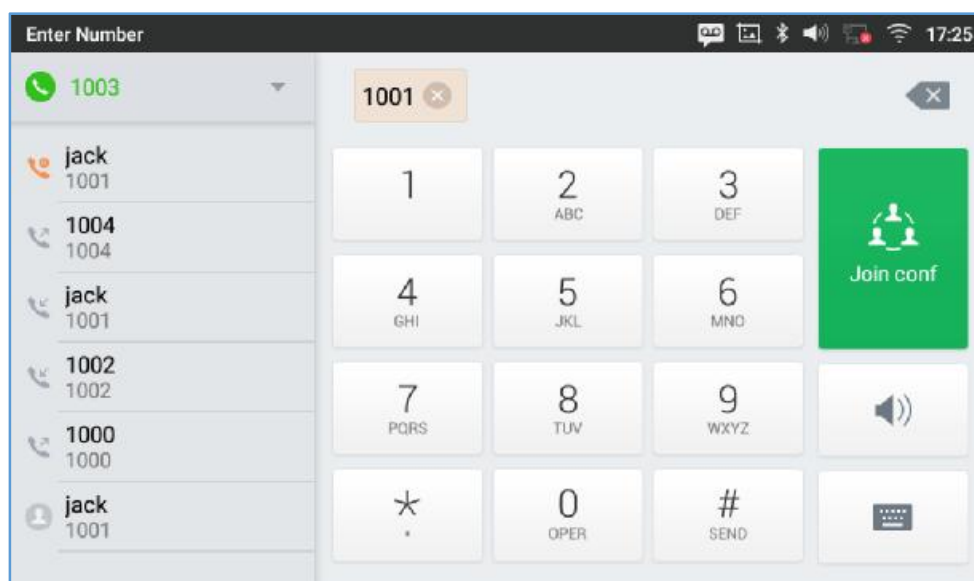


Figure 60: ITX-3370 Conference - Add Existing Call to Conference

3. Repeat the above steps to add more parties into the conference. The following figure shows a 3-way conference established.

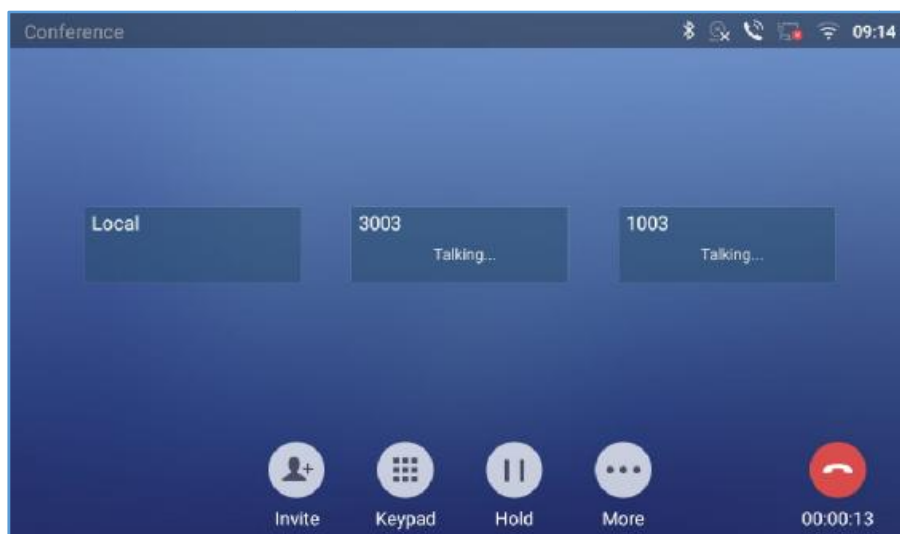


Figure 61: 3-Way Conference Call Established

Remove Party from Conference

To remove a party from the conference:

1. Tap on the participant icon of the user you want to remove. The below window will show up giving the possibility to Mute enablevideo Enlarge or hang up.
2. Tap on icon  to remove the a party from the conference.

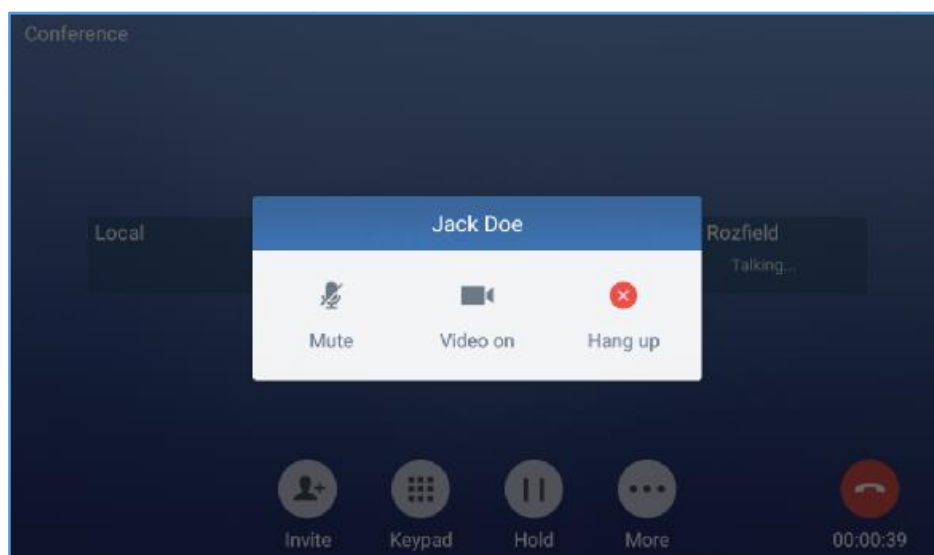


Figure 62: ITX-3370 Conference - Remove Party from Conference

End Conference

To end the conference, tap on  to disconnect all the parties from the conference. ITX-3370 will hang up the call. If the remote party hangs up the call itself, it will be disconnected from the conference but other parties on ITX-3370 will stay in the existed conference.*

Hold and Resume Conference

During the conference, users could tap on More softkey then tap on Hold to hold the conference at any time. To resume the call tap on Unhold.

Auto Conference Mode

The ITX-3370 also supports "Auto Conference" which allows users to establish conference call in a quick and easy way, instead of adding the other parties one by one. To enable Auto Conference feature, go to web GUI→**Phone Settings**→**Call Settings**→**Call Features** and set "**Auto Conference**" to "Yes".

To establish call with auto conference when there are 1 or more calls on the ITX-3370, simply tap on "More" softkey and select "Conf". All the calls on ITX-3370 will be brought into the conference.

Note:

- During the conference, if the initiator of the conference hangs up , the conference will end. If users wish to allow the remaining parties to stay in conversation after the initiator hangs up, the conference initiator should set "Transfer on 3-way Conference Hang up" to "Yes" in web GUI→**Account**→**Call Settings**. This would allow the remaining parties to stay in the conference after the initiator exists the conference.

Missed Call

When there is a missed call, the LCD will show missed call dialog on the idle screen.

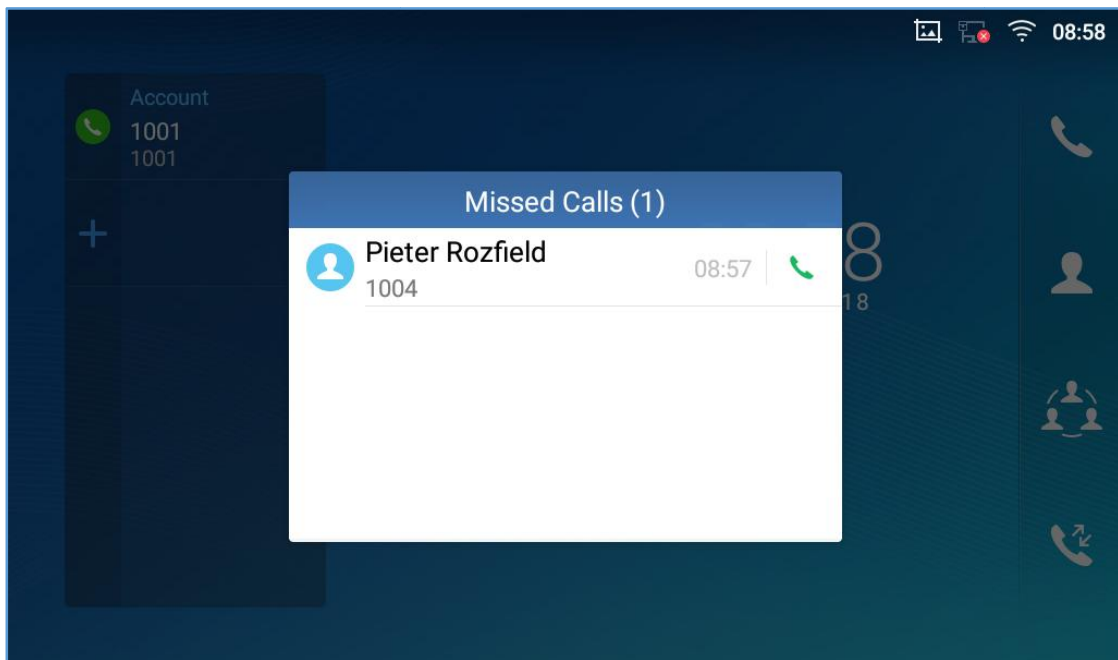


Figure 63: Missed Call Screen

Users can tap on the missed call entry to access the missed call log. To close the missed call screen and return to the idle screen, tap on  on the upper right of the dialog.

DND (Do Not Disturb)

When DND is on, the incoming calls to the ITX-3370 will be blocked for all registered accounts with a reminder ring produced.

To turn on/off DND:

1. Touch and drag the status bar down on the ITX-3370 idle screen.
2. Tap on the DND icon  to turn it on. The status bar shows icon  indicating DND is on.
3. Tap on the DND icon  to turn it off.

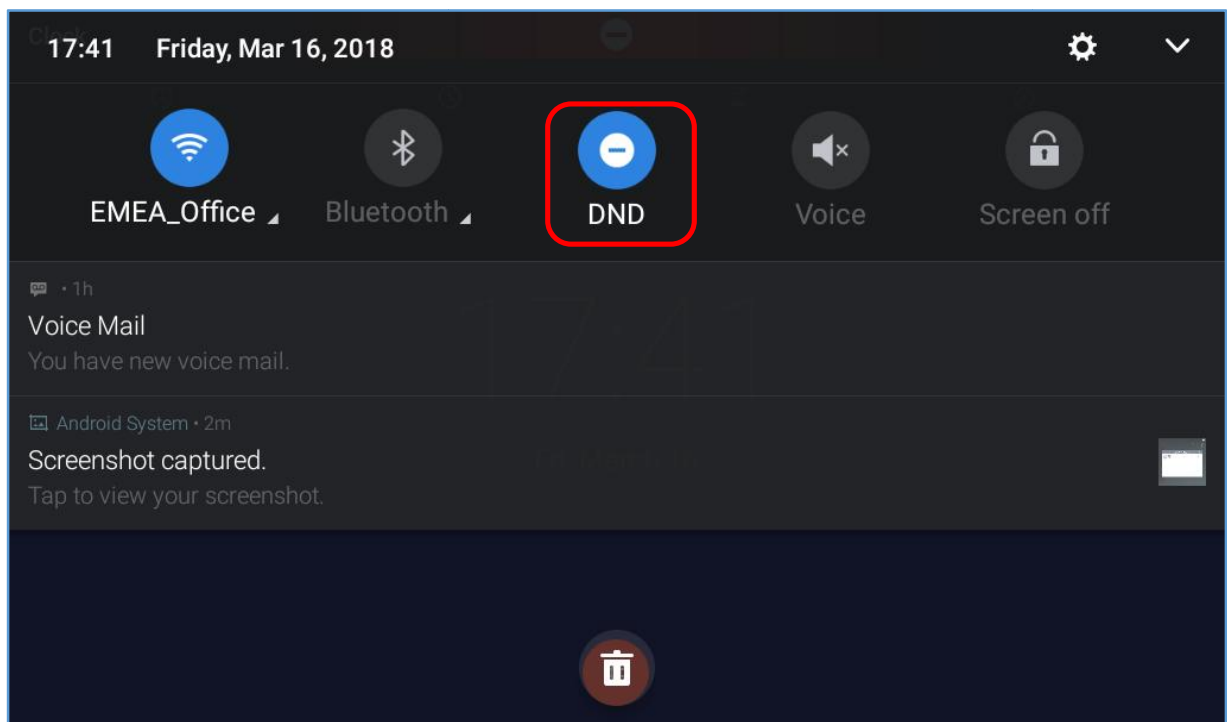


Figure 64: Enable/Disable DND

Note:

- When the phone is in an active call, turning on/off DND won't affect the current active call. It will take effect starting from the next incoming call.

Voicemail/Message Waiting Indication

When there is a new voicemail, the Message Waiting Indication (MWI) LED icon will blink in red on the upper right corner of the ITX-3370 and  will show up in the status bar.

To retrieve the voicemail:

1. Tap on the Message icon  from the applications section to bring up voicemail screen. All the registered accounts and the number of voicemails are displayed there.
2. Tap on the account to dial into the voicemail box. Then follow the Interactive Voice Response (IVR) for the message retrieval process.

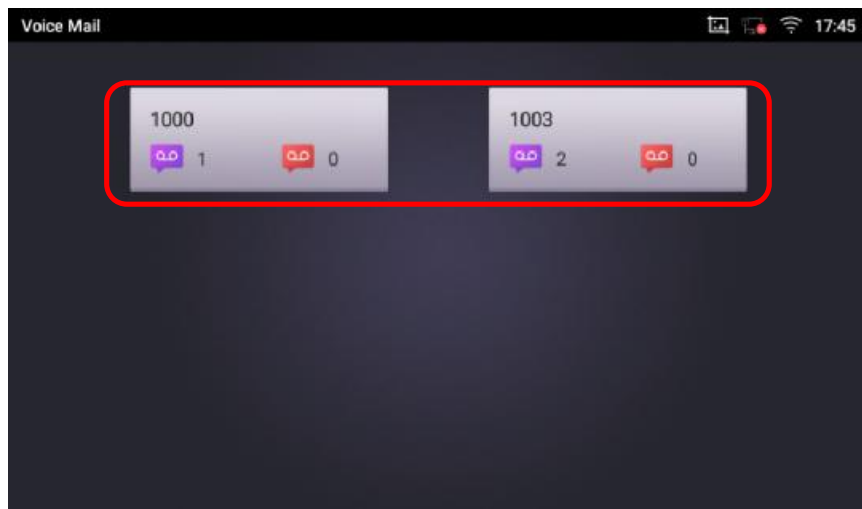


Figure 65: Retrieve Voicemail

For each account, the Voicemail User ID can be set up under web GUI→**Account X**→**Call Settings**: "Voice Mail Access Number". This is the number that will be dialed out to access voicemail message when tapping on the account in Voice Mail screen.

Call Forward

Call forward feature can be set up from ITX-3370 LCD or web GUI.

- **From LCD**

Go to onscreen Menu→**Settings**→**Features**→Call Forward. Select account name and tap on **Call Forwarding** to activate the feature. Then the list of options will be available. Select the option Call Forward Mode to configure the call forward type (Unconditional, Time Based, Others) and then enter necessary number in the fields.


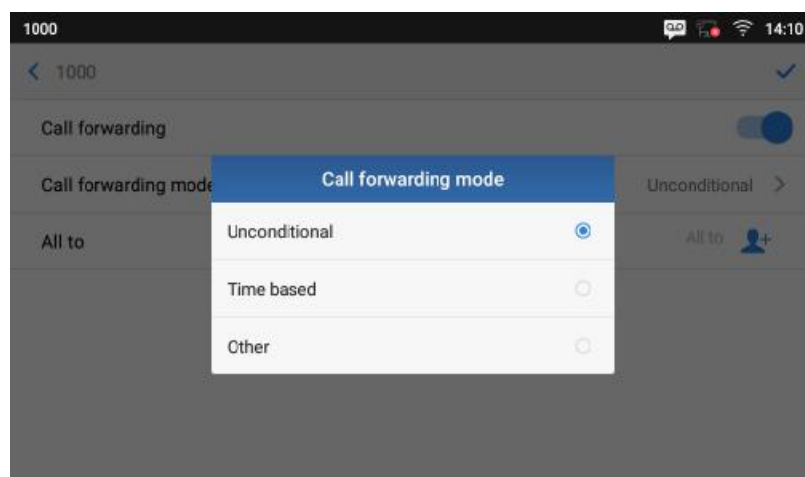


Figure 66: Unconditional Call Forward

- **From Web GUI**

Log in ITX-3370 web GUI and go to **Accountpage→Call Settings**. By default, Call Forward feature is set to "None". The Call Forward feature options are:

- **Unconditional Forward:** All the incoming calls will be forwarded to the number set up in "All To" field.

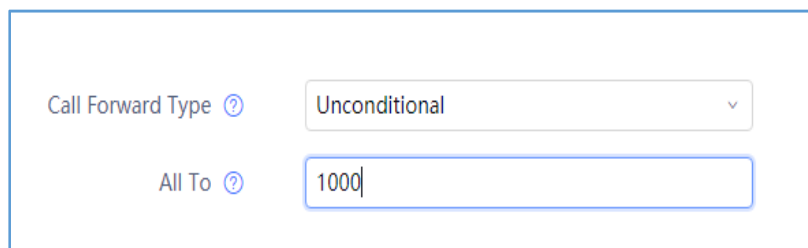


Call Forward Type ⓘ Unconditional

All To ⓘ 1000

Figure 67: Call Forward – Unconditional

- **Time Based Forward:** All the incoming calls will be forwarded to the number as schedule in the time period. During the setup time, the call will be forwarded to the number in "In Time Forward To:" field. Other period the call will be forwarded to the number in "Out Time Forward To:" field.

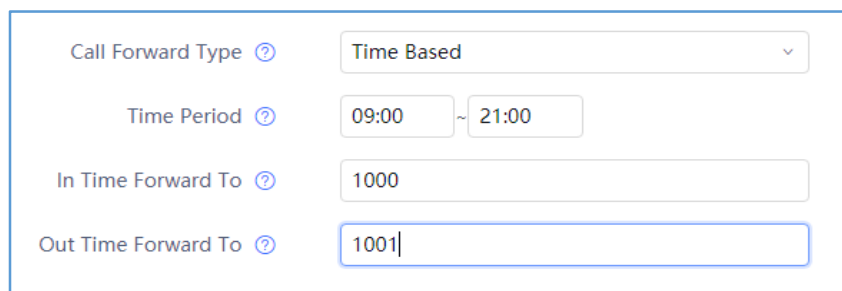

Call Forward Type ⓘ Time Based

Time Period ⓘ 09:00 ~ 21:00

In Time Forward To ⓘ 1000

Out Time Forward To ⓘ 1001

Figure 68: Call Forward - Time Based

- **Call Forward on Busy / Call Forward No Answer / Call Forward on DND:** The incoming call will be forwarded when the ITX-3370 is busy or no answer after certain interval "Delayed Call Forward Wait Time (s)", or if the phone is on DND mode then the call will be forwarded to the configured destination number.

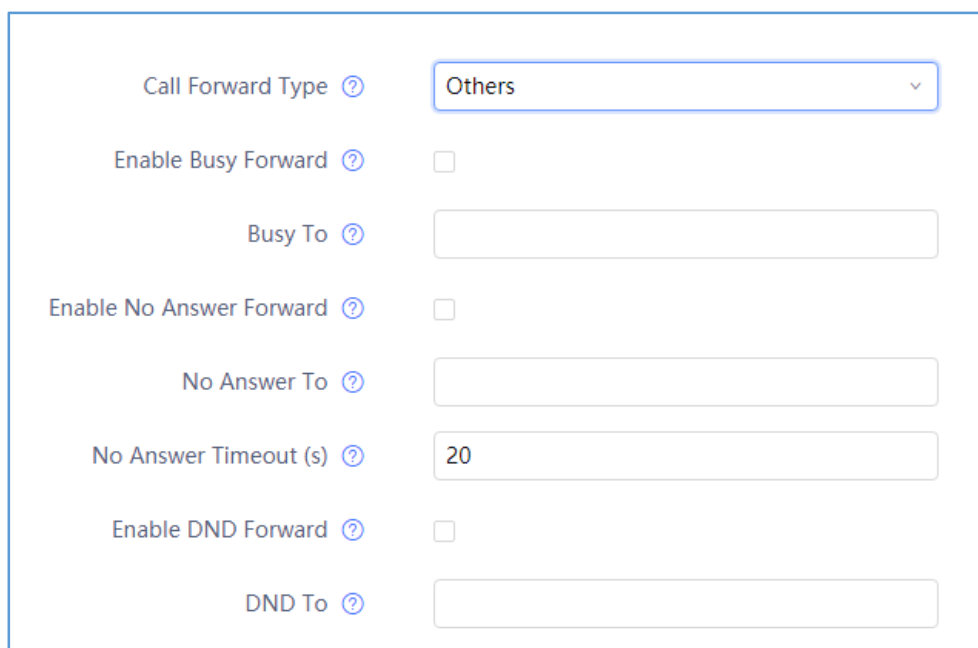


Figure 69: Call Forward - Busy/No Answer/DND

Call Features

The ITX-3370 supports traditional and advanced telephony features including caller ID, caller ID with caller Name, call waiting, call forward etc. Before using the following feature codes, please make sure "Enable Call Features" option is set to "Yes" under web GUI→**Account** page→**Call Settings**.

Table 10: ITX-3370 Feature Code

*01	Use Preferred Codec (per call)
	- Dial *01 followed by the preferred codec code and the phone number. - The phone will try to use this codec during the call. - Codec code: - PCMU: 7110 - PCMA: 7111 - G726-32: 72632 - G722: 722 - iLBC: 7201 For example, if the user would like to use PCMA as the preferred codec to call phone number 334455, enter *017111334455.

*02	Force Codec (per call) - Dial *02 followed by the preferred codec code and the phone number. - The phone will be forced to use this codec during the call. - Codec code: - PCMU: 7110 - PCMA: 7111 - G726-32: 72632 - G722: 722 - iLBC: 7201 For example, if the user would like to use PCMA to call phone number 334455, enter *027111334455.
*30	Block Caller ID(for all subsequent calls) Dial *30.
*31	Send Caller ID(for all subsequent calls) Dial *31.
*50	Disable Call Waiting Dial *50.
*51	Enable Call Waiting Dial *51.
*67	Block Caller ID(per call) Dial *67 followed by the phone number.
*82	Send Caller ID(per call) Dial *82 followed by the phone number.
*70	Disable Call Waiting(per Call) Dial *70 followed by the phone number.
*71	Enable Call Waiting(per Call) Dial *71 followed by the phone number.
*72	Unconditional Call Forward. To set up unconditional call forward: Dial *72 followed by the phone number to forward the call.
*73	Cancel Unconditional Call Forward. To cancel the unconditional call forward: Dial *73.
*74	Paging Call Dial *74 followed by the phone number to send the paging call.

*83	Force Audio Calling (per call) Dial *83 followed by the phone number to send the audio call.
*84	Force Video Calling (per call) Dial *84 followed by the phone number to send the video call.
*90	Busy Call Forward. To set up busy call forward: Dial *90 followed by the phone number to forward the call.
*91	Cancel Busy Call Forward. To cancel the busy call forward: Dial *91.
*92	Delayed Call Forward. To set up delayed call forward: Dial *92 followed by the number to forward the call. The default timeout before the call is forwarded is 20 seconds.
*93	Cancel Delayed Call Forward. To cancel the delayed call forward: Dial *93.

CONTACT

The ITX-3370 supports local, LDAP and BroadWorks Xsi Contacts.

To access ITX-3370 contacts, on the phone's idle screen, tap on icon  on the right panel. The following figure shows Contacts on the ITX-3370.

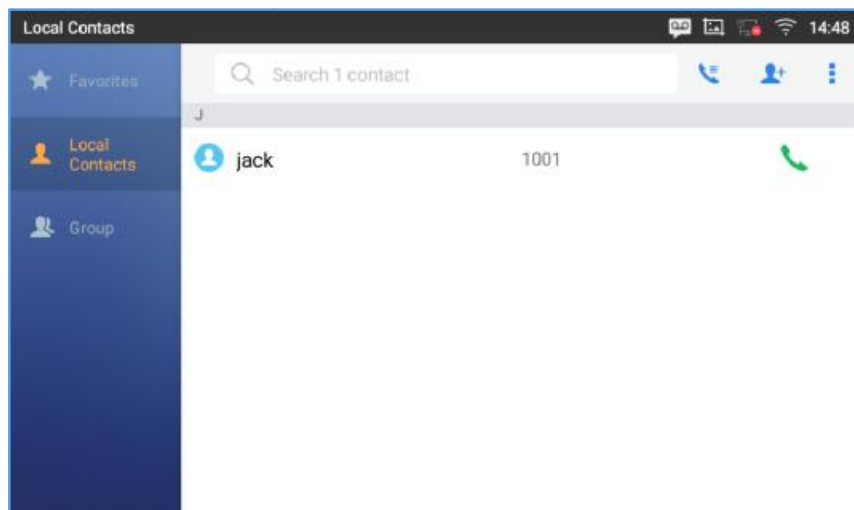


Figure 70: ITX-3370 Contacts

The BS Contacts is the BroadWorks Xsi Contacts. It needs to be configured with the remote BroadWorks server to enable this feature.

Local Contacts

The local contacts can save up to 1000 entries. Users can manage contacts by adding, deleting and modifying single contacts, downloading contacts from HTTP/TFTP server, importing contacts from external storage and exporting contacts to external storage.

Add Single Contacts

1. On the Local Contacts menu Tap on  to bring up "Create Contact" dialog to manually add a new contact. See **[Figure 71: ITX-3370 Contacts - Add New Contact]**.
2. Type First name, Last name, Phone number and other information for the new contacts. Please make sure the account number field is selected so the ITX-3370 will use this account to dial out the new contact. The account number field is located on the left of the "Phone" field as highlighted below.

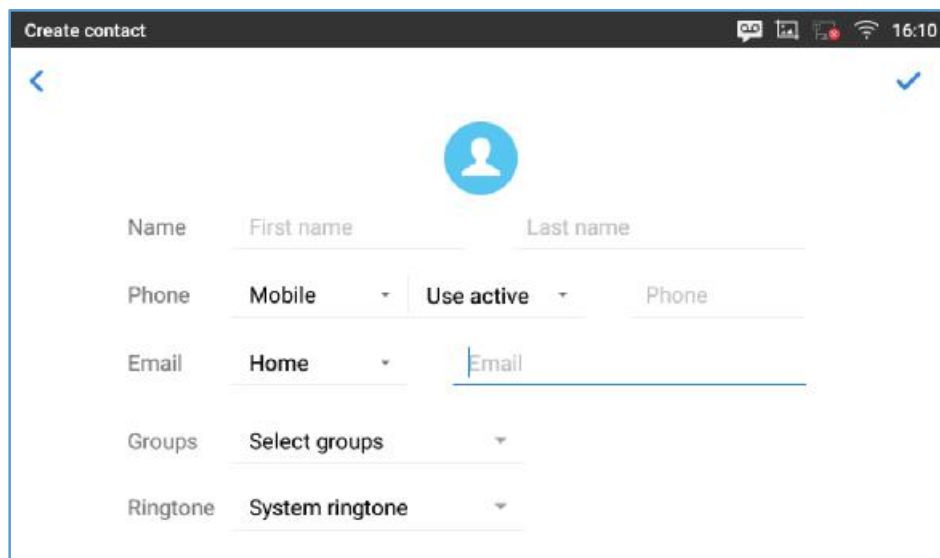


Figure 71: ITX-3370 Contacts - Add New Contact

Note: When typing a number using dial pad, “Add to contacts” button will appear as displayed on following picture, to add a new entry to your contacts list if the input number does not match any entry in your contacts.

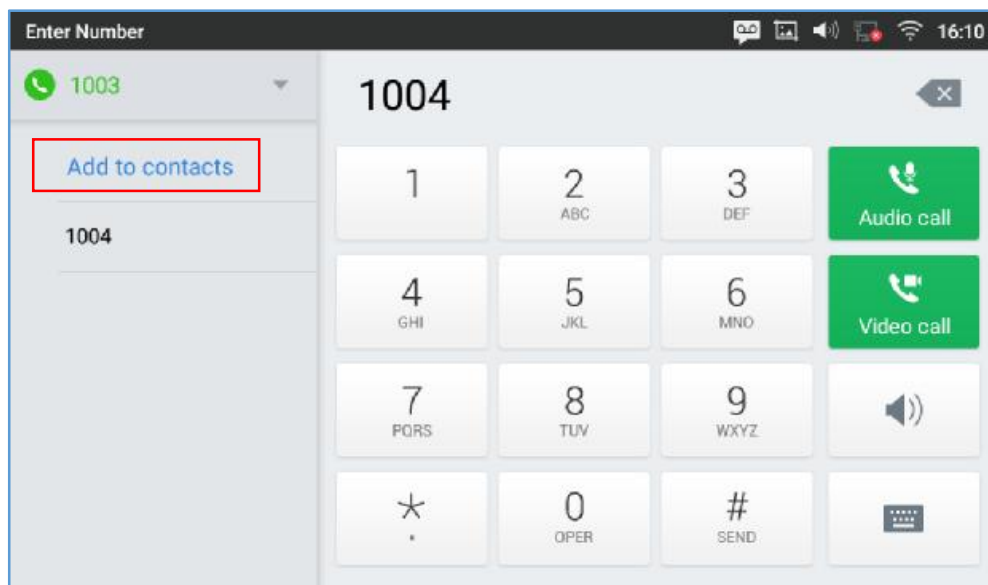


Figure 72: Add to Contacts from Dial Pad

Import/Export Contacts

If the users have the ITX-3370 phonebook file saved in local storage or external storage device that has been plugged into the ITX-3370, the phonebook file can be directly imported to the Contacts. There are two different formats supported for the phonebook file: "vcard", and "xml". Users could manually create contacts first and export the phonebook file in vcard or xml format to take a look on the phonebook file.

To Import Contacts:

1. Open Contacts.
2. Tap on More  on the upper right corner of the Contacts screen.
3. Select "Import contacts" to bring up the dialog below.
4. Fill in the import options and scroll down to the bottom of the screen.
5. Tap on "Select file" to import phonebook file from the directory in internal or external storage device.

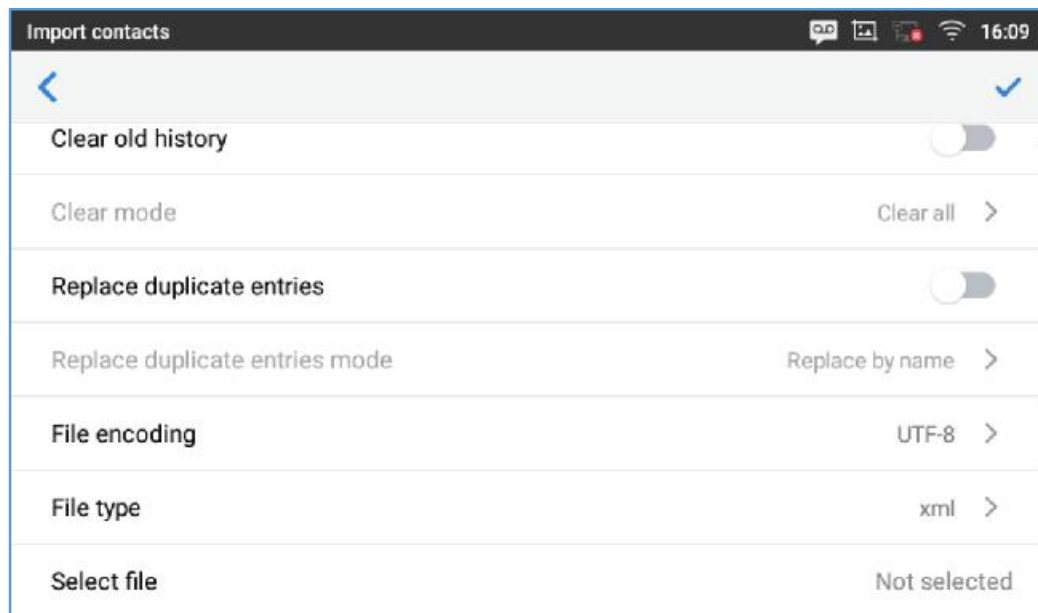


Figure 73: ITX-3370 Contacts - Import Contacts

To Export Contacts:

1. Open Contacts.
2. Tap on More  on the upper right corner of the Contacts screen.
3. Select "ExportContacts" to bring up dialog below.
4. Select the file encoding and file type for the exported phonebook file. By default, the ITX-3370 is using "UTF-8" as the encoding method.
5. Tap on "Choose Directory" and select the directory where the phonebook file will be exported to.



Figure 74: ITX-3370 Contacts - Export Contacts

Download Contacts

The ITX-3370 supports downloading XML phonebook from a remote HTTP/TFTP/HTTPS server to local Contacts. When downloading the phonebook, the ITX-3370 sends request to the HTTP/TFTP/HTTPS server looking for file **phonebook.xml**.

To download phonebook:

1. Make sure the ITX-3370 can connect to the HTTP/TFTP/HTTPS server and the phonebook.xml file in correct format is downloadable from the HTTP/TFTP/HTTPS server.
2. Open Contacts.
3. Tap on More  on the upper right corner of the Contacts screen.
4. Select "Download Contacts" to bring up the dialog below.
5. Fill in the necessary options and then tap on  on the upper right corner of the screen. The ITX-3370 will send out request to the configured HTTP/TFTP/HTTPS server.

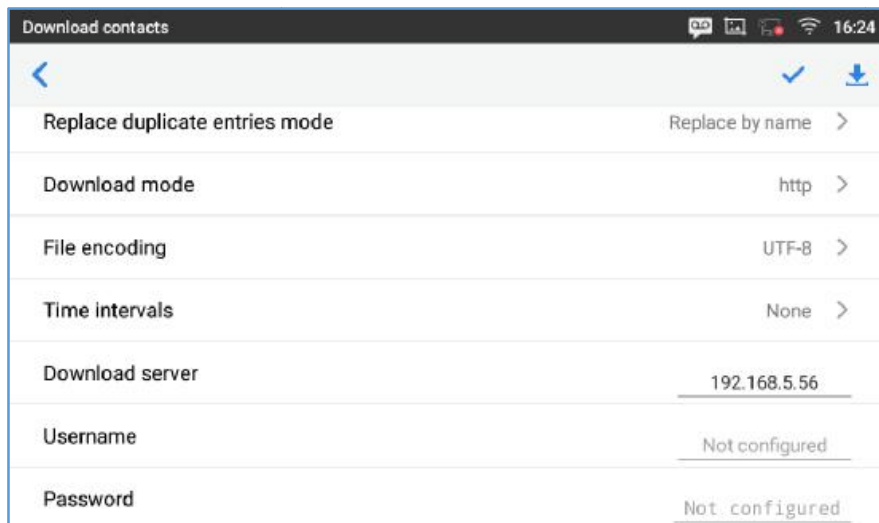


Figure 75: ITX-3370 Contacts - Download Contacts

Search Contacts

1. Open Contacts.
2. Tap on the search field .
3. Enter a contact's name or a number to search. The search result will be automatically updated and displayed when entering the key words.

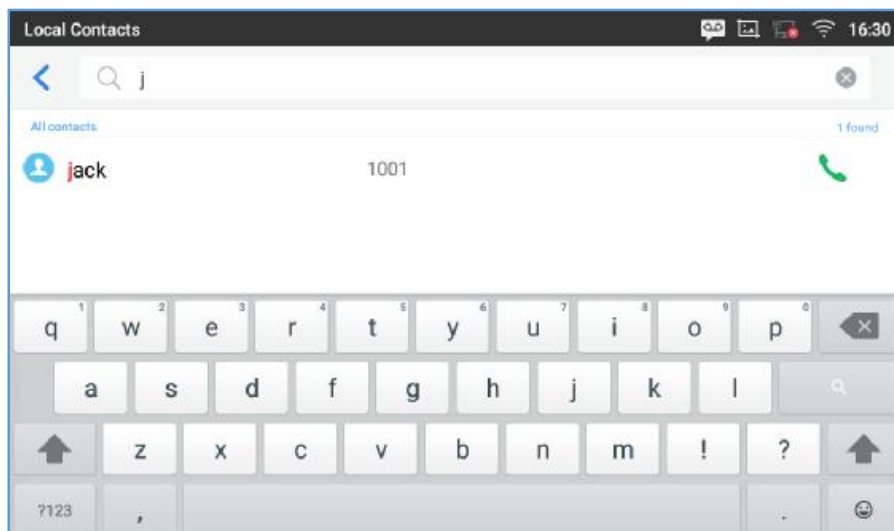


Figure 76: ITX-3370 Contacts - Search Contacts

Use Contacts

Once the contacts are added, users could navigate in the contacts list  to make a call and manage the contacts furthermore.

Make a Call to Contacts

Scroll up/down to find the contact in the list and tap on  to call this contact.

Select Contacts

1. Scroll up/down to find the contact in the list.
2. Touch and press on the contact for about 2 seconds to show more options such as Delete contact, add to blacklist etc.
3. To select a batch of contacts at the same time, press More  on the upper right corner of the contacts screen and select Batch operation, Tap on the checkbox for the contacts to be selected.

 indicates the contact is selected.

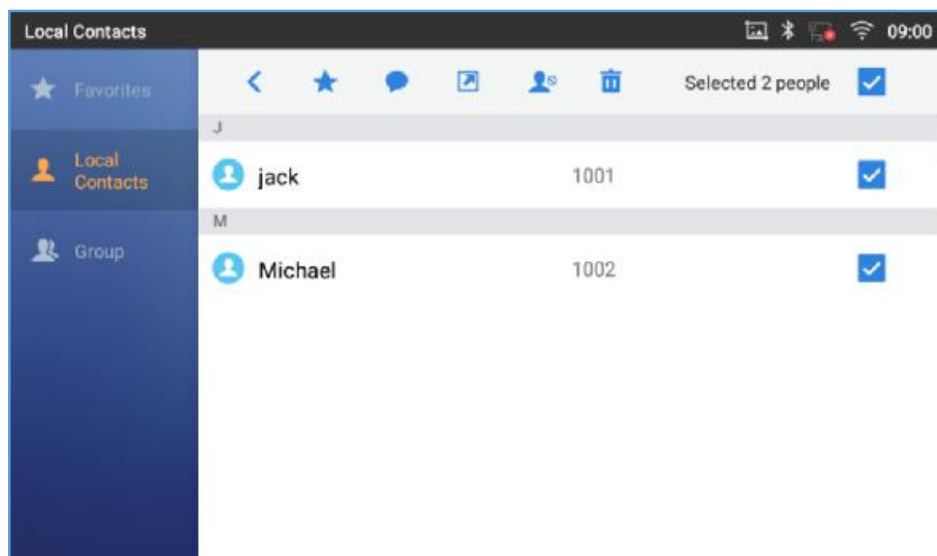


Figure 77: ITX-3370 Contacts - Select Contacts

Add Contacts to Favorites

1. Select the contact/contacts to be added as described in **[Select Contacts]**.
2. Then tap on  to add the contacts selected to Favorites

There are two other methods to add contacts to favorites.

- Directly pressing on the contact and tap on  to add the contact to favorite.
- Tapping on “Favorites” on the Contacts screen to navigate to favorites category and tap on  to select the contacts to be added to favorites then tap on .

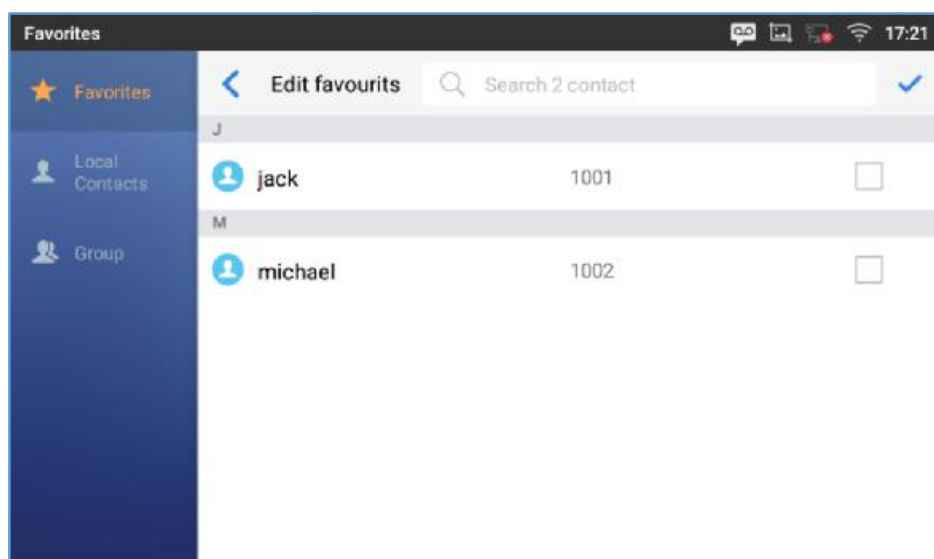


Figure 78: Add Contacts to Favorites

Edit Contacts

1. Tap on a contact from the contacts list
2. Tap on  to edit the contact.

Send Contacts to Desktop Shortcut

1. Long press on the contact
2. Tap on Send to Desktop from the menu.

Share Contacts Via Bluetooth

Users can share a single contact or a batch of contacts. Refer to the following steps to do so:

- **Sharing a single contact:**

1. Long press on the contact
2. Select "Send" from the menu then choose the Bluetooth device that you want to share the contact with.

- **Sharing a batch of contacts:**

1. Select the contacts as described in [**Select Contacts**].
2. Press on  to share the selected contacts via Bluetooth

Add Contacts to Blacklist

Users can add a single contact or a batch of contacts to the black list. Refer to the following steps to do so:

- **Add a single contact to black list:**

1. Long press on the contact
2. Select "Add to Blacklist" from the menu.

- **Add a batch of contacts to black list:**

1. Select contacts as described in [**Select Contacts**].
2. Press on  to add the selected contacts to the blacklist

Add Group

Open Contacts and tap on  to access "Group". To add a new group, tap on  and name the new group.

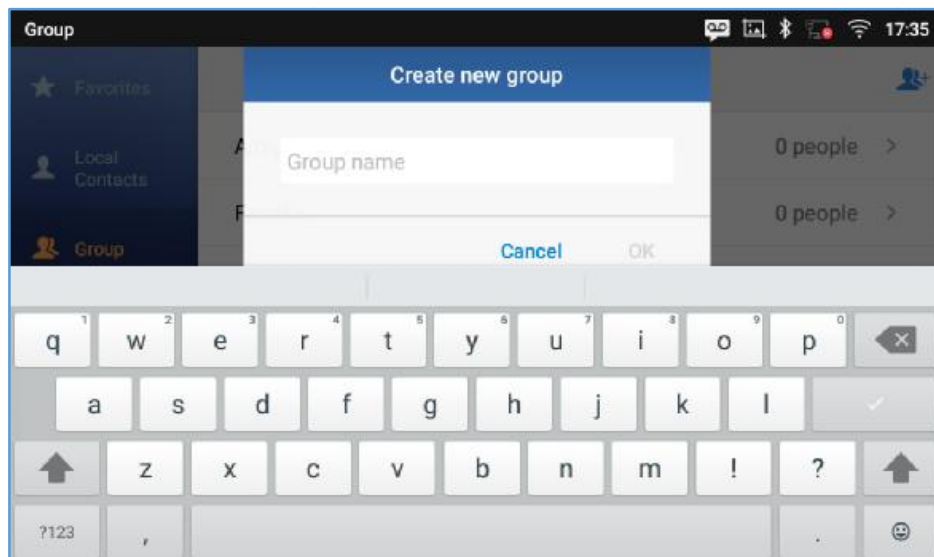


Figure 79: ITX-3370 Contacts - Add New Group

Add contacts to Group

To add contacts to a group, tap on the group then tap on , check the contacts to be added to the group and press .

Note:

- Users could also select a group for the contact when adding or editing the contact.
 - Ringtone can be assigned in group as well as single contact. If the group has ringtone set to "Custom Ringtone", this ring tone has the highest priority when there is an incoming call to the contact.
-

Contacts Storage Status

The ITX-3370 default maximum contacts storage is up to 1000. To check contact storage status, tap on More on the upper right corner of the contacts screen  to bring up contacts options, scroll down and select "Storage Status".

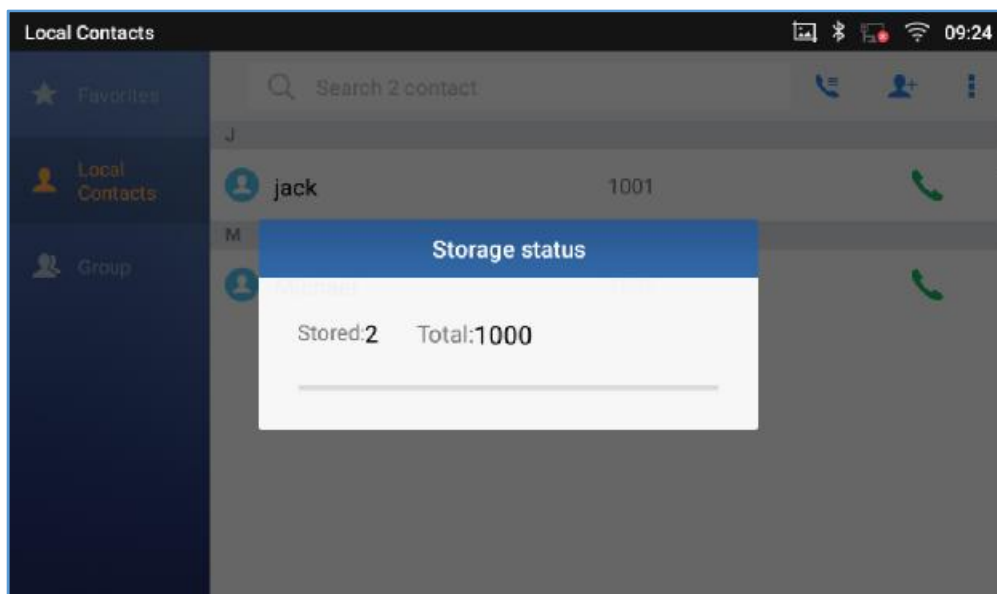


Figure 80: ITX-3370 Contacts - Storage Status

Note:

Users could increase the number of maximum contacts storage to more than 1000 contacts on ITX-3370. Users may access the phone through SSH and change the P value P1688 to another number (≤ 10000) to increase the default contacts storage. In this case, if users increase this default P value, the phone resource will be cost, and the phone performance will be slower.

HARASSMENT INTERCEPTION

The ITX-3370 has blacklist support for users to manage incoming calls. To access blacklist, tap on “Settings” icon then under “Features”, access “Harassment Interception”.

Blocked Contacts

The blocked Contacts are the contacts that were added to the blacklist, the ITX-3370 will block any calls coming from these contacts. To show the blocked contacts tap on Blacklist from the Harassment Interception page.

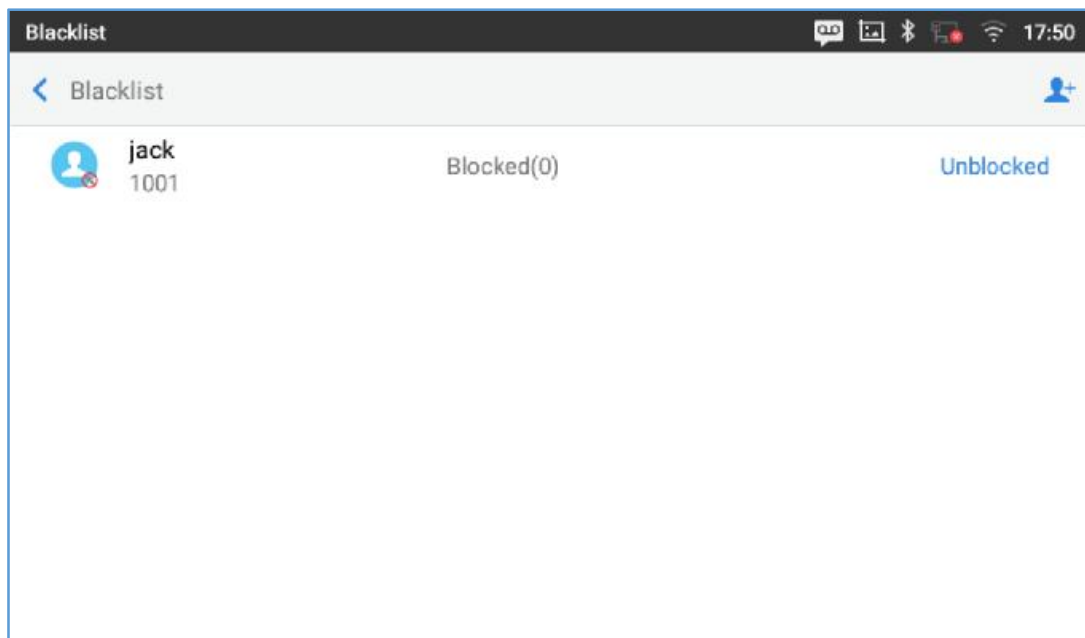


Figure 81: List of blocked contacts

Block History

To show the history of blocked contacts/numbers, tap on the call history icon from home screen and press “Blocked”.

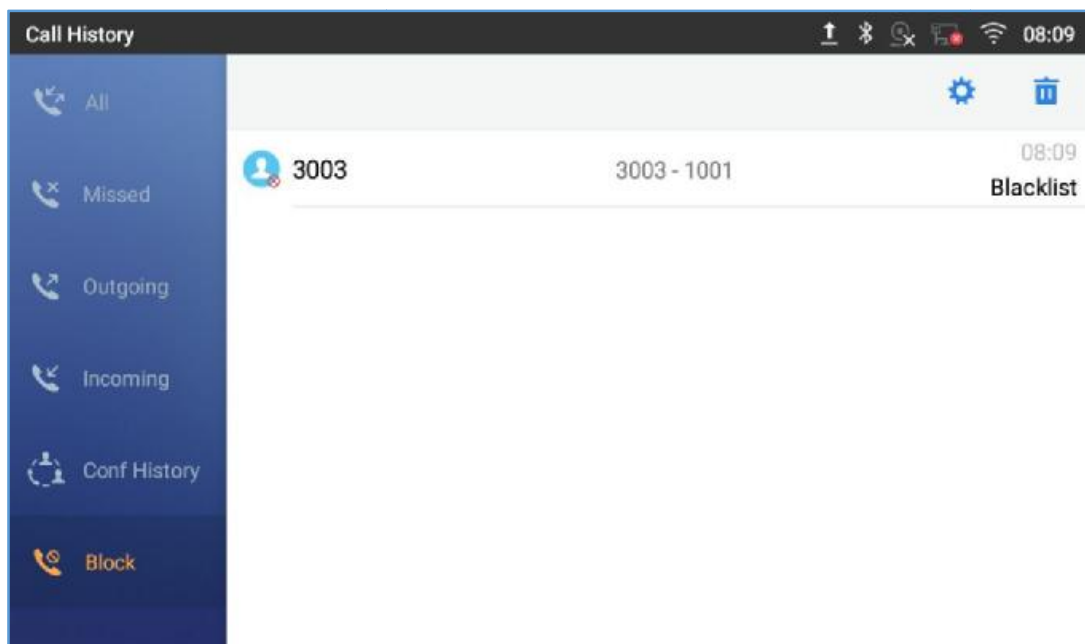


Figure 82: Block History

Delete Block History

1. In the block history, tap on the recycle bin icon 
2. Confirm the deletion of the complete blocking record by pressing "OK"

Edit Blacklist

Tap on Blacklist under the Harassment Interception Menu to show the blacklisted contacts

- **Add number to blacklist**

1. Tap on  to start adding new entry to the blacklist. The blacklist can be added manually, from contacts, or from call history.

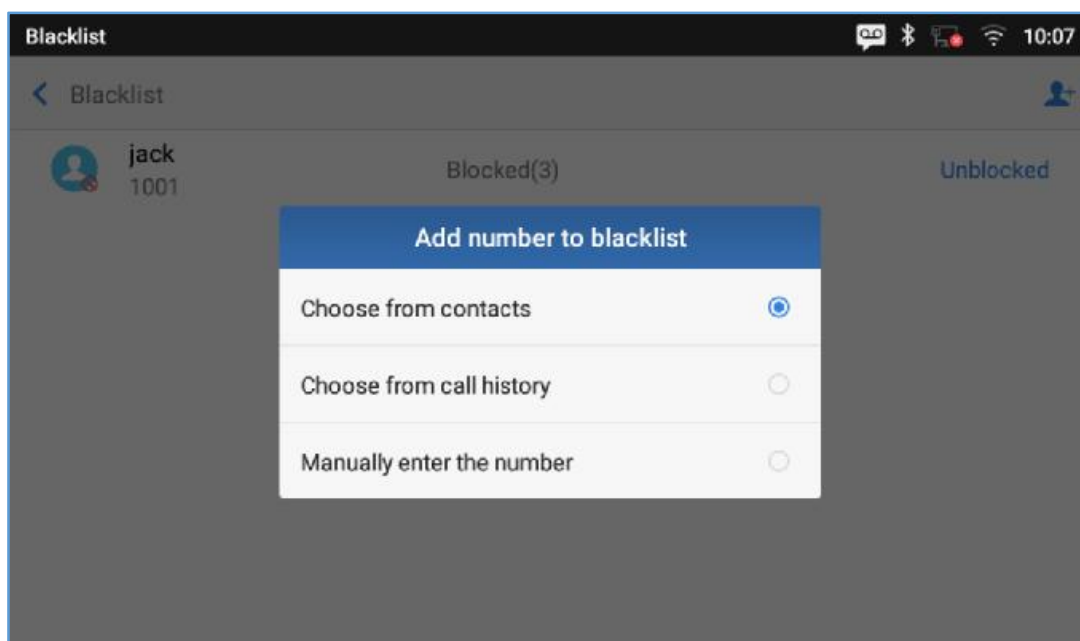


Figure 83: ITX-3370 Blacklist - Add Number to Blacklist

2. The following figure shows manually adding number to blacklist. Once **Manually add** option is selected, a window will be prompted for users to enter the phone number in the first field and name/note in the second field (optional). Tap on **OK** to finish the adding operation.

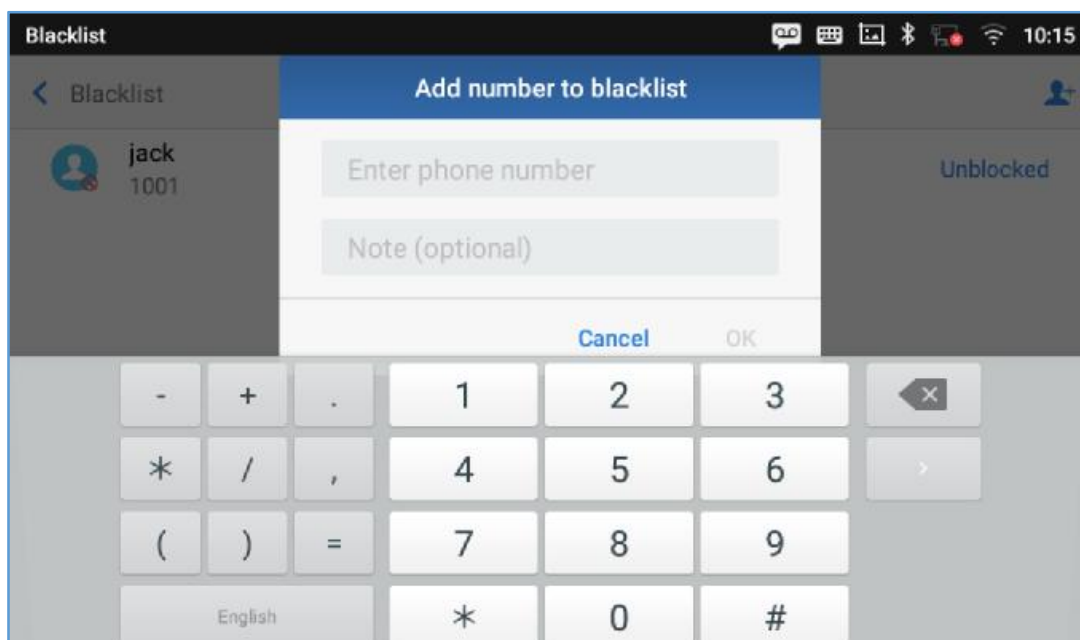


Figure 84: Manually Add Number to Blacklist

- **Edit Blacklist**

1. In the blacklist, touch and press the entry for about 2 seconds a prompt allowing changing the name/note is displayed
2. Change the name/note.
3. Tap on OK once done.

- **Delete Blacklist**

Users can Delete/unblock contacts from the black list using two methods:

1. From the black list menu press on “Unblocked”to no longer block the calls from coming from this contact.
2. From the contacts menu, long press on the contact and press“Remove from Blacklist”.

Intercept Anonymous calls

The ITX-3370 gives the possibility to intercept anonymous calls for each account registered:

1. Enter the harassment Interception Menu.
2. Check **Intercept Anonymous Calls** as shown on the figure below.
3. Check the account to apply the interception.


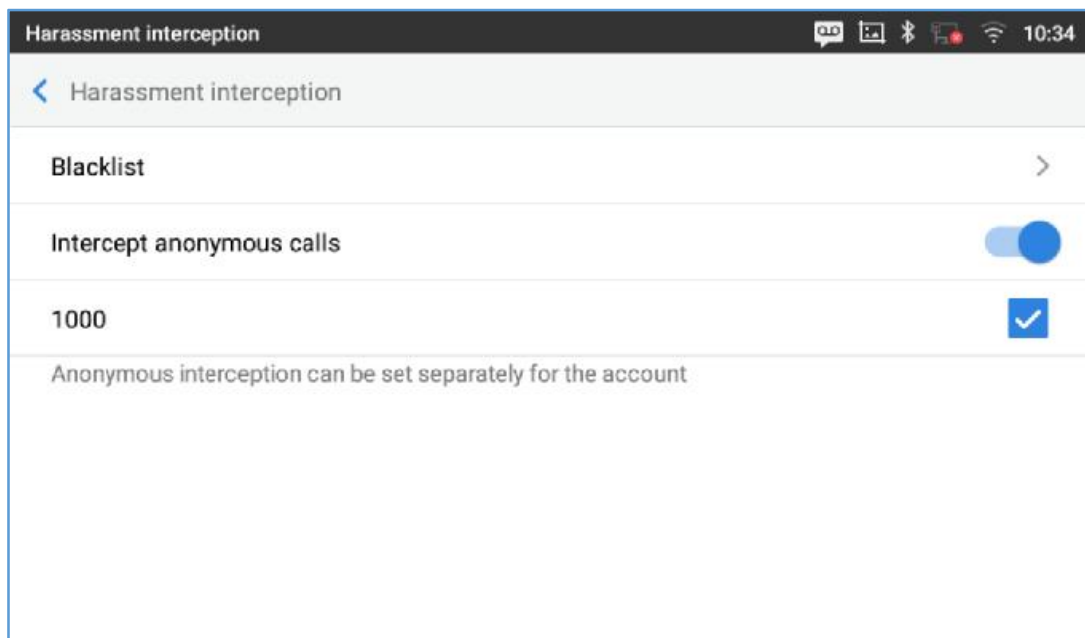


Figure 85: Intercept Anonymous Calls

CALL HISTORY

The ITX-3370 supports local and BroadWorks Xsi Call history. Tap  on idle screen to access Call history. The following figure shows the call history on the ITX-3370.

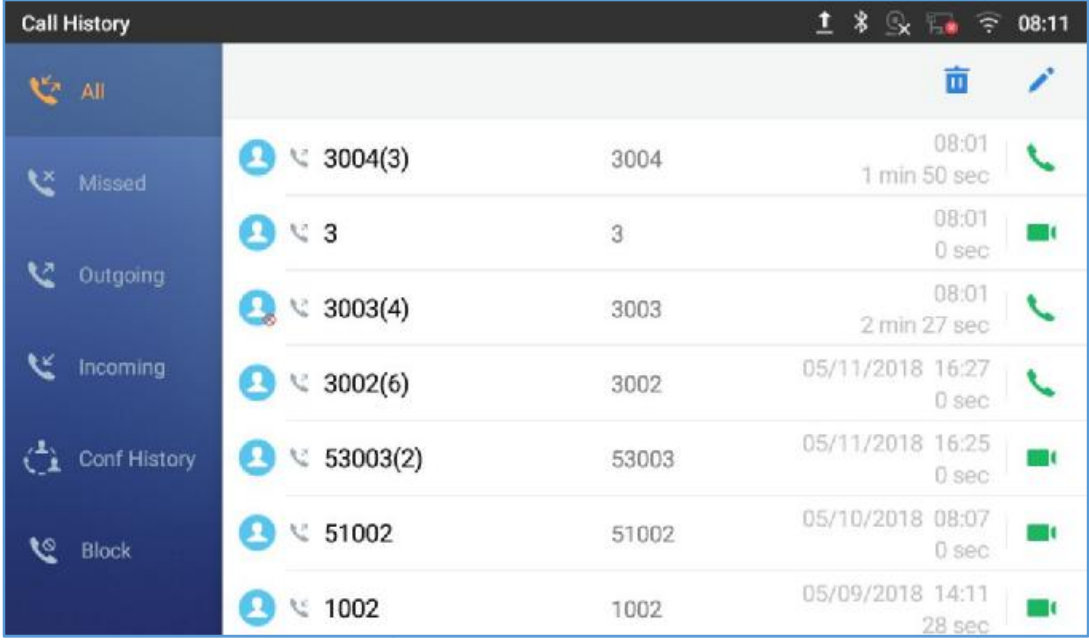

Call History			
All			
Missed			
Outgoing			
Incoming			
Conf History			
Block			
	3004(3)	3004	08:01 1 min 50 sec
	3	3	08:01 0 sec
	3003(4)	3003	08:01 2 min 27 sec
	3002(6)	3002	05/11/2018 16:27 0 sec
	53003(2)	53003	05/11/2018 16:25 0 sec
	51002	51002	05/10/2018 08:07 0 sec
	1002	1002	05/09/2018 14:11 28 sec

Figure 86: ITX-3370 Call History

Local Call History

There are four different categories in the local call history. Users could tap on the icon on the top menu to access the corresponding call logs:

-  All
-  Missed
-  Outgoing
-  Incoming
-  Conf History
-  Block (if any)

Dial Out from Call History

Tap on one of the call history entry to call this number directly. The phone will use the same account as the call log when dialing out.

Call History Options

- Touch and press the call history entry for about 2 seconds until more option window pops up
- Users can edit this number before calling, add this number to contacts, add this number to blacklist etc...

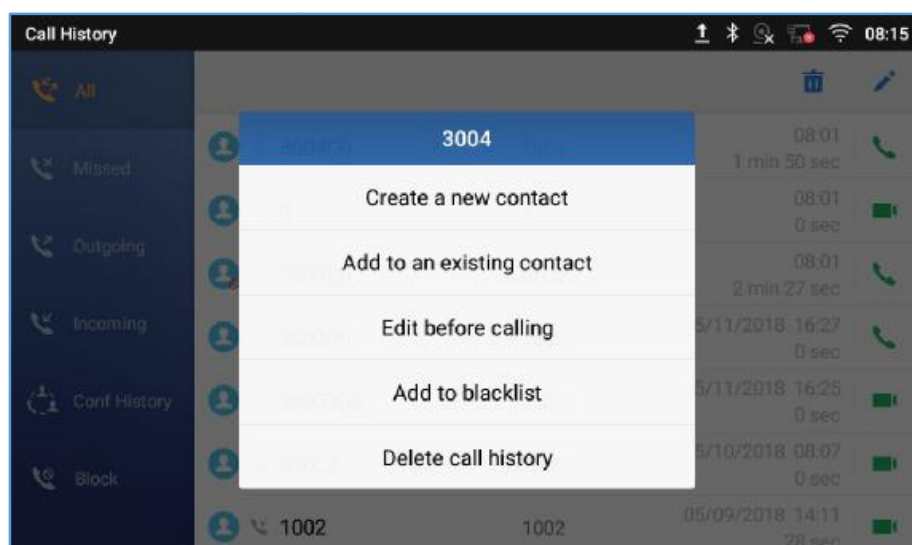


Figure 87: ITX-3370 Call History – Options

Delete Call History

- **Delete the entire call history**

Users can delete the complete call history by pressing the  directly after accessing the call history page.


- **Delete a single call history entry**

Users can delete a single call history entry by pressing the entry for about 2 seconds to bring up the options then select Delete call history.

- **Delete multiple call history entries**

- Press on  the top right corner of the screen and select the entries to be deleted
- Tap on  to delete the entries.

Call History Details

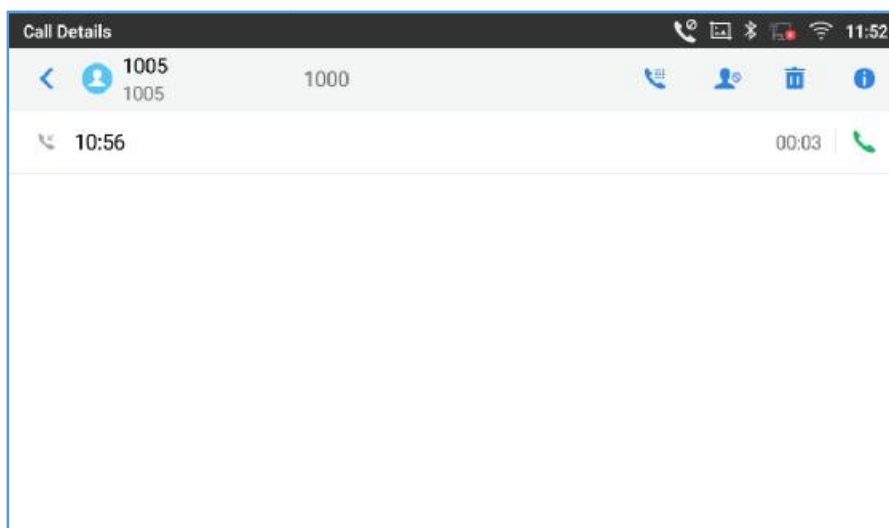

For each call history entry, users could tap on the entry to access the details.

Figure 88: ITX-3370 Call History - Details

The following operations could be done:

-  Dial out this number directly.
-  Bring up dial screen with the call history number. Users could edit the number before dialing out.
-  Add to Blacklist
-  Delete the entry.
-  Options , "Create a New Contacts", "Add to an Existing Contact".

FILE MANAGER

File Manager is a tool that allows users to delete, move, copy/past, send and rename files. It helps users to access and manage files in local storage as well as external storage devices (e.g, SD card/USB flash drive). Tap  on the phone's menu or desktop to launch File Manager application.

Files Operations

Copy and Paste Files

Follow the steps below to copy and paste a file on the ITX-3370:

1. Open file manager and navigate to the directory of the file to be copied. Touch and press on the file for about 2 seconds until the options window pops up then press Copy.
2. Select the location to which you want to paste the file and press on .

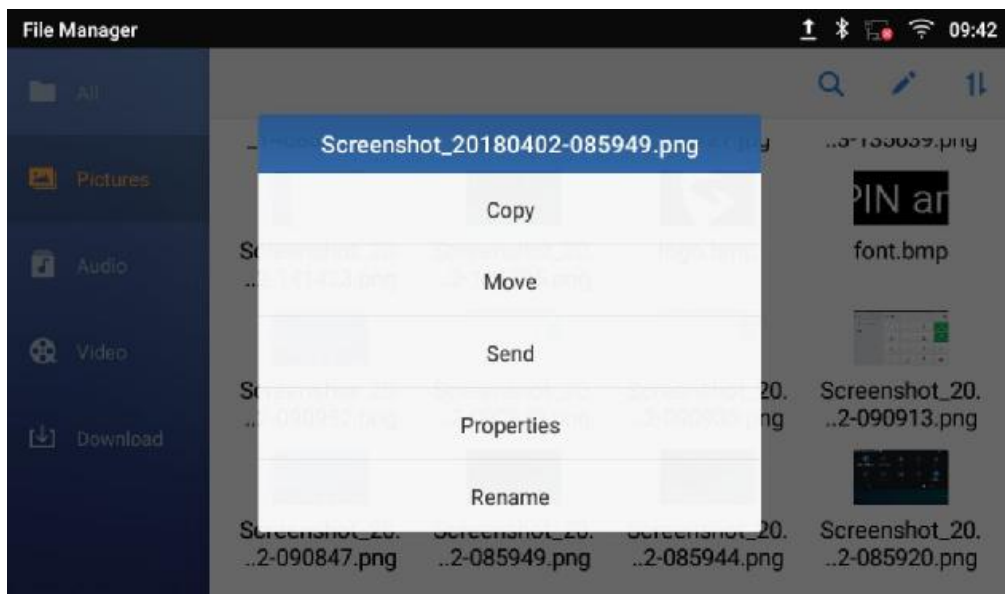


Figure 89: ITX-3370 File Manager–Copy File

Or

- 1- Press  on the top right corner of the screen and select the files to copy
- 2- Tap on  to copy the files selected
- 3- Select the directory to which you want to paste the files then press .

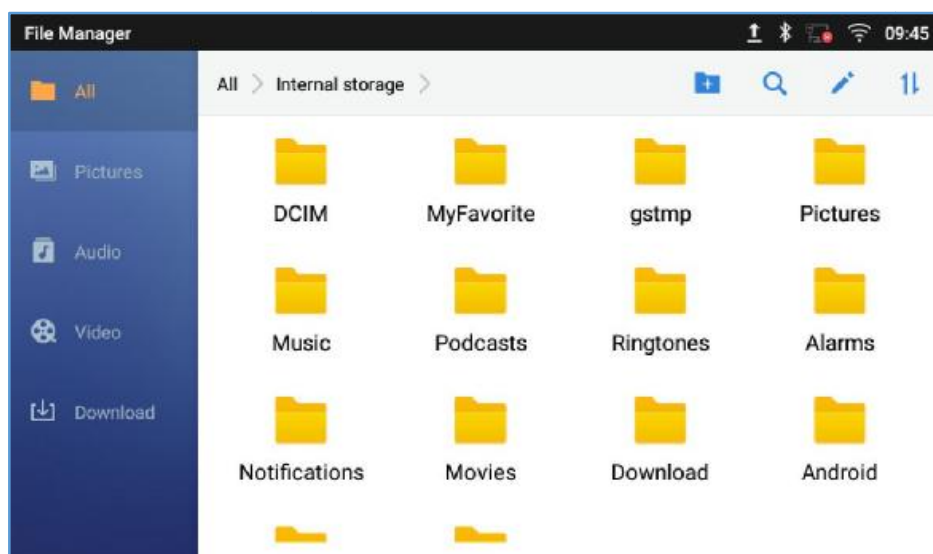


Figure 90: Paste File

Move Files

The steps to move a file are similar to the steps to copy/paste a file. The difference is once the file is moved, the file will not be kept in the source folder. Follow the steps below to move a file on the ITX-3370.

1. Open file manager and navigate to the directory of the file to be moved. Touch and press on the file for about 2 seconds until the options window pops up then press Move.
2. Select the location to which you want to past the file and press on 

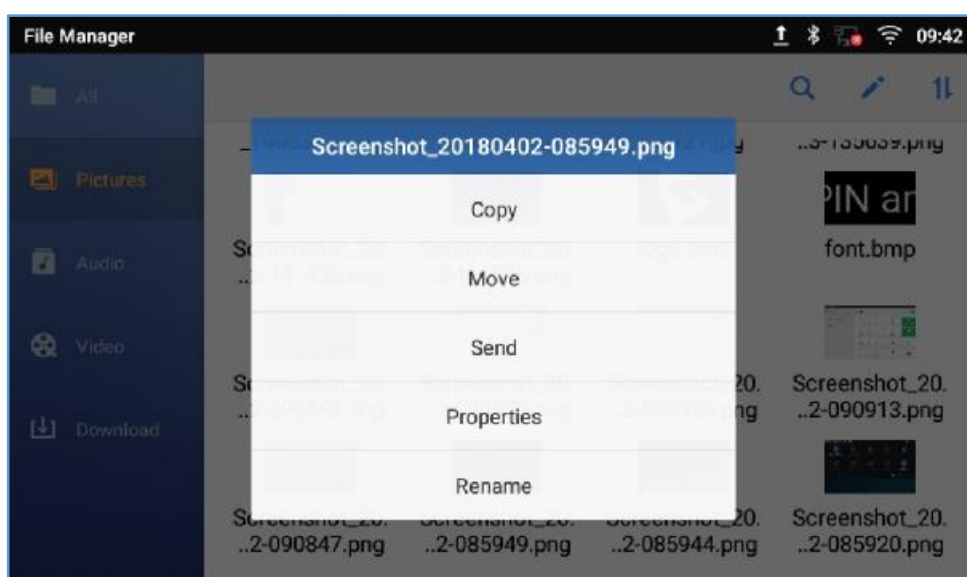


Figure 91: ITX-3370 File Manager - Move

Or

1. Press on  the top right corner of the screen and select the files to move
2. Tap on  to move the files selected
3. select the directory to which you want to past the files then press 

Send Files

The users can send a file via Bluetooth. Please make sure Bluetooth is turned on and connected to the Bluetooth devices. Otherwise, users will be directed to set it up before the file can be sent out.

To send a file:

1. Open file manager and navigate to the directory of the file to be sent over. Touch and press on the file for about 2 seconds and press send
2. Select the Bluetooth device to which the file will be transferred

Or

1. Open file manager and navigate to the directory of the file to be sent over then press on 
2. The check boxes will appear then check the files to be sent over
3. Press on  to send the selected files via Bluetooth then choose the Bluetooth devices to send the files to.

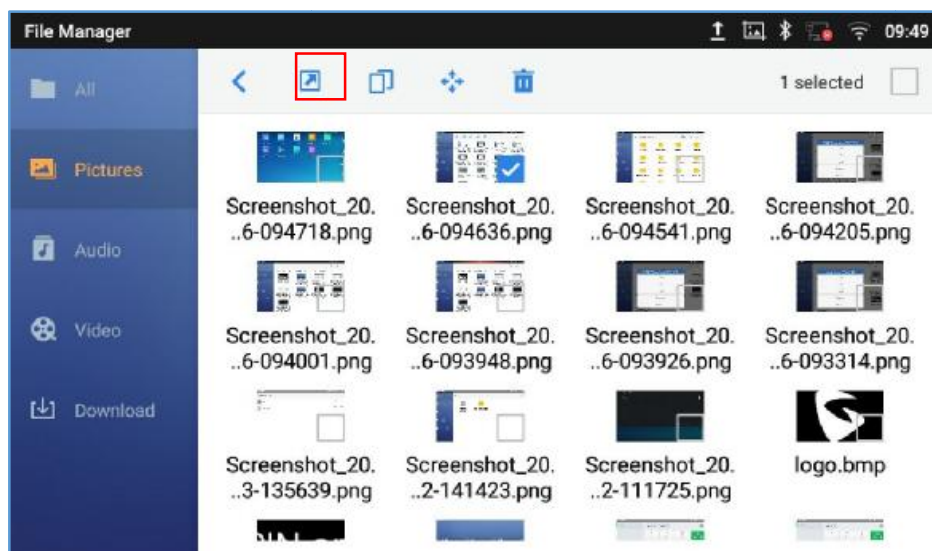


Figure 92: ITX-3370 File Manager - Options

Delete Files

1. Open file manager and navigate to the directory of the file to be deleted. Touch and press on the file for about 2 seconds until more options appear.
2. Scroll down and select "Delete"

Or

1. Open file manager and navigate to the directory of the file/files to be deleted the click on 
2. The check boxes will appear then check the files to delete
3. Press on  to delete the files selected
4. Tap on **OK** to confirm

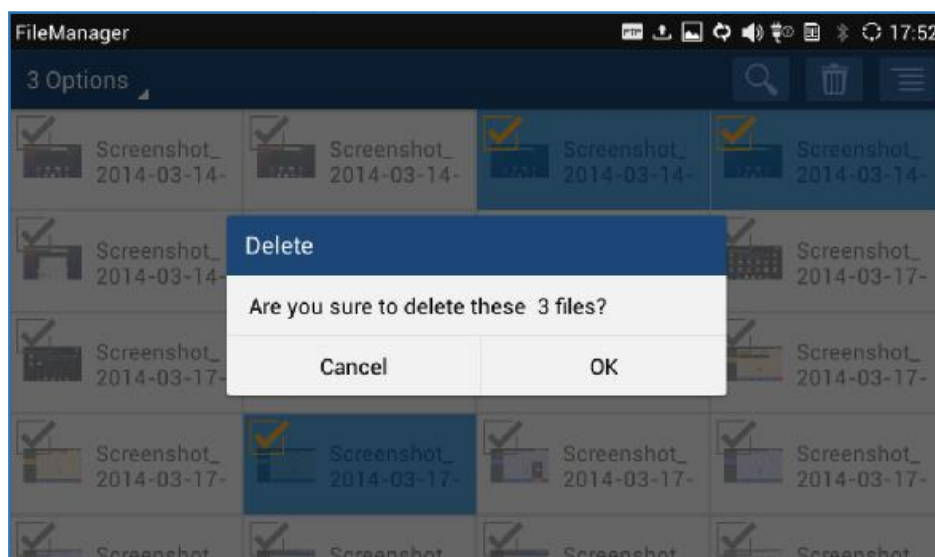


Figure 93: Delete File(s) via File Manager

Rename a File

1. Open file manager and navigate to the directory of the file to be renamed. Touch and press on the file for about 2 seconds until more options appear
2. Tap on "Rename". A new dialog window will pop up for users to enter the new name.
3. Tap on **OK**.

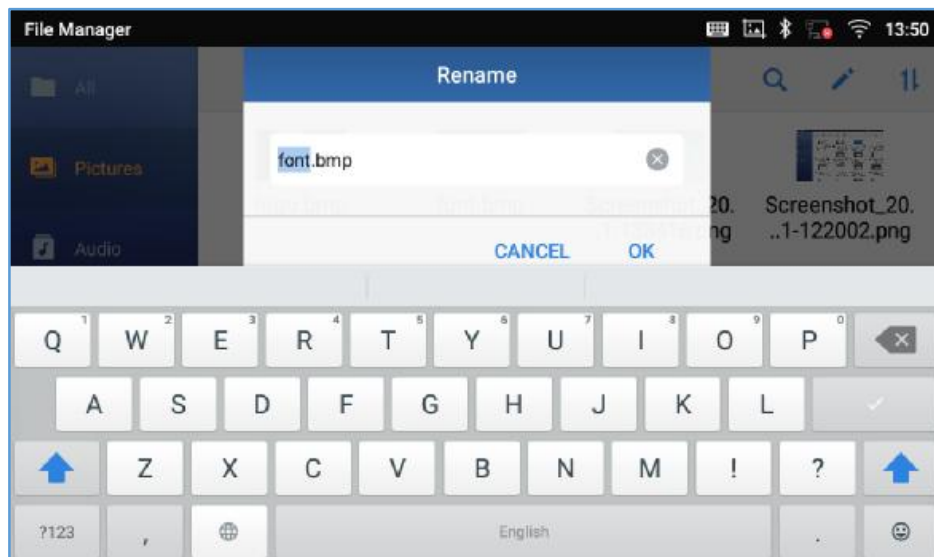


Figure 94: Rename File

File Categories

The file manager will categorize the files stored on local/external storage based on the type of files. The available categories are

- **All:** gives access to all internal storage files as well as external storage devices
- **Pictures:** contains all the pictures stored on the phone including screenshots, camera pictures and external pictures
- **Audio:** contains all the Audio file on local and external storage
- **Video:** contains all the videos stored on the phone including recorded videos from camera and videos stored on external devices
- **Downloads:** in this category the phone will list all the downloaded files such as apps, document, music, videos ...etc.

GS MARKET

The ITX-3370 supports extensive amount of 3rd party Android applications. Users could install those applications from the built-in GS Market. If Google Play application is installed from GS Market, users could log in and download all kinds of applications there as well.

Tap on  at the phone onscreen menu to launch the GS Market. Users could browse, search, download and install the apps from there for tools, games and other applications.

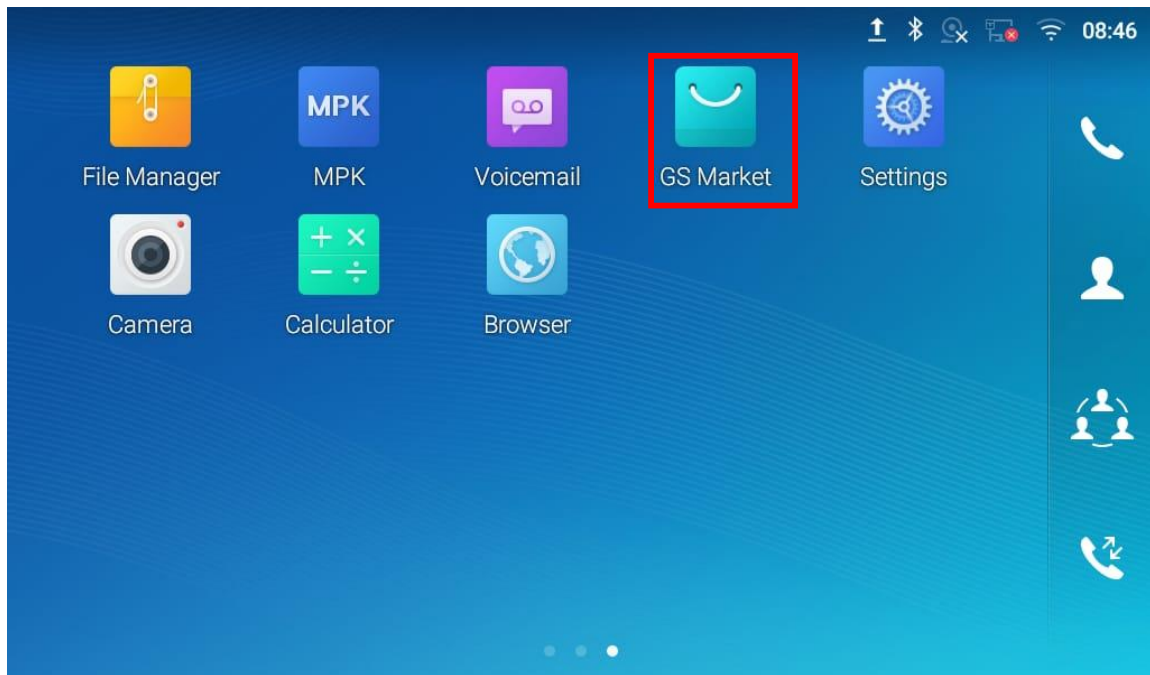


Figure 95: GS Market - Onscreen Menu

CAMERA

The ITX-3370 has built-in Camera to support taking pictures and recording videos. Users can also use the camera during SIP video calls as well as video calls via 3rd party applications. To access Camera to take pictures and videos, tap on Camera icon  on idle screen.

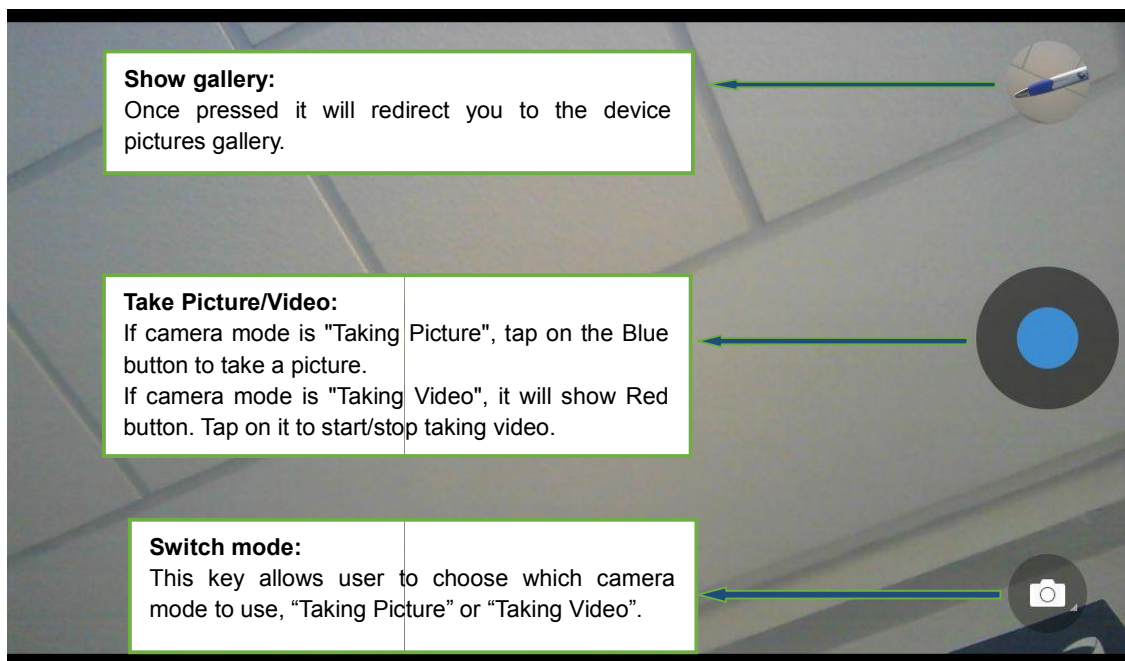


Figure 96: ITX-3370 Camera

Take Picture

1. Press  to take picture.
2. The captured picture can be accessed under **File Manager**→**Internal Storage**→**DCIM**→**Camera**.
3. To view the last taken pictures, swipe from right to left on camera screen.

Record Video

1. Swipe from left to right on camera screen or press menu button, then tap on  then type on  to select the video mode.
2. Tap on  to start recording.
3. The recorded video can be accessed under **File Manager**→**Internal Storage**→**DCIM**→**Camera**.

4. To view the last recorded videos, swipe from right to left on camera screen.

Angle Adjustment

On the back of the ITX-3370 camera, users could scroll the wheel up/down to adjust the camera angle. If users scroll the camera all the way up until the icon  shows up on the status bar of the screen, the camera is turned off.

Gallery

The ITX-3370 has built-in Gallery for users to view pictures and play videos from ITX-3370 internal storage. Users could also perform basic editing tasks on pictures under Gallery page.

To access the recently taken pictures or recorded videos, click on the circular key on the right top corner of the camera screen.

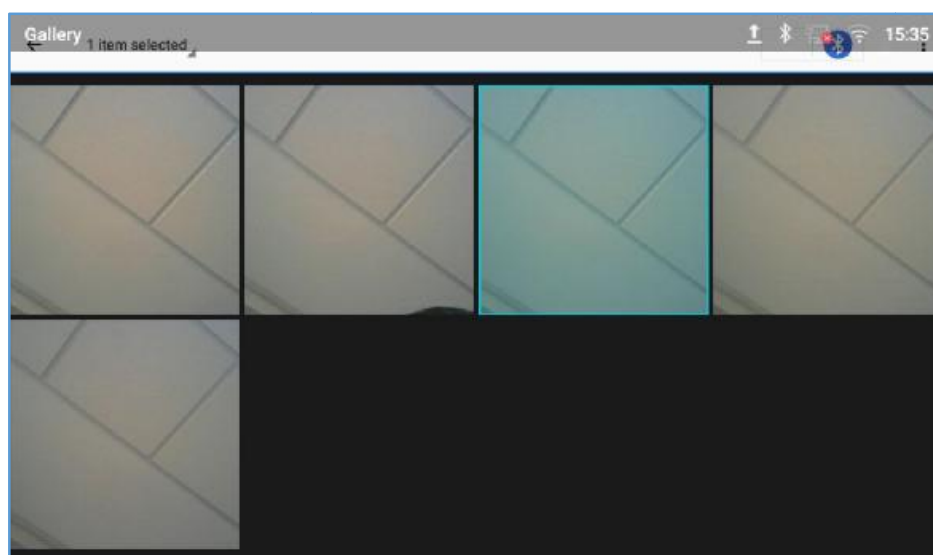


Figure 97: Recent pictures and videos page

On this page, users have the ability to perform operations, such as:

- Tapping on  button to share the file via Bluetooth or a 3rd party application.
- Tapping on  button to edit and customize pictures. Users can add filters, crop, rotate pictures... etc.

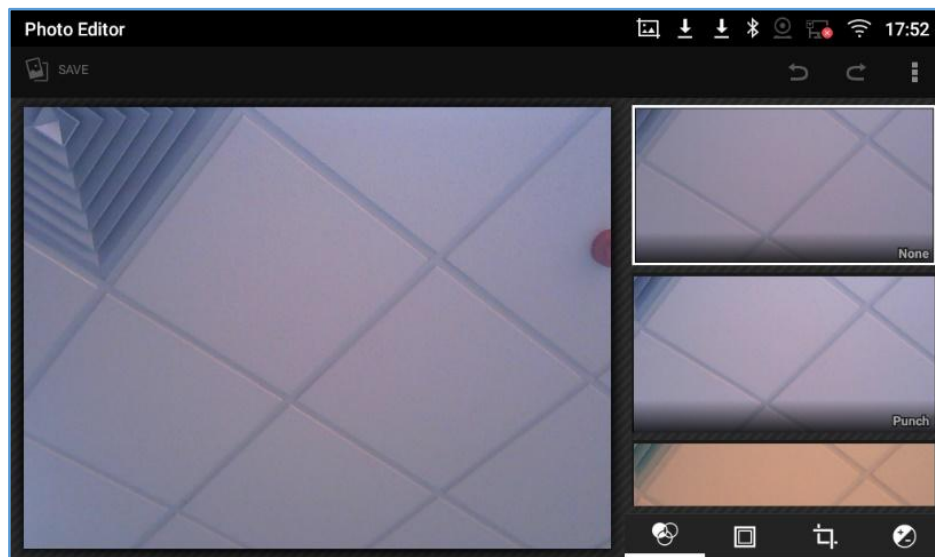


Figure 98:Edit picture

Note: Videos cannot be edited from the gallery

- **Gallerypage**

To access the Gallery, open the camera click on the circular key on the right top corner of the camera screen.

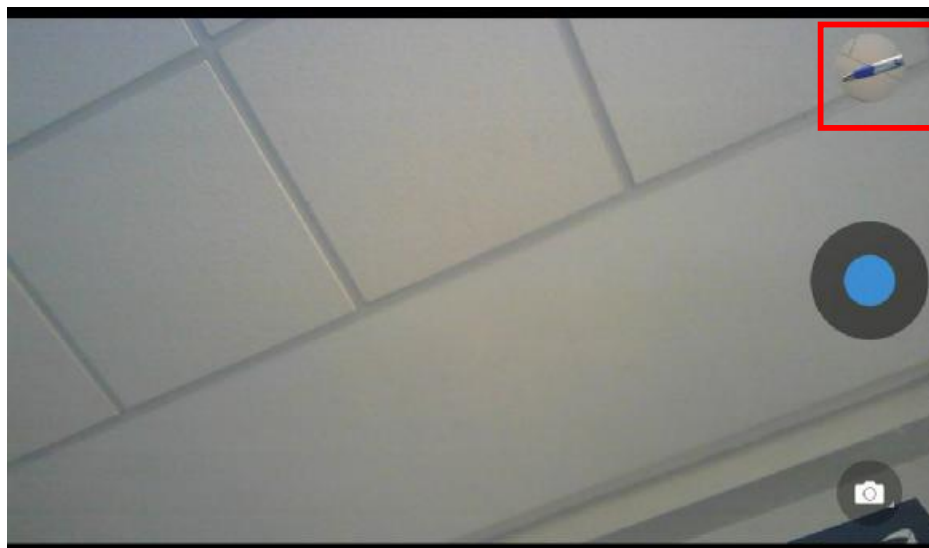


Figure 99: Access to the Gallery

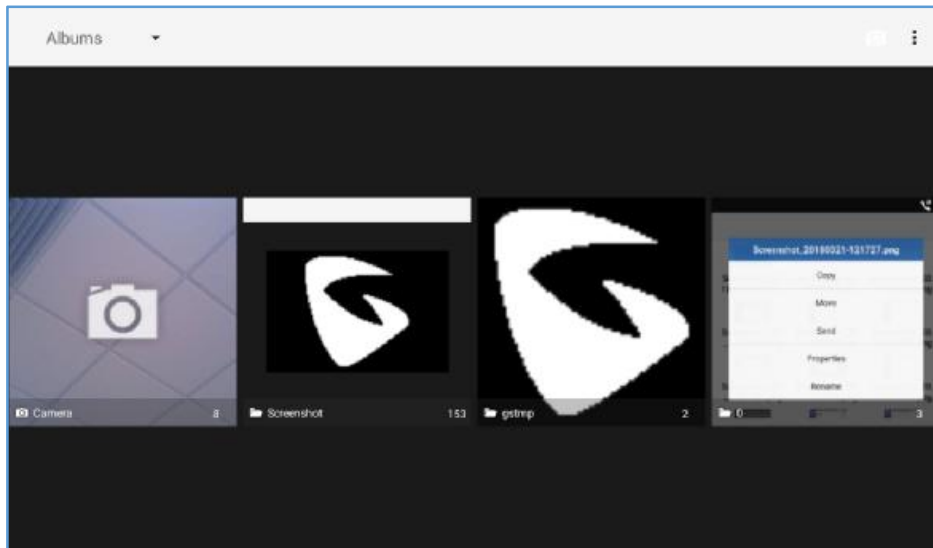


Figure 100:ITX-3370 Gallery

On this page from the upper left corner, users can sort the pictures and videos by Album, Location or Time.

- **View pictures**

Access one group of pictures and videos and select "Grid View" or "Filmstrip View" from upper left corner of the screen to set view mode of the pictures. Tap on a specific picture to view the picture in full screen.

- **Pictures Options**

When the picture is displayed in full screen, press the Menu button . A list of options will be available for users to select, including "Delete", "Slideshow", "Edit", "Rotate left", "Rotate right", "Crop" or "Set Picture as", etc.

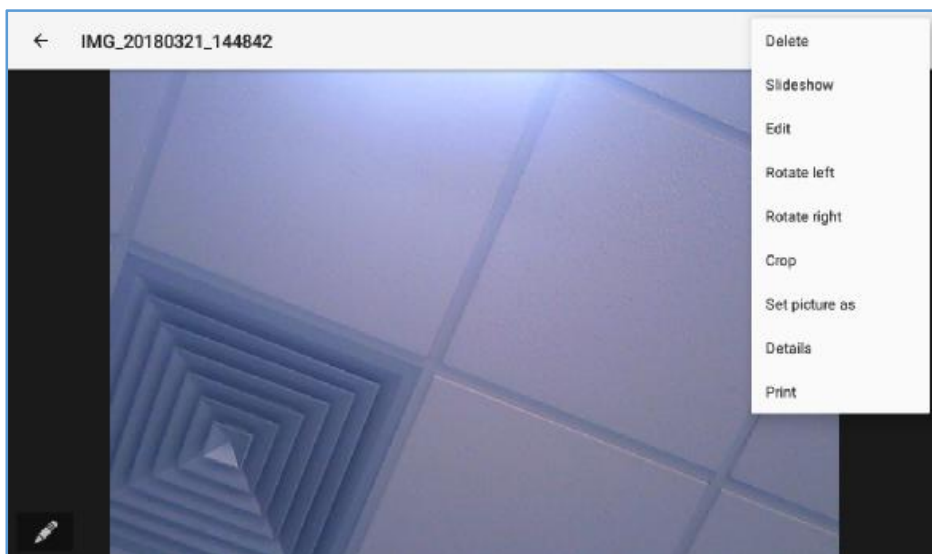


Figure 101: ITX-3370 Gallery - Picture Options

- **Take picture/video**

Tap on  on the upper right of the Gallery page to start taking pictures or videos using the ITX-3370 built-in camera.

- **Select multiple pictures**

Touch and press on one of the pictures for about 2 seconds until the picture is highlighted in blue.

Tap on other pictures to select multiple pictures. On the upper right of the Gallery screen, users can

tap on  to share the pictures via Bluetooth, tap on  to share the pictures via a third party application or tap on  to delete the selected pictures.

Screensaver

User can set screensaver from the phone's idle screen under **Settings→Basic→Display→Screensaver**.

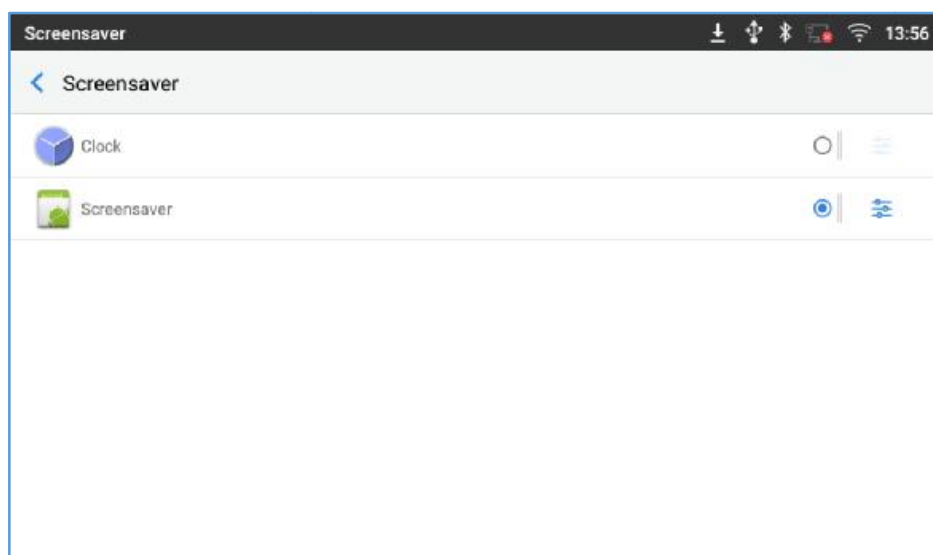


Figure 102: Screensaver settings

Users can set Screensaver to Clock or Screensaver.

- **Clock:** When setting the screen saver to Clock the phone will show a clock on the screen when the phone goes to standby mode. Press  to set the clock as Digital or Analog and Enable/Disable the Night mode.
- **Screensaver:** Users can set Screensaver from the local images, the default directory (Screensaver), or from Internal storage, or they can set a folder in a remote HTTP server to display images contained on it as screensaver. Press  to show the screensaver settings

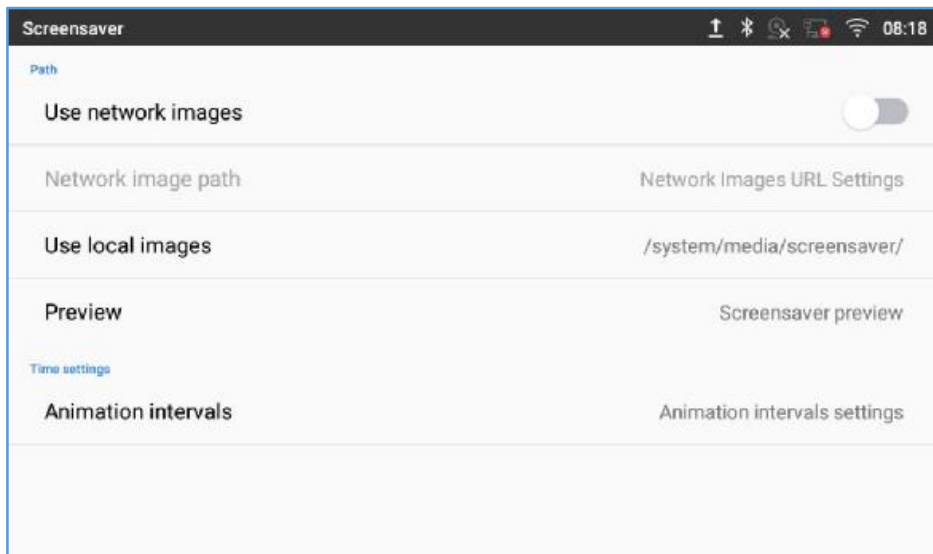


Figure 103: Use Network Images

Click on **Use network images** and set the path of the remote screensaver folder.

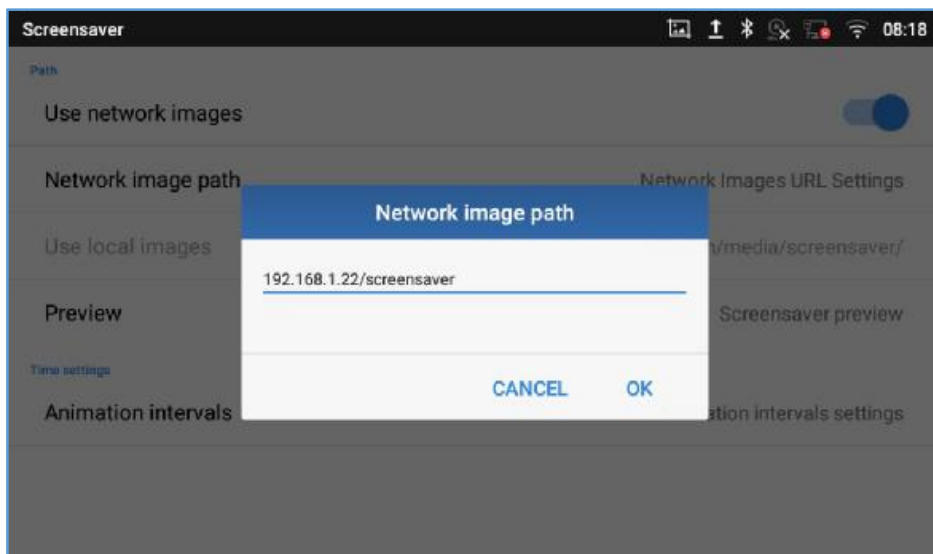


Figure 104: Network Image Path

BROWSER

ITX-3370 browser could be used in a similar way as a PC-based web browser. Users can open web pages, bookmarks, view history, search ...etc. Tap  on the idle screen to launch the Browser application.

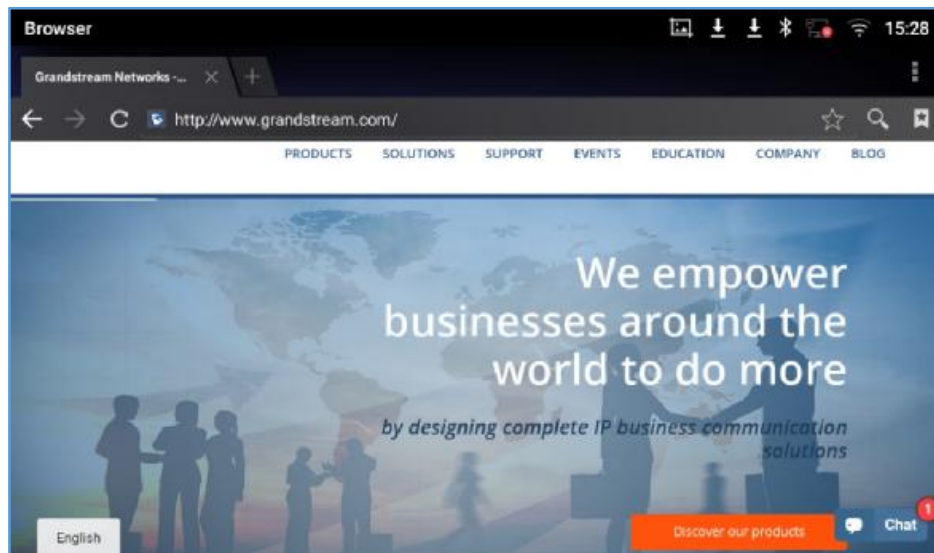


Figure 105: ITX-3370 Web Browser

- Touch the screen and scroll up/down/left/right to view the web page.
- Use two fingers on the screen to pinch in or spreading out the page.
- Press the MENU button  to or press  to access more options including refresh New Tab, find on page, etc.

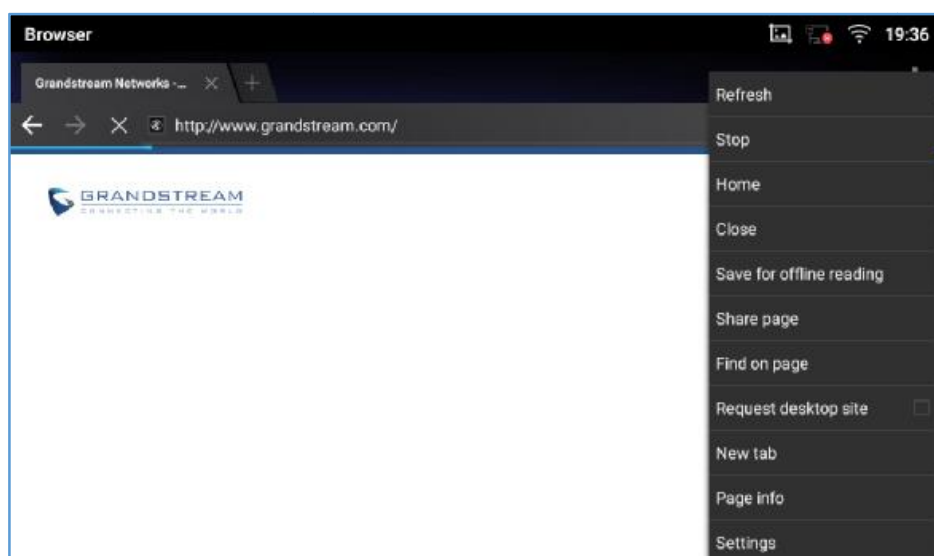


Figure 106: ITX-3370 Browser Menu Options

- To open a new window, tap on  icon on the right side of the tab.



Figure 107: Open New Window in Browser

- To open **Bookmarks**, **History** and **Saved Pages**, tap the icon  on the upper right of the Browser.



Figure 108: ITX-3370 Web Browser-Bookmarks

ACTIONURL

ITX-3370 supports ActionURL module, and it is used to set the URL for various kinds of phone events on phone web GUI, and when the corresponding event occurs on the phone, phone will send the configured URL to SIP server. To use ActionURL module, users need to know the supported events in this module, and also added the dynamic variables of the supported events on phone web GUI. The dynamic variables of the supported event will be replaced by actual values of the phone, in order to notify the event to SIP server.

CONNECTING ITX-3370 TO GDS3710 DOOR SYSTEM

The ITX-3370 offers a powerful integration with GDS3710 Door System and allows users to open the door, initiates call to the GDS3710 and gets real time audio/video stream.

The ITX-3370 can be connected with the GDS3710 in two different ways, either using peering mode (without a SIP server) or through a SIP server.

CONNECT TO NETWORK AND DEVICES

The ITX-3370 supports a variety of network connections (Ethernet, Wi-Fi) and device connections, including EHS headset (Plantronics), USB, SD card and Bluetooth device. Users can connect the ITX-3370 and transfer files from/to the ITX-3370 using a USB connection, SD card or Bluetooth.

Ethernet

Ethernet connection is turned on as DHCP by default. If you would like to use Ethernet connection for network access, please make sure the Ethernet cable is plugged in to the LAN port on the back of the ITX-3370.

To configure Ethernet settings on ITX-3370 LCD:

1. Go to ITX-3370's **Settings**→ **Network**→**Ethernet Settings**.
2. Touch **IPv4 settings**.
3. Tap on "IPv4 Address Type" to select DHCP, Static IP or PPPoE as the address type.
 - For DHCP, save the setting and the ITX-3370 should be able to get IP address from the DHCP server in the network.
 - For static IP, enter IP Address, Subnet Mask, Default Gateway, DNS Server and Alternative DNS server for the ITX-3370 to correctly connect to network.
 - For PPPoE, enter PPPoE account ID and password so the ITX-3370 can get IP address from the PPPoE server.

WI-FI

Wi-Fi is supported and built-in on the ITX-3370. ITX-3370 can be connected to network if Wi-Fi is available within the area.

Turn On/Off Wi-Fi

1. Go to ITX-3370's **Settings**.
2. Touch **Network**.
3. Check or uncheck the option for **Wi-Fi**.

Or, users could open the top status bar and tap on Wi-Fi icon  to turn it on/off.

Connect to Wi-Fi Networks

1. Once Wi-Fi is turned on, ITX-3370 will automatically start the scanning within the range.
2. Go to ITX-3370's **Settings**.

3. Touch **Network**.
4. Touch **Wi-Fi Settings**.
5. A list of Wi-Fi networks will be displayed as scanning result. Tap on the SSID and enter the correct password information to connect to the selected Wi-Fi network.
6. The phone will start connecting to the Wi-Fi. The status bar will show Wi-Fi signal strength.
7. Once it's added and the password is remembered, the ITX-3370 will connect to it again when the SSID is within the range.

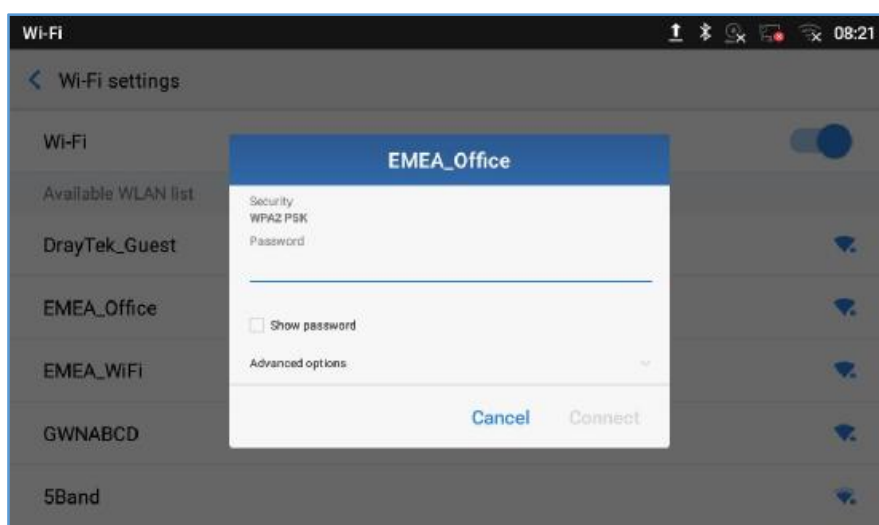


Figure 109: ITX-3370 Connect to Wi-Fi

8. The previous steps allow the ITX-3370 to connect the Wi-Fi network with DHCP setting by default. If it needs to be connected the Wi-Fi with static IP settings, please scroll down the setting window and tap to check the “**Show advanced options**”. Then the window will show up the IP settings at the bottom. If the Static is selected, the system will require end user to input IP address, Gateway, Network prefix length and DNS 1 and DNS 2 addresses.

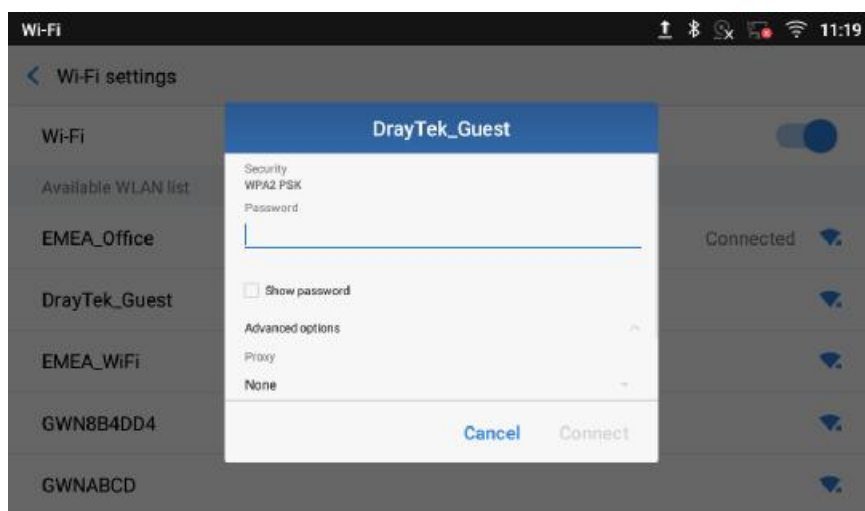


Figure 110: ITX-3370 Connect to Wi-Fi-Show Advanced Options

9. If there is a need to modify the saved Wi-Fi network setting, the end user should tap and long press the SSID bar in the Wi-Fi setting page. The system will pop up a prompt and then users need to tap on **“Modify Network”**. Then, the phone system will pop up a new window to allow user to check the Wi-Fi parameters and change the setting by checking the **“Show advanced options”** at the bottom.
10. User can also add Wi-Fi Networks manually if the network is hidden or not showing on the list of scanned SSIDs. User needs to roll down the Wi-Fi settings page and press on **“Add network”** and then enter the SSID name, Security type and Password.

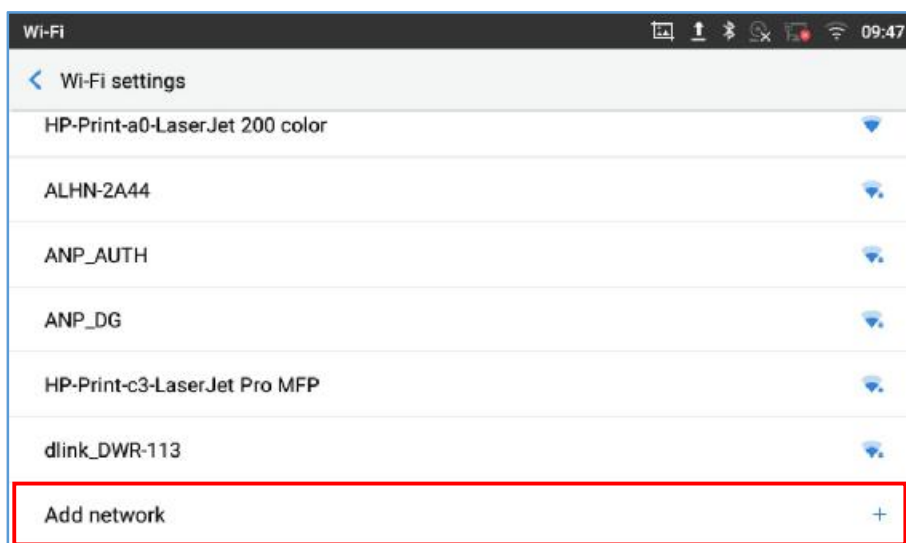


Figure 111: Wi-Fi - Add network

Wi-Fi Settings Shortcut

Users can enter the Wi-Fi settings by sliding the Status Bar, then long Press on the Wi-Fi icon.

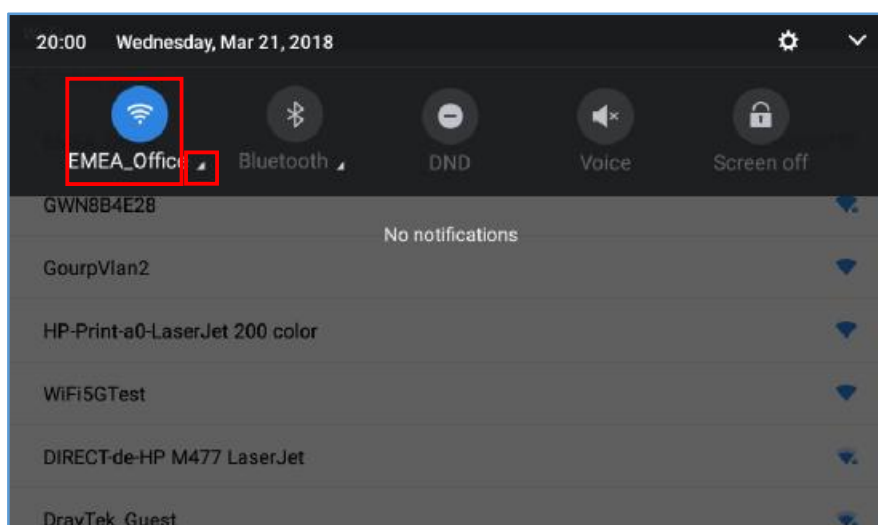


Figure 112: Wi-Fi Settings Shortcut

-Or-

Press the letter under Wi-Fi icon this will show the list of the Wi-Fi networks detected. Press “More Settings” to access the Wi-Fi settings.

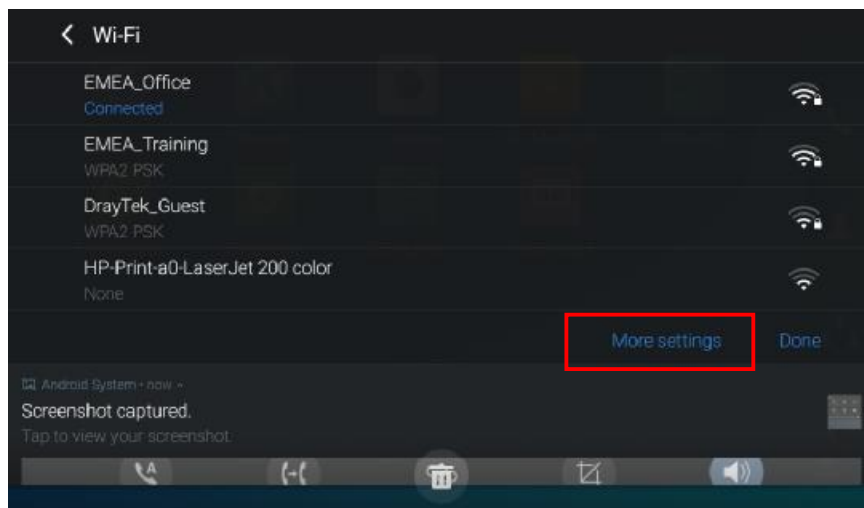


Figure 113: Wi-Fi Shortcut - Wi-Fi List

Bluetooth

Bluetooth is a proprietary, open wireless technology standard for exchanging data over short distances from fixed and mobile devices, creating personal area networks with high levels of security. The ITX-3370 supports Bluetooth, version 4.0 + EDR. Users could use Bluetooth to transfer files, share contact information with other Bluetooth portable devices, use Bluetooth headset for making calls, switch calls to the ITX-3370 from mobile devices using Bluetooth hands-free profile, and listen to media (music or other audio output) from the ITX-3370.

To connect to a Bluetooth device, turn on ITX-3370's Bluetooth radio first. The first time when using a new Bluetooth device with the ITX-3370, "pair" the device with ITX-3370 so that both devices know how to connect securely to each other. After that, users could simply connect to a paired device. Turn off Bluetooth if it's not used.

Bluetooth settings are under ITX-3370's **Settings→Basic→Bluetooth**.

Turn On/Off Bluetooth

1. Go to ITX-3370's **Settings→Basic→Bluetooth**.
2. Check or uncheck Bluetooth option.

Or, users could open the top status bar→ tap on Bluetooth icon  to turn it on/off.

Change Bluetooth Device Name

The ITX-3370 uses "ITX-3370XXXXXX" as Bluetooth device name by default where "XXXXXX" are the last

6 digits of the phone's Bluetooth MAC address. The device name will be visible to other devices when connecting them. Follow the steps below to change the name:

1. Go to ITX-3370's **Settings**→**Basic**→**Bluetooth**
2. Turn on **Bluetooth**.
3. Select **Additional settings**.
4. Press "Device name".
5. Enter a name and tap on "Rename".

Pair ITX-3370 with a Bluetooth Device

Before connecting ITX-3370 with other Bluetooth device, users must pair them first. They will stay paired afterwards unless they are unpaired.

1. Go to ITX-3370's **Settings**→**Basic**→**Bluetooth**
2. Turn on **Bluetooth**.
3. Tap **Additional settings** and select "Visible to nearby Bluetooth devices" to make the ITX-3370 phone visible to all nearby Bluetooth devices.
4. The ITX-3370 scans and displays the IDs of all available Bluetooth devices in range. If the device you would like to pair with does not show up in the list (available devices), ensure that the other device is turned on and set to be discoverable.
5. If the ITX-3370 stops scanning before the other device is ready, press  button to scan again.
6. Once the Bluetooth device shows up in the result, tap on it to start pairing. Confirm the passkey in the prompted message (if any). Or if passcode is required, please refer to the device's documentation or other procedures to obtain the passcode.

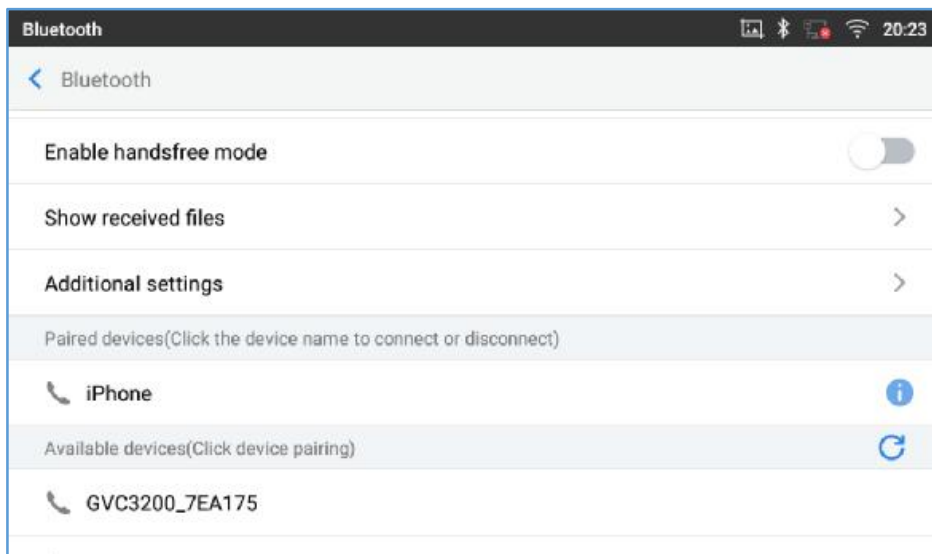


Figure 114: ITX-3370 Bluetooth - Paired Device

Unpair a Bluetooth Device

1. In the Bluetooth settings, tap on  button corresponding to the Bluetooth device.
2. Select **Unpair**.

Bluetooth Settings Shortcut

User can enter the Bluetooth settings by sliding the Status Bar, then long Press on the Bluetooth icon.

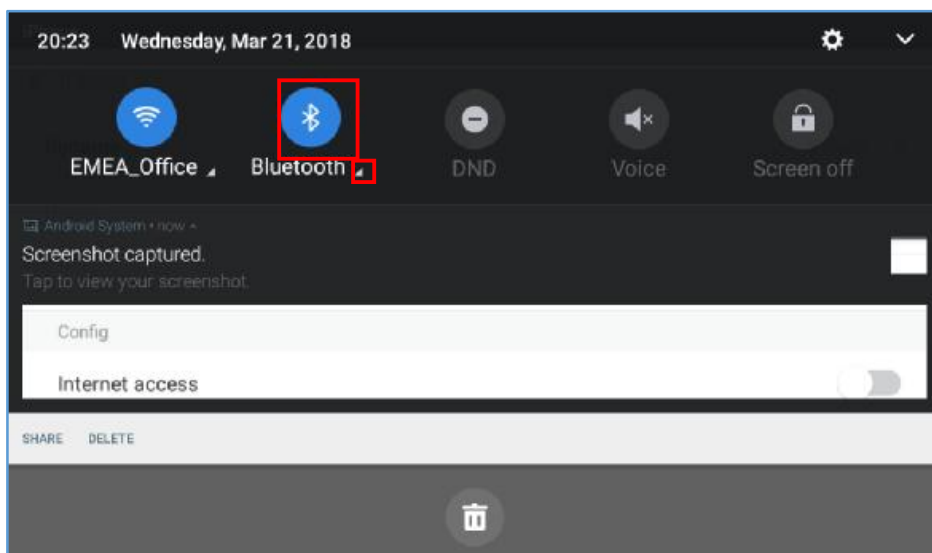


Figure 115: Bluetooth Settings Shortcut

-Or-

Press the letter under Bluetooth icon this will show the list of the paired devices. Press “More Settings” to access the Bluetooth settings.

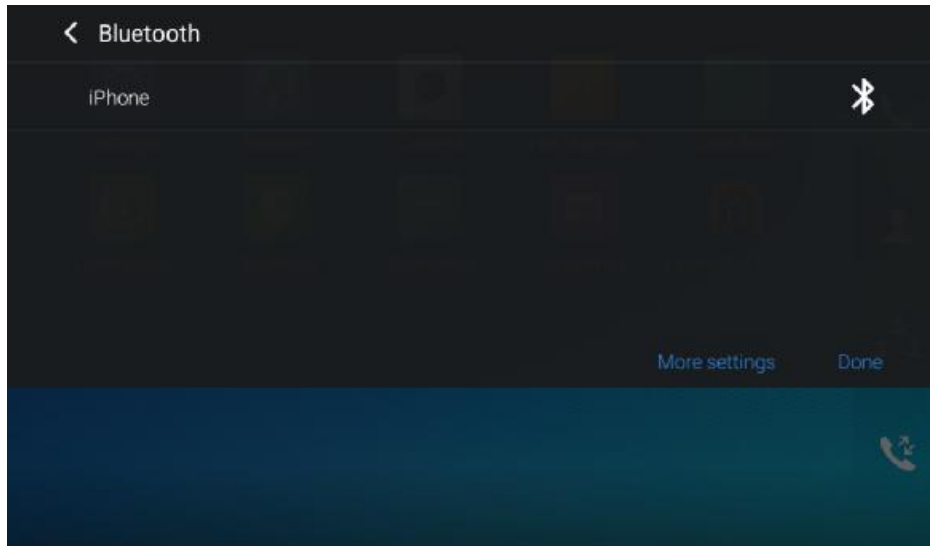


Figure 116: Bluetooth Setting shortcut 2

EHS Headset

The ITX-3370 supports normal RJ9 headset and EHS headset. To use Plantronics EHS headset:

1. Go to the ITX-3370Home screen → **Settings**→**System**→**Peripherals**: enable option “Plug RJ9/EHS headset”
2. Connect EHS Headset to the ITX-3370. Insert headset connector into the RJ9 headset port on the back of ITX-3370.

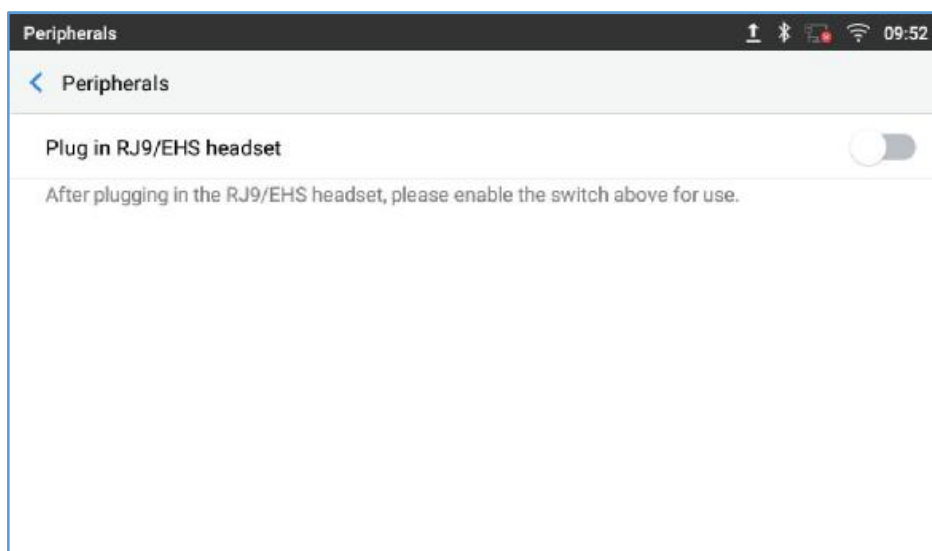


Figure 117: EHS headset

USB Headset

The ITX-3370 supports USB Headset, once the headset plugged, it will be detected automatically, and the following icon will be shown on the top right of the status bar, this means a USB headset is connected.



Figure 118: USB Headset Connected

In the calling page, user can press on the USB headset button (shown in figure below) to enable USB headset. The status bar shows the icon modified indicating that the USB headset is being used for speaking.

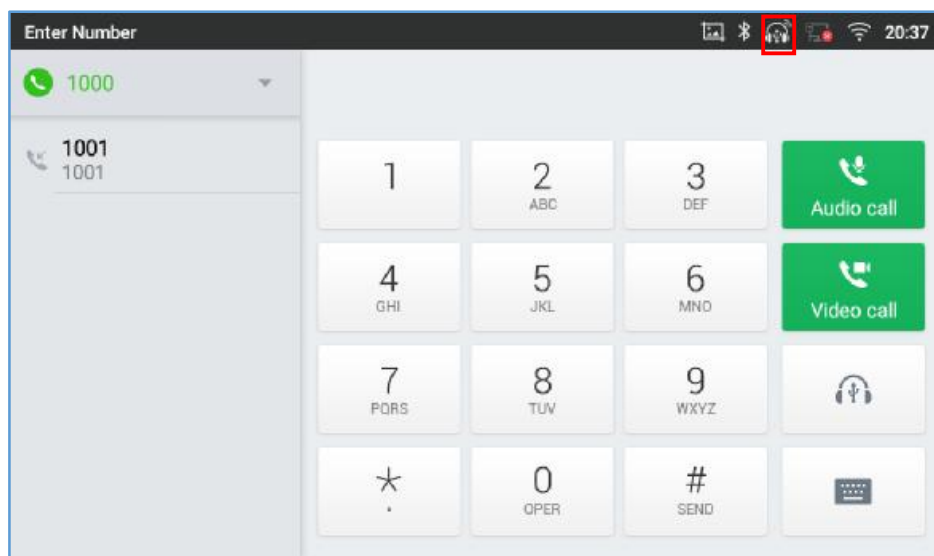


Figure 119: USB Headset Used for Call

During the call, users can tap on “More” then “Media Channel” to toggle between Handset Speaker and USB Headset.

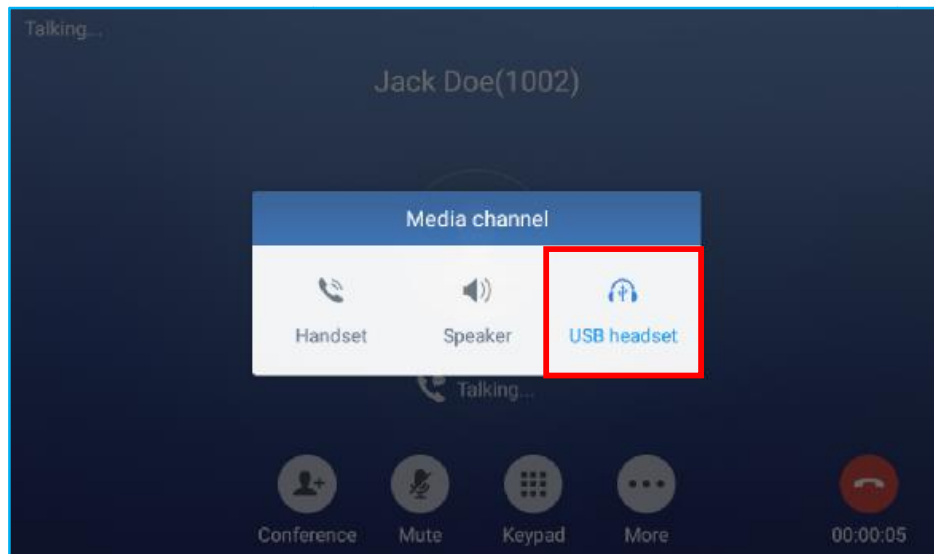


Figure 120: Switch Between Speaker and USB mode

USB

The ITX-3370 supports USB connection with USB storage devices. To connect and access USB storage device:

1. Insert an USB storage device into USB port at the back of the ITX-3370.
2. It will take a few seconds for the ITX-3370 to prepare the connection. Then the USB storage icon  will show on the status bar.
3. To access USB storage, go to ITX-3370 MENU→**File Manager**→ **USB**. Tap on it to access and manage your data.

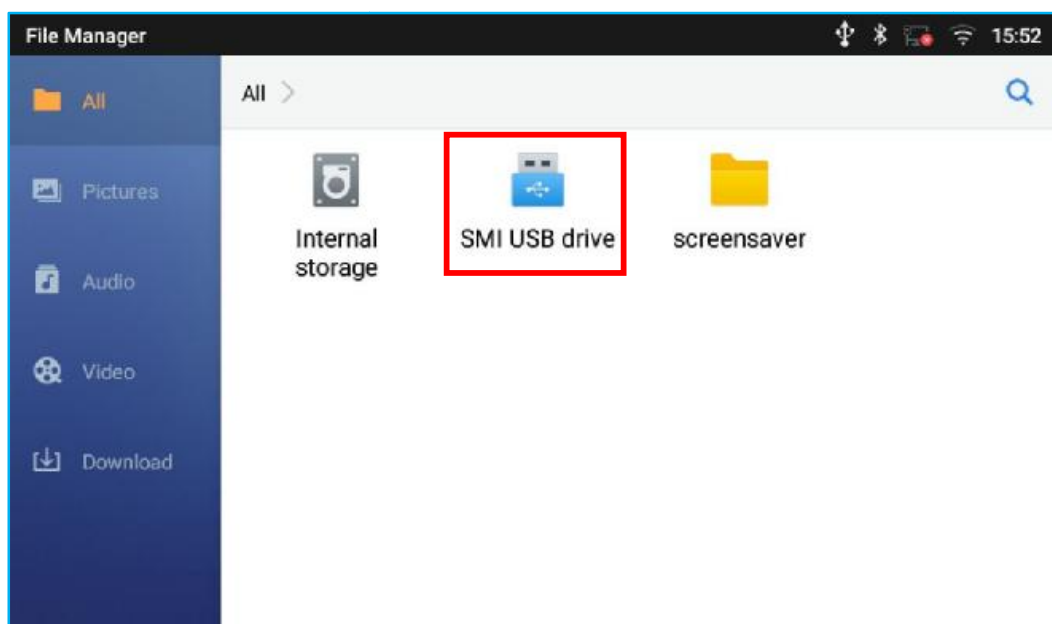


Figure 121: USB Storage Device Connected to ITX-3370

SD Card

1. Insert your SD card into SD Card slot at the back of ITX-3370. Please make sure the SD Card is inserted with right direction on the ITX-3370 as indicated on the SD card slot.
2. It will take a few seconds for the ITX-3370 to prepare the connection. Then the SD Card icon  will show on the status bar.
3. To access SD Card, go to ITX-3370 MENU→**File Manager**→**SD card**. Tap on it to manage your data.

* Android is a trademark of Google LLC.

* Skype and Skype for Business are Registered Trademarks of Microsoft Corporation.

© 2002-2014 OpenVPN Technologies, Inc.

OpenVPN is a registered trademark of OpenVPN Technologies, Inc.



HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.