
Weather Station User Manual

Table of Contents

1.	Introduction	2
2.	Warnings and Cautions.....	2
3.	Quick Start Guide.....	2
4.	Pre-Installation Checkout and Site Survey.....	3
4.1	Pre Installation Checkout	3
4.2	Site Survey	3
5.	Getting Started	3
5.1	Parts List.....	3
5.2	Recommend Tools	4
5.3	Sensor Array Set Up	4
5.3.1	Install Wind Vane	5
5.3.2	Install Wind Cups	5
5.3.3	Install the Rain Gauge Funnel	5
5.3.4	Install Batteries.....	6
5.3.5	Install Mounting Pole.....	7
5.5	Best Practices for Wireless Communication	7
5.6	Display Console	8
6.	Display Console Operation	9
6.1	Screen Display.....	9
6.2	Console Initialization	10
6.2.1	Button Operation.....	11
6.3	Set Mode	11
6.3.1	Time Zones.....	14
6.4	Barometric Pressure Display	15
6.4.1	Viewing Absolute vs. Relative Pressure.....	15
6.4.2	Rate of Change of Pressure Graph	15
6.4.3	Viewing Pressure History.....	16
6.4.4	Relative Pressure Calibration Discussion.....	16
6.5	Rain Display.....	16
6.5.1	Rain Increments of Measure	16
6.5.2	Resetting Rain	16
6.5.3	Increments of Rain Definitions	17
6.6	Wind Display.....	17
6.7	Temperature Display	17
6.7.1	Wind Chill, Dew Point and Heat Index Display	17
6.8	Alarms	17
6.8.1	Viewing High and Low Alarms.....	17
6.8.2	Setting High and Low Alarms	18
6.9	Max/Min Mode	21
6.9.1	Viewing Max/Min Values.....	21
6.10	Calibration.....	22
6.10.1	Calibration Settings.....	22
6.10.2	Calibration Ranges.....	23
6.10.3	Calibration Discussion	24
6.11	Restoring the Console to Factory Default	26
6.12	Resynchronize Wireless Sensor.....	26
6.13	Backlight Operation	26
6.13.1	With AC Adapter.....	26
6.13.2	Without AC Adapter.....	26

6.14	Tendency Arrows.....	26
6.15	Wireless Signal Strength Indicator.....	26
6.16	Weather Forecasting.....	27
6.16.1	Weather Forecasting Description and Limitations.....	27
7.	Live Internet Publishing.....	28
7.1	Connecting the Weather Station Console to WiFi.....	28
8.	Registering with WeatherUnderground.com, WeatherBug.com and WeatherCloud.net.....	33
8.1	WeatherUnderground.com.....	33
8.2	WeatherBug.com.....	35
8.3	WeatherCloud.....	36
9.	Glossary of Terms.....	36
10.	Specifications.....	38
10.1	Wireless Specifications.....	38
10.2	Measurement Specifications.....	39
10.3	Power Consumption.....	39
11.	Maintenance.....	39
12.	Troubleshooting Guide.....	40
13.	Liability Disclaimer.....	41
14.	FCC Statement.....	41

1. Introduction

Thank you for your purchase of the Weather WH2902 WiFi OSPREY Solar Powered Wireless Weather Station. The following user guide provides step by step instructions for installation, operation and troubleshooting.

2. Warnings and Cautions



Warning: Any metal object may attract a lightning strike, including your weather station mounting pole. Never install the weather station in a storm.



Warning: Installing your weather station in a high location may result in injury or death. Perform as much of the initial check out and operation on the ground and inside a building or home. Only install the weather station on a clear, dry day.

3. Quick Start Guide

Although the manual is comprehensive, much of the information contained may be intuitive. In addition, the manual does not flow properly because the sections are organized by components.

The following Quick Start Guide provides only the necessary steps to install, operate the weather station, and upload to the internet, along with references to the pertinent sections.

Required		
Step	Description	Section
1	Assemble and power up the sensor array	5.3
3	Power up the display console and synchronize with sensor array	5.6
6	Mount the sensor array	5.3.5
4	Set date and time on console	6.3
5	Calibrate the relative pressure to sea-level conditions (local airport) on console	6.3
7	Reset the rain to zero on console	6.5.2
Optional		
8	Configure WiFi	7.1
9	Register and upload to Weather Servers	7.1 and 8

4. Pre-Installation Checkout and Site Survey

4.1 Pre Installation Checkout

Before installing your weather station in the permanent location, we recommend operating the weather station for one week in a temporary location with easy access. This will allow you to check out all of the functions, insure proper operation, and familiarize you with the weather station and calibration procedures. This will also allow you to test the wireless range of the weather station.

4.2 Site Survey

Perform a site survey before installing the weather station. Consider the following:

1. You must clean the rain gauge every few months and change the rechargeable batteries every 2-3 years. Provide easy access to the weather station.
2. Avoid radiant heat transfer from buildings and structures. In general, install the sensor array at least 5' from any building, structure, ground, or roof top.
3. Avoid wind and rain obstructions. The rule of thumb is to install the sensor array at least four times the distance of the height of the tallest obstruction. For example, if the building is 20' tall, and the mounting pole is 6' tall, install $4 \times (20 - 6) = 56'$ away.
4. Wireless Range. The radio communication between receiver and transmitter in an open field can reach a distance of up to 330 feet, providing there are no interfering obstacles such as buildings, trees, vehicles, high voltage lines. Wireless signals will not penetrate metal buildings. Under most conditions, the maximum wireless range is 100'.
5. Radio interference such as PCs, radios or TV sets can, in the worst case, entirely cut off radio communication. Please take this into consideration when choosing console or mounting locations. Make sure your display console is at least five feet away from any electronic device to avoid interference.

5. Getting Started

The weather station consists of a display console (receiver), an all in one sensor array, and wireless thermo-hygrometer-barometer.

5.1 Parts List

QTY	Item
-----	------

QTY	Item
1	Display Console Frame Dimensions (LxWxH): 7.50 x 4.50 x 0.75" LCD Dimensions (LxW): 3.00 x 6.75"
1	Sensor Array
1	Wind Vane
1	5V DC Adaptor
2	Pole mounting U-bolts
2	Pole mounting U-bolt nuts
1	User manual

5.2 Recommend Tools

- Precision screwdriver (for small Phillips screw on wind vane and wind cups)
- Adjustable wrench (for mounting pole)
- Compass or GPS (for wind direction calibration)

5.3 Sensor Array Set Up

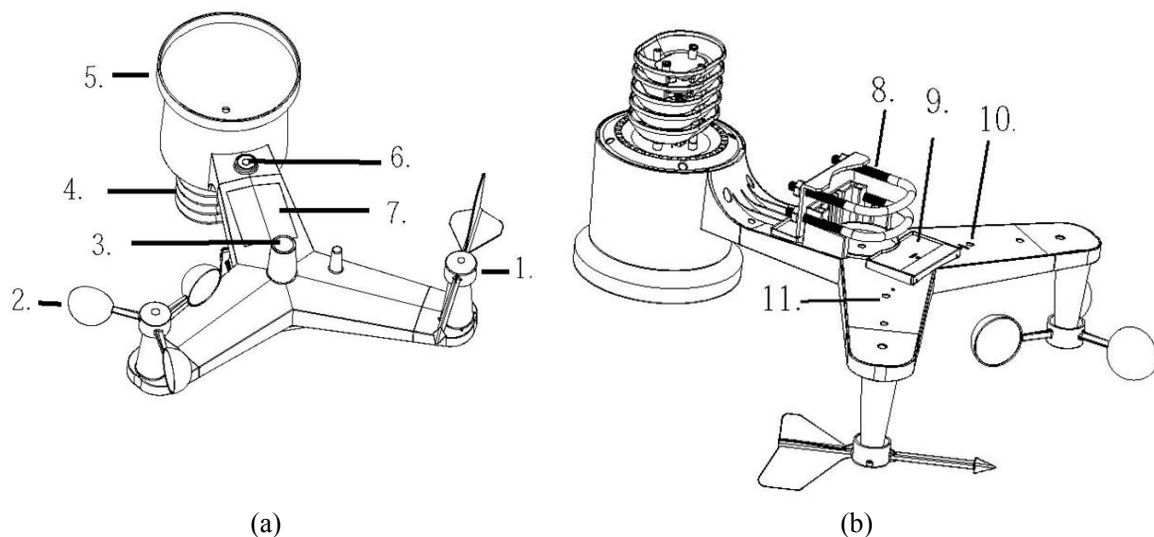


Figure 1

No	Description	No	Description
1	Wind Vane (measures wind direction)	7	Solar panel
2	Wind Speed Sensor (measures wind speed)	8	U-Bolt
3	UV sensor/ Light sensor	9	Battery compartment
4	Thermometer-hygrometer sensor (measures temperature and humidity)	10	Reset button
5	Rain collector	11	LED transmitter Indicator
6	Bubble level		

5.3.1 Install Wind Vane

Reference Figure 2. (a) Locate and align the flat key on the wind vane shaft to the flat key on the wind vane and push the vane on to the shaft. (b) tighten the set screw with a precision screw driver and make sure the wind vane spins freely.

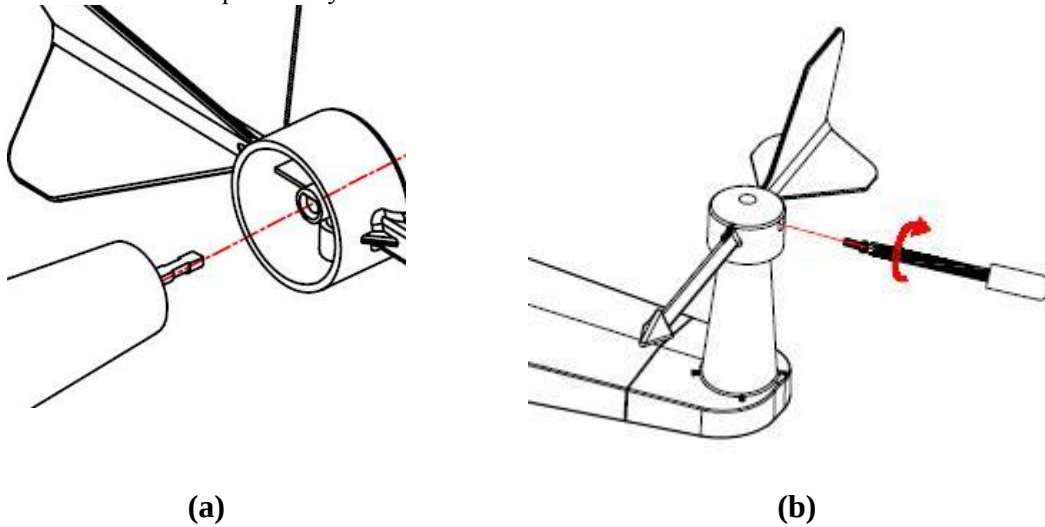


Figure 2

5.3.2 Install Wind Cups

Reference Figure 3. (a) push the wind cups on to the shaft. (b) tighten the set screw with a precision screw driver and make sure the wind cups spin freely.

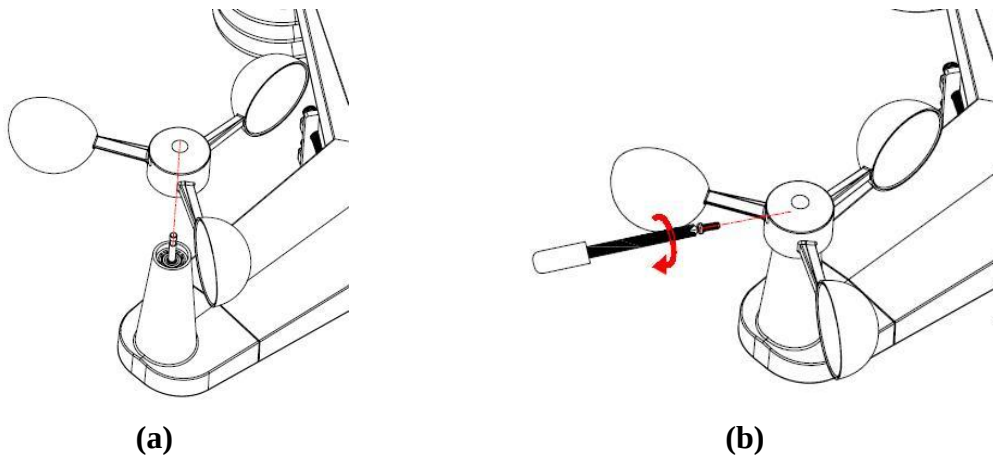


Figure 3

5.3.3 Install the Rain Gauge Funnel

Reference Figure 4. Install the rain gauge funnel. Rotate clockwise to attach the funnel to the sensor array.

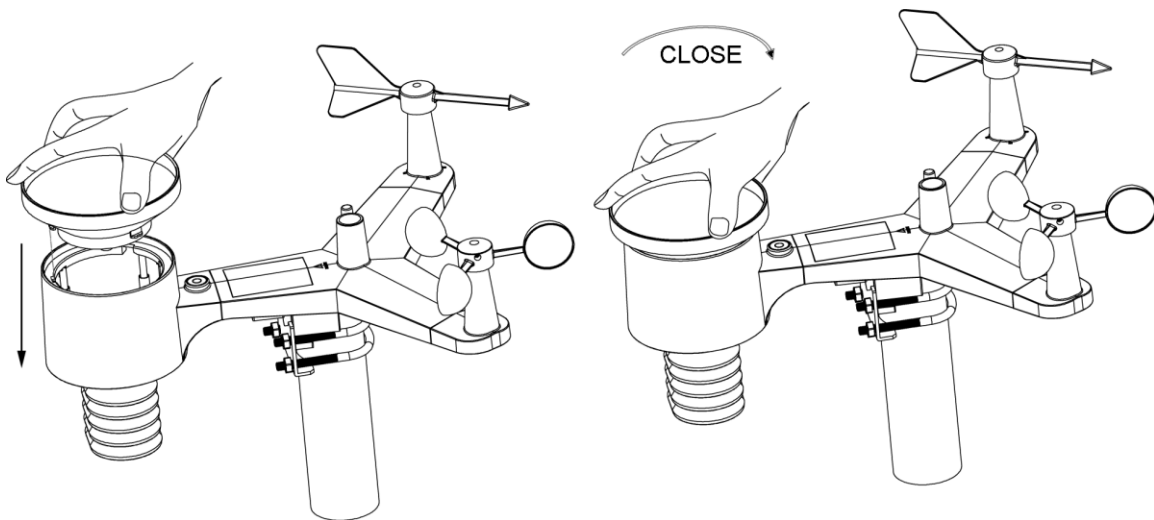


Figure 4

5.3.4 Install Batteries

Reference Figure 5. Insert 3 x AA non-rechargeable batteries (not included) into the battery compartment. The LED indicator on the back of the transmitter will turn on for four seconds, and then flash once every 16 seconds (the sensor transmission update period).

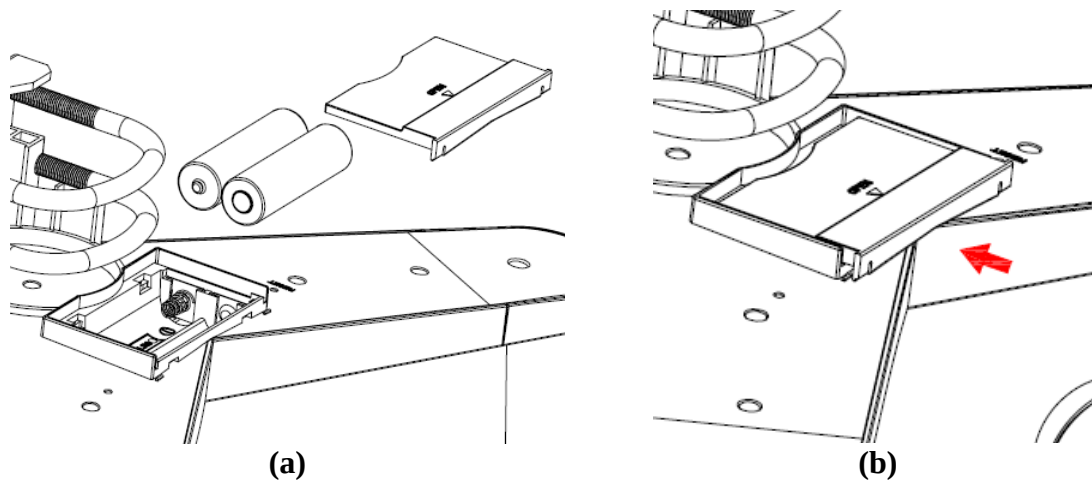


Figure 5

 **Note:** If the LED does not light up, or stays on permanently, make sure the battery polarity is correct, or the batteries are fresh. Do not install the batteries backwards. You can permanently damage the thermo-hygrometer.

 **Note:** We recommend lithium batteries for cold weather climates, but alkaline batteries are sufficient for most climates. We do not recommend rechargeable batteries. They have lower voltages, do not operate well at wide temperature ranges, and do not last as long, resulting in poorer reception.

5.3.5 Install Mounting Pole

Reference Figure 6. The mounting assembly includes two U-Bolts and a bracket that tightens around a 1 to 2" diameter pole (not included) using the four U-Bolt nuts.

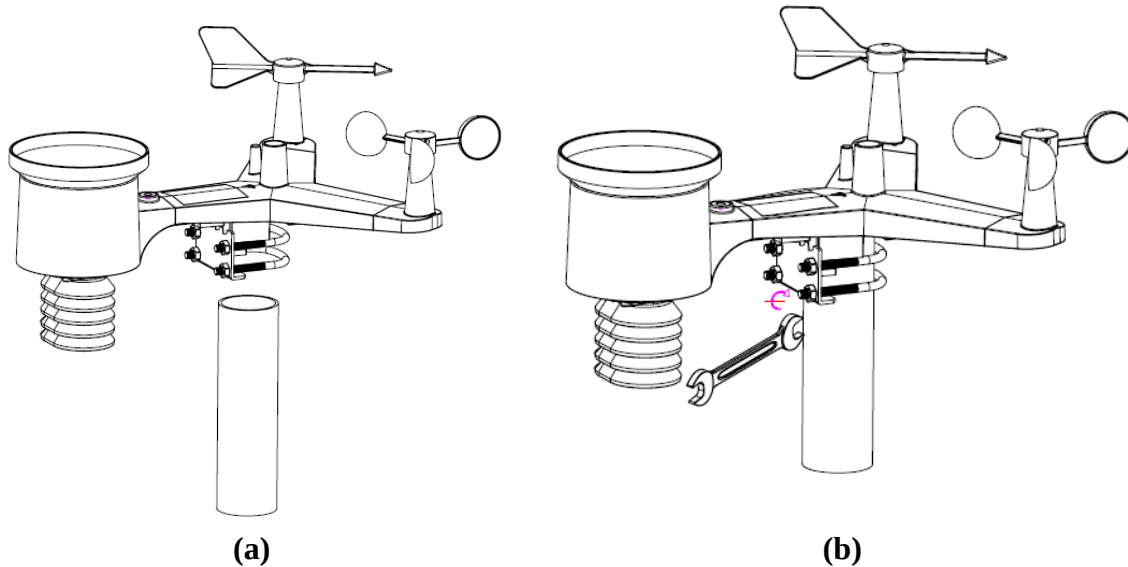


Figure 6

Use the bubble level next to the rain sensor to make sure the sensor array is completely level. If the sensor array is not level, the rain gauge will not measure properly.

5.3.5.1 Aligning the Wind Direction

Locate the four wind vane compass rose indicators of N, E, S, W (representing North, East, South and West) at the base of the wind vane. Align the compass rose direction upon final installation with a compass or GPS.

5.5 Best Practices for Wireless Communication

 **Note:** To insure proper communication, mount the remote sensor(s) upright on a vertical surface, such as a wall. **Do not lay the sensor flat.**

Wireless communication is susceptible to interference, distance, walls and metal barriers. We recommend the following best practices for trouble free wireless communication.

1. **Electro-Magnetic Interference (EMI).** Keep the console several feet away from computer monitors and TVs.
2. **Radio Frequency Interference (RFI).** If you have other 915 MHz devices and communication is intermittent, try turning off these other devices for troubleshooting purposes. You may need to relocate the transmitters or receivers to avoid intermittent communication.
3. **Line of Sight Rating.** This device is rated at 300 feet line of sight (no interference, barriers or walls) but typically you will get 100 feet maximum under most real-world installations, which include passing through barriers or walls.
4. **Metal Barriers.** Radio frequency will not pass through metal barriers such as aluminum siding. If you have metal siding, align the remote and console through a window to get a clear line of sight.

The following is a table of reception loss vs. the transmission medium. Each “wall” or obstruction decreases the transmission range by the factor shown below.

Medium	RF Signal Strength Reduction
Glass (untreated)	5-15%
Plastics	10-15%
Wood	10-40%
Brick	10-40%
Concrete	40-80%
Metal	90-100%

5.6 Display Console

The front and back of the display console is shown in Figure 7 and Figure 8.

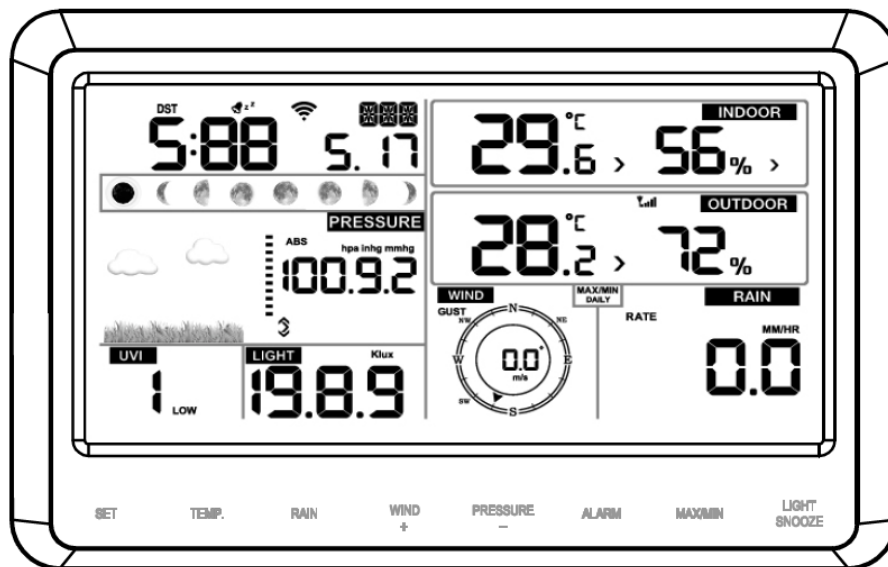


Figure 7

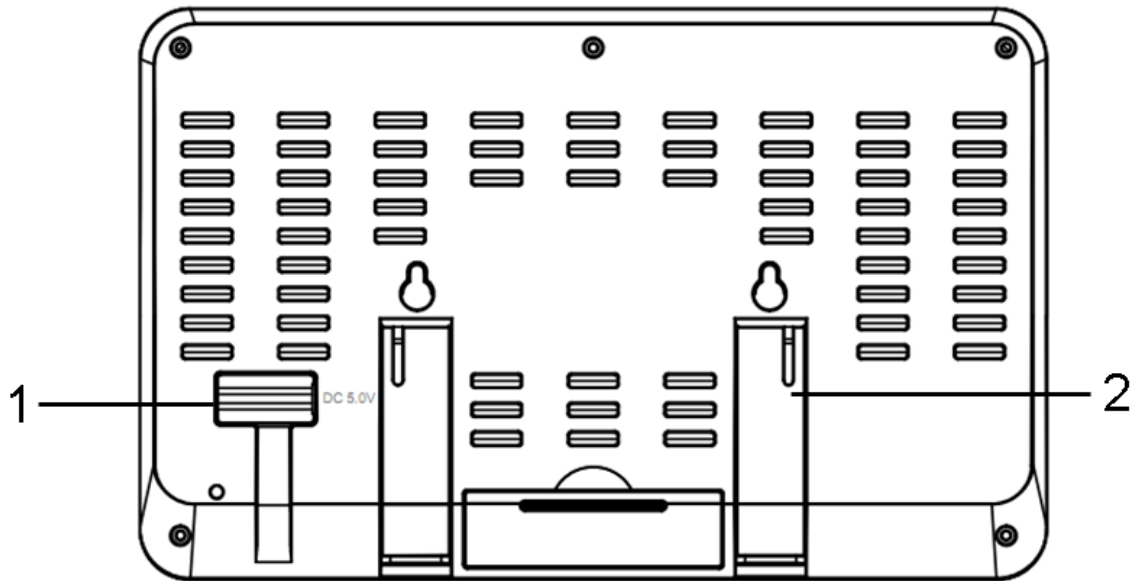


Figure 8

Reference Figure 8 (1). Connect the display console power jack to AC power with the power adapter (included), (2) unfold the desk stand, and place 5 to 10 feet from the sensor array, and wait several minutes for the remote sensors to synchronize with the display console.

6. Display Console Operation

6.1 Screen Display

The display console home screen layout is shown in Figure 9.

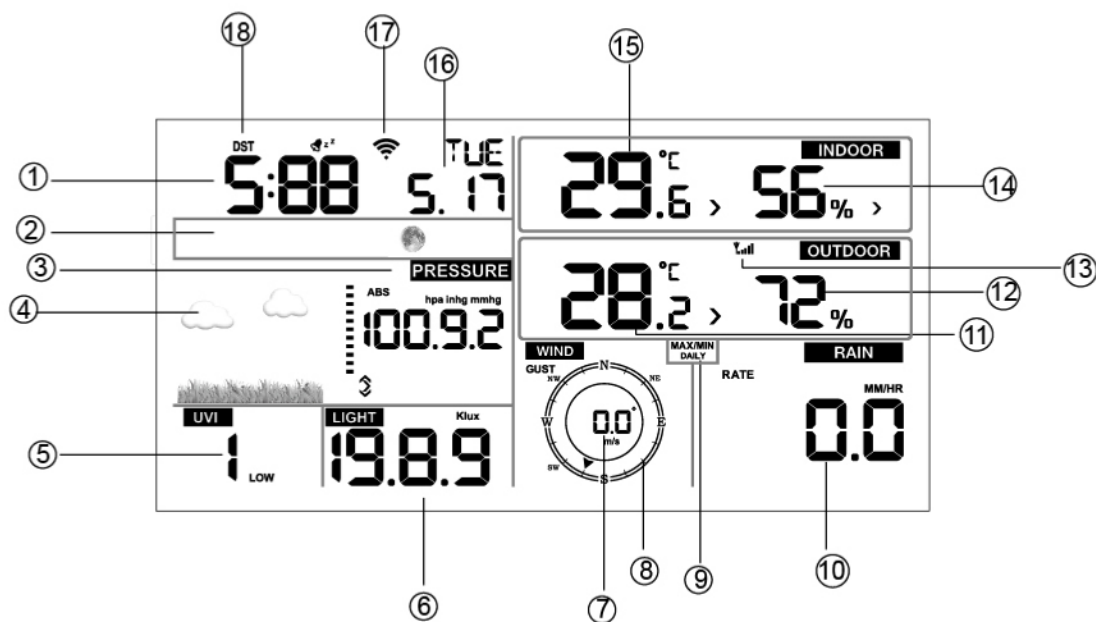


Figure 9

No	Description	No	Description
1	Time	10	Rainfall
2	Moon phase	11	Outdoor temperature
3	Barometric Pressure	12	Outdoor humidity
4	Weather forecast	13	RF icon
5	UV index	14	Indoor humidity
6	Solar Radiation	15	Indoor temperature
7	Wind speed	16	Date
8	Wind direction	17	WIFI icon
9	MAX/MIN Daily	18	DST

6.2 Console Initialization

After the console is connected to AC power, the console will display the software version number two seconds after power up.



Figure 10

The console will display all of the LCD segments for three seconds after power up as shown in Figure 11, the indoor conditions will immediately update, and the outdoor sensor array will register within a few minutes.

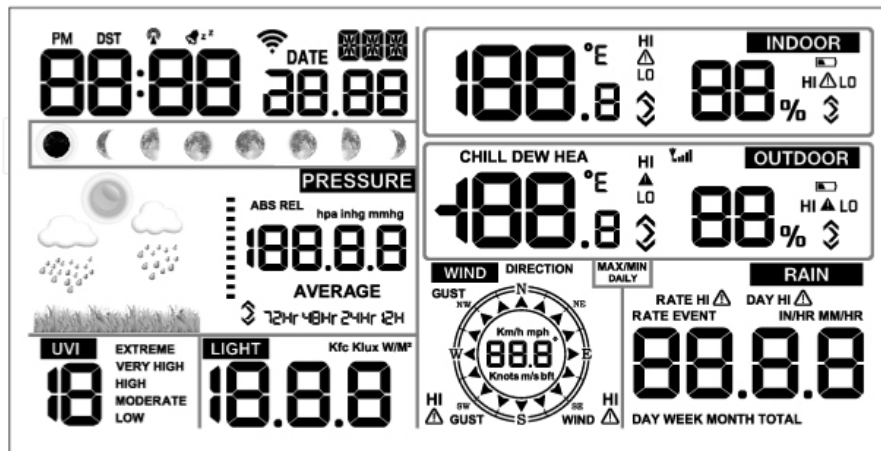


Figure 11

6.2.1 Button Operation

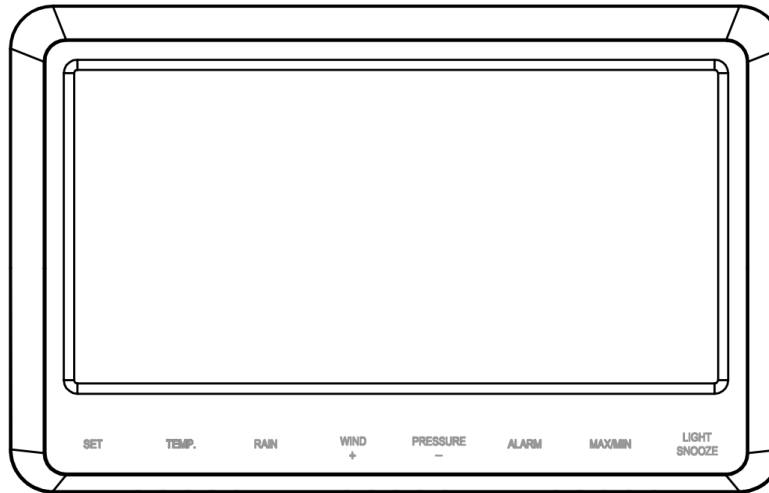


Figure 12

The console has 8 buttons at the bottom for easy operation:

Key	Description
SET	Press and hold to enter the SET mode.
TEMP.	- Press to switch between Outdoor Temperature, Wind Chill, Heat Index, Dew Point. - To bypass RF reception, press and hold while powering up the console (connecting the AC adapter with batteries removed).
RAIN	Press to switch between Rain Rate (in/hr), Rain Event, Rain Day, Rain Week, Rain Month, and Rain Total.
WIND +	- Press to switch between average wind speed, wind gust and wind direction. - While in SET mode, press to increase the value. Press and hold for two seconds to increase the value rapidly.
PRESSURE -	- Press to switch between Relative Pressure (current), and 12hr, 24hr, 48hr and 72hr average Relative Pressure. - While in SET mode, press to decrease the value. Press and hold for two seconds to decrease the value rapidly.
ALARM	Press to switch between high and low alarms
MAX/MIN	Press to switch between minimum and maximum values.
LIGHT/SNOOZE	- Press to adjust the LCD backlight brightness (high, medium and off). - Press to exit the SET mode at any time.



6.3 Set Mode

Press and hold the **SET** button for two seconds to enter the SET Mode. To proceed to the next setting,

press (do not hold) the **SET** button.

To exit the SET mode at any time, press the **LIGHT / SNOOZE** button.

Figure 13 summarizes the set mode sequence and commands.

Command	Mode	Settings	Image
[SET] + 2 seconds	Enter Set Mode, Beep On or Off	Press [WIND +] to switch OFF and ON. This will prevent the beep from sounding when pressing any button.	
[SET]	Clear Max/Min	Press [WIND +] to switch OFF and ON. When set to ON, the minimum and maximum values reset every day at midnight (00:00). When set to OFF, the minimum and maximum values must be reset manually.	
[SET]	Daylight Savings Time (DST)	Press [WIND +] to switch DST OFF and ON. Set to ON (most locations) if you observe daylight savings time, and the clock will automatically adjust twice per year. Set to OFF (Arizona and Hawaii) if you do not observe DST.	
[SET]	Time Zone	Press [WIND +] or [PRESSURE -] to adjust up or down (-12 to 12). The default time zone is -5 (EST). To find your time zone settings, please reference Figure 14.	
[SET]	12 hour / 24 Hour Format	Press [WIND +] to switch hour format between 12 hour and 24 hour format.	
[SET]	Hour	Press [WIND +] or [PRESSURE -] to adjust hour up or down.	
[SET]	Minute	Press [WIND +] or [PRESSURE -] to adjust minute up or down.	
[SET]	Date Format	Press [WIND +] to switch between MM-DD (month-day) and DD-MM (day-month)	
[SET]	Year	Press [WIND +] or [PRESSURE -] to adjust year up or down	
[SET]	Month	Press [WIND +] or [PRESSURE -] to adjust month up or down	
[SET]	Day	Press [WIND +] or [PRESSURE -] to adjust day up or down	
[SET]	Pressure Units of Measure	Press [WIND +] to change units of measure between hpa, mmHg or inHg.	

[SET]	Relative Pressure Calibration	Press [WIND +] or [PRESSURE -] to adjust relative pressure up or down Reference Section 6.4.4 for details on calibration of relative pressure.	
[SET]	Light Units of Measure	Press [WIND +] to change light units of measure between lux, fc, or w/m2	
[SET]	Temperature Units of Measure	Press [WIND +] to change temperature units of measure between °F and °C.	
[SET]	Wind Units of Measure	Press [WIND +] to change wind units of measure between km/h, mph, knots, m/s and bft.	
[SET]	Rain Units of Measure	Press [WIND +] to change rain units of measure between in and mm.	
[SET]	Hemisphere	Press [WIND +] to change hemisphere between NTH (northern) and STH (southern). This setting effects the moon phase display.	
[SET]	Exit Set Mode		

[SET] + 2 seconds means press and hold the SET button for two seconds.

[SET] means press the SET button.

Figure 13

6.3.1 Time Zones

The following table summarizes time zones around the world.

Hours from GMT	Time Zone	Cities
-12	IDLW: International Date Line West	---
-11	NT: Nome	Nome, AK
-10	AHST: Alaska-Hawaii Standard CAT: Central Alaska HST: Hawaii Standard	Honolulu, HI
-9	YST: Yukon Standard	Yukon Territory
-8	PST: Pacific Standard	Los Angeles, CA, USA
-7	MST: Mountain Standard	Denver, CO, USA
-6	CST: Central Standard	Chicago, IL, USA
-5	EST: Eastern Standard	New York, NY, USA
-4	AST: Atlantic Standard	Caracas
-3	---	São Paulo, Brazil
-2	AT: Azores	Azores, Cape Verde Islands
-1	WAT: West Africa	---

Hours from GMT	Time Zone	Cities
0	GMT: Greenwich Mean WET: Western European	London, England
1	CET: Central European	Paris, France
2	EET: Eastern European	Athens, Greece
3	BT: Baghdad	Moscow, Russia
4	---	Abu Dhabi, UAE
5	---	Tashkent
6	---	Astana
7	---	Bangkok
8	CCT: China Coast	Beijing
9	JST: Japan Standard	Tokyo
10	GST: Guam Standard	Sydney
11	---	Magadan
12	IDLE: International Date Line East NZST: New Zealand Standard	Wellington, New Zealand

Figure 14

6.4 Barometric Pressure Display

6.4.1 Viewing Absolute vs. Relative Pressure

To switch between absolute and relative pressure, press and hold the [PRESSURE -] button for two seconds.

Absolute pressure is the measured atmospheric pressure, and is a function of altitude, and to a lesser extent, changes in weather conditions.

Absolute pressure is not corrected to sea-level conditions.

Relative pressure is corrected to sea-level conditions. For further discussion of relative pressure and calibration, reference Section 6.4.4.

6.4.2 Rate of Change of Pressure Graph

The rate of change of pressure graphic is shown to the left of the barometric pressure and signifies the difference between the daily average pressure and the 30 day average (in hPa).



Figure 15

6.4.3 Viewing Pressure History

Press the [PRESSURE -] button to view the 12 hour, 24 hour, 48 hour and 72 hour pressure average.

6.4.4 Relative Pressure Calibration Discussion

To compare pressure conditions from one location to another, meteorologists correct pressure to sea-level conditions. Because the air pressure decreases as you rise in altitude, the sea-level corrected pressure (the pressure your location would be at if located at sea-level) is generally higher than your measured pressure.

Thus, your absolute pressure may read 28.62 inHg (969 mb) at an altitude of 1000 feet (305 m), but the relative pressure is 30.00 inHg (1016 mb).

The standard sea-level pressure is 29.92 in Hg (1013 mb). This is the average sea-level pressure around the world. Relative pressure measurements greater than 29.92 inHg (1013 mb) are considered high pressure and relative pressure measurements less than 29.92 inHg are considered low pressure.

To determine the relative pressure for your location, locate an official reporting station near you (the internet is the best source for real time barometer conditions, such as Weather.com or Wunderground.com), and set your weather station to match the official reporting station.

6.5 Rain Display

6.5.1 Rain Increments of Measure

Press the RAIN button to switch between Rain Rate (in/hr), Rain Event, Rain Day, Rain Week, Rain Month, and Rain Total.

6.5.2 Resetting Rain

To reset the rain totals, press and hold the RAIN button for two seconds.

- Resetting the weekly rain also resets the daily rain.
- Resetting the monthly rain also resets the daily and weekly rain.

- Resetting the total rain also resets the monthly, weekly and daily rain.

6.5.3 Increments of Rain Definitions

- Rain rate** is defined as the last 10 minutes of rainfall, multiplied by six (10 minutes x 6 = 1 hour). This is also referred to as instantaneous rain per hour.
- Rain event** is defined as continuous rain, and resets to zero if rainfall accumulation is less than 10 mm (0.039 in) in a 24 hour period.
- Daily Rain** is defined as the rainfall since midnight (00:00).
- Weekly Rain** is defined as the calendar week total, and resets on Sunday morning at midnight (Sunday thru Saturday).
- Monthly Rain** is defined as the calendar month total, and resets on the first day of the Month.
- Total Rain** is defined as the running total since station was powered up.

6.6 Wind Display

Press the [WIND +] button to switch between average wind speed, wind gust and wind direction.

- Wind speed is defined as the average wind speed in the 16 second update period.
- Wind gust is defined as the peak wind speed in the 16 second update period.

6.7 Temperature Display

If temperature is lower than minimum range, the temperature field will display dashes (--.-).

If temperature is higher than maximum range, the temperature field will display dashes (--.-).

6.7.1 Wind Chill, Dew Point and Heat Index Display

Press the [TEMP] button to switch between Outdoor Temperature, Wind Chill, Heat Index, Dew Point.

6.8 Alarms

6.8.1 Viewing High and Low Alarms

To view the high alarm settings, press (do not hold) the **ALARM** button, and the high alarms will be displayed, as shown in Figure 16 (a).

To view the low alarm settings, press the **ALARM** button again, and the low alarms will be displayed, as shown in Figure 16 (b).

To return to normal mode, press the **ALARM** button again.



Figure 16

6.8.1.1 Rain Alarm

While the High Alarm is displayed (reference Section 6.8.1), press the **RAIN** button to display the rain rate and daily rain alarm values.

6.8.1.2 Wind Alarm

While the High Alarm is displayed (reference Section 6.8.1), press the **WIND** button to display the wind speed and wind gust alarm values.

6.8.2 Setting High and Low Alarms

Press and hold the **ALARM** button for two seconds to enter the ALARM Set Mode. To save and proceed to the next alarm setting, press (do not hold) the **SET** button.

To exit the alarm mode at any time, press the **LIGHT / SNOOZE** button.

Figure 17Figure 13 summarizes the alarm mode sequence and commands.

Command	Mode	Settings
[ALARM] + 2 seconds	Enter Alarm Set Mode, Alarm Hour	Press [WIND +] or [PRESSURE -] to adjust alarm hour up or down. Press [ALARM] to turn the time alarm on or off. When the alarm is on, the alarm time icon  will appear.
[SET]	Alarm Minute	Press [WIND +] or [PRESSURE -] to adjust alarm minute up or down. Press [ALARM] to turn the time alarm on. The alarm time icon  will appear. Press [ALARM] again to turn the time alarm off. The alarm time icon will disappear.
[SET]	Alarm High Indoor Temperature	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm icon  will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm Low Indoor Temperature	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm icon  will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm High Indoor Humidity	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm icon  will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.

[SET]	Alarm Low Indoor Humidity	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  icon LO will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm High Outdoor Temperature	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  icon HI will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm Low Outdoor Temperature	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  icon LO will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm High Outdoor Humidity	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  icon HI will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm Low Outdoor Humidity	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  icon LO will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.

[SET]	Alarm High Wind Speed	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  HI will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm High Wind Gust	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  HI will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm High Rain Rate	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  HI will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Alarm High Daily Rain	Press [WIND +] or [PRESSURE -] to adjust alarm value up or down. Press [ALARM] to turn the alarm on. The alarm  HI will appear. Press [ALARM] to turn the alarm off. The alarm icon will disappear.
[SET]	Exit alarm settings mode.	

[ALARM] + 2 seconds means press and hold the ALARM button for two seconds.

[ALARM] means press the ALARM button.

Figure 17

6.9 Max/Min Mode

6.9.1 Viewing Max/Min Values

To view the max value, press (do not hold) the **MAX/MIN** button, and the max values will be displayed, as shown in Figure 18 (a).

To view the low alarm settings, press the **MAX/MIN** button again, and the min values will be displayed, as shown in Figure 18 (b).

To return to normal mode, press the **ALARM** button again.



Figure 18

6.9.1.1 Display Wind Chill, Heat Index vs. Dew Point Max/Min Values

While the **max values** are displayed as outlined in Section 6.9.1, press the **TEMP** button once to view the heat index, twice to view the dew point, and a third time to return to outdoor temperature.

While the **min values** are displayed as outlined in Section 6.9.1, press the **TEMP** button once to view the wind chill, twice to view the dew point, and a third time to return to outdoor temperature.

6.9.1.2 Display Wind Speed vs. Wind Gust Max Values

While the **max values** are displayed as outlined in Section 6.9.1, press the **WIND +** button once to view the max wind gust, and twice to return to wind speed.

6.9.1.3 Display Rain Rate, Daily Rain, Weekly Rain and Monthly Rain Max Values

While the **max values** are displayed as outlined in Section 6.9.1, press the **RAIN** button once to view the max daily rain, twice to view the max weekly rain, three times to view the max monthly rain, four times to return to the max rain rate.

6.9.1.4 Display Absolute and Relative Pressure Min and Max Values

While the **max values** are displayed as outlined in Section 6.9.1, press and hold the **PRESSURE** button for two seconds to view the absolute pressure, and press and hold the **PRESSURE** button for two seconds again to return to relative pressure.

While the **min values** are displayed as outlined in Section 6.9.1, press and hold the **PRESSURE** button for two seconds to view the absolute pressure, and press and hold the **PRESSURE** button for two seconds again to return to relative pressure.

6.10 Calibration

6.10.1 Calibration Settings

Press and hold the **TEMP.** and **MAX/MIN** buttons at the same time for 5 seconds to enter calibration mode. The **CAL** icon will be displayed.

To save and proceed to the next calibration setting, press (do not hold) the **SET** button.

To exit the calibration mode at any time, press the **LIGHT / SNOOZE** button.

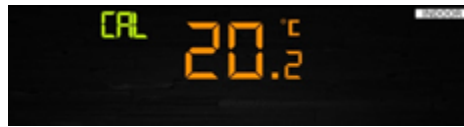


Figure 19

Figure 20 summarizes the set mode sequence and commands.

Command	Mode	Settings
TEMP. and MAX/MIN + 5 seconds	Enter Calibration Mode, Indoor Temperature	Press [WIND +] or [PRESSURE -] to adjust the indoor temperature up or down. To restore to factory default, press [ALARM].
[SET]	Indoor Humidity	Press [WIND +] or [PRESSURE -] to adjust the indoor humidity up or down. To restore to factory default, press [ALARM].
[SET]	Outdoor Temperature	Press [WIND +] or [PRESSURE -] to adjust the outdoor temperature up or down. To restore to factory default, press [ALARM].
[SET]	Outdoor Humidity	Press [WIND +] or [PRESSURE -] to adjust the outdoor humidity up or down. To restore to factory default, press [ALARM].
[SET]	Absolute Pressure	Press [WIND +] or [PRESSURE -] to adjust the absolute pressure up or down. To restore to factory default, press [ALARM]. Note: The absolute pressure calibration affects the relative pressure by the same amount. It is recommend you calibrate the relative pressure only, per Section 6.3.
[SET]	Wind Direction	Press [WIND +] or [PRESSURE -] to adjust the wind direction up or down. To restore to factory default, press [ALARM].
[SET]	Wind Speed Factor	Press [WIND +] or [PRESSURE -] to adjust the wind speed factor up or down. To restore to factory default, press [ALARM].
[SET]	Rain Factor	Press [WIND +] or [PRESSURE -] to adjust the rain factor up or down. To restore to factory default, press [ALARM].
[SET]	Exit calibration mode	

Figure 20

6.10.2 Calibration Ranges

The following table summarizes the permissible calibration ranges.

Parameter	Range
Indoor Temperature	± 9 °F
Indoor Humidity	± 9%
Outdoor Temperature	± 9 °F
Outdoor Humidity	± 9%
Absolute Pressure	± 10 hpa (± 2.95 inHg)
Wind Direction	± 180 °
Wind Speed Factor	0.5 to 1.5
Rain Factor	0.5 to 1.5

Figure 21

6.10.3 Calibration Discussion

The purpose of calibration is to fine tune or correct for any sensor error associated with the devices margin of error. Errors can occur due to electronic variation (example, the temperature sensor is a resistive thermal device or RTD, the humidity sensor is a capacitance device), mechanical variation, or degradation (wearing of moving parts, contamination of sensors).

Calibration is only useful if you have a known calibrated source you can compare it against, and is optional. This section discusses practices, procedures and sources for sensor calibration to reduce manufacturing and degradation errors. Do not compare your readings obtained from sources such as the internet, radio, television or newspapers. The purpose of your weather station is to measure conditions of your surroundings, which vary significantly from location to location.

Parameter	Type of Calibration	Default	Typical Calibration Source
Temperature	Offset	Current Value	Red Spirit or Mercury Thermometer (1)
Humidity	Offset	Current Value	Sling Psychrometer (2)
ABS Barometer	Offset	Current Value	Calibrated laboratory grade barometer
REL Barometer	Offset	Current Value	Local airport (3)
Wind Direction	Offset	Current Value	GPS, Compass (4)
Wind	Gain	1.00	Calibrated laboratory grade wind meter (5)
Rain	Gain	1.00	Sight glass rain gauge with an aperture of at least 4" (6)

Figure 22

- (1) Temperature errors can occur when a sensor is placed too close to a heat source (such as a building structure, the ground or trees).

To calibrate temperature, we recommend a mercury or red spirit (fluid) thermometer. Bi-metal (dial) and digital thermometers (from other weather stations) are not a good source and have their own margin of error. Using a local weather station in your area is also a poor source due to changes in location, timing (airport weather stations are only updated once per hour) and possible calibration errors (many official weather stations are not properly installed and calibrated).

Place the sensor in a shaded, controlled environment next to the fluid thermometer, and allow the sensor to stabilize for 48 hours. Compare this temperature to the fluid thermometer and adjust the console to match the fluid thermometer.

-
- (2) Humidity is a difficult parameter to measure electronically and drifts over time due to contamination. In addition, location has an adverse affect on humidity readings (installation over dirt vs. lawn for example).

Official stations recalibrate or replace humidity sensors on a yearly basis. Due to manufacturing tolerances, the humidity is accurate to $\pm 5\%$. To improve this accuracy, the indoor and outdoor humidity can be calibrated using an accurate source, such as a sling psychrometer.

- (3) The display console displays two different pressures: absolute (measured) and relative (corrected to sea-level).

To compare pressure conditions from one location to another, meteorologists correct pressure to sea-level conditions. Because the air pressure decreases as you rise in altitude, the sea-level corrected pressure (the pressure your location would be at if located at sea-level) is generally higher than your measured pressure.

Thus, your absolute pressure may read 28.62 inHg (969 mb) at an altitude of 1000 feet (305 m), but the relative pressure is 30.00 inHg (1016 mb).

The standard sea-level pressure is 29.92 in Hg (1013 mb). This is the average sea-level pressure around the world. Relative pressure measurements greater than 29.92 inHg (1013 mb) are considered high pressure and relative pressure measurements less than 29.92 inHg are considered low pressure.

To determine the relative pressure for your location, locate an official reporting station near you (the internet is the best source for real time barometer conditions, such as Weather.com or Wunderground.com), and set your weather station to match the official reporting station.

- (4) Only use this if you improperly installed the weather station sensor array, and did not point the direction reference to true north.
- (5) Wind speed is the most sensitive to installation constraints. The rule of thumb for properly installing a wind speed sensor is 4 x the distance of the tallest obstruction. For example, if your house is 20' tall and you mount the sensor on a 5' pole:

$$\text{Distance} = 4 \times (20 - 5)' = 60'.$$

Many installations are not perfect and installing the weather station on a roof can be difficult. Thus, you can calibrate for this error with a wind speed multiplier.

In addition to the installation challenges, wind cup bearings (moving parts) wear over time.

Without a calibrated source, wind speed can be difficult to measure. We recommend using a calibrated wind meter and a constant speed, high speed fan.

- (6) The rain collector is calibrated at the factory based on the funnel diameter. The bucket tips every 0.01" of rain (referred to as resolution). The accumulated rainfall can be compared to a sight glass rain gauge with an aperture of at least 4".

Make sure you periodically clean the rain gauge funnel.

6.11 Restoring the Console to Factory Default

To restore the console to factory default, perform the following steps:

1. Remove the power from the console by removing the batteries and disconnecting the AC adapter.
2. Apply power by connecting the AC adapter.
3. Wait for all of the segments to appear on the screen, as shown in Figure 11.
4. Press and hold the **WIND/+** and **PRESSURE/-** buttons at the same time until the console power up sequence is complete (about 5 seconds).
5. Replace the batteries.

6.12 Resynchronize Wireless Sensor

Press and hold the **LIGHT /SNOOZE** button for 5 seconds, and the console will re-register the wireless sensor.

6.13 Backlight Operation

6.13.1 With AC Adapter

The backlight can only be continuously on when the AC adapter is permanently on. When the AC adapter is disconnected, the backlight can be temporarily turned on.

Press the **LIGHT SNOOZE** button to adjust the brightness between High, Low and Off.

6.13.2 Without AC Adapter

To reduce power consumption, the console will sleep on battery power only, and will not send data to the Internet.

To temporarily turn on the back light for 15 seconds, press the **LIGHT SNOOZE** button.

6.14 Tendency Arrows

Tendency arrows allow you to quickly determine if temperature or pressure are rising and falling in a three hour update period, updated every 30 minutes.

Figure 23 defines the conditions for rising and falling pressure every 3 hours.

Tendency indicators	Condition	Humidity Change per 3 Hours	Temperature Change per 3 Hours
	Rising	Rising > 3%	Rising > 1° C / 2 °F
	Steady	Change ≤ ±3%	Change ≤ ± 1 ° C / 2 ° F
	Falling	Falling > 3%	Falling > 1° C / 2 °F

Figure 23

6.15 Wireless Signal Strength Indicator

The wireless signal strength displays reception quality. If no signal is lost, the signal strength indicator will display 5 bars. If the signal is lost once, four bars will be displayed, as shown in Figure 24.

Five Bars	Four Bars
-----------	-----------

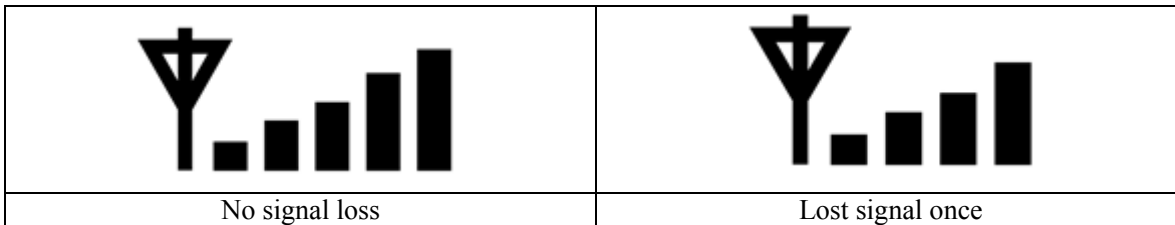


Figure 24

6.16 Weather Forecasting

The five weather icons are Sunny, Partly Cloudy, Cloudy, Rainy and Stormy.

The forecast icon is based on the rate of change of barometric pressure. Please allow at least one month for the weather station to learn the barometric pressure over time.

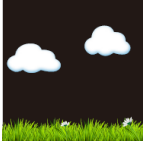
Sunny	Partly Cloudy	Cloudy	Rainy	Stormy	Snowy
					
Pressure increases for a sustained period of time	Pressure increases slightly, or initial power up	Pressure decreases slightly	Pressure decreases for a sustained period of time	Pressure rapidly decreases	Pressure decreases for a sustained period of time and temperature is below freezing

Figure 25

6.16.1 Weather Forecasting Description and Limitations

In general, if the rate of change of pressure increases, the weather is generally improving (sunny to partly cloudy). If the rate of change of pressure decreases, the weather is generally degrading (cloudy, rainy or stormy). If the rate of change is relatively steady, it will read partly cloudy.

The reason the current conditions do not match the forecast icon is because the forecast is a prediction 24-48 hours in advance. In most locations, this prediction is only 70% accurate and it is a good idea to consult the National Weather Service for more accurate weather forecasts. In some locations, this prediction may be less or more accurate. However, it is still an interesting educational tool for learning why the weather changes.

The National Weather Service (and other weather services such as Accuweather and The Weather Channel) have many tools at their disposal to predict weather conditions, including weather radar, weather models, and detailed mapping of ground conditions.

7. Live Internet Publishing

The WS-2902 sends data to three free hosting services:

Hosting Service	Website	Description
Weather Underground	WeatherUndeground.com	Weather Underground is a free weather hosting service that allows you to send and view your weather station data real-time, view graphs and gauges, import text data for more detailed analysis and use iPhone, iPad and Android applications available at Wunderground.com. Weather Underground is a subsidiary of The Weather Channel and IBM.
WeatherBug Community	backyard.weatherbug.com	WeatherBug Community is an extension of the WeatherBug community of weather stations. WeatherBug is a brand owned by Earth Networks that provides live weather data and maintains a mesoscale network of over 8,000 weather stations.
Weather Cloud	WeatherCloud.net	Weathercloud is a real-time weather social network formed by observers from around the world.

The WS-2902 weather station sends data to the Internet using your WiFi connection.

7.1 Connecting the Weather Station Console to WiFi

The WiFi feature only works when plugged into AC power due to higher energy requirements.

To connect the weather station to WiFi, you must first download the application from one of the following choices:

- Apple App Store
 - Google Play Store
1. From your mobile device, visit the Apple App Store or Google Play Store and search for the “**WS Tool**” application. Download this application to your mobile device.
 2. Run the application, and select **Add Device**, as shown in Figure 26.



Figure 26

3. Make sure your mobile device is connected to your WiFi network. Enter the password for your router, and select **Save**, as shown in Figure 27.

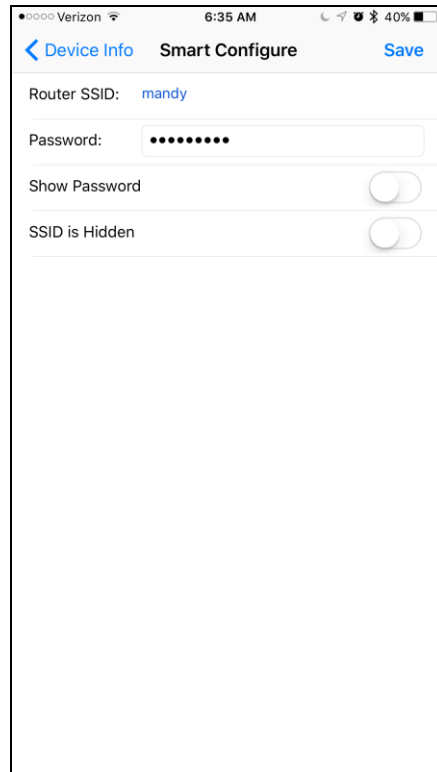


Figure 27

4. Reference Figure 28. If the WiFi icon is not flashing rapidly, (1) press and hold the **RAIN** and **ALARM** buttons at the same time for four seconds. (2) The WiFi icon will begin flashing rapidly, indicating the console is searching for your WiFi network.



Figure 28

5. Once the console has connected to your WiFi network, the devices Mac address and IP address will be displayed, as shown in Figure 29.



Figure 29

6. Enter your Wunderground.com and WeatherCloud.net Station ID, Password and StationNum (see Section 8).

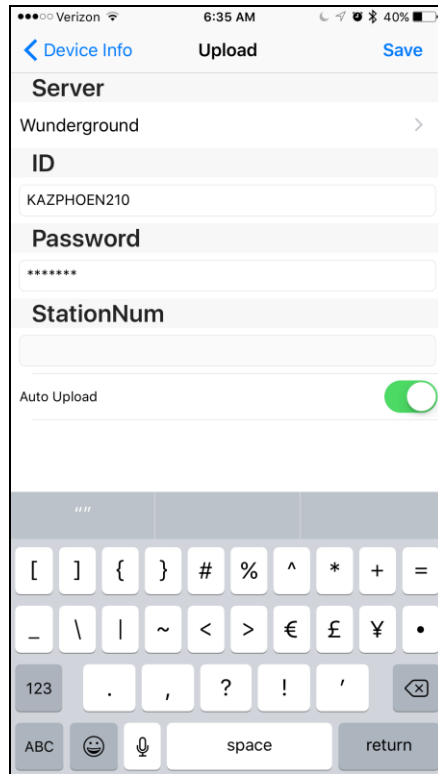


Figure 30

8. Registering with WeatherUnderground.com, WeatherBug.com and WeatherCloud.net

8.1 WeatherUnderground.com

Visit Wunderground.com and select the **Join** link at the top of the page. Select the **Free** sign up option.

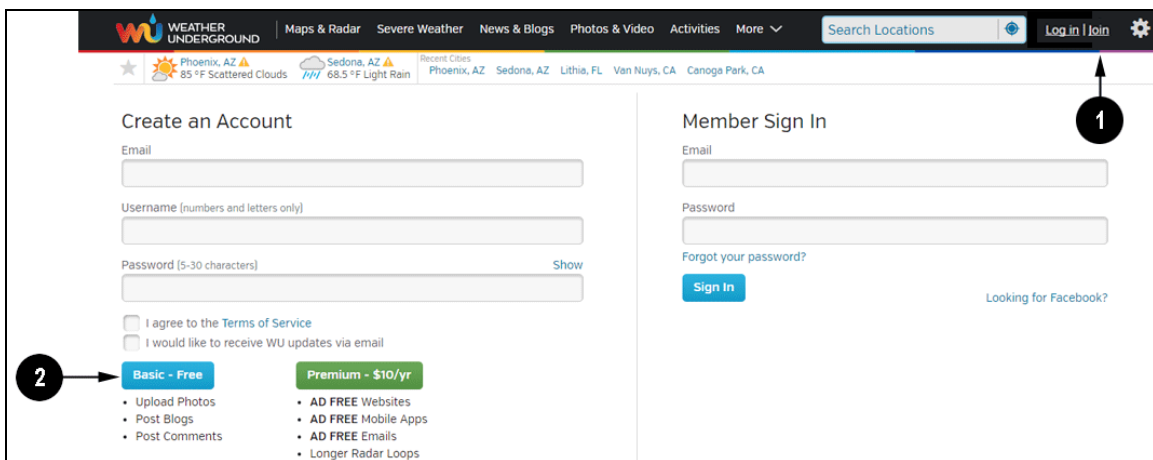


Figure 31

1. Select **More | Register Your PWS**.

2. Click **Send Validation Email**. Respond to the validation email from Wunderground (it may take a few minutes).

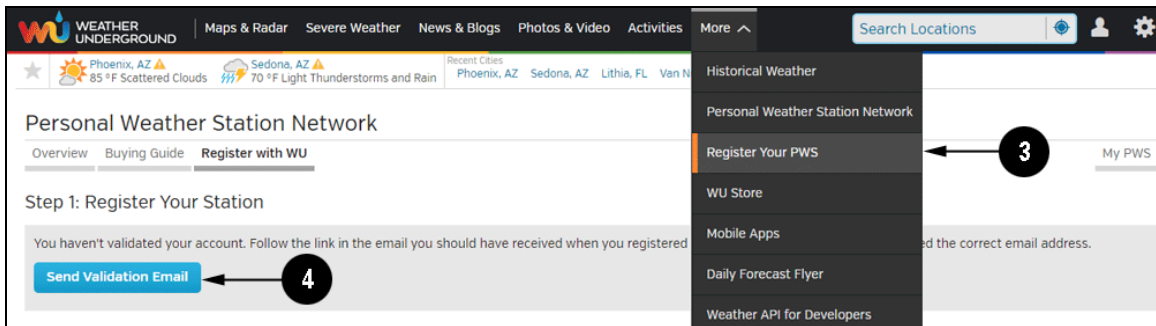


Figure 32

3. Select More | Register Your PWS again and enter all of the information requested.

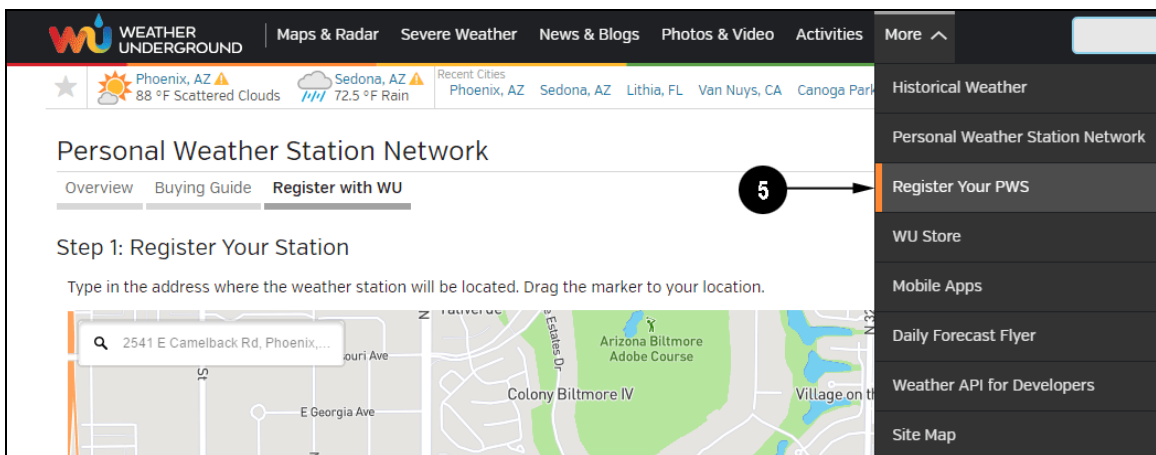


Figure 33

4. After registering your station, make a note of the following:
 - Station ID
 - Station Key / Password

Enter the Station ID (ID), Station Key (Password) and Station Number (StationNum) into the Tool. Leave the StationNum field blank.

Figure 34 is an example, and your station ID and password will be different.

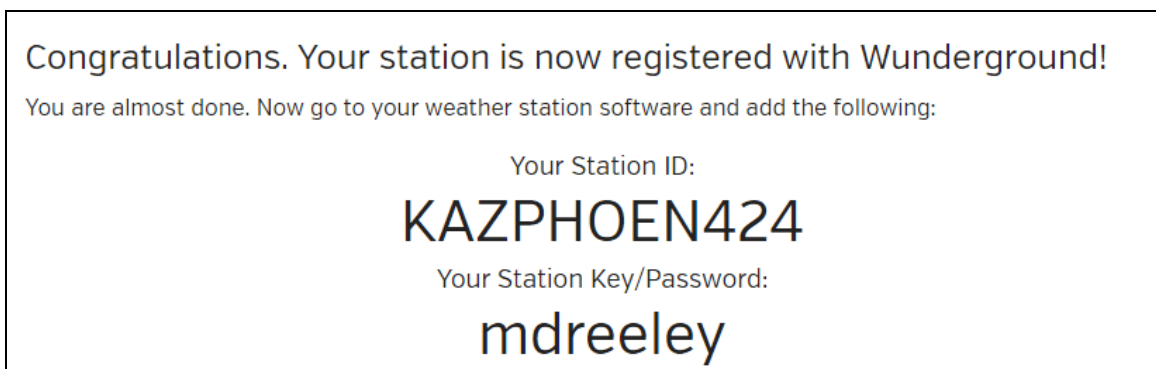



Figure 34

Note: Your station ID will have the form: KSSCCCC###, where K is for USA station (I for international), SS is your state, CCCC is your city and ### is the station number in that city.

In the example above, KAZPHOEN424 is in the USA (K), State of Arizona (AZ), City of Phoenix (PHOEN) and #424.

8.2 WeatherBug.com

Visit <http://pws.ensb.us/> and [Click here](#) to register your station.

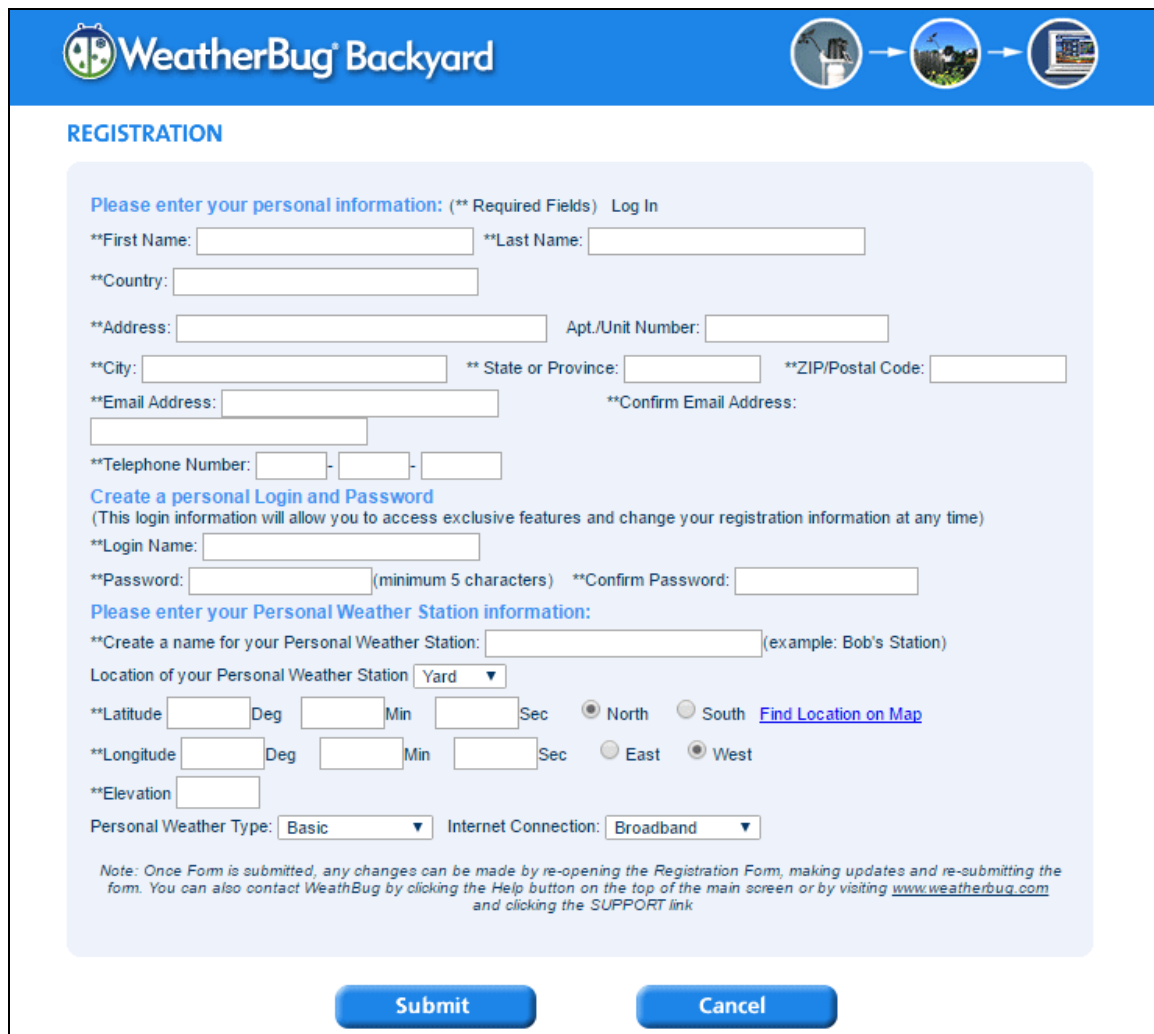

The screenshot shows the 'WeatherBug Backyard' registration page. The header features the WeatherBug logo and three circular icons representing different weather stations. The main content area is titled 'REGISTRATION' and contains a form with the following sections:

- Please enter your personal information: (** Required Fields) Log In**
 - **First Name: [text box] **Last Name: [text box]
 - **Country: [text box]
 - **Address: [text box] Apt./Unit Number: [text box]
 - **City: [text box] **State or Province: [text box] **ZIP/Postal Code: [text box]
 - **Email Address: [text box] **Confirm Email Address: [text box]
 - **Telephone Number: [text box] - [text box] - [text box]
- Create a personal Login and Password**
(This login information will allow you to access exclusive features and change your registration information at any time)
 - **Login Name: [text box]
 - **Password: [text box] (minimum 5 characters) **Confirm Password: [text box]
- Please enter your Personal Weather Station information:**
 - **Create a name for your Personal Weather Station: [text box] (example: Bob's Station)
 - Location of your Personal Weather Station: Yard [dropdown menu]
 - **Latitude [text box] Deg [text box] Min [text box] Sec [radio button North] [radio button South] [Find Location on Map](#)
 - **Longitude [text box] Deg [text box] Min [text box] Sec [radio button East] [radio button West]
 - **Elevation [text box]
 - Personal Weather Type: Basic [dropdown menu] Internet Connection: Broadband [dropdown menu]

Note: Once Form is submitted, any changes can be made by re-opening the Registration Form, making updates and re-submitting the form. You can also contact WeathBug by clicking the Help button on the top of the main screen or by visiting www.weatherbug.com and clicking the SUPPORT link

At the bottom of the form are two blue buttons: 'Submit' and 'Cancel'.

Figure 35

After registering your station, make a note of the following:

- UserName
- Password
- Your Publisher ID
- Your Station Number

Enter the Publisher ID (ID), Password and Station Number (StationNum) into the WS Tool.

8.3 WeatherCloud

1. Visit WeatherCloud.net and enter a Username, Email and Password.



Figure 36

2. Respond to the validation email from WeatherCloud (it may take a few minutes).

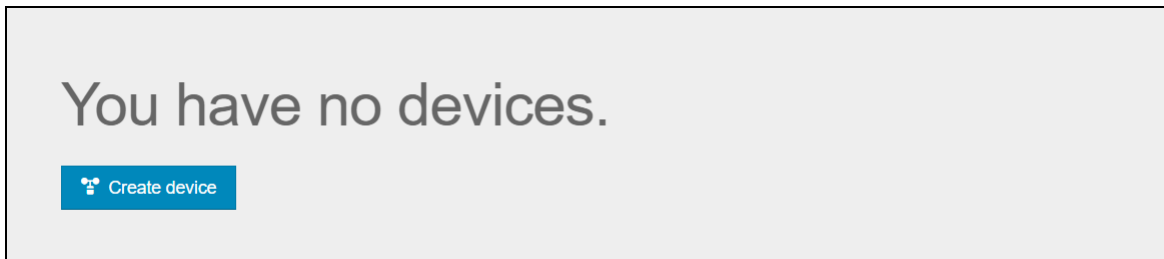


Figure 37

3. Select **Create Device** and enter your weather station information. After registering your station, make a note of the following:

- Weathercloud ID
- Key

Enter the Weathercloud ID (ID), Key (password) into the WS Tool. Leave the Station Number (StationNum) blank.

9. Glossary of Terms

Term	Definition
Absolute Barometric Pressure	Absolute pressure is the measured atmospheric pressure and is a function of altitude, and to a lesser extent, changes in weather conditions. Absolute pressure is not corrected to sea-level conditions. <i>Refer to Relative Barometric Pressure.</i>

Term	Definition																																																																																																																																																																																																																																											
Accuracy	Accuracy is defined as the ability of a measurement to match the actual value of the quantity being measured.																																																																																																																																																																																																																																											
Barometer	A barometer is an instrument used to measure atmospheric pressure.																																																																																																																																																																																																																																											
Calibration	Calibration is a comparison between measurements – one of known magnitude or correctness of one device (standard) and another measurement made in as similar a way as possible with a second device (instrument).																																																																																																																																																																																																																																											
Dew Point	The dew point is the temperature at which a given parcel of humid air must be cooled, at constant barometric pressure, for water vapor to condense into water. The condensed water is called dew. The dew point is a saturation temperature. The dew point is associated with relative humidity. A high relative humidity indicates that the dew point is closer to the current air temperature. Relative humidity of 100% indicates the dew point is equal to the current temperature and the air is maximally saturated with water. When the dew point remains constant and temperature increases, relative humidity will decrease.																																																																																																																																																																																																																																											
Heat Index	The Heat Index, sometimes referred to as the apparent temperature, is a measure of how hot it really feels when relative humidity is factored with the actual air temperature. To find the Heat Index temperature, look at the Heat Index chart below. As an example, if the air temperature is 96°F and the relative humidity is 65%, the heat index (how hot it feels) is 121°F. IMPORTANT: Since heat index values were devised for shady, light wind conditions, exposure to full sunshine can increase heat index values by up to 15°F. Also, strong winds, particularly with very hot, dry air, can be extremely hazardous. The Heat Index Chart shaded zone above 105°F shows a level that may cause increasingly severe heat disorders with continued exposure or physical activity. Heat Index is not calculated below 80°F. Relative Humidity (%) °F <table><tr><td>40</td><td>45</td><td>50</td><td>55</td><td>60</td><td>65</td><td>70</td><td>75</td><td>80</td><td>85</td><td>90</td><td>95</td><td>100</td></tr><tr><td>110</td><td>136</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>108</td><td>130</td><td>137</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>106</td><td>124</td><td>130</td><td>137</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>104</td><td>119</td><td>124</td><td>131</td><td>137</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>102</td><td>114</td><td>119</td><td>124</td><td>130</td><td>137</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>100</td><td>109</td><td>114</td><td>118</td><td>124</td><td>129</td><td>136</td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>98</td><td>105</td><td>109</td><td>113</td><td>117</td><td>123</td><td>128</td><td>134</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>96</td><td>101</td><td>104</td><td>108</td><td>112</td><td>116</td><td>121</td><td>126</td><td>132</td><td></td><td></td><td></td><td></td></tr><tr><td>94</td><td>97</td><td>100</td><td>103</td><td>106</td><td>110</td><td>114</td><td>119</td><td>124</td><td>129</td><td>135</td><td></td><td></td></tr><tr><td>92</td><td>94</td><td>96</td><td>99</td><td>101</td><td>105</td><td>108</td><td>112</td><td>116</td><td>121</td><td>126</td><td>131</td><td></td></tr><tr><td>90</td><td>91</td><td>93</td><td>95</td><td>97</td><td>100</td><td>103</td><td>106</td><td>109</td><td>113</td><td>117</td><td>122</td><td>127</td><td>132</td></tr><tr><td>88</td><td>88</td><td>89</td><td>91</td><td>93</td><td>95</td><td>98</td><td>100</td><td>103</td><td>106</td><td>110</td><td>113</td><td>117</td><td>121</td></tr><tr><td>86</td><td>85</td><td>87</td><td>88</td><td>89</td><td>91</td><td>93</td><td>95</td><td>97</td><td>100</td><td>102</td><td>105</td><td>108</td><td>112</td></tr><tr><td>84</td><td>83</td><td>84</td><td>85</td><td>86</td><td>88</td><td>89</td><td>90</td><td>92</td><td>94</td><td>96</td><td>98</td><td>100</td><td>103</td></tr><tr><td>82</td><td>81</td><td>82</td><td>83</td><td>84</td><td>84</td><td>85</td><td>86</td><td>88</td><td>89</td><td>90</td><td>91</td><td>93</td><td>95</td></tr><tr><td>80</td><td>80</td><td>80</td><td>81</td><td>81</td><td>82</td><td>82</td><td>83</td><td>84</td><td>84</td><td>85</td><td>86</td><td>86</td><td>87</td></tr></table> Heat Index (Apparent Temperature) With Prolonged Exposure and/or Physical Activity <table><tr><td>Extreme Danger</td></tr><tr><td>Heat stroke or sunstroke highly likely</td></tr><tr><td>Danger</td></tr><tr><td>Sunstroke, muscle cramps, and/or heat exhaustion likely</td></tr><tr><td>Extreme Caution</td></tr><tr><td>Sunstroke, muscle cramps, and/or heat exhaustion possible</td></tr><tr><td>Caution</td></tr><tr><td>Fatigue possible</td></tr></table>	40	45	50	55	60	65	70	75	80	85	90	95	100	110	136												108	130	137											106	124	130	137										104	119	124	131	137									102	114	119	124	130	137								100	109	114	118	124	129	136							98	105	109	113	117	123	128	134						96	101	104	108	112	116	121	126	132					94	97	100	103	106	110	114	119	124	129	135			92	94	96	99	101	105	108	112	116	121	126	131		90	91	93	95	97	100	103	106	109	113	117	122	127	132	88	88	89	91	93	95	98	100	103	106	110	113	117	121	86	85	87	88	89	91	93	95	97	100	102	105	108	112	84	83	84	85	86	88	89	90	92	94	96	98	100	103	82	81	82	83	84	84	85	86	88	89	90	91	93	95	80	80	80	81	81	82	82	83	84	84	85	86	86	87	Extreme Danger	Heat stroke or sunstroke highly likely	Danger	Sunstroke, muscle cramps, and/or heat exhaustion likely	Extreme Caution	Sunstroke, muscle cramps, and/or heat exhaustion possible	Caution	Fatigue possible
40	45	50	55	60	65	70	75	80	85	90	95	100																																																																																																																																																																																																																																
110	136																																																																																																																																																																																																																																											
108	130	137																																																																																																																																																																																																																																										
106	124	130	137																																																																																																																																																																																																																																									
104	119	124	131	137																																																																																																																																																																																																																																								
102	114	119	124	130	137																																																																																																																																																																																																																																							
100	109	114	118	124	129	136																																																																																																																																																																																																																																						
98	105	109	113	117	123	128	134																																																																																																																																																																																																																																					
96	101	104	108	112	116	121	126	132																																																																																																																																																																																																																																				
94	97	100	103	106	110	114	119	124	129	135																																																																																																																																																																																																																																		
92	94	96	99	101	105	108	112	116	121	126	131																																																																																																																																																																																																																																	
90	91	93	95	97	100	103	106	109	113	117	122	127	132																																																																																																																																																																																																																															
88	88	89	91	93	95	98	100	103	106	110	113	117	121																																																																																																																																																																																																																															
86	85	87	88	89	91	93	95	97	100	102	105	108	112																																																																																																																																																																																																																															
84	83	84	85	86	88	89	90	92	94	96	98	100	103																																																																																																																																																																																																																															
82	81	82	83	84	84	85	86	88	89	90	91	93	95																																																																																																																																																																																																																															
80	80	80	81	81	82	82	83	84	84	85	86	86	87																																																																																																																																																																																																																															
Extreme Danger																																																																																																																																																																																																																																												
Heat stroke or sunstroke highly likely																																																																																																																																																																																																																																												
Danger																																																																																																																																																																																																																																												
Sunstroke, muscle cramps, and/or heat exhaustion likely																																																																																																																																																																																																																																												
Extreme Caution																																																																																																																																																																																																																																												
Sunstroke, muscle cramps, and/or heat exhaustion possible																																																																																																																																																																																																																																												
Caution																																																																																																																																																																																																																																												
Fatigue possible																																																																																																																																																																																																																																												
HectoPascals (hPa)	Pressure units in SI (international system) units of measurement. Same as millibars (1 hPa = 1 mbar)																																																																																																																																																																																																																																											

Term	Definition
Hygrometer	A hygrometer is a device that measures relative humidity. Relative humidity is a term used to describe the amount or percentage of water vapor that exists in air.
Inches of Mercury (inHg)	Pressure in Imperial units of measure. 1 inch of mercury = 33.86 millibars
Rain Gauge	A rain gauge is a device that measures liquid precipitation (rain), as opposed to solid precipitation (snow gauge) over a set period of time. All digital rain gauges are self emptying or self dumping (also referred to as tipping rain gauge). The precision of the rain gauge is based on the volume of rain per emptying cycle.
Range	Range is defined as the amount or extent a value can be measured.
Relative Barometric Pressure	Measured barometric pressure relative to your location or ambient conditions.
Resolution	Resolution is defined as the number of significant digits (decimal places) to which a value is being reliably measured.
Solar Radiation	A solar radiation sensor measures solar energy from the sun. Solar radiation is radiant energy emitted by the sun from a nuclear fusion reaction that creates electromagnetic energy. The spectrum of solar radiation is close to that of a black body with a temperature of about 5800 K. About half of the radiation is in the visible short-wave part of the electromagnetic spectrum. The other half is mostly in the near-infrared part, with some in the ultraviolet part of the spectrum.
Thermometer	A thermometer is a device that measures temperature. Most digital thermometers are resistive thermal devices (RTD). RTDs predict change in temperature as a function of electrical resistance.
Wind Vane	A wind vane is a device that measures the direction of the wind. The wind vane is usually combined with the anemometer. Wind direction is the direction from which the wind is blowing.

10. Specifications

10.1 Wireless Specifications

- Line of sight wireless transmission (in open air): 330 feet, 100 feet under most conditions
- Update Rate: Outdoor Sensor: 16 seconds, Indoor Sensor: 64 seconds
- Frequency: 915 MHz

10.2 Measurement Specifications

The following table provides the specifications for the measured parameters.

Measurement	Range	Accuracy	Resolution
Indoor Temperature	14 to 140 °F	± 2 °F	0.1 °F
Outdoor Temperature	-40 to 149 °F (lithium batteries) -23 to 140 °F (alkaline batteries)	± 2 °F	0.1 °F
Indoor Humidity	10 to 99%	± 5%	1 %
Outdoor Humidity	10 to 99%	± 5%	1 %
Barometric Pressure	8.85 to 32.50 inHg	± 0.08 inHg (within range of 27.13 to 32.50 inHg)	0.01 inHg
Light	0 to 200,000 Lux	± 15%	1 Lux
Rain	0 to 394 in.	± 5%	0.01 in
Wind Direction	0 - 360 °	± 10°	1°
Wind Speed	0 to 100 mph (operational)	± 2.2 mph or 10% (whichever is greater)	1.4 mph

10.3 Power Consumption

- Base station : 5V DC Adaptor (included), Power Consumption: 0.5 Watts (1.25 Watts during WiFi configuration mode)
- Outdoor sensor array: 3xAAA batteries (not included)

11. Maintenance

1. Clean the rain gauge once every 3 months. Rotate the funnel counter-clockwise and lift to expose the rain gauge mechanism, and clean with a damp cloth. Remove any dirt, debris and insects. If bug infestation is an issue, spray the array lightly with insecticide.

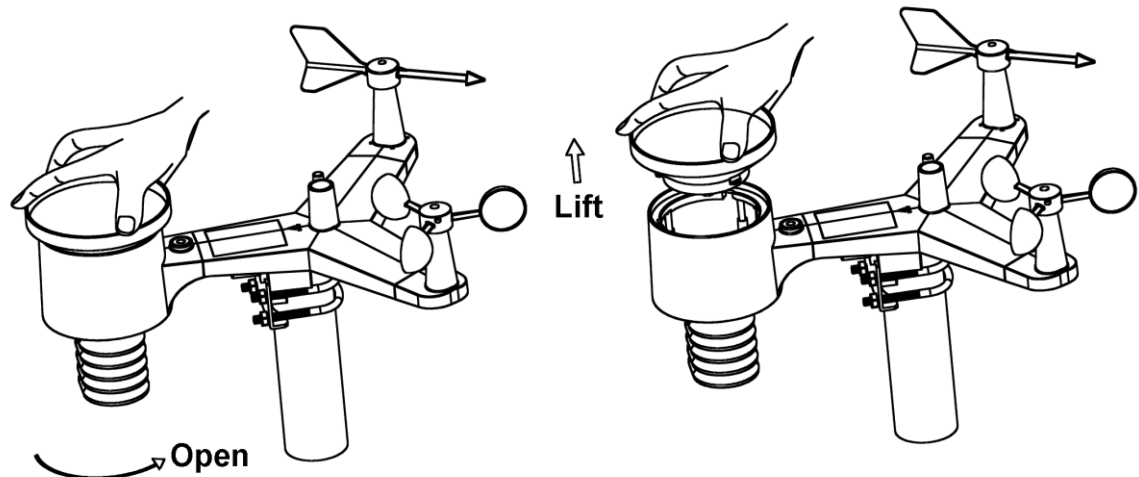


Figure 38

2. Clean the solar radiation sensor and solar panel every 3 months with damp cloth.
3. Replace batteries every 1-2 years. If left in too long, the batteries may leak due to

- environmental challenges.
4. In snowy environments, spray the top of the weather station with anti-icing silicon spray to prevent snow build up.

12. Troubleshooting Guide

Problem	Solution
Outdoor sensor array does not communicate to the display console.	The sensor array may have initiated properly and the data is registered by the console as invalid, and the console must be reset. Press the reset button as described in Figure 1. With an open ended paperclip, press the reset button for 3 seconds to completely discharge the voltage. Take out the batteries and wait one minute, while covering the solar panel to drain the voltage. Put batteries back in and resync the console (Section 6.12) with the sensor array about 10 feet away. The LED next to the battery compartment will flash every 16 seconds. If the LED is not flashing every 16 seconds... Replace the batteries in the outside sensor array. If the batteries were recently replaced, check the polarity. If the sensor is flashing every 16 seconds, proceed to the next step. There may be a temporary loss of communication due to reception loss related to interference or other location factors, or the batteries may have been changed in the sensor array and the console has not been reset. The solution may be as simple as powering down and up the console (remove AC power and batteries, wait 10 seconds, and reinsert AC power and batteries).
Temperature sensor reads too high in the day time.	Make certain that the sensor array is not too close to heat generating sources or strictures, such as buildings, pavement, walls or air conditioning units. Use the calibration feature to offset installation issues related to radiant heat sources. Reference Section 6.10.
Relative pressure does not agree with official reporting station	You may be viewing the absolute pressure, not the relative pressure. Select the relative pressure. Make sure you properly calibrate the sensor to an official local weather station. Reference Section 6.4 for details.
Rain gauge reports rain when it is not raining	An unstable mounting solution (sway in the mounting pole) may result in the tipping bucket incorrectly incrementing rainfall. Make sure you have a stable, level mounting solution.
Data not reporting to Wunderground.com	1. Confirm your password or key is correct. It is the password you registered on Wunderground.com. Your Wunderground.com password cannot begin with a non-alphanumeric character (a limitation of Wunderground.com, not the station). Example, \$oewkrf is not a valid password, but oewkrf\$ is valid.

Problem	Solution
	2. Confirm your station ID is correct. The station ID is all caps, and the most common issue is substituting an O for a 0 (or visa versa). Example, KAZPHOEN11, not KAZPH0EN11 3. Make sure the date and time is correct on the console. If incorrect, you may be reporting old data, not real time data. 4. Make sure your time zone is set properly. If incorrect, you may be reporting old data, not real time data. 5. Check your router firewall settings. The console sends data via Port 80.
No WiFi connection	1. Check for WiFi symbol on the display. If wireless connectivity is successful the WiFi icon  will be displayed in the time field. 2. Make sure your modem WiFi settings are correct (network name, and password).

13. Liability Disclaimer

Please help in the preservation of the environment and return used batteries to an authorized depot. The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.

Reading the “User manual” is highly recommended. The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.

This product is designed for use in the home only as indication of weather conditions. This product is not to be used for medical purposes or for public safety information.

The specifications of this product may change without prior notice.

This product is not a toy. Keep out of the reach of children.

No part of this manual may be reproduced without written authorization of the manufacturer.

14. FCC Statement

Statement according to FCC part 15.19:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

-
2. This device must accept any interference received, including interference that may cause undesired operation.

Statement according to FCC part 15.21:

Any changes or Modifications not expressly approved by this company could void the user's authority to operate the equipment.

Statement according to FCC part 15.105:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

