

X2 Walkie Talkies for Kids

User Manual

Before Start PLEASE NOTICE

This product contains small parts (like batteries, covers, screws). Not suitable for children under 3 years old – choking hazard.

If you wear a pacemaker or other medical device, consult your doctor before use.

Do not use the device if the antenna is damaged – it may cause burns or poor signal.

Never use or charge the walkie-talkie near gas stations, fuel storage, or other flammable environments.

Always turn off the device before boarding a plane, entering a hospital, or in areas marked with related signs to avoid interference.

Do not disassemble or modify the product yourself.

Contact a professional for repairs.

This device cannot be used to contact emergency services – do not rely on it for emergencies.


Keep the antenna at least 5 cm (2 inches) away from your face when using.

Remove the batteries when not in use to prevent leakage. Do not mix old and new batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device does not cause harmful Interference, and (2) this radio must accept any interference that may cause undesired operation.

Product Description

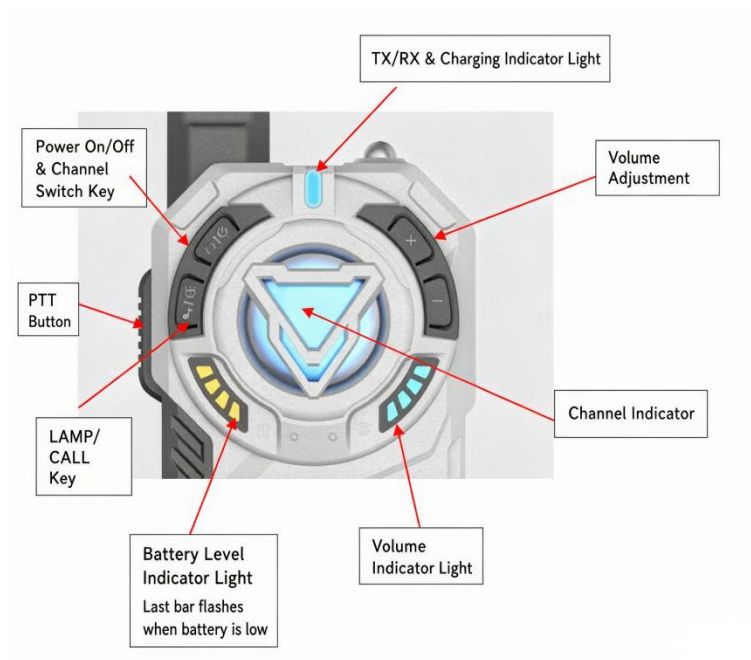

Features

- * 6 color channels
- * Built-in flashlight
- * Volume Indicator
- * Battery indicator and low battery aler
- * TX/RX Indicator
- *Type-C charging port
- * calling tones

Channel Description

Channel indicator light color and corresponding channel

	CH1		CH4
	CH2		CH5
	CH3		CH6

Before Use

Please charge it before using it for the first time, please use a5V 1A charger.

Please charge on time. When the battery indicator light flashes, it indicates that the battery is low.

The red indicator light is on when charging, and the green indicator light is on when fully charged.

How to Use

1. Power on or off:

Long press  to power on or off.

2. Set the Channel:

Short press the POWER button, and the channel indicator light will change to **blue/green/red/ cyan/pink/yellow** in sequence. Two walkie talkies with the same color can make a call

Hold the walkie-talkies 2-3inches(5-7cm) away from your mouth and speak directly into the microphone. Don't cover the microphone when you're talking,and when you're inished, release the PTT (Push to Talk, release to listen).

3. Adjust the volume:

Press “+/-” to turn up or down the volume(level 1-4).

4. CALL:

Short press “call” to call group.

5. Flashlight:

Long press “ Light” to turn on or off the flashlight.

Technical specifications

Model	X2
Channels	6 CH
Frequency	462MHz(US), 446MHz(EU)
Transmission	<0.5W
Range	up to 2miles/3km (Open field)
Battery	1000mAh lithium battery
Charging time	3hrs
FCC ID	2A3ZQ-X2

Warranty

This product comes with a 1-Year Limited Warranty. The warranty does not cover:

- Improper installation, use, or maintenance
- Self-repair or unauthorized modification
- Use of incorrect adapters or accessories
- Damage from accidents, misuse, or shipping
- Normal wear and tear



MADE IN CHINA

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.