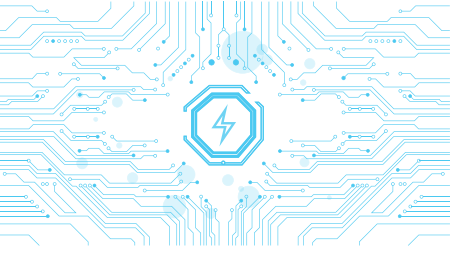


Instructions Product manual   Strong magnetic  Smart chip  Safety protection  Intelligent AI assisted functions		Power bank function description 1.Switch function Click the switch button, the wireless function starts working; double-click the switch, stop working. 2.Enable wireless charging Once the product automatically detects and adsorbs the mobile phone, the initial indicator light turns green, signifying that the wireless charging function of the mobile power supply has been successfully activated. 3.Check the remaining battery Click the button, if one white light is on, it means the power is within 25%, if two white lights are on, it means the power is within 50%, if three white lights are on, it means the power is within 75%, and if four white lights are on, it means the power is within 100%. When the last light of the battery indicator flashes, the battery is less than 5%, please charge it as soon as possible. Quick Start to intelligent AI Turn on For the first use, please press and hold the smart AI button for more than 3 seconds. When the blue indicator light of the device flashes, it indicates that the device is powered on and has entered the connection mode. APP download method  Wearfit Pro Please scan the code to download and install the Wear Professions Pro app, or go to major app stores, search for "Wear Professions Pro" to find and download and install it. For the first use, please register a personal account and grant the necessary permissions for the APP program to run, to ensure the normal operation of the device. Turn on the Bluetooth of your mobile phone, open the "Wear Finally Pro" APP, click the "+" sign in the upper right corner, click "Add Manually", find the device with the Bluetooth name "Ai1", click "Connect", and after the connection is successful, it will indicate that the blue light will flash rapidly three times and then go out. Note: If the connection is unsuccessful, please check whether the Bluetooth on your phone has been turned on normally, whether the device is powered on properly and in a pending connection state, and whether the device has not been connected by any other phone. Standby The device does not need to be turned off. If it is not successfully connected within one minute after being turned on, it will enter a sleep state with the indicator light off. To wake it up again, just click the button. Shut down or reset When the AI assistant freezes or cannot be used normally, you can hold down the reset button for 10 seconds and then turn it off. Hold down the button for more than 3 seconds and then turn it on and reset it	Forced shutdown In case the device freezes or fails to respond, please use the pin and hold down the reset button for 10 seconds to force a shutdown. One-click translation Open "Wearfit pro", click on the "One-click Translation" card on the home page, and enter the function page. Here, you can make function Settings, such as changing the speech recognition language and target language, displaying only the translation, and enabling the floating window for one-click translation, etc. After maintaining the correct connection between the device and the APP, there is no need to enter the APP. Just ensure that the "Wearfit pro" APP is running in the background. Then, by long-pressing the device buttons, you can enter voice for one-click translation at any time. Simultaneous interpretation Open "Wearfit pro", click on the "One-Click Translation" card on the home page to enter the function page, where you can make function Settings, such as changing the speech recognition language and target language, starting/pausing translation, etc. After maintaining the correct connection between the device and the APP, there is no need to enter the APP. Just make sure that the "Wearfit pro" APP is running in the background, and you can enable the simultaneous interpretation function by double-clicking the device button. Meeting magic tool A technical tool that significantly enhances the efficiency and effectiveness of meetings, integrating advanced voice recognition, transcription, recording and organization functions, reduces the time and errors in meeting minutes. Photo translation Open "Wearfit pro", click on the "Photo Translation" card on the home page, enter the function page, select the target language, click to turn on the camera to enter the photo page, briefly press the shooting button to complete the photo shooting. The system will automatically recognize the text in the photo and translate it into the target language text. Click the copy button at the lower right corner of the corresponding text box to copy the corresponding text content.	Face-to-face translation Open "Wearfit pro", click on the "Face-To-Face Translation" card on the home page, and enter the function page. The application scenario of this function is in the form of one-person-one-sentence dialogue translation. Select the corresponding language, User A speaks, and long press the corresponding recording button. After the recording is completed, it will be automatically translated into the target language of User B. User B speaks, and long press the corresponding recording button. After the recording is completed, it will be automatically translated into the target language of A. Clicking the broadcast button will broadcast the translation result. Meanwhile, all the dialogue content will be retained in the historical record for convenient management and review. Input in the chat box After ensuring the device is correctly connected to the APP, enable the floating window function. Click on the input box of any chat software or other software to enter the text editing mode. Long press the device button to start one-click translation and broadcast. At the same time, the content will be automatically filled into the selected chat box. Mobile phone playback translation After saving the correct connection between the device and the APP, turn on the floating window function, switch the APP to the background to run, open third-party software such as Douyin, NetEase Cloud Music and other playback software, long press the device to receive the sound emitted by the phone, translate it with one click and broadcast it. The translation result will be displayed in the floating window. Wechat voice translation To send the translated content: After ensuring the device is correctly connected to the APP, turn on the floating window function, long press the device button to enter the one-click translation. After the recording is completed, release the button. At this time, hold down the wechat [Hold to Speak] button. 1-2 seconds later, the phone will broadcast the translation result, and wechat will record the voice content. After the recording is completed, you can send it. After ensuring the device is correctly connected to the APP, turn on the floating window function. When you receive the other party's voice, click on it. While playing out the voice content, long press the device button to enter the one-click translation, and you can then translate and broadcast the content of the other party.
---	--	---	--	---

Precautions

"If the battery is not used for a long time, please charge it at least once every three months."
"During the use of this device, it will slightly heat up, but it is normal that it is not hot to the touch."
"Please always keep the product dry and do not clean or scrub it with chemical reagents."
"Please take care of the environment and collect this device at the designated location. Do not discard it at will."
"Children or those who do not have the ability to use this device alone must use it under the supervision and guidance of an adult."
"Do not collide with, disassemble by yourself, puncture, squeeze or place this device in a damp environment."
"Do not apply this power bank to devices that do not meet the output parameter requirements, as it may cause malfunctions or fires."
"Please be sure to use a charger that meets local safety standards (such as China's 3C certification standards) to charge this product to prevent electric shock or battery damage."
"When upgrading the device, do not perform any operations before the OTA upgrade is displayed as completed to avoid making the device unusable."
"The intelligent translation function requires connection to the mobile phone APP. During use, please ensure that the device is correctly connected to the mobile phone and that the mobile phone is in a normal Internet connection state."
"When using the one-click voice translation function, please wait for 0.5 seconds after pressing the button before speaking. Release the button only after you have finished speaking to ensure that the complete voice is captured."
"When using voice translation, please speak at a normal speed and coherently. Do not have long pauses, repeat words, or continuous sentences during the speaking process to avoid inaccurate translation results."
"When removing the device from the phone, please push it sideways and horizontally to take it off. Do not forcibly remove it vertically to avoid damaging the device."
"This equipment is not waterproof. Please be sure to avoid contact between the equipment and water to prevent damage to the machine."

FAQ

★When the power bank cannot be charged:

- Please check whether the power adapter is suitable, the connector used, and whether the converter is normal.
- It's recommended to choose a suitable power adapter for charging.

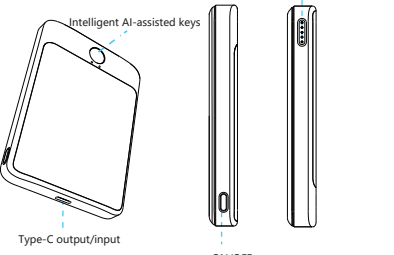
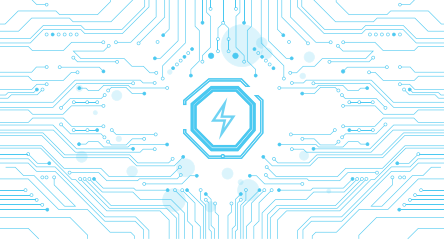
★When the power bank cannot charge other devices:

- The power bank is too low, please charge it before using it.
- If the internal circuit of the power bank is faulty, please contact the after-sales service department of the local dealer for help.

Warning



Prohibited from disassembling, impacting, squeezing or putting in fire. If severe swelling occurs, do not continue to use. Do not place in high-temperature environment. Prohibited from use after immersion in water.

Product Performance • 15W wireless output, magnetic absorption wireless fast charge • PD20W fast charge • It can be charged and discharged at the same time, and the mobile phone and power bank can be quickly charged at the same time • Power indicator light, display power • High-quality polymer batteries, safe and worry-free • Intelligent AI-assisted Packaging List • Mobile power*1 • Manual*1 • Type-C charging cable*1 Common faults 1. The translation response speed is too slow or there is no response at all - Check whether the mobile phone APP has been connected correctly - Check whether the mobile phone is in a normal Internet connection state 2. The speech recognition is inaccurate - Please wait for 0.5 seconds after pressing the button before speaking. Release the button after you finish speaking - Please speak as close to the mic radio hole as possible - Check whether the recognition language is selected correctly - If the environment is too noisy, please get as close as possible and raise the volume - Please keep your speaking process coherent and natural, and avoid pauses or sentence junctions in the middle 3. Unable to search and connect to the device - Please check whether the Bluetooth on your mobile phone is turned on normally and whether the device is turned on properly - Please check the connection status of the device to see if it has been connected by other devices 4. The device is unresponsive or frozen - Disconnect the Bluetooth on your phone, delete the APP that has been bound to the device, restart the phone and reconnect - Press and hold the device reset button for 10 seconds with the pin to force a restart Remarks: Description of wireless charging functions *Place the phone on the wireless charger, click the switch button to turn on the wireless charging function. *When using the charger to charge the mobile power supply and using the wireless charging function to charge the device at the same time, only the ordinary 5W wireless Line charging function. *During the charging process of the mobile power supply, in a fully charged state, since the charging protocol is switched to the 5V input state, it is turned on at this time. In wireless charging mode, only ordinary 5W charging can be performed. When you stop charging the power bank, it will restart automatically, and Wireless charging can enter fast charging mode.	FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, it can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and the receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions	Specifications <table><tr><td>Product name</td><td>AI mobile power bank</td></tr><tr><td>Product model</td><td>AI1</td></tr><tr><td>Type of cell</td><td>Lithium polymer battery</td></tr><tr><td>Type-C port input</td><td>5V—3A/9V—2A</td></tr><tr><td>Type-C port output</td><td>5V—3A/9V—2.22A/12V—1.67A</td></tr><tr><td>Wireless output</td><td>5W/7.5W/10W/15W</td></tr><tr><td>Total output</td><td>5V—3A</td></tr><tr><td>Product size</td><td>101.2*70*13±0.30mm</td></tr><tr><td>Buttons</td><td>2 (power bank switch + translator button)</td></tr><tr><td>Main chip</td><td>AB2026A3(AI board sub-chip)</td></tr><tr><td>RAM(Random Access Memory)</td><td>54KB</td></tr><tr><td>Flash(Read-Only Memory)</td><td>2Mb</td></tr><tr><td>Main frequency (frequency)</td><td>120MHZ</td></tr><tr><td>Work indicator light</td><td>1 indicator light (Blue work light: flashes when charging and remains on when fully charged)</td></tr><tr><td>Bluetooth</td><td>Supported: Bluetooth 5.4</td></tr><tr><td>Static electricity</td><td>4KV for contact, 8KV for air</td></tr><tr><td>System support</td><td>Supports Android 8.0/ios 10.0 and above versions</td></tr></table> Product Overview 	Product name	AI mobile power bank	Product model	AI1	Type of cell	Lithium polymer battery	Type-C port input	5V—3A/9V—2A	Type-C port output	5V—3A/9V—2.22A/12V—1.67A	Wireless output	5W/7.5W/10W/15W	Total output	5V—3A	Product size	101.2*70*13±0.30mm	Buttons	2 (power bank switch + translator button)	Main chip	AB2026A3(AI board sub-chip)	RAM(Random Access Memory)	54KB	Flash(Read-Only Memory)	2Mb	Main frequency (frequency)	120MHZ	Work indicator light	1 indicator light (Blue work light: flashes when charging and remains on when fully charged)	Bluetooth	Supported: Bluetooth 5.4	Static electricity	4KV for contact, 8KV for air	System support	Supports Android 8.0/ios 10.0 and above versions	Warranty terms This product implements three guarantees in strict accordance with national regulations, and the detailed content is as follows: Warranty period: 12 months for host Warranty scope : 1. Please correctly fill the content of warranty card; 2.This warranty card is kept by user; 3.Please present this warranty card when a warranty is required; 4.The warranty card must be valid with seller's stamp; 5.This warranty is only for the products of the distributors, and accessories without the label of our company will not be accepted. 6.Unpacking products must be packed very well with complete accessories. 7.The following conditions are not covered by the warranty: Non-product quality issues, but man-made damages such as damage of housing, abrasion, crack, breaking, fracture, deformation and fluid entry etc; Damage caused by unauthorized demolition by repairers of other companies; Inconformity of the content on three guarantee evidences from the commodity identifications or any alteration; Without three guarantee evidences or effective invoice; Damage caused by other force majeure factor. Warranty Card A.Unable to charge the mobile power B.Unable to recharge equipment C.power display abnormal D.The charging port is abnormal E.Others 1.Time of purchasing ----- 2.Dealers of sale ----- 3.When did the problem occur? ----- 4.User's Contact Information ----- 	
Product name	AI mobile power bank																																					
Product model	AI1																																					
Type of cell	Lithium polymer battery																																					
Type-C port input	5V—3A/9V—2A																																					
Type-C port output	5V—3A/9V—2.22A/12V—1.67A																																					
Wireless output	5W/7.5W/10W/15W																																					
Total output	5V—3A																																					
Product size	101.2*70*13±0.30mm																																					
Buttons	2 (power bank switch + translator button)																																					
Main chip	AB2026A3(AI board sub-chip)																																					
RAM(Random Access Memory)	54KB																																					
Flash(Read-Only Memory)	2Mb																																					
Main frequency (frequency)	120MHZ																																					
Work indicator light	1 indicator light (Blue work light: flashes when charging and remains on when fully charged)																																					
Bluetooth	Supported: Bluetooth 5.4																																					
Static electricity	4KV for contact, 8KV for air																																					
System support	Supports Android 8.0/ios 10.0 and above versions																																					