

WESPER™ SLEEP KIT | Model #: WKRV01

Safety and Handling

This device has been tested to comply with IEC standards IEC 6061-1, IEC 6061-1-2 and IEC 6061-11. WESPER is an electrical appliance and safety precautions should always be followed to reduce the risk of burns, fire, electric shock or injury, including the following precautions:

Wear And Care:

For the avoidance of doubt, WESPER is not a medical device and is not intended to replace any medical diagnosis or treatment recommended to you by your physician. When caring for your WESPER, follow these tips: Do not use cleaners or any liquid to clean your WESPER. Only place on dry surfaces. Do not place on a surface wet from water or cleaning solvents. Do not place or store the product in an area subject to excess dust. Do not expose your WESPER to direct sunlight for extended periods of time. Do not leave your WESPER near an open flame. Do not place or store the product where it can fall or be pulled into a tub or sink. If you experience any kind of discomfort or notice signs of skin irritation where your WESPER touches your skin, please discontinue use and contact our support team. Do not attempt to disassemble or service your WESPER yourself. Protect your WESPER from any shocks or impacts. Do not expose your WESPER to extremely high temperatures above 104° F (40° C) or low temperatures below 23° F (-5° C). Battery life: 12 hours (150mAh) Use only a certified USB power adapter (not included). Power supply should be Limited Power Supply (LPS).

Important Safety Information:

Take the time to read, understand and follow all safety information contained in this user manual before using your WESPER. Please save these instructions for future reference.

CAUTION:

Contains small parts. Keep out of reach of children. Use this appliance only for its intended use as described in this manual. Do not operate this device if it has a damaged cord, plug, cable or housing.

Batteries Precautions:

To reduce the risk of electric shock and to avoid possible risks associated with hazardous voltage, which if not avoided could result in death or serious injuries.

Read, understand and follow the following safety instructions: This product contains a lithium-ion battery. Use only the included wireless charging mat to recharge your patches. Do not attempt to charge the device using another wireless charging device. There is a risk of explosion if batteries are not handled in the correct way. The batteries are not designed to be replaced. Damage inflicted on the battery could cause an explosion and/or fire. Do not dismantle, open or shred the battery. Do not expose the battery to heat or fire. Avoid storage in direct sunlight. Do not short-circuit the battery.

Disposal And Recycling Information

For disposal and recycling of WESPER, please contact your local recycling authority. If you have any questions on the matter, please contact our support team at support@wesper.co.

FCC Declaration of Conformity Compliance statement FCC ID: includes 2AAQS-ISP1507 or 2AAQS-ISP1807

This equipment complies with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. As defined in Section 2.909 of the FCC Rules, the responsible party for this device is: Wesper Inc., 234 5th Ave, New York, NY 10001, USA. Tel #: +1 575-448-2824

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Federal Communications Commission Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Modifications

Wesper is not responsible for any radio interference caused by unauthorized modifications to this equipment. Changes or modifications not expressly approved by Wesper could void the user's authority and warranty to operate the equipment.

Silicone Adhesives

WESPER's adhesives are made from medical grade silicone. Avoid use if you have any known allergy to silicone. The adhesives have been thoroughly tested and should not cause skin irritation. However, if skin irritation develops or any other symptoms occur, discontinue use and contact us. In case of irritation, wash skin thoroughly with soap and water. Seek medical attention if symptoms persist. The adhesives should not be used on wounded skin. If eye contact occurs, hold the eye open and immediately rinse with water for at least 15 minutes. Obtain medical attention if soreness or redness persist.

Customer Service Web Contact

If your product is not working properly and your troubleshooting is unsuccessful, please contact WESPER technical support at www.wesper.co/contact-us. Additional answers to your product and technical questions can be found at support@wesper.co. Contact Wesper Inc. Customer Relations at support@wesper.co.


Changes To These Terms

We reserve the right to update, change or replace any of the terms contained in this document or in other WESPER documentation by posting updates and/or changes to our website, www.wesper.co. It is your responsibility to check our website from time to time for any updates or changes, as they are binding on you. © 2021 Wesper Inc. Any unauthorized copying, duplicating, or other reproduction of the contents hereof is prohibited without written consent from Wesper Inc. All rights reserved. Wesper Inc., 234 5th Ave, New York, NY 10001, USA. PCK000001-REV02




Setup & Care Guide


Get Started

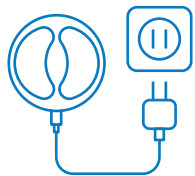


1 - Connect the charger to an outlet with the cable provided



2 - Make sure the charger and back of patches are clean and free of any debris.

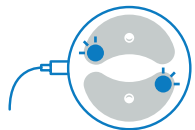

3 - Place the patches onto the charger. Confirm the blue corner charging LEDs are illuminated. If they aren't, gently move the patches around until they are to ensure charging.




4 - Charge the patches for at least 3 hours.

Depending on your patch model, the corner charging LED may turn off when charging is complete or remain on.


5 - Install the Wesper app from the App Store and create an account. We'll take it from there!

Preparing For Your Test


Apply a new set of adhesive backings:



1 - Make sure the back of the patch is clean and dry.



2 - Remove one of the adhesive liners using the pull tab.

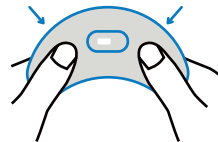

3 - Align the adhesive over the shape of the patch and press firmly.



4 - Repeat application on the second patch.



START

5 - Open the app and start a new test, following the in-app instructions. Sweet dreams!

Having trouble?

Find frequently asked questions, troubleshooting tips, and more at wesper.co/faq