

智能眼镜
KX3

SMART EYEWEAR
使用说明书
Instructions

声明

首先对您使用本公司的产品表示感谢！在使用之前请先阅读此说明书，正确使用此产品。为了更好的服务，本用户手册的内容可能变更。因为产品的性能和功能而发生的变更，将不做另行通知。

产品型号

KX3 eyewear 开放式定向音频智能眼镜，本产品是具有立体声功能的蓝牙耳机，操作简便，便于携带。

产品参数、特点

镜架颜色	黑色
镜架材质	Grilamid TR
镜片材质	PC
蓝牙协议	5.3
充电时间	90 min
电池容量	左镜腿110mAh、右镜腿110mAh
充电电压和电流	DC5V，最大充电电流110mA
声道	双喇叭、立体声

*兼容主流品牌手机和平板电脑等蓝牙设备。

● 支持 SBC 音频解码技术，达到 CD 级音质。
● 左右双喇叭，定向播放，真正的立体声音效。

包装清单

① 眼镜 ✓
② 充电线 ✓
③ 眼镜布 ✓
④ 说明书 ✓
⑤ 保修卡 ✓

操作说明



1.开/关机

① 按下充电器自动开机，或在关机状态，左右镜腿同时长按触控区4秒开机，提示音“Power on”并提示“Pairing”。
② 插上充电器自动关机，或在开机状态，长按左或右镜腿触控区4秒关机，提示音“Power off”

2.蓝牙配对连接

眼镜开机，左右镜腿自动配对，红灯交替快闪，配对完成，灯熄灭，提示音“duludu”。
打开要连接的设备蓝牙（如手机，MP3 播放器，电脑等），可搜索到设备名称：eyewear max，点击连接，并自动弹出蓝牙配对窗口，点击：配对，蓝牙连接成功，提示音“叮叮叮”。
① 无配对记录开机后，自动进入配对状态；有配对记录时，开机自动回连最后使用的手机；
② 回连手机时，连接成功后，提示音“叮叮叮”；与手机连接断开时，提示音“咚咚”。

3.播放音乐(建议使用两手指)

① 音乐播放/暂停，双击右镜腿触控区。
② 上/下一曲，在左镜腿触控区内，从前向后滑动，或从后向前滑动并听到提示音哪一声，即播放上/下一曲
③ +/- 音量，在右镜腿触控区内，从后往前滑动，或从前往后滑动并听到哪一声，即为 +/-音量

4.语音助手

三击左/右镜腿触摸区启动语音助手，例如 Siri/小爱/小艺等。

5.打电话

① 接听电话，双击任意镜腿触摸区。
② 挂断电话，双击任意镜腿触摸区。

6.充电

① 低电报警，每隔 5 分钟提示一次“Battery Low”；
② 低电关机，提示“Power off”；
③ 充电时，指示灯常亮红灯；充电完成，红灯交替闪烁 10 秒后熄灭。

提示

① 使用本产品前请仔细阅读说明书，并保留本说明书。
② 首次使用，请先将本产品充满电。
③ 如果产品长期(超过两周)不充电，使用前请对其充电。
④ 较脏的镜片不要直接擦拭，应先镜片打湿，再用眼镜布拭干。尽量使用绒面且吸水性较强眼镜布轻轻抹拭干净，注意不要太用力。擦拭时，眼镜布要朝着同一个方向擦拭，不能来回擦拭，也不能在镜片上转着圈擦。
⑤ 当电池温度超过 -10° C或50° C 的时候，产品将会停止工作

注意事项

① 请勿以任何理由拆除或修改装本产品，否则可能会导致起火，电子击穿甚至彻底损坏本产品。
② 请勿将设备置于温度过低或过高(-10℃ 以下或 50℃ 以上)环境下。
③ 请勿将产品接触液体弄湿，或浸泡在液体里。
④ 不能将眼镜放在阳光下长时间暴晒，否则易变形、老化、折断。
⑤ 请勿将充电线磁吸端靠近金属物体，防止磁吸金属物体后引起的短路危险。

重要安全信息

● 在使用本设备前，请先阅读所有安全信息以确保正确和安全使用。
● 使用未经本制造商认可的电源，充电器或电池，可能引发火灾，爆炸或其他危险。
● 请使用本制造商认可且与此型号设备配套的配件。
● 请在温度-10℃—50℃ 范围内使用本设备，并在常温下存放设备及其配件。当环境温度过高或过低时，可能会引起设备故障。
● 该设备使用不可拆卸的内置电池，请勿自行更换电池,以免损坏电池或设备。
● 若充电完毕，请断开充电器与本设备的连接，并从电源插座上拔掉充电器，连续充电时间请勿超过 12 小时。
● 电池禁止拆卸，撞击，挤压或投入火中，若出现严重膨胀，请勿继续使用。
● 请勿置于高温环境中，电池过热可能会引起爆炸。
● 请保持设备干燥。
● 若设备或其他任何部件不能正常工作，请勿自行维修任何产品
● 连接其他设备时，请参考用户手册的连接方法，不要随意连接不配套的设备。

⚠ To avoid hearing loss, please do not use high volume for a long time.

⚠ WARNING
Please follow the relevant laws and regulations, do not use in the mentioned environment below.
For example, gas stations, oil warehouses, chemical warehouse and other places where inflammable and explosive oil and gas or chemicals are stored are prohibited to use the equipment.
● Do not use the equipment in the operating room, emergency room, intensive care department, etc. In order to avoid interference the medical devices, please keep the device away from pacemaker. Please keep at least 15 meters distance from the pacemaker.
● If need to use this device near a personal medical device, consult a physician and device seller.
● Please comply with all safety warnings and regulations regarding the use of this device while driving.
● Do not use outdoors in thunderstorm, to avoid lightning strike.
● Do not use the charger in the bathroom where there is high humidity, or it will lead to electric shock, personal injury, fire and charger damage.
● Please comply with the relevant laws that clearly prohibit use in any environment.

Accompanied your eye
digital your life
数字你的视界

CE FC
MADE IN CHINA

Statement

Thank you for using our product. Please read the manual before use. The manual might change because of hardware or software update.

Model name

KX3 eyewear with open directional audio, this product is a bluetooth glasses with stereo mini speakers, easy operation, easy carrying.

Qrduct characteristics

Frame color	Black
Frame material	Grilamid TR
The lens material	PC
Bluetooth	5.3
Charging time	90 min
Battery capacity	110 mah for each temple
Charging voltage	DC 5V, Max charging current 110ma
Speakers	Dual stereo speakers


*compatible with mainstream brands of mobile phones, tablets and other bluetooth devices.

● Support SBC audio decoding technology, achieve CD - level sound quality.
● Left and right speakers, audio directed all around you, to give you real stereo sound effect

Packing list

No.1 Smart eyewear *1
No.2 Charging cable *1
No.3 Cleaning cloth*1
No.4 User manual*1
No.5 Warranty card*1

Instructions

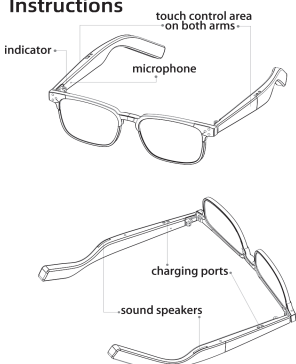

1.How to switch on/switch off

1)switch on the device: when charging, unplug the charger, it will switch on automatically. Or when it's off, tap and hold the touch control area of both temples for 4 seconds to turn it on. By hearing "Power on", then accompanied with "Pairing", your device is on.
2)Switch off: Plug in the charger, the device will be off automatically. Or when the device is on, long tap the touch control area on either temple for 4 seconds to turn it off. By hearing "Power off" the device is now switched off.

2.How to connect

Swith on the device, the left and right temples starts pairing, red and blue light flash alternately. when pairing is completed, lights are off and hear tone "Duludu"
1)first time connect to mobile phone: Click setting on your mobile phone or any smart devices, turn on bluetooth and search bluetooth name: **eyewear max**, click to connect it. By hearing "dingdingding"it's connected
2)Second time connection: when switch your smart eyewear on, it will connect to your mobile phone or other smart devices automatically.

How to operate (suggest to use 2 fingers)

1)Play/pause: double tap the touch control area on either temple
2)Next/Previous song: slide forward/backward on the left temple to play next/previous
3)Volume +/-: slide forward/backward on the right temple to +/- volume
4)Voice control: triple tap on either temple to activate voice control, such as Siri, Alexa, or others.
5)Answer/hand up phone call: double tap touch control area on either temple

About charging

1)Low Battery alarm, will hear indicating tone "Battery Low" every 5 minutes
2)when device run out off power, it will "Power off"automatically
3)When charging, the indicator light is always red; when fully charged, the red and blue light flashes for 10 seconds and then the indicator light will off.

Noticement

1)Please read the user manual carefully before using this product and keep this manual well.
2)For the first time use, please fully charge the product.
3)If the product is not charged for a long time (more than two weeks), please charge it fully before use.
4)Use cleaning cloth to clear up lenses. Other cloth might damage your lens
5)When the battery temperature -10℃ lower / 50℃ higher, the product might automatically shut down.

Matters needing attention

1)Do not unassemble and repair the product for any reason, otherwise it might cause fire, electronic breakdown or even complete damage to the product.
2)Do not put the equipment in an environment with too low or too high temperature (below -10° c or above 50° c).
3)Do not put the product under water or other liquid or humid environment.
4)Do not expose your device in the sun for long time, otherwise they will be easily deformed, aged and broken.
5) Do not put charger's magnetic suction close to any

Important safety information

● Before using the device, please read all safety information to ensure proper and safe use.
● Use of power supply/chargers or batteries that are not certified by the manufacturer may cause fire and explosion or other hazards.
● Please use the accessories approved by the manufacturer and compatible with this type of equipment.
● Please use the equipment within the temperature range of -10-50 °C and store the equipment and accessories within the same temperature range. When the temperature is too high or too low, it may cause equipment failure.
● The device use a non-removable built-in battery, do not replace the battery to avoid damage.
● After fully charged, disconnect the charger from the device and unplug the charger from the power socket.
● Do not disassemble the battery, or bump, squeeze or put the battery into the fire. If serious expansion occurs, please do not continue to use.
● Do not put in a high temperature environment, battery overheating may cause explosion.
● Please keep the equipment dry.
● Do not repair the product by yourself when it cannot work properly.
● When connecting other devices, please refer to the user manual for the connection method, do not arbitrarily connect to the equipment that does not match.

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.