



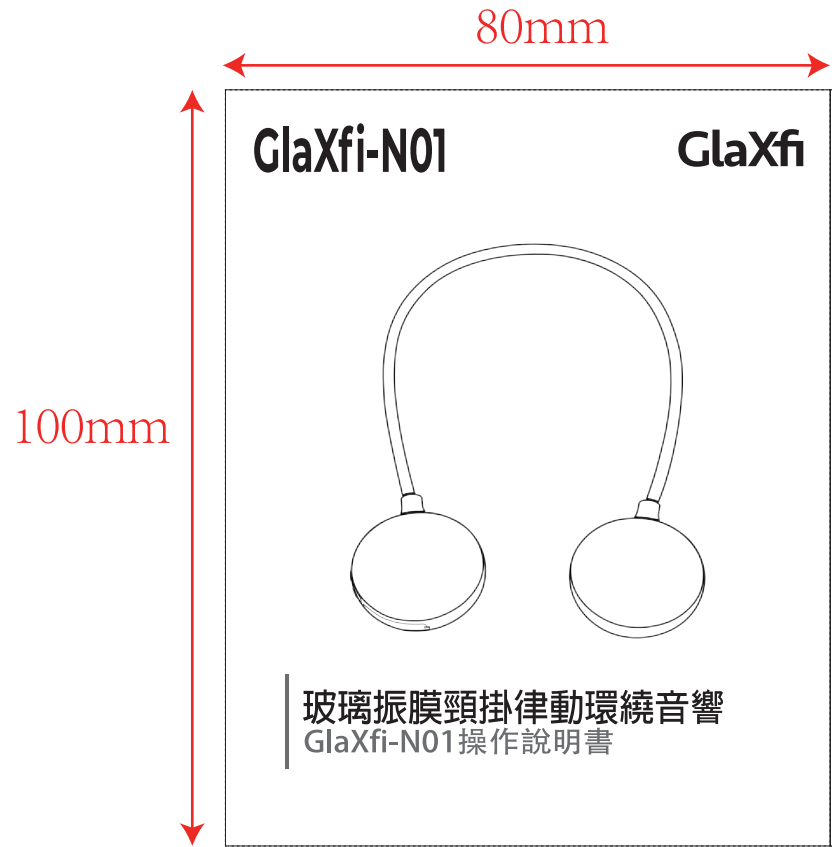

GlaXfi-N01 GlaXfi

玻璃振膜頸掛律動環繞音響
GlaXfi-N01操作說明書

感謝您購買玻音先創玻璃振膜頸掛律動環繞音響。本手冊將給您更好的使用本產品。在使用本產品前，請詳細了解您的播放設備的藍牙功能。

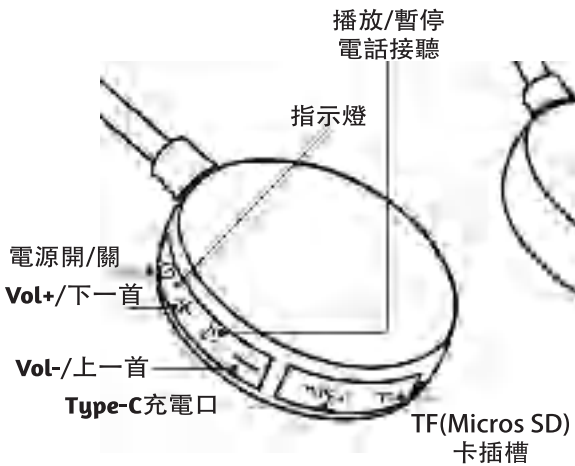

一、GlaXfi-N01操作說明

1、藍牙配對

- 藍牙音箱第一次使用時,長按電源開關鍵開機,藍牙音箱開啟播報提示音後,此時約1~2秒藍燈快閃。代表藍牙音箱已進入藍牙搜尋狀態;
- 打開手機藍牙或其他藍牙設備,搜尋到GlaXfi-N01藍牙名,點擊進行配對,配對成功後藍燈慢閃;
- 長按藍牙音箱電源開關鍵,藍牙音箱在開啟後直接進入回連模式;約2~3秒會自動連接到最後一次連接過的手機或其他藍牙設備,藍燈慢閃代表已經回連成功;

2、音樂播放

- 單擊播放/暫停鍵可以播放或暫停音樂;
- 單擊加減鍵使音量增加與減少,長按加減鍵切換上下首;

3、電話接聽/撥打操作

- 藍牙音箱配對成功後,在藍牙音箱上雙擊播放/暫停鍵搜尋狀態;

將回撥電話裡面最後一通撥出的電話號碼,短按掛斷電話;

- 藍牙音箱配對成功後;有電話來電時,長按播放鍵拒接,短按播放鍵接聽,接聽後重按一次掛斷。

4、TF卡播放

- 插入TF卡,可直接播放卡內的音樂,播放時藍燈慢閃,暫停藍燈長亮;
- 需要播放藍芽設備上的音樂時;單擊電源開關鍵即可轉換為藍牙播放。

5、藍牙音箱充電

使用配置充電線進行充電,充電電壓為DC5V,充電時紅燈長亮,充滿時紅燈滅;

6、自動關機


音箱開機後無連接任何藍牙設備,10分鐘後會自動關機。

二、重要安全信息

在使用藍牙音箱之前,您需要確認遵守以下基本

的安全提示以保證產品安全可靠的使用:

- 閱讀並了解所有的安全指引。
- 請使用能夠提供輸出電壓DC5V/500~1000MA充電設備,以免造成損壞。
- 不可使用快速充電器對本產品充電。
- 本產品採用內置鋰電池,在不使用時請關機。
- 不可讓產品靠近高溫的熱源,也不可於高溫燒烤或是吹乾。
- 不可讓產品跌落或是受到重擊,或在上面施加重壓。

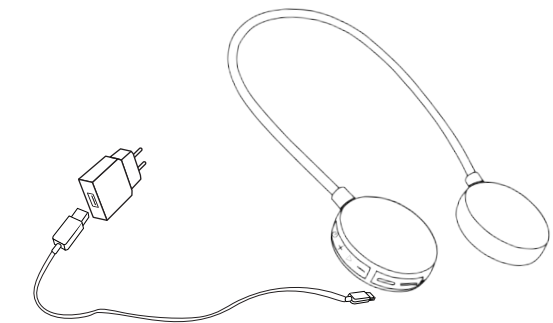

三、包裝產品清單

包裝盒包括以下物品,如有缺失請向銷售商聯繫:

- GlaXfi-N01藍牙音箱: 1台
- TYPE-C充電線: 1條
- GlaXfi-N01收納袋: 1個
- 說明書: 1本
- 保固卡: 1張

注意事項

- 本產品為喇叭,請勿用作耳機,以免損傷耳朵。
- 請不要使用電壓輸出規格超出5V的充電器,對本產品進行充電,以免造成損壞。
- 請勿非常炎熱或嚴寒環境(工作溫度5℃-35℃)使用本設備。
- 請不要將本產品曝露於熱或火源,避免放在陽光直射處。
- 請不要將本產品放置不穩、易衰落之處,或接受機械性衝擊。
- 請勿使用非本公司搭配支電池,或是將電池短路。
- 清潔產品請勿使用酒精相關化學液體,請使用乾淨軟布擦拭。
- 若產品受損,請聯繫受後人員處理,請不要拆解,開啟或是撕裂本產品。
- 電池長期存放應至少每三個月進行充電一次。
- 經長時間其存放後,可能需要對電池進行數次充、放電,才能恢復正常。

RoHS						
設備名稱: 玻璃振膜頸掛律動環繞音響、型號(型式): GlaXfi-N01						
單元	限制物質及其化學符號					
	鉛(Pb)	汞(Hg)	鎘(Cd)	六價鉻(Cr ⁶⁺)	多溴聯苯(PBB)	多溴二苯醚(PBDE)
電路板	○	○	○	○	○	○
外殼	○	○	○	○	○	○
揚聲器	-	○	○	○	○	○
配件	-	○	○	○	○	○
備考 1: "○" 係指該項限制物質之百分比含量未超出百分比含量基準值。						
備考 2: "-" 係指該項限制物質為排除項目。						

NCC警語:

取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。
前述合法通信,指依電信管理法規訂作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。


產品名稱型號 : GlaXfi-N01 玻璃振膜頸掛律動環繞音響
機身序號 (S/N) : _____
購買日期 : _____ 年 _____ 月 _____ 日
玻音先創產品保固卡
公司章 資料填寫不完整或 未加蓋公司章無效
(保固期限內憑本保證卡可享免費之保固服務)
委製廠商: 玻音先創科技股份有限公司 原產地: 中國大陸 地址: 新北市中和區橋安街 13 號 4 樓 連絡電話: 0800-881-181/02-82454263 網址: www.gai-tech.com



GlaXfi-N01 GlaXfi

Glass Diaphragm Neckband Speaker
User's Manual of Model GlaXfi-N01

Thank you for choosing the GlaXfi-N01 Glass Diaphragm Neckband Surround Speaker. Please read this manual carefully to ensure optimal performance and proper use.

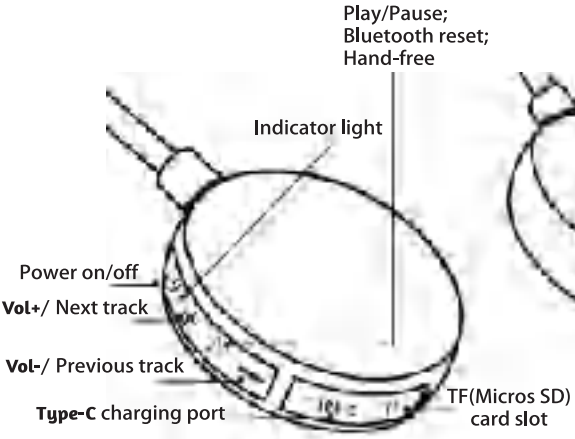

1. GlaXfi-N01 User Manual

1. Bluetooth Pairing

- When powering on the speaker for the first time, press and hold the power button. After the startup chime, the blue indicator will flash every 1—2 seconds, indicating that the speaker has entered Bluetooth pairing mode.
- On your mobile device or other Bluetooth-enabled equipment, activate Bluetooth and search for GlaXfi-N01. Select it to pair. Once pairing is successful, the blue light will blink slowly.
- To reconnect with previously paired devices, press and hold the power button to turn on the speaker. It will automatically attempt to reconnect to the last connected device within 2—3 seconds. A slow blinking blue light indicates successful reconnection.

2. Music Playback

- Press the Play/Pause button to start or pause playback.
- Press the Volume Up/Down buttons to adjust the volume. Long press to skip to the next or previous track.

3. Call Functions / Redial

- Once Bluetooth pairing is successful, double-press the Play/Pause button to redial the last outgoing call.

- When receiving a call, press the Play/Pause button to answer. Short press to hang up.

- During a call, press the Play/Pause button again to end the call.

4. TF Card Playback

- Insert a TF card to play stored music directly. During playback, the blue indicator will blink slowly and remain solid when finished.
- To switch playback from TF card back to Bluetooth, short-press the Power button.

5. Battery Charging

Use the included charging cable to charge the speaker. Input: 5V DC. While charging, the red light will stay on. When fully charged, the light turns off.

6. Auto Power-Off


If the speaker is powered on but not connected to a Bluetooth device, it will automatically power off after 10 minutes.

2. Important Safety Informa-

Before using the Bluetooth speaker, please make sure to

follow these basic safety precautions to ensure reliable and safe operation:

- Read and understand all safety instructions.
- Use a charging device that provides a stable output of DC 5V / 500—1000mA to avoid damage.
- Do not use fast chargers to charge this product.
- This product contains a built-in lithium battery. Please turn off the device when not in use.
- Keep the product away from heat sources. Do not expose it to high temperatures, baking, or blow drying.
- Do not drop the product, subject it to impact, or apply excessive pressure.

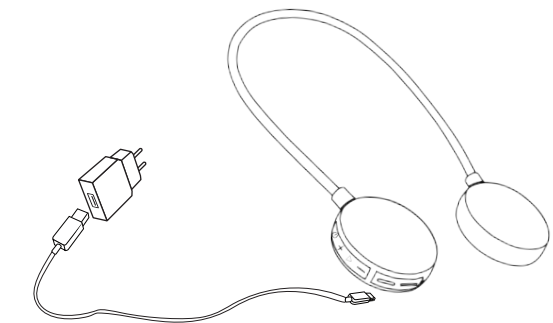

3. Package Contents

If any items are missing, please contact your retailer.

- GlaXfi-N01 Bluetooth Speaker × 1
- TYPE-C Charging Cable × 1
- GlaXfi-N01 Carrying Pouch × 1
- User Manual × 1
- Warranty Card × 1

NOTES

- This product is a speaker and should not be used as headphones to avoid ear damage.
- Avoid using a USB charger over 5V for charging. It may damage the speaker.
- Only charge the speaker in environments where temperatures are between 5°C and 35°C (41°F and 95°F).
- Do not leave the speaker in a car parked in the sun.
- Do not put the speaker near flammable sources or in unstable temperature environments.
- Do not replace the battery by yourself and do not short-circuit the battery.
- Do not use any detergents, thinners, benzines, alcohols, etc. for cleaning. Please use soft, clean towel for cleaning.
- If the speaker is broken, please contact customer service for support. Do not attempt to open and repair the speaker by yourself.
- Charge the battery once every 3 months even without usage.
- It may take longer to charge the battery if the speaker is not used for a long time.

RoHS						
Equipment name: Glass Diaphragm Neckband Speaker、type designation(type): GlaXfi-N01						
Unit	Restricted substances and its chemical symbols					
	Pb	Hg	Cd	Cr ⁶⁺	PBB	PBDE
PCBa	○	○	○	○	○	○
Mechanical	○	○	○	○	○	○
Speaker	-	○	○	○	○	○
Accessories	-	○	○	○	○	○
Note 1: The "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. Note 2: The "-" indicates that the restricted substance corresponds to the exemption.						

FCC:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product name : GlaXfi-N01 Glass Diaphragm Neckband Speaker
Serial Number (S/N) : _____
Date of Purchase : _____ Y _____ M _____ D
Warranty card
GlaXfi
This warranty is invalid if the information is incomplete or not stamped with the company seal. (Free repair service is available during the warranty period upon presentation of this warranty card.)
Product name: Glass Diaphragm Neckband Speaker Model no.: GlaXfi-N01 Manufacturing country: China Product company: Glass Acoustic Innovations Co., Ltd. / www.gai-tech.com Company address: 4th Floor, No. 13, Qiao'an St., Zhonghe Dist., New Taipei City, Taiwan. Contact no.: +886-2-8258-1239