


Smart Glasses


User instructions

Magnetic charging

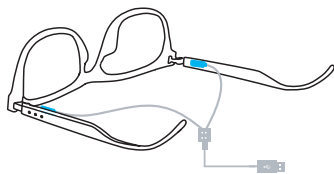


- Magnetic charging: The orange light is always on when charging, and the green light is always on when fully charged (Note: The glasses will automatically shut down when charging)

Power on/off

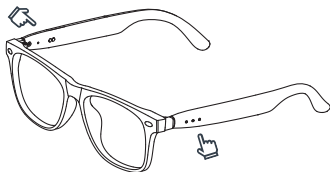

- Power on: The glasses will automatically power on after wearing
Power off: Take off the glasses, and they will automatically power off after 10 seconds, or long press the left or right touch button for 8 seconds while wearing them to force power off (Note: If it does not power on after wearing, please take it off and put it on again. Please keep the temples dry and clean when wearing them. Sweat will affect the power on and off effect. It will automatically power off when the battery is lower than 3.1V)

Glasses connection

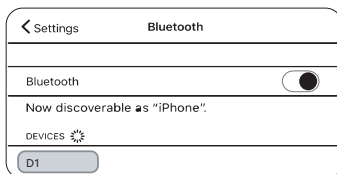


- After the smart glasses are turned on, turn on the Bluetooth of the mobile phone, search for the device name D1 and connect. (Note: If only one ear is paired successfully, go to the phone settings to ignore Bluetooth pairing, then triple-click the left or right touch button of the glasses to pair again)
- (Note: Some icons are different when searching for Bluetooth on Android devices. Please refer to the model)

Wearing sensor




- Wearing induction mode: After the glasses are connected to the mobile phone, take them off to automatically pause the music when playing music

Telephone

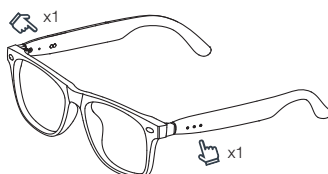


- Answering a call: Touch the key (left or =Right) click once
Hang up the call: Touch the key (left or right) twice
Reject the call: Long press the touch key (left or right) for 1.5 seconds
Switch the phone receiver/glasses audio: Touch the key (left or right) 3 times (Note: In music mode, priority is given to incoming calls, and the call volume can be adjusted on the phone)

Music Control

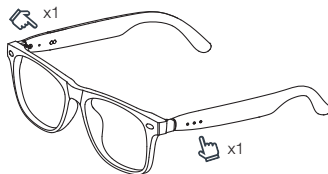


- Music pause/play: Touch the key (left or right) click once
Music switch: Double-click the left touch key to switch to the previous song
Double-click the right touch key to switch to the next song

Voice Assistant

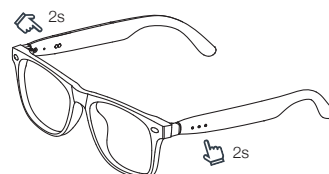

- Wake up the voice assistant: Long press the (left or right) touch key for 2 seconds (Note: Single-click to cancel the voice assistant)

Volume Control

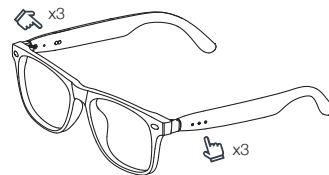

- Volume increase: Triple-click the left touch key
Volume decrease: Triple-click the right touch key (Note: The music volume can also be adjusted on the phone)

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.