

I Appearance



1. Get to Know the Smart Bracelet and TWS Earbuds 2 in 1.

A.This product is sleek design, with TWS earbuds inside smart bracelet. Slim bracelet body and earbuds. Easy and friendly to use. Comfortable wearing experience.

B.This product is with 0.96 inch TFT display.

C.To ensure smart bracelet's battery life, smart bracelet will stop charging earbuds when battery level is low.

2. Earbuds Pairing and Connection with Smart Device

This product comes with two TWS earbuds. One is for Left ear (L) and the other is for Right ear (R).

Two earbuds already finished pairing in factory. Taken out from smart bracelet, they will begin automatic pair. During this pairing process, at first two earbuds will flash at the same time. After a little while one of them will stop flashing. This means they are paired successfully. Then enable BT of your smart device and search for N8. Connect it and you will hear with both of earbuds.

3. Voice Indication

There is voice indication when two earbuds are taken out from smart bracelet.

4. BT Operation Process

This process needs to be operated when smart bracelet is connected with smart phone for the first time.

5. Packing list

Smart Bracelet × 1 Gift Box × 1
TWS Earbud × 2 Charging Cable × 1 User Manual × 1

6. Charging

Smart bracelet charge: use magnetic charging cable

TWS earbuds charge: Put earbuds into smart bracelet and smart bracelet will charge earbuds. The charge will disconnected when earbuds are fully charged.

II Smart Bracelet Connection Instruction

1. Basic functions

- Two Stereo TWS Earbuds. Each one can be used independently or together
- Heart rate monitor
- Blood pressure monitor
- Pedometer, Calories
- Sleep monitor, sedentary alert and music
- MSM alert and push
- Selfie
- Find smart bracelet and find mobile phone

2. APP Download

A: For iPhone go to Google Play APP Store to download *Lookfit*

B: For android go to android app market to search *Lookfit*

C: Scan following QR code to download for both of iPhone and android device



3. BLE Connection with Smart Device

1) Go to the LookFit APP>Device>Bind Device>Search and find the name N8-J to connect it. When connected successfully, it will show N8-J in My Device. At the same time, in home menu you will see the connection symbol. If it does not show that symbol, it suggests that it is not connected. All data will syn upon connection.(How to find device name: Go to Setting menu of smart bracelet, long press touch button  go to Information. Long press  and you will see Mac address of your smart bracelet.

2) After first successful connection, smart watch will auto connect to smart device when it is within its connection range.

3) If LookFit APP want to connect with a second or third smart watch, you must disconnect with previous connected smart watch first.

Remarks: the connection must be done from the APP, not in Settings of your smart device

4. Attentions Should Be Paid to When Connecting

- 1) Make sure your smart device BT is on
- 2) Make sure battery level is sufficient. Power on or charge it when necessary.
- 3) Make sure it is within BT range of 50 cm
- 4) In case that you could not find the smart bracelet name N8-J in the APP, please check if your smart device allow LookFit to have access to smart device.

III Smart Bracelet Main Functions

Power on/off


Power on: Long press  for 3 seconds. Screen will go off when no operation for 5 seconds.

Power off: Go to Settings>Power off. Long press  for 3 seconds and it will power off.



Watch Face Switch

On home menu, long press  for 3 seconds and watch face will switch

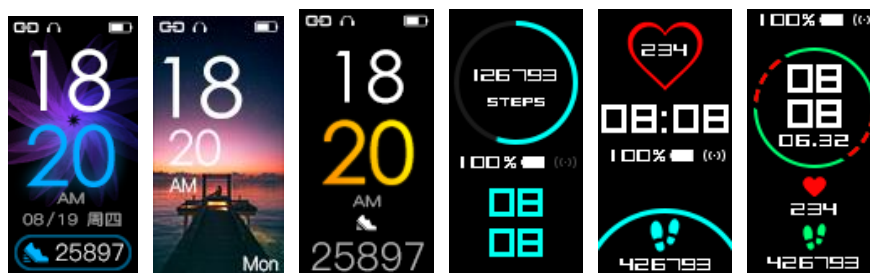

Pedometer

Go to Steps menu and long press touch button . And then it will show weekly history of steps. Screen will go off when no operation for 5 seconds.



Calories

Go to Calories menu to view current calories. Long press touch button  and then it will show weekly history of calories. Screen will go off when no operation for 5 seconds



Distance (KM)

Go to KM menu to view current distance. Long press touch button  and then it will show weekly history of steps. Screen will go off when no operation for 5 seconds.



Hear Rate Monitoring

Go to heart rate menu and long press touch button  to start consecutive monitoring of heart rate. Screen will go off when no operation for 5 seconds.



Sleep Monitoring

Go to sleep monitoring menu and long press  to check current sleep data. Screen will go off when no operation for 5 seconds.



Blood pressure monitoring

Go to blood pressure menu and long press  to start monitoring. The testing time range is varied due to wearer's different physical status-quo. It is normal to take some time. Please keep patient.


During test, the value will show as ---/---. If the data is shown as $\times \times \times / \times \times \times$, please check if heart rate sensor touch close enough to skin and if body gesture is right. Keep body still and relaxed when testing. Data will not store in smart bracelet.



Message Alert/Push


Smart watch will vibrate and show message on screen when there is incoming message from smart device. The message icon on the screen will be same with the mobile phone APP from where message is push.

Remind: This function need to be activated in LookFit APP first. You could choose what APP (Facebook/Instagram/Twitter/Whatsapp etc.) can push message to smart watch.

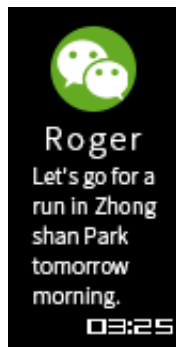

Remote to Take Selfie

Go to More menu > Photo. Long press  to take photo. Screen will go off when no operation for 5 seconds.

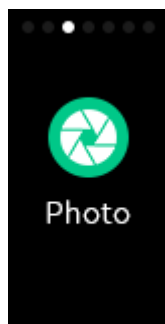


Find Smart Phone

Go to More menu > Find phone. Long press  to find mobile phone. Mobile phone will vibrate and sound to remind you where your phone is left. Screen will go off when no operation for 5 seconds.



Music

Go to More menu > Music. Long press  to control music play/pause, next/previous song. Screen will go off when no operation for 5 seconds.

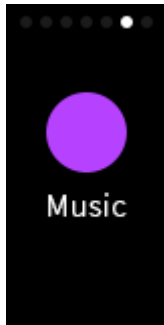

Find Smart Bracelet

In LookFit APP there is a function to find smart bracelet. Click that Find Device option and the smart watch will vibrate for 3 to 5 seconds so as to remind you where the smart bracelet is.

Alarm Clock

On Alarm Clock menu, different alarms (time and repetition day) could be set. Click to view all Alarm Clock that already set.




Sedentary Alert

This function need to be enabled first in LookFit APP settings. When smart bracelet detects wearer sit still for a certain time, it will send alert to wearer.




Settings

Go to Settings menu and long press touch button .(Brightness/Restart/Power Off/Restore/Information/Go Back) Screen will go off when no operation for 5 seconds.

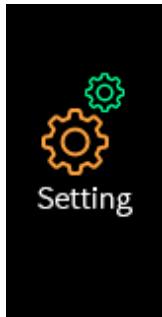


Weather

Go to Weather menu to check current weather. Screen will go off when no operation for 5 seconds.

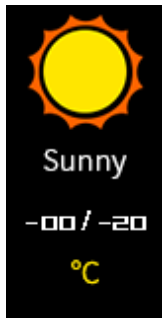

Incoming Call Alert

When there is incoming call, smart bracelet will show the alert and option. Long press touch button  to select the green answer icon. Long press  again and mobile phone will answer phone call. When select red reject icon, long press  to make mobile phone reject the phone call.

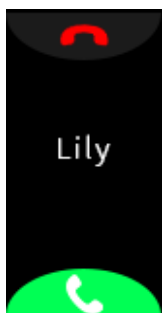

QR Code

In the smart bracelet, there is QR code for downloading APP.



IV TWS Earbuds Functions Instruction

1.Touch operation

Single touch L: To decrease voice volume

Single touch R: To increase voice volume

Double touch L/R: answer/reject phone call or play/pause music

Trio touch of L: previous song

Trio touch of R: next song

Quad touch of R/L: Siri

Five consecutive touch of R/L: Switch earbud voice indication language between Chinese and English

2.Indication Light

A>Power on indication light: After earbud taken out from smart bracelet, every earbud will automatically power on and flash every one second. It will stop flashing after two earbuds are paired or connected to smart phone.

B>Charging indication light: the light is on when charging and off after is fully charged.

V Attentions

1.Do NOT use charging adaptor with charging voltage $>5V$ and charging current $>2A$ to charge. Charge time is 90 minutes.

2.Do NOT charge when there is water left on surface

3.Do NOT use it when submerged, swimming, diving or taking a shower

4.This is Not waterproof. Please take it off before washing hands, raining or participating in intense sport activities

5.This product is consumer electronics. All data measured is NOT for medical purpose. It is reference for your health only.

6.Blood pressure monitor: keep body straight and relaxed. Keep smart bracelet abreast of your heart and silent.

7.Earbuds may get damaged or lost when use during intense sport activities.

VI FAQ

Q: What if fail to upgrade LookFit APP?

A: If LookFit fails to upgrade for first time, re-connect device of smart bracelet then it will remind APP to upgrade.

Q: Why is heart rate (sleeping monitor) data not accurate?

A: Smart bracelet collects data and monitor human body by electronic sensor. It is consumer electronic product and inevitably there is some difference in data. Please be objective of data collected by this product.

Q: How to set APP access?

A: For Android device, go to Settings $>$ Access management $>$ LookFit, and set it as trusted APP.

1. If your smart device install some APP manager, please set LookFit to white list APP

Q: What if earbuds do not have voice even there is incoming alert on smart bracelet in answering phone call.

A: There may be some delay during TWS earbuds. It may be as well to answer the phone when it buzzes for a few times. If the call is answered by the phone, please check if use the phone speaker or BT to answer the call.

Q: I could not hear voice when I am wearing earbuds?

A: Please make sure earbuds and smart device are within effective range and connected.

VII Main Specification

Chipset: FR8018H

Heart Rate Sensor: HRS3300

Weight: 48g

Connection: BT 5.0

Battery Type: Li-lithium

Bracelet Battery Capacity: 220mAh

Rated Voltage: 5V

Rated Current: 80mA

Working Temperature: -5~45°C

Waterproof: No

Compatible O.S: Android 8.1 or above, Smart device BT 5.0, iOS 8.0 or above

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.