


Ediag Link

Bluetooth Vehicle Diagnostic Tool

Quick Start Manual

Scan to activate device

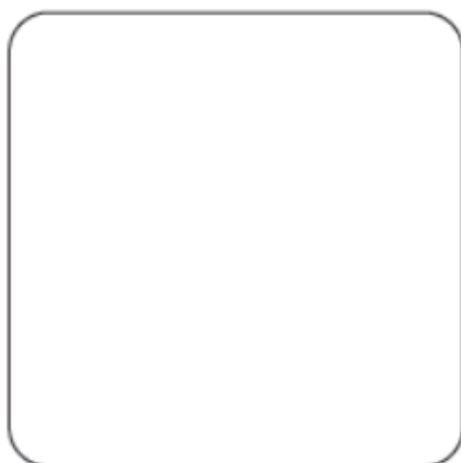

If you have any questions, please contact
the 24/7 customer service in the App.

English

1 Download Eddiag App and Login

Scan the QR code (as shown in the following picture), or Search for "Eddiag" in the App Store or Google Play. The Eddiag App is FREE to download.




Open the Eddiag App, click on "Sign Up". Input your username, email, and verification code (which will be sent to the email you input). then create your own password. Click on "Sign Up" to finish your registration.

Welcome to login	Welcome to Eddiag
Please enter email Please enter password Login Forgot your password? or Login with verification code >	Please use your email address to register, and your email address will be used as your account login credentials. Please enter email NEXT ☐ I have read and agree to the User Agreement, Service Agreement, Privacy policy, and Community Self-Regulation Pact.

2 Activate Your Eddiag Link

When you click on any diagnostic function, the following page appears. Click on the “Activate” button in Eddiag App. Input the serial number and 8-digit activation code.

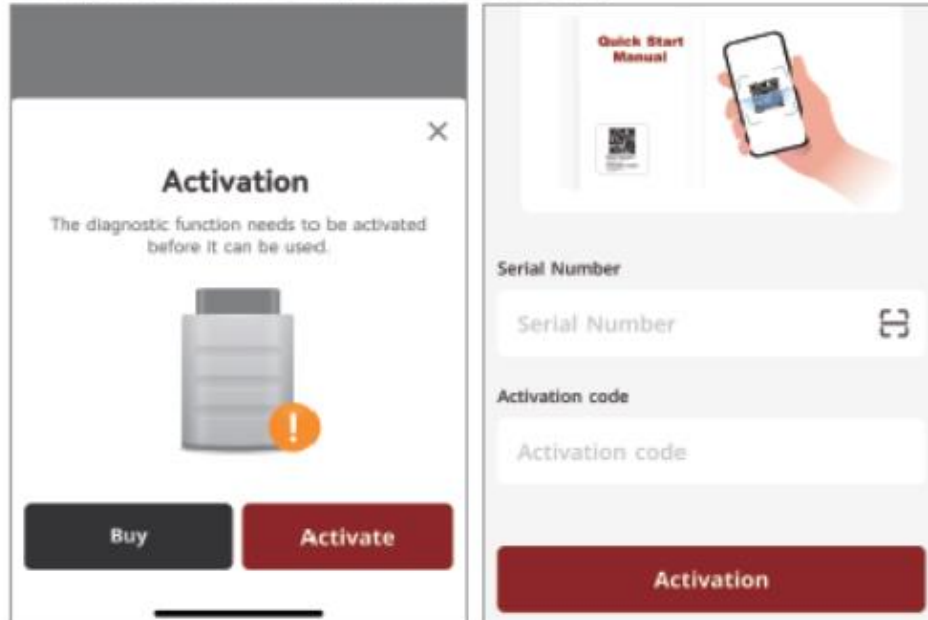

3 Insert the Eddiag Link Device into the OBDII port in your vehicle

As shown below, there are 5 common locations for OBDII port. Insert the Eddiag Link, the device is power on if the light turns green.




4 Bluetooth Connection

Open the Eddiag App, it will automatically search for activated devices. Select your device and connect to it via Bluetooth in the App. **Note:** Please do not directly connect the device to your phone via Bluetooth settings in your phone OS. Make sure to pair your device within the App following the instruction.



5 Download Diagnostics Software

In the "Diagnostics" interface of the App, you will need to download the corresponding diagnostics software when first time perform "All System Diagnostic" and "OBD Functions". And there is no need to download again next time.

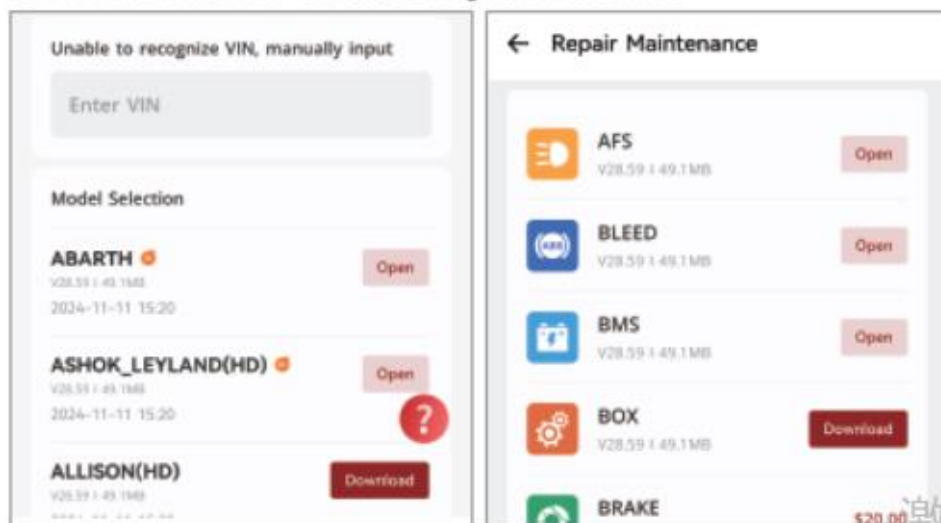

激活 V
转到“设置”

6 Start to Use Your Ediag Link Device

After the Bluetooth connection, you can use all the functions of your Ediag Link device, such as: All Systems Diagnostics, Maintenance & Service Functions, OBDII Diagnostics, Vehicle Coverage Inquire.



7 FAQ

Q: What do the light on Ediag Link indicate?

A: When the Ediag Link is inserted into the vehicle's OBD port, it lights up solid green. After 3 seconds, it starts blinking. Once the Bluetooth connection is established, the light turns off.

During Bluetooth communication, the light blinks green according to the communication speed.

Q: Why do I need to download the diagnostics software after downloading the App?

A: Due to a variety of vehicle manufacturers on the market, different vehicle manufacturers require corresponding diagnostics software. Therefore, Ediag Link will recognize the vehicle manufacturer first while diagnosing, then it will download the corresponding diagnostics software to work.

Q: What vehicles can Ediag Link diagnose?

A: Eddiag Link is compatible with all vehicles supporting OBDII/EOBD protocols after 1996.

Note: Depending on your vehicle, the diagnostics software size varies and download speed is different as well. When first downloading the diagnostics software, it might require a good network connection.

Q: What special functions does Eddiag Link have?

A: Eddiag Link supports 10 special functions, including: EGR adaptation, ABS exhaust, battery matching, brake pad reset, DPF regeneration, electronic throttle adaptation, injector coding, oil reset, steering angle reset, TPMS reset. There will be more special functions according to the diagnostic software of different vehicle manufacturers.

Q: Does Eddiag Link need firmware upgrade?

A: Yes, it does. When the Eddiag Link device is connected via Bluetooth to your smartphone, it will automatically check if the firmware on your device is the latest version. If it's not, it will upgrade automatically.

Q: What smartphones can download Eddiag App?

A: Eddiag App supports smartphones with Android 5.0 and above, IOS 9.0 and above. It cannot be used on PC with WINDOWS system.

Q: Can the same App account bind with multiple devices?

A: Yes, you can set them up in the App.

8 Warranty Card

1. In addition to the legal withdrawal right, you benefit from a 30-day money back guarantee. The device is also guaranteed for a period of one year.
2. Before replacement, please ensure complete packaging;
Before replacement/repair, please call the service number to get the shipping address.
3. Product warranty starting date is based on the payment date.

Customer Service Email: support@kingbolen.com

Official Website: www.kingbolen.com

Youtube: Kingbolen auto scanner center

Facebook: [@kingbolen.fans](https://www.facebook.com/kingbolen.fans)

Instagram: [@kingbolen.fans](https://www.instagram.com/kingbolen.fans)



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ISED Warning

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with Innovation, Science and Economic Canada's radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes aux flux RSS exemptés de licence d'innovation, sciences et développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne peut pas causer d'interférences.
2. Ce dispositif doit accepter toute interférence, y compris celle qui peut provoquer un fonctionnement indésirable du dispositif.

Cet équipement est conforme aux limites d'exposition au rayonnement d'innovation, sciences et développement économique Canada établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et votre corps.