

benzamin AI Sleep Controller M2
User Manual

benzamin

benzamin AI Sleep Controller M2

User Manual

Introduction

We truly appreciate your purchase of the 'benzamin AI Sleep Controller M2' (hereinafter product). Please check this User Manual for the proper use and management of the product. Please inquire the benzamin website (www.benzamin.ai) or the Customer Center (+82 70-4196-3970) if an issue which cannot be solved through User Manual has occurred.

-
- ※ You can download the updated content of this manual from the 'User Manual', which is located in the very bottom section of the benzamin website (www.benzamin.ai).
 - ※ Images of product in this manual are staged in order to assist the understanding of customers and may differ from the actual product.
 - ※ Design and specification of this product may change without prior notice for the improvement of performance.
 - ※ This product is not a medical equipment.

Content

1. Use Guideline for the benjamin AI Sleep Controller M2

1-1 Safety Caution | 05

Safety Warning

Cautions for Use

1-2 Recommended User | 10

1-3 Introduction of Product and its Component | 11

Introduction of Product

Product Component

Name of Each Part in the Product

1-4 Product Installation and Management Method | 17

User Manual (eIFU)

Product Installation Method

Product Management Method

1-5 benjamin Mobile App Installation and Use Method | 24

How to install the benjamin mobile app

How to use the benjamin mobile app

2. Usage Requirement of the benjamin AI Sleep Controller M2

2-1 General and Network Security Policy | 29

General Security Policy

Network environment

2-2 Product Regulation | 30

3. Customer Service Guideline

3-1 Compensation Range per Type | 36

3-2 Responsibility related to the Paid Service (paid by the customer) | 38

3-3 Guideline about Exchange and Refund-related Policy | 39

1.

Use Guideline for the benzamin AI Sleep Controller M2

Please read prior to using the product.

Since following information is intended to prevent unforeseen risks or damages,
please read these contents.

1-1. Safety Caution

Safety Warning

Below marked content is an information that you must check prior to using the product. If warning matters are not abided, it may cause the damage and/or error in the operation of the product or the serious accidents or injuries.

[Use-related Safety Caution]

- 1) This product prohibits the use by the user of the insertional medical equipment, which receives sensitive influence to the outside power.
- 2) Do not use with the heating equipment and thermal tool. It may change the fire or be the cause of the fire.
- 3) Do not put the product near the fire arm. If it touches the fire, the gas or smoke which is dangerous to the physical body may occur.
- 4) If the product other than the power adapter and power cable provided by the company is used, performance may fail or accident may happen. We are not completely responsible for this matter.
- 5) Do not clean the product by using the inflammables such as benzene and thinner. Product may be damaged.

[Electricity-related Safety Warning]

- 1) Do not open or fix or remodel the product at your discretion.
*It may cause the damage or decrease of the operation of product.
- 2) Soaking this product in the water may cause the risk of the electricity shock.
- 3) Do not use the damaged outlet.
- 4) Do not modify/damage by artificially pulling the power cable, which is connected to the product. If it is naturally damaged, please contact the Customer Center.
- 5) Do not touch the power cable by using the wet hand.
- 6) If the product is flooded, do not connect the power plug and contact the Customer Center.

Cautions for Use

Below marked content is an information for the proper use of the product. Please prevent the error of the operation of product or minimal damage of product or an accident after checking stated caution.

[Cautions prior to Use]

01. A person with cardiovascular disease & serious old age-related disease must take caution in use.

This product assists sleeping by stabilizing the heartbeat of the user by the 'AI heartbeat synchronization' technology. Person who is suffering from the serious cardiovascular disease or old age-related disease must take caution in use.

02. This product was designed by maximizing for the one person.

If at least two users lies down in one product or is used with the pet, the collected data may not be accurate. The sleep improvement effect through the synchronization may be decreased.

03. Customize the horizontal part of the floor when installing the product.

If the horizontal part of the floor does not fit, the sound may occur or the performance of the product may be decreased.

04. Do not damage the product care label.

Care label is attached on the bottom part of the pillow area of this product. You may check the product and related information such as A/S and qualifications etc.

05. You must remove the vinyl wrapping.

If a defect on the product is detected prior to removal of the vinyl wrapping, do not remove the vinyl and inform the delivery driver immediately.

06. Use the frame according to the product.

If a frame which does not fit the size of the product is used, it may affect the safety of the user and performance of the product.

07. We recommend the delivery of the product by at least two people for the safety of customers.


We are not responsible for the physical and monetary damage which has occurred during the delivery of the product by discretion of customer after shipping/ installation by the Company.

[Cautions during Use]**01. Open the window often for a week after installing product for the first time.**

If a mattress is newly installed, natural 'smell of the new product' may occur. Smell of the new product is naturally eliminated by opening the window for the certain period.

02. Do not give serious shock to the product.

This product is an AI Sleep Controller, and it has a sensing device and an actuating device inside. If you jump on the product or give a serious shock, it may affect the operation and performance. It is strictly prohibited to walk or run on the product. Shock may affect the operation and performance of the product and could lead to damage. The image below indicates that the equipment is attached to the product.

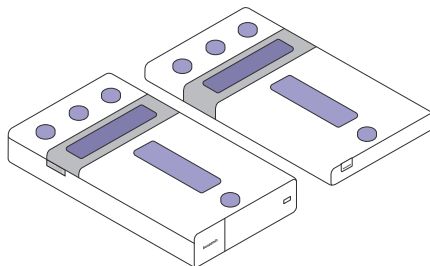

※ We are entirely not responsible for entire matters which occurred due to not abiding below stated matters.

03. Do not keep the product by folding or making it stand.

If it is preserved by making the product stand, it may failure and decrease the performance due to the damage of the inner component.

04. Make sure to not get it wet on the water or other liquid.

If the partial part of the product such as cover and inner foam etc. is wet, please disconnect the power and then use after completely drying it while avoiding the sunlight. Since this product is consisted of the several layers of interior material and electric parts, if it gets wet by the liquid, the hygiene and durability may be weakened and cause the failure of the component. We recommend to use the waterproof cover.

05. We recommend to wrap the cover when using the product.

The upper part of the product is manufactured by the soft fabric material. If the repetitive collision occurs, the damage may occur on the surface.

06. Be careful when using the liquid air freshener.

If you directly spray the liquid air freshener to the surface of this product, color of the surface of the product may change or get polluted according to component of the air freshener.

07. Refrain from using it with the heating equipment and topper.


If it is used with the heating/water mattress, electric pad, and the separate topper, it may disrupt the performance of the product or not operated well.

08. Topper product shall be shipped in the folded condition.


Due to the nature of the foam material, it may become slightly compressed during transportation and storage, but this is normal. If it is stored for a certain time in the indoor temperature, it will naturally return to its original size. If it is installed immediately after removing the vinyl, the cover fit may not fit properly since the topper is not completely restored. Please allow enough time for it to fully return to its original size.

09. Due to the design which was designed in order to prevent the injury, the power connector cover on top of the product may detach if it is stepped on or receives a shock.

Due to the safety-oriented design of the product, the power connector cover on top of the product may detach if it is stepped on or receives a shock. This is a safety measure to prevent injury. To use it normally, simply reattach the separated cover. Additionally, since the topper is shipped in a folded or compressed state, there is a possibility that the cover may be missing when you unpack it. Please attach the (power connector) gently according to the square module inside after checking if it was integrated properly by referring to the image below in such case. Please make sure not to apply excessive force during installation.

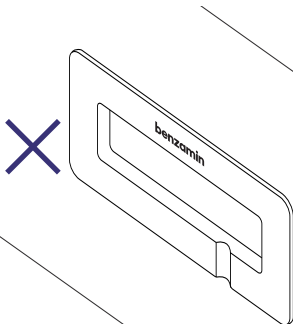

Condition in which the power connector cover is disconnected

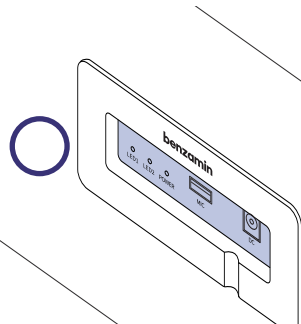


Condition in which the power connector cover is connected normally

1-2. Recommended User

This product is maximized for the use by one person. If at least two people want to use this, please purchase the separate product and service.


It is recommended to use by the user who weighs from 45kg to 180kg. The length of the height of this product is at least 2,000mm, and any user whose upper part of the body may locate in the heart position according to the below picture can use regardless of the height.

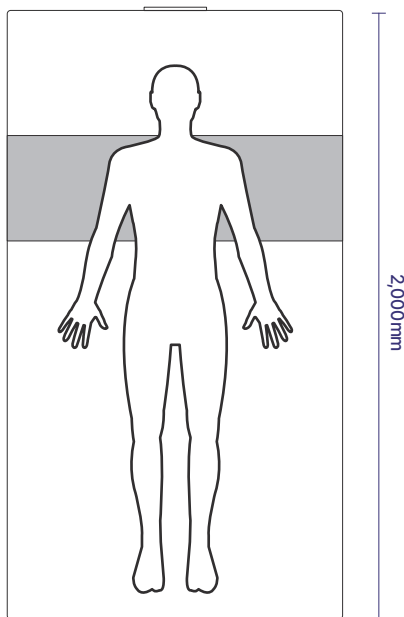


1-3. Introduction of Product and its Component

Product Introduction

This product monitors the bio/sleeping data of the user in live through the nonrestraint/non-contact method. It empowers deep sleep and improves the sleep inertia by controlling the autonomic nervous system activity by forming the heartbeat imitation micro vibration through the 'AI heartbeat synchronization' technology.

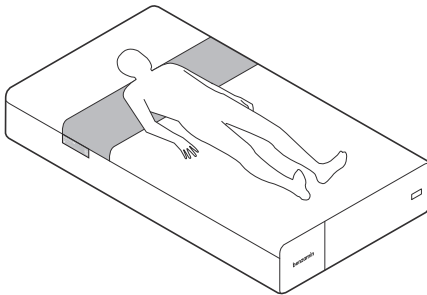



Mattress

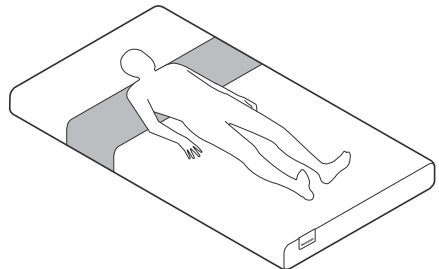

Topper


Product Component

Mattress Type

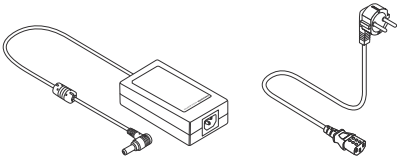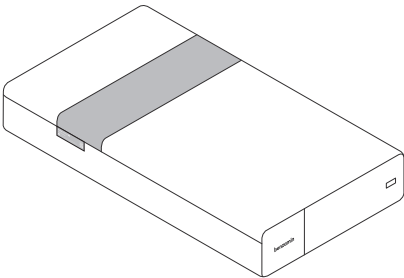

Product (mattress type)

Power adapter & power cable





Product warranty

Warranty card



User Manual

Topper Type

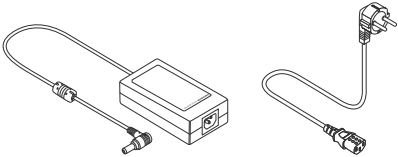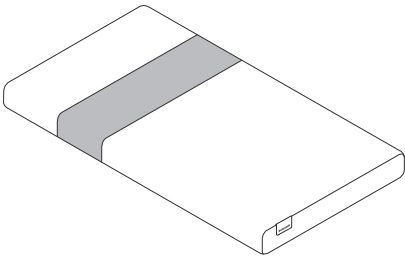

Product (topper type)

Power adapter & power cable




Product warranty

Warranty card


User Manual

Name of Each Part in the Product

Mattress Type - benzamin AI Sleep Controller M2

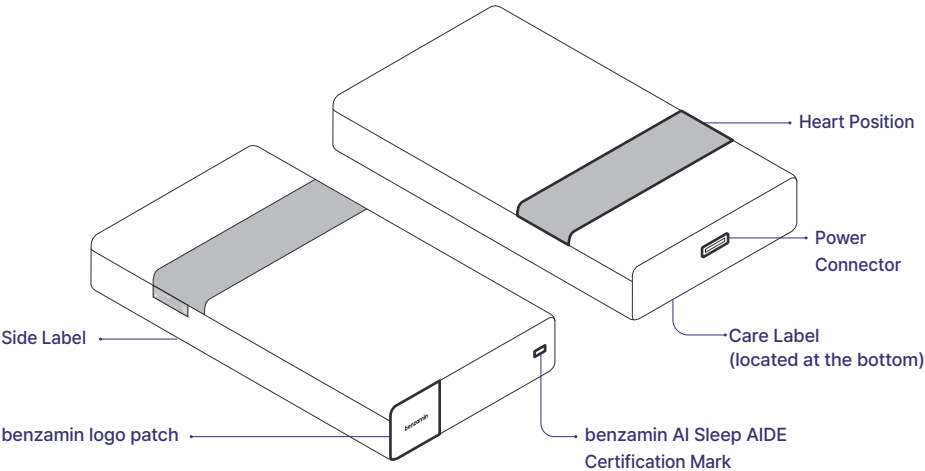

Topper Type - benzamin AI Sleep Controller M2

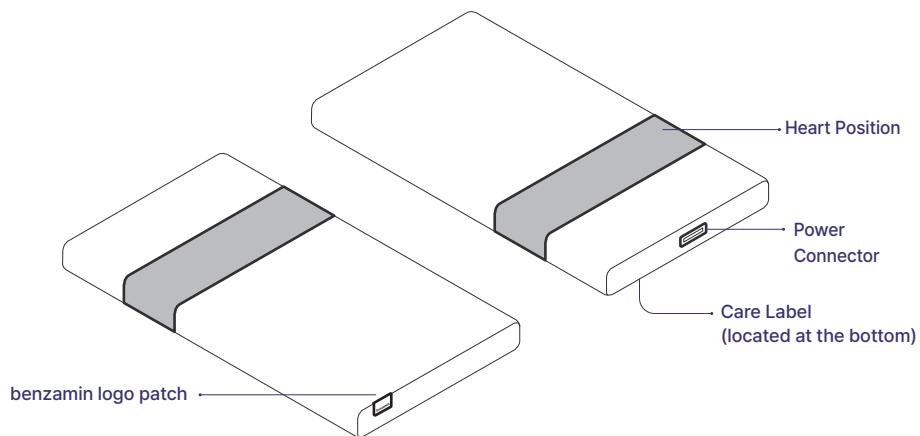

Mattress & Topper Type - M2 Sleep enhancer

1 Power Connector

2 Snoring Detector

* Do not remove at the user's discretion.


3 Power LED

(function which checks the condition of the product operation)

If it is a green light lighting - Power is normal ON
If it is not lighted - Power is not connected

4 System Condition LED

5 Network Condition LED

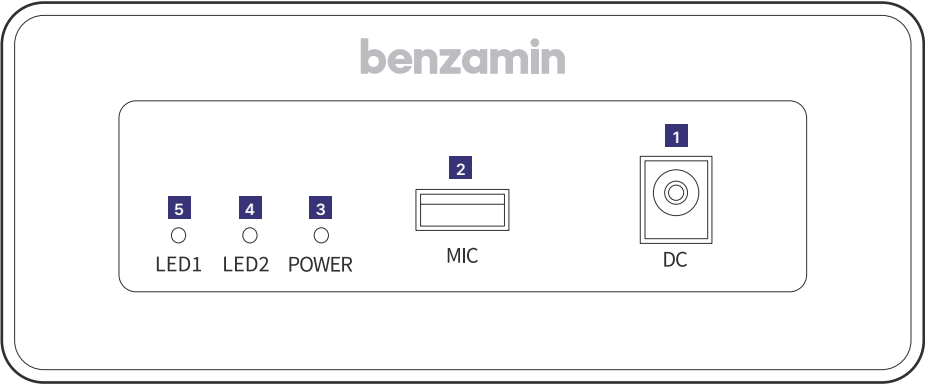

1-4. Product Installation and Management Method

User Manual (eIFU)

This user manual explains about the installation, use guideline, maintenance repair, and management of the 'benzamin AI Sleep Controller M2'. It also provides an information about product specifications, problem solving, and methods to receive an assistance.

The PDF(eIFU) of this user manual can be downloaded from the 'User Manual', which is located in very bottom section of the benzamin website (www.benzamin.ai) PDF file may be printed, saved, or searched by using the Adobe Reader. Adobe Reader program may be downloaded directly from the Adobe Systems (www.adobe.com)

Product Installation Method


1) Selecting the location of the product according to the length of the power cable

The basically provided length of the power cable is about 1.5m. If the distance between the product and socket is far by unavoidable term, please connect the power by using the separate multi tab according to the length.


2) Installing the Product and Connecting the Power

A If there is no proper frame according to the size of product or no frame, locate the product on the desired location.


* Substitute upper part of the product in a way to match with the direction of the upper part of the body of user who is trying to sleep.

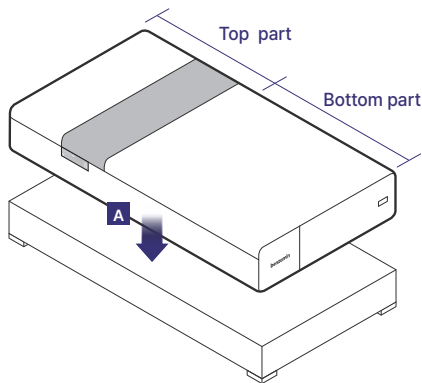


- B** Connect the power adapter and power cable.
- C** Connect the power adapter to the Sleep Enhancer.
- D** Connect the connected power cable to the outlet.

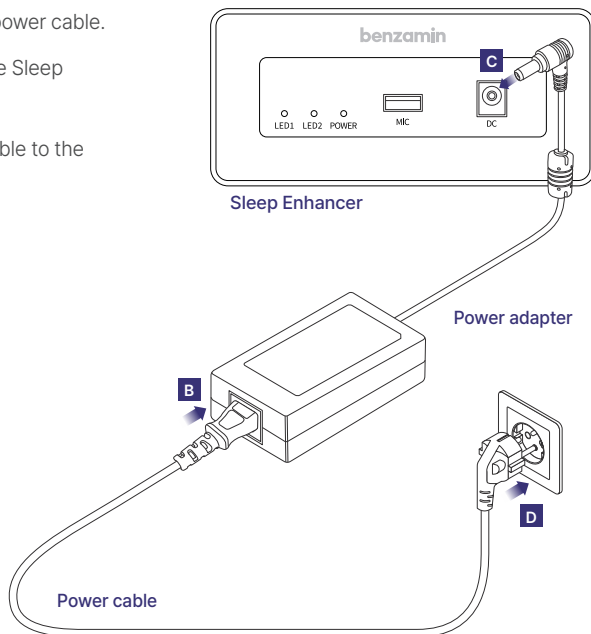

E If the power is connected, the product is operated automatically and if the preparation for the use is complete, benzamin welcome sound (jingle) is played.

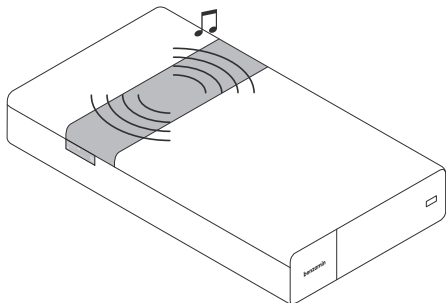


Mattress

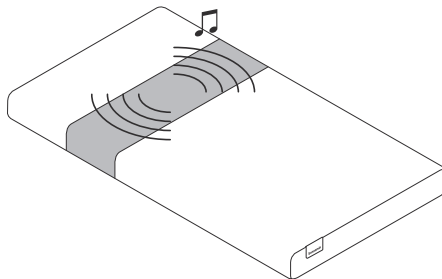

Topper



3) How to use the product

Please lie down so that the upper part of the body of user can be positioned in the upper part of the heart in product. If you lie down while positioning the upper part of the body toward the bottom part of the product, the precise bio data measurement of user may be difficult.

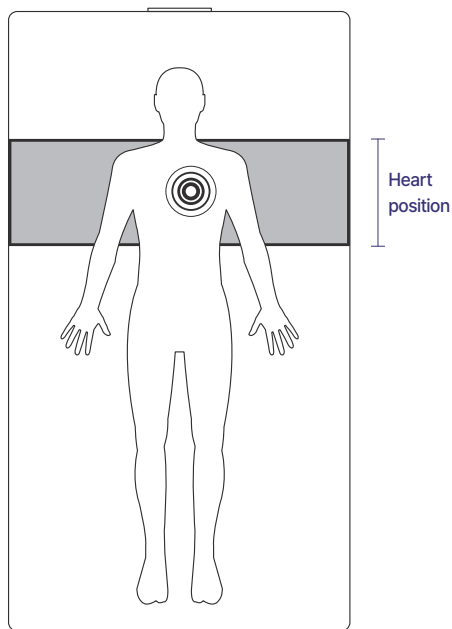

4) Please refrain from using the separate heating equipment & topper.

If it is used with the electric pad, heating/water mattress or the separate topper, it disrupts the precise bio data measurement or it decreases the performance of the product.

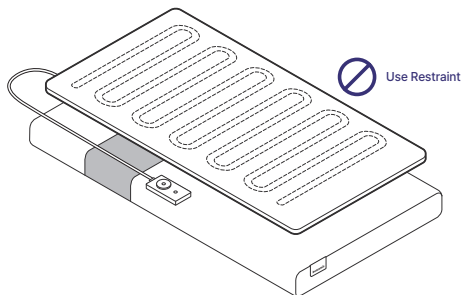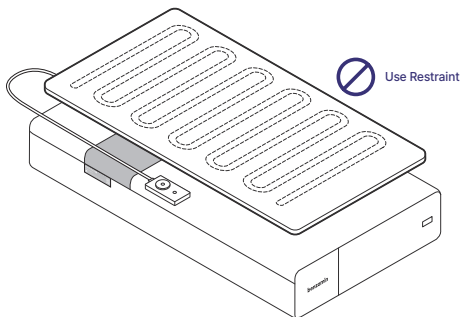

Product Management Method

It is impossible to do the laundry for the entire part of this product. If you want to do the laundry for certain parts of the product inevitably, please follow below cautions.

Cleaning the mattress cover part

- 1) After you dilute the detergent by using the separate spray container and then spray the small amount, clean by softly spreading around.
- 2) Get rid of the remaining water by tightly pressing the cleaned.
- 3) If there is a part where it is incompletely dried, please dry thoroughly by using the hair dryer.

We do not recommend the wet cleaning service since if it is requested to the professional mattress cleaning company, it has a component part of the internal electric wiring.

* We are not responsible for issues occurred due to receiving the wet cleaning service.

* Please inquire the Customer Center about the benjamin professional cleaning/care service.

※ We are entirely not responsible for issues related to the uninstallation/unaddressed issues as above.

1-5. benzamin Mobile App Installation and Use Method

Benzamin mobile app is necessary for control and management of the product, checking the bio/sleeping data of the user, and sleep control.

Guideline prior to Installation of the Mobile App

- 1) Must connect the power of the product in order to connect product with the mobile app.
- 2) Please check if the main LED is lighted in green color in order to check the connection with the power of the product.
- 3) Product and mobile app are connected through the 'Bluetooth'.
Please check if the 'Bluetooth' connection of the mobile device of user is good in advance.
- 4) It is possible to receive service well for the product only if it is connected to the Internet through the Wi-Fi. Connect the Internet through Wi-Fi when registering the product according to the guide in the benzamin mobile app.


*This product supports the 'Wi-Fi 2.4G' and does not support the 'Wi-Fi 5G'.

How to install the benjamin mobile app

1) Please scan the QR Code of the side label which is located in the side part of the product according to the picture.

* You may download the mobile app by directly searching the 'benjamin' on the 'Google Play Store ' and 'Apple App Store'.


* The installation method via QR Code applies to the mattress product.

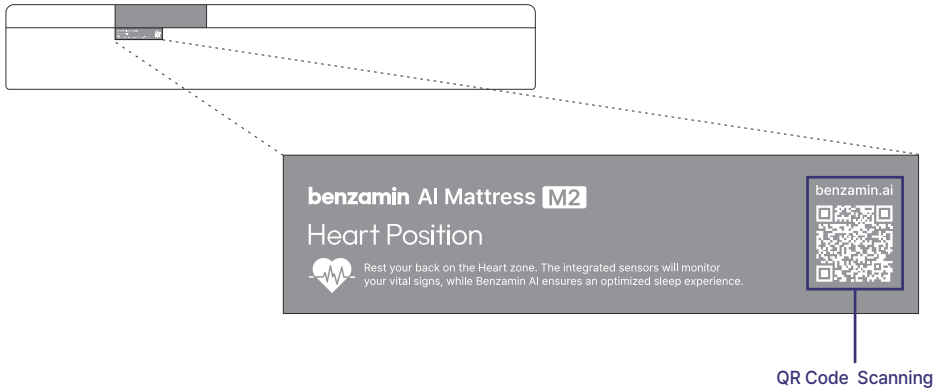

2) Please download/install the mobile app.

Install in the 'Google Play Store ' for the Android OS, and 'Apple App Store' for the iOS.

App download/
installation button

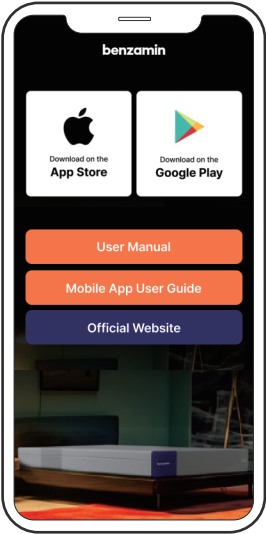


How to use the benzamin mobile app

Please check the 'Mobile App User Guide' from the connected landing page through the side label QR Code.

The mobile app is continuously updated as the service, content, and performance is added. Please check the updated content through the 'Mobile App User Guide'.

'Mobile App User Guide' button

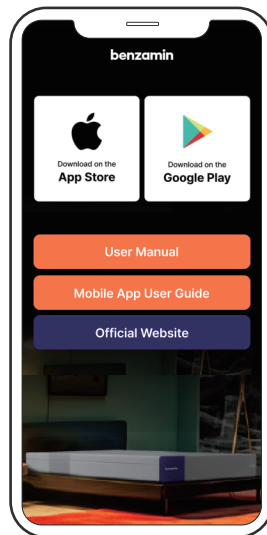

2.

Usage Requirement of the benzamin AI Sleep Controller M2

2-1. General and Network Security Policy

General Security Policy

- 1) Please be cautious so that the ID and password of user would not be revealed to others.
- 2) Please always maintain the mobile app as the most recent version through the update.

Network Environment

- 1) **It is recommended to connect the product to the wireless Internet through the WiFi router.**
(It is impossible to connect the product to the wire Internet. If it is connected through the mobile Hotspot, the connection may be limited.)
- 2) **Connecting this product to the wireless Internet (Wi-Fi 2.4GHz) is proceeded through the benzamin mobile app. Please connect according to to the guideline of the mobile app.**
- 3) **Must use the secured Wi-Fi network.**
(It is recommended to use the WPA2 or the stronger security protocol.
This product only assists the 2.4GHz.
- 4) **If you switch the Wi-Fi router, changing Wi-Fi is necessary through the benzamin mobile app.**

2-2. Product Regulation

benzamin AI Sleep Controller M2

Mattress

Name of Product	AI Sleep Mattress
Name of Fiber Content in Fabric and Blending Ratio	Tencel Three-Layer Weave Fabric (82% Polyester, 17% Rayon, 1% other)
Primary Internal Material	benzamin AI synchronization Foam, benzamin AI optimize Foam, Micro titanium pocket spring
Use of Recycled Interior Materials	None
Seller	BRLab Inc. 16F, Seongwon Tower, 514, Seolleung-ro, Gangnam-gu, Seoul
Manufactured Company	Codect Co.,Ltd.
Country of Origin	Republic of Korea

Topper

Name of Product	AI Sleep Topper
Name of Fiber Content in Fabric and Blending Ratio	Tencel Three-Layer Weave Fabric (82% Polyester, 17% Rayon, 1% other)
Primary Internal Material	benzamin AI synchronization Foam, benzamin AI optimize Foam
Use of Recycled Interior Materials	None
Seller	BRLab Inc. 16F, Seongwon Tower, 514, Seolleung-ro, Gangnam-gu, Seoul
Manufactured Company	Codect Co.,Ltd.
Country of Origin	Republic of Korea

Module

Name of Module	Sleep Enhancer M2
Normal Voltage	Product Rate: 12V, 5A Adapter Rate: 100-240V(ac), 50/60 Hz, 60VA
Used Electricity Power	2.5W
Wireless Support	Wi-Fi: 2.4Ghz Bluetooth: BLE 4.0
Seller	BRLab Inc. 16F, Seongwon Tower, 514, Seolleung-ro, Gangnam-gu, Seou
Manufactured Company	Codect Co.,Ltd.
Seller	BRLab Inc. 16F, Seongwon Tower, 514, Seolleung-ro, Gangnam-gu, Seoull
Country of Origin	Republic of Korea

Common Matters for Mattress & Module

Mattress	S: 900(±20) x 2000(±20) x 330(±20) mm / 19(±1) kg
Size and Weight	SS: 1,100(±20) x 2000(±20) x 330(±20) mm / 23(±1) kg Q: 1,500(±20) x 2000(±20) x 330(±20) mm / 27(±1) kg
Topper	S: 900(±20) x 2000(±20) x 110(±20) mm / 13(±1) kg
Size and Weight	SS: 1,100(±20) x 2000(±20) x 110(±20) mm / 16(±1) kg Q: 1,500(±20) x 2000(±20) x 110(±20) mm / 21(±1) kg
Warranty period	Provides the free A/S according to the stated warranty standard in the user manual within the Agreement period. (Validity of warranty period occurs from the time of shipping/installing the product) ※ If it is a defect occurred due to negligence of consumer, free A/S is unavailable even if it is within the warranty period.
Software	benzamin Sleep AIDE™

**Recommended
Using Environment**

- 1) Condition of the Temperature and Humidity in the Using Environment
It is recommended to use this product in below clean and safe environment.
Temperature: 0 °C to +60°C
Humidity: Below 80% RH (place where it does not have a dew condensation)
Atmospheric: 50kPa to 110kPa
- 2) Use the product neatly.

**Recommended
Preservation
Environment**

- 1) Temperature and Humidity of the Using Environment
It is recommended to use this product in below clean and safe environment.
Temperature: -10°C to +60°C
Humidity: Below 80% RH (place where it does not have a dew condensation)
Atmospheric: 50kPa to 110kPa
 - 2) Preserve it in the room temperature while avoiding the sunlight and dust and please do not preserve in the dried place.
 - 3) Preserve the product neatly after using it.
-

*Design and regulation etc. of the product may be changed without giving notice in advance due to the application of law, improvement of product, along with product quality.

3.

Customer Service Guideline

3-1. Compensation Range per Type

BRLab Inc. shall provide warranty as below in accordance with the Consumer Dispute Resolution Guidelines (announced by the Fair Trade Commission).
For matters not specified in manual, the “Consumer Dispute Resolution Guidelines” and “Standard Terms of Agreement” shall apply.

Consumer Damage Type		Content of Compensation	
		Within Warranty Period	After Warranty Period
Failure due to naturally occurring performance or functional defects under normal used conditions	When customer requests to exchange regarding the failure	Product Exchange (free)	N/A
	If it is impossible to repair within the product quality warranty period	Product Exchange (free)	N/A
	If it is impossible to repair due to exceeding the product quality warranty period	N/A	N/A
	Damage which has been occurred during process of shipping and installation of the product during purchase	Product Exchange (free)	N/A

Failure in terms of performance and function due to negligence and fault of the consumer	If it is possible to repair	Product Exchange (paid)	N/A
	If it is impossible to fix within the product warranty period	N/A	N/A
	If it is impossible to fix due to exceeding the product warranty period	N/A	N/A
Other	If requesting for the replacement of component when there is no fault in terms of performance and function (limited to the mattress cover)	Replacing cover (paid)	Replacing cover (paid)
	When replacing parts that naturally wear out during normal use (limited to the mattress cover)	Replacing cover (paid)	Replacing cover (paid)

*If it has broken down due to the natural disaster (lightning, fire, disaster, storm and flood etc.), it is impossible to do A/S and compensate.

3-2. Responsibility related to the Paid Service (paid by the customer)

If it belongs to below, it shall be processed as paid even if it is within the product warranty period.

If it is not a failure of the product

(loss of component, checking issue other than product, installation and termination etc.)

- If it is terminated or changing the installation due to transfer and move etc. of the product
- If re-supply of the lost component is requested during use
- If requesting for the exchange due to the defect occurred due to natural change of the color etc. due to pollution by the alien substance and not putting on the cover
- If it is due to the exterior causes which is not other defect of the product itself

If it is damaged due to the negligence of the consumer

(if it is damaged due to careless use by the consumer and wrong repair)

- If failure, breakdown, and damage has occurred due to the exterior shock or dropping down
- If the alien substance (garbage, drink, and other polluted substance) has been tainted on the product
- If structure of the product is changed on discretion
- If exterior has changed its color or has been changed due to the organic solvent such as benzene and thinner etc.
- If it has been changed by forcefully inserting the improper frame to the product
- If product has been damaged due to fluff, tearing, and hole etc. of the product due to the negligence of the consumer (excluding the case when it has occurred during the installation)
- If it has been turned off due to the trace of lying down after it was used by the user

3-3. Guideline about Exchange and Refund-related Policy

01. If a smell comes from the product

If the product is newly installed, the natural 'smell of new product' may occur.

If the product is naturally ventilated in the natural wind while avoiding the sunlight in the sunny day, the smell of the product decreases.

Within 7 days after shipping/installation	Free A/S	Product exchange
After 7 days since shipping/installation	N/A	N/A

02. If the polluted substance has been smeared on the product

Occurrence and checking during installation of the product	Free A/S	Exchanging product or replacing the cover
Occurrence during use	Paid A/S	Exchanging product or replacing the cover

03. If it is due to the sewing defect of the product

Occurrence and checking during installation of the product	Free A/S	Replacing the cover
Occurrence during use after installation	Paid A/S	Replacing the cover

04. If the phenomenon of turning off the foam occurs

We will exchange the product for free or by payment after checking the condition when it has changed by exceeding the range of error (+3.5cm) for height of the product.

Occurrence and checking during installation of the product	Free A/S	Product exchange
Within 7 days after shipping/ installation	After checking the condition	Free A/S if error of turning off is at least ± 3.5 cm N/A if error of turning off is below ± 3.5 cm

05. When wishing to replace the cover

When replacing the cover is necessary due to reasons such as negligence of the customer during use, you may receive the replacement by registering the A/S.
(when requesting for the replacement, separate cost such as cover replacement cost etc. shall occur.)

06. When Free A/S is Impossible

If it belongs to below, free A/S is impossible even if it is within the product warranty period. The entire amount of the paid service shall be paid by the customer.

- 1) If installing by constraint in the circumstance of not being able to install the product
- 2) If installing on the frame which does not fit the size by constraint
- 3) If requesting for the exchange for the product within error range (stated in the label regulation per each product) of the product regulation
- 4) If it is a fault of customer such as turning off due to changing the location of the product by discretion of customer or being polluted etc. after the installation
- 5) If it is damaged due to opening of the inner part of product by customer's discretion without a permission after the installation

07. Case when it does not belong to Warranty

- 1) When not abiding the use and installation related warning, which is stated in the product manual
- 2) When product is destructed and damaged due to fire, flood, and natural disaster
- 3) When changing the structure of the product by customer on discretion (it also belongs to the arbitrary disassemble of the product cover, inner foam of product, and internal electric wiring)
- 4) When the customer directly moved or due to the transportation after the installation
- 5) When a person who is not appointed by the Company installs, repairs, or remodels
- 6) When product is used without authorization for a commercial purpose in accommodations or nursing homes etc. without prior approval from the Company

7) Natural increase or decrease in softness or loss of elasticity due to the usage time of polyurethane foam (this is a common phenomenon that may occur as the product becomes more molded over time and is not considered a product defect)

8) Changes in material properties due to temperature and humidity, inherent to the characteristics of polyurethane foam (due to the nature of the foam, there may be differences in firmness depending on the temperature. Generally, the foam is softer in the summer than in the winter.)

9) Natural change of color, practical stain, and blacken phenomenon which is occurred as using period and time passes

10) Minor structural defects and slight appearance defects (such as subtle differences in cover stitching patterns or shapes, slight lifting of foam corners at the bottom due to the cover, etc.) that do not cause serious issues with the use of product.

11) Individual sensitivity such as individual preference on hardness, texture, and comfort etc., along with allergies etc.

*Colors and shape of the product may differ from images in catalogue and advertisement image.

Memo

FCC

FCC Regulatory Information

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning

Any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate this product.

Part 15.105

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

※ BRLab Inc. is not responsible for any damage caused by electromagnetic interference caused by using items other than those approved by BRLab Inc.

Mattress Product Conformity

- Name of Company : BRLab Inc.
- Bed mattress: target of the product quality business management and industrial products safety management law
- KCL Test Report
Korea Conformity Laboratories
- Radon Test Report Hanil Nuclear Co.,Ltd.
- Spring Wire Carbon Content POSCO



Topper Product Conformity

- Name of Company: BRLab Inc.
- Topper: target of the product quality business management and industrial products safety management law
- KCL Test Report
Korea Conformity Laboratories
- Radon Test Report Hanil Nuclear Co.,Ltd.



Electromagnetic Compatibility (EMC) Certification for Broadcasting and Telecommunications Equipment

- Name of Company: BRLab Inc.
- Name of Product: Sleep Enhancer M2
- Name of Model: benzamin AIDE M2
- Manufacturer/Country of Origin: BRLab Inc. /
Republic of Korea
- Certification Number:
- Manufactured year and month: Written
separately



Customer Center Information

BRLab Inc.

Address: 5F, 413, Teheran-ro, Gangnam-gu,

Seoul, South Korea

Telephone: +82 70-4196-3970

E-mail: cs@brlab.ai

benzamin

User Manual Document Number: BRLM2-IFUKR-2409(Rev.1.0)

©2025. BRLab Inc. All rights reserved.

www.benzamin.ai

