

AMPS AIR™

QUICK START GUIDE
GUIDE DE DÉMARRAGE RAPIDE

SOL REPUBLIC

WELCOME

To AMPS AIR, your new truly wireless earbuds that give you more freedom in everything you do. They're comfortable, have a secure fit, and deliver incredibly rich sound to your music experience.

Stash them away in their portable case to recharge. When your phone battery gets low, the case doubles as a battery backup.

Love your AMPS AIR? Your voice matters. Write a review so we know what you think, and share a picture with #FinallyFree @SOLREPUBLIC.

Feel the music, not the headphones.

Pour AMPS AIR, vos nouveaux écouteurs vraiment sans fil qui vous donnent plus de liberté dans tout ce que vous faites. Ils sont confortables, ont un bon ajustement, et d'offrir une incroyable richesse sonore à votre expérience musicale.

Stash -les dans leur boîtier portable pour recharger. Lorsque la batterie de votre téléphone est faible, le cas se double d' une batterie de secours.

Aimez votre AMPS AIR ? Votre voix compte. Donnez votre avis nous savons donc ce que vous pensez, et partager une photo avec #FinallyFree @SOLREPUBLIC.

Sentez-vous la musique, pas le casque.

English.....	4
Español.....	14
Français.....	24
Deutsche.....	34
Italiano.....	44
Dansk.....	54
Magyar.....	64
Polskie.....	74
Русский.....	84
Nederlands.....	94
Suomalainen.....	104
Svensk.....	114
ελληνικά.....	124
Português.....	134
Türk.....	144
日本語.....	154
Čeština.....	164
Slovenský.....	174
Norsk.....	184

WHAT'S INSIDE



4 sizes of ear tips



NOTE

For the best fit and sound, start with the largest size ear tip and then work your way down.



USB Charge Cable

- 1 Multi-function button
- 2 Earbud status LED
- 3 Microphone port
- 4 Earbud charging contacts
- 5 Case battery LEDs
- 6 Micro USB charging port – to charge the portable case
- 7 USB charging port – to charge your smart device

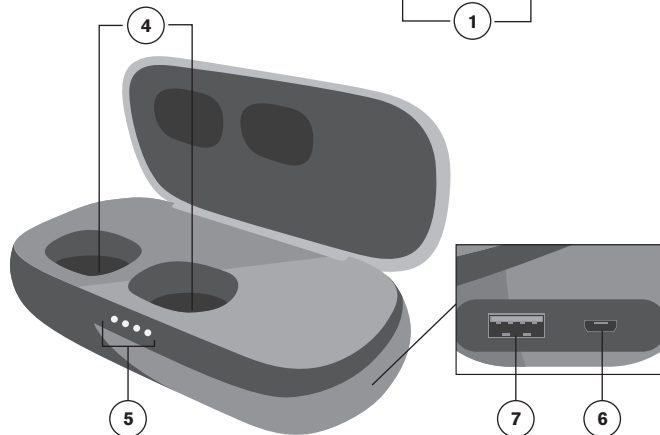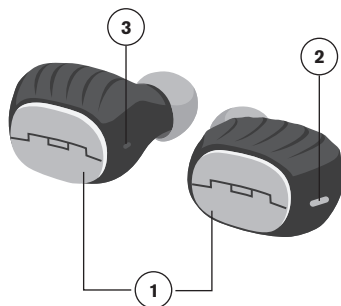


Travel Case with Backup Battery

SETUP


CHARGING YOUR EARBUDS

To charge the earbuds, place them into the portable case. The red LEDs show that they are charging. When fully charged, the LEDs turn white, and then turn off.

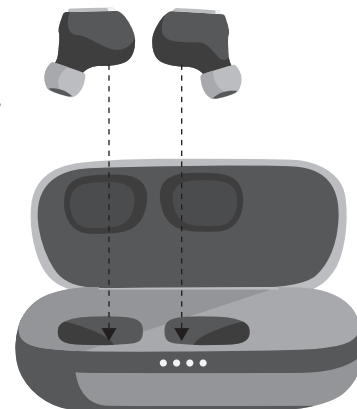


CHARGING YOUR PORTABLE CASE

Plug the small end of the USB cable into the micro USB port, located on the right side of the case. When all 4 LEDs are lit, it's fully charged.

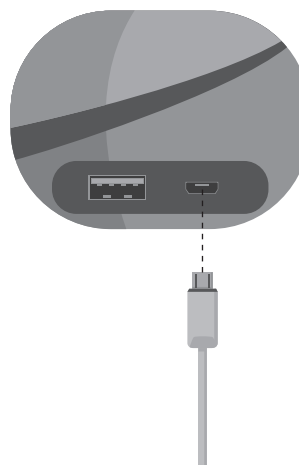

CONNECT BOTH EARBUDS

Connect both earbuds for stereo sound. This provides the most immersive music experience.

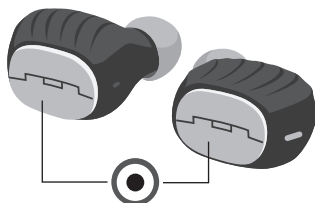

STEP ONE – TURNING ON THE EARBUDS

Your earbuds will automatically turn on when taken out of the charging case. If you want to turn them on manually, you can quick press the multi-function button once on both earbuds.

STEP TWO – CONNECTING THE EARBUDS TO EACH OTHER

When you take the earbuds out of their case, they will automatically connect to each other, and the LED will be solid white. If they don't connect, quickly double-press the SOL button on both earbuds at the same time. This puts them into sync mode, and the LEDs will pulse white. Once connected, the LEDs will turn solid white.

STEP THREE – CONNECTING TO A DEVICE

Enable *Bluetooth* on your device. From the *Bluetooth* menu, select "Amps Air." When the device and Amps Air are connected, you will hear a tone. This means pairing is complete.

Bluetooth®


Devices

Amps Air



CONNECT ONE EARBUD

Connect only one earbud for mono sound. This is a great option if you want to hear your surroundings as well as your music.

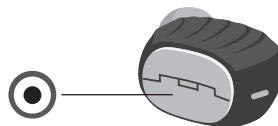

STEP ONE – TURNING ON THE EARBUD

Your earbud will automatically turn on when taken out of the charging case. If you want to turn it on manually, you can quick press the multi-function button once.

STEP TWO – PAIRING MODE

Take your earbud out of the case, wait until the LED flashes red and white. This will indicate that your earbud is in pairing mode with your device.

STEP THREE – CONNECTING TO A DEVICE

Enable *Bluetooth* on your device. From the *Bluetooth* menu, select "Amps Air Mono." When the device and the earbud are connected, you will hear a tone. This means pairing is complete.


Bluetooth®

Devices

Amps Air Mono




TURNING OFF YOUR EARBUDS

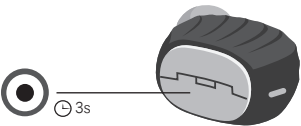

To turn off your earbuds, place the earbuds back in your case, or press and hold the multi-function button on the earbud for 3 seconds.

USING THE BACKUP BATTERY

Plug your device's USB charging cable into the travel case, and then into your smart device. With a full battery, your travel case can recharge your earbuds up to 15 times, or provide one full charge for a typical smartphone.

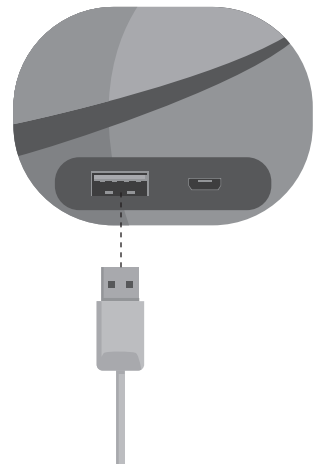

NOTE

The USB charging output rating is 5V, 1.0A. Some devices such as tablets may not appear to charge, or may charge slowly. Consult your device manufacturer for requirements.

BASICS

MUSIC

YOU WANT TO	
Play or pause	Press either multi-function button once.

CALLS

YOU WANT TO	
Pick up a call	Press either multi-function button once
Decline a call	Press and hold either multi-function button
End a call	Press either multi-function button once
Take a second incoming call	Press either multi-function button once
Decline a second incoming call	Use the phone keypad

OTHER

YOU WANT TO	
Activate Siri	Quickly double-press either multi-function button
Activate Google	Quickly double-press either multi-function button
Check battery level of earbuds	Look at smartphone
Check battery level of travel case	Shake the travel case to light the LEDs
Turn off earbud	Press and hold multi-function button for 3 seconds

NOTE

Some features may work differently depending on your phone or service carrier.

LED INDICATORS

EARBUDS CHARGING IN CASE

Flashing red	Low battery
Flashing white	Charging
Solid white	Fully charged

TRAVEL CASE

1 LED flashing	Low battery, 0–25%
2 LEDs, 2nd flashing	Battery capacity 25–50%
3 LEDs, 3rd flashing	Battery capacity 50–75%
4 LEDs, 4th flashing	Battery capacity 75–99%

EARBUDS IN USE

Flashing red	Earbuds in sync mode with each other
Flashing white	Earbuds in pairing mode with device

TROUBLESHOOTING

Having issues with your earbuds? Try working through the steps below.

1. Turn off *Bluetooth* on your device
2. Take earbuds out of your case
3. Press and hold multi-function button for 3 seconds on both earbuds to turn them off.
4. Quick press multi-function button once on earbuds to turn them on
5. Quick press multi-function button twice on both earbuds to put them into pairing mode and reconnect to each other
6. Turn on *Bluetooth* on your device
7. Pair to "Amps Air"

CONTACT

Still have questions? We've got answers and we're standing by. Give us a shout, we're here to help.

SUPPORT

The following is a set of resources to ensure you get the most out of your SOL REPUBLIC product.

Web: SOLREPUBLIC.COM/SUPPORT

Twitter: @SOLREPUBLIC

Phone: 877.400.0310

Email: support@SOLREPUBLIC.com

WARRANTY – US & CANADA

SOL REPUBLIC warrants this product free from defect in material and workmanship for a period of 1 year from the date of purchase. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of SOL REPUBLIC.

WARRANTY – UK & EUROPE

SOL REPUBLIC warrants this product free from defect in material and workmanship for a period of 2 years from the date of purchase. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of SOL REPUBLIC. Distributed in the EU by HoMedics Group Ltd, HoMedics House, Tonbridge, TN11 0GP, UK. Tel: 020 7862 6099. Email: support@SOLREPUBLIC.co.uk

WARRANTY – AUSTRALIA (ONE YEAR LIMITED WARRANTY)

We or us means HoMedics Australia Pty Ltd ACN 31 103 985 717 and our contact details are set out at the end of this warranty; You means the purchaser or the original end-user of the Goods. You may be a domestic user or a professional user; Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia and New Zealand; and Goods means the product or equipment which was accompanied by this warranty and purchased in Australia and New Zealand.

For Australia:

Our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled, subject to the provisions of the Australian Consumer Law, to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled, subject to the provisions of the Australian Consumer Law, to have the Goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This is not a complete statement of your legal rights as a consumer.

For New Zealand:

Our Goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.

The Warranty

HoMedics sells its products with the intent that they are free of defects in manufacture and

workmanship under normal use and service. In the unlikely event that your HoMedics product proves to be faulty within 1 year from the date of purchase due to workmanship or materials only, we will replace it at our own expense, subject to the terms and conditions of this guarantee. The warranty period is limited to 3 months from the date of purchase for products used commercially/professionally.

Terms and Conditions:

In addition to the rights and remedies that you have under the Australian Consumer Law, Consumer Guarantees Act of New Zealand or any other applicable law and without excluding such rights and remedies warranty against defects:

The Goods are designed to withstand the rigors of normal household use and are manufactured to the highest standards using the highest quality components. Whilst unlikely, if, during the first 12 months (3 months commercial use) from their date of purchase from the Supplier (Warranty Period), the Goods prove defective by reason of improper workmanship or materials and none of your statutory rights or remedies apply, we will replace the Goods, subject to the terms and conditions of this warranty.

We do not have to replace the Goods under this Additional Warranty if the Goods have been damaged due to misuse or abuse, accident, the attachment of any unauthorised accessory, alteration to the product, improper installation, unauthorised repairs or modifications, improper use of electrical/power supply, loss of power, malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance, transportation damage, theft, neglect, vandalism, environmental conditions or any other conditions whatsoever that are beyond the control of HoMedics.

This Warranty does not extend to the purchase of used, repaired or second-hand products or to products not imported or supplied by HoMedics Australia Pty Ltd, including but not limited to those sold on offshore internet auction sites.

This Warranty extends only to consumers and does not extend to Suppliers.

Even when we do not have to replace the Goods, we may decide to do so anyway. In some cases, we may decide to substitute the Goods with a similar alternative product of our choosing. All such decisions are at our absolute discretion.

All such replaced or substituted Goods continue to receive the benefit of this Additional Warranty for the time remaining on the original Warranty Period (or three months, whichever is the longest).

This Additional Warranty does not cover items damaged by normal wear and tear including but not limited to chips, scratches, abrasions, discolouration and other minor defects, where the

damage has negligible effect on the operation or performance of the Goods.

This Additional Warranty is limited to replacement or substitution only. As far as the law permits, we will not be liable for any loss or damage caused to property or persons arising from any cause whatsoever and shall have no liability for any incidental, consequential or special damages.

This warranty is only valid and enforceable in Australia and New Zealand.

Making a Claim:

In order to claim under this Warranty you must return the Goods to the Supplier (place of purchase) for replacement. If this is not possible, please contact our customer service department by email: cservice@homedics.com.au or at the address below.

All returned Goods must be accompanied by satisfactory proof of purchase which clearly indicates the name and address of the Supplier, the date and place of purchase and identifies product. It is best to provide an original, legible and unmodified receipt or sales invoice.

You must bear any expense for return of the Goods or otherwise associated with making your claim under this Additional Warranty.

Distributed in Australia by HOMEDICS AUSTRALIA PTY LTD, 14 Kingsley Close, Rowville, Victoria 3178. Distributed in New Zealand by Phoenix Distribution NZ Ltd, 7B Orbit Drive, Albany / North Shore 0757, Auckland, New Zealand



To prevent possible hearing damage, do not listen at high volume levels for long periods.

WEEE EXPLANATION



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

BATTERY DIRECTIVE



This symbol indicates that batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please dispose of batteries in designated collection points.

FCC & INDUSTRY CANADA STATEMENT

This device complies with Part 15 of the FCC Rules. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2)

this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: HoMedics is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DECLARATION OF CONFORMITY

Hereby, HoMedics Group Ltd, declares that this audio device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be obtained from HoMedics Group Ltd, Somerhill Business Park, Five Oak Green Road, Tonbridge, Kent TN11 0GP, UK. Email: support@homedics.co.uk



WARNING: Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



© 2016 SOL REPUBLIC
Model: SOL-EP1190
FCC ID: 2AA3H-SOLEP1190
IC: 10536A-SOLEP1190