


 AQUILSTAR			File No (文件编号)	ASWC1234
			Edition (版本)	A/0
			Page (页码)	1 / 1
	Edition (版本)	Changing Description (变更说明)	Design (设计)	Date (日期)

1 : 1


35.3mm



23.2mm

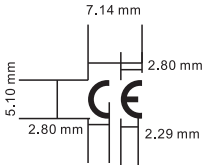

2 : 1

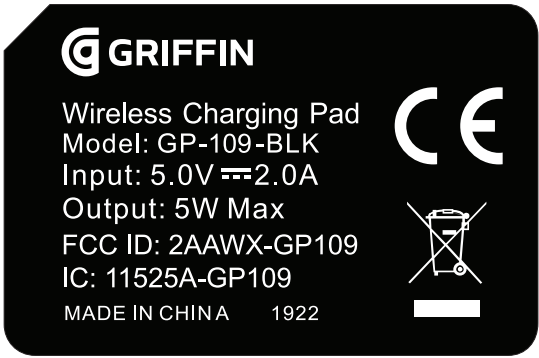

- 备注:
- 镭雕颜色为灰色.
 - 按图纸内容镭雕.
 - 镭雕内容匀称清晰, 不可歪斜.
 - 镭雕效果参考客户回签样品.
 - 用纯棉布罐满95%纯度医用酒精, 包在500g专用法码上, 以40-60次/分钟的速度, 20mm左右的行程, 在被测物表面来回擦拭200个循环;
 - 以镭雕图形不掉色为合格;
- Remark:
- The laser carving gray in color.
 - The content according to the drawing of radium vulture.
 - The content of radium vulture symmetry is clear, not skewed.
 - Effect of radium vulture reference customers sign back samples.
 - With pure cotton tank filled with 95% purity medical alcohol, wrapped in a 500 g Usage code to 40 to 60 times/min, the speed of about 20 mm Trip and analyte in a sample surface brush try 200 cycle back and forth;
 - Radium vulture graphics do not rub off as qualified;

COSTOMER (客户)	1234	TITLE (图纸名称)	成品镭雕
PROVIDER (制作商)	/	PART NO. (物料编号)	
UNIT (单位)	mm	M'ATL (材质)	/
DESIGNER (制作)		DATE (日期)	
CHECKED (确认)		DATE (日期)	
CHECKED (审核)		DATE (日期)	
APPROVAL (批准)		DATE (日期)	

Label Location

