
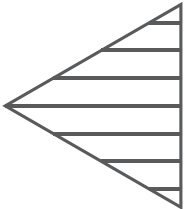
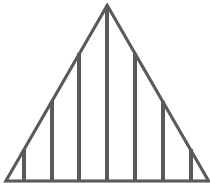


安徽华米信息科技有限公司

图纸编号	AXXXXXXXXXXXXXX		
名称	Seattle_产品说明书_EN		
版本号	V1.0		
设计师			时间
审核			时间
审批			时间
材质工艺要求	说明书尺寸：92x95mm		
材质要求：	太空梭哑粉，105g		
制作工序：	印刷-连线哑油-模切-折页		
工艺要求：	色相正确、印迹牢固、 套印准确、各色套印不露杂色， 套印误差≤ 0.1mm 模切走位≤ ± 0.5mm		
颜色及专色：	CMYK		
纹理要求：		纹理方向 选择正确的 方向图标拖 动到图纸里	

比例 1:1 单位 mm

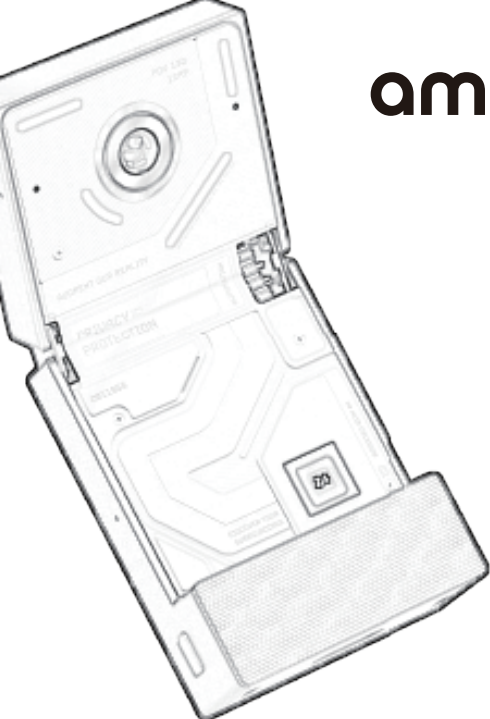

amazfit

VITAL

Package Contents




Food camera with band × 1

Charging base × 1

背夹x1

Product Manual × 1

About the Product

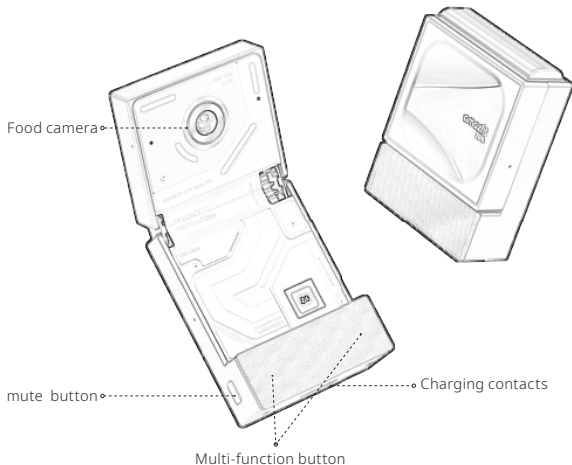

Note: Press and hold the power button to turn on the Device. If the Device cannot be turned on, please charge it and then try again.

Pairing the Device

Zepp is a must-have app for this camera.

1. Use your mobile phone to scan the QR code on the right side to download and install the app, or search for the app in the Google Play Store or Apple App Store and then download and install the latest version of the app.
2. Open the app, register an account and log in.
3. Pair the Device as prompted by the app.




Download Zepp
App

Notes:

1. For better user experience, please use the most recent version of the app.
2. The operating system needs to be Android 7.0, iOS 14.0, or above.
3. Do not pair the Device directly using your mobile phone's Bluetooth. Follow the steps in the app to pair your Device correctly.

Charging the Device

1. Use a Type-C USB cable to connect the charging base to a power adapter or computer. Ensure a secure connection for proper charging.
2. Put the Device into the charging base. Pay attention to the direction and position of the Device, and make sure that the metal contacts on the back of the Device fit closely with the charging base.
3. When charging starts, the Device screen displays the charging progress.

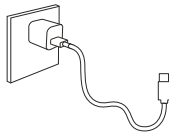

Notes:

1. Please use the charging base that comes with the Device. Make sure that the charging base is dry before charging.
2. To ensure optimal charging efficiency, it is recommended to use a power adapter with a charging current of 1A or above.

Wearing the Device

1. In order to ensure the accuracy of heart rate, blood oxygen, and other measurements, please wear your Device at a distance of at least one finger away from the carpal, and keep the strap at a comfortable snugness.
2. During workout, please wear it as tightly as possible to ensure that the Device does not shake.

Basic Parameters

Product name: Amazfit V1TAL

Model number: A2431

Input: DC 5 V 1.2A

Bluetooth version: V5.2

Bluetooth output power: <13 dBm

BLE output power: <8 dBm

Wi-Fi: 2.4GHz&5GHz 802.11 b/g/a/n/ac

"Wi-Fi frequency:

FCC:2412-2462MHz, 5.15-5.35GHz, 5.47-5.85GHz"

Wi-Fi output power: <20 dBm

View product certification information on the Device's Settings > System > Regulation page.

Working temperature: -30°C-45°C

Charging temperature: -10°C-45°C

Water resistance rating: 10 ATM

Bluetooth frequency: 2400-2483.5MHz

Device requirements: Devices installed with Android 7.0 or iOS 14.0 or above OS versions

Package contents: Food camera, Charging base, Product manual,
Please refer to the Device user interface to see the software version.

Notes:

- The low temperature mode ensures that the Device can be used in -30°C - -10°C environments, but the touch screen and certain features cannot be used.
- After the automatic low temperature mode is enabled, the Device will automatically switch between low temperature mode or normal mode according to the temperature. The Device needs to restart during the mode switching process.
- You can also exit low temperature mode by pressing and holding the backbutton.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Anhui Huami Information Technology Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

Battery Safety

1. This device is equipped with a built-in battery that cannot be removed or replaced. Do not disassemble or modify the battery by yourself.
2. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
3. Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
4. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

Safety Notice

1. Do not allow children or pets to bite or swallow the product or its accessories, as this may cause injury.
2. Do not place this product under excessively high or low temperatures, which may cause the product to catch fire or explode.
3. Do not place this product near heat sources or open flame, such as ovens and electric heaters.
4. Some people may experience allergic skin reactions to plastics, leathers, fibers, and other materials, and symptoms such as redness, swelling, and inflammation will occur after long-term contact with this product's components. If you experience such symptoms, please discontinue use and consult your doctor.
5. Do not use unauthorized or incompatible power adapters or data cables, which may damage the watch and accessories, or cause fire, explosion, or other hazards.
6. The radio waves generated by this product may affect the normal operation of implanted medical devices or personal medical devices, such as pacemakers and hearing aids. If you use any such medical devices, consult the manufacturer for relevant usage restrictions.
7. Do not dispose of this device or its accessories as ordinary household waste. Please make sure you dispose of or recycle this device and its accessories in accordance with local laws and regulations.

Repair and Maintenance

1. Avoid using detergents such as soap, hand sanitizer, bath foam, or lotion for cleaning to prevent chemical residues from irritating the skin, corroding the device, or degrading the water resistance of the device.
2. After wearing the device while bathing (for devices that support bathing), swimming (for devices that support swimming), or sweating, please promptly clean and dry the device.
3. Do not wear your watch during showers, hot springs, saunas (steam rooms), diving, underwater diving, and other activities involving high-speed water currents.
4. Do not place the device in direct sunlight for long periods. Excessively high or low ambient temperature may cause device failure.
5. Handle with care during transportation. Keep the device dry and away from humidity.
6. Do not wear the watch in MRI examinations and other highly magnetic environments. Otherwise, the watch may be damaged.

Warranty and Return Policy

The Amazfit Limited Warranty covers Amazfit products against manufacturing defects beginning on the original purchase date. The warranty period is 12 months or another specified period as the applicable consumer laws in the consumer's country of purchase require. Our warranty is in addition to rights provided by applicable consumer laws.

Official website: www.amazfit.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and meets applicable limits for radio frequency (RF) exposure. SAR limits depend on whether this equipment is used against the head or on the wrist. The FCC SAR limit for extremity SAR is 4.0W/kg (10g). The highest SAR value reported under this this standard during product certification when properly worn on the extremity (0mm) is 1.35 W/kg.

- * Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

FCC ID:2AC8UA2431

Notes:

1. This product isn't a medical Device. None of the data or measurements are intended for medical diagnosis or medical monitoring.
2. If the product is not in use for a long period of time, it is recommended that you power off the product before storing it. Recharge the battery every 6 months to 100% to prevent battery damage by over-discharge due to long-term storage.

For detailed operating instructions, FAQs, safety precautions, and repair and maintenance information, please visit the website <https://support.amazfit.com> to download the user manual.

Manufactured by: AnHui Huami Information Technology Co., Ltd.
Address: See Packaging