




USER GUIDE

onn Q12 PAD

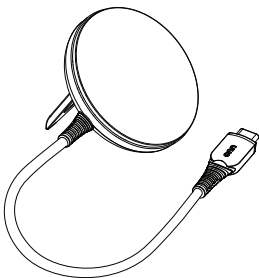

For product assistance &
missing or replacement parts:
WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7:00am - 9:00pm CST

**THIS GUIDE CONTAINS
IMPORTANT SAFETY
INFORMATION.**

PLEASE READ AND KEEP
FOR FUTURE REFERENCE.

Find more at **Walmart.com**

Contents & Information

CONTENTS & INFORMATION

SPECIFICATIONS

SAFETY PRECAUTIONS

Caution

Warning

Important Safety Instructions

Medical Device Interference

FCC Statement

OPERATION

How to Charge Your Devices


COMPATIBILITY

Specifications

Description	Specs
onn QI2 PAD	Q2PADW36025781
Output	15W Max.
Dimensions	60MM*13.05 MM

WHAT IS IN THE BOX?

- ① onn QI2 PAD.
- ② User Manual.

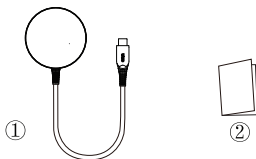

SCAN HERE FOR MORE
PRODUCT INFORMATION
AND LEAVE US A REVIEW!

Safety Precautions



CAUTION

- When pulling out the stand, please adjust the angle according to the size of the phone and ensure it to be steadily supported on the table.
- When you put your finger through the ring hole to hold the phone, please do not shake or hit the phone vigorously to prevent it from detaching from the device.
- After charging completely, the stand should be retracted to avoid being suppressed or damaged during storage.



WARNING

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



IMPORTANT SAFETY INSTRUCTIONS

- Please read these instructions before using this devices to ensure safe and proper use.
- Use indoors and in a dry location only; keep away from wet or damp locations.
- Keep onn Q12 PAD and wall adapter away from any liquids or moisture.
- Unplug the onn Q12 PAD when unused for long period of time(adapter sold separately).
- Do not use if any visible defects are observed on the onn Q12 PAD, cable or wall adapter.
- Make sure the cable is fully inserted into the power adapter before you plug it into a power outlet.
- Please remove metallic cases and avoid placing metallic foreign objects on it, which may interfere with charging or become warm enough to cause discomfort or injury.

- Do not place any item with an RFID tag (like credit card, passport, or access card) on the onn Q12 PAD, because the RFID tag could be damaged.



MEDICAL DEVICE INTERFERENCE

- The onn Q12 PAD contains magnets and radios that emit electromagnetic fields. These electromagnetic fields may interfere with medical devices, such as pacemakers and defibrillators. Consult your physician and medical device manufacture for information specific to your medical device and whether you and the onn Q12 PAD. If you suspect the onn Q12 PAD is interfering with your medical device, stop using the onn Q12 PAD.



FCC Statement

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation .

Note

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in

a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note


- The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

- The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

Operation


HOW TO CHARGE YOUR DEVICES

1. Plug the end of USB-C cable into a C port of recommended 20W or higher power adapter. (sold separately)

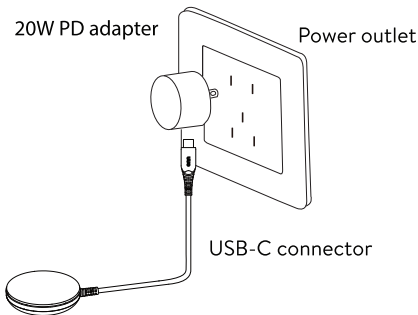

2. Remove any attachments from your phone or object on the pad (if any)


- Examples: magnetic wallet, holder, keys or cards.



- For the best wireless charging experience, we recommend using Apple's or onn official magnetic phone case. You should avoid cases thicker than 2.5mm and non-magnetic cases, as they may affect charging efficiency.

3. Begin to charge

- Place your phone horizontally on the onn Q12 PAD for charging.
- Open the back stand at a proper angle for charging, allowing you to enjoy different scenes like meetings, watching videos or browsing web at the same time.



Compatibility

- 5W Max. wireless charging for Qi-enabled Samsung Galaxy, Google Pixel and more.
- 5W Max. wireless charging for wireless charging case for AirPods.
- 7.5W Max. fast wireless charging for iPhone 8 series to iPhone 11 series and iPhone 16e.
- 15W Max. fast charging for any Qi2-enabled devices.
- 15W Max. fast wireless charging for iPhone 17 series, iPhone 16 series, iPhone 15 series, iPhone 14 series*, iPhone 13 series* and iPhone 12 series*.

* To support 15W Max. charging for iPhone® 13 series and iPhone® 14 series, iOS 17.2 or above is required. For iPhone® 12 series, iOS 17.4 or above is required.



Made in Vietnam for Walmart Inc.