

How to Wear the Device




Warning




Always wear the device with the glasses.

Otherwise, an injury may cause such as by hurting the eye by the display.

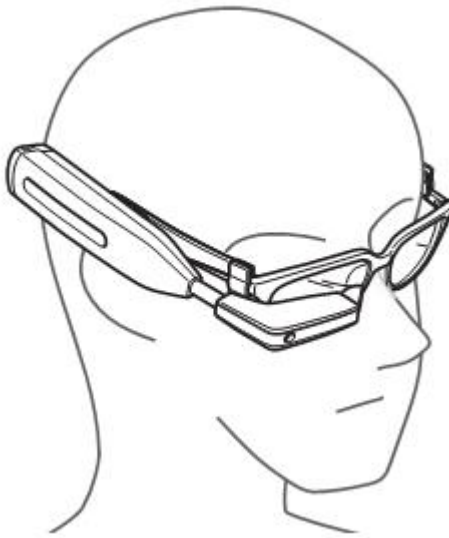

Names and functions of components

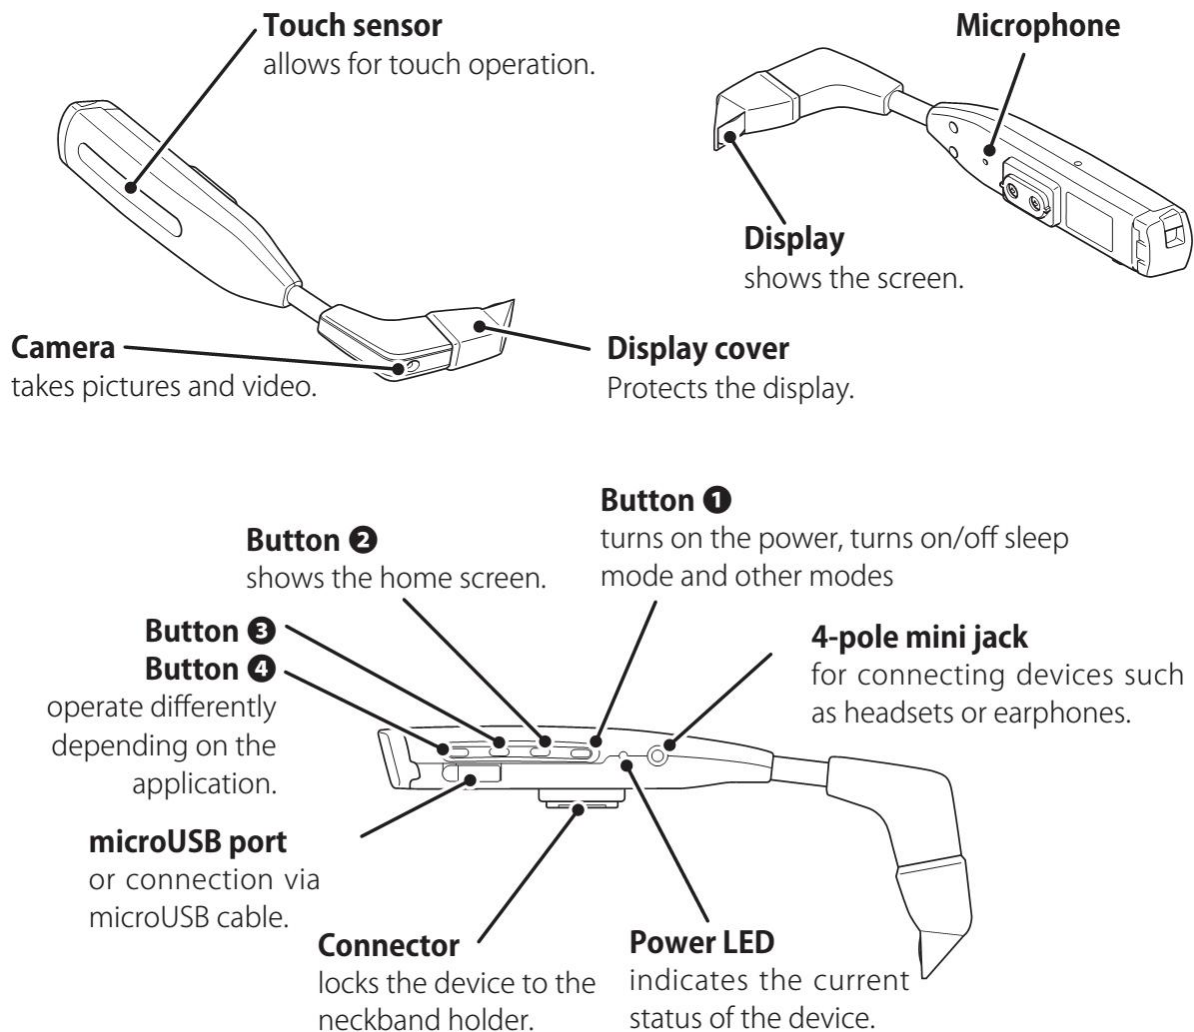

- NOTE**
- Button and sensor functionality vary depending on the application.
 - Press and hold a button means to release after pressing and holding the button for approximately 1 second.

Voice functions

This device is not equipped with a speaker. In order to play back the voice, connect the ear phone or a head set to the 4-pole mini jack. In addition, to have talk through the device, connect the head set.

NOTE

When connecting an ear phone or a head set to the 4-pole mini jack, make sure that the connected unit is fully inserted. If not, noise may be caused.

