

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Inlife-handnet Co., Ltd.hereby declares that this Viulux all in one VR is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 5mm must be maintained between the user's body and the headset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Epilepsy: Some people (about 1/4000) may cause dizziness, seizures or epilepsy and other symptoms because of flash or pattern. For safety reasons, any person who used to have epilepsy, loss of consciousness, or other symptoms associated with epilepsy, please consult with a physician before using a head-on display.

Simulation of motion sickness and other reactions: when the use the head-on display for short time or long time, it may trigger the immersive virtual reality experience, including the simulation of motion sickness (similar to motion sickness), perceived effects, disorientation, decreased postural stability, visual fatigue, dizziness and / or nausea, feeling the disintegration of personality (feels like to see their behavior) or lose the feel of reality (feeling the objective world is not real), if you or your family have experienced these symptoms, please consult a doctor before use a head-on display.

The surrounding environment: Please always pay attention to your surrounding environment when use the head-on display. As far as

possible to maintain the posture, and make sure you around with no one there, not near the stairs, balcony, window, furniture or any other items may encounter, stumble and kick when you use or just use the head-on display. Do not hold sharp objects or other dangerous goods in the use of head-on display.

Pictures

Photo wall and panoramic photos, panoramic photos need to be placed in the VRmedia directory.

Tool

Settings, local play, market, file management settings contain Bluetooth switch, system information, account, general settings.

4.3 Product cleaning


Cleaning head wear type equipment

Use water wet cleaning cloth in the packing box, and then wipe clean the head mounted device and lens, use other liquids may lead to damage.

Replace face pad

Taking off the face pad and clean it.

1. Peel from the both sides to take off the face pad which will be separated from equipment.

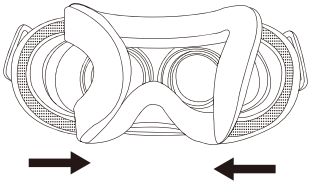

2. Clean face pad, you must :

- Use cold water to wipe the clean cloth and then wipe the area need to be cleaned of face pad.
- Dry at room temperature, do not dry, press, or exposed to direct sunlight

05 / Safety Guide /

Important notice:

Please carefully read the following security warnings before using this head-on display to reduce the risk of personal injury, discomfort, or other possible damages.

Radio interference: Head-on display will emit radio waves, which may affect the operation of peripheral electronic devices, including cardiac pacemaker. Please consult your doctor or medical equipment manufacturer before you use if you have a pacemaker or other implanted medical device.

The risk of electric shock: Do not modify or remove any part head-on display: Do not put the head-on display in water or exposed to humid environment; please pull out the power plug in a display before cleaning, and only use dry cloth to clean it.

High temperature risk: Please let your head wear away from open fire or other heat source, do not directly exposed to direct sunlight, so as not to damage the head-on display equipment.

Attention:

Any person have following symptoms in the use of the head-on display, please stop using immediately: including seizures, epilepsy, eye or muscle cramps, involuntary movement, dizziness, disorientation, blurred vision, loss of consciousness, nausea, dizziness, simulated motion sickness (similar to motion sickness symptoms) and other discomfort symptom related to the head or eyes.

If you are easy to suffer from a motion sickness, you will have a high probability of discomfort in the use of virtual reality helmet. Please immediately seek medical treatment if you have severe symptoms of dizziness when you use or stop use the machine. And before the symptoms disappear, do not drive a vehicle, operating machinery or engaged in other similar activities. And before the symptoms disappear, do not drive a vehicle, operate machinery or engage in other similar activities.

If you use a virtual reality helmet for the first time, we recommend that you use an incremental approach to allow your body to slowly adapt the equipment. Initially using only a few minutes each time. Take a rest for 10-15 minutes per hour for the use, rest time vary from person to person, if you feel uncomfortable, please increase the number of times and the length of time of rest.

Please make sure that the correct and comfortable use of virtual reality helmet, do not use a head-on display in fatigue, lack of sleep, drink, medication condition, Do not use virtual reality helmet in the narrow, chaotic region; Please don't use data line wound around the body when you use the virtual reality helmet.

Children should be accompanied by a guardian in the use of virtual reality helmet, the guardian should observe the situation of children when they feel discomfort in the use of virtual reality helmet. If you don't get better, you need to contact your doctor as soon as possible.

Pregnant women, the elderly, heart disease patients, mental illness or other serious physical disease patients,please consult the physician before use the virtual reality helmet,

For the patients who have Binocular vision abnormalities or eye disease, amblyopia and strabismus, anisometropia, please consult a physician before the use.

06 /Common problems and troubleshooting/

General question

Press the power button with no reaction and it can not be started.

- Please make sure whether it has power or not, please try it again after 5 minutes charging.

The picture is oblique? Can't see the menu?

- Long press the cursor position key for 3 seconds, you can see in the image of the head back to the front of the screen, the picture will be back.

Picture has a heavy shadow, blurred, looking at dizziness?

- It's because pupillary distance is not regulated well and the lenses are dirty, please clean it before use.

Touch with no response, running?

- Please make sure to touch the center dot, or you can try to restart the machine because occasionally touch machine failed.

How does the machine enter a power saving mode? How to wake up after standby?

- Short press the power button to enter the sleep state. Short press the power button to wake up.

Dose the gyroscope need to be calibrated after the system is upgraded?

- The front panel faces down after the machine is reset, put machine on the table to complete calibration (The screen is all yellow with no image when it's calibrated).

07 / More help /

Want to know more information?

Please log in <http://www.3dinlife.com/> , Search and download the required resources.

If you have problem in the use of machine and it can not be solved by the guide, please call the hotline : 400-067-0690 Mon to Fri (9.a.m to 6.p.m) Technical consultation QQ group



01 / Instruction /

Thank you very much for your purchase of V6-A virtual reality machine, please read this instruction carefully before using the V6 virtual reality machine, so as to correctly help you install, set up, and use the device. Inlife-Handnet Co., Ltd does not make any warranties, including (but not limited to) for a particular purpose of implied warranties of merchantability and fitness. The company does not bear the responsibility for the error of the information contained in this document or the incidental or consequential damages caused by the difference between the content in the instruction and the actual performance.

This instruction contains proprietary information protected by copyright law. All rights reserved, without prior written consent of the company, shall not be copied or reproduced in any part of the instruction in the form or method of review. The contents contained in the instruction may be changed without notice.

Copyright© Inlife-Handnet Co., Ltd., 2016

02 / General Information of product /



V6 virtual reality integrated machine×1



The instruction of V6 virtual reality integrated machine×1



Charger×1 5V ---2A



Product warranty and certificate of three guarantees×1






Data line×1



Certificate×1

03 / Product introduction /

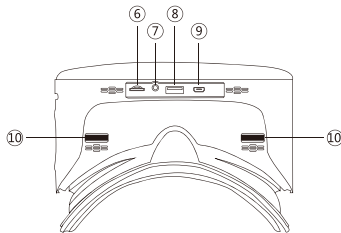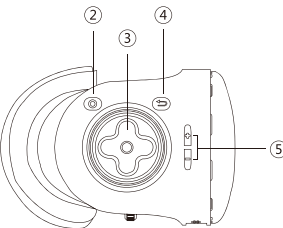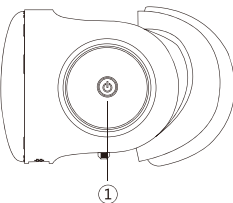

① Helmet ON/OFF

Start, shut down, sleep, wake up.

- Start: Long press the power button for 3 seconds after the home screen enters the main interface
- Shut down: Long press the power button for 3 seconds in open state
- Sleep: Short press the power button when device runs, the device enters to the sleep state
- Wake up: Short press the power key in the sleep state, and the device is awoken.

① Power indicator

- Blue light on when device started
- Red light on when power less than 20%
- Red light flashes when power less than 10%
- Green light flashes when device is charging
- Green light on when power is charging for more than 90%

② Cursor position button

Equipment can identify the head rotation, long press 3 seconds, you can locate the screen display area to the front of the head. Menu functions, including brightness adjustment, volume adjustment, (It also has the reserve function of exiting when application runs)

③ Touch control board

System interface operation is performed by touch and slide.
Touch: Confirm the choice
Slide: Switch/ Scroll page

④ Return button

Long press: Return to the home page
Short press: Return to the previous level page

⑤ Volume button

+button: volume up
- button: volume down

⑥ MICRO SD ports

Extended storage ports

⑦ Earphone jack

3.5mm standard earphone jack

⑧ USB

The port of USB 2.0, which can be used for external equipment of USB and wireless controller.

⑨ The port of MICRO USB


SV DC power input, used for charging
It can be connected to the computer by using data line.

⑩ Eye pupil mediation knob

Turn around to adjust optical system eye pupil to achieve the best visual effect.


04 / Instruction /

4.1 Touch panel instructions

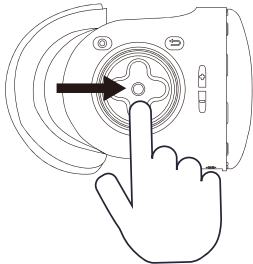

Touch operation

- 1.Turn head, make the cursor on the screen target on the menu to be selected.
- 2.Use finger touch panel center circle

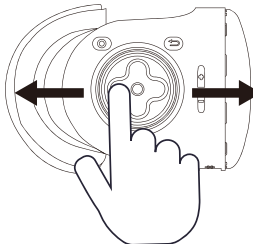

Slide operation

1. Slide or flip according to the groove of the touch panel

4.2 Guide for wear and operation of products

Start

Long press start key for 3 seconds, then the word of Nliru will be appeared and the small green icon will be showed on the left, which means the machined is stared successfully.

Show menu.

The order of menu from left to right: local, online theater, panoramic OL, singing VR, pictures, tools.

Usage

Turn helmet, left and right moving laser positioning, touch panel, click icon, enter menu.Return button to return to the previous level menu. Press the cursor key, pop-up menu (brightness, volume), touch the panel, enter page of adjustment, press the volume key +/-, to adjust to the proper position.

Local application

Besides the content of local, other contents are required to connect to the Internet. This machine supports the WIFI connection. WIFI connection step: Local - Settings - Wireless Network - open. Click on the WIFI - Pop up keyboard - enter the password - connection success.

Online cinema

Touch then enter, the left shows movie list, move the cursor, choose to play.

All OL

Including landscape, creativity, newest, beauty, and the latest hit, several other plates.

VR Singing VR

3D playback, 3D live, 2D live, live channel, in succession on the line.

