

Quick Start Guide

Welcome to the BlueSmart mia™. You are about to kick off the smart feeding journey together with the BlueSmart mia™. With every feeding to be reminded and recorded, you will be provided with smart feeding schedule. Let us do some on-boarding settings before you enjoy the BlueSmart mia™'s full functions.

【Safety information】

Refer to the following to prevent any physical injury or loss of assets caused by damage of the product. A user must read this User Guide carefully before use and properly follow the instructions.

- Please detach the BlueSmart mia™ from the baby bottle, when boiling or heating the bottle.
- Please do not wash the BlueSmart mia™ with water. You can take the device's silicon sleeve off, and boil, flush or sterilize it.
- Please do not spill water on the wireless charger.
- Please do not charge the BlueSmart mia™ with other branded wireless charger.
- Please do not make the BlueSmart mia™ be exposed to sunlight.

【What's inside】

- BlueSmart mia™ device
- Wireless charger
- USB cable
- Turning-on/off tool
- Quick start guide
- Welcome card

【Product specifications】


- Dimensions: BlueSmart mia™ 75mm x 75mm x 54mm; Wireless charger 110mm x 110mm x 11mm
- Bottle compatibility: regular-shaped transparent baby bottles with diameter from 53.5mm to 66mm

- Weights: BlueSmart mia™ 96.5g; Wireless charger 114g
- Sleeve materials: Food grade silicone rubber, Poly-Carbonate
- Water resistance: IPX6; the silicon sleeve can be boiled, flushed or sterilized. The device's main part cannot be washed or dipped into the water. Please try to clean the main part of the device with soft cloth.
- Battery: 460mAh lithium-ion polymer safe battery
- Wireless charger: Input: DC 5V 1000mA; Output: 5V 800mA

【How to use】

Fit the baby bottle into the silicon sleeve of the BlueSmart mia™.

*You can check the compatible baby bottle sizes on the bottom of the packaging.

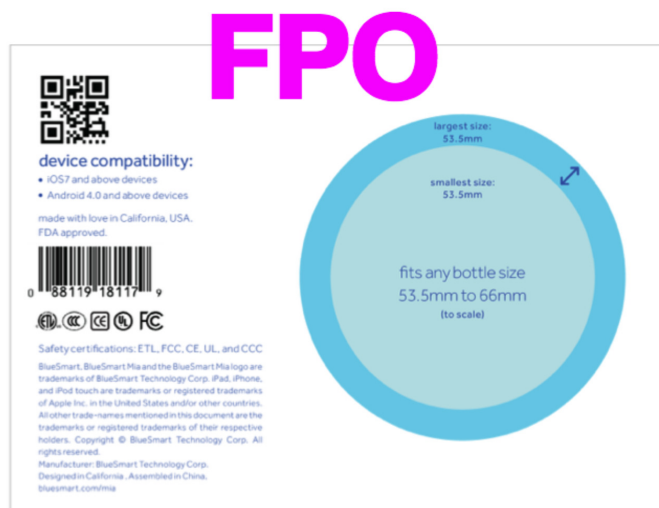

【Features】

- Feed reminder – Drop-shaped indicator lights up white, at the scheduled feeding time.
- Temperature indicator – Bottle-shaped indicator lights green, blue and red when the liquid temperature in the bottle is perfect, cold and hot respectively.
- Prepare suggestion – The Drop-shaped light will indicate you how many spoons of formula power to use, by blinking white as many times as the number of spoons. (According to your feeding plan.)
- Low battery – The Bottle indicators all light up, when the battery level is under 20%.

【Install app】

Please scan the below QR code. Download and install the BlueSmart mia™ application.



iOS:



Android:

You can also search “BlueSmart mia™ smart feeding (TBD)” in the App Store™ or Google Play™, and download the free BlueSmart mia™ application. The download of BlueSmart mia™ app is also available on www.bluesmartmia.com.

For your better experience, we recommend devices that are compatible with iOS 7/Android 4.0 or above.

【Onboarding】

Please complete the following steps according to the instructions in the app.

1. Create a BlueSmart mia™ account.
2. Connect to your BlueSmart mia™.
3. Create your baby profile.
4. Complete the initial settings and preferences.

【Charging】

When the battery level is low, the BlueSmart mia™'s bottle-shaped LED indicator light up red, green and blue. Put the BlueSmart mia™ on the wireless charger, and the indicator will blink blue, green, and red in order. All indicators will shut down after the battery is fully charged.

【Turn on/off the device】

Press the hidden power button on the bottom of the BlueSmart mia™ with the turning-on/off tool, to turn on or turn off the BlueSmart mia™.

【Data sync】

When the BlueSmart mia™ is not in using, it will try to download your latest setting and upload newly generated feeding data via the Wi-Fi connection.

【FAQ】

1. What's the reference of the BlueSmart mia™'s smart schedule recommendation ?

The smart feeding schedule and goal are based on baby formula makers' official suggestion as well as the average consumption of the babies at the same age. The schedule is for reference only; please feed your baby according to the real requirement.

2. How to clean the BlueSmart mia™?

To clean light dirt or residue off the BlueSmart mia™, you can take the silicon sleeve off the BlueSmart mia™, and boil, flush or sterilize it. The device's main part cannot be washed or dipped into the water. Please try to clean the surface of the main part with soft cloth.

3. How long does the BlueSmart mia™'s battery last?

In common use case (no more than 10 daily feedings), the battery will last for at least one week. However, the battery life will be significantly affected by the Wi-Fi use frequency. (Every data upload, custom setting or feeding schedule update requires Wi-Fi connection.)

【FCC Statement】

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

【FCC Notice】

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

【FCC Caution】

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body

FCC ID: XXX-XXX. IC: XXXXX-XXX

To locate the FCC and IC identification numbers, please look on the underside of the BlueSmart mia Smart Feeding Device.

Please only use with the wireless charger provided.

【Contact us】

BlueSmart Technology Corp.

1451 Grant Road, Suite 200, Mountain View, CA 94042

Facebook: BlueSmart mia

Twitter: BlueSmart mia

Learn more: www.bluesmartmia.com/support

Call us: 400-0806-321

Legal, Trademarks, Copyrights:

BlueSmart、BlueSmart mia and the BlueSmart mia logo are trademarks of BlueSmart Technology Corp. iPad, iPhone, and iPod touch are trademarks or registered trademarks of Apple Inc. in the United States and/or other countries. All other trade names mentioned in this document are the trademarks or registered trademarks of their respective holders.

Copyright © BlueSmart Technology Corp. All rights reserved.