
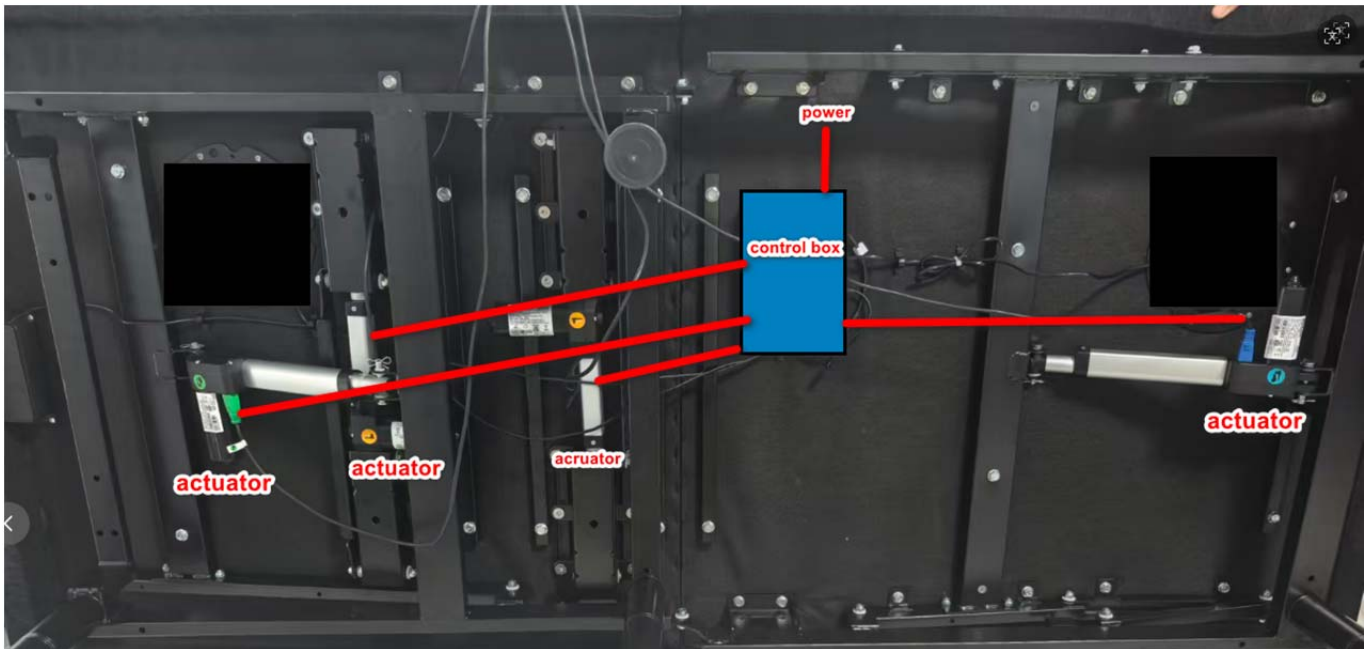


System User Manual

Version Change Logs

Version	Change Date	Brief Description	Remarks
V1.0		Initial Release	

System Diagram

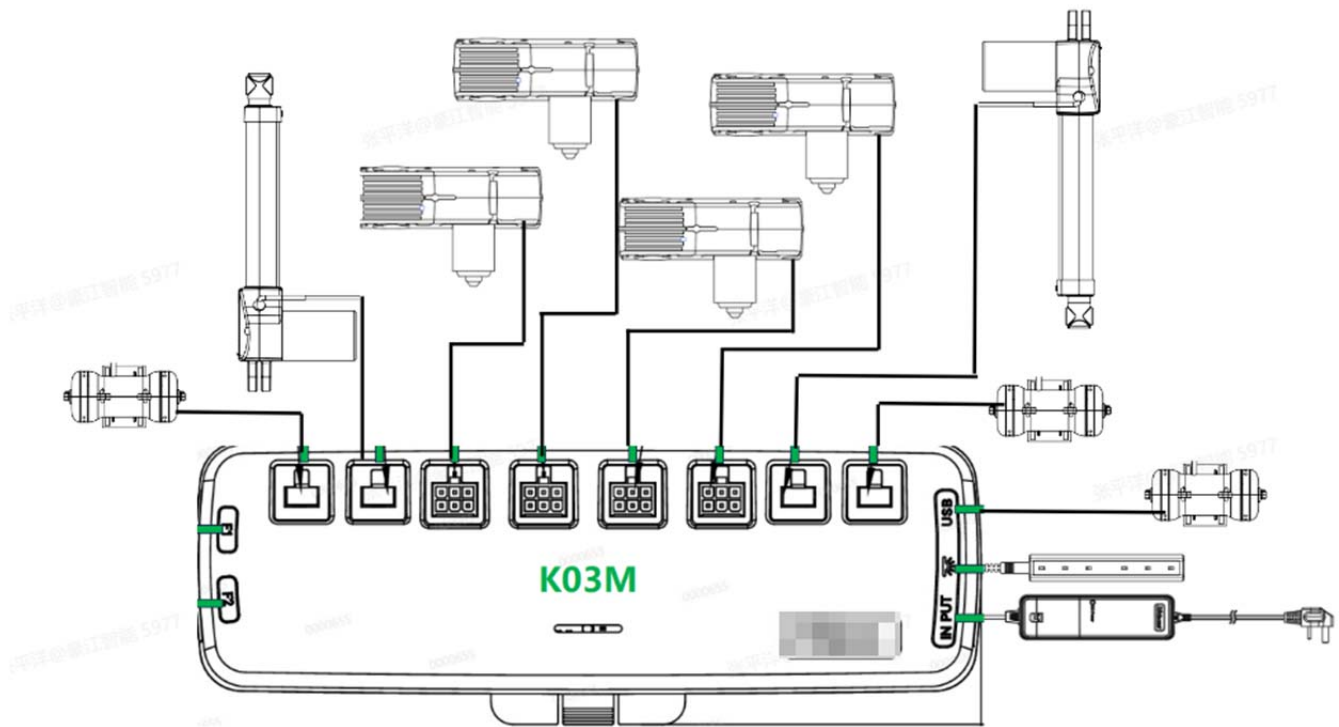

First, secure the control box mounting bracket to the bed using screws. Then, install the control box into the bracket.


The control box cannot operate independently and requires a matching remote control for use.

When shipping the product, a remote control must be matched according to customer requirements. The massage connector and the under-bed light connector can be defined through programming.

Conventional functions

Model: K03M-B-A1421-1R-310-LH1-01

Test using remote control button definitions (control box function)

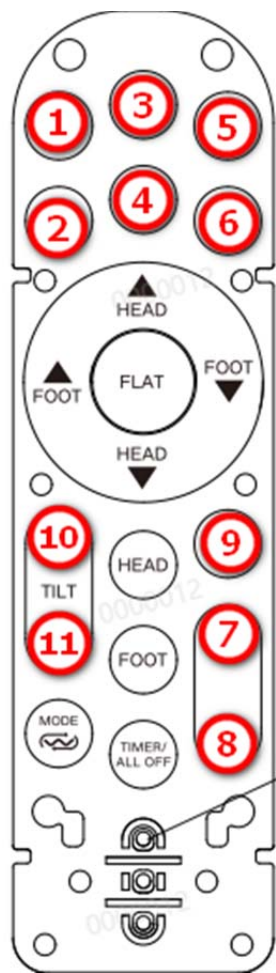

Key	Definition
1	Motor 1 and 2 extend
2	Motor 1 and 2 retract
3	Motor 3 and 4 extend

4	Motor 3 and 4 retract
5	Motor 5 and 6 extend
6	Motor 5 and 6 retract
7	Turn on the head massager, cycle through gears 1-2-3-0
8	Turn on the foot massager, cycle through gears 1-2-3-0
10	Turn on/off the under-bed light

Pairing:

Simultaneously press and hold buttons 1 and 3 plus the control box pairing button. The buzzer sounds, indicating successful pairing.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.