

Statement

- This manual is designed for the use of CanDo HD Pro Tab diagnostic tool and cannot be copied or stored in any form (electronic, mechanical, photocopying, recording or otherwise) without prior written permission being secured by CanDo International, Inc.
- This manual is intended for professional vehicle repair technicians and provides the operation methods for using CANDO products. CanDo International, Inc. accepts no responsibility for the consequences caused by abusing the operation methods on other equipment.
- CanDo International, Inc. shall not undertake any responsibility for accidents caused by the user personally or other people, costs and expenses due to equipment damages and equipment loss that are caused by the user's abuses, misuses, arbitrary changes, repairs, or operations of the equipment not in accordance with the manual requirements. This manual is written in accordance with the existing configuration and functions of the product, it's subject to change without notice if the product adds new configuration and functions.
- CanDo International, Inc. has registered the CANDO trademark in America. The company declares that the ownership of the registered trademark, service mark, domain name, logo, and company name in countries which they have not yet been registered belongs to CanDo International, Inc.. The other products and their company name trademarks mentioned in this manual belong to the original registered company. The trademarks, service marks, domain names, logos, and company names of CanDo International, Inc. or other companies mentioned may not be used without prior written permission of the owner.

Registered Trademark

CanDo International, Inc. has registered the trademark in America and

several countries overseas. The company declares that the ownership of the registered trademark, service mark, domain name, logo, and company name in countries which they have not yet been registered belongs to CanDo International, Inc.. The other products and their company name trademarks mentioned in this manual belong to the original registered company. The trademarks, service marks, domain names, logos, and company names of CanDo International, Inc. or other companies mentioned may not be used without prior written permission of the owner.

CANDO Product Manual Instructions

Please read this manual carefully before using the CANDO product.

- This manual is written in accordance with the existing configuration and functions of product and it's subject to change without notice if the product adds new configuration and functions. The new version of the manual can be downloaded from CANDO official website, please pay attention to "Note", "Remark" and "Instruction" in the manual to make sure the safe and correct use.

CanDo International, Inc.

Tel: 1-909-CanDo-11(226-3611)

Office: 138 E. Lemon Ave., Monrovia, CA 91016 USA

Website: www.candointl.com

Contents

Statement.....	1
Contents.....	3
Chapter I Product Introduction.....	5
1.1 Product Overview.....	5
1.2 Product Features.....	5
1.3 Service and Maintenance.....	6
1.3.1 Storage Environment.....	6
1.3.2 Host Protection.....	7
1.3.3 Screen Maintenance.....	7
1.3.4 Precautions.....	8
1.4 Automobile Inspection Notes.....	8
1.5 Product Help.....	9
Chapter II Product Structure.....	10
2.1 Host Hardware Instruction.....	10
2.1.1 Host Diagram.....	10
2.1.2 Host Parameters.....	12
Chapter III VCI BOX Structure.....	13
Chapter IV Operation Manual.....	14
4.1 Connection of Power Supply & Main Testing Cable.....	14
4.1.1 Host Power Supply.....	14
4.1.2 Wiring Method.....	15
4.1.3 Startup and Shutdown.....	16
4.2 Start Interface Menu.....	17

4.2.1	Main Interface.....	17
4.2.2	Vehicle Diagnosis.....	17
4.2.3	VCI Connection.....	18
4.2.4	Data Management.....	19
4.2.5	Remote Diagnosis.....	19
4.2.6	Update.....	20
4.2.7	Help.....	20
4.2.8	setup.....	21
Chapter V	Upgrade.....	25
Chapter VI	Compliance Information.....	26
Annex:	Diagnostic Interface Definition and Description of Standard OBD-II..	30
Chapter VII	Warranty.....	33

Chapter I Product Introduction

1.1 Product Overview

CanDo HD Pro Tab diagnostic tool is developed and promoted with emphasis by CanDo International, Inc. Co., Ltd. Its comprehensive auto diagnosis equipment on diesel electric control system detection are applicable to large, medium and small repair enterprises, training institutions, automakers, maintenance station and many more.

The product software configuration is all-round with complete vehicle model data and materials. It fully meets the strict requirements in diagnosis of customers. The software covers almost vehicle model data, and provides strong repair material and help system that allows users to deal with problems in practical work easily and quickly so as to improve work efficiency and technical level.

The appearance design is luxury and comfortable with the large TFT touch screen for operations. Mode setup function for multi working conditions satisfies the working demands in different circumstances. Adopting flexible drive technology, CanDo HD Pro Tab diagnostic tool with good scalability fully meets requirements of various communication bus tests for current automobile electronic control systems.

1.2 Product Features

All CanDo HD Pro Tab diagnostic tool core hardware adopts the international advanced modular design concept, with high speed and stabilization, accurate data acquisition and other excellent performances. It also has the ability to resist high and low temperature difference.

CanDo HD Pro Tab diagnostic tool adopts the open structure design in the program framework. Its independent operation system allows the system software and diagnostic software to upgrade more conveniently.

Working power supply is from the automotive batteries, which is

widely adapted to the voltage changes between 9~27V. The internal power supply uses the design of isolated power supply with the efficient protection of machine from damages when automobile voltage is abnormal.

CanDo HD Pro Tab diagnostic tool has good scalability and the communication interface adopts the flexible drive circuit. It not only meets requirements of tests for current automotive bus, but also satisfies bus automotive tests that may appear in the future. It has built-in high/low speed CAN-BUS and satisfies electronic systems which adopt bus with Can-Bus protocol, and it only needs one diagnostic connector to perform the fault diagnosis on all automobiles that are equipped with CAN-BUS. It also fully supports all OBD-II protocols.

With a USB port to connect the printer, CanDo HD Pro Tab diagnostic tool host is convenient for the maintenance staff to record data and save fault codes and other important information during the automobile fault diagnosis.

The CanDo HD Pro Tab diagnostic tool host screen is the general international standard LCD TFT industrial touch screen. It has features such as the characters are clear in the strong sunshine, the touch-keys are accurate, the interface is broad and the screen's compressive strength is high and many other advantages. Its working stability is also advantageously guaranteed while using it in bad environments.

The CanDo HD Pro Tab diagnostic tool provides various versions and languages in order to adapt to the use in different countries and districts.

1.3 Service and Maintenance

1.3.1 Storage Environment

- 1) Please store in a flat, dry place with suitable temperature when it's not in use.
- 2) Please do not put in direct sunlight or places near heating devices.
- 3) Please do not place in the range of the magnetic field.

- 4) Please do not put it in places with smoke, water or oil.
- 5) Please do not put it in places where is dusty, humid and high temperature or easily to be shaken.
- 6) When the host is dirty, please turn off the power supply immediately, and then wipe the housing case with a soft wet cloth.
- 7) Please regularly run the diagnostic tool host to protect it from damp when it is not in use for extended periods.

1.3.2 Host Protection

- 1) Please handle the host with care as possible as you can to avoid impacts.
- 2) When connecting the test cable and the automobile for diagnosis, please plug carefully. And tighten the fastening screw when it's in use in order to protect the interface from being damaged in the process of movement, please first loosen the screw after use and then unplug the main testing cable to avoid that the diagnosis interface gets damaged.
- 3) After using the instrument, put the test cable, connectors and other accessories back to the assembly case to avoid missing.

1.3.3 Screen Maintenance

- 1) The screen surface will absorb dust due to the static electricity. It's recommended to purchase the LCD special cleaning cloth to clean the host screen and wipe it gently.
- 2) Do not wipe the dust with your fingers to avoid leaving fingerprints. Do not use chemical cleaners to wipe the screen.
- 3) Please do not place the product near electric equipment that generates electromagnetic wave interferences so as not to affect the display.
- 4) Please do not expose the screen in direct sunshine or ultraviolet lighting for long time so as not to affect the life of the screen.

1.3.4 Precautions

- 1) It's prohibited to frequently turn on/off the host, suddenly turn off the power supply, and to provide unstable power supply or artificial abnormal power supply.
- 2) If it's not in use, please unplug the power supply connector to protect the electrical components from aging when electrifying for long time.
- 3) Avoid using this product in an environment with air which has volatile alkali chemical, so as to avoid host hardware corrosion.
- 4) Never clean the product with chemical solvent reagents like banana water, engine cleaning agents, gasoline etc.
- 5) Do not put anything on the screen. To avoid any damage, please don't place objects on the screen.
- 6) Periodically start the CanDo main unit if not operated for a long time in order to avoid moisture accumulation.

1.4 Automobile Inspection Notes

Please perform operations according to automobile repair industry safety rules. Special attention should be paid to influences and damages caused by acid and alkali, poison gas, high pressure and other environmental factors.

There is sulfuric acid in the automobile battery. The sulfuric acid is corrosive to the skin so please avoid direct contacts with the battery when operating the product, especially do not splash it into eyes, and please keep kindling materials far away.

There are various kinds of toxic compounds in the engine exhaust gas, please do not breathe in the exhaust gas, please park the vehicle in well-ventilated places during operations.

The temperature is relatively high when the engine drives, please do not touch the water tank or exhaust pipe or other high-temperature components.

Please apply the handbrake before starting the engine, put the shift lever in the neutral gear (manual transmission) or P gear position (automatic transmission) to avoid traffic accidents when starting the engine.

Please apply the parking brake before performing the vehicle maintenance. The transmission is engaged into the neutral gear or P gear and to lower the driver's side window glass.

If the engine can be started, please first warm up the vehicle to the normal temperature (the water temperature is about 80 °C), and turn off auxiliary electronic equipments (e.g. A/C, light and audio).

Please find the diagnostic socket on the vehicle, check and confirm that the diagnostic socket cable is in good condition, and then connect the host to diagnose. Otherwise please do not perform the test in order to protect the host from damages, or you can use the multimeter to measure the diagnostic socket voltage if it is necessary.

1.5 Product Help


The CanDo HD Pro Tab diagnostic tool maintenance is simple and convenient, and support services go with the host. Our marketing networks all around the country could provide the most convenient and fastest services in all aspects of purchase, use, upgrade and maintenance.

CanDo International, Inc. also provides online help function for users. If you want to learn our latest products or automobile diagnostic information, please visit www.candointl.com for comprehensive and detailed help services.



Chapter II Product Structure

2.1 Host Hardware Instruction



2.1.1 Host Diagram

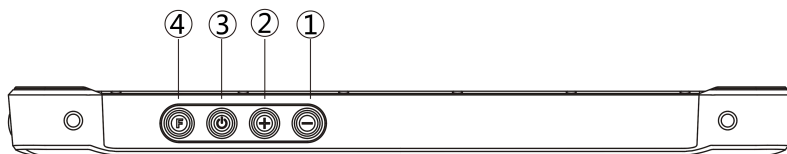

Structure Diagram

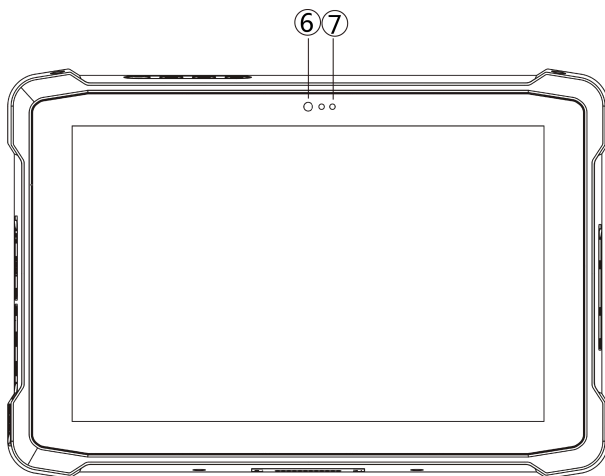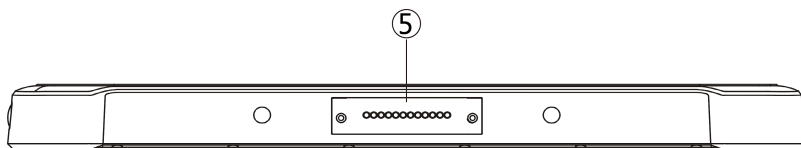

Structure Diagram

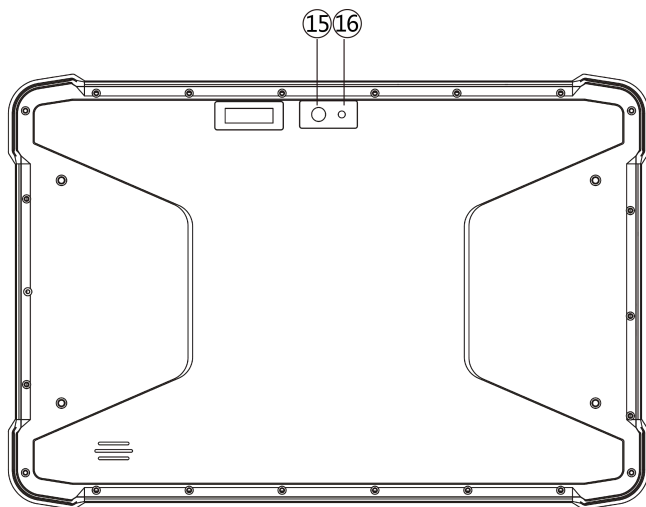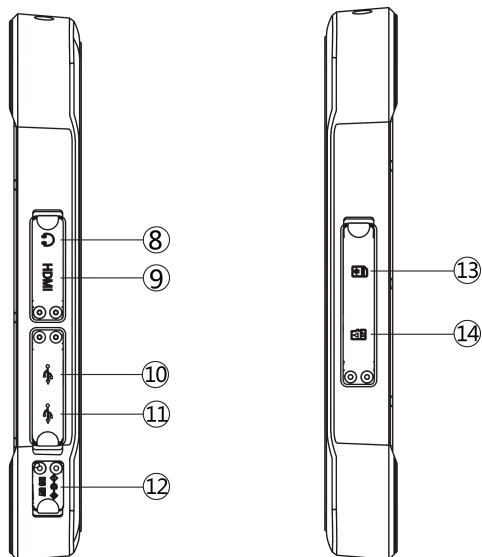

Structure Diagram


No.	Name	No.	Name
①	Volume -	②	Volume +
③	Power switch	④	Scan(reserved)
⑤	Docking port	⑥	Front camera
⑦	Sensor light	⑧	Audio interface
⑨	HDMI interface	⑩	OTG USB port
⑪	USB A port	⑫	Power charging interface
⑬	SIM card slot	⑭	TF Card slot
⑮	Rear camera	⑯	Flash light

2.1.2 Host Parameters

System version	Android 8.1
CPU	MTK 8735A quadcore, 1.45GHZ
Display	10.1 inch 16:10 Resolution: 800*1280 IPS screen
TouchScreen	5 points capacity TP, G+G, hardness over than 5H
RAM	2GB RAM & 32GB ROM
Capacity	3.7V/8000mAh
Connection	WIFI 802.11(a/b/g/n) frequency 2.4G+5.8G dual-frequency WIFI
TF Card	support TF x1 pc, max: 128G
Camera	Front 2.0MP; Rear 5.0MP, auto focus and flash light
Interface	HDMI, USB2.0, TF card slot, SIM card slot, earphone jack, DC jack

power	DC 5V/2A
Weight	1000g
Working temperature	-10 ° C to 50 ° C
Storage temperature	-20 ° C to 60 ° C
Humidity	Humidity: 95% Non-Condensing

Chapter III VCI BOX Structure

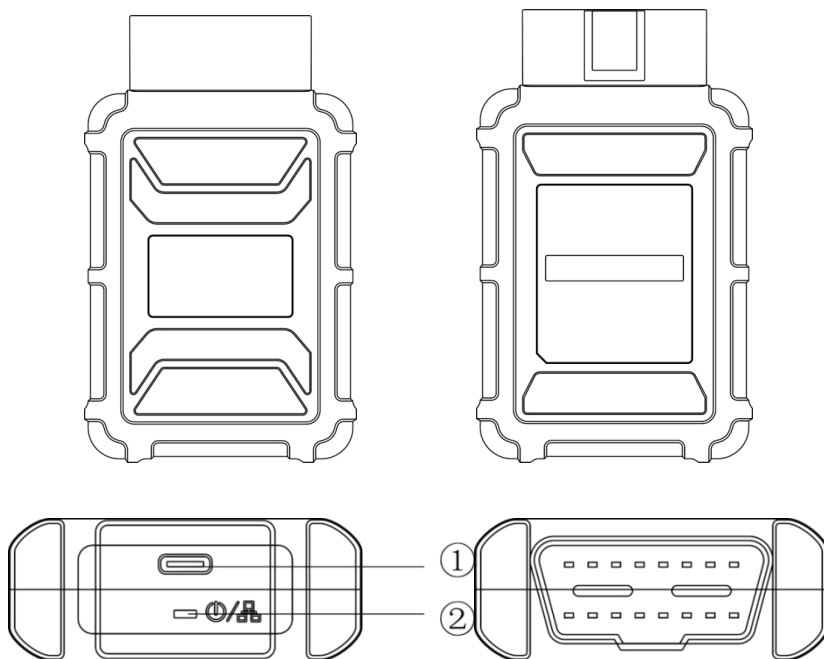

No.	Name	Description
①	USB interface	Connect to tablet PC or upgrade VCI box
②	Diagnostic light	Lights up when connected to vehicle Lights up when connected to tablet PC

VCI Box Parameters

Item	Description
Communications	BLE USB 2.0
Processor	Cortex-M3 Microcontroller
Frequency	72MHz
Processor Model	STM32F103CBT6
Flash Memory	128KB
RAM	20KB
Wireless Frequency	2.4 GHz
Input Voltage Range	8 V-36VDC
Supply Current	500 mA @ 12 VDC
Operating Temperature	0°C to 40°C (ambient)
Storage Temperature	-20°C to 70°C (ambient)
Bluetooth	Supports Bluetooth4.0

Chapter IV Operation Manual

CANDO series product operations are similar. Here we take general version as an example and the display content of the host in practical work shall prevail.

4.1 Connection of Power Supply & Main Testing Cable

4.1.1 Host Power Supply

There are 2 ways to connect supply power and the CANDO main unit.



- ① Connect the power adapter (power adapter)
- ② Dock the CanDo main unit on docking station

4.1.2 Wiring Method

Selection of power supply:

If the diagnostic socket does not have power supply, please choose one power supply connection method to provide power supply to the host.

If the diagnostic socket has power supply, connection to other power supply cable is not necessary.

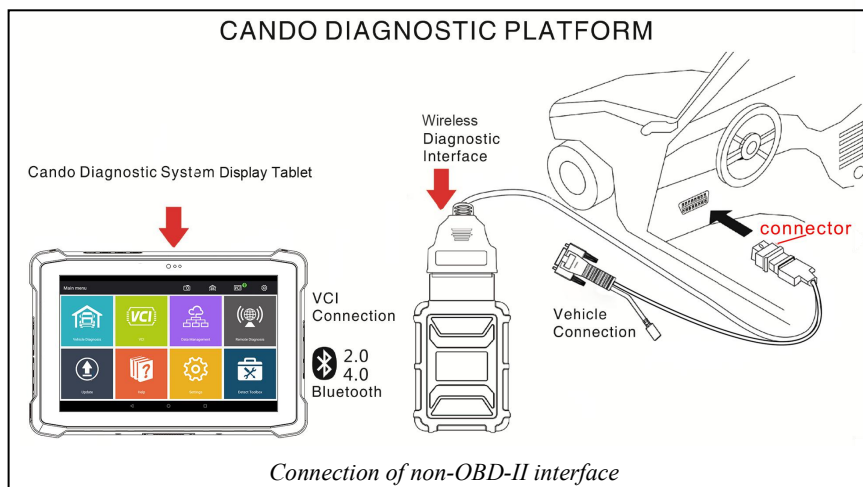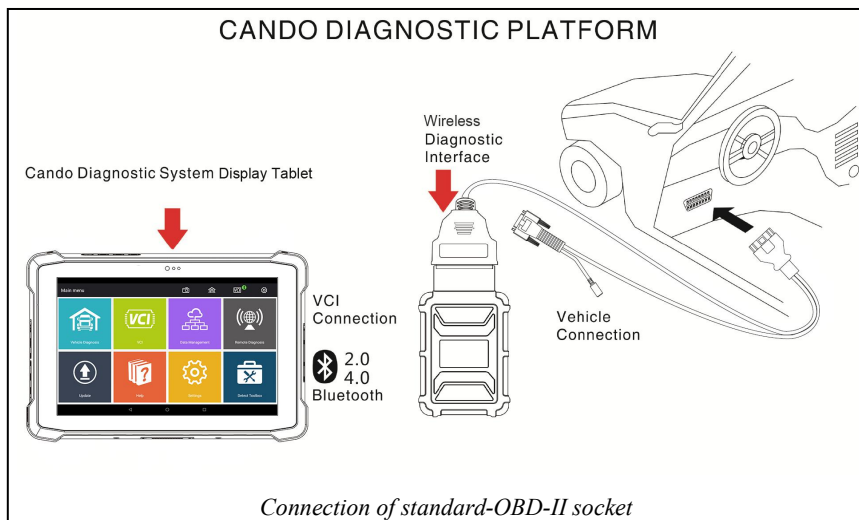

Vehicle necessary conditions:

1. Please confirm the diagnostic socket position and its shape, then check whether it needs external power supply or not.
2. Please select corresponding connectors according to the vehicle models and the shape of diagnostic sockets.
3. One end of the main testing cable is connected to the VCI and the other end is connected to the diagnostic connector.
4. Please insert the diagnostic connector that has been connected to the main testing cable into the vehicle diagnostic socket.
5. Turn on the machine, Please confirm the host is connected to the VCI.

Remark: The automobile diagnostic interface is standard OBD-II interface and two ends of the main testing cable are separately connected to the OBD-II connector and the auto diagnostic tool. The process is completed after inserting the OBD-II connector into the automobile diagnostic socket, please identify it according to the actual vehicle configuration because not all vehicles are standard OBD-II connectors.

4.1.3 Startup and Shutdown

Startup: Connect the host and power supply by any method mentioned above, and then gently click the power supply button. The host will be started.

Shutdown: After using the device, operate the touch screen and return to the desktop, gently click the power button to turn off.


Remark: Generally it takes 5-7s to operate when users turn on or off the machine. Pressing the power button for too long or with brute force would lead to button failure.

4.2 Start Interface Menu

Power on the host (press for 5 seconds) through the power switch mentioned above; then click the APP of HD Pro Tab to enter the main interface:


4.2.1 Main Interface

There are differences between models, software systems and menu in CANDO series models. The actual configuration displayed in the product shall prevail and this manual only takes some models as examples. The actual interface shall prevail.

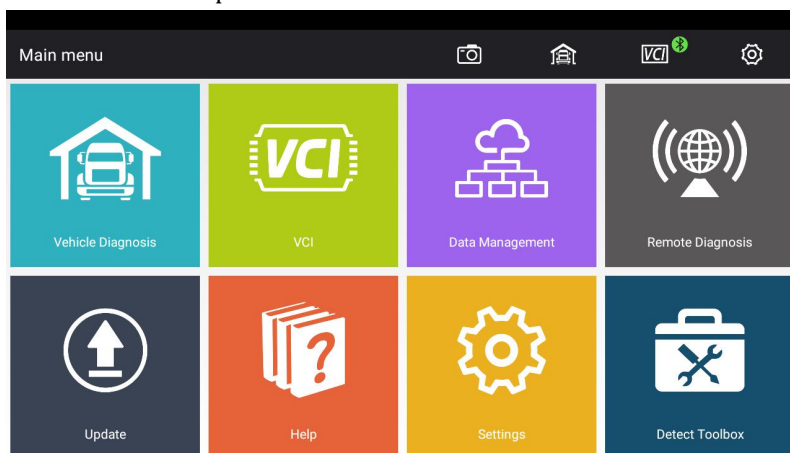


4.2.2 Vehicle Diagnosis

After connecting to the vehicle diagnostic port and selecting the model series, appropriate models of testing can be selected. After entering the model, read fault code, erase fault code, read data stream, actuation test and other advanced functions can be performed.

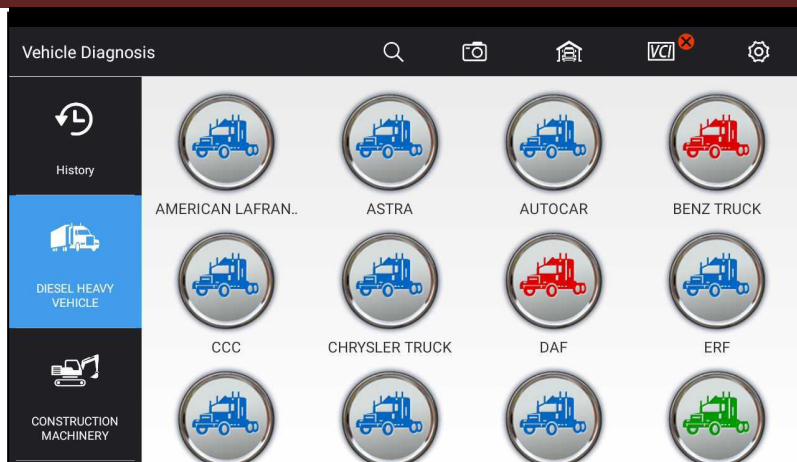


4.2.3 VCI Connection

1.[Diagnostic connection method]-Bluetooth;

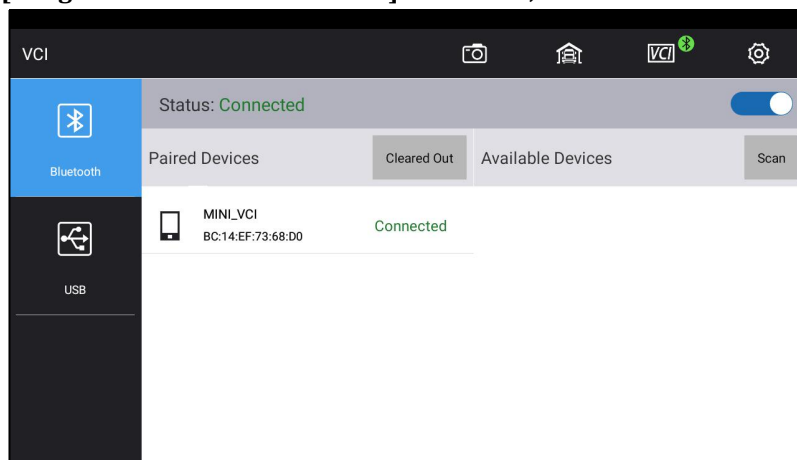


2. [Diagnostic connection method]-USB;

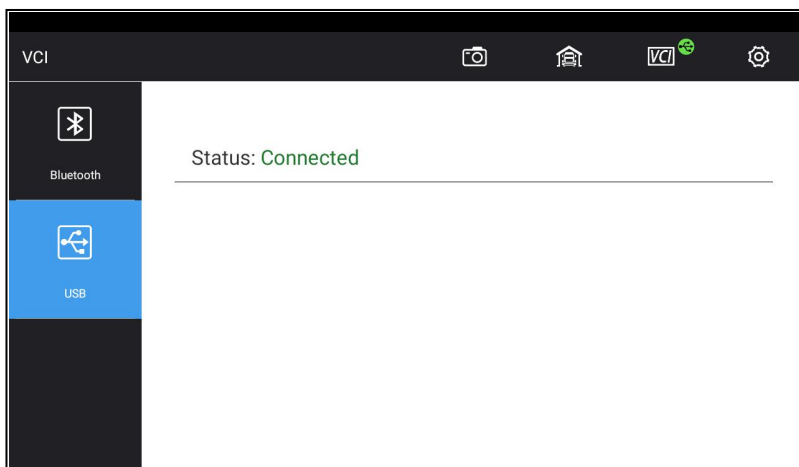


4.2.4 Data Management

Data management: storage location for picture, video, model version, ect., for user's reference.

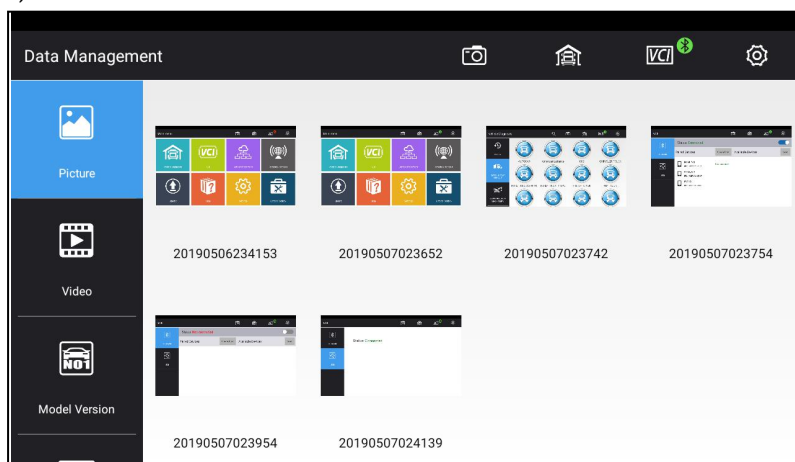


4.2.5 Remote Diagnosis

This function allows our technical staff to connect to your host through the network remotely to help you diagnose the vehicle.

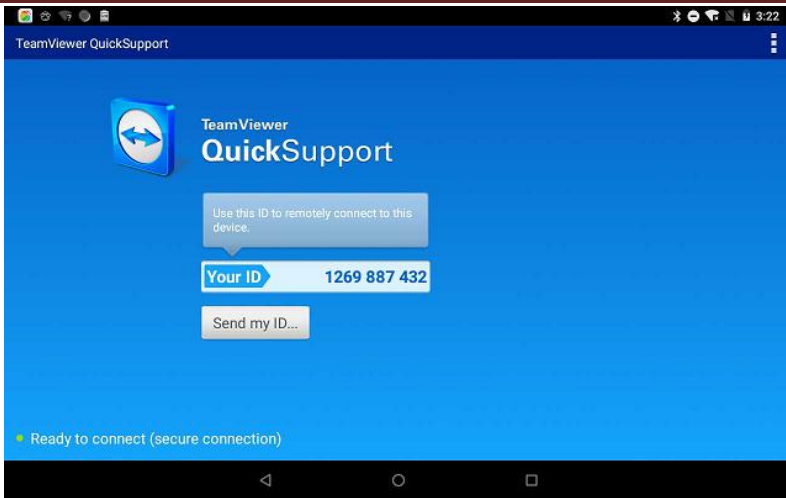


4.2.6 Update

When connected to the Internet via Wi-Fi to upgrade the diagnostic software to improve the functions of the system.

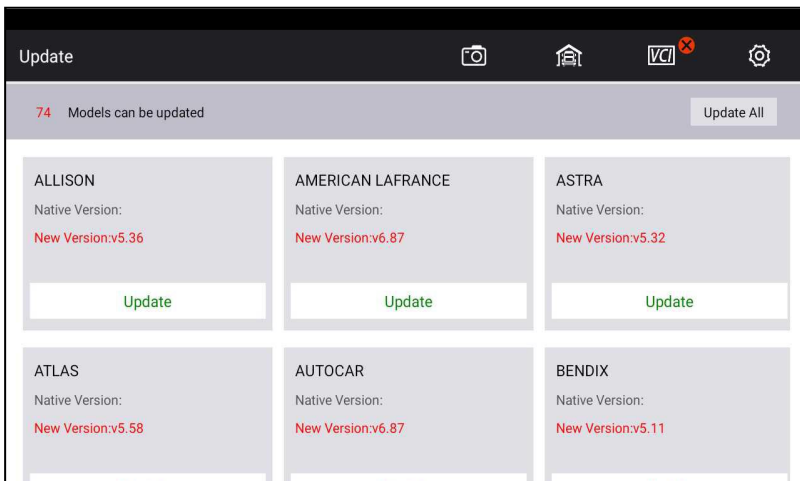

4.2.7 Help

Here we have built-in machine instructions for the user to access.

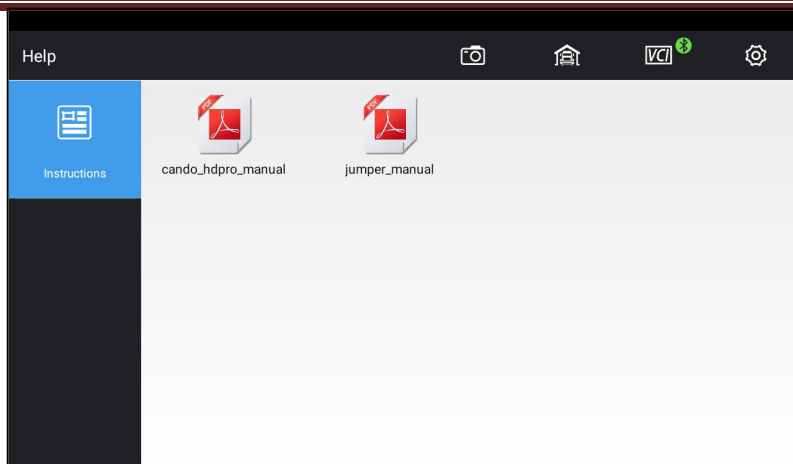


4.2.8 setup

Set the system Language, Unit, Users, Activation, About table and other functions.

1. Language Settings

Our products support multiple languages. You can use the application to reflect the languages you have purchased.

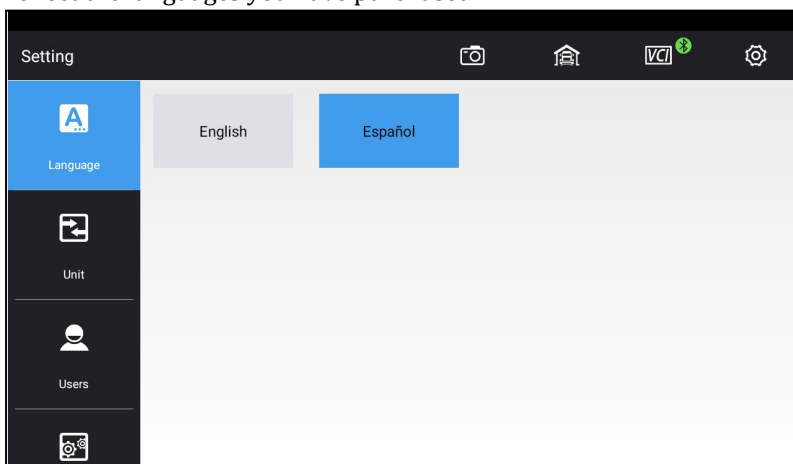

2. Unit

Set the live data unit in the diagnostic software. You can select Metric or English as needed.

The screenshot shows the 'Setting' screen with the 'Unit' tab selected. The left sidebar contains icons for Language, Unit, Users, and a settings icon. The main area displays two options: 'English' with a checked checkbox and 'Metric' with an unchecked checkbox.

Setting
Language
☒ English
☐ Metric

3. Users


Set your personal information: name, phone, email, address, and so on.

The screenshot shows the 'Setting' screen with the 'Users' tab selected. The left sidebar contains icons for Language, Unit, Users, and a settings icon. The main area displays input fields for 'User name', 'Contact number', 'Contact address', 'City,State', and 'Zip code'. A 'Save' button is located at the bottom right.

Setting
User name
Contact number
Contact address
City,State
Zip code
Save


4 SELF TEST

Connect the device according to the screen icon, and click [Start Testing] to check the open circuit and short circuit of the main test cable and OBD-II connector to judge whether it is good or bad.

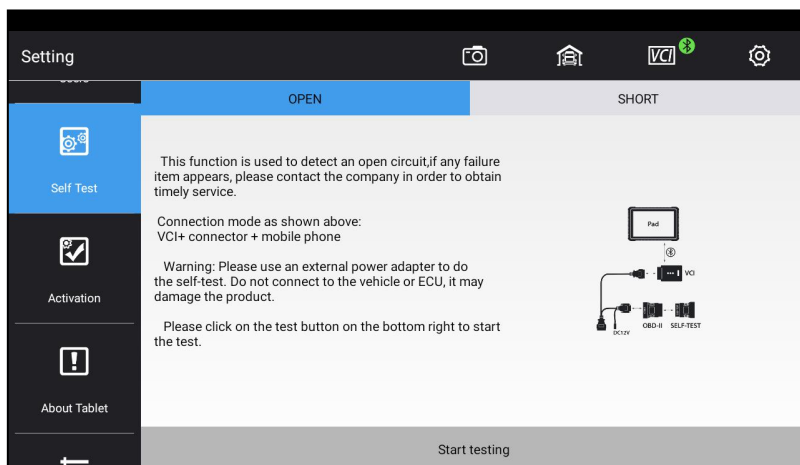


5. Activation

After your purchase, you can permanently activate the product.

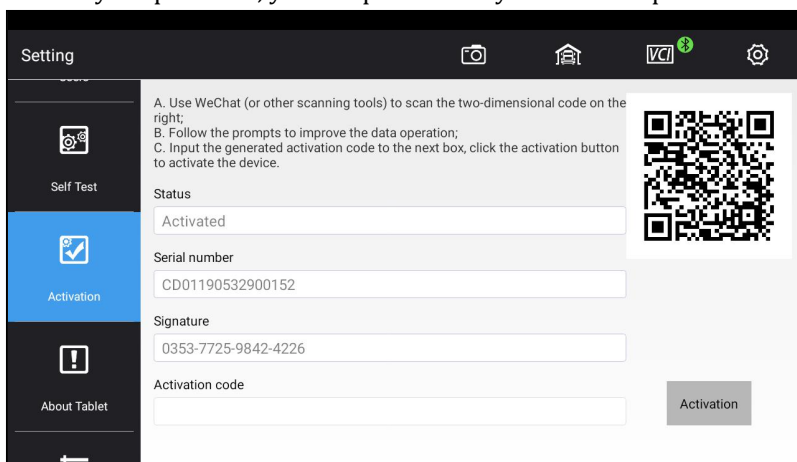


6. About Table

This screen shows system information, activation status, storage status, etc.

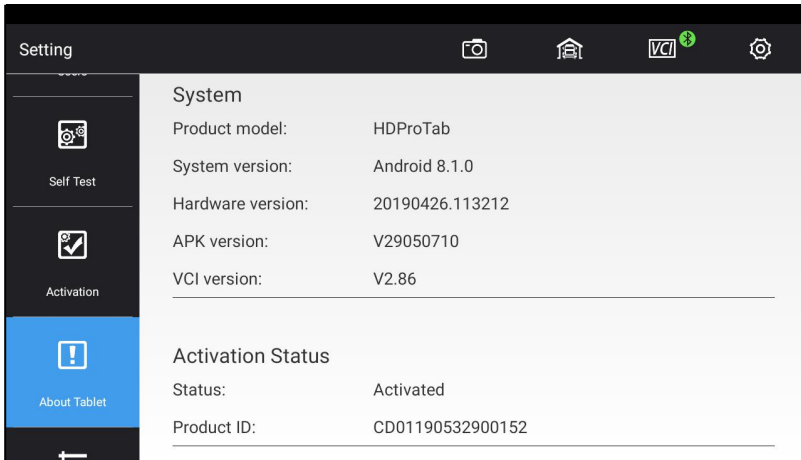

6. System Settings


Set Android system.

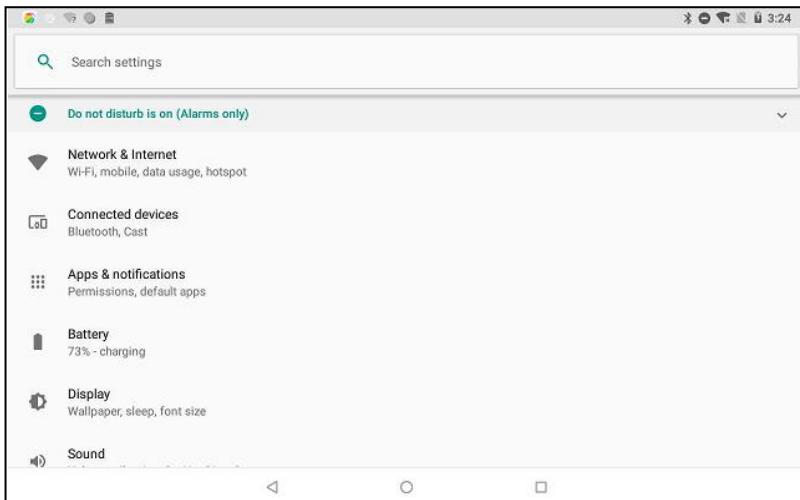


Chapter V Upgrade

Customers who have purchased the CANDO product will need to regularly upgrade it.


1. Click [Update].

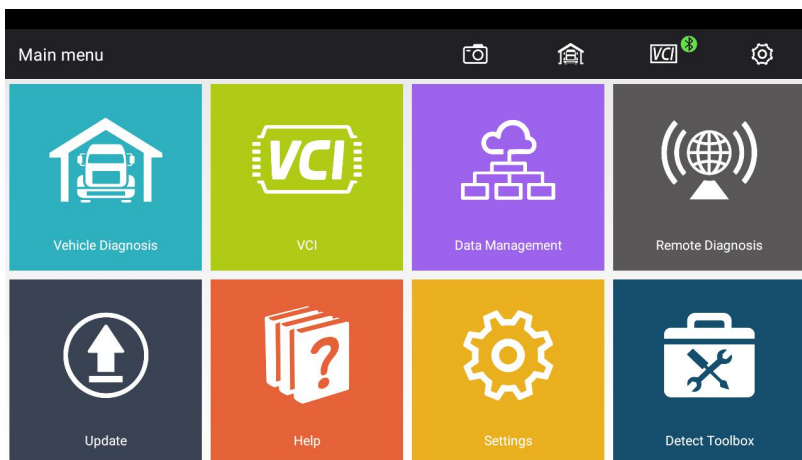

2. Check whether a new model version is available.

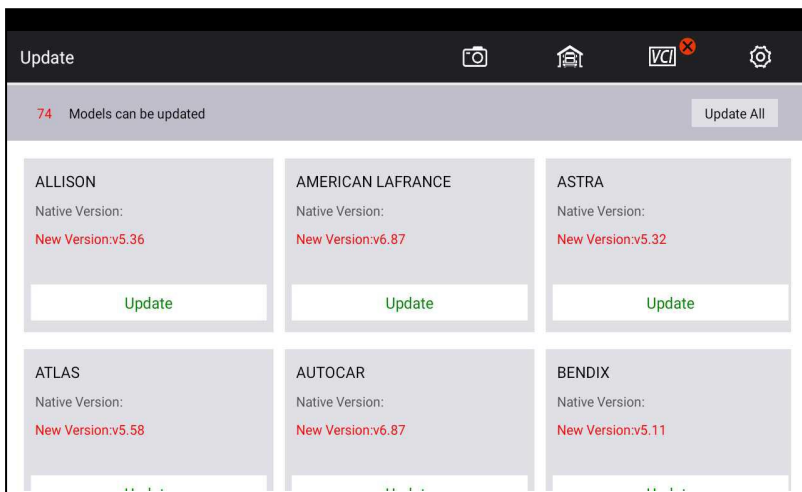

3. Click Update for the corresponding items.

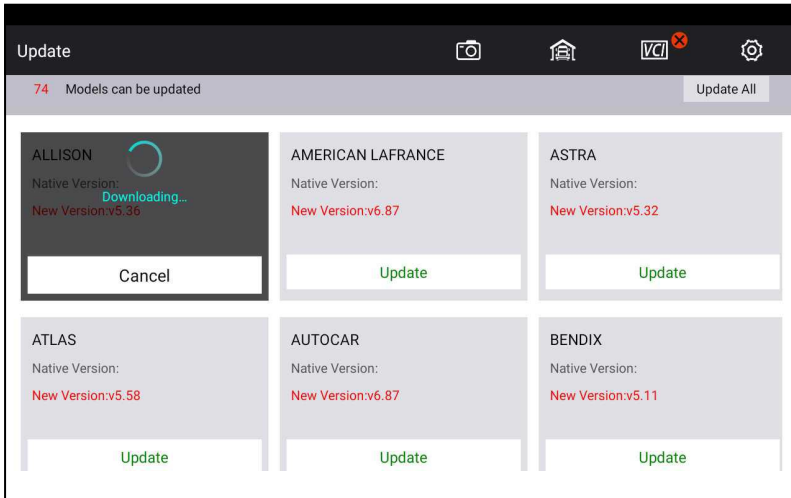

Chapter VI Compliance Information

FCC COMPLIANCE

FCC ID: 2AKNY-IDSPROTAB2

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR tests are conducted using

standard operating positions accepted by the FCC with the MID transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone. While operating can be well below the maximum value, in general, the closer you are to a Wireless base station antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model MID has been tested and meets the FCC RF exposure. Guidelines when used with an accessory designated

for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 0 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

WIFI	
Operation Frequency:	2412MHz~2472MHz 802.11b/802.11g/802.11n(H20) 2422MHz~2462MHz 802.11n(H40) 5180MHz ~ 5240MHz for 802.11a/802.11n(HT20); 5190MHz ~ 5230MHz for 802.11n(HT40)
Maximum Power(2.4GHz):	17.08dBm
Maximum Power(5.2GHz):	14.96dBm
5.8G SRD	
Operation Frequency:	5745MHz ~ 5825MHz
Maximum Power:	14.41dBm

CanDo HD Pro Tab Main Accessories Information:

Name	Information
USB Cable	Type: USB AM-MICRO2228 Parameter: USB Cable,Black,length 1000mm,connect USB male connector,other ends connect Micro USB Manufacturer: ShenZhen SONGYUANTAI Electronic Co., Ltd Address:4th Floor, Building 12, Zhongwu Industrial Area, Xixiang Street, Baoan District, Shenzhen
OTG Tieline	Type: USB AF-MICRO Parameter: OTG Tieline, length

	135mm OTG AF-MICRO 5P Black Manufacturer: ShenZhen SONGYUANTAI Electronic Co., Ltd Address:4th Floor, Building 12, Zhongwu Industrial Area, Xixiang Street, Baoan District, Shenzhen
Battery	Type: 7566122 Parameter: 3.7V/8000mAh Manufacturer: Guang Dong Sun New Energy Technology Co., Ltd Address:No.2, Xiangnan Second Street, Huangjiang Town, Dongguan City, Guangdong Province, P.R. China
Antenna	Type: SLEingB215850070 Parameter: Diameter 0.81mm, length 70mm, 4th generation terminal Manufacturer: Dongguan City SLEing Intelligence Technology Co., Ltd Address:No. 6 Bldg. 402, Modern Enterprise Accelerator, Songshan Lake Industrial East Road, Dongguan City

Software version: Android 8.1

Hardware version: EM_T86_MB_PCB_V13R3

Adapter

Model:AW018WR-xxxxxyyywz

Input: AC100-240V; 50/60Hz; 0.5A

Output:12V 1.5A

Manufacturer/ Factory: Shen Zhen A-WIN Technology Co., Ltd

Address :Area A No. 3 Bldg. 4th Floor, Heng Chang Rong Industrial Park,
Shiyan, Shilong Community, Bao'an District, Shenzhen, Guangdong 518108,
P.R. China

CAUTION:

- Adapter shall be installed near the equipment and shall be easily accessible.
- The users has to turn off the 5GHz WiFi in outdoor environment.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

This product can be used across EU member states.

We declares that this device is in compliance with the essential repuirements and other relevant provisions of Directive 2014/53/EU.

Annex: Diagnostic Interface Definition and Description of Standard OBD-II

1. OBD-II General Introduction


OBD-II is the abbreviated name of ON-BOARD DIAGNOSTICS-II. The first generation of diagnostic system is before 1993, and the diagnostic socket, fault codes, diagnostic function of each manufacturer was all different, which caused difficulties for repair personnel. American Society of Automotive Engineers (SAE) developed a set of standards and this set of standards certified by the "Environmental Protection Agency" (EPA) and "California Resources Association" (CARB). This standard requires each manufacturer to provide uniform diagnostic mode and sockets in accordance with standard OBD-II. Since then diagnostic test can be performed on variable vehicles by one instrument.

OBD-II is a standard stipulated by California, cars from Europe, America, and Japan should all comply with the standard. At present, mainland China and Taiwan also adopted this standard. As a result of complying it, using instruments is simplified for technician. We should understand the characteristics of OBD-II in-depth. According to the

development of automobile communication, the world's most models are based on the OBD standards currently

2. OBD-II Features

(1) Unified diagnostic socket shape is 16 PIN (needle), as shown below.

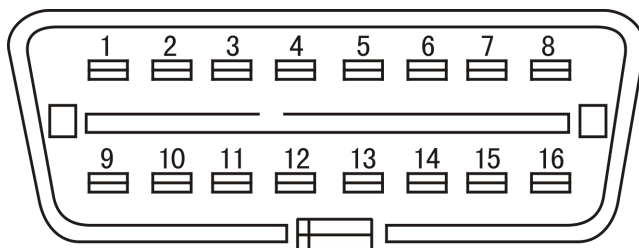

(2) With a numerical analysis and data transmission function(DATA LINK CONNECTOR-DLC).

(3) Unified fault codes and significance.

(4) With a driving recorder function.

(5) With a redisplay fault code memory function.

(6) Clear fault codes directly by the instrument function.

3. DLC (Data Transmission Connector) Diagnostic Socket Unified Standard

(1) DLC diagnostic socket unified as standard 16PIN, mounted in the cab, under the driver side instrument panel.

(2) There are two standard DLC pins: ISO - European standard (INTERNATIONAL STANDARDS ORGANIZATION 9141-2) , use 7#, 15# pin to transfer data.

Each terminal function of OBD-II diagnostic blocks shown in Table 1.

Table: OBD-II Terminal Function

Terminal	Function Description	Terminal	Function Description
1	SAE J2411, GM single wire CAN, GM single line CAN-BUS	9	when 7th pin is not convenient to use, enable *KWP1281 or KWP2000 Protocol diagnostic line (K line)
2	ISO11519-4 (Bus+)(SAE J1850),and 10 th pin used simultaneously	10	ISO 11519-4 (Bus-)(SAE J1850)
3	CCD-BUS network cable H line	11	CCD-BUS network cable L line
4	Car body directly grounding	12	Factory retained
5	Signal circuit grounding	13	Factory retained
6	ISO 15765-4, CAN-BUS high speed diagnostic line (CAN-H line)	14	ISO15765-4, CAN-BUS high speed diagnostic line (CAN-L line)
7	KWP1281 or KWP2000 protocol diagnostic line (K line)	15	KWP1281 or KWP2000 protocol diagnostic line (L line)
8	Factory retained	16	Connect battery “+” pole

For more product introduction and help, please visit CANDO official website www.candointl.com.

Chapter VII Warranty

Dear CANDO users, welcome to choose CANDO products. In order to make better use of the product, we recommend you to maintain your product and use it according to the user manual each time. If requirements are met, the product will serve you longer.

1. Under the premise that the following terms and conditions are met and you have improved your real information via machine activation or user registration, warranty services will be provided by CanDo International, Inc. (hereinafter referred to as the "CANDO only") for a defective product material or workmanship.

2. Confirm that you carefully read the product warranty terms, for CanDo International, Inc. will regard you as accepted the terms of the warranty by completing the information on CANDO official website.

3. Products must be purchased from reseller authorized by CanDo International, Inc., if it is from irregular channels, buyers have to bear the cost of product repair services.

4. The following are not covered by the warranty: Product manual, inside and outside packaging, promotional gift items, printing supplies and other consumable items.

5. Since the data of purchase (valid Proof-of-Purchase and warranty card), you can choose to repair the product or replace it with same models if non artificial damage of performance failure occurred in one month.

6. Any of the following cases, your product will not be able to enjoy free warranty service.

1) Failure, defect or flaw that not belong to the quality of CanDo International, Inc. products: including improper operations, crash, fall, self disassembly, connection of improper accessories, damages owing to improper transport or storage of the product, erosion and corrosion that caused by infiltration of liquid or food.

2) The natural wear and tear of product: including but not limited to cover, keypad, LCD touch screens and accessories.

3) Inconsistent of Product host serial number and warranty card product serial number, product quality inspection tag or barcode removed, altered or damaged.

4) Maintenance and modification without the approval of CanDo International, Inc..

7. The product quality problem or failure occurred within the warranty period, you can take the following measures.

1) You can perform self-test for the product according to products help information. If there are no hardware quality problems, try to upgrade the product program.

2) You can dial CanDo International, Inc. to obtain the correct service information. This includes obtaining an RMA# (Return Materials Authorization) prior to sending the unit in for repairs. Product received without an RMA# will be rejected.

3) After obtaining the company's effective reply, the product must mailed to our designated address (see full address on the official website of CanDo International, Inc.) for repair and maintenance, otherwise your product can not receive timely repair and maintenance. And you have to take the lose of your product. Please make sure to mark the outside of the box with the RMA# provided.

8. During the process of warranty service, you will bear the costs associated with delivery or maile to CanDo International, Inc., including product packaging, transportation, insurance and other expenses.

9. Enjoying your free warranty service under this warrant clause is the only measure for the losses due to product defect within the product warranty period. CanDo International, Inc. shall assume no responsibility for your direct or indirect loss.

10. All warranty information, product features and specification changes will be posted on CanDo International, Inc. latest promotional materials and web site without further notice.



CanDo

CanDo International, Inc.

CanDo

CanDo International, Inc.



Certification

This product has been inspected and certified to meet the company's quality standards.

Product name	HD Pro Tab
Product serial number	
Date of production	
Inspector	



Warranty card

Product name	HD Pro Tab
Product serial number	
Purchase date	

Company name: _____

User address: _____

Contact person: _____

Contact number: _____



FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications to this product not authorized by CanDo International, Inc. could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product.

This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

SAR Statement:

This HD Diagnostic Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: W51 (FCC ID: 2AKNY-IDSPROTAB2) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Caution:

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.