


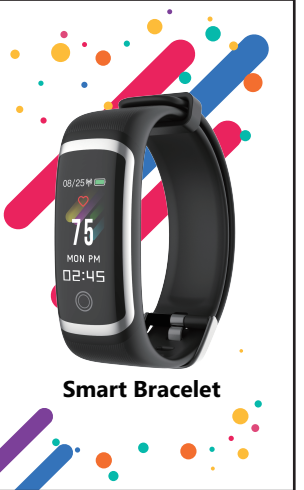

Smart Bracelet

Catalog

English ----- 01~05
中国汉语 ----- 06~12

I Compatible system of phone&BLE version

- Android 4.4 or above
- iOS 8.4 or above
- Bluetooth 4.0

II Preparation

Please ensure the bracelet is fully charged for the first time. Please charge it if the device can't be powered on.



III Connection

Please ensure the phone is compatible with WearFit 2.0. Firstly download WearFit 2.0, then connect smart bracelet by WearFit 2.0. Download APP: Please search "WearFit 2.0" in APP store or Google Play and android market.

Binding: Please ensure the bluetooth turned on and open "WearFit 2.0", click the selection of link to bracelet, find the device name in the list and connect it, then enter the main interface.

Screen time icon switch: Select dial time icon first, long press touch button for 3 seconds to switch, it comes with 2 different dials, select one&long press touch button for 3 seconds. The band vibrate and time icon will be switched.

IV Start using

Once bracelet is connected with WearFit 2.0, it will synchronize with the phone time and testing records. Bracelet operation: Bracelet operation: Press the OLED touch button, it will show the following interface: Steps mode → Distance mode → Calorie mode → Heart Rate mode → Sleep mode → Stopwatch mode → Message reminder → Search mobile mode → Power off mode → Dials mode → Background → Bluetooth Name.

Function Instruction:

- Heart rate monitoring: It automatically measures the current heart rate at every second, 24 hours continuous monitoring. Connecting with WearFit 2.0 APP to get heart rate data reports and health status analysis.
- Steps record: It will record the steps into bracelet every day. The steps will be counted according your movement of your arms.
- Stopwatch: Press it and hold for 3 seconds to enter the stopwatch→Click it to start→Click it to stop→Press it and hold for 3 seconds to exit.
- Distance display: Show the distance of movement.

- Calories Mode: Displays calories burned.
- Time mode: Display time, battery, date, current heart rate.
- Time mode: Three kinds of dials. Touch it and hold for 5 seconds to change the dial. After selecting, press it and hold 5 seconds. It will complete the dial switch after the bracelet vibrating.
- Call reminder: Open the "Call reminder" function in APP, the bracelet will vibrate when call comes in.
- Message reminder: Open the "Message reminder" function in APP, it will gently vibrate to remind you when the phone comes a new message (SMS, QQ, Wechat, Facebook, Twitter).
- Sleep monitoring: Automatically monitor your whole sleep quality and analyze the deep sleep and light sleep hours.
- OTA upgrade: It will continue to optimize and update for the functions.
- Use bracelet to find mobile: Long press "SEARCH" for 5 seconds→Press touch button to start→Find the location of mobile according mobile ringtone and vibration→Long press for 5 seconds to exit. (Do make sure mobile App bluetooth connected with bracelet and within signal acceptance distance.)

V Q&A

- 1. Can't find bracelet and can't connect with it?
① Please ensure the bluetooth is ON and the system of mobile phone is Android 4.4 or above and iOS 8.4 or above.

- ② If it still unable to connect, enter the phone settings → Application Management → Authorization Management → Application Rights Management → Find application [WearFit 2.0] → Allow all permissions as "allowed" → Enter the phone settings and select GPS location and turn on GPS function. → Restart the phone → Try to connect.
- ③ Please ensure bracelet is fully charged. Do feel free to contact us if it can't work normally with plenty power.

- 2. The APP shows no connection after bound with bracelet, or it is connected but the power is 0%?
In this case, the App is not bound with bracelet successfully, please rebind.

- 3. Can't connect the device with APP?
Pull down and refresh main interface, it will manually to synchronize the data, then it can display data in the APP. Auto-sync data will only be synchronized at first binding. Then it will automatic synchronize of data hourly. In addition, don't forget to open hourly measurement. Otherwise histogram hasn't any data.

- 4. Pull-down and refresh APP, the data is not loaded?
App settings → Restore the factory settings → Click restore factory settings → Turn off the bracelet → Restart bracelet → Match with APP. Then data can be loaded out.

- 5. Time for bracelet is not accurate?
When the bracelet run out of power, the time of it may be in error after being recharged. Please connect with the mobile and the bracelet will automatically synchronize the time.

- 6. The bracelet time is not synchronized after connecting with the phone?
Mobile phone settings → Application management/rights management → Open permissions of APP → Reconnect the bracelet → Pull down and refresh it at main interface of the APP.

VI Specification

QLED screen size	0.96 inch
Battery capacity	90mAh
Bluetooth version	BT4.0
Waterproof	IP67
Material	Soft TPU
Strap size	235mm*18.5mm*10.8mm
Battery type	Polymer lithium battery

Charging Way



VII Multiple Interfaces for selection



Note: The company reserves the right to make changes to contents of the user manual without notice.

I 适配平台及要求

- Android 4.4 及以上
- iOS 8.0 及以上
- 手机硬件支持蓝牙 4.0

II 使用准备

初次使用请确保电量充足。若电量太低无法开机请充电1-1.5小时（第一次使用务必使电池充满）关机状态下手环会显示充电标识。开机状态下手环主界面电池条会呈流动状态。



※如果设备长期不用，请务必保证每3个月补充电一次。

III 注意事项

安卓手机：设置→辅助功能→支持所有功能 / 允许后台运转设置→应用程序→WearFit 2.0→支持使用所有功能。

3.1 APP 下载方式

安卓手机：请在各大安卓应用商店搜索 "WearFit 2.0"，点击进行安装下载。或者扫描下方二维码进行下载。

苹果手机：请在 App Store 搜索 "WearFit 2.0"，点击进行安装下载。或者扫描下方二维码进行下载。



3.2 连接使用

启动手环（长按触摸按钮 5 秒），手环靠近手机，打开并进入 "WearFit 2.0" APP，按照 APP 连接步骤搜索蓝牙手环，完成配对连接。手环的蓝牙名称是 "GT101"。点下一步完成连接。苹果设备配对连接：苹果设备 iOS 系统第一次 APP 连接好后后台提示蓝牙配对请求。点击 "配对" 连接。手环才能接受来自 iOS 系统推送的来电、短信等通知提醒。

V 开始使用

手环绑定成功后，将同步手机时间，并立即开始记录和分析心率、步数、睡眠等情况。

手环操作：

单击按钮：手环将以以下顺序切换界面。计步模式 → 距离模式 → 卡路里模式 → 心率测量 → 睡眠监测 → 秒表功能 → 信息 → 搜索手机 → 关机 → 时间表 → 音量调节 → 蓝牙名称。

VI 手环功能

时间模式：两种表盘模式选择。表盘显示时间、日期、电量。选择表盘切换模式后长按触摸按钮3秒即可更换显示模式。→卡路里测量→心率测量→睡眠监测→秒表功能→信息→搜索手机→关机→时间表→音量调节→蓝牙名称。

心率测量

手环将自动24小时连续测量心率。手环切换至心率界面也可以自动测量心率。手环界面上显示的心率数为最新测量的数据。（单次测量请等待15秒左右，因未贴近皮肤、测量处有污垢等原因，数值与实际数值可能有误差）

计步模式

用户佩戴手环每天行走的步数可记录在手环上。手环根据推算的次数记录行走步数。

公里模式

显示步行这段时间内走了多少公里。

卡路里

步行的卡路里数会直接显示在手环上，显示消耗的卡路里。

睡眠监测

自动检测每天的睡眠质量。手环可以监测佩戴者的活动状态。当您一段时间没有活动，或者心率变慢且平稳后，手环将自动开始进行睡眠监测。根据您的睡眠情况分析出深度睡眠及浅度睡眠时间。

秒表功能

长按五秒进入秒表计时→单击开始计时→单击停止计时→长按五秒退出。

手环查找手机

长按五秒进入查找手环→点击触摸按钮开始→根据手机铃声和震动找到手机位置→点击触摸按钮结束。（需要与APP保持蓝牙连接并在接收范围内）

短信提醒

APP中"我的"→设备管理→智能管理"中，打开短信提醒。手机来短信时手环震动提醒。APP中"我的"→设备管理→智能管理→APP提醒"中，可选择需要提醒的APP。在手环短促提醒界面上，长按触摸按钮5秒，可点击查看短信。点击逐步查看每条的信息内容，长按5秒退出信息界面。（手环可查看最新的9条信息）

关机

在关机界面上，长按触摸按钮5秒，切换至"Y ES"（再长按5秒即可关机。）

来电提醒

在APP开启消息提醒开关，当手机来电时手环震动提醒。

APP「WearFit」中的功能

疲劳度：APP根据睡眠时间、当天的运动量、心率状况综合计算出疲劳度。

查找手环

点击查找手环，手环震动。（需与APP保持蓝牙连接并在接收范围内）

防丢提醒

打开防丢提醒功能，当手环与APP断开连接，手环会自动提醒。闹钟：点击可设置闹钟。

久坐提醒

打开久坐提醒。设置开始时间及结束时间。手环会自动监测活动的状态。如在设置的时间段中手环没有产生步数，手环将自动提醒。提醒间隔为45分钟。（时间段需要设置大于45分钟）

勿扰模式

开启勿扰模式。设置开始时间和结束时间，在这一时间段中手环会停止接收来自手机的消息推送。

3. APP无数据推送

在主界面下拉刷新，手动同步数据，即可在APP显示数据。之后每个整点自动同步数据。另外，整点测量要打开。我们的计步、心率、疲劳的图形全部读取的是整点数据，如果没打开，柱形图是没有数据的。

4. APP下拉刷新后，数据加载不出来

APP设置→我的手环设置，点击手环设置，手环关机了，再重新连接上APP，正常使用手环，数据就可以加载出来了。

5. 手环时间不准

当手环没电，重新充满电后，手环时间可能出现误差，请连接上手机，手环将自动同步手机的时间进行校准。

6. 连接手机后手环时间不同

手机设置→应用管理/权限管理。把APP的权限打开，重新连接手环，在APP的主界面下拉刷新。

常见问题

1. 绑定时无搜索到手环或无法连接？

安卓手机：① 请确认手机蓝牙开启，且手环未显示蓝牙标志(如果手环显示有蓝牙标志，说明已被连接上)。靠近手环，再次尝试搜索和连接。另外确认手机系统为Android4.4以上版本才可使用

② 如仍无法连接，进入手机设置→应用管理→授权管理→应用权限管理，找到应用 [WearFit 2.0]，把其权限全部改为“允许”；再进入手机设置→GPS定位，将手机GPS定位功能打开，重启手机，再尝试连接。

IOS系统：请确认手机蓝牙开启，且手环未显示蓝牙标志(如果手环显示有蓝牙标志，说明已被其它设备连接上，请关闭手环蓝牙)，苹果手机连接一次后，以后如果再打开手机蓝牙，默认把蓝牙设备连接上了，所以要前往手机设置→蓝牙→忽略此设备，APP才能检测到手环。

2. 绑定手环后显示未连接，或者显示已连接但电量为0%？

此对手环未与手环绑定成功，请重新绑定。

3. APP无数据推送

在主界面下拉刷新，手动同步数据，即可在APP显示数据。之后每个整点自动同步数据。另外，整点测量要打开。我们的计步、心率、疲劳的图形全部读取的是整点数据，如果没打开，柱形图是没有数据的。

4. APP下拉刷新后，数据加载不出来

APP设置→我的手环设置，点击手环设置，手环关机了，再重新连接上APP，正常使用手环，数据就可以加载出来了。

5. 手环时间不准

当手环没电，重新充满电后，手环时间可能出现误差，请连接上手机，手环将自动同步手机的时间进行校准。

6. 连接手机后手环时间不同

手机设置→应用管理/权限管理。把APP的权限打开，重新连接手环，在APP的主界面下拉刷新。

基本参数

屏幕尺寸	0.96寸
蓝牙	Bluetooth4.0
防水等级	IP67防水等级
电池类型	聚合物电池
电池容量	90mAh
充电时间	1.5~2小时
腕带尺寸	235mm*18.5mm*10.8mm
充电方式	USB充电
包装	智能手环+说明书

三种屏幕背景选择



充电方式



注意事项

1. 若出现产品质量问题或者对产品使用有不明白的地方，请直接邮件联系本店，我们将快速进行处理。

2. 本产品的测量结果仅供参考，不作为任何医疗用途及依据。请遵从医生指导，切不可依此测量结果自我诊断及治疗。

3. 本产品防水等级为IP67，可用于生活防水，不可用于潜水以及长时间泡在水中。另外，本产品不防热水，因为水蒸气会对手环造成影响。

4. 本公司保留不作任何通知的情况下，对本说明书内容进行修改的权利，恕不另行通知。部分功能在对应的软件版本中有区别，为正常情况。

Warranty Card

Model No	
Customer ID	
Order No	
Email	
Tel No	
Country	
Product problem	

警告

请遵从医生指导，依此测量结果自我诊断及治疗，非常危险患有血液循环障碍、血液疾病的用户请在医生的指导下进行治疗。本产品测量结果仅供参考，不作为任何医疗用途及依据。

Warning

Please follow the doctor's instructions, according to the results of self-diagnosis and treatment, it is very dangerous to have blood circulation disorders, blood disease users, please under the guidance of a doctor for treatment, the measurement results of this product are for reference only not for any medical purposes and basis.

合格证

QUALIFIED CERTIFICATE
型号: 智能手环
(MODEL)
检验员: QA
(CHECKER)
PASS

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.