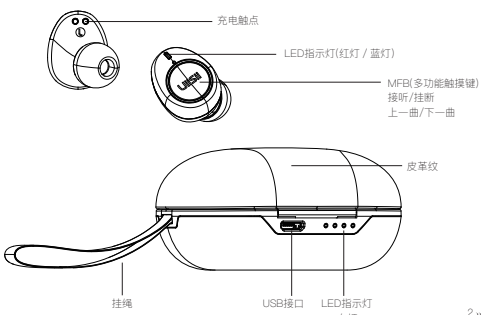
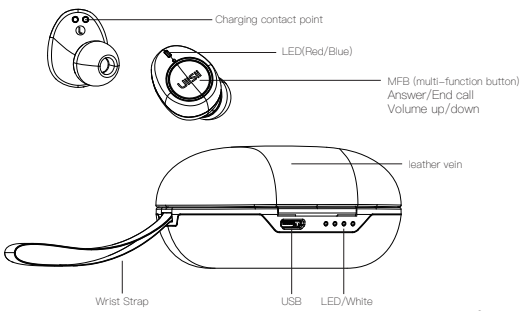
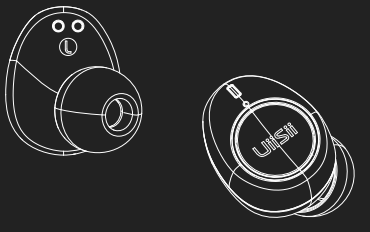
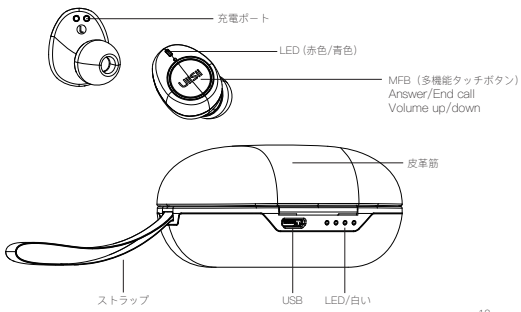


105g双铜纸，过光油，三开折叠，折叠后尺寸：75*53mm

\\用户指南\\ 感谢您选用Uiisii研发的TWS60真无线运动蓝牙耳机！为了您更好地使用本产品，请在使用前仔细阅读快速入门指南，并妥善保管。 \\产品规格\\ <table><tr><td>蓝牙版本</td><td>5.0</td><td>传输距离</td><td>约10m</td></tr><tr><td>耳机充电时间</td><td>约1.5小时</td><td>充电座 充电时间</td><td>约2小时</td></tr><tr><td>播放/通话时间</td><td>约4小时</td><td>待机时间 (含充电座)</td><td>约300小时</td></tr><tr><td>耳机重量</td><td>约8g</td><td>充电座重量</td><td>约90g</td></tr><tr><td>耳机 电池使用</td><td>锂离子聚合物锂电池 3.7V/430mAh</td><td>充电座 电池使用</td><td>锂离子聚合物锂电池 3.7V/400mAh</td></tr><tr><td>喇叭\\外径</td><td>6mm</td><td>灵 敏 度</td><td>108±3dB</td></tr><tr><td>频率范围</td><td>20-20000Hz</td><td>阻 抗</td><td>16Ω</td></tr></table> 1 -- \\产品信息\\  2 -- \\如何连接\\ 1. 耳机开 / 关机 开机：·从充电盒取出自动开机。 ·在关机状态下，按住MFB键3秒开机，红灯和蓝灯指示灯同时亮1秒，Power on提示音。 关机：·放入充电盒内自动关机。 ·在开机状态下，按住MFB键3秒关机，红灯指示灯亮1秒，Power off提示音。 注：当在无线立体声连接模式下，将任意一台耳机关机，另一台耳机会随着自动关机。 2. 配对（初次使用） ·从充电仓内取出耳机红灯蓝灯交替闪烁后进行左右耳配对，等待约10S,配对成功后右边耳机熄灭，左耳红灯蓝灯慢闪与手机进入配对。 ·打开手机上的蓝牙，然后搜索蓝牙设备“Uiisii TWS60”点击连接，连接成功后英文提示“Connected” 注：来电时左耳有转声提示。	蓝牙版本	5.0	传输距离	约10m	耳机充电时间	约1.5小时	充电座 充电时间	约2小时	播放/通话时间	约4小时	待机时间 (含充电座)	约300小时	耳机重量	约8g	充电座重量	约90g	耳机 电池使用	锂离子聚合物锂电池 3.7V/430mAh	充电座 电池使用	锂离子聚合物锂电池 3.7V/400mAh	喇叭\\外径	6mm	灵 敏 度	108±3dB	频率范围	20-20000Hz	阻 抗	16Ω	\\如何使用\\ ·耳机开机：取出充电仓自动开机（或关机状态下长按MFB键3秒开机） ·耳机关机：放入充电仓自动关机（或开机状态下长按MFB键3秒关机） ·播放/暂停：单击左耳或右耳按键 ·上一曲/下一曲：左边双击上一曲/右边双击下一曲 ·接听/挂断电话：单击左边或右边按键 ·拒接电话：长按左边或右边按键 ·清除配对信息：配对模式下红灯蓝灯快闪，单击3次，进行清除配对后自动关机或关机状态下长按10秒清除配对。 ·安全配对：当手机连接蓝牙设备在低于蓝牙版本3.0时，当弹出输入密码时，输入默认安全码“0000”与您的手机进行配对。 ·自动关机：为了省电，当左耳机没有连接手机，左耳机在3分钟后会自动关机。当右耳机在没连接左耳机时，右耳机在3分钟后也会自动关机。 ·将您的耳机复位：如需将耳机复位，请将耳机放回充电座内充电即可完成复位。 4 -- \\如何充电\\ ·给充电座充电 - 使用配套的USB线给充电座充电。在充电时，充电LED灯会根据电量对应的白灯闪烁。充满电时，白灯全亮。（充电座充满电的时间约为2小时）。 ·给耳机充电 - 请您分别将左 / 右耳机正确地放入充电座中进行充电，此时左 / 右耳机上的红灯将会点亮。当耳机充满电时，红灯会熄灭。耳机充满电的时间大约为1.5小时。已充满电的充电座，可给耳机提供大于3个循环的充电。 ·低电量提示 - 当充电座出现低电量时，充电座上的低电量指示灯会显示1格25%，此时就是提醒您要为充电座充电。当耳机出现低电量时，蓝牙状态指示将会转为红灯提示，且可以听到低电量提示音。 5 -- \\重要安全信息\\ ■ 用户注意：当耳机长时间不使用的情况下，请间隔20~30天左右给耳机进行一次充电，以更好的保护电池的使用寿命！ ■ 用户不得自行取出或更换产品的电池，包括电池在内的敏感电子组件。如果掉落、燃烧、穿刺、重压、分解或者暴露在高温或液体下可能会造成损坏或者伤害。请勿使用已经损坏的电池和电子组件。 ■ 弃置与回收信息 - 本产品及电池不要将其作为家庭垃圾或扔入火中。当您决定弃置本产品及电池时，请按照当地环境法律处理电池，以免发生爆炸。 ■ 医疗装置干扰 - 产品包含会发射电磁场的组件与无线电，亦包含磁铁。这些电磁场与磁铁可能会对起搏器、去颤器或其它医疗装置产生干扰。请让您的医疗装置与产品间保持一个安全距离。有关您的医疗装置的特定信息，请咨询您的医师与医疗装置的制造商。如果您怀疑产品正在对起搏器、去颤器或其它医疗装置产生干扰，请停止使用。 6 --
蓝牙版本	5.0	传输距离	约10m																										
耳机充电时间	约1.5小时	充电座 充电时间	约2小时																										
播放/通话时间	约4小时	待机时间 (含充电座)	约300小时																										
耳机重量	约8g	充电座重量	约90g																										
耳机 电池使用	锂离子聚合物锂电池 3.7V/430mAh	充电座 电池使用	锂离子聚合物锂电池 3.7V/400mAh																										
喇叭\\外径	6mm	灵 敏 度	108±3dB																										
频率范围	20-20000Hz	阻 抗	16Ω																										
\\User Guide\\ Thank you for choosing the TWS60“True Wireless Stereo Earphone” developed by Uiisii! To better use this product, please read the Quick Start Guide carefully before use and properly manage it. \\Product Specifications\\ <table><tr><td>Bluetooth version</td><td>5.0</td><td>Transmission range</td><td>About 10m</td></tr><tr><td>Headset charging time</td><td>About 1.5h</td><td>Charging time for the charging cradle</td><td>About 2h</td></tr><tr><td>Music play time / Talk time</td><td>About 4h</td><td>Standby time (including the charging cradle)</td><td>About 300h</td></tr><tr><td>Headset weight</td><td>About 8g</td><td>Weight of the charging cradle</td><td>About 90g</td></tr><tr><td>Headset battery usage</td><td>Li-Polymer Battery 3.7V/430mAh</td><td>Charging-cradle battery use</td><td>Li-Polymer Battery 3.7V/400mAh</td></tr><tr><td>Speaker size</td><td>6mm</td><td>Sensitivity</td><td>108±3dB</td></tr><tr><td>Frequency range</td><td>20-20000Hz</td><td>Impedance</td><td>16Ω</td></tr></table> 7 -- \\Product Information\\  8 -- \\How to connect\\ 1. Headset power-on/power-off Power-on ·Take the headset off the charging case. The headset is automatically powered on. · In power-off state, hold down the MFB button for three seconds to power on the headset. Both red and blue indicators are on for 1s. There is a beep sound upon power-on. Power-off · Put the headset into the charging case. The headset is automatically powered off. · In power-on state, hold down the MFB button for 3s. The red indicator is on for 1s. There is a beep sound upon power-off. Note: In wireless stereo connection mode, if you power off a headset, the other headset will be also powered off. 2. Pairing (first use) · Take the headset off the charging case. Red and blue indicators flash alternately, and a pairing between left and right earbuds starts. The pairing will take about 10s. After the pairing is completed, the indicator of the right earbud is off, and red and blue indicators of the left earbud flash slowly, indicating that it is pairing with the phone. · Enable the Bluetooth function on the phone. Search for the Bluetooth device Uiisii TWS60. Select Connect. After the connection is successful, a “Connected” message is displayed. There is a ringtone alert from the left earbud when there is an incoming call. 9 -- \\How to use\\ ·Headset power-on: Take the headset off the charging case to trigger an automatic power-on. (Or hold down the MFB for 3s in power-off state.) ·Headset power-off: Put the headset into the charging case to trigger an automatic power-off. (Or hold down the MFB for 3s in power-on state.) ·Play/Pause: press the MFB on the left or right earbud. ·Previous/Next: press the MFB twice on the left/right earbud to turn to the previous/next track. ·Answer/Hang up a call: press the MFB on the left/right earbud. ·Reject a call: hold down the MFB on the left/right. ·Clear pairing information: In pairing mode (red and blue indicators flashing quickly), press the MFB three times. Pairing information is cleared, and the headset is automatically powered off. Or hold down the MFB for 10s in power-off mode to clear pairing information. ·Secure pairing: If the Bluetooth device connected to the headset runs a version lower than 3.0, a password is required. Enter the default security code 0000 to pair the headset with your phone. ·Automatic power-off: If the left earbud is not connected to a phone, it will be automatically powered off in 3 minutes so as to save power. If the right earbud is not connected to the left earbud, the right earbud will be also automatically powered off in 3 minutes. ·Reset: Put the headset into the charging case. 10 -- \\How to charge\\ ·Charging the charging cradle. - Use the matched USB cable to charge the charging cradle. The white charging LED indicators flash during charging. The number of flashing indicators varies with the battery level. All indicators turn solid white when the cradle is fully charged (a full charge takes about two hours). ·Charging the headset - Fit left and right earbuds into the charging case. The red indicator on both earbuds will be on. When the earbuds are fully charged, the indicator will be off. A full charge takes about 1.5 hours. A fully-charged charging cradle provides about three charge cycles for the headset. ·Low battery level indication - If the battery level of the charging cradle is low, the low-battery indicator on the charging cradle will show only one grid (25% left), reminding you to charge the charging cradle. When the battery level of the headset is low, the Bluetooth indicator will turn red and a low-battery beep sound can be heard. 11 -- \\Important safety information\\ ·Caution: If you do not intend to use the headset for a long time, charge the headset once every 20 to 30 days to ensure its expected service life. ·Don't remove or replace the Battery,including sensitive electronic components, including a battery,and can be damaged or cause injury if dropped, burned, punctured, crushed, disassembled, or if exposed to excessive heat or liquid.Don't use damaged batteries and electronic components. ·Disposal and recycling information - Don't treat the product and battery as a household waste or into a fire. When you decide to dispose of the product and its battery, please follow the local environmental laws to handle the battery to avoid an explosion. ·Medical device interference - The product contains components and radios that emit electromagnetic fields and also contains magnets. These electromagnetic fields and magnets may interfere with pacemakers,defibrillators, or other medical devices. Maintain a safe distance of separation between your medical device and product.Consult your physician and medical device manufacturer for information specific to your medical device. Stop using product if you suspect it is interfering with your pacemaker, defibrillator, or any other medical device. 12 --	Bluetooth version	5.0	Transmission range	About 10m	Headset charging time	About 1.5h	Charging time for the charging cradle	About 2h	Music play time / Talk time	About 4h	Standby time (including the charging cradle)	About 300h	Headset weight	About 8g	Weight of the charging cradle	About 90g	Headset battery usage	Li-Polymer Battery 3.7V/430mAh	Charging-cradle battery use	Li-Polymer Battery 3.7V/400mAh	Speaker size	6mm	Sensitivity	108±3dB	Frequency range	20-20000Hz	Impedance	16Ω	
Bluetooth version	5.0	Transmission range	About 10m																										
Headset charging time	About 1.5h	Charging time for the charging cradle	About 2h																										
Music play time / Talk time	About 4h	Standby time (including the charging cradle)	About 300h																										
Headset weight	About 8g	Weight of the charging cradle	About 90g																										
Headset battery usage	Li-Polymer Battery 3.7V/430mAh	Charging-cradle battery use	Li-Polymer Battery 3.7V/400mAh																										
Speaker size	6mm	Sensitivity	108±3dB																										
Frequency range	20-20000Hz	Impedance	16Ω																										

Uiisii TWS60  PRODUCT DESCRIPTION 13 --	EU Declaration of Conformity Hereby, Dongguan Uiisii Electronics Co., Ltd declares that the radio equipment of type Bluetooth Uiisii TWS60 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:http://www.uiisii.com/doc/ 14 --
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 15 --	- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 16 --
\\製品情報\\  18 --	\\ペアリング方法\\ 1.イヤホンオン / オフ 電源オン ·充電ケースからイヤホンを取り出すと自動的に電源オンになります。 ·充電ケースに入れた状態で、MFBボタンを3秒長押しすると電源オフになり、赤色ランプが1秒間点灯し、Power on通知音が出ます。 ·電源オンになった状態では、MFBボタンを3秒長押しすると電源オンになり、赤色ランプと青色ランプが同時に1秒間点灯します。Power on通知音が出ます。 2.電源オフ ·充電ケースに入れると自動的に電源オフになります。 ·電源オンになった状態では、MFBボタンを3秒長押しすると電源オフになり、赤色表示ランプが1秒間点灯し、Power on通知音が出ます。 ·Bluetoothの電源をオンにし、Bluetoothデバイス（Uiisii TWS60）を検索し、接続します。接続が完了してから、英語「Connected」と表示されます。ヒント：着信時に左耳に着メロが出ます。 3.ペアリング（初めて使用する場合） ·充電ケースからイヤホンを取り出し、赤色と青色ランプが交替に点滅してから左・右イヤホンをペアリングし、10 s後にペアリングが完了してから右イヤホンのランプが消灯し、左イヤホンの赤色と青色ランプが速く点滅しスマホとペアリングします。 ·スマホのBluetoothをオンにし、Bluetoothデバイス（Uiisii TWS60）を検索し、接続します。接続が完了してから、英語「Connected」と表示されます。ヒント：着信時に左耳に着メロが出ます。 19 --
\\充電方法\\ ・充電ケースを充電する - 本商品の専用USBケーブルで充電ケースを充電します。充電時に、充電LEDランプが電量にあたる白色ランプによって点滅します。フル充電になったら、白色ランプが全て点灯します。（充電ケースはフル充電になるまで約2時間かかります） ・イヤホンを充電する - 左 / 右イヤホンを正しく充電ケースに入れて充電させ、そして左 / 右イヤホンの赤色ランプが点灯します。イヤホンはフル充電になったら赤色ランプが消灯します。イヤホンはフル充電になるまで約1.5時間かかります。フル充電になった充電ケースは、イヤホンを3回ほどフル充電することができます。 ・停電量提示 - 充電ケースは電池残量が不足になったら、充電ケースにある低電量が25%と表示され、このとき、充電ケースを充電してください。イヤホンは電池残量が不足になったら、Bluetooth表示ランプが赤色になり、停電量警告通知音が出ます。 21 --	\\重要なご注意\\ ・ ご注意：イヤホンは長時間ご使用にならない場合、電池バッテリーを保護するため、20~30日ごとにイヤホンを一回充電してください。 ・ 本製品のバッテリーを含む電子部品を自分で取り出したり、交換したりしないでください。落下、燃焼、釘さし、重圧、分解もしくは高温や液体に晒す場合、損傷や危険を起こす可能性があります。損傷の可能性のあるバッテリーと電子部品を使わないでください。 ・ 廃棄と回収について - 本製品及び内蔵バッテリーを家庭ごみとして扱ったり、火に入れたりしないでください。本製品及び内蔵バッテリーを廃棄するときは、燃焼を回避するために、現地の条例に従ってください。 ・ 医療用機器への電波干渉について - 本製品には、電磁場を発生させるマグネットなどの部品が含まれています。電磁場とマグネットによって、ペースメーカーや除細動器などの医療用機器に対して電波干渉を起こす設計があります。医療用機器から安全な距離を保ってください。お手持の医療用機器の特別情報については、担当医師または医療用機器のメーカーにお問い合わせください。万一、本製品によってペースメーカーや除細動器などの医療用機器に対して電波干渉が起こった場合、使用を中止してください。 22 --