

JCHR35H8 SERIES REMOTE SPECIFICATION

Product Introduction

●JCHR35H8 series remote has 10/15/18 buttons, the renderings as below:



JCHR35H8-0701



JCHR35H8-1701



JCHR35H8-2701

Note: JCHR35H8 series remote uses the same PCB board, only different in screen printing.

●There are three types of remote control casings. Take the 18-key one as an example



JCHR35H7



JCHR35H8



JCHR35H9

Note: JCHR35H7/JCHR35H8/JCHR35H9 are just the names of three types of shells

Product Parameters

- Wireless frequency: 2.4G Hz;
- With blue backligh, JCHR35H8 has blue backlight +one pcs tricolor light
- Remote is equipped with a toggle switch, when two control boxes are synchronized, can use remote to choose single control or synchronization.
- The remote control is equipped with a toggle switch. When the two controllers are synchronized, you can select single action or synchronization through the toggle switch.
- Use AAA 4.5V power supply
- With low power consumption, standby power consumption $\leq 10\mu A$
- The remote control distance is ≤ 5 meters
- Button form: silicone button

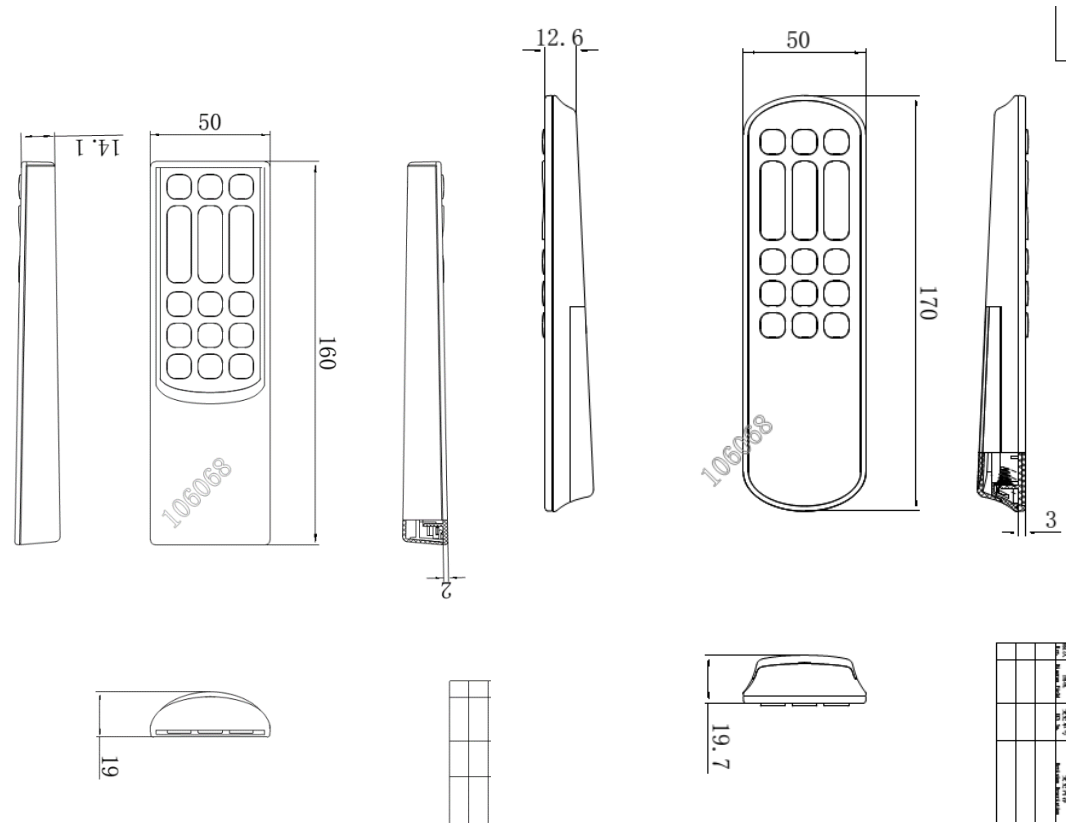
Optional

- ☒ Color:black
- ☒ Wireless frequency: 2404 MHz to 2479 MHz

Usage

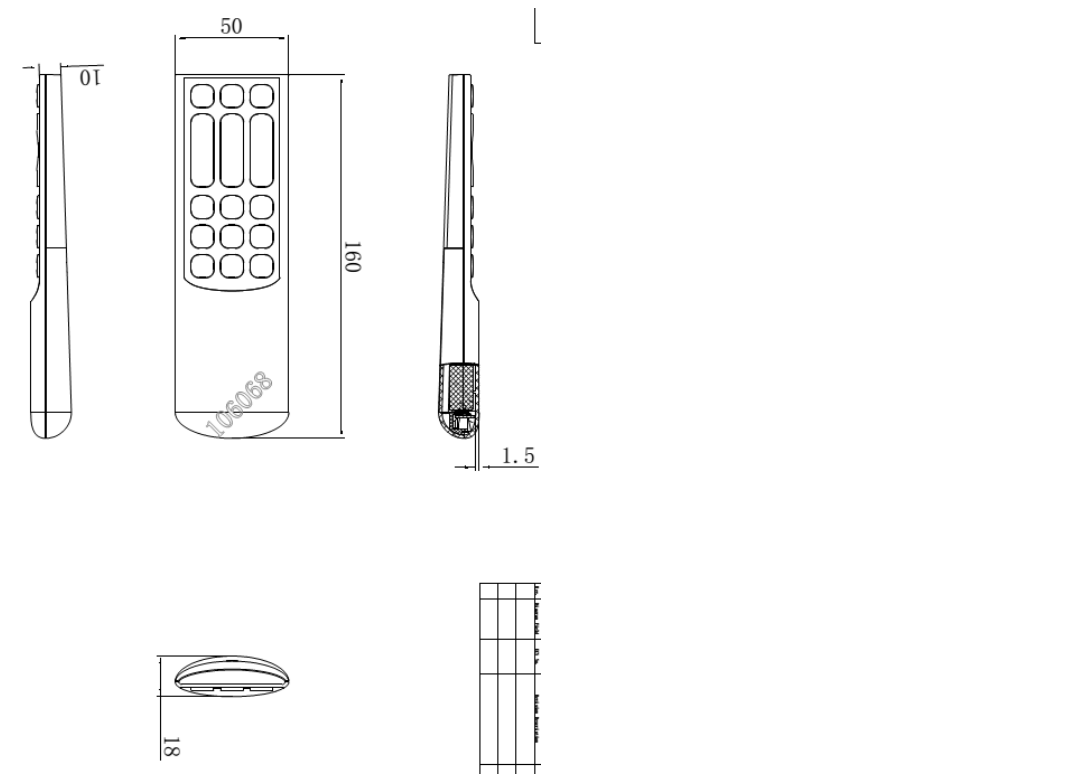
- Matching control box: home appliance or medical control box;
- Indoor Use
- Storage and transportation temperature: $-25^{\circ}C \sim 70^{\circ}C$

Dimensions




JCHR35H7


JCHR35H8



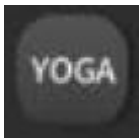
JCHR35H9

Button function

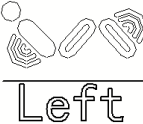
Button icon	Button definition	Button No.	Remark
	1、 M1 Head Up (In standard system); 2、 Left and right back up together (The double-back bed system has two back actuators on the left and right)	1、 0x01(In standard system); 2、 0x32 (In the double-back bed system)	
	1、 M1 Head down(In standard system); 2、 Left and right back down together (The double-back bed system has two back actuators on the left and right)	1、 0x04(In standard system); 2、 0x33 (In the double-back bed system)	
	1、 M2 Foot up(In standard system); 2、 Left and right foot up together (The four- actuators double-back bed system has two foot actuators on the left and right)	1、 0x02 (In standard system); 2、 0x66 (In the four- actuators double-back bed system)	
	1、 M2 Foot down(In standard system); 2、 Left and right foot down together (The four- actuators double-back bed system has two foot actuators on the left and right)	1、 0x05 (In standard system); 2、 0x67 (In the four- actuators double-back bed system)	
	M3 Neck up	0x14	

	M3 Neck down	0x15	
  or 	M4 Lumbar up	0x16	
  or 	M4 Lumbar down	0x17	
 	M1 M2 Head and foot up;	0x34	
 	M1 M2 Head and foot down;	0x35	
 Left	(The double-back bed system has two back actuators on the left and right) Left head up	0x01,	
 Left	(The double-back bed system has two back actuators on the left and right)	0x04	

	Left head down		
	(The double-back bed system has two back actuators on the left and right) Right head up	0x30	
	(The double-back bed system has two back actuators on the left and right) Right head down	0x31	
	(The four- actuators double-back bed system has two foot actuators on the left and right) Left foot up	0x02	
	(The four- actuators double-back bed system has two foot actuators on the left and right) Left foot down;	0x05	
	(The four- actuators double-back bed system has two foot actuators on the left and right) Right foot up	0x64	
	(The four- actuators double-back bed system has two foot actuators on the left and right) Right foot down	0x65	

 	Flat	0x08	
 	Zero Gravity	0x07	
 	Yoga	0x3B	
 	Anti Snore	0x09	
	Under-Bed Lighting	0x13	
	TV Preset	0x18	

			
M1 or  or 	Memory Position 1	0x0a	
M2 or 	Memory Position 2	0x0c	
 M3	Memory Position 3	0x39,	
	Foot Massage	0x0f/0x12	
MASSAGE	Vibration motor mode change switch	0x11	

	Back Massage	0x0d/0x10	
	Left back and foot massage	0x0D/0x1D,	
	Right back and foot massage	0x22/0x23	
	Vibration motor mode switch	0x11	
	Favorite position	0x37	

Code Matching Function

Match the remote with the control box so that the remote can control the corresponding control box.

Method:

After the control box plugged in AC, enter the code matching mode, simultaneously press the "M1 Up + M2 Up" buttons on the remote (the same as below)



,When hearing the control box "tick" and the backlight of the remote flashes twice, it means that the code matching is successful.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED RSS Warning/ISED RF Exposure Statement

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. Ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf