



Walkie talkie Manual

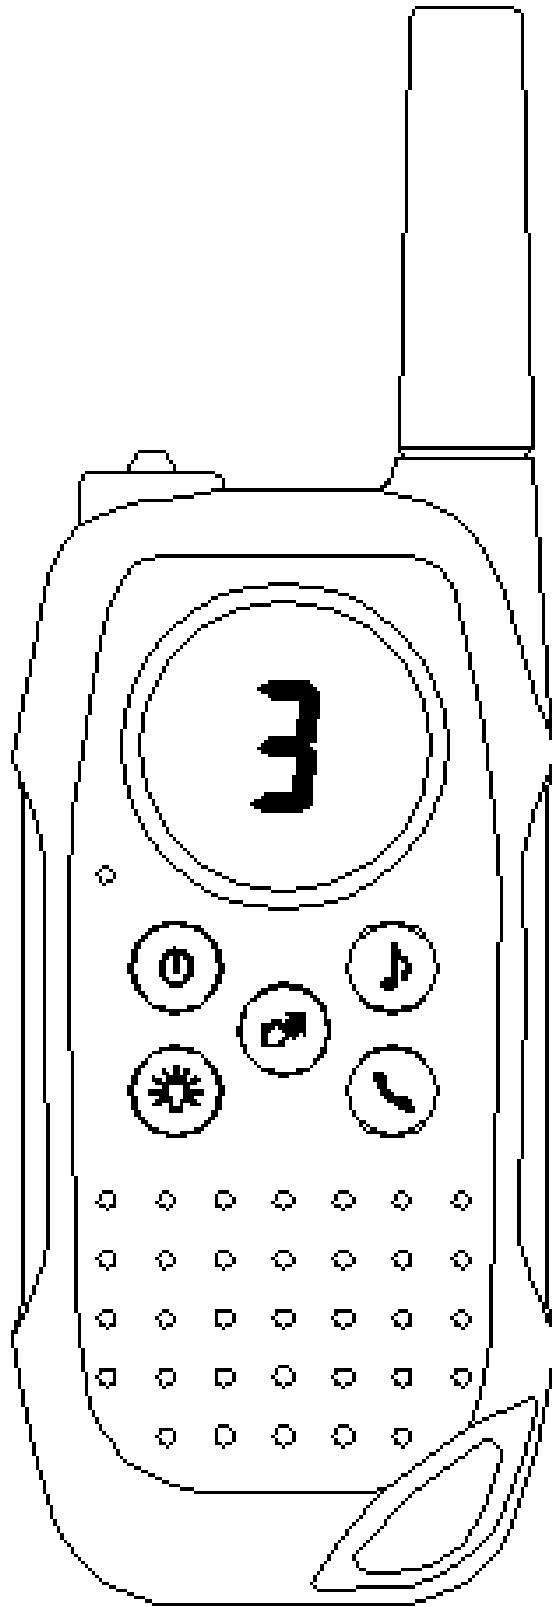

Please read this manual carefully before you use it.

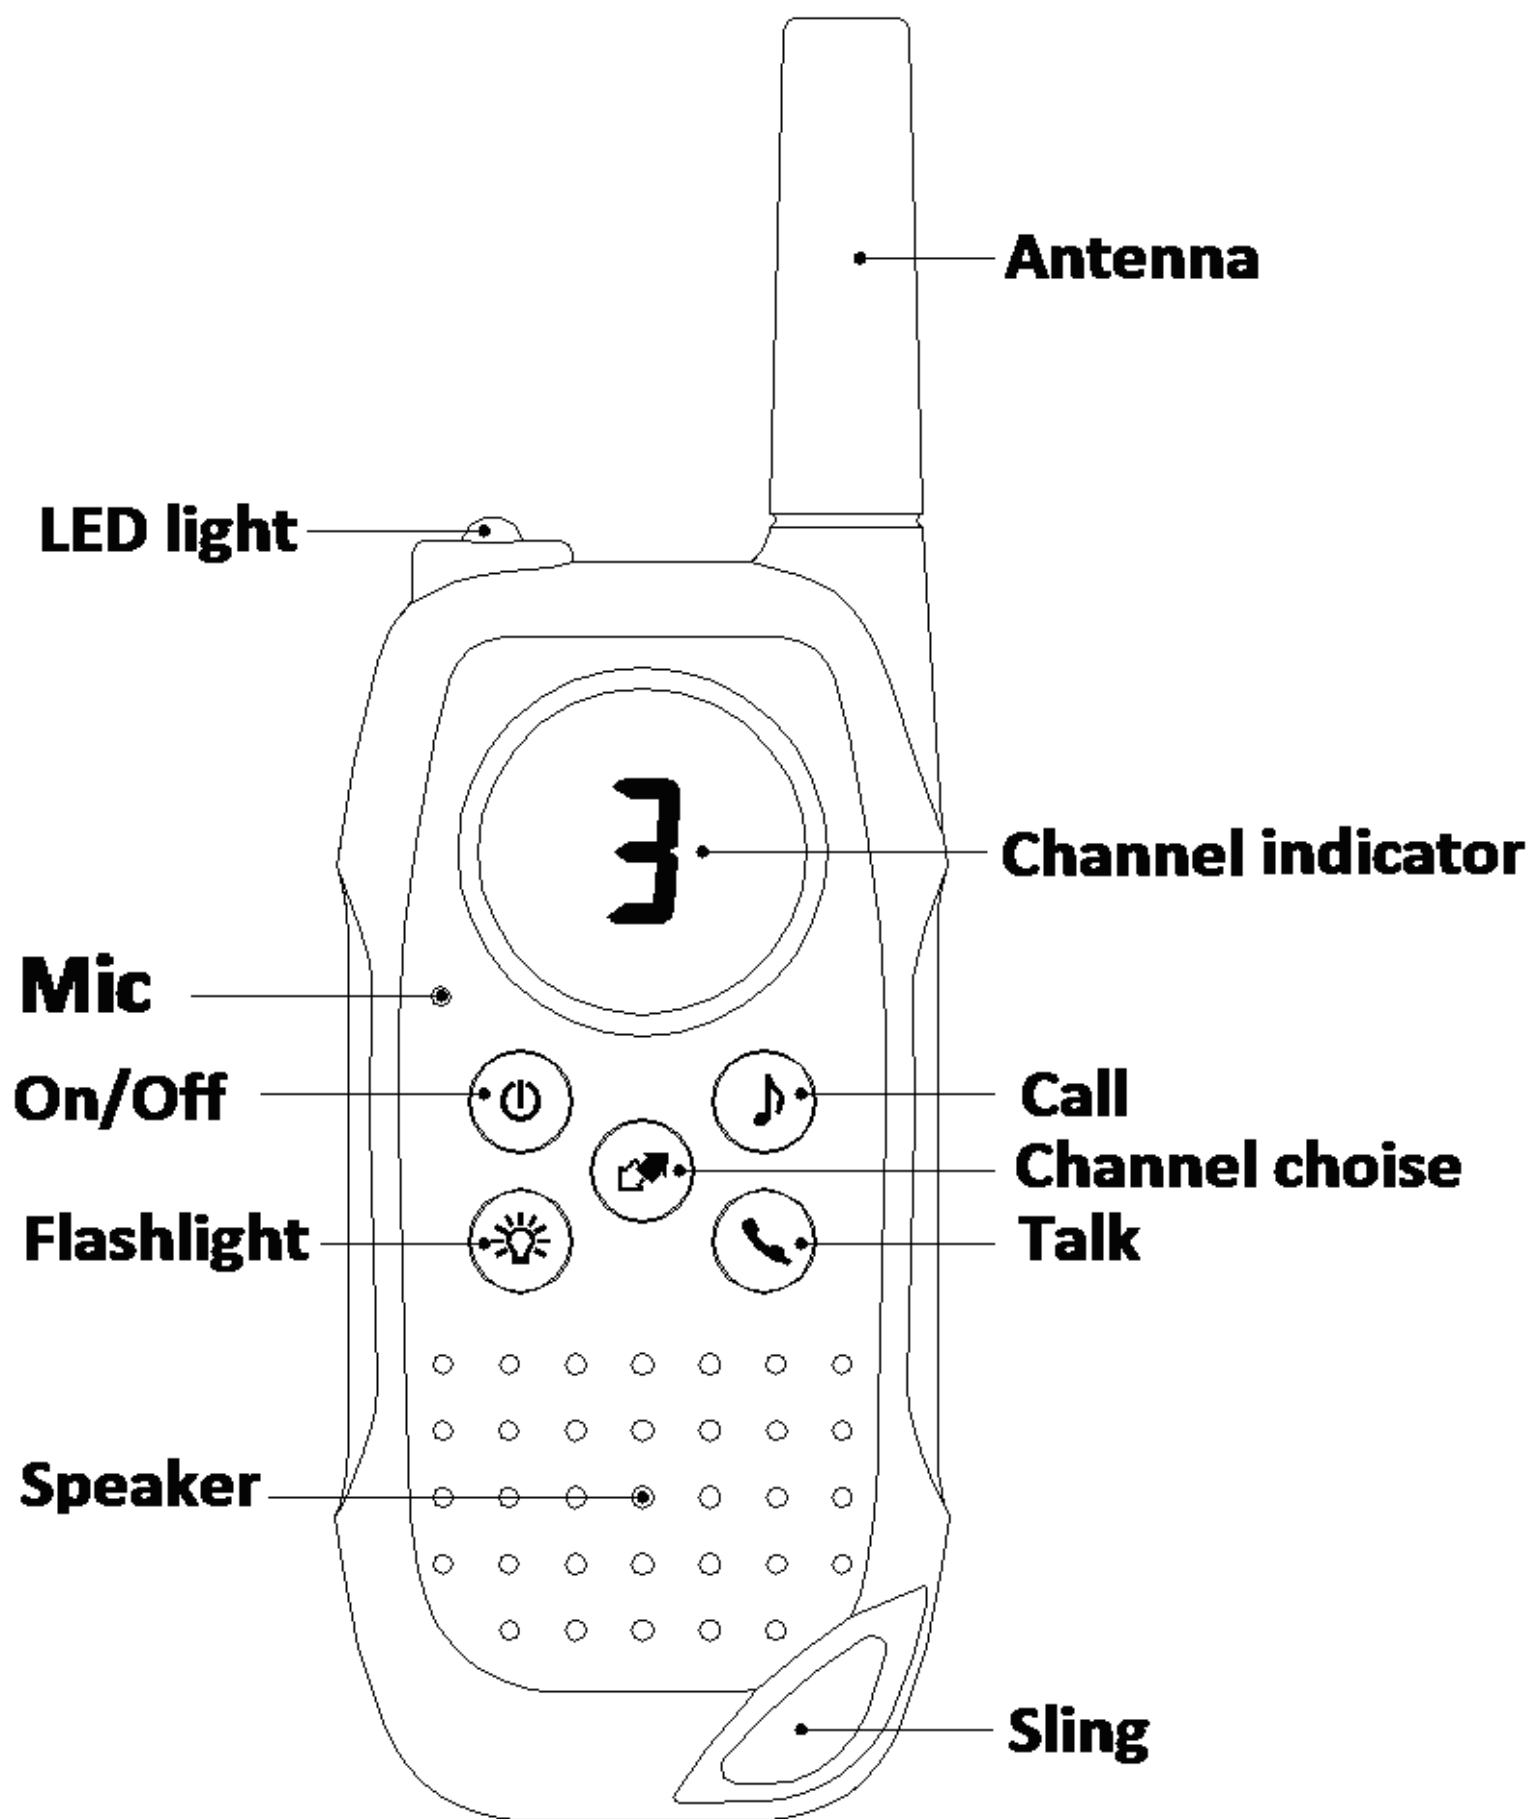

Functions:

- 1) 0.5W output
- 2) 3 Channels
- 3) Call tone
- 4) Flashlight

Explanation for functional key

- 1) Battery: 3 pieces AAA batteries for this walkie-talkie.
- 2) Belt-clip: There is a belt-clip for easy moving with your body.
- 3) Call button (): transmit your information to other walkie-talkie sets.
- 4) Display: LED show current channel numbers visually.
- 5) On/off button(): turn on or turn off by pressing this button long.
- 6) Lamp button(): To tune on the lamp by pressing this button long.
- 7) Channel button (): To change the current signal channel by pressing this button long.

1). Belt-clip installation

Push the belt-clip into back slot of walkie-talkie, if want to take off the belt-clip, just need open the axis lock and push the belt-clip inversely.

2) Battery installation

Firstly take off the belt-clip, then open the battery compartment door, and put in 3 pieces AAA batteries, make sure + and - direction.

Note: if don't use this machine, please take off batteries.

Operation

Power on or off:

After installed batteries, walkie-talkie is on ready to work, it will beep and the LED display shows the current signal channel number. As auto squelch of walkie-talkie, it will not sound before received

the call information. Press  button long till LED display blanked, again press it long, the walkie-talkie will rework.

Transmit information:

While you pressing long the Talk button , than talk 3~4cm far from walkie-talkie, if your voice is so louder or the distance is so close to walkie-talkie, the signal will loss quality or distort on opponent sets.

Release the Talk button in order to listen to opponent.

Note: You have to talk in the same signal channel whatever how many people communicate.

Flashlight:

The flashlight will be helpful for you in dark conditions, press the flashlight butto , it will work.

Change signal channel:

Press  button long to change signal channel.

Call other sets:

Press call button  to call other walkie-talkie in some signal channel, all working walkietalkies in effective distance and will receive your call ringtone

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device complies with RF specifications when the device used at 25 mm from your front face and 0 mm from your body. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.