



SMART GLASSES

SUNGLASSES WITH
OPEN-EAR AUDIO



USER GUIDE



INTRODUCTION

Smart audio meets everyday style with these AI-powered Bluetooth glasses. Take calls, stream music, access your voice assistant, and translate conversations in real time, all from this lightweight pair of smart glasses built for life on the move.


FEATURES

- Open-ear Bluetooth audio
- AI-powered translation support
- Lightweight and comfortable frame
- Built-in microphone for hands-free calling
- Voice assistant compatibility
- USB rechargeable battery

WHAT’S INCLUDED

- SoundPlay Smart Glasses
- USB charging cable
- User guide

PRODUCT DIAGRAM

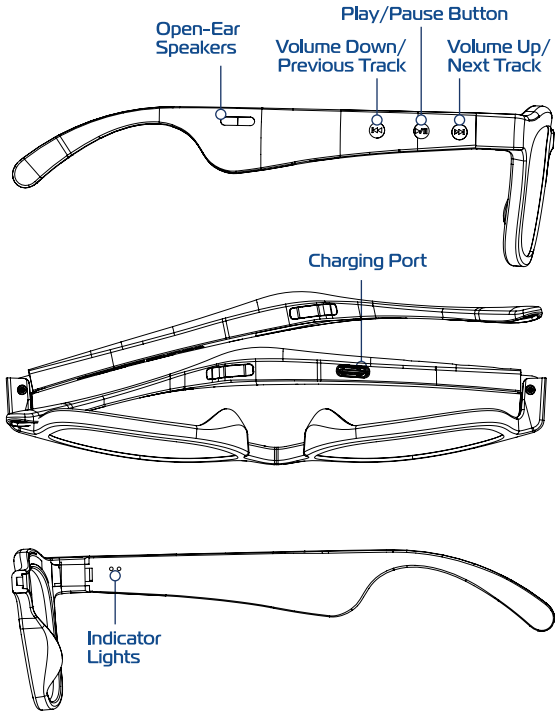

CHARGING THE GLASSES

- Plug one end of the included charging cable into the USB-C port on the glasses, and plug the other end into a USB power source.
- It takes up to 50 minutes to fully charge the glasses from a completely depleted battery.
- The red indicator light on the glasses will turn on when charging begins and turn off when fully charged.

Note: To maintain the battery capacity of the SoundPlay Smart Glasses, fully charge and discharge the unit at least once every 3 months, even if it is not being used regularly.

DOWNLOADING THE AI TRANSLATION APP

- Scan the QR code below to download the Verse SoundPlay app via Google Play or the Apple App Store.



- Once downloaded, follow the instructions to connect your device to Bluetooth.
- You will be prompted to create an account. Follow the instructions to finalize your account information.
- A one-time activation code will be sent to your email to bind the glasses to your account.

CONNECTING TO BLUETOOTH

1. Press and hold the Play/Pause Button for 5 seconds to turn the glasses on.
2. The glasses will automatically enter Bluetooth pairing mode.
3. Open the Bluetooth pairing list on your device and select “SoundPlay Glasses.”
4. You will hear a voice prompt say, “Connected.”
5. Your glasses should now be paired with your mobile device and ready to use.

Note: After the first successful pairing, the glasses will automatically reconnect to your device when powered on and when Bluetooth is enabled.

USING THE GLASSES

- **PLAY/PAUSE:** Press the Play/Pause Button once to play or pause music.
- **NEXT TRACK:** Press the Next Track Button once to skip to the next track.
- **PREVIOUS TRACK:** Press the Previous Track Button once to return to the previous track.
- **VOLUME UP:** Press and hold the Next Track Button to increase the volume.
- **VOLUME DOWN:** Press and hold the Previous Track Button to decrease the volume.

BATTERY DISPOSAL

This product contains a rechargeable lithium-ion battery. Do not dispose of this product with household waste. Dispose of it at an authorized recycling facility in accordance with local regulations.


CUSTOMER SUPPORT

If you have any questions about the SoundPlay® Smart Glasses, we are here to help. Call or email us, and an experienced customer service representative will be happy to assist you:
1-855-GO-TZUMI or **support@tzumi.com**.

SoundPlay® Smart Glasses. Distributed by Tzumi Electronics LLC, New York, NY 10016. ©Copyright 2026. All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.

- **ANSWER/END CALL:** Press the Play/Pause Button once to answer or end an incoming call.
- **REJECT CALL:** Press and hold the Play/Pause Button for 2 seconds to reject an incoming call.
- **VOICE ASSISTANT:** Press and hold the Play/Pause Button for 2 seconds to activate your smartphone’s voice assistant.
- **RESET:** Press the Play/Pause button 4 times.

APP HOMEPAGE

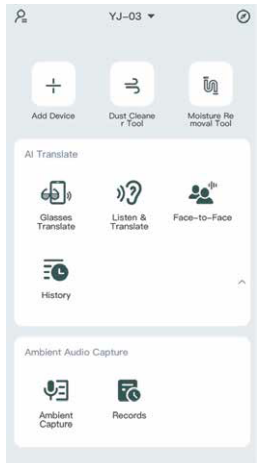

USING THE APP

AI TRANSLATE

Use the Glasses Translate, Listen & Translate, and Face-to-Face modes to translate conversations using glasses and a smartphone.

HISTORY

Access the history of your translated conversations here.

AMBIENT AUDIO CAPTURE

Record and translate meetings or conversations into your preferred language.

RECORDS

Access records of your translated meetings or conversations here.

PRODUCT SPECIFICATIONS

- Input: 5V/1A
- Usage Time: 5 hours
- Charging Time: Up to 50 minutes
- Battery Capacity: 100 mAh
- Size: 6.17 x 1.92 in.
- Weight: 0.075 lb.

CARE & MAINTENANCE

- Gently wipe the glasses with a soft, dry cloth periodically to prevent dust buildup.

WARNINGS & SAFETY INFORMATION

Please read the following warnings carefully before using this product:

- Do not use this unit for anything other than its intended purpose.
- Keep the unit away from heat sources, direct sunlight, humidity, and liquids.
- Do not expose the unit to extremely high or low temperatures, as doing so may damage its battery.
- Avoid listening to music at high volume levels for extended periods of time.
- Translation and recording features may require internet access and account registration.
- Data collection and usage are subject to the applicable app privacy policy.
- Do not attempt to disassemble or modify this product. Repairs should be performed only by a qualified technician.
- Keep this product out of the reach of children. This product is not a toy.

FCC WARNING

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, as set forth in Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

RF warning for portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.