

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FOR Carehome:
“This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.”

1 Packing list of the Carehome

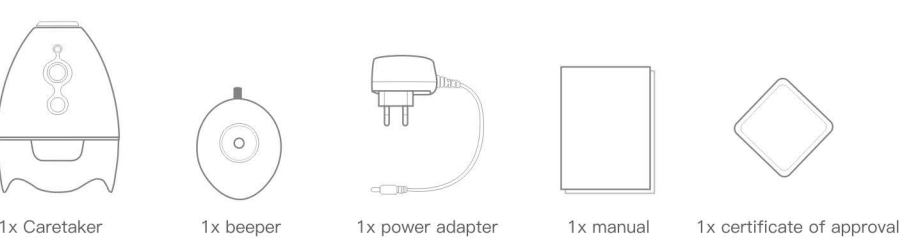

2 Packing list introduction Carehome

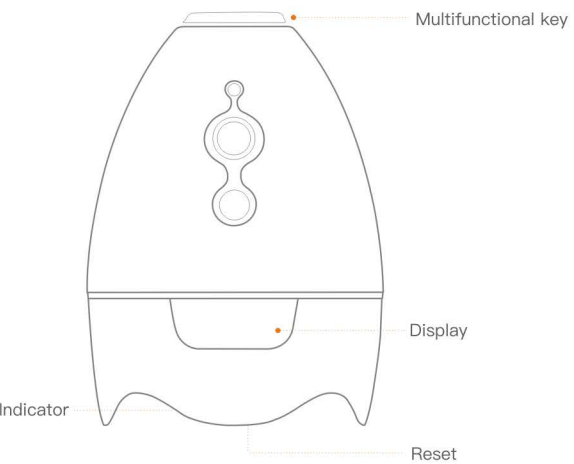

Multifunctional key

- Beeping, gently press the "multifunctional key", and the carehome launches a family call to the app;
- Leaving a message, long press the "multifunctional key" and it starts recording an audio after the "beep" and send to the chat group;
- Answer incoming call, gently press the "multifunctional key" to answer an incoming call when the device plays the tone of incoming calls;
- Playing a message, when the device is playing the tone of new message, gently press the "multifunctional key" to play the message;
- Adjusting speaker volume; rotate the "multifunctional key" clockwise to turn up the volume, and rotate it counterclockwise to turn it down. Rotate it counterclockwise to the end to mute the speaker.

Reset

System setting, press "Reset" for about 1s and the display shows "Waiting for soundwave" after the "beep".

Display


Showing the working situation, time and date.

Indicator

Different colors and situations of the indicator imply different operations:

Color	Situation	Description
Yellow	Constantly on Flicker	Powered on and disconnected WiFi is connecting
Green	Constantly on Flicker	The device is online watching video
Purple	Flicker	You have a message or unanswered call
Red	Constantly on	Hardware failure

Beeper

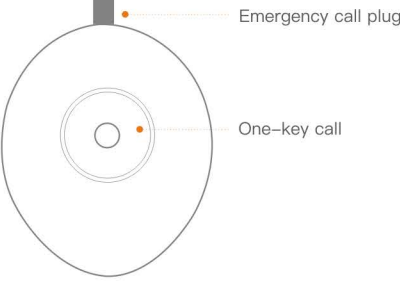

Emergency call plug

Unplug the "emergency call plug" of the beeper, an ikinloop auto voice call will be made to the designated emergency contact number.

One-key call

Press the "one-key call" of the beeper, and the carehome launches remote audio or video communication to the app.

Working environment

Working temperature: -20°C~70°C	working humidity: 10%~95%	air pressure range: 860hPa~1060hPa
Working voltage: DC 5V	rated current: 2A	network environment: WIFI


3 How to use

Step 1: Download mobile phone app

Look for Carehome in Apple App Store or Google Play™, and download the latest version of Carehome; or scan the QR code to download.



Step 2: Sign-in

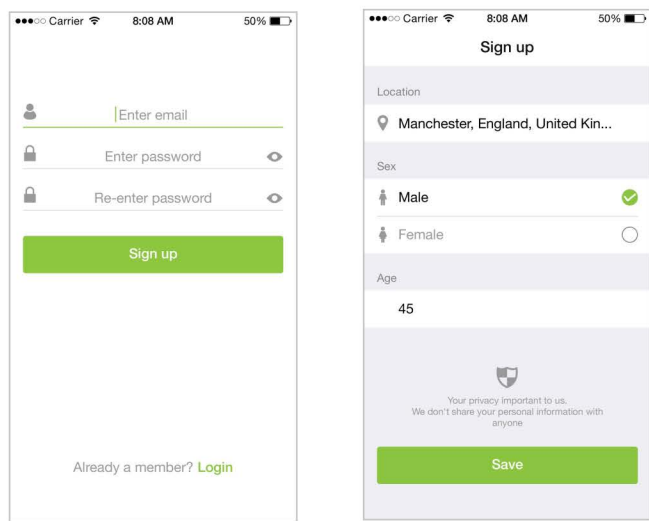

Finish your sign-in.


Step 3: Connect the device to power

Plug the adapter into the power socket and the indicator appears yellow, and you may hear a voice notice: "Thank you for using Carehome". Then you hear a "beep", after which the display shows "Waiting for soundwave", indicating that the device is ready for setting.




Step 4: Add the Carehome

Click "Add Carehome", and add the device by following the instructions of the app.

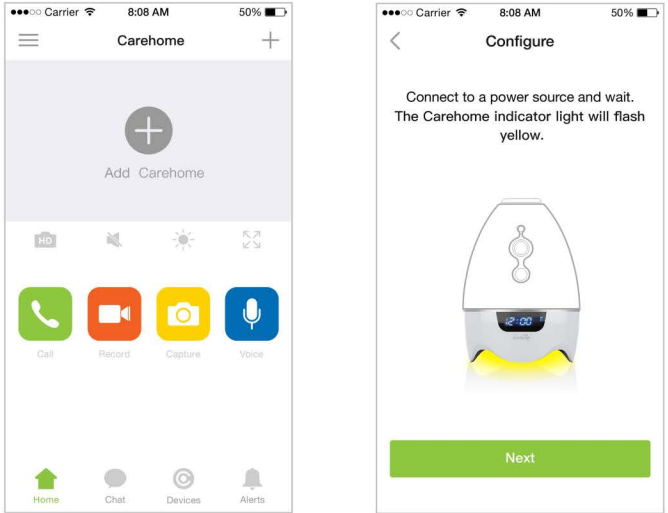


Step 5: Add the Beeper

Click "Add accessory". And add the accessory by following instructions of the app.

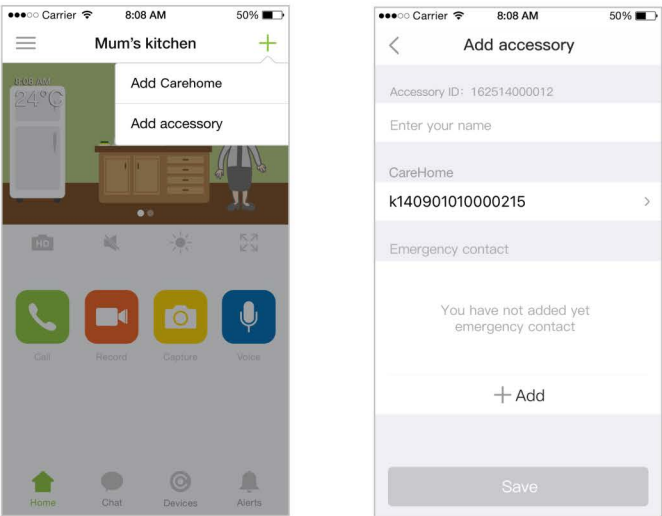

Emergency call

- ① Enter a contact number in the app in case of emergency;
- ② Unplug the "emergency call plug" of the beeper;
- ③ The designated contact number will receive an auto voice call from ikinloop.

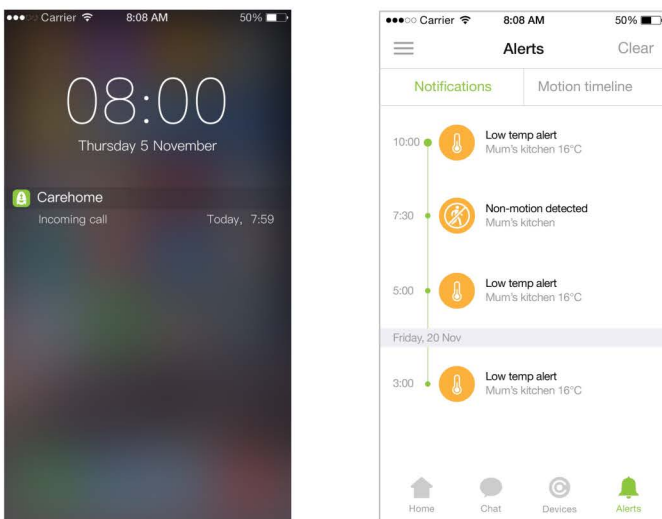

Family Call

Carehome calling


Gently press the "multifunctional key" of the Carehome and it launches a Family Call request to the app where the account is being managed;

The mobile app receives the request, click "Receive" and the app opens for both sides to have a Family Call.

Tips: You may also press the "One-key call" of the beeper to call!


Mobile app calling

Open Carehome, click "Call" and the app launches a Family Call request to the Carehome; The Carehome receives the request, the indicator becomes purple and flickers; gently press "Call" to connect the call for a Family Call.

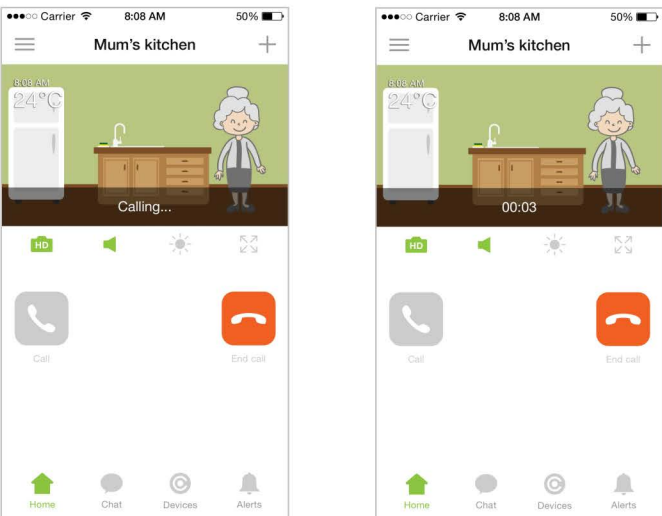

No-man warning in the visible area

Set up a time range in the "No-man warning in the visible area" section in the app, and if the carehome doesn't detect any human movement within an hour, a "no-man warning in the visible area" will be reported to the app.

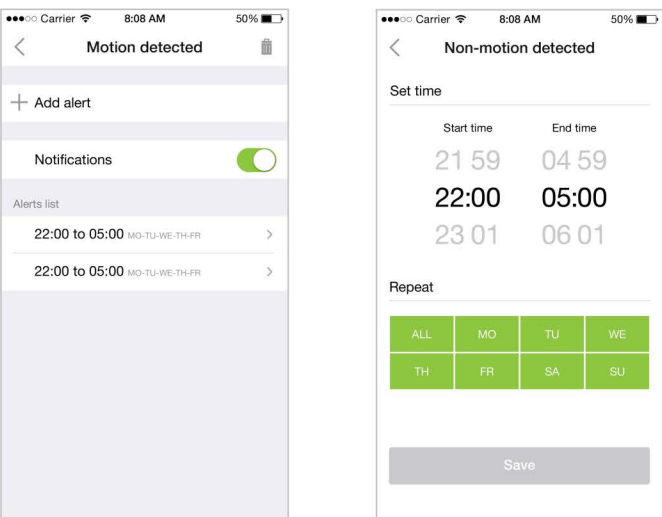

4 Maintenance

One year free-of-charge warranty since the date of purchase; any non-artificial product quality problem that takes place within 30 days after the purchase, the user may request a new product from the manufacturer to replace the previous one; any non-artificial product quality problem that takes place within 7 days after the purchase, the user may return the product.

Damages and failures resulted from the following reasons are excluded in the warranty of the company, including:

- Unauthorized disassembly
- Fall into water or fire
- Damage due to collision
- Improper use of the product

Please fill out the warranty card when applying for warranty

Services beyond the warranty will charge fees according to relevant rules

Product warranty card	
Date of purchase	User's name
Seller	Contact number
Place of purchase	User's address
Seller's seal	



Shenzhen Ikinloop Technology Co., Ltd

400-616-6146

www.ikinloop.com

Unit B 8th Floor, Building C of Tongfang Information Port, #11 Langshan Road,
Hi-Tech Park North, Xili Neighborhood, Nanshan District, Shenzhen.



carehome
Manual