



IMPORTANT



PLEASE DO NOT RETURN TO STORE

If You're Having Trouble, We're Here to Help!



Call us 24/7 at 1-855-292-4087

E-mail us at alsupport@sakar.com or visit us
at alteclansing.com

REGISTER YOUR PRODUCT

**To receive news, exclusive deals, OTA or
firmware updates, warranty information and
more please register your product at**


alteclansingsupport.com





WELCOME 😊

Thank you for purchasing an Altec Lansing product. Download our App to unlock all the features our products have to offer!

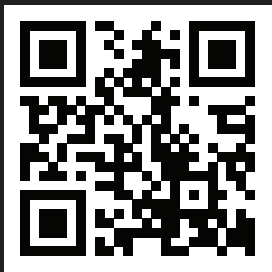



follow us
@alteclansingofficial



follow us
@alteclansing



follow us
@alteclansingofficial

12 Month Limited Warranty

All Altec Lansing products come with
12 month limited warranty
from the date of its original purchase


24 Hour Customer Support

We love our customers, and we care
about your experience with Altec
Lansing. If you need
assistance, please call us at
1.855.292.4087
or e-mail **alsupport@sakar.com**

www.alteclansing.com



HydraAviator Smart Glasses

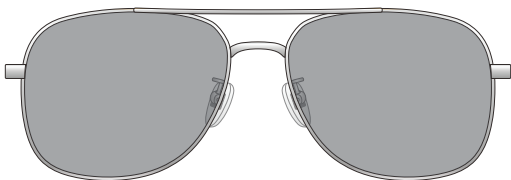



1.

IN THE BOX

- 1 HydraAviator Smart Glasses
- 1 Charging Cable
- 1 Quick Start Guide

2.

A CLOSER LOOK

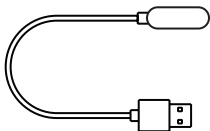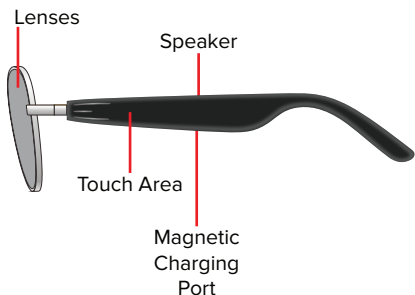


Magnetic
Charging Cable

3.

CHARGING

Connect one end of the magnetic charging cable to one of two magnetic charging ports on your glasses. When connected properly the cable snaps securely in place.



Insert the other end into a suitable USB charging adapter.

While the glasses are charging, an indicator light will illuminate red.

When charging is complete, an indicator light will turn off.

NOTE: Each side of the glasses has its own magnetic charging port. Fully charge each side for full functionality.



CAUTION

Battery Warning

-This device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.

-Do not dispose of in fire or expose to excessive heat.

-Do not crush, puncture, incinerate, or short circuit external contacts.

-Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacture for further information.

4.

BLUETOOTH PAIRING

Press and hold the Touch Area on either the left or right side for approximately 3 to 4 seconds to power ON/OFF. Once powered on, an indicator light will show the pairing status.



Bluetooth Connection:

Go to the Bluetooth page in the settings app on your phone. Make sure Bluetooth is ON before connecting to the available device "AL HYDRA AVIATOR".



Once paired successfully, the indicator light will turn OFF.

****Note:** If the glasses have been previously paired to a nearby device they will automatically re-connect to it.

Pair a New Device

Turn Bluetooth OFF on your phone/device. The glasses will go back into pairing mode.

5.

CONTROLS

AUDIO CONTROLS

Press either



**Play/
Pause**



Press & Hold either
for ~3-4 seconds



**Power
ON/OFF**



Press 3x



**Decrease
Volume**



Press 2x



**Previous
Track**



Press 3x



**Increase
Volume**



Press 2x



**Next
Track**



CALL CONTROLS

Press either



**Answer
Call**



Press & Hold either
for ~3 seconds



**Reject
Incoming
Call**



Press either



End Call



5.

CONTROLS (CONT.)

Other Functions

To activate the phone's Voice Assistant, press and hold either Touch Area for approximately two seconds.

Press & Hold either
for ~2 seconds



*To use a phone's voice assistant, you must have a phone that is compatible.

*Your wireless glasses will not work with your phone's voice assistant if the assistant is not first enabled within the settings on the phone. For more information, see your phone's user manual.

*You must be within Bluetooth® range to use your phone's voice assistant via your wireless glasses.

6.

INSTALLING THE APP

Translation

The device comes with an AI translator function. To use, download the app by scanning the QR code below with a smartphone device or search for “TransKit” on the Apple App Store or Google Play Store. Before using the translator app, ensure the glasses are paired to your mobile device using the steps described in the Bluetooth Pairing page of this manual.




7.

BINDING GLASSES

With the app installed, connect your phone to the glasses through Bluetooth, following the steps in the “Bluetooth Pairing” section of this manual. Once connected, open the app and enter the “Mine” page. Select “Bind device”.

NOTE: Screenshots displayed in this guide of the TransKit software application may differ from those currently featured in your app, as frequent updates and improvements are being made to the software.

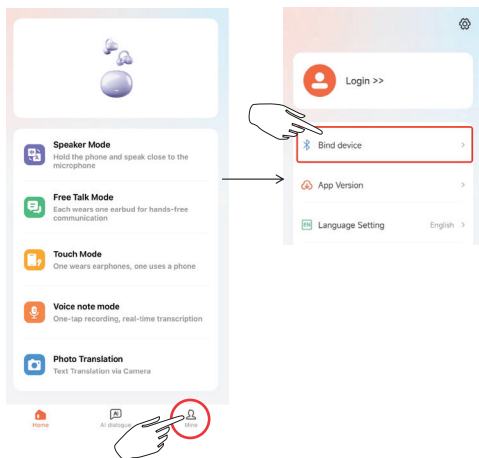

7.


BINDING GLASSES (CONT.)

Scan the QR code below or manually enter the authorization code of the glasses.

NOTE: Some models may have only a QR code or authorization code.



WARNING: SOME QR CODES MAY BE ONE TIME USE. Depending on your model, once the QR code is paired with an account on the app, it can not be used again. Ensure your account is properly set once the QR code is used.

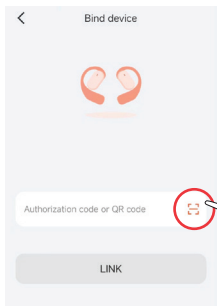

Select to scan the QR code. To manually input the authorization code, type it into the text box.

Press Link after manually inputting the code.

8.



APP FEATURES

The app offers multiple features. Depending on your device and product model, some features may be restricted or unavailable.

AI Chat Mode:

Select “Click and Speak” to speak to the app’s AI mode, or select the keyboard icon to type.

NOTE: Make sure the language setting is properly set before using.

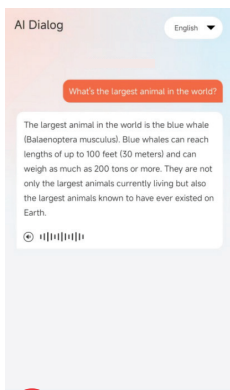

Enable Typing

Enable Voice


8.

APP FEATURES (CONT.)

Speaker Mode:

In speaker mode, your mobile device can be used as a speaker to translate input text or audio. To delete history, select the button in the top-right corner of the screen.

NOTE: Make sure the language setting is properly set before using.

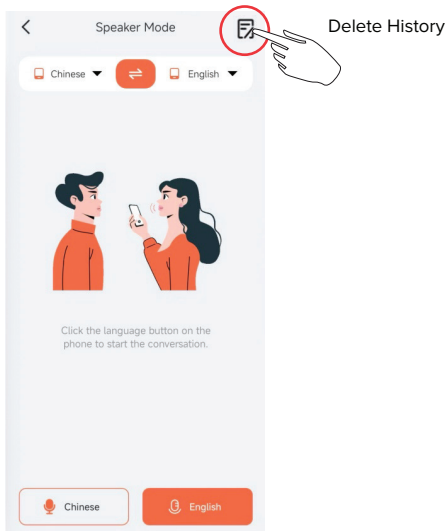

8.

APP FEATURES (CONT.)


Touch Mode:

In Touch Mode, one person wears the glasses, and the other holds the mobile phone with the app.

If not already on, power ON the glasses. Press the power button to activate the glasses while in touch mode. Speak aloud, and the phone will translate to the set language.

NOTE: Make sure the language setting is properly set before using.

For the person holding the phone, press the language button on the bottom of the screen and speak aloud. The headphones will play the translation.

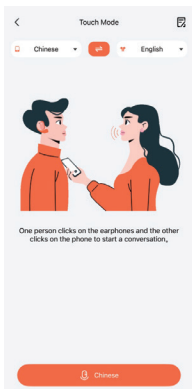

Voice Note Mode:

Use to record audio and automatically translate and save the recording. To start recording, press the recording button.



**Recording
Button**

Photo Translation Mode:

Use to translate text in a photo. You can take a new photo or select one from your gallery when enabled in app permissions.

SAFETY PRECAUTIONS



When using your glasses, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR GLASSES.
2. Do not use the product near water. Do not put on wet surfaces.
3. Only clean using a clean cloth.
4. Do not allow children or the infirm to use this product. This product contains small pieces that can be a choking hazard. Suitable adult supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

Maintenance and Care

- Use a soft cloth or paper towel to clean your product. Never use any harsh chemicals or detergents for cleaning. Make sure your product is dry before charging.
- When your device is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your product. Connect and disconnect cables as carefully as possible.
- Never expose your product to high temperatures or the extreme cold.
- Please recycle or dispose of your device properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your device for further information.

10.

SPECIFICATIONS

Battery Capacity: 55mAh

Speaker: 10M

Charging Time: Approximately 1 Hour

Play Time: Approximately up to 6 Hours*

*Applicable at 50% of maximum volume. Results will be lower when the volume is higher.

11.

FCC STATEMENT

FCC Statement

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in the portable exposure condition without restriction.

12.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-855-292-4087 or visit our website at www.alteclansing.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

JUST LISTEN.

CONTACT US
855-292-4087
alteclansing.com

Altec Lansing
Edison, NJ 08817

© 2026 AL Infinity, LLC. All rights reserved. ALTEC LANSING, HORN design, and other related logos are registered trademarks of AL Infinity and used under license.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by AL Infinity, LLC. is under license.