


65*90MM 128克铜板纸 风琴折

ExtrêLife

User Manual

Wireless charger mouse pad

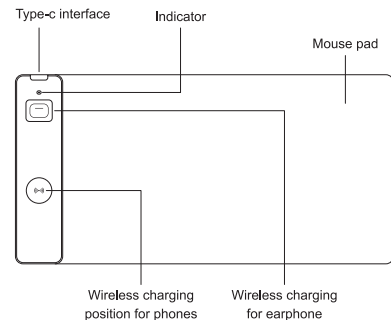


Parameter specification

Model	HD76
Input voltage/current	DC 5V/3A, 9V/3A
Mobile phone output	15W Max
Earphone output	5W Max
Efficiency	≥75%
Transmission Distance	≤5mm
Product size	L800xW400xH10mm


Installation

1. Connect the type c cable to the power adapter(NOT INCLUDED) and wireless charging type-c port.
2. Plug the power adapter into the socket.
3. Blue light is wireless charging indicator light.
4. Put the device which supports wireless charging function on the wireless charging position, the blue light will change to green, which indicates the phone has started charging. When the phone is removed, the light will turn to blue, which indicates the wireless charging pad is in standby mode.
5. Please note that magnetic wireless charging function is only for iPhone 12 series or later or other phones with magnetic cases.

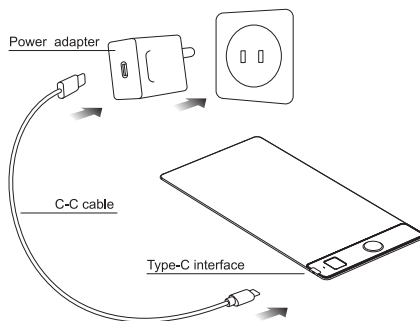

Indicating status and protection function

1. LED blue light: Standby
2. LED green light: Charging
3. LED blue light flashing: Mobile phone location in deviation or over-temperature protection or trigger FOD

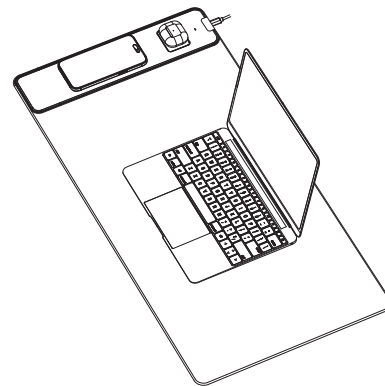

Important notes

1. To keep high charging efficiency, please remove the protective case (except magnetic case) when charging. We suggest you use a 3A adapter for the best result.
2. Do not disassemble the charger or throw it into fire and water when power on, to avoid causing a short circuit leakage.
3. Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
4. Do not place stuff with magnetic strip or chip (ID card, bank cards, etc) on wireless charging pad to avoid magnetic failure.
5. Please keep the distance at least 20cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
6. Please take care of the children and ensure they won't play the wireless charger as a toy, to avoid unnecessary accidents.

Warranty

There is one year guarantee for this product unless anthropogenic factor.

Packing list

Wireless charger mouse pad
C-C cable
User manual

* The involved images are sketch maps, the final product as per the material subjects.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance from 20cm the radiator your body.

Use

- only the supplied antenna.