


65*90MM 128克铜板纸 风琴折

User Manual

Wireless charger mouse pad

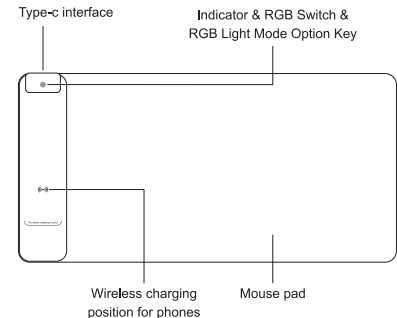


Parameter specification


Model	HD87
Input	DC 5V/3A, 9V/2.22A, 12V/2A
output	5W/7.5W/10W/15W
Efficiency	≥75%
Transmission Distance	≤5mm
Product size	L800xW401xH9mm

Installation

1. Connect the type c cable to the power adapter(NOT INCLUDED) and wireless charging type-c port.
2. Plug the power adapter into the socket.
3. Blue Light is wireless charging indicator light.
4. Put the device that supports the wireless charging function on the charging area center. The indicator light changes to green from blue if it starts to charge. The light will be blue if you remove the mobile phone, meaning the wireless charging pad enters a standby mode.

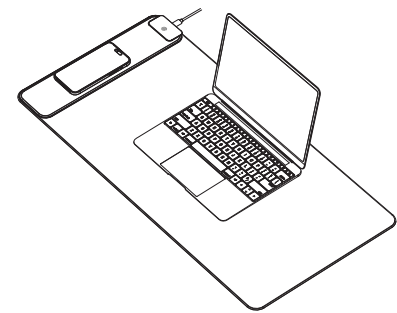

Indicator & RGB Switch & RGB Light Mode Option Key

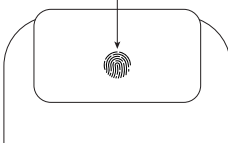

Power On/Off RGB Light: press to turn on, long press to turn off.

Memory Function: The second time you turn it on, it will be in the mode selected during the first use.

- There are four Light Modes, you can double-click quickly to switch between modes.**
- Mode 1:** Single Color Static Mode, Choose from 11 colors in order. Each click changes one color.
- Mode 2:** Single Color Breathing Mode, Choose from 11 colors in order. Each click changes one color.
- Mode 3:** Dynamic Rainbow Mode, Multiple colors flow dynamically.
- Mode 4:** Faster Rainbow Mode, Faster than Dynamic Rainbow Mode.

Indicating status and protection function

- LED blue light: Standby
- LED green light: Charging
- LED blue light flashing: Mobile phone location in deviation or over temperature protection or trigger FOD

Important notes

1. To keep high charging efficiency, please remove the protective case when charging. We suggest you use a 3A adapter for the best result.
2. Do not disassemble the charger or throw it into fire and water when power on, to avoid causing a short circuit leakage.
3. Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
4. Do not place stuff with magnetic strip or chip (ID card, bank cards, etc) on wireless charging pad to avoid magnetic failure.
5. Please keep the distance at least 20cm between implantable medical devices (pacemakers, implantable cochlear,etc.) and the wireless charger, to avoid potential interference with the medical device.
6. Please take care of the children and ensure they won't play the wireless charger as a toy, to avoid unnecessary accidents.

Warranty

There is one year guarantee for this product unless anthropogenic factor.

Packing list

- Wireless charger mouse pad
- C-C cable
- User manual

* The involved images are sketch maps , the final product as per the material subjects.

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.