


Multi-functional Makeup Mirror

Model: SY-W02254

I、Function key definitions:

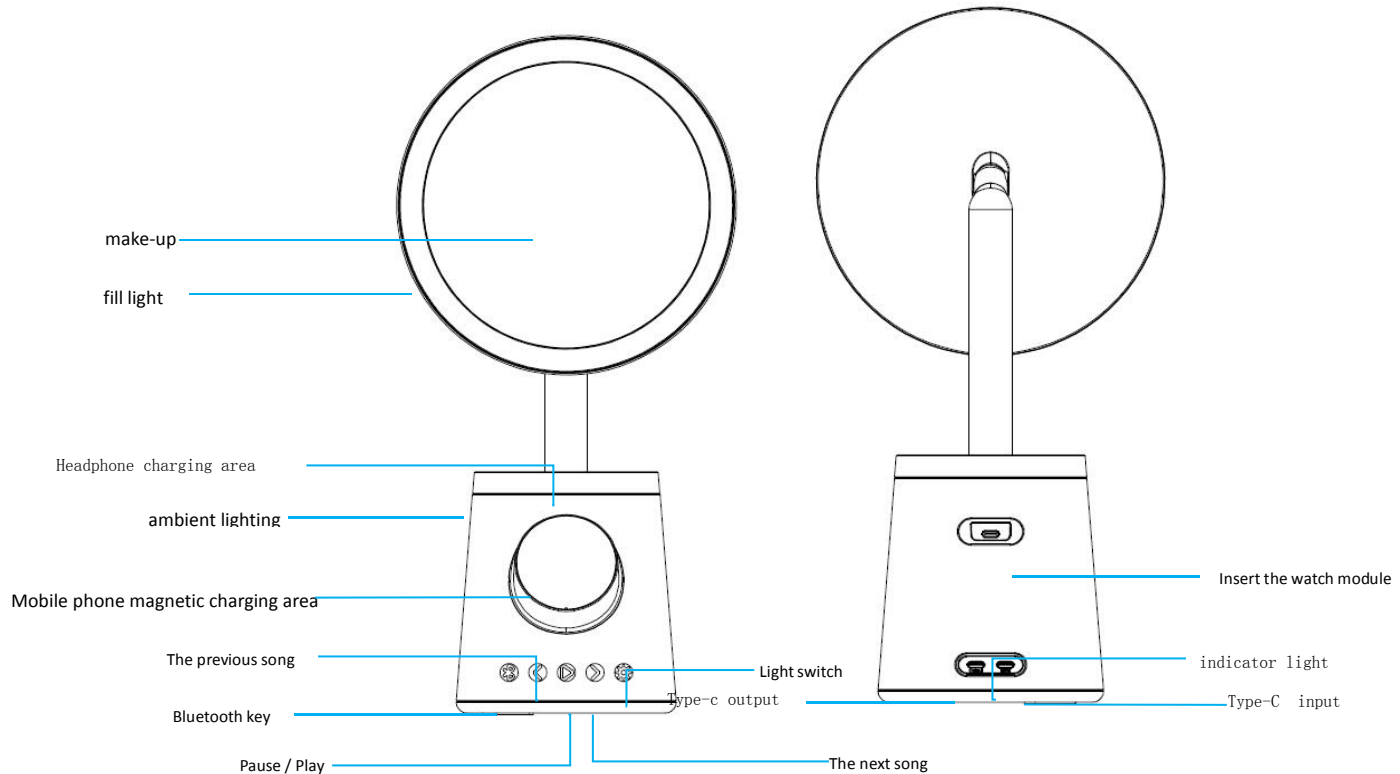

II. Operating Manual:

1. Power Supply:

Insert the USB end of the charging cable into the power adapter, and insert the Type-C port into this product. The indicator light flashes twice and then goes off to enter the standby mode.

2. Charging Status Indicator

Charging: Blue light is constantly on.

Fully charged: Blue light is off.

FOD: Rapid flashing

3. Output Power:

3.1 Magnetic phone wireless charging supports 15W (Max).

3.2 USB-C supports wired output of 5W (Max).

3.3 Headphone wireless charging output 5W (Max).

3.4 Watch compatible module output 2.5W (Max).

4. Bluetooth Function

4.1 Button Function: 6 buttons, Bluetooth button, pause/play, next song, previous song, light key, touch key.

4.2 Short press the Bluetooth button, the prompt sound enters the Bluetooth mode. The first pairing Bluetooth name: (W02254). After successful pairing, there is a prompt sound.

4.3 Short press the pause/play button to switch between pause and play.

4.4 Short press the next song button to play the previous song. Long press the next song button to reduce the volume.

4.5 Short press the next song button to play the next song. Long press the next song button to increase the volume.

5. Lighting Control

5.1 Press the lighting key briefly to turn on the supplementary light, and press it again briefly to adjust the brightness: high, medium, low.

5.2 Touch the key to activate the color-changing light mode. There are 10 lighting modes to choose from. A single touch can switch the lighting.

6. Precautions:

Special note: If you require Bluetooth, wireless charger, and lighting to work simultaneously, be sure to use a power adapter with a power output of PD30W or above; when powered by 5V voltage, the wireless charger only supports a 5W load and lighting operation.

6.1 Do not squeeze or collide.

6.2 Do not disassemble by yourself or put it in fire or water, to avoid short circuit and leakage.

6.3 Do not use the wireless charger in a severely hot, humid or corrosive environment to avoid damaging the circuit and causing leakage.

6.4 Do not place the wireless charger too close to magnetic cards (ID cards, bank cards, etc.) to avoid causing the magnetic card to fail.

6.5 Keep the distance between the implanted medical device (pacemaker, implanted cochlear implant, etc.) and the wireless charger > 20CM to avoid potential interference to the medical device.

6.6 Keep children under supervision to ensure they do not use the wireless charger as a toy, to avoid unnecessary accidents.

6.7 Keep the wireless charger and receiver device away from water and other liquids.

6.8 If cleaning the charger, make sure to disconnect from the power source.

6.9 The operating temperature range is: 0-45°C.

6.10 The humidity range is: 20-85% (40°C).

*The pictures in the manual are schematic diagrams. The final product is subject to the actual product.

*Included: bare machine, charging cable, manual.

*No power adapter included. If needed, purchase separately or use a compliant adapter.

III. Specifications and Parameters:

Input: 9V 5A 12V 4A

Output power 1: 15W for mobile phone (MAX)

Output power 2: 5W for USB-C (MAX)

Output power 3: 5W for headphones (MAX)

Charging efficiency: $\geq 73\%$

Transmission distance: 2-5mm

Wireless charging working frequency: 110-205KHz

Speaker power: 5W

Product size: 378.8*190*145mm

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.