


Wireless Car Charging holder User manual




Please read the instructions
carefully before using.


What is included:

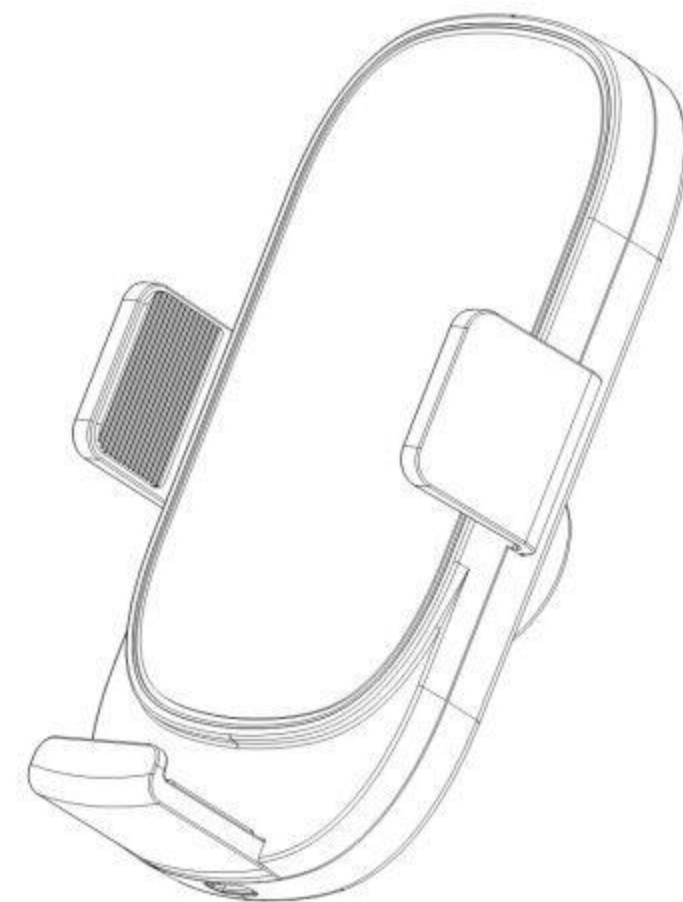

Wireless Holder*1

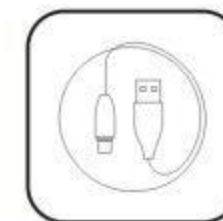

USB cable*1

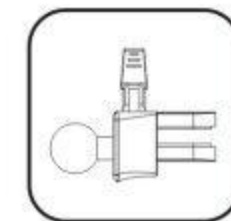


Air Vent Mount*1


Features:

- Car holder with wireless charging function, charges your phone conveniently when driving.
- Designed to provide Qi enabled phones with 15W Max output.
- Full 360° rotation for perfect viewing angle.
- Supports Mounting on Air Vent.
- Over Temperature, Over Current, Over Voltage Protection.

Infograph:

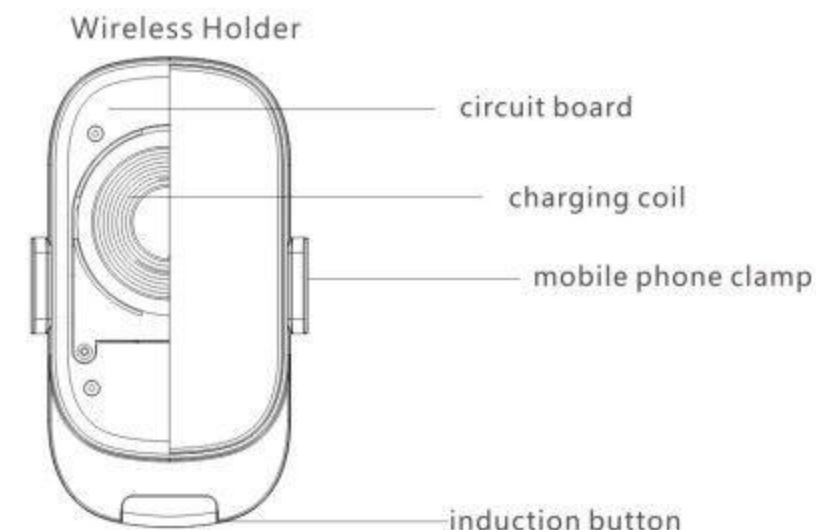

Press to open for Max 8mm

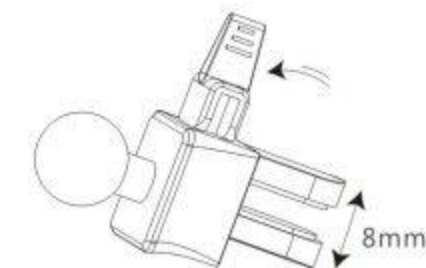

Air Vent Mount



fixed nut
Used for fixing charging bracket
with air vent mount

Product specification:

Wireless holder			
Input	5V/2A ;9V/1.8A;12V/1.5A		
Output	5W/7.5W/10W/15W(self / adjustable)		
Frequency	110-205Khz	Conversion Rate	≥ 72%
Dimension	125*65*18mm	Net Weight	143g


Compatible devices:

Compatible with all Qi enabled devices.


LED mode:

Working state	LED indicator color&status
Power On	Blue
Standby	Blue
Charging	Blue lights off
Charging Completed	Blue
FOD Alert	Blue light flashing


Mount on air vent:

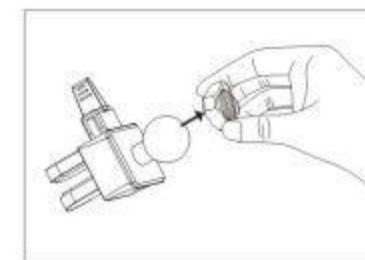


1.Insert the nut into the ball structure

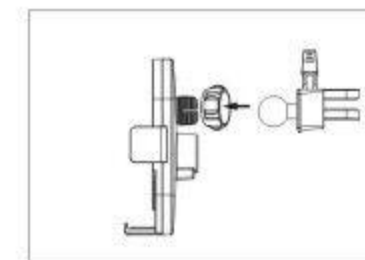


2.Tighten the nut to the back thread of the main machine as shown

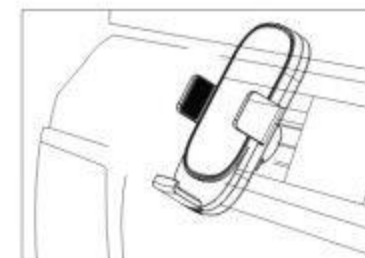


3.Insert the clip into the blade of the air vent

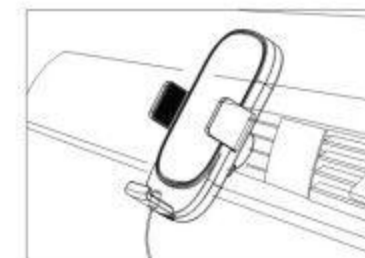

4.Connect the type-c cable to the wireless charging bracket

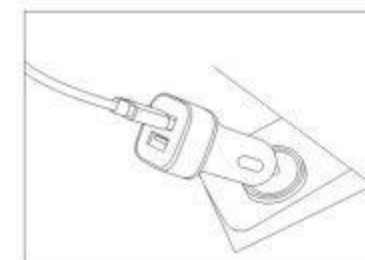

5.Connect the other end of the USB to the car charger

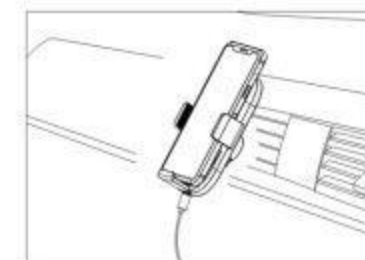

6.Touch the switch to trigger the automatic unlock function. Then place your phone onto the holder for charging and it will lock automatically.

Tips:

- Do not squeeze or collide.
- Do not disassemble or throw into fire or water to avoid causing a short circuit.
- Do not use wireless charger in extremely hot, humid or corrosive environment.
- Do not use near magnetic bank card or IC card to avoid malfunctioning.
- Please keep minimum 20cm between implantable medical devices (pacemaker, implantable cochlear, etc) to avoid potential interference with the medical device.
- Keep out of reach of children and pets.

The images in this manual are sketch drawing of actual product only, actual product might be slightly different.

* Car Charger is not included, please purchase separately.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.