




Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

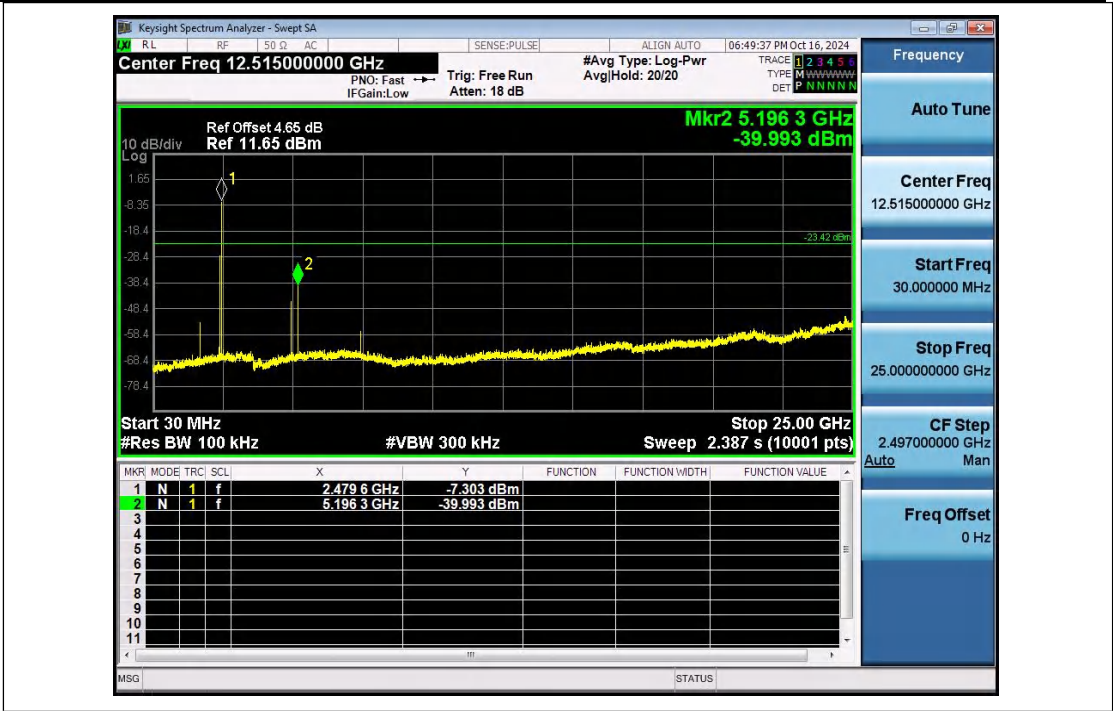

Appendix F: Bandedge



Condition	Antenna	Modulation	TX Mode	Bandedge MAX.Value	Limit	Result
NVNT	ANT1	1-DH5	2402.00	-57.059	-23.003	Pass
NVNT	ANT1	1-DH5	Hopping_LCH	-60.058	-22.916	Pass
NVNT	ANT1	1-DH5	2480.00	-64.713	-23.189	Pass
NVNT	ANT1	1-DH5	Hopping_HCH	-60.189	-23.325	Pass
NVNT	ANT1	2-DH5	2402.00	-39.709	-23.148	Pass
NVNT	ANT1	2-DH5	Hopping_LCH	-41.434	-23.239	Pass
NVNT	ANT1	2-DH5	2480.00	-60.325	-23.519	Pass
NVNT	ANT1	2-DH5	Hopping_HCH	-57.127	-23.467	Pass
NVNT	ANT1	3-DH5	2402.00	-38.940	-22.985	Pass
NVNT	ANT1	3-DH5	Hopping_LCH	-42.755	-22.950	Pass
NVNT	ANT1	3-DH5	2480.00	-59.376	-23.415	Pass
NVNT	ANT1	3-DH5	Hopping_HCH	-60.477	-23.526	Pass


1_Reference_Level_NVNT_ANT1_1-DH5_2402_00




2_Bandedge_NVNT_ANT1_1-DH5_2402_00



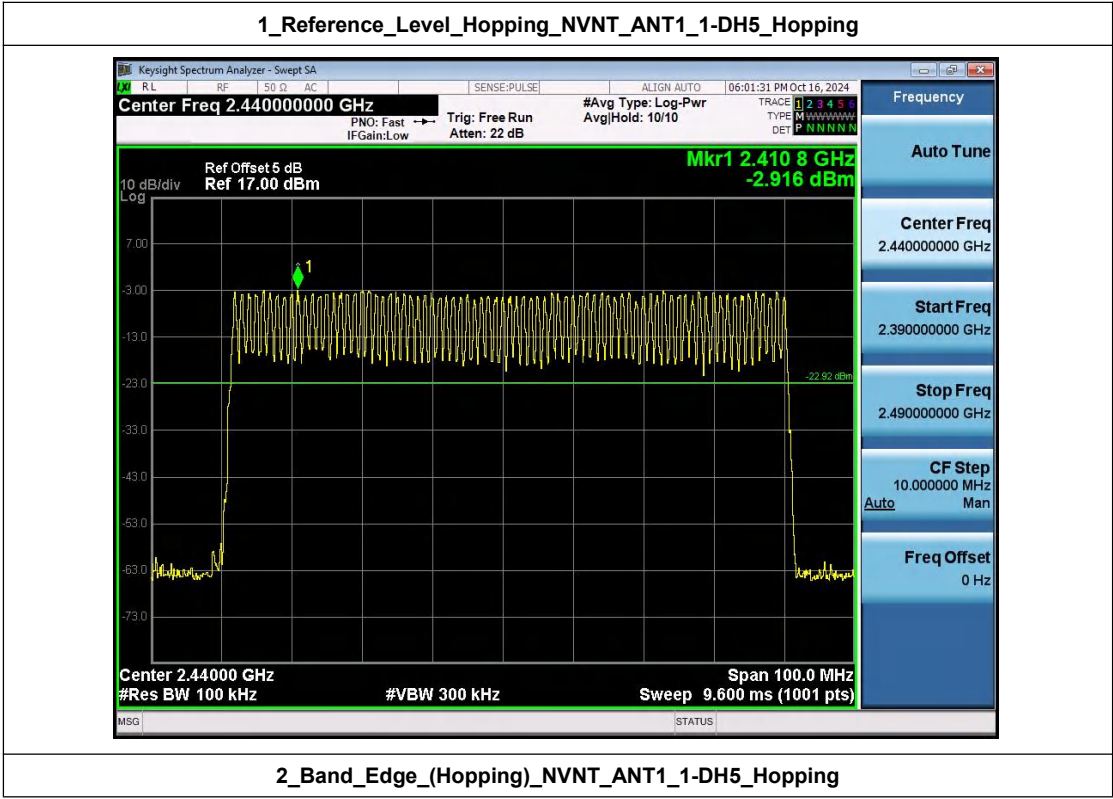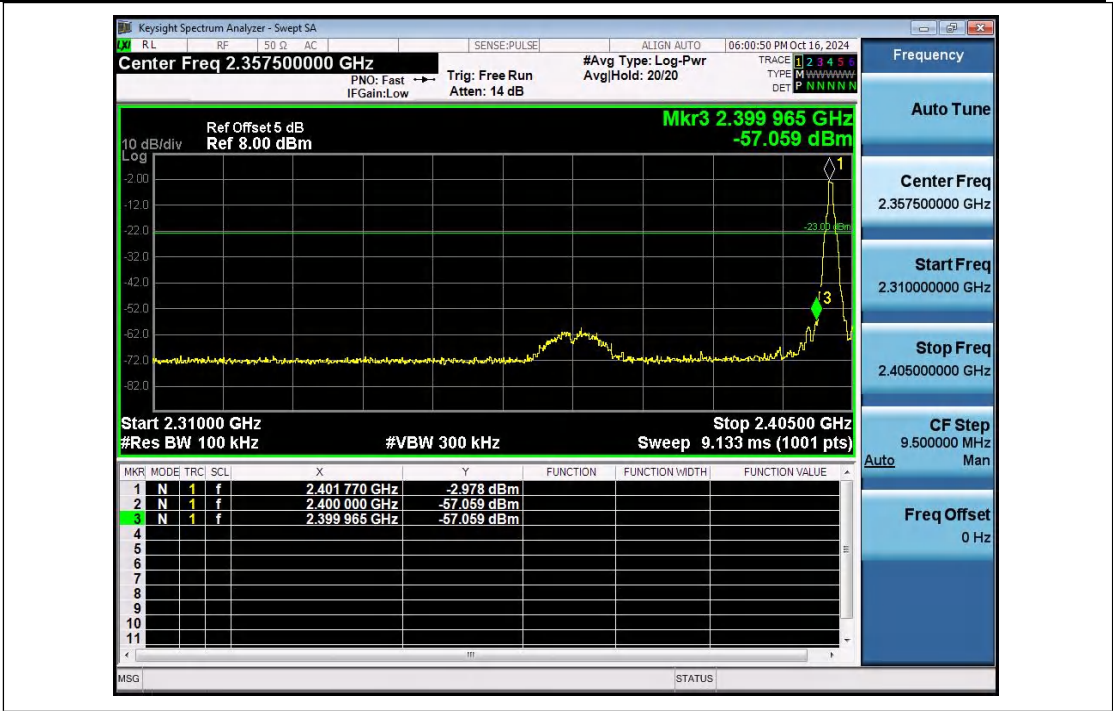


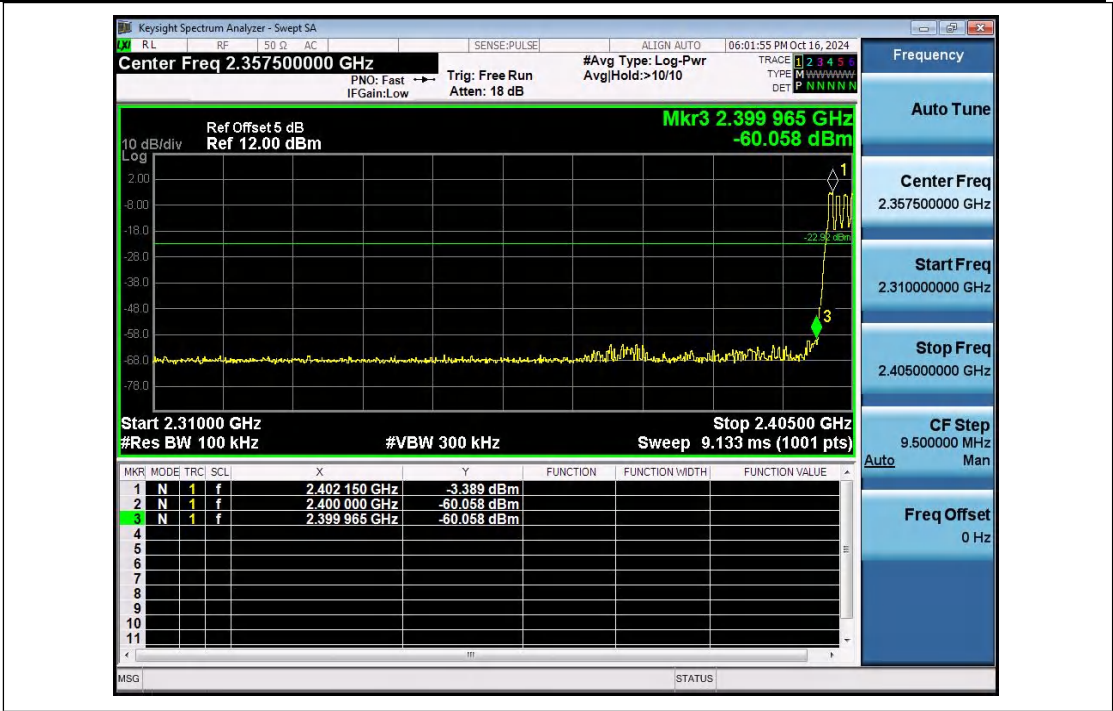



1_Reference_Level_NVNT_ANT1_1-DH5_2480_00

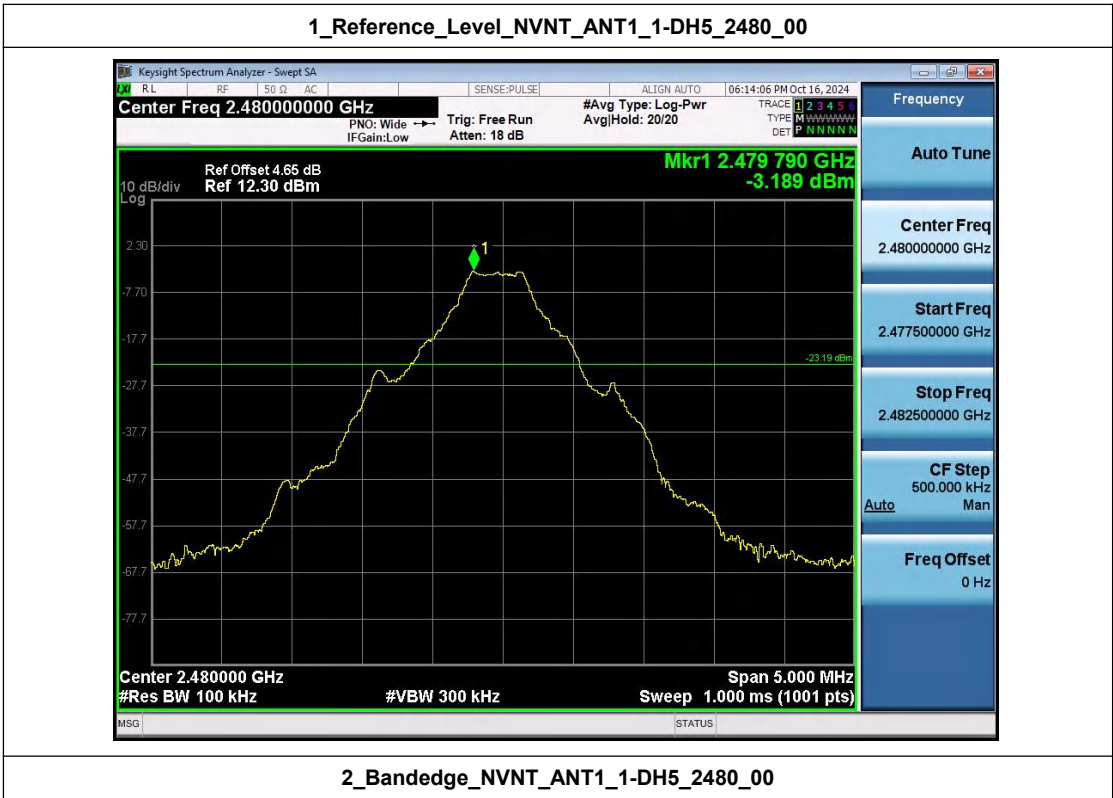


2_Bandedge_NVNT_ANT1_1-DH5_2480_00



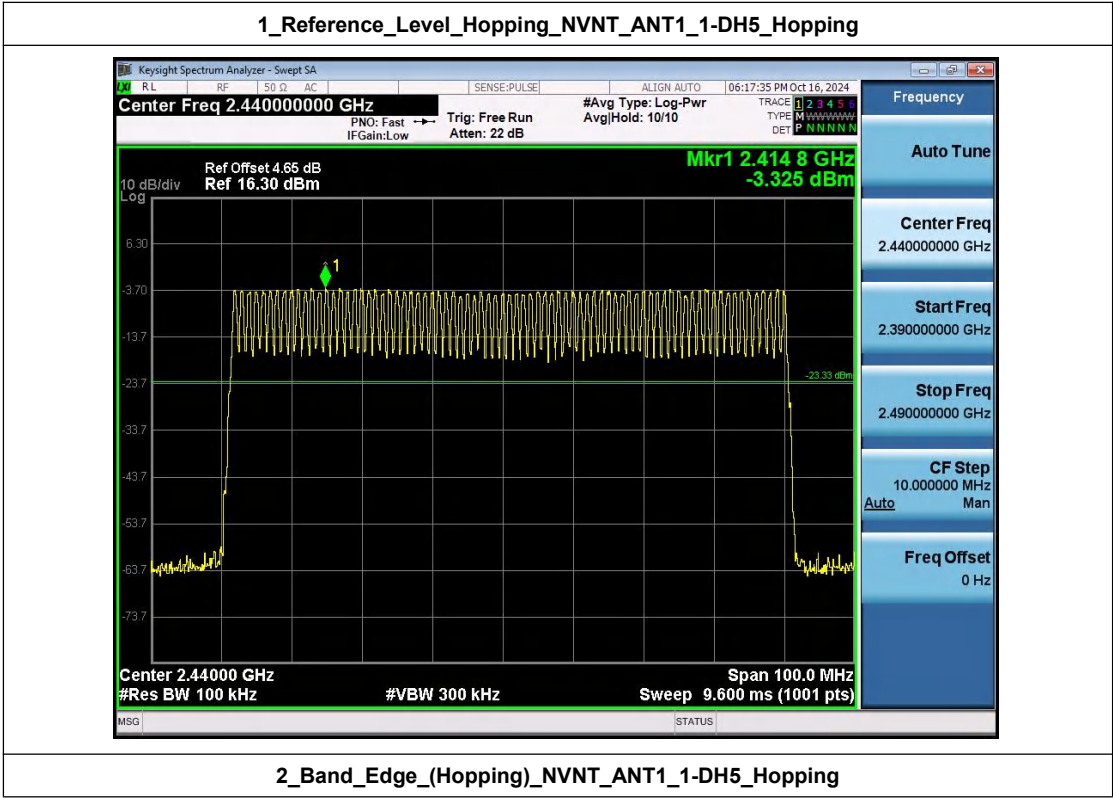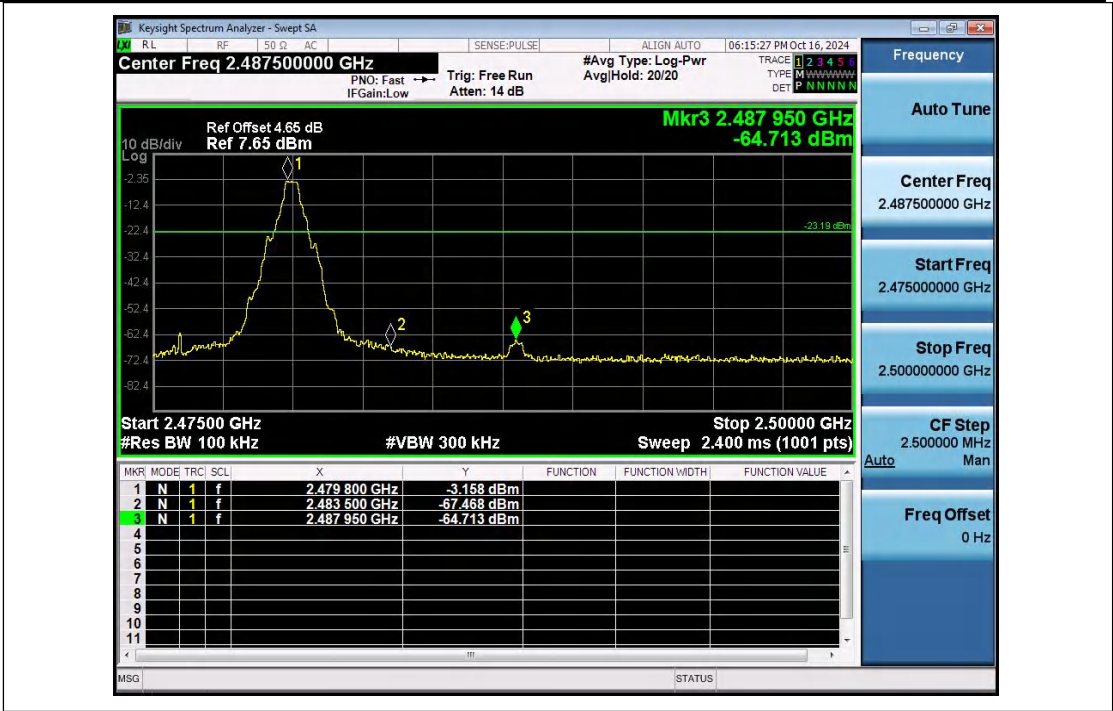


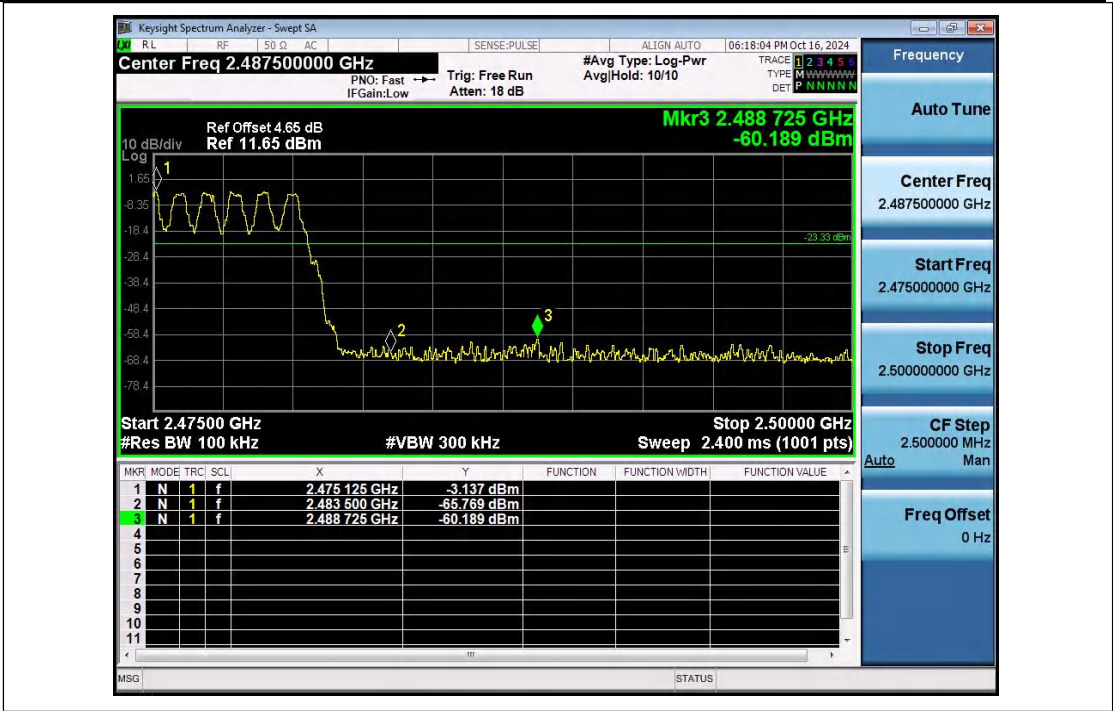



1_Reference_Level_NVNT_ANT1_2-DH5_2402_00

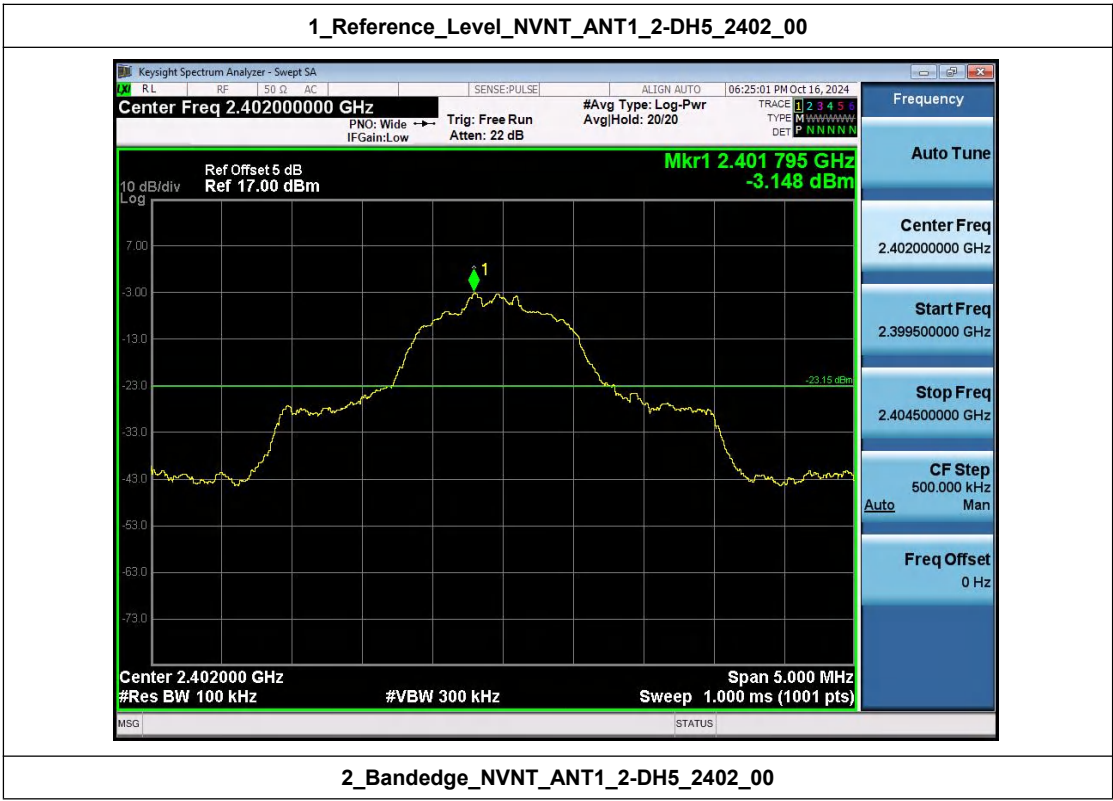


2_Bandedge_NVNT_ANT1_2-DH5_2402_00



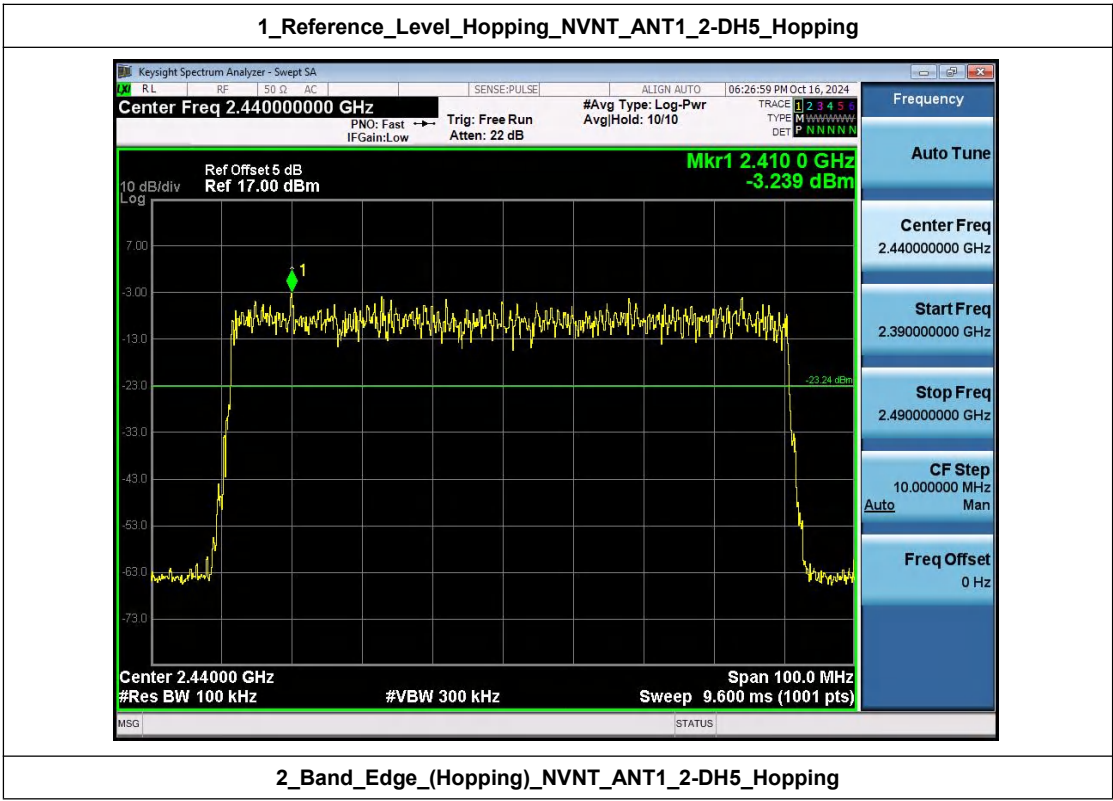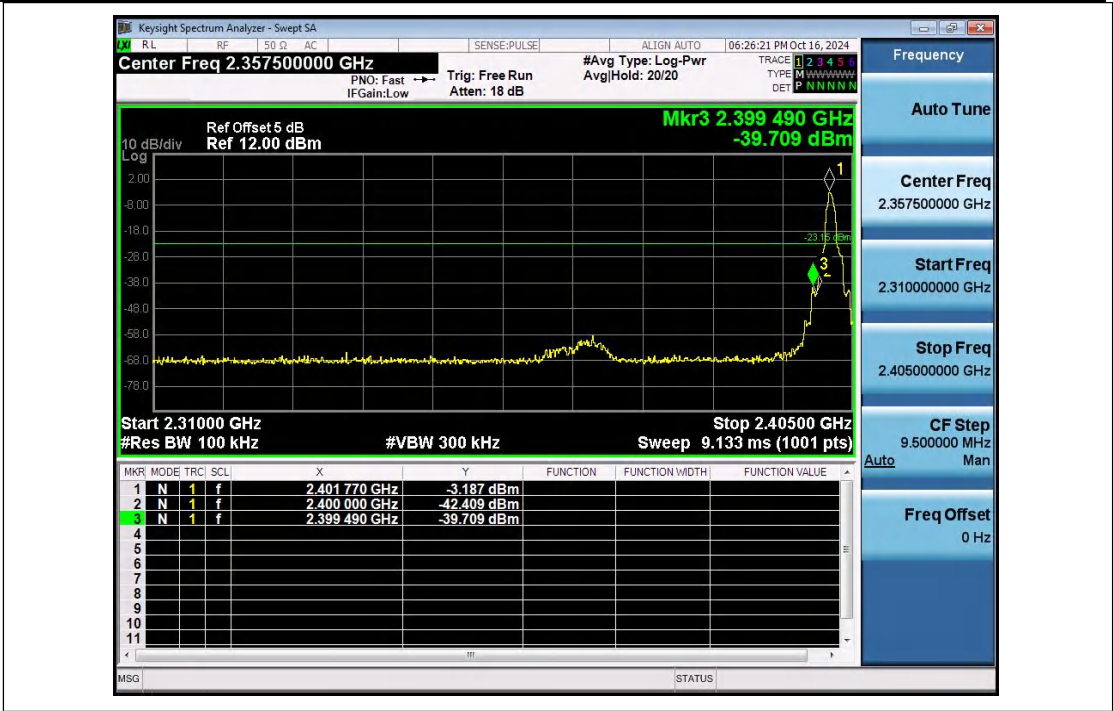


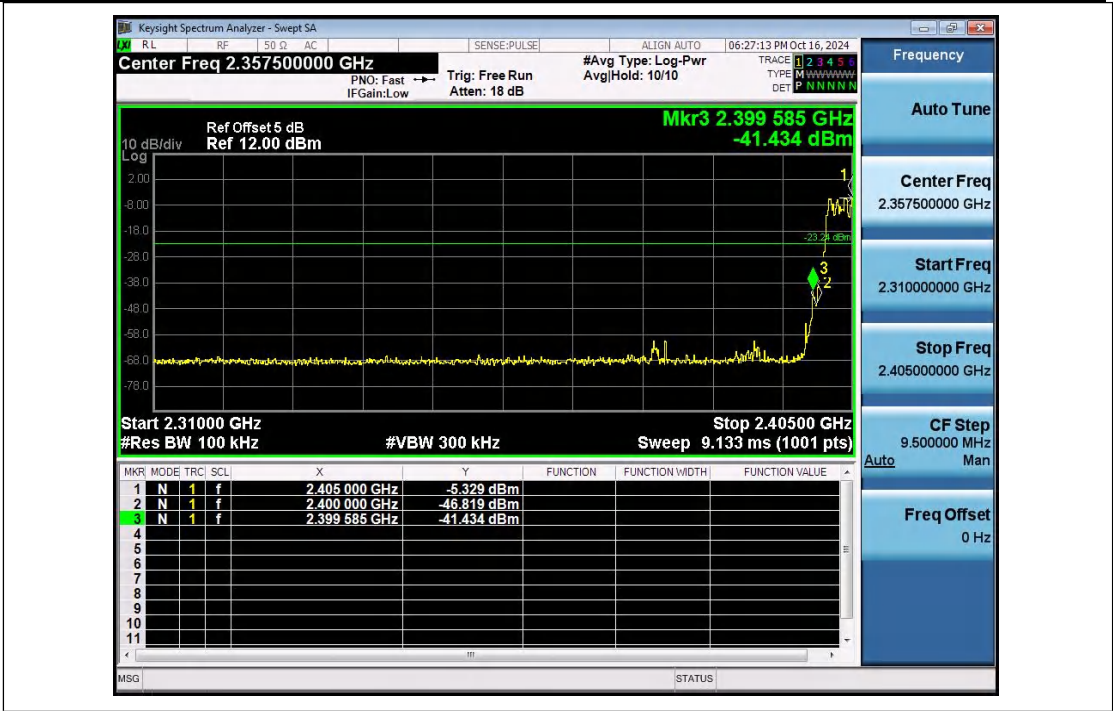



1_Reference_Level_NVNT_ANT1_2-DH5_2480_00

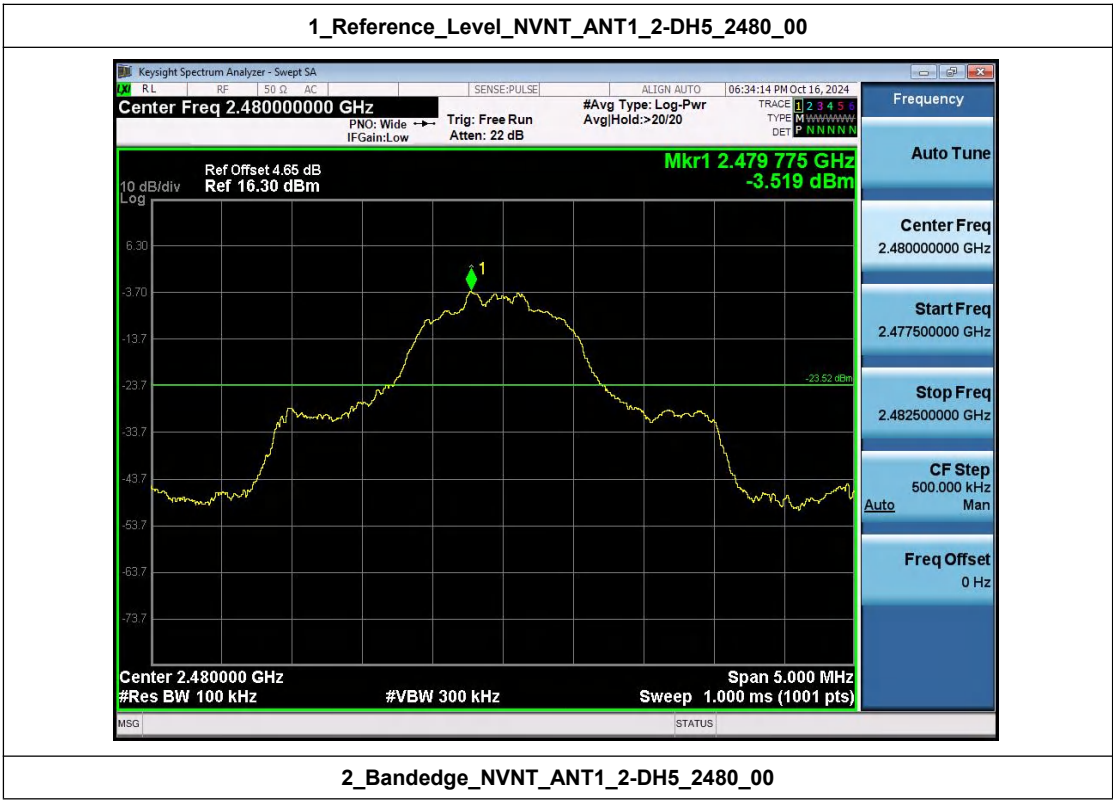


2_Bandedge_NVNT_ANT1_2-DH5_2480_00



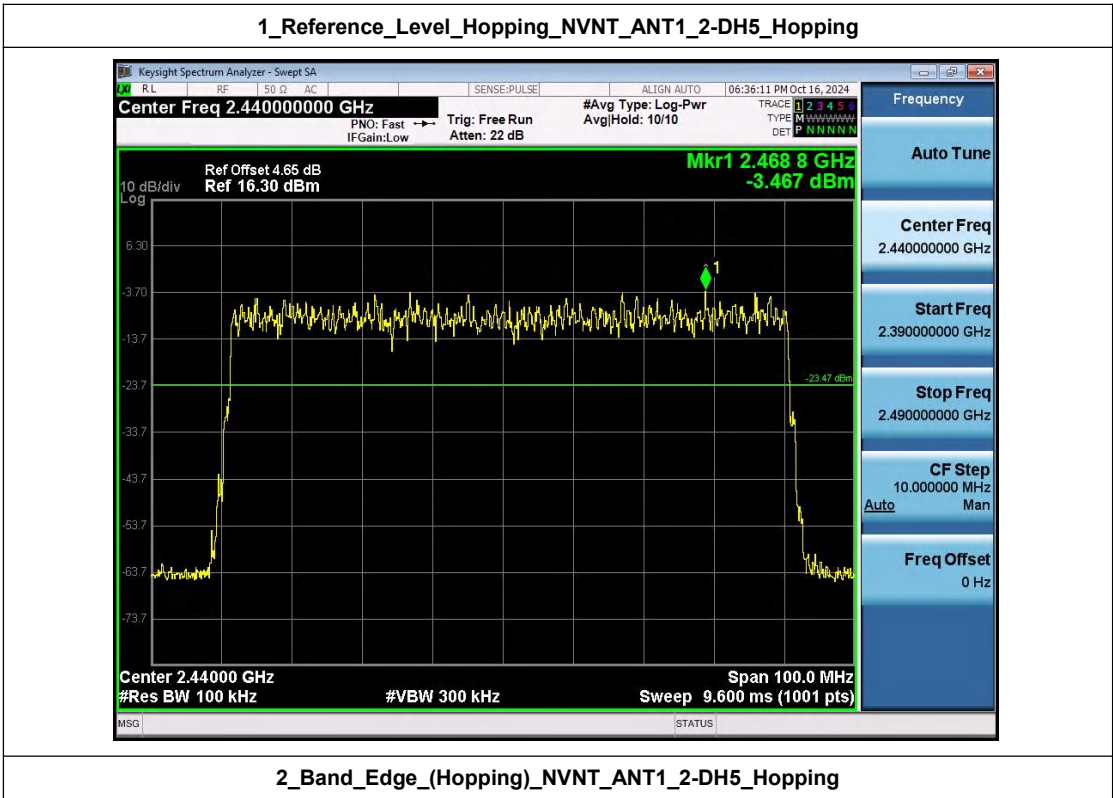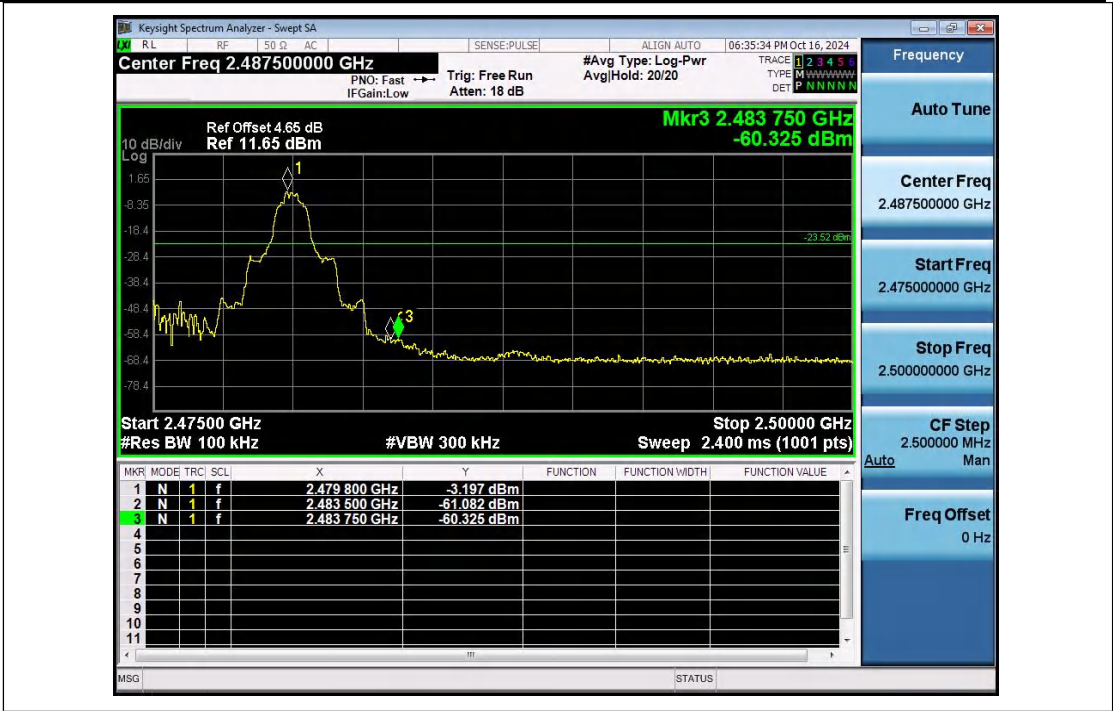

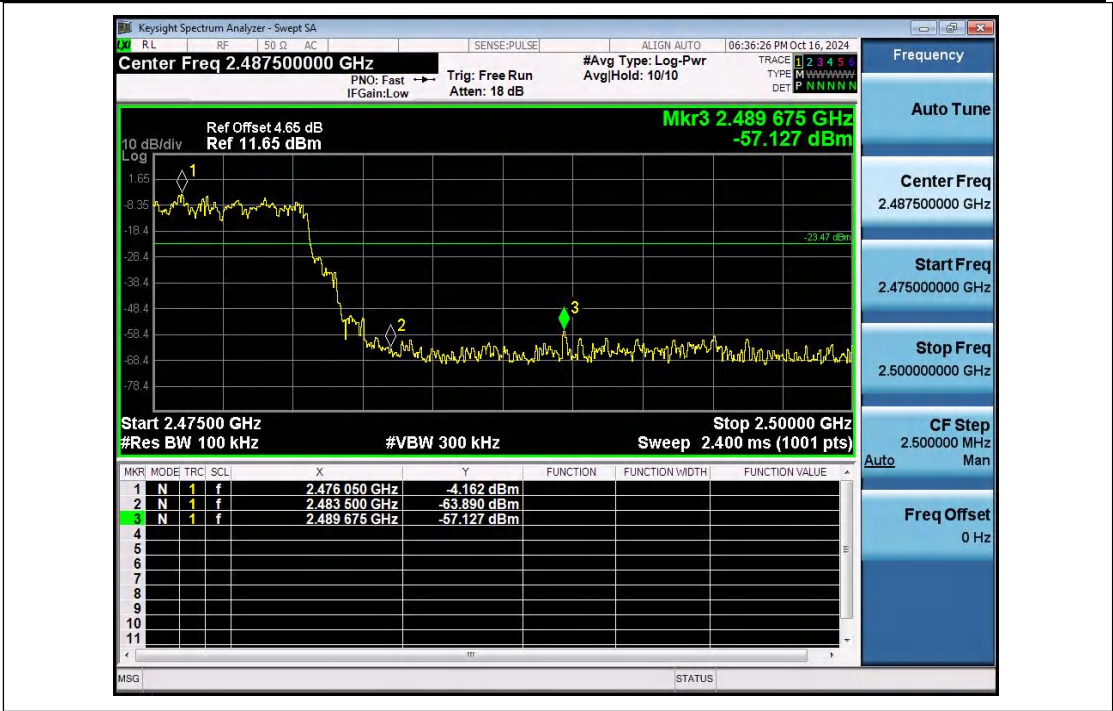


1_Reference_Level_NVNT_ANT1_3-DH5_2402_00

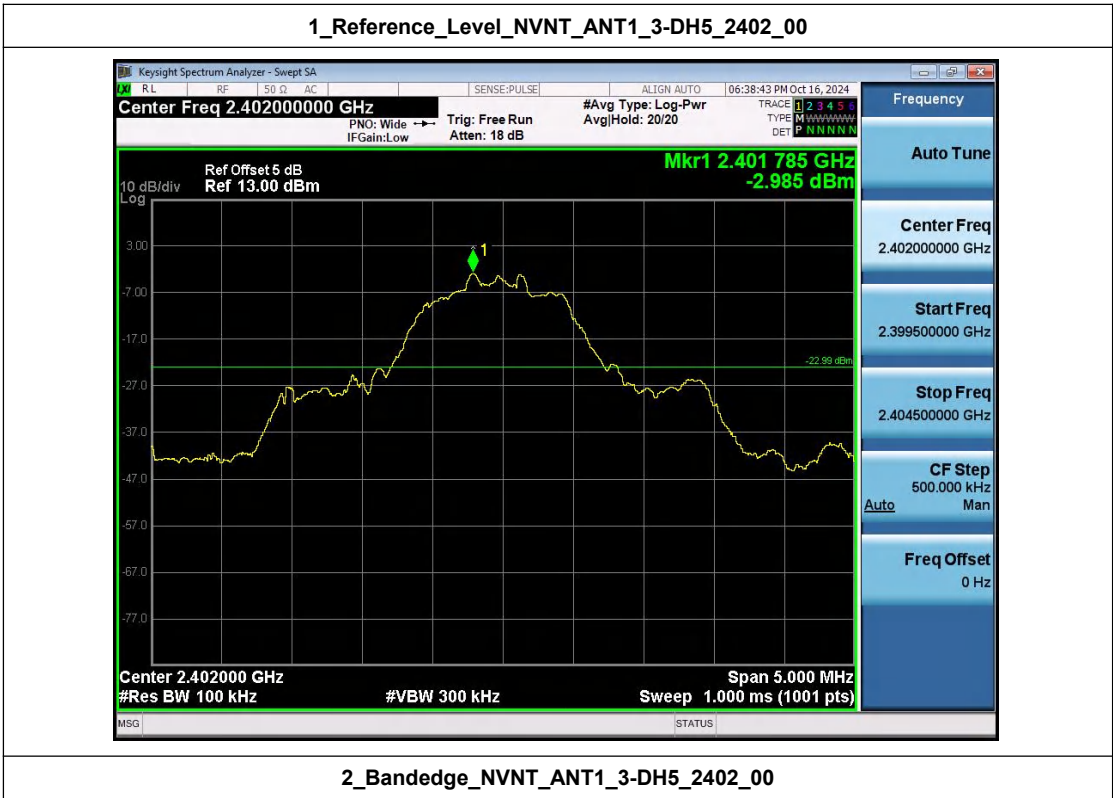


2_Bandedge_NVNT_ANT1_3-DH5_2402_00




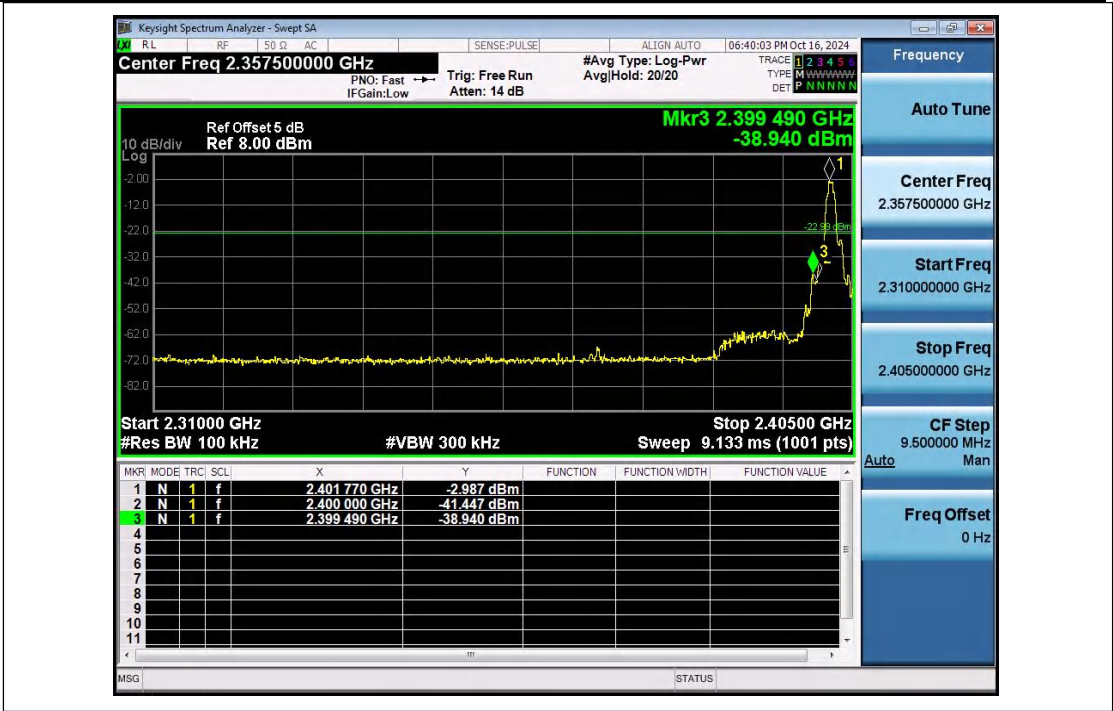


1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

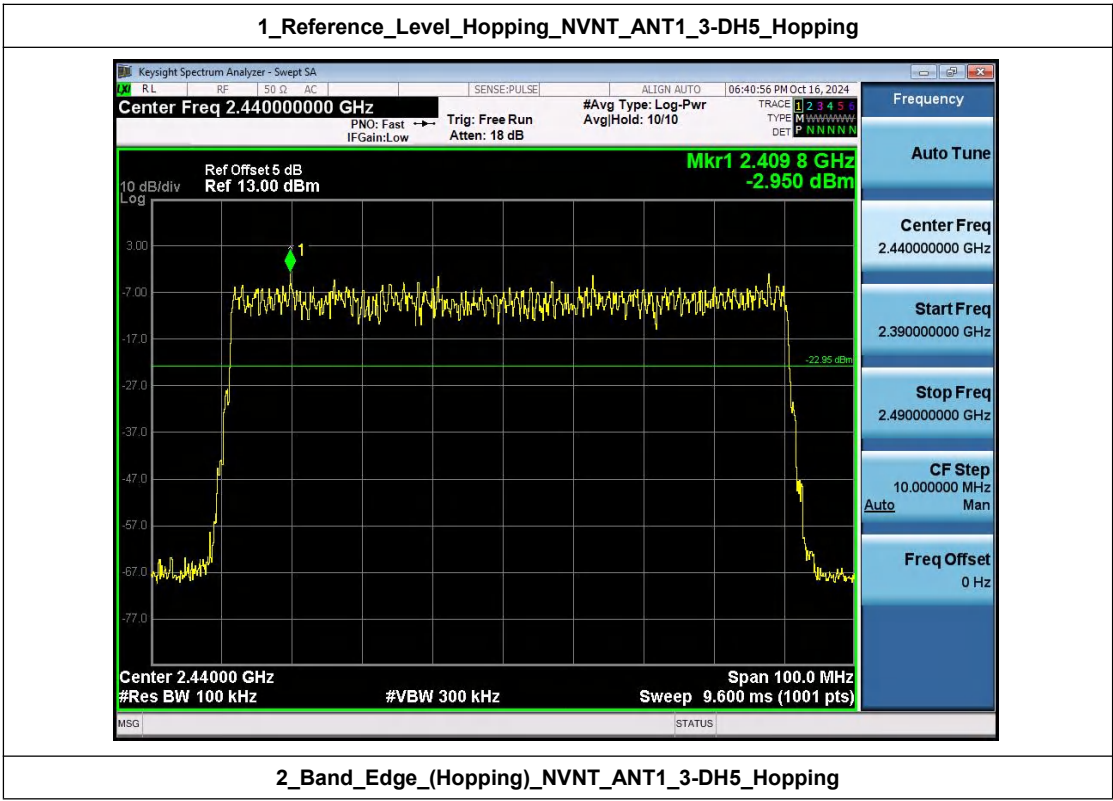


2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping



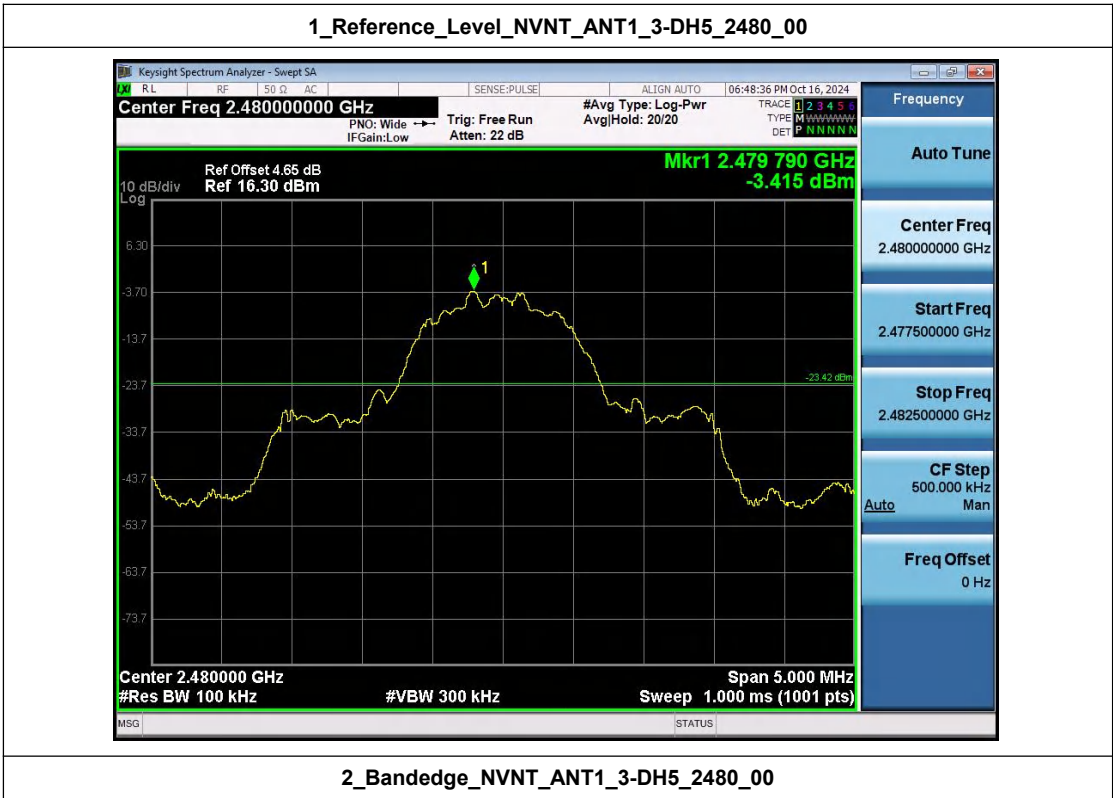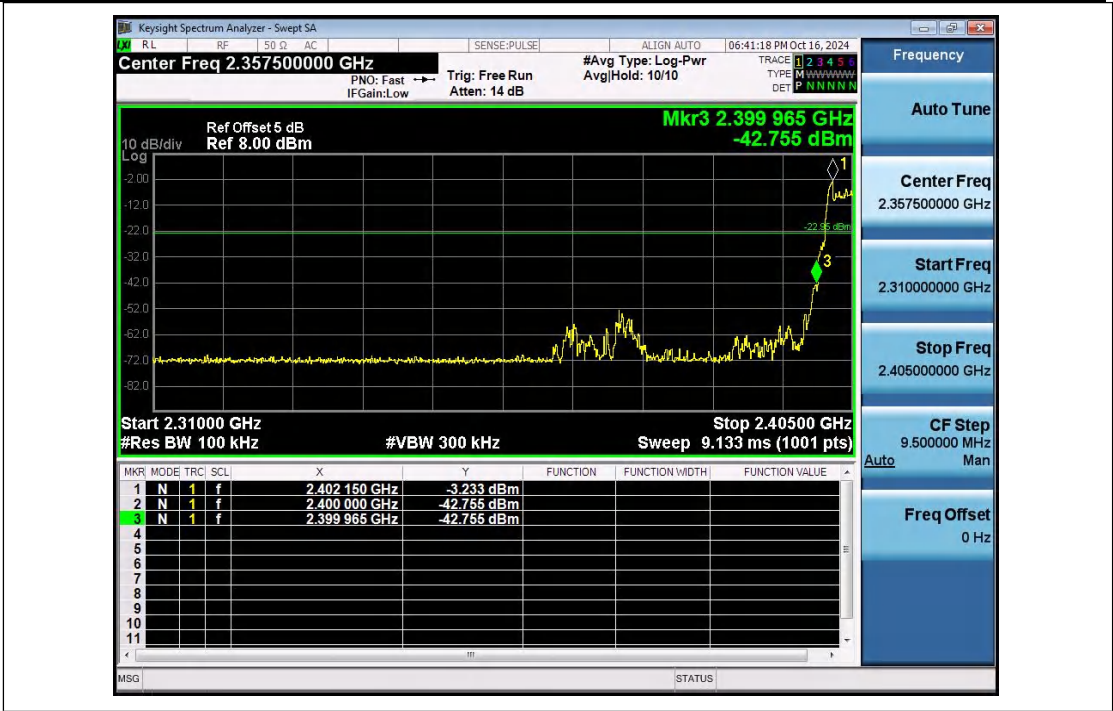




1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

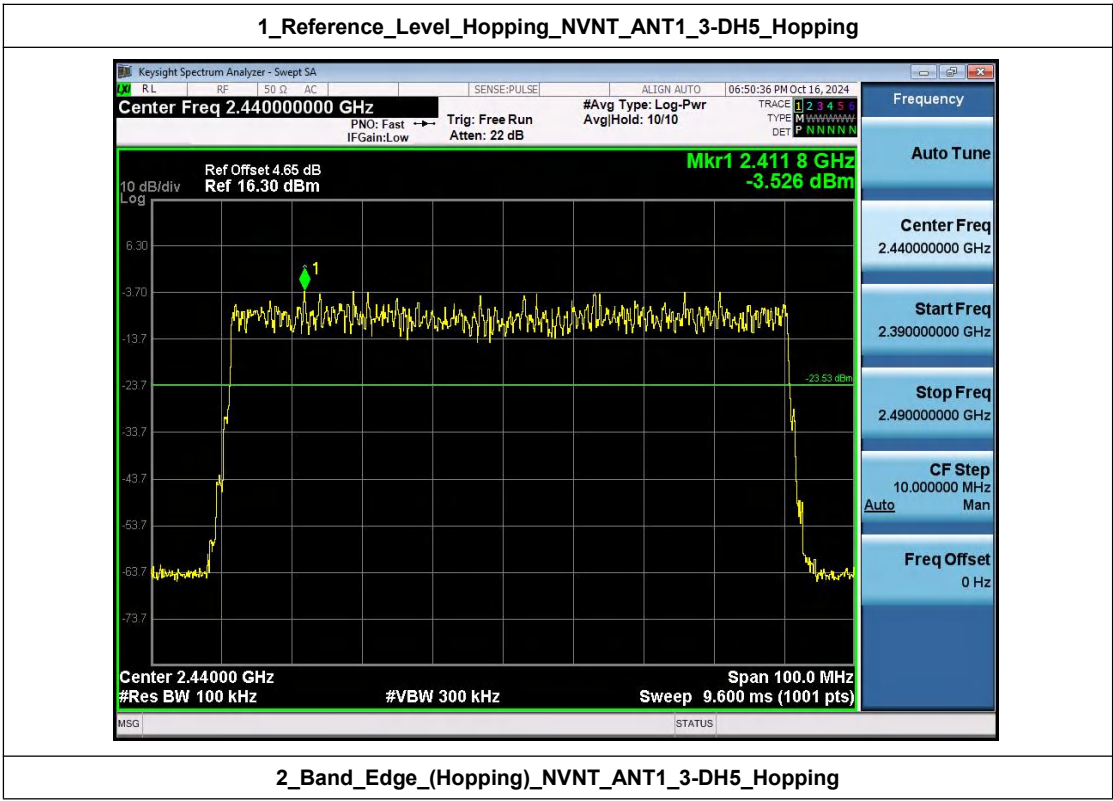

2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping



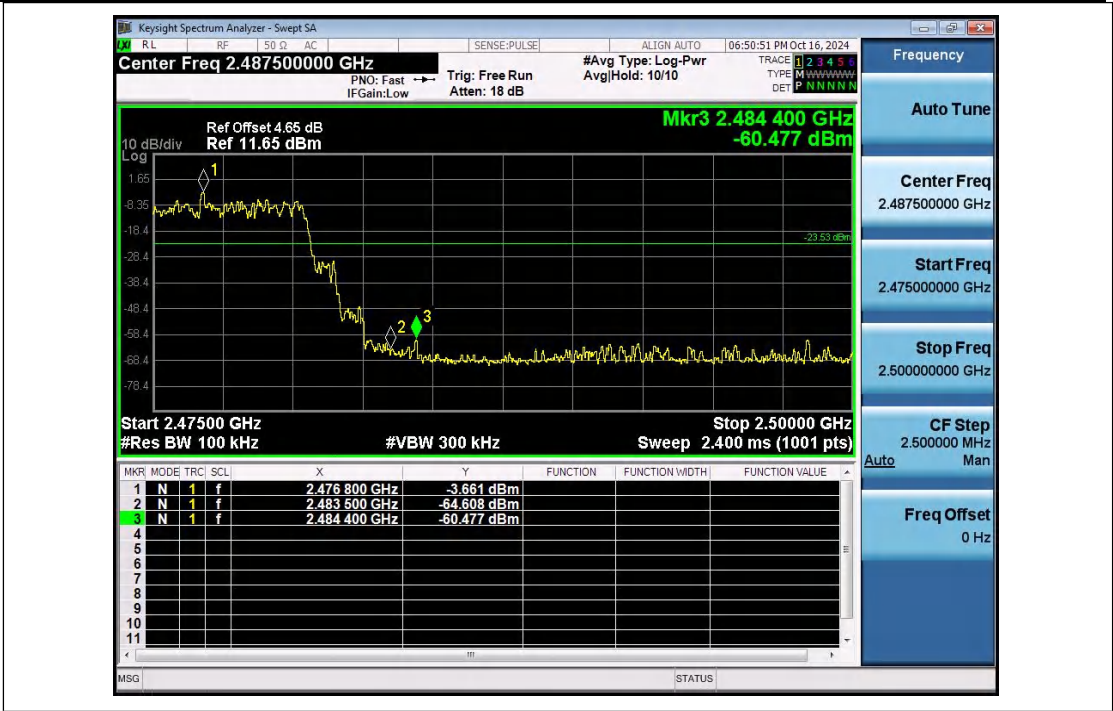

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com




Appendix G: Carrier Frequencies Separation (Hopping)

Condition	Antenna	Modulation	Frequency(MHz)	Hopping NO.0 (MHz)	Hopping NO.1 (MHz)	Carrier Frequencies Separation(MHz)	Limit(MHz)	Result
NVNT	ANT1	1-DH5	2441.00	2440.807	2441.800	0.99	0.707	Pass
NVNT	ANT1	2-DH5	2441.00	2440.972	2441.980	1.01	0.903	Pass
NVNT	ANT1	3-DH5	2441.00	2440.786	2441.776	0.99	0.871	Pass

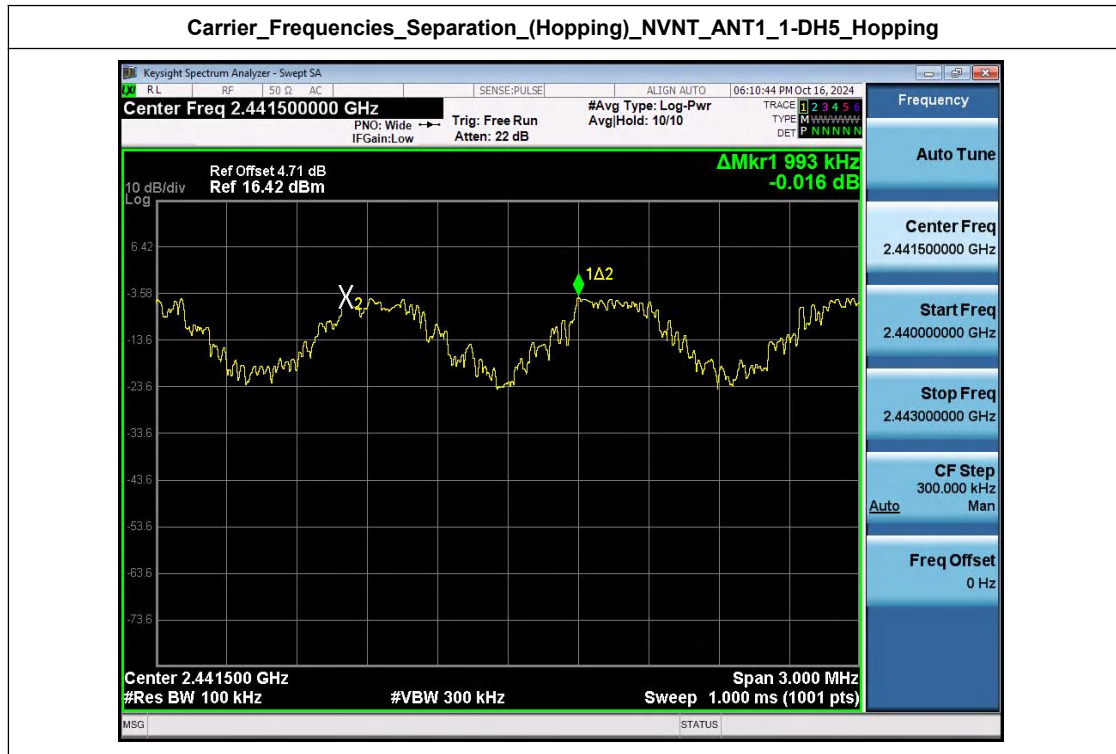

Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_2-DH5_Hopping




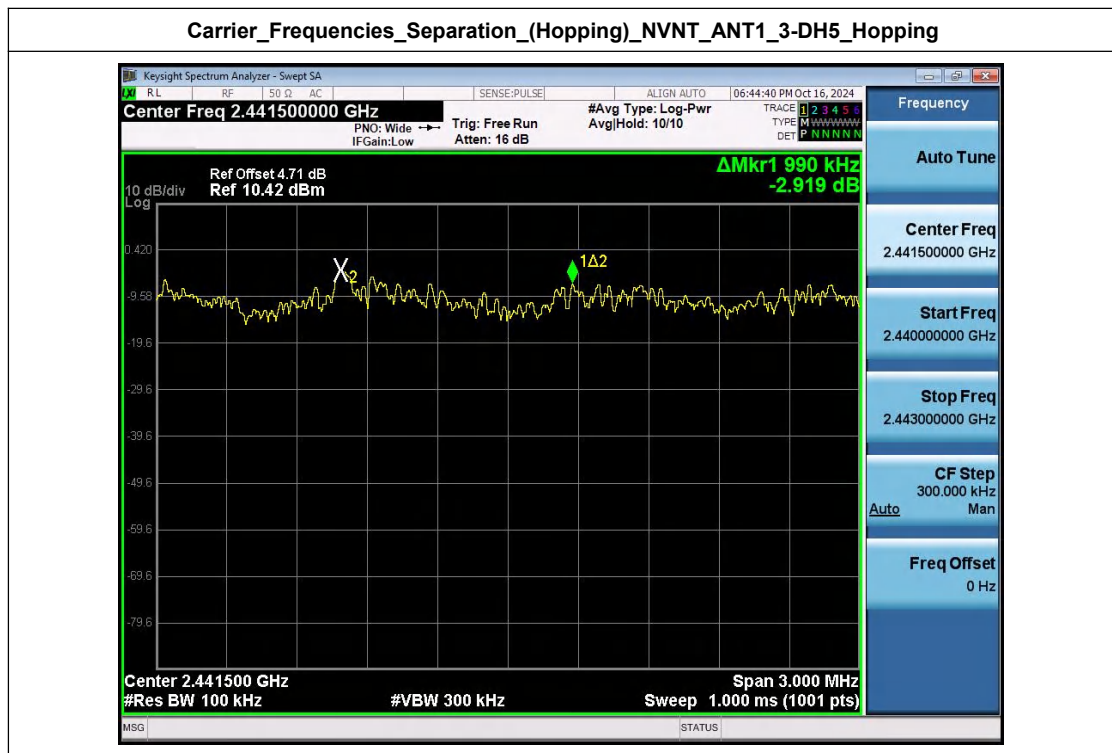


Appendix H: Number of Hopping Channel (Hopping)


Condition	Antenna	Modulation	Hopping Num	Limit	Result
NVNT	ANT1	1-DH5	79	15	Pass
NVNT	ANT1	2-DH5	79	15	Pass
NVNT	ANT1	3-DH5	79	15	Pass

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_1-DH5_Hopping

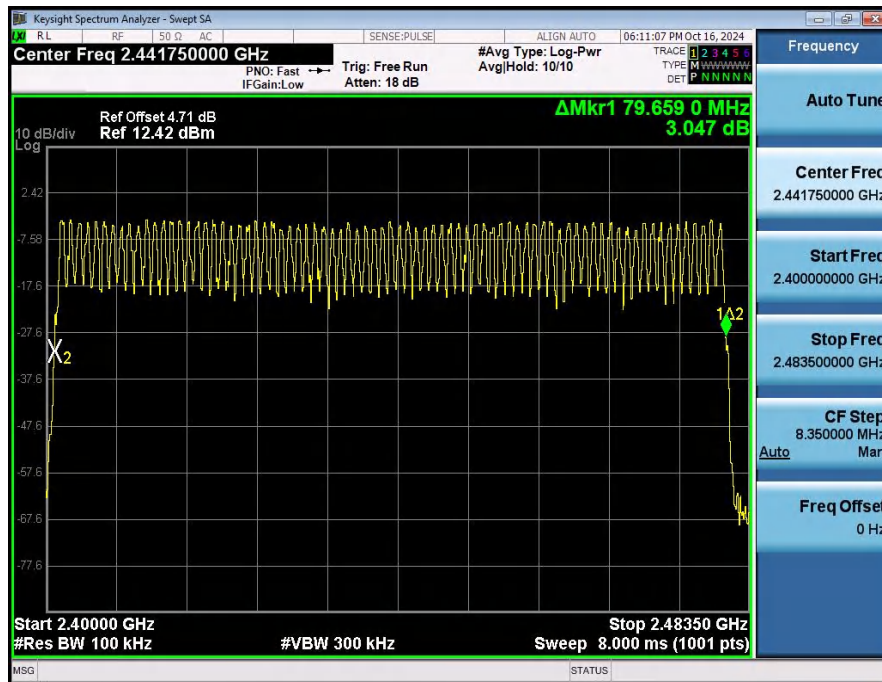

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_2-DH5_Hopping

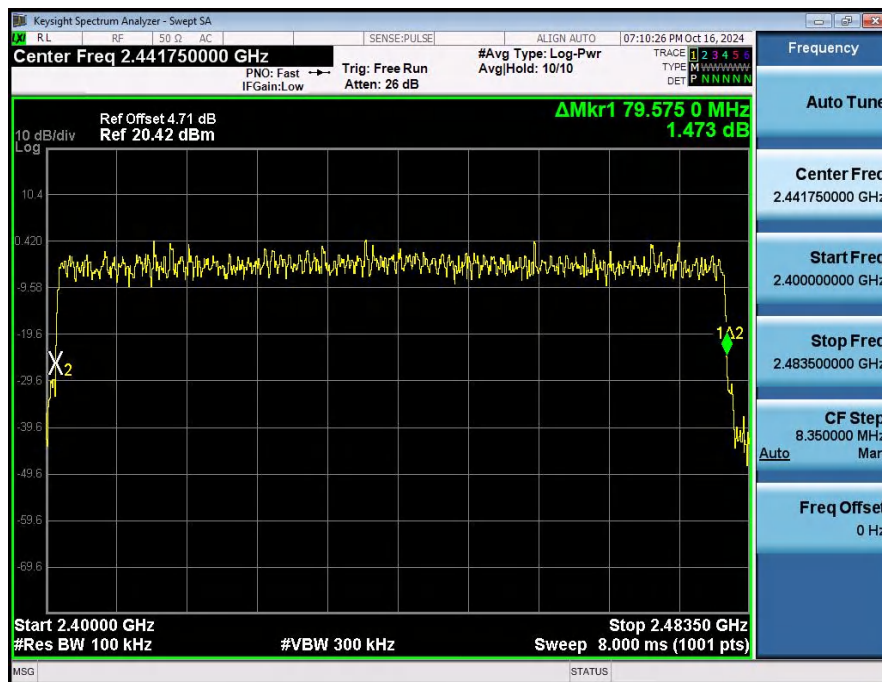

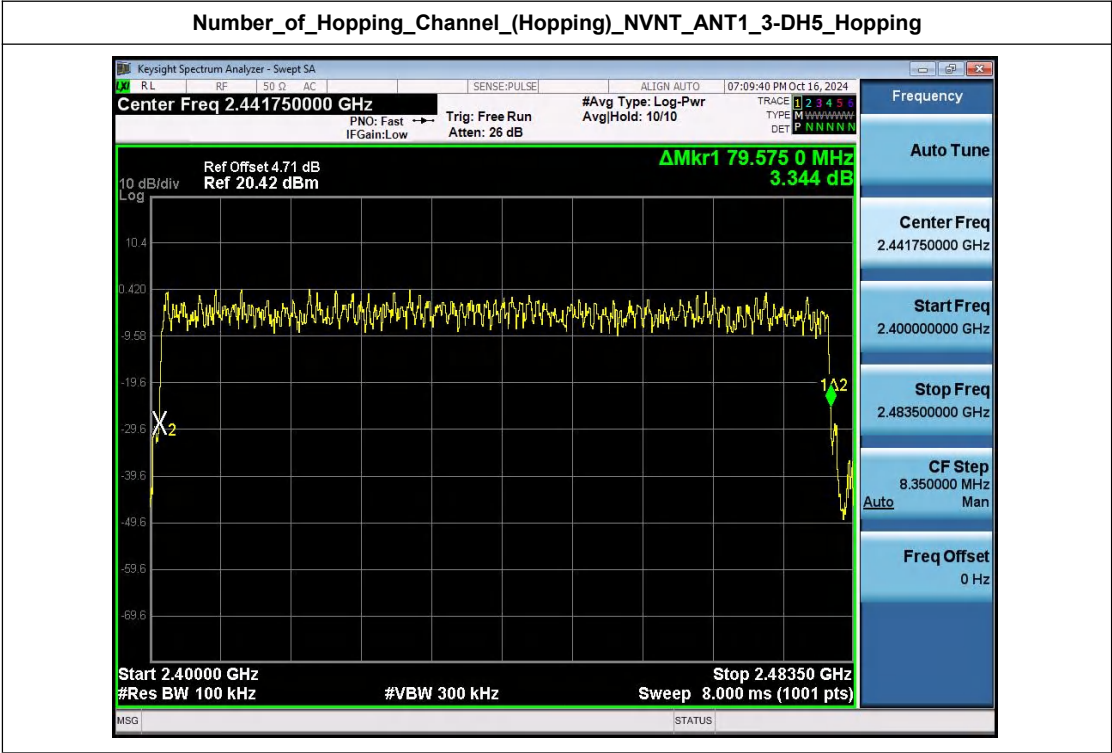

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline


400-003-0500


www.anbotek.com




Appendix I: Dwell Time (Hopping)

Condition	Antenna	Packet Type	Pulse Time(ms)	Hops	Dwell Time(ms)	Limit(s)	Result
NVNT	ANT1	1-DH5	2.870	106.00	304.220	0.40	Pass
NVNT	ANT1	2-DH5	2.882	105.00	302.610	0.40	Pass
NVNT	ANT1	3-DH5	2.883	106.00	305.598	0.40	Pass
NVNT	ANT1	1-DH1	0.374	319.00	119.306	0.40	Pass
NVNT	ANT1	1-DH3	1.622	158.00	256.276	0.40	Pass
NVNT	ANT1	2-DH1	0.393	318.00	124.974	0.40	Pass
NVNT	ANT1	2-DH3	1.634	158.00	258.172	0.40	Pass
NVNT	ANT1	3-DH1	0.393	319.00	125.367	0.40	Pass
NVNT	ANT1	3-DH3	1.644	151.00	248.244	0.40	Pass

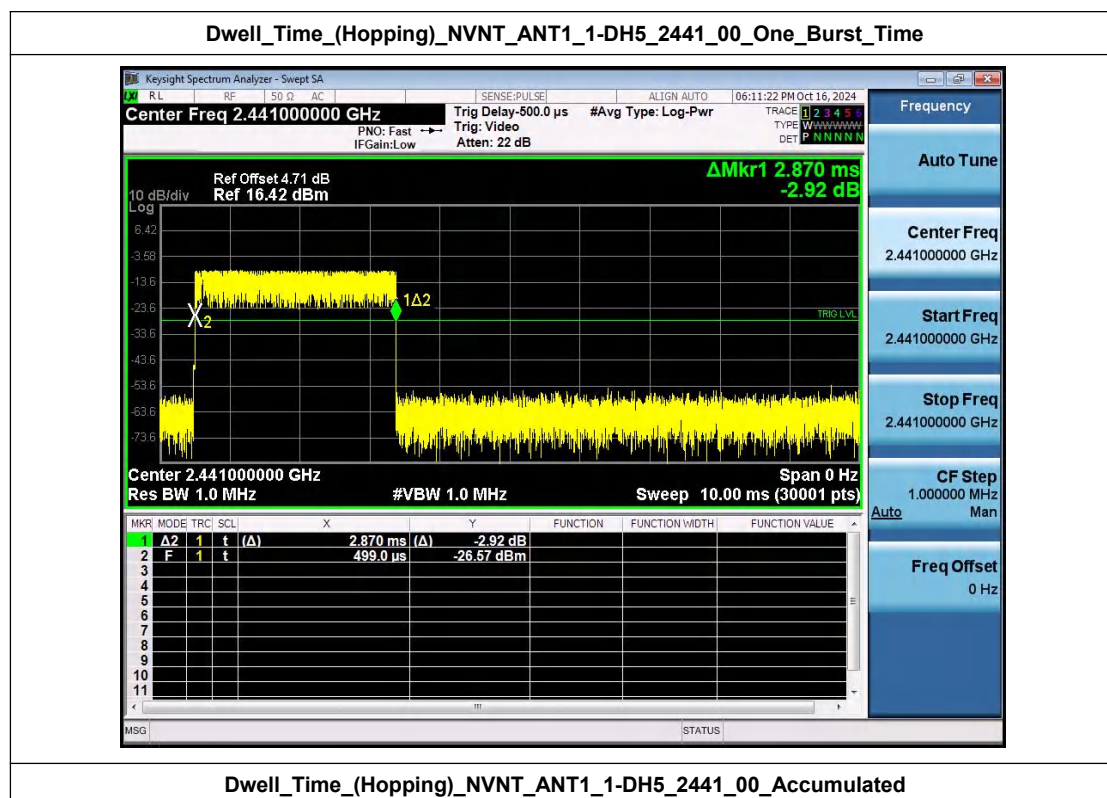


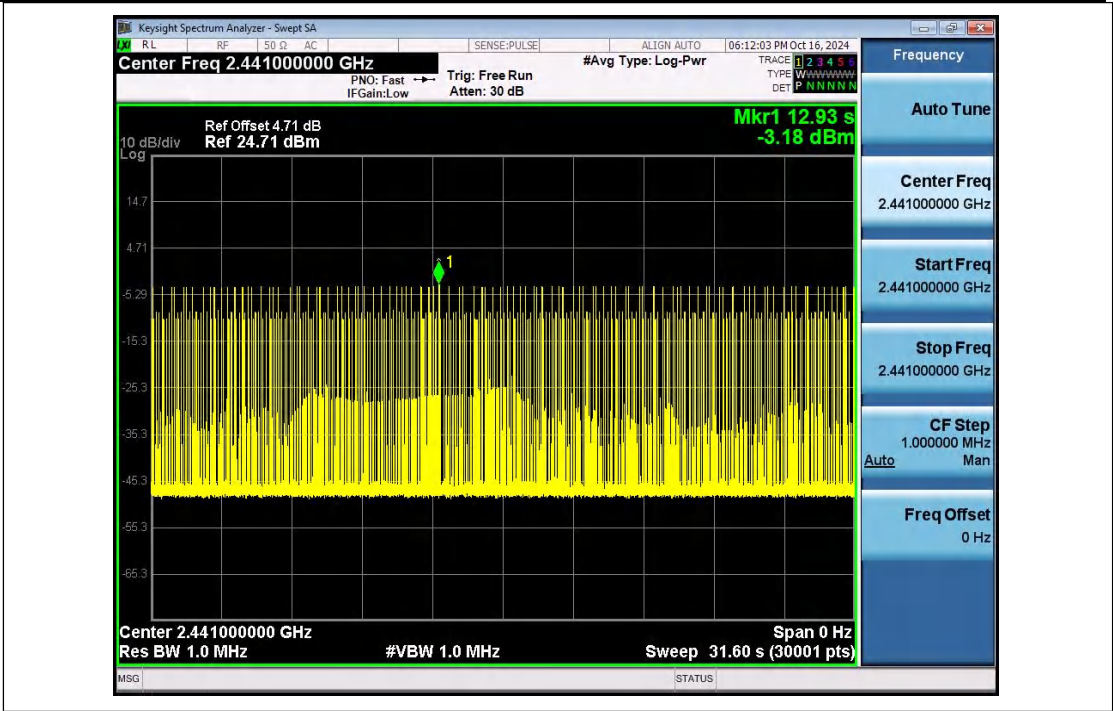




Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_One_Burst_Time


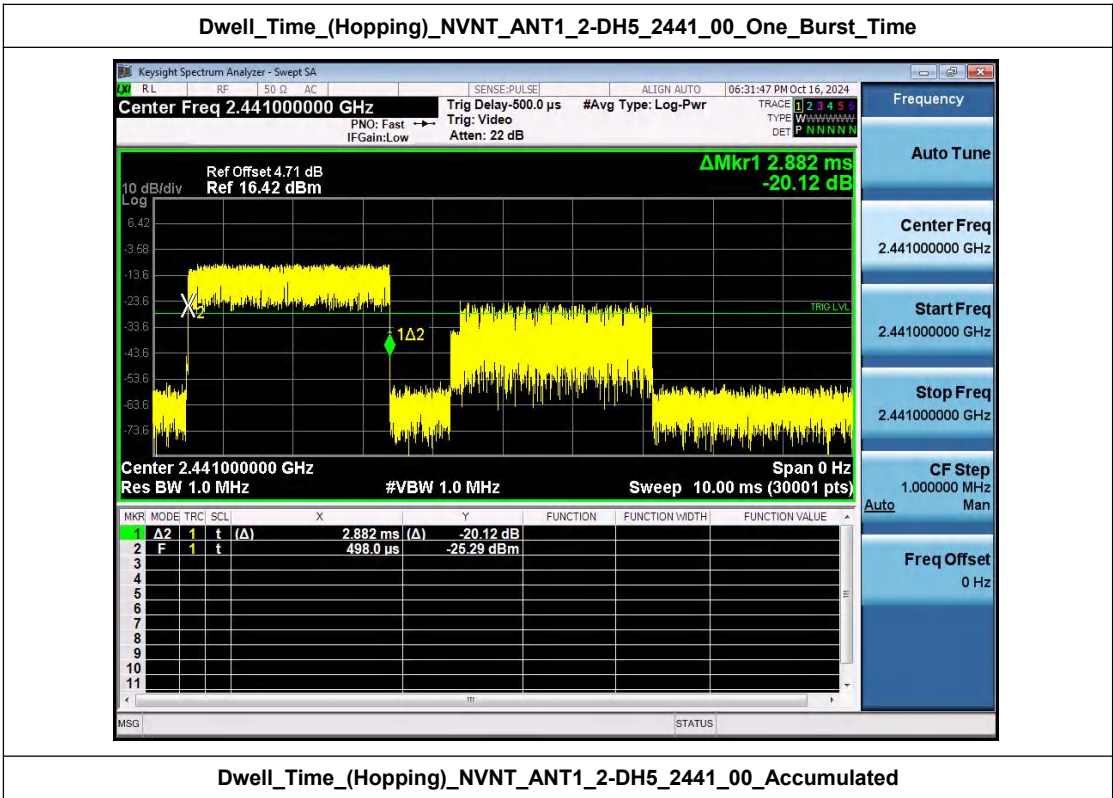




Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_Accumulated




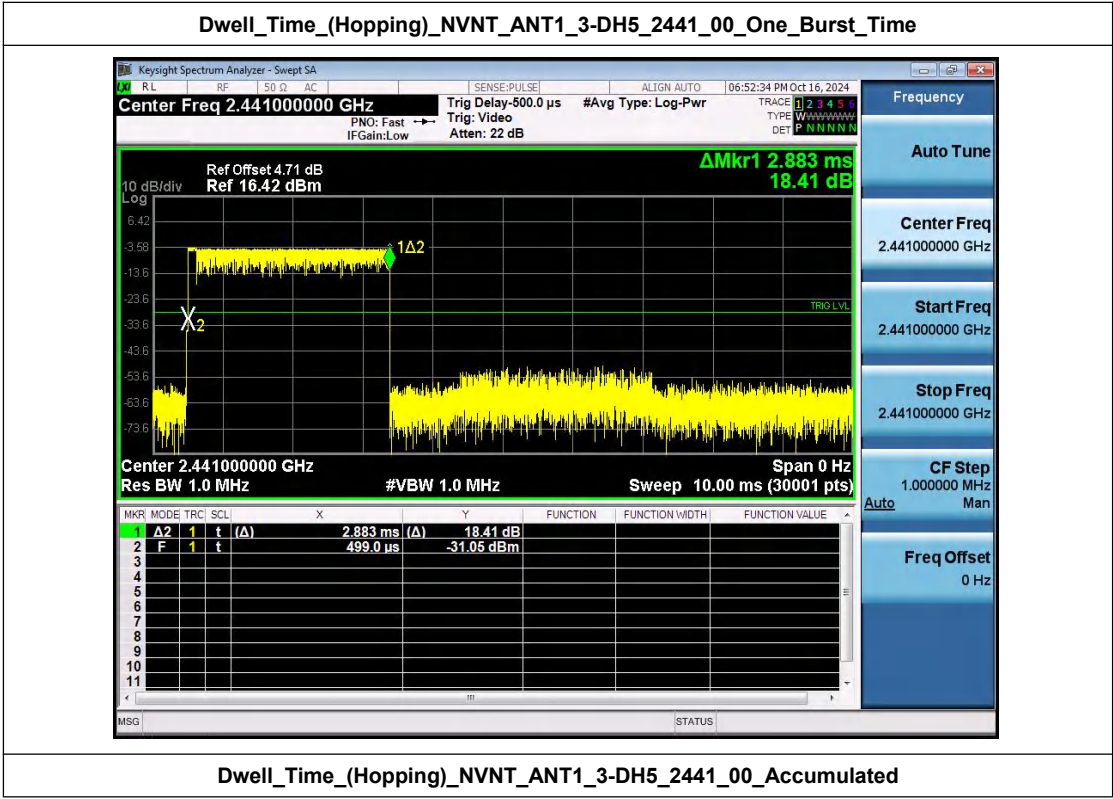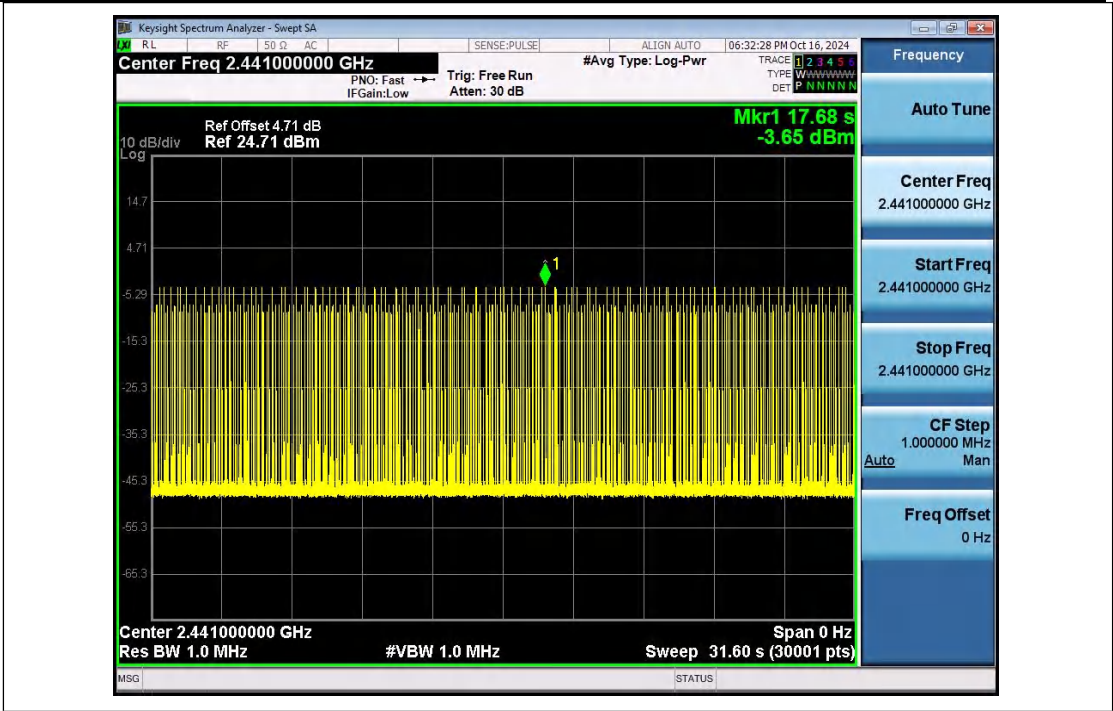

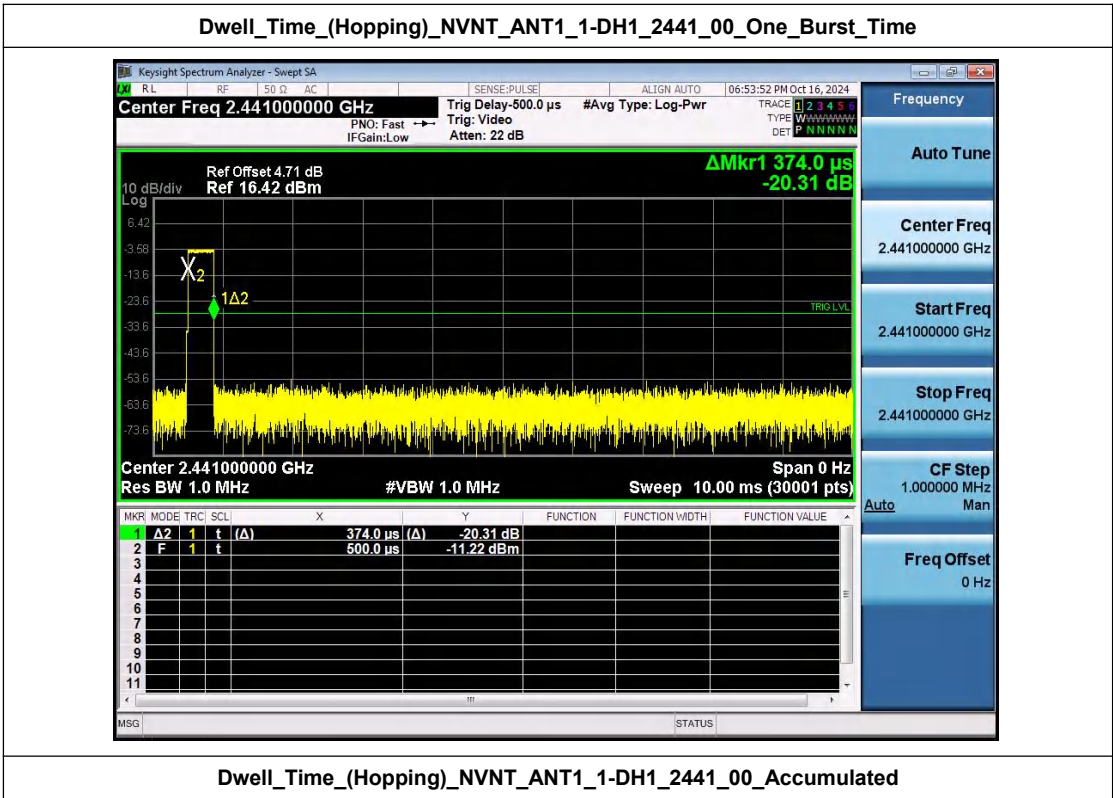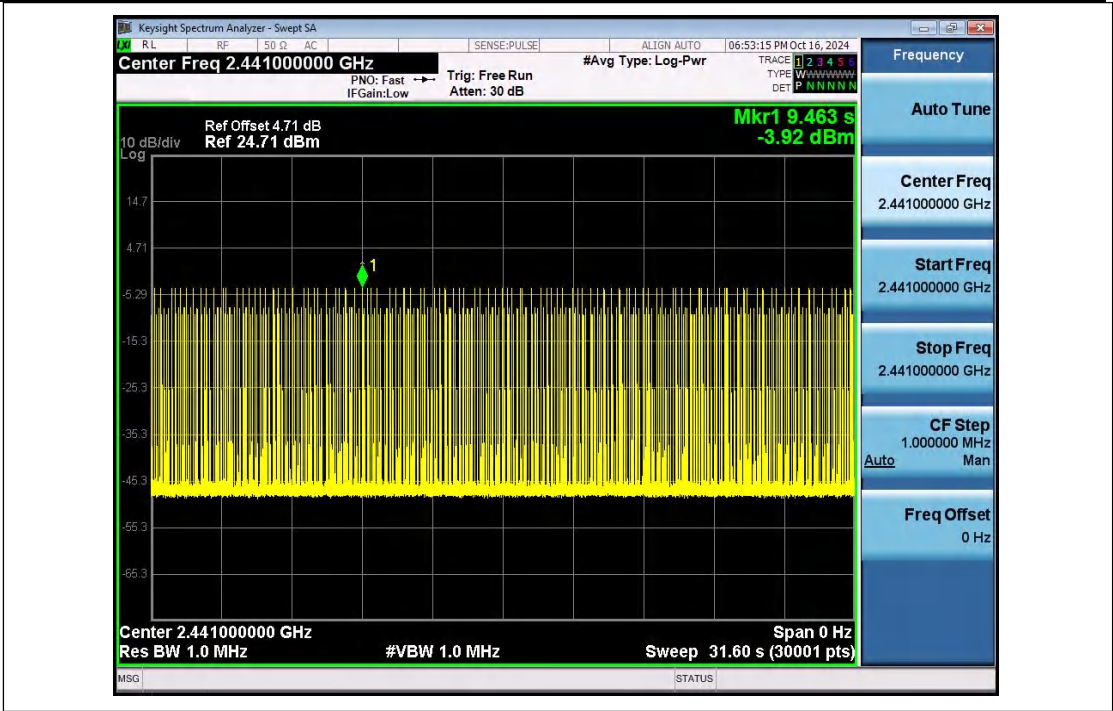


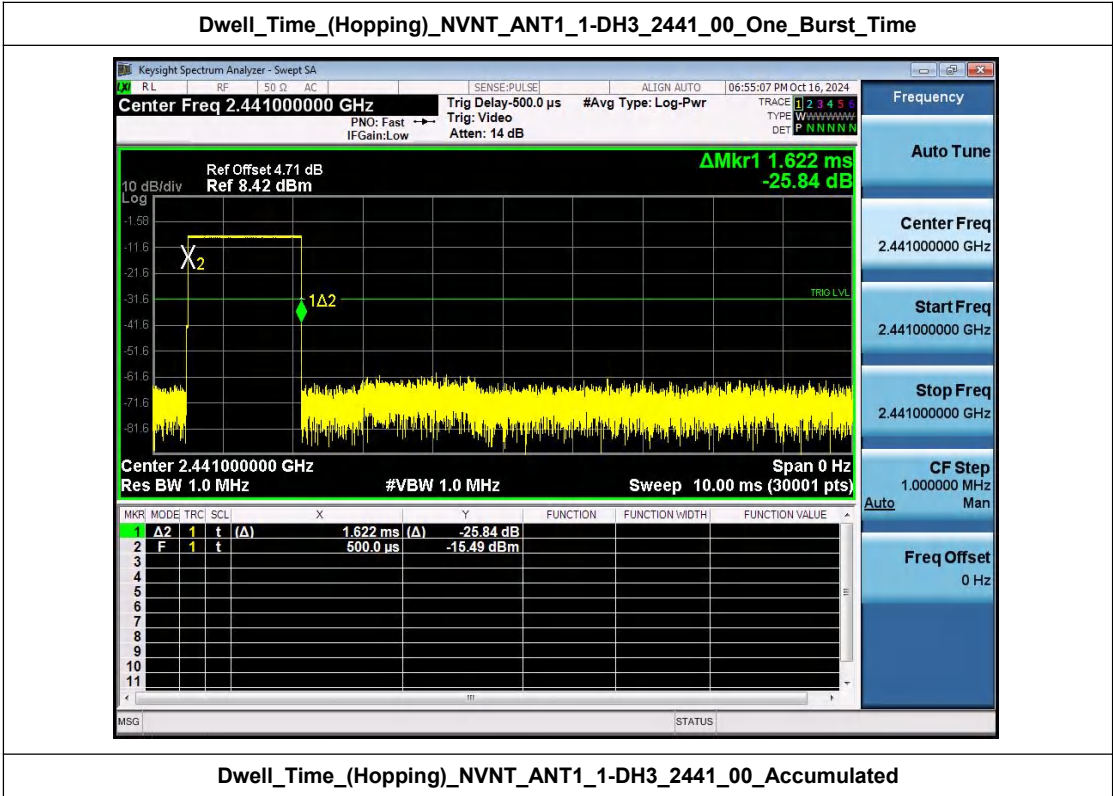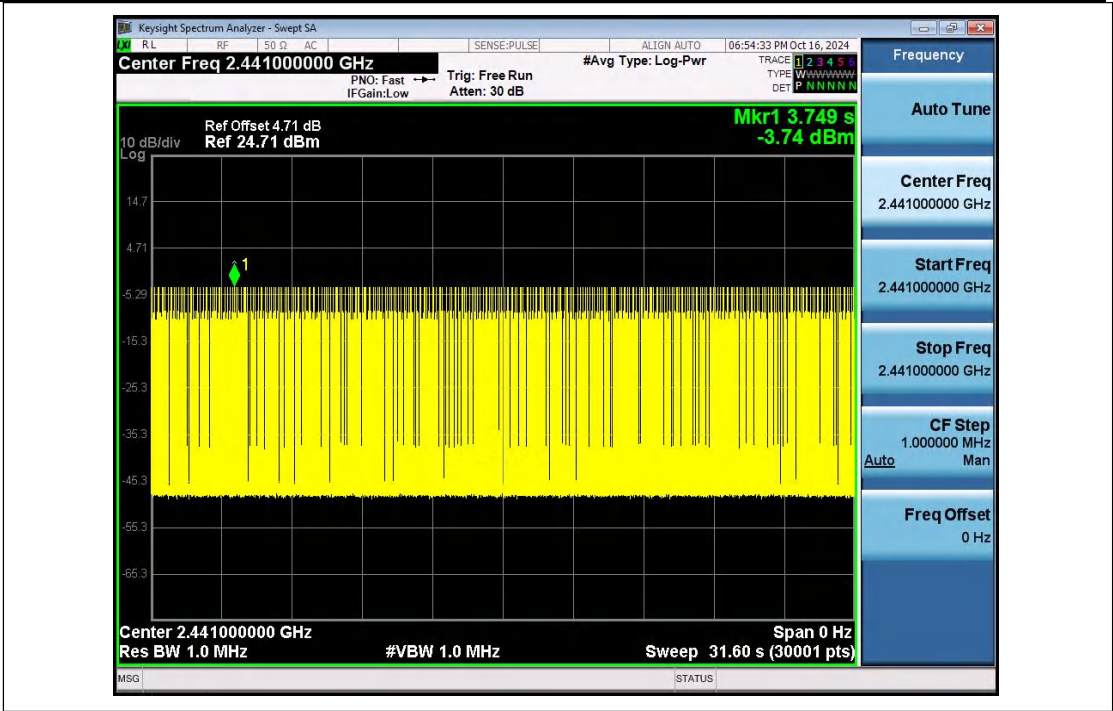

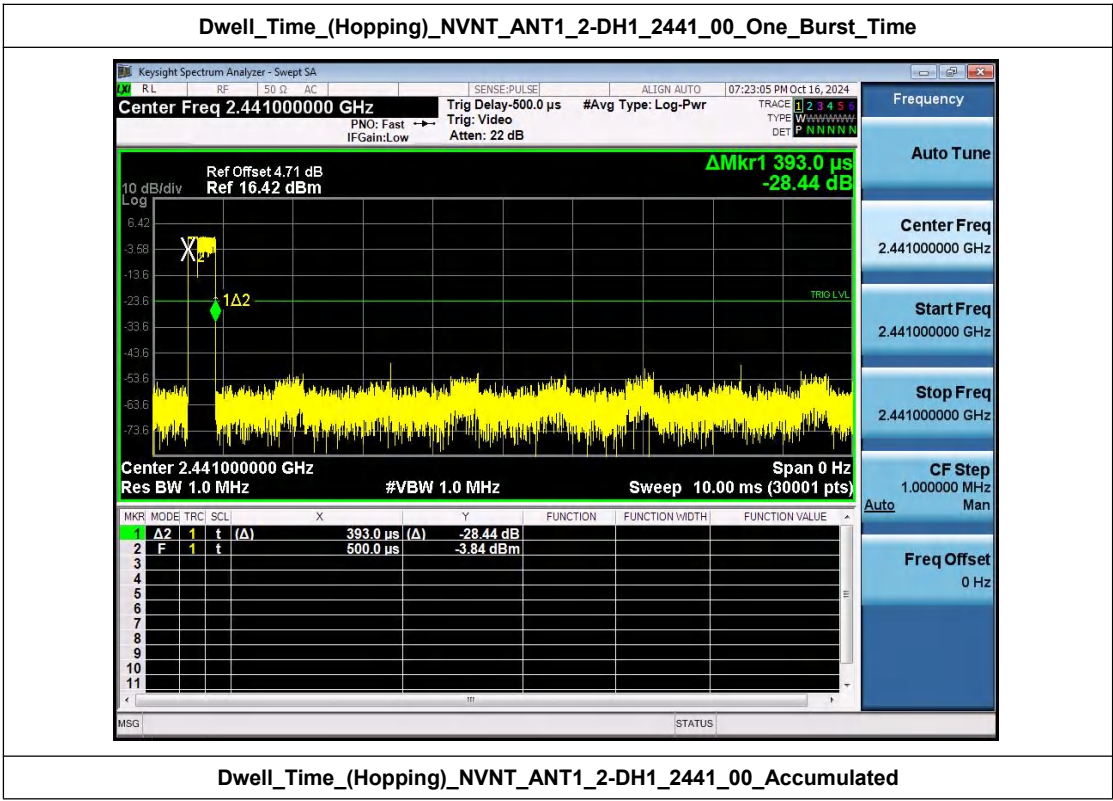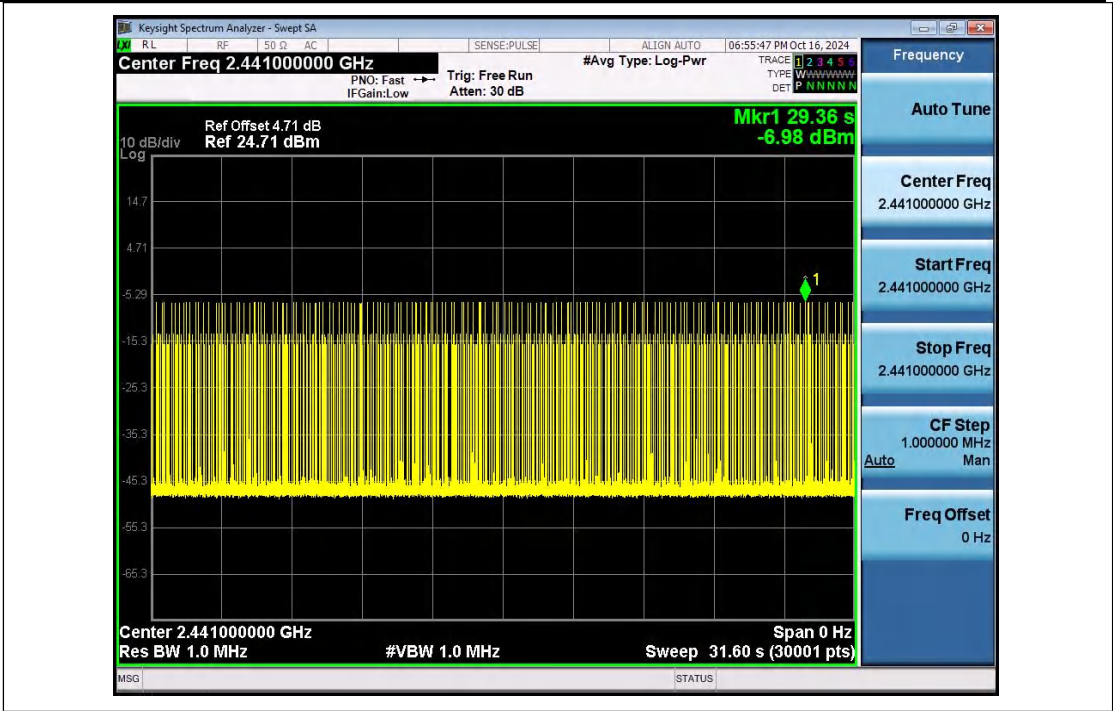


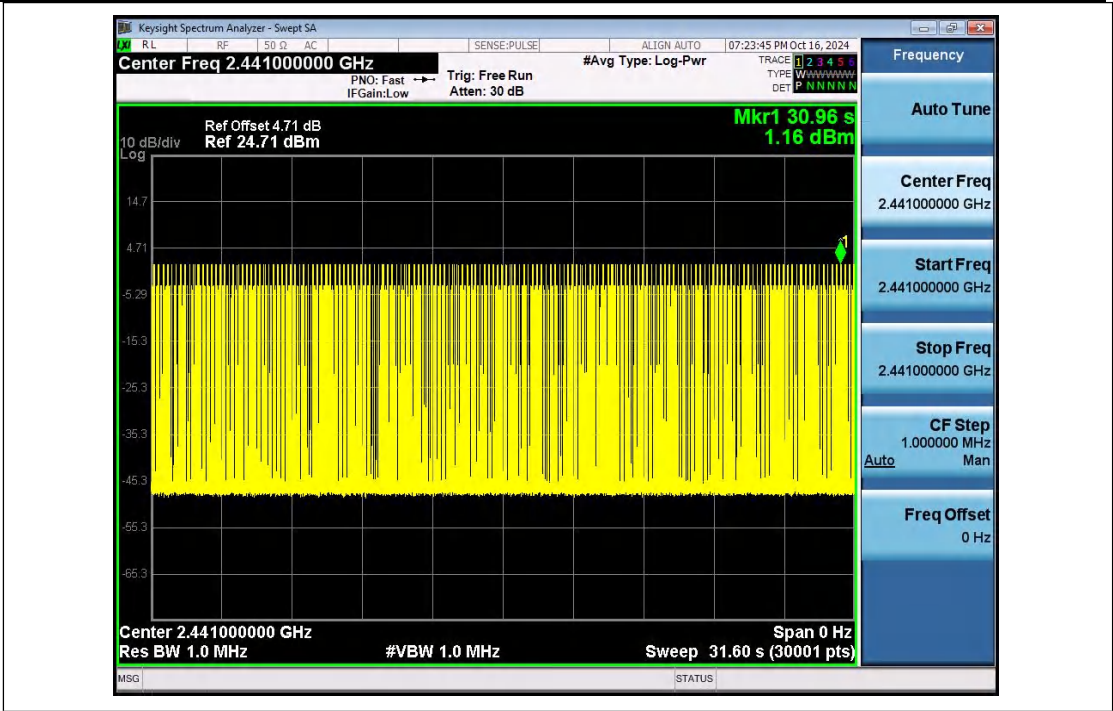



Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_One_Burst_Time

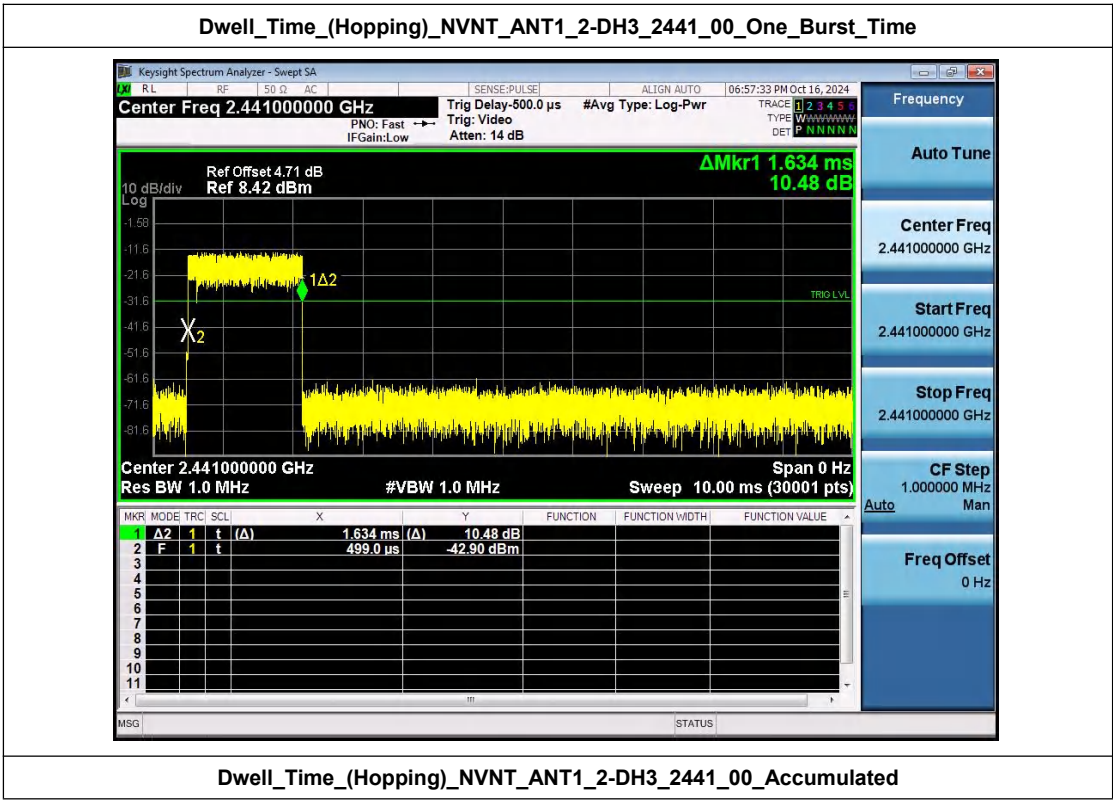


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_Accumulated



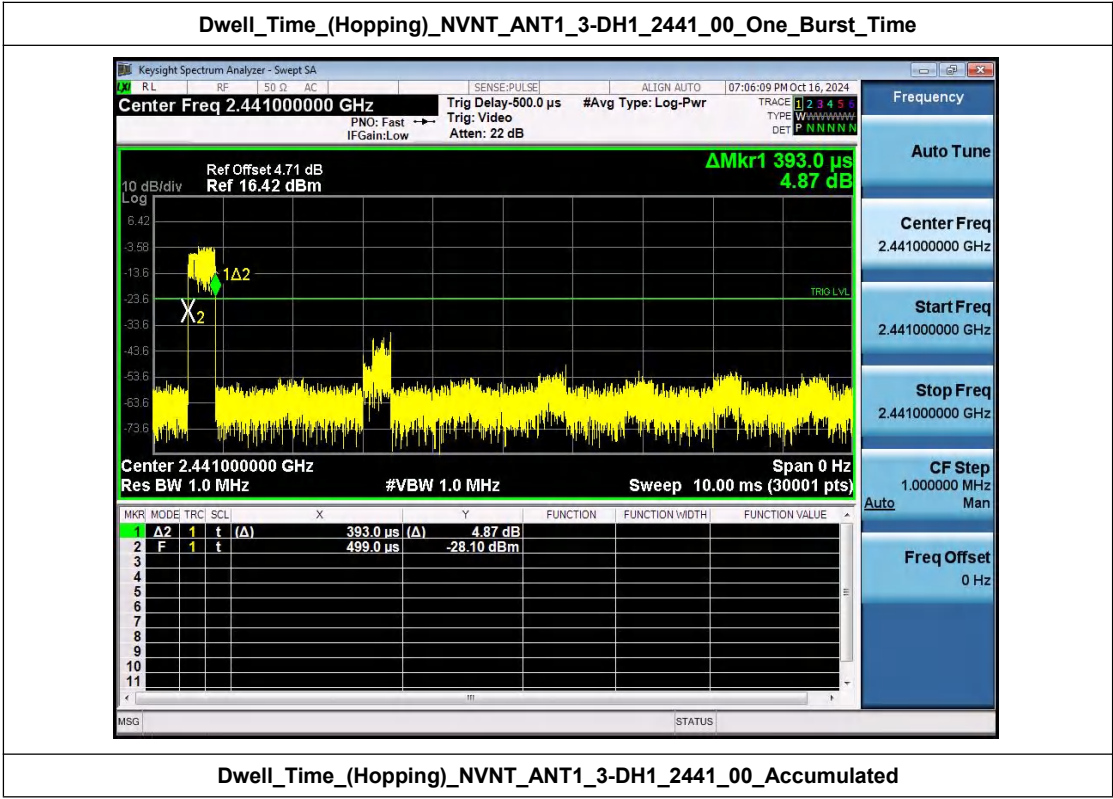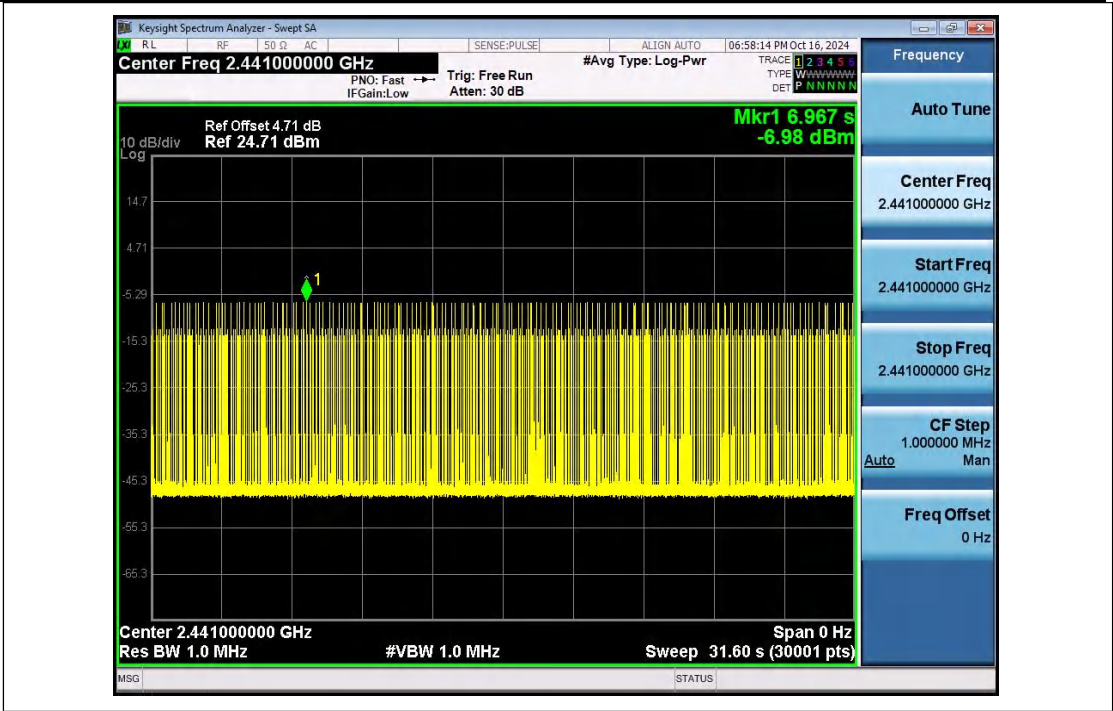

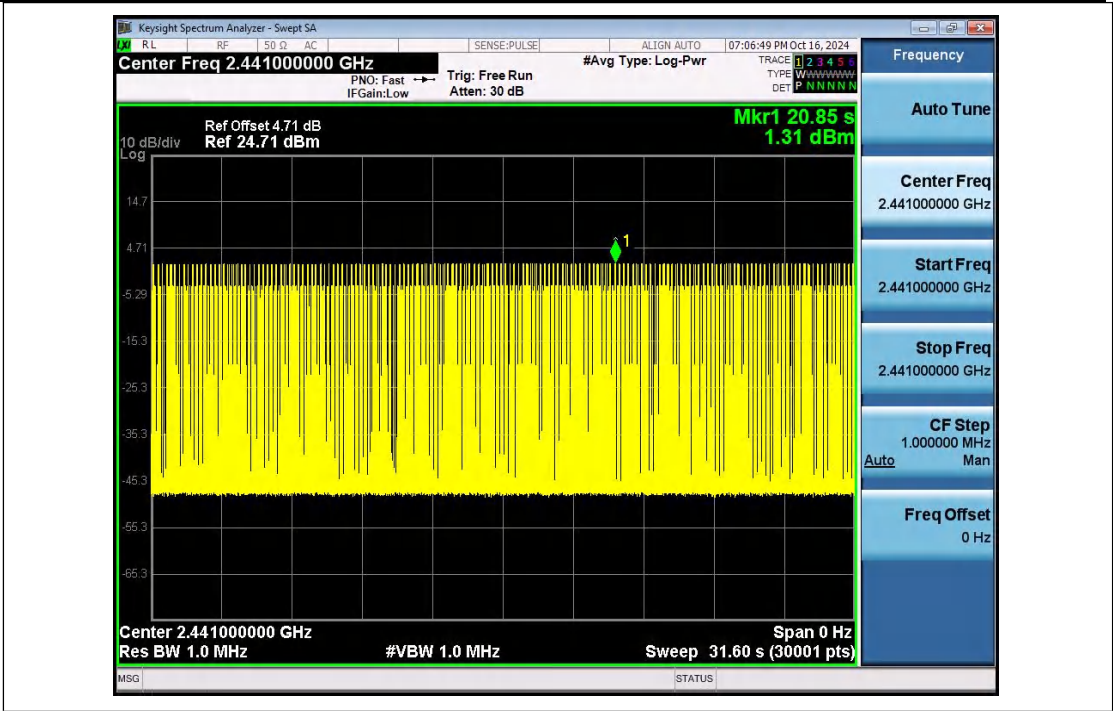


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH3_2441_00_One_Burst_Time

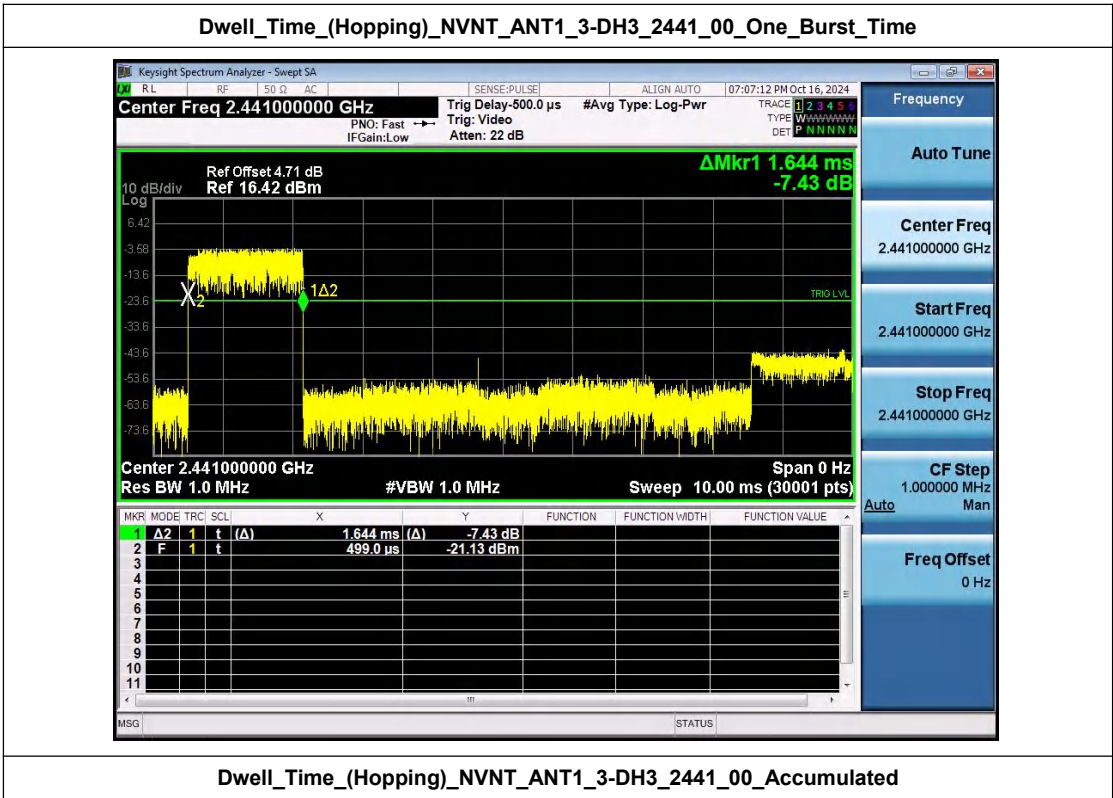

Dwell_Time_(Hopping)_NVNT_ANT1_3-DH3_2441_00_Accumulated



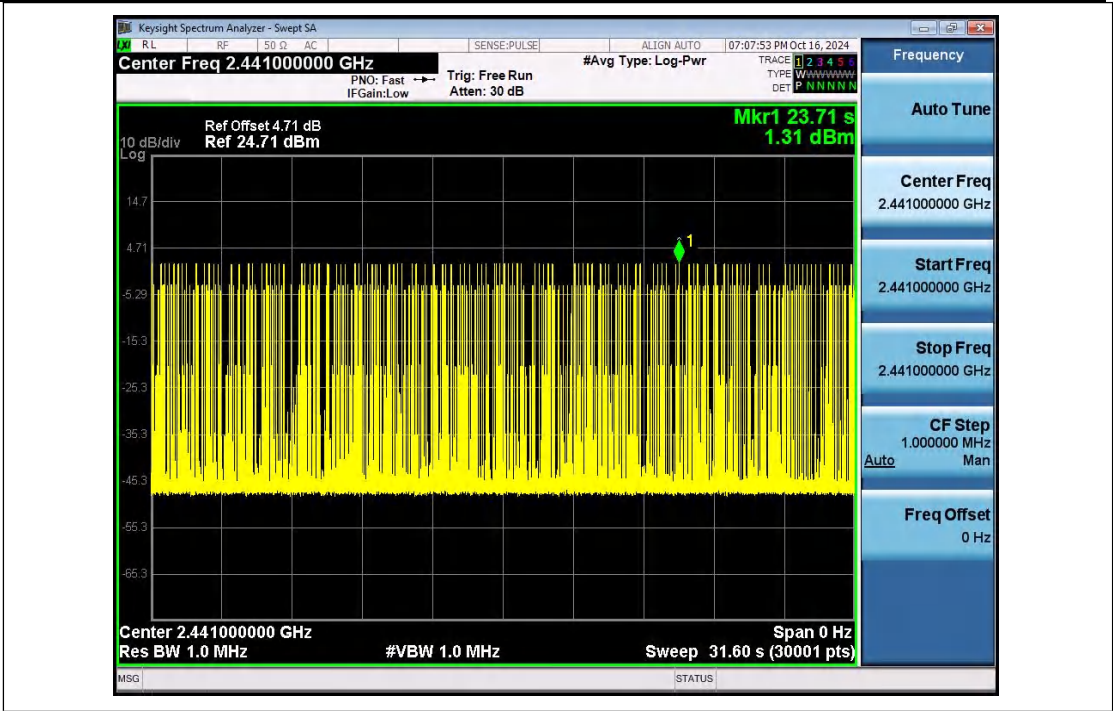

---END---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com

