

User Manual

SMART AUDIO GLASSES

Instruction

Great thanks for using our products! Please read this manual before using the product. The contents of the manual are subject to modifications for better service. Modifications due to changes of performance and functionality of the product if needed is without prior notification.
Product Name: BG-02
Model no.: BG-02
This product, easy to operate and practical, is a portable bluetooth glasses with stereo sound and an elegant appearance.
Designed by SKCT in China and manufactured in China.

I. Product Parameter


1. Frame color: Black
Lens color: Black
2. Frame material: Acetate Fiber,PC+ABS
Lens material: Nylon
3. Charging time: About 2 hours
4. Playing time: About 6 hours
5. Standby: Above 100 hours
6. Battery capacity: 120mAh*2
7. Charging current: DC5V, 200mA

II. Packing List

- Glasses*1
Charging cable*1
Glasses cloth*1
Glasses case*1
Manual*1

III. Operations

Tips: To quickly find the touch button, use your finger to slide from the middle of the glasses legs to the front until touch the button. At this time, A finger off counted as a click operation.
Separating the legs of the glasses to awake the device, within 5 seconds the left and right leg of the glasses will automatically matching up. Enters Bluetooth connection mode, which allows you to find Bluetooth devices and complete the connection.

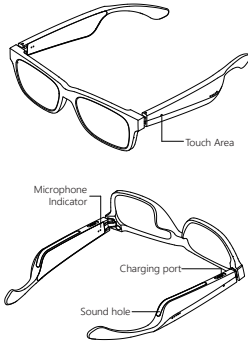

On/Off

1. Separating the legs of the glasses to awake the device, beep "prompt voice", indicator light blinks slowly.
2. Closing the legs of the glasses to shut down the device, beep "prompt voice", indicator light lasts for 1 second.
3. Disconnected to the phone for 10 minutes, the product will automatically power off, beep "prompt voice".
4. While power on, click the left or right leg 5 times, the product will power off, beep "prompt voice".

Bluetooth Pairing Connection

1. For first pairing, the glasses will automatically enter into pairing status within 5 seconds while power on, beep "searching for the devices" and the indicator light blinks quickly.
2. When power on, click button 4 times in a row and hold for 5 seconds to clear the pairing records, the beep "Factory reset successful". The indicator light blinks quickly.
3. When re-connecting succeeded, beep "prompt voice"; Also when disconnected, beep "prompt voice".
4. When no pairing record found, the device will automatically enter into searching status. When pairing record be found, the glasses will connect with the last devices.

Play Music

1. For the next track, long press the right button over 1.5 seconds.
2. For the previous track, long press the left button over 1.5 seconds.
3. Music pause/play, double click the left or right button.

Call Functions

1. To answer the call, double click the left or right button.
2. To end the calling, double click the left or right button.
3. To reject the call, long press the left or right button over 1.5 seconds
4. While on the phone, click the left or right to add-on the Third Party while holding the call;
Double-click the left or right button to end the call and accept the third-party call.
5. In a three-way call, click the left or right button to end the current call and get through the previous held call; Double-click the left or right button to hold the call and get through the previous held call.

Voice Assistant

Triple-click the left or right button to activate the assistant and voice interaction.

Charging

1. Low battery alarm, beep "prompt voice", indicator light blinks once every 10 seconds.
2. When charging, the indicator light blinks slowly. The indicator light is on when charging completed.

IV. Prompts

1. Please read the instruction manual thoroughly before using the product. Always include and keep this safety guide.
2. Fully charged before the first use.
3. When not using the battery pack for extended periods of time(every 2 weeks), please charge before using.

4. Do not wipe the lens directly, wet the lens first and then use velvet and absorbent eyeglass cloth wiping in the same direction gently. Wiping back and forth or in circular is not suggested.

V. Warnings:

1. Before using, read all the safety information to ensure proper and safe operation.
2. Only use a charging cable recommended by the manufacturer or otherwise may cause fire, explosion or other accidents.
3. In case of fire, electronic damage or even complete scrap of the product, please do not dismantle or refit the product for any reason.
4. Only use the product at ambient temperature between 0°C~35°C and keep the product as well as the accessories at temperature between -20 °C~-45°C for temperature too low or too high may cause functional faults.
5. When charging completed, disconnect the charger from the product and the charger from the socket. Do not exceed 12 hours of continuous charging time.
6. Always keep the product dry.
7. The product must not be disposed with normal household waste to avoid battery fire or explosion. For packing disposal, please observe the legal regulations in your country.
8. This product is with a built-in non-removable lithium battery, which must not be disassembled, bumped, squeezed or exposed to fire. For any serious expansion of batteries, please stop using.
9. Maintain a distance between the product components containing the magnet (the glasses legs and the charging cable) and metal objects to avoid danger of electrical short-circuit which will lead to the overheating of the battery and cause personal injuries such as skin burns.
10. The product must not be exposed to or thrown into fire to avoid explosion.
11. Do not expose the product to sunlight for a long time to avoid corrosion or deformation.
12. Only use the product complying with the relevant laws and regulations, and do not use in the following environments.

- Do not use the product in the vicinity of gas stations, oil depots, chemical warehouses, etc., where flammable or explosive gas or chemicals are stored.
- Do not use this equipment in hospital operating rooms, emergency rooms, intensive care units, etc for the magnetic fields could cause interference with cardiac pacemakers implanted defibrillators (ICDs), hearing-aid, cochlear and other implants. Always keep a at least 15-Centimeter distance to the peacemaker.

- Please consult your physician and the device manufacturer if you want to use this device near personal medical equipment.

- Please do not use the product in an environment that requires special attention such as in traffic, driving.

- Do not use the product outdoors during thunderstorms to avoid lightning strikes.

- Do not use the charger in a high humidity area such as a bathroom, as electric shock, personal injury, fire and the charger damage may result.

- Please comply with any legal requirements that expressly prohibit the use of the product in any environment.



Do not listen at high volume for long periods of time to prevent hearing damage.

Vi. FCC Warning.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

介绍

非常感谢选择我们的产品! 请在使用产品前阅读使用手册。产品特征、功能变更使用手册将会进行修正且不另外通知。
设备名称: BG-02
产品型号: BG-02
本蓝牙产品音质优秀、做工优良,操作简单、易上手。

I. 产品参数


1. 镜框颜色: 黑色
镜片颜色: 黑色
2. 镜框材质: 醋酸纤维, PC+ABS
镜片材质: 尼龙
3. 充电时间: 约2 小时
4. 播放时间: 6 小时以上
5. 待机时长: 超过 100 小时
6. 电池容量: 120mAh*2
7. 充电电流: DC5V, 200mA

II. 包装清单

- 眼镜*1
充电线*1
眼镜布*1
眼镜盒*1
使用手册*1

III. 操作

小技巧: 如何快速找到触摸区域。利用手指从眼镜腿的中间向前滑动直到镜腿上的小圆点, 然后去单击这个圆点所在的区域去操作眼镜。此时手指抬起后, 视为操作一次; 如需连续操作两下, 需在上次操作的基础上抬起手指再次按下。
打开眼镜腿, 设备将会自动开机约5s将会进入配对模式, 然后从你的蓝牙设备清单中找到眼镜并点击连接去完成眼镜与设备的连接。

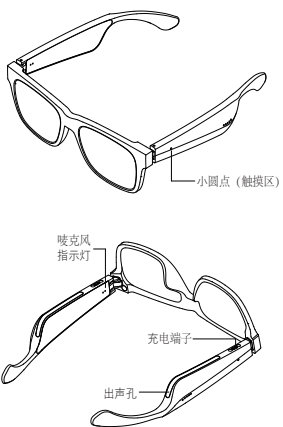

开关机

1. 打开左右镜腿, 提示“叮铃”, 指示灯慢闪, 设备开机。
2. 关闭左右镜腿, 提示“叮铃”, 指示灯亮1s, 设备关机。
3. 10分钟内未连接设备, 眼镜将自动关机。
4. 开机后, 单日连续单击左镜腿或右镜腿5次, 设备关机。

蓝牙连接

1. 首次使用, 眼镜开机后5s内将会自动进入配对模式, 并播放提示音“searching for the devices”, 指示灯快闪。
2. 开机后, 单击3次+1次长按s以上, 眼镜将重置/恢复出厂设置, 并播放提示音“Factory reset successful”, 指示灯快闪。
3. 设备回连成功将会播放提示音; 同样, 设备断连时播放提示音。
4. 眼镜回连, 当无法找到最后一次连接的设备时, 眼镜将进入配对模式。当找到最后一次连接的设备时, 眼镜将会与其连接。

播放音乐

1. 下一曲, 长按右镜腿1.5s以上。
2. 上一曲, 长按左镜腿1.5s以上。
3. 音乐暂停/播放, 双击左镜腿或右镜腿。

打电话

1. 接电话, 双击左镜腿或右镜腿。
2. 挂电话, 双击左镜腿或右镜腿。
3. 拒接电话, 长按左镜腿或右镜腿1.5s以上。
4. 第三方来电时, 单击左镜腿或右镜腿接听第三方来电并保持上一通话; 双击左镜腿或右镜腿在两个通话之间切换; 单击挂断当前通话, 双击挂断最后一个通话。

语音助手

三击左镜腿或右镜腿。

充电

1. 低电报警, 播放提示音, 指示灯每10s闪烁一次。
2. 充电中, 指示灯慢闪; 充电完成后, 指示灯长亮。

IV. 提示

1. 使用本产品前请仔细阅读说明书, 并保留本说明书。
2. 首次使用, 请先将本产品充满电。
3. 如果产品长期 (超过两周) 不充电, 使用前请对其充电。
4. 较脏的镜片不要直接擦拭, 应先镜片打湿, 再用眼镜布拭干。尽量使用绒面且吸水性较强眼镜布轻轻抹拭干净, 不能用大力擦拭。擦拭时, 眼镜布要朝着同一个方向擦拭, 不能来回擦, 也不能在镜片上转圈擦拭。

V. 警告

1. 在使用本设备前, 请先阅读所有安全信息以确保正确和安全使用。
2. 使用未经本制造商认可的充电线, 可能引发火灾、爆炸或其它危险。
3. 请勿以任何理由拆除或维修改装本产品, 否则可能会导致起火, 电子击穿甚至彻底损坏本产品。
4. 请在温度0°C ~ 35°C 范围内使用本设备, 在-20°C ~ 45°C 范围内存放设备及其配件。当环境温度过低或过高时, 可能会引起设备故障。
5. 如充电完毕, 请断开充电器与本产品的连接, 并从电源插座上拔掉充电器。连续充电时间请勿超过12小时。
6. 请勿将产品接触液体弄湿, 或浸泡在液体里。
7. 请不要将产品扔进生活垃圾中, 若处置不当可能会导致电池起火和爆炸。请遵守当地规定处理本产品及其它附件。
8. 本产品内置不可拆卸的锂电池, 电池禁止拆卸、撞击、挤压或投入火中, 若出现严重膨胀, 请勿断续使用。

9. 请勿将磁吸式充电线或镜腿磁吸式充电口靠近金属物体, 磁铁吸附到金属物体, 可能会引起触点短接而导致危险, 避免电池过热引起烫伤、烧伤等人身伤害。
10. 请勿将本产品或电池投入火中, 否则会引起火灾或爆炸。
11. 不能将眼镜放在阳光下长时间暴晒, 否则容易变形、老化、折断。
12. 请遵循相关法律法规, 不要在以下环境中使用:
 - 如加油站, 油库, 化学仓库附近等存储有易燃易爆油气或化学品的环境, 严禁使用设备。
 - 请勿在医院手术室、急救室、深切治疗部等所使用此设备, 为避免干扰医疗仪器工作, 使用此设备时请远离心脏起搏器、助听器、植入耳蜗等医用设备, 请保持此设备和起搏器之间超过15厘米的距离。
 - 若要在个人医疗设备附近使用此设备, 请咨询医师和设备制造商。
 - 请遵守有关驾车时使用此设备的所有安全警告和规定。
 - 雷雨天气时为避免雷击事故请勿在室外使用。
 - 请勿在浴室等高湿度的地方使用充电器, 否则会导致触电, 人身伤害, 起火和充电器损坏。
 - 请遵守在任何环境里明确禁止使用的相关法律法规规定。



为避免听力受损, 请勿长时间使用高音量。

FCC声明

本设备经测试证明符合FCC规则第15部分中关于B类数字设备的限制。这些限制旨在为住宅安装中的有害干扰提供合理的保护。本设备会产生并使用辐射射频能量, 如果未按照说明进行安装和使用, 可能会对无线电通信造成有害干扰。但是, 不能保证在特定安装中不会发生干扰。如果此设备确实对无线电或电视接收造成有害干扰 (可以通过打开和关闭设备来确定), 则鼓励用户尝试通过以下一种或多种措施来消除干扰:

- 重新调整或摆放接收天线。
- 增加设备和接收器之间的距离。
- 将设备连接到与接收器不同电路的插座上。
- 向经销商或有经验的无线电技术人员咨询以获得帮助。

此设备符合FCC规则的第15部分。操作必须符合以下两个条件:

- (1) 此设备不会造成有害干扰。
- (2) 此设备必须接受收到的任何干扰, 包括可能导致意外操作的干扰。

未经负责合规方明确批准的更改或修改可能会使用户丧失操作设备的权限。射频暴露信息

此设备符合政府对无线电波辐射的要求。

此设备的设计和制造不超过美国联邦通信委员会设定的暴露于射频 (RF) 能量的发射极限。

Quick Guide / 快速指南

Instruction / 说明	Operation / 操作	Remark / 备注
ON/开机	Separate glasses legs 打开镜腿	—
OFF/关机	Close glasses legs 合上镜腿	—
Answer/接电话	Double click/双击	—
End call/挂电话	Double click/双击	—
Reject/拒接电话	Long press/长按	—
Play/Pause 播放/暂停	Double click/双击	—
Previous Track 上一曲	Long press L side 长按左边	—
Next Track 下一曲	Long press R side 长按右边	—
Voice Assistant 语音助手	Triple click/三击	—
Rest 重置	Triple click + One press 三击+单击长按	This function enable when none connectiond with any devices 没有连接设备的情况下