

87 mm

696 mm

Insta360 App

Tutorials
教学视频

User Manual
用户手册

<https://www.ista360.com/guide/goutra>

Press and hold the lock to remove the Standalone Camera.
长按解锁键的同时取下单相机

Align the Standalone Camera with the pogo pins when returning it to the Action Pod.
单相机放回拓展舱时请对准信号触点

Activation / 首次开机

02

Action Pod / 拓展舱结构

Pip Touchscreen
可翻转触控屏

Indicator Light
指示灯

Pogo Pins
Pogo Pins 触点

Shutter Button
快门按键

Power Button
电源按键

Quick Button
自定义按键

Lanyard Port
挂绳口

Speaker
扬声器

Lock
解锁键

USB-C Port
USB-C 端口

03

Standalone Camera / 单相机结构

Lens
镜头

Microphone
麦克风

Ambient Light Sensor
环境光传感器

Standalone Camera Button
单相机按键

Indicator Light
指示灯

Lanyard Port
挂绳口

Indicator Light
指示灯

Pogo Pins
Pogo Pins 触点

Speaker
扬声器

microSD Card Slot
插入 microSD 卡

04

Landscape and Portrait Modes / 横竖屏切换

16:9
Landscape Mode
横屏拍摄

9:16
Portrait Mode
竖屏拍摄

05

Waterproofing Guidelines / 防水说明

The Action Pod is splashproof. Do not use it underwater.
拓展舱仅防泼溅，不防水，请勿水下使用

The Standalone Camera is waterproof to 10 meters.
单相机裸机防水 10 米

06

Action Pod Buttons / 拓展舱按键

Shutter Button (Activates QuickCapture when camera is off)
快门按键 (无需开机即可快速开拍)

Power Button
电源按键

Quick Button (Function can be customized)
自定义按键 (功能可在拓展舱上自定义)

Please turn over
请翻面

07

Insta360 GO Ultra

Standalone Camera Buttons / 单相机按键

Standalone Camera Button (Activates QuickCapture when camera is off)
单相机按键 (无需开机即可快速开拍)

The function of this button can be customized on the Action Pod.
该按键功能可在拓展舱上自定义

Error
异常

Recording
录像中

Charging
充电

Standby
待机

08

Other Features / 其他功能

Camera Reboot
强制重启相机

Remotely control the Standalone Camera with the Action Pod.
可在拓展舱内远程预览单相机的拍摄画面、远程操控拍摄模式等

09

Magnet Pendant / 磁吸挂绳

Remove the sticker to reveal the magnetic surface.
请撕掉贴纸，此面为磁吸面

Rotate the gray area to adjust the shooting angle.
旋转灰色硅胶部分可实现俯仰角度调整

Adjust the length of the lanyard cord.
调节挂绳的长度

Adjust the pendant to the desired angle, then place under your clothes.
调节合适角度后将磁吸挂绳佩戴在衣服里

10

Landscape and Portrait Modes When Using the Magnet Pendant

16:9
Landscape Mode
横屏拍摄

9:16
Portrait Mode
竖屏拍摄

Check the position of the Indicator Light and Lens to identify shooting mode.
佩戴磁吸挂绳后可通过指示灯和镜头位置来辨别横竖拍摄模式

11

Magnet Pendant Safety Cord / 快拆防丢绳

Press the buckle and remove the quick-release anchor.
按压卡扣，将快拆豆取出

Bend the quick-release anchor cord, thread it through the hole in the camera, then secure it.
将快拆豆绳子拧至弯曲，穿过孔位后固定

Wrap the cord around a lanyard or strap, and then put the buckle through the loop.
将防丢绳固定在磁吸挂绳或背包带上

Adjust the length of the Magnet Pendant Safety Cord with the slider.
可通过调节扣调整防丢绳的长度

12

Easy Clip / 简易夹

Adjustable 180° tilt range,
180度可调节倾斜范围，满足多角度使用需求

Attach to a hat to shoot POV footage.
佩戴在帽子上可拍摄第一人称视角

13

QuickStart Guide
快速入门指南

压线

Insta360 GO Ultra

Standalone Camera

Safety Guidelines

Safety Information

Disclaimer

Please read this Disclaimer carefully. Using this product means that you acknowledge and accept the terms of this disclaimer. By using this product, you hereby acknowledge and agree that you are solely responsible for your own conduct when using this product and any consequences thereof. You agree to use this product only for proper and lawful purposes. You understand and agree that Arashi Vision Inc. (hereinafter referred to as 'Insta360') accepts no liability for any and all misuse, consequences, damages, injuries, penalties, or any other legal responsibility directly or indirectly incurred by your using this product and associated accessories. Before every use, make sure that your accessories are functioning properly. If there's any damage or irregularity, stop using them immediately. Within the scope of state laws and regulations, Insta360 reserves the right of final explanation and revision for the commitment.

Warnings

- ① Insta360 GO Ultra contains magnets. Keep it away from pacemakers and other devices affected by magnetic interference.
- ② Only use GO Ultra in an environment with a temperature range of -4°F to 104°F (-20°C to 40°C).
- ③ After use, do not charge Go Ultra until the battery cools to room temperature. Only charge in an environment between 32°F and 140°F

(0°C and 40°C). Charging in extreme temperatures may damage the battery.


- ④ Do not leave Go Ultra near heat sources such as a radiator or furnace, nor inside a vehicle on hot days.
- ⑤ If left unused for 30 days or longer, the battery may be depleted. Charge the battery regularly to ensure proper operation.
- ⑥ Do not disassemble or repair Go Ultra by yourself.
- ⑦ Do not drop or strike Go Ultra, and do not place it under heavy objects.
- ⑧ Ensure the charging points on the standalone camera are clean and undamaged.
- ⑨ Do not expose the charging points on the standalone camera to perfumes, cosmetics, or other chemicals. Chemical residues may corrode metal surfaces, resulting in poor connectivity.
- ⑩ Clean the charging points on the standalone camera with a soft, dry cloth. Do not use any liquid detergents as this may cause corrosion and rust.

Notes

- ① Do not use Go Ultra in locations with sand, dust and other particulate matter.
- ② Do not use Go Ultra in extreme weather conditions.
- ③ Do not leave Go Ultra or the battery in an extremely hot or cold environment. Cold or high temperatures may temporarily shorten battery life or cause the product to stop working.
- ④ Avoid dramatic temperature or humidity changes as condensation may form on or within Go Ultra.
- ⑤ Do not use Go Ultra outside the recommended temperature range or in high humidity environments such as saunas, steam rooms, hot tubs

and hot springs for an hour or longer.

- ⑥ The standalone camera is waterproof to 32.8ft (10m) and can be used underwater for a maximum of one hour.
- ⑦ To ensure the standalone camera is waterproof, ensure that the lens guard is installed correctly.
- ⑧ Use the Insta360 Dive Case when using Go Ultra during high-intensity water-based activities such as diving and surfing. The product can be damaged and waterproofing can be compromised by the impact of entering water at high speed. Please refer to the manual of the Dive Case for detailed installation instructions.
- ⑨ To ensure the waterproof performance of the standalone camera, securely close the microSD card cover. When it is closed correctly, no part of the orange markings will be visible. If you still see orange markings, lift the microSD card cover and close it again.

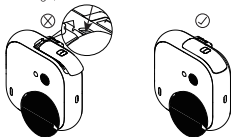

- ⑩ Ensure the standalone camera is dry before removing the microSD card to prevent water from entering the slot.
- ⑪ After using the standalone camera in saltwater, rinse the camera with fresh water then soak in fresh water for 10 minutes. After this, wipe the camera with a soft, dry cloth and allow it to dry naturally in a cool, well-ventilated area.
- ⑫ Do not use a hair dryer to dry the speaker or microphone as this may

damage the internal waterproof membrane inside Go Ultra.

- ⑬ When the standalone camera is wet, the wind guard's noise reduction capabilities and the microphone's audio quality will be affected. If the standalone camera gets wet but does not get fully submerged, leave it for 6–8 hours to dry before using it again. If the standalone camera does get fully submerged, leave it to dry for at least 24 hours before using it again.
- ⑭ Do not use GO Ultra in environments with strong magnetic fields, such as MRI rooms.

Specifications

Name	Insta360 GO Ultra Standalone Camera
Model	CINSABEA
Operating temperature	–4°F to 104°F (–20°C to 40°C)
Charging temperature	32°F to 104°F (0°C to 40°C)
Model	CINSABEA
Input	5V $\equiv$ 3A
Bluetooth	Operation frequency: 2400MHz-2483.5MHz
	Output power (E.I.R.P.): <10dBm
Wi-Fi	Operation frequency
	2.4GHz Wi-Fi: 2400MHz–2483.5MHz

Wi-Fi	5GHz Wi-Fi: 5150MHz–5250MHz 5250MHz–5350MHz 5470MHz–5725MHz 5725MHz–5850MHz
	Output power (E.I.R.P.) 2.4GHz Wi-Fi: <13dBm (FCC/CE/SRRC/MIC) 5GHz Wi-Fi: 5150–5250 MHz: <20 dBm (FCC/CE/ SRRC/MIC) 5250–5350 MHz: <20 dBm (FCC/CE/ SRRC/MIC) 5470–5725 MHz: <20 dBm (FCC/CE/ SRRC/MIC) 5725–5850 MHz: <20 dBm (FCC/ SRRC) <13.97 dBm (CE)
	Protocol: 802.11 a/b/g/n/ac/ax
Battery	Capacity: 500mAh
	Energy: 1.935Wh

Compliance Information

Apple, Apple Find My, Apple Watch, iPad, iPadOS, iPod touch, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

FCC Statement

Supplier's Declaration of Conformity

Product Name: Insta360 GO Ultra Standalone Camera

Model Number: CINSABEA

Responsible Party: Arashi Vision (U.S.) LLC

Responsible Party Address: 2323 Main St, Unit 16, Irvine, CA 92614, United States

Website: www.insta360.com

We, Arashi Vision (U.S.) LLC, being the responsible party, declares that the above mentioned model was tested to demonstrate complying with all applicable FCC rules and regulations.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC SAR

The device has been SAR tested and meets SAR requirements. The distance between the user and product antenna should be no less than 5mm.

ISED STATEMENT

CAN ICES-(B) / NMB-(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) L'appareil ne doit pas produire

de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been SAR tested and meets SAR requirements. The distance between the user and product antenna should be no less than 5mm.

Le dispositif a été testé en termes de SAR et répond aux exigences en matière de SAR. La distance entre l'utilisateur et l'antenne du produit doit être d'au moins 5 mm.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

KC Compliance Notice

해당 무선설비는 운용 중 전파혼신 가능성이 있음 .

해당 무선설비는 운용 중 전파 혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다 .

EU&UK Declaration of Conformity



Declaration of Conformity

Arashi Vision Inc. hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the EU Declaration of Conformity is available online at <https://>

www.insta360.com/euro-compliance.

RF Exposure Information (SAR)

This device is in compliance with Specific Absorption Rate (SAR) limits for general population/uncontrolled exposure (Localized 10-gram SAR for head and trunk, limit: 2.0W/kg) specified in Council Recommendation 1999/519/EC, ICNIRP Guidelines, and RED (Directive 2014/53/EU).

Konformitätserklärung

Arashi Vision Inc. erklärt hiermit dass dieses Produkt die grundlegenden Anforderungen und andere relevante Bestimmungen der Richtlinie 2014/53/EU erfüllt. Eine Kopie der EU Konformitätserklärung ist online unter <http://www.insta360.com/euro-compliance> verfügbar.

Informationen zur HF-Exposition (SAR) Dieses Gerät entspricht den Grenzwerten für die spezifische Absorptionsrate (SAR) für die Allgemeinbevölkerung/unbeaufsichtigte Exposition (lokal gemittelte 10-Gramm-SAR für Kopf und Rumpf, Grenzwert: 2,0 W/kg), festgelegt in der Ratsempfehlung 1999/519/EG, den ICNIRP-Richtlinien und der RED-Richtlinie 2014/53/EU.

Déclaration de conformité

Arashi Vision Inc. déclare par la présente que ce produit est conforme aux exigences essentielles et autres dispositions pertinentes de la directive 2014/53/EU. Une copie de la déclaration de conformité UE est disponible en ligne à l'adresse <http://www.insta360.com/euro-compliance>.

Informations sur l'exposition aux RF (DAS)

Cet appareil est conforme aux limites de Débit d'Absorption Spécifique (DAS) pour la population générale/exposition non contrôlée (DAS localisé sur 10 grammes pour la tête et le tronc, limite : 2,0 W/kg) spécifiées dans la Recommandation du Conseil 1999/519/CE, les Directives ICNIRP et la Directive RED 2014/53/UE.

PRÉCAUTIONS D'USAGE DE L'APPAREIL

N'utilisez pas l'appareil dans un hôpital, un avion ou un équipement

automobile en raison des radiofréquences qui peuvent produire des interférences.

Maintenez une distance minimale de 15 cm entre votre appareil et un stimulateur cardiaque pour éviter toute interférence.

Eloigner les équipements radioélectriques du ventre des femmes enceintes.

Eloigner les équipements radioélectriques du bas-ventre des adolescents.

Le débit d'absorption spécifique (DAS) local quantifie l'exposition de l'utilisateur aux ondes électromagnétiques de l'équipement concerné.

Le DAS maximal autorisé est de 2 W/kg pour la tête et le tronc et de 4 W/kg pour les membres.

La ou les valeurs du débit d'absorption spécifique pour l'Appareil photo autonome : DAS tête : 0,111 W/kg, DAS tronc: 0,45 W/kg, DAS membre : 0,45 W/kg.

Dichiarazione di conformità

Arashi Vision Inc. dichiara che questo prodotto è conforme ai requisiti essenziali e ad altre disposizioni pertinenti della direttiva 2014/53/UE. Una copia della dichiarazione di conformità UE è disponibile online all'indirizzo <http://www.insta360.com/euro-compliance>.

Informazioni sull'esposizione alle RF (SAR)

Questo dispositivo è conforme ai limiti di Tasso di Assorbimento Specifico (SAR) per la popolazione generale/esposizione non controllata (SAR localizzato su 10 grammi per testa e tronco, limite: 2,0 W/kg) specificati nella Raccomandazione del Consiglio 1999/519/CE, nelle Linee Guida ICNIRP e nella Direttiva RED 2014/53/UE.

Declaración de Conformidad

Por la presente Arashi Vision Inc. declara que este producto cumple los requisitos esenciales y otras disposiciones relevantes de la Directiva 2014/53/EU. Una copia de la Declaración UE de conformidad está disponible online en <http://www.insta360.com/euro-compliance>.

Información sobre exposición a RF (SAR) Este dispositivo cumple con

los límites de Tasa de Absorción Específica (SAR) para población general/exposición no controlada (SAR localizado de 10 gramos para cabeza y torso, límite: 2,0 W/kg) establecidos en la Recomendación del Consejo 1999/519/CE, las Directrices ICNIRP y la Directiva RED 2014/53/UE.

Declaração de Conformidade

Arashi Vision Inc. declara que este produto está em conformidade com os requisitos essenciais e outras disposições relevantes da diretiva 2014/53/UE. Uma cópia da Declaração de Conformidade da UE está disponível online em <http://www.insta360.com/euro-compliance>.

Informações sobre exposição a RF(SAR) Este dispositivo está em conformidade com os limites de Taxa de Absorção Específica (SAR) para população em geral/exposição não controlada (SAR localizado de 10 gramas para cabeça e tronco, limite: 2,0 W/kg) especificados na Recomendação do Conselho 1999/519/CE, nas Diretrizes ICNIRP e na Diretiva RED 2014/53/UE.

Декларация о Соответствии

Настоящим, Arashi Vision Inc. заявляет что данный продукт соответствует основным требованиям и другим соответствующим положениям директивы 2014/53/EC. Копия Декларации о Соответствии EC доступна в Интернете по адресу <http://www.insta360.com/euro-compliance>.

Информация о воздействии RF (SAR)

Данное устройство соответствует предельным значениям Удельной Поглощённой Мощности (SAR) для общего населения/неконтролируемого воздействия (локальное усреднение SAR на 10 грамм для головы и туловища, предел: 2,0 Вт/кг), установленным в Рекомендации Совета 1999/519/EC, руководствах ICNIRP и Директиве RED 2014/53/EC.

GB Compliance Statement

Arashi Vision Inc. hereby declares that this product is in compliance with