

58mm

170mm

HK01 Glass AI智能眼镜说明书

一、下载与连接

1、手机下载并安装“Wearfit Pro”APP
在手机应用市场直接搜索“Wearfit Pro” 进行下载，也可扫描下方二维码跳转链接下载，浏览器、微信等都可扫码。



2、连接眼镜


(1) 打开手机蓝牙




(2) 打开智能眼镜：眼镜右按键长按 3 秒，听到开机提示音后松开按键，眼镜已开机。



(3) 打开“Wearfit Pro” APP 进行设备搜索，找到眼镜的蓝牙名称进行连接绑定。

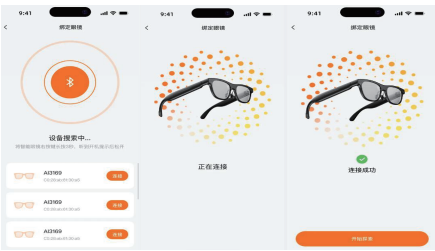

(4) WIFI配置:连接设备,查看新手引导后将弹出WIFI配置页面,可在页面WIFI列表中选择WIFI输出密码连接,也可手动输入WIFI账号(包括手机热点账号)及密码,再点击页面右上角的【加入】完成连接 后续在APP【系统设置】中也可以设置或修改WIFI配置

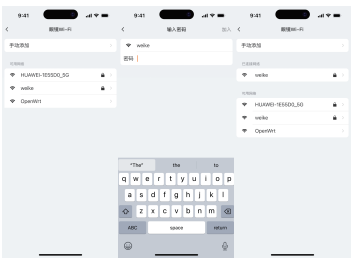

注意:设备只能连接2.4G的WIFI网络,请设置符合条件的WIFI进行连接。

手机个人点连接建议:

- 需打开手机设置中的个人热点及最大兼容开关(ios系统)。
- 关闭手机设置中低电量模式开关,避免低电时切断设备热点连接。
- 由于个人热点会自动关闭,在打开个人热点后尽快连接。
- 不要关闭手机屏幕,以保证手机热点不会被后台关闭。

二、按键定义:

左侧按键	单击	唤醒AI语音助手(开机状态)
	单击	中断语音播报(AI语音播报状态)
左侧触控区	单击	切换下一曲
	双击	切换上一曲
	长按2秒	唤醒手机语音助手
右侧按键	单击	拍照/关闭直播/关闭录音/接听来电/挂断电话
	双击	录像/拒接来电
	三击	静音
	长按3秒	开机/关机
右侧触控区	长按2秒	播放音乐
	单击	暂停音乐
	长按6秒	恢复出厂状态

红灯	单击	1.低电量闪烁5次
	单击	2.关机闪烁2次
	单击	3.充电中/提醒出厂
	单击	4.录像中/关闭每5秒闪1次
	单击	5.录音中/关闭每5秒闪1次
	单击	6.拍照时一次红闪4秒1次
蓝灯	闪烁2次	开机
	快速闪烁3次	连接
	常亮	充满电/固件升级中
	闪烁1次	拍照
补光灯	每5秒/次	录像

四、快捷语言指令

序号	场景	语音指令	
		中文	英文
1	唤醒词	嗨~小范/小范小范	Hey Fans
2	语音开启拍照功能	拍张照片	take a picture
3	语音开启录像功能	打开录像	take a video
4	语音开启录音功能	打开录音	take a record
5	语音开启接听电话功能	接听电话	Take the call
6	语音开启接听电话功能	我正在忙	I'm busy now
7	音量+	声音大一点	Speak louder.
8	音量-	声音小一点	Lower your voice a little.

五、快捷语言指令

- 拍照:通过单击眼镜右按键,进行图片拍摄。
- 录像:通过双击眼镜右按键,进行视频录制。
- 录音:通过三击眼镜右按键,进行录音。
- 音乐播放:支持播放本地音乐或手机音乐。
- 接听电话:通过按键单击接听,双击拒接,通话中单击挂断。
- 相册:存储眼镜拍摄的照片和视频, WiFi传输导入到APP的相册中,支持分享。
- 音频:存储眼镜录制的音频, WiFi传输导入到APP的音频栏目中,支持分享。
- OTA固件升级:眼镜连接APP升级。
- 查找设备:支持通过APP点击按钮查找设备。
- 系统设置:多媒体设置/按键定义/低功耗设置/Wi-Fi设置/新手引导/恢复出厂/设备信息/删除设备。

六、亮点功能

- 智能识图:唤醒AI语音助手并发起提问,对眼镜拍摄到的内容进行AI问答。
- 日程提醒:可唤醒AI语音助手设置日程提醒,也支持通过APP设置日程提醒。
- 语音播报:眼镜支持语音播报功能,如设备内存提醒,低电量提醒等语音播报。
- AI语音助手:通过短按左按键唤醒AI语音助手,与AI大模型进行对话。
- 手机语音助手:眼镜与手机连接通过左触按键长按2秒唤醒手机语音助手功能。
- 智能导航:支持AI语音发送目的地启动导航功能,也支持通过APP设置地址发起导航。

七、特色功能

- 会议神器:即时捕捉、整理并保存会议或活动中的语音和文字信息。
- 同声传译:实时将演讲者语言转行为目标语言并播放。
- 一键翻译:快速将文本或语音内容转换成不同语言的功能,可以轻松跨越语言障碍进行交流。
- 面对面翻译:实时翻译对话内容。
- 实时通讯:选择通话方式后通过第三方聊天软件发送通讯链接。
- 发起方可以选择自己的语言和对方的语言进行沟通。

注意事项

- 本产品请避免在高温、潮湿或强磁场环境中使用本产品,以免影响性能和寿命。
- 本产品属于精密电子设备,不可受到外力撞击、挤压或掉落,会损坏内部零部件,影响正常使用。请妥善保管眼镜,避免与硬物碰撞。
- 本产品请保持镜片清洁,使用干净、柔软的布轻轻擦拭,避免使用化学溶剂或粗糙的材料清洁镜片。
- 本公司保留不做任何通知的情况下,对本说明书内容进行修改的权力,恕不另行通知,部分功能在对应的软件版本中有区别,为正常情况。

注意危险

- 请勿在潮湿有水的环境下充电;
- 请确保眼镜背面与充电器表面干净完全接触;
- 不使用眼镜时,应将其放置在干燥、通风的地方,避免阳光直射,可使用眼镜盒或保护套进行收纳,防止眼镜受到碰撞、挤压或刮擦,减少损坏风险;
- 使用原装充电器为眼镜充电,避免使用劣质充电器,防止因充电不当引发安全问题,如过热、起火等。避免过度充电和过度放电,当电池电量低于20%时应及时充电,充满后应及时拔掉充电器。每隔一段时间对电池进行一次充放电,以保持电池性能。
- 远离强磁场和高温环境,可能会干扰眼镜的电子元件,影响其正常运行,损坏眼镜的电池和内部零部件,使用和存放时应避开此类环境。
- 定期检查并更新智能眼镜的软件和固件,以获取新功能、提升性能和修复完全漏洞,且更新过程中,确保电量充足且网络稳定,避免中途中断导致设备故障。



HK01 G1ASS AI Instruction Manual for Smart Glasses

1. Download and Connect

1. Download and install the "Wearfit Pro"APP on your mobile phone.
Directly search for "Wearfit Pro" in the mobile app store for download. You can also scan the following QR code to jump to the link for download. Browsers, wechat, etc. can all scan the code.




2. Connect the glasses
(1) Turn on the Bluetooth of your mobile phone




(2) Turn on the smart glasses: Press and hold the right button of the glasses for 3 seconds. After hearing the startup prompt sound, release the button. The glasses have been turned on.



(2) Open the "Wearfit Pro" APP to search for devices, find the Bluetooth name of the glasses and connect and bind them.

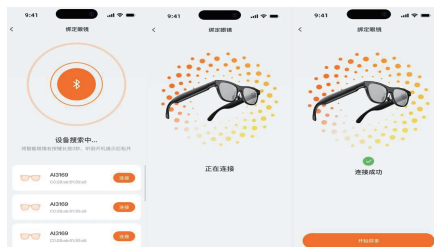

(4) WIFI configuration: After connecting the device and viewing the beginner's guide, a WIFI configuration page will pop up. You can select the WIFI output password connection in the WIFI list on the page. You can also manually enter the WIFI account (including the mobile hotspot account) and password. Then click on the "Join" button at the top right corner of the page to complete the connection and proceed with the subsequent steps in the APP. You can also set or modify the WIFI configuration in the "System Settings".

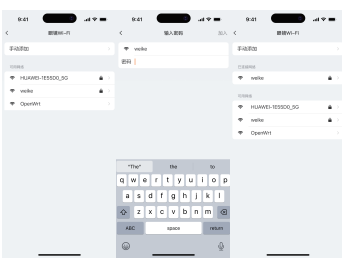

Note: The device can only connect to a 2.4G WIFI network. Please set up a qualified WIFI to connect.

Suggestions for personal connection on mobile phones:

- It is necessary to turn on the Personal Hotspot and Maximum compatibility switch in the phone Settings (for ios system).
- Turn off the low battery mode switch in the phone Settings to avoid cutting off the device's hot spot connection when the battery is low.
- As your personal hotspot will automatically close, please connect as soon as you open it.
- Do not turn off the phone screen to ensure that the phone hotspot is not turned off by the background.

2. Key definition

The left side Button press	Click	Wake up the AI voice assistant (on state)
	Click	Interrupted voice broadcast (AI voice broadcast status)
The left side Touch control area	Click	Switch to the next song
	Click twice	Switch to the previous song
	Long press	Wake up the voice assistant on your mobile phone
	Long press 2 seconds	Take photos/Turn off videomom of recording/Answer incoming calls/Hang up calls
On the right side Button press	Click twice	Video recording/Refuse to answer calls
	Click	Recording
	Click Three times	Turn screen off
On the right side Touch control area	Long press	Play music
	Long press 2 seconds	Pause the music
Left button + right button	Long press 6 seconds	Restore the factory state

Red light	1.Low battery, flickering 5 times	
	2.Shut down and flash twice	
	3.Charging/Back to factory	
	4.In the video: The red light flashes once every 5 seconds	
	5.In the recording: The red light flashes once every 5 seconds	
	6.Take a photo: Press it once and the red light will flash once	
Blue light	Flash twice	Turn on the machine
	Fast Flash three times	Connect
	Chang Liang	Fully charged/Firmware upgrade in progress
Supplementary lighting lamp	Flash once	Take photos
	Once every 5 seconds	Video recording

4. Quick language instructions

Serial number	Scene	Voice command	
		Chinese	English
1	Wake word	嗨~小范/小范小范	Hey Fans
2	Activate the photo-taking function by voice	拍张照片	take a picture
3	Activate the video recording function by voice	打开录像	take a video
4	Activate the voice recording function	打开录音	take a record
5	Voice enables the function of answering calls	接听电话	Take the call
6	Activate the call hanging function by voice	我正在忙	I'm busy now
7	Speak louder.	声音大一点	Speak louder.
8	Lower your voice a little.	声音小一点	Lower your voice a little.

5. Quick language instructions

- Taking photos: Click the right button on the glasses to take pictures.
- Video recording: Double-click the right button of the glasses to record the video.
- Recording: Press the right button of the glasses three times to record.
- Music playback: Supports playing local music or mobile phone music.
- Answering the phone: Click the button to answer, double-click to reject, and click to hang up during the call.
- Album: Store pictures and videos taken by the glasses, transfer them to the APP's album via Wi-Fi, and support sharing.
- Audio: Store the audio recorded by the glasses, transfer it via Wi-Fi and import it into the audio section of the APP, and support sharing.
- OTA firmware upgrade: Upgrade the glasses to connect to the APP.
- Device Search: Supports searching for devices by clicking buttons through the APP.
- System Settings: Multimedia Settings/Key Definitions/Low Power Settings /Wi-Fi Settings/Beginner Guidance /Restore factory/device information/Delete the device.

6. Highlight Features

- Intelligent image recognition: Wake up the AI voice assistant and initiate a question, conducting AI Q&A on the content captured by the glasses.
- Schedule Reminder: It can wake up the AI voice assistant to set schedule reminders, and also supports setting schedule reminders through the APP.
- Voice Broadcast: The glasses support voice broadcast functions, such as device memory reminders, low battery reminders, and other voice broadcasts.
- AI Voice Assistant: Wake up the AI voice assistant by briefly pressing the left button and have a conversation with the large AI Model.
- Mobile phone voice Assistant: Connect the glasses to the mobile phone and press and hold the left touch button for 2 seconds to activate the mobile phone voice assistant function.
- Intelligent Navigation: Supports AI voice sending to the destination to activate the navigation function, and also supports setting an address through the APP to initiate navigation.

7. Special Features

- Meeting Magic Tool: Instantly capture, organize and save voice and text information during meetings or events.
- Simultaneous interpretation: Convert the speaker's language into the target language in real time and play it.
- One-click translation: A function that quickly converts text or voice content into different languages.It is possible to communicate easily across language barriers.
- Face-to-face translation: Real-time translation of conversation content.
- Real-time communication: After selecting the calling method, send the communication link through a third-party chat software.The initiator can choose to communicate in their own language and the language of the other party.

Beware of danger

- Do not charge in a damp or wet environment.
- Please ensure that the back of the glasses is in clean and complete contact with the surface of the charger.
 - When not in use, the glasses should be placed in a dry and well-ventilated area, avoiding direct sunlight. They can be stored in a glasses case or protective cover to prevent them from being bumped, squeezed or scratched, reducing the risk of damage.
 - Use the original charger to charge the glasses. Avoid using inferior chargers to prevent safety issues caused by improper charging, such as overheating and fire. Avoid overcharging and overdischarging. When the battery power drops below 20%, it should be charged in time. After it is fully charged, the charger should be unplugged promptly. Charge and discharge the battery at regular intervals to maintain its performance.
 - Keep away from strong magnetic fields and high-temperature environments, as they may interfere with the electronic components of the glasses, affect their normal operation, damage the batteries and internal parts of the glasses. When using and storing, avoid such environments.
 - Regularly check and update the software and firmware of the smart glasses to obtain new functions, improve performance and fix complete vulnerabilities.
- During the update process, ensure that the battery is fully powered and the network is stable to avoid device failure caused by interruption in the middle.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.