


Product Details

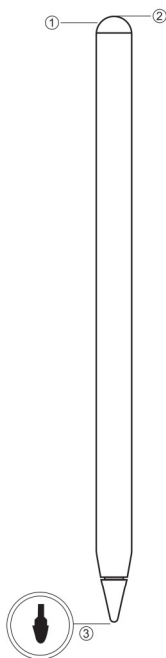

- ① Touch switch
- ② LED indicator
- ③ Replacable pen head

Quick charger

Magnetic suction on the iPad can be charged to the pencil.

The Charging time: 80-100 Minutes

Continuous use time: 8 hours

Compatibility

Model Name	Model Number
iPad Pro 12.9"(6th)	A2436/A2437 A2764/A2766
iPad Pro 12.9"(5th)	A2378/A2379 A2461/A2462
iPad Pro 12.9"(4th)	A2069/A2232 A2233/A2229
iPad Pro 12.9"(3rd)	A1876/A1895 A1983/A2014
iPad Pro 11"(4th)	A2435/A2759 A2761/A2762
iPad Pro 11"(3rd)	A2301/A2377 A2460/A2459
iPad Pro 11"(2nd)	A2068/A2228 A2230/A2231
iPad Pro 11"	A1934/A1979 A1980/A2013
iPad Air 5	A2588/A2589 A2591
iPad Air 4	A2072/A2316 A2324/A2325
iPad mini 6	A2567/A2568 A2569

Please confirm the model number on the back of the IPAD



NOTE

Not compatible with models released before 2018:

iPad Pro 12.9" 1st&2nd, iPad Pro 10.5"

iPad Pro 9.7", iPad 1 to 5 Gen, iPad Mini 1 to 4 Gen, iPad Air 1st&2nd.

How to Connect

1. Please follow these steps to make sure the Active Stylus is allowed to work in your iPad or iPad Pro:


Go to Settings>Apple Pencil>Turn off the Apple Pencil. Settings>Notes>Turn off "Only Draw with Apple Pencil."

2. Please turn off the Bluetooth connection before using our stylus pen if you have connected the "apple pencil". No need to install Bluetooth.

3. ALL iPad IOS system must be updated to iOS 12.2 or above.

4. Touch the top touch switch to turn on this pen.

5. Please ensure it has enough power before use and notice that there is NO press sensitivity, all lines are at the same thickness.



Technische Details

size:6.4*0.35inch/165*9mm
Weight:0.53oz/15g
Charging Time:80-100 minutes
Continuous Use Time:about 8 hours

Power On Off

"a. If the iPad has been connected to the Apple Pencil before: Settings> Bluetooth > Find

Apple Pencil and Tap "Ⓢ" in a blue circle> Tap

Forget This Device."


"b. Single press the Power Button. Once the indicator light turns on, the stylus is on."

"c. When the stylus is on, press the Power Button, the light goes off, the stylus is off.
d. The stylus will automatically turn off if it is not used within 5 minutes."



Replace the Stylus Tip

Unscrew the old tip counterclockwise to replace

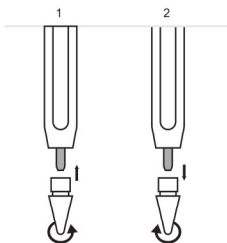

Indicator Light

1.Blue lights on:
60%-100% power
(Available for 9 Hours)
2.Green lights on:
30%-59% power
(Available for 4 Hours)
3.Red light on:
less than 30% power
(Available for 0.5 Hours)



Magnetic Function

The stylus can be magnetically attached to the side of iPad Pro and iPad Air for easy carry.



* This function is only available for iPads with magnetic suction on the side.

Packing List

- 1.Stylus Pen*1
- 2.Replaceable Tip*2
- 3.User Manual*1

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Portable RF Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.