

ICLO All in One Care


ICLO Home Beauty All-in-one Device is one body device product that allows you to take care of your oral and skin together by replacing the 4 different heads. By the optimized design for oral and beauty care with 4 heads recognition functions, your oral and skin can be clean and healthy. Also each head is configured to adjust the sonic wave vibration mode through three steps by considering the user.



All in One



Product Features and Configurations

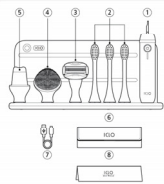

1. Main Body
2. 3 Charcoal brush heads
3. Hair removal head
4. Cleansing Head
5. Peeling head
6. Wireless Charging Station/Cable (C-FN)
7. USB Charging Cable (C-FN)
8. Special Pouch
9. Manual

4 types of head

Brush Head: Charcoal brush head helps you take care of your gums and teeth healthier with the scientific effects of charcoal (active carbon) toothbrush (whitening, breath odor removal, gloss).

Cleansing Head: Silicone cleansing head is a hypoallergenic silicon that provides soft daily cleansing effect by focusing on black and white heads.

Peeling Head: Peeling head removes dead skin cells, sebum, and waste from the skin, which helps with elastic skin care.

Hair Removal Head: Through hypoallergenic vibration, it is possible to easily remove areas that require hair removal and helps with beauty care.

4 types of Head 3 levels of customized Sonic wave electric vibration

There are 4 types of sonic wave vibrations (up to 44,000 vibrations per minute), which can be optionally used depending on the health condition of the user's gums and skin condition. (1. Soft Mode 2. Bold Mode 3. Pulse Mode)

Wireless charging and Smart UV-C Sterilization by motion sensor


The all-in-one body can only be charged wirelessly in the designated location. With the motion detection sensor function of the cradle, the UV-C sterilization LED is temporarily turned off when the user approaches and is turned on again when the user is out of a certain distance. If you press the power button shortly, you can turn off the blue LED or turn it on.

IPX5 Waterproof grade

It is IPX5 waterproof and can be used for cleaning and showering with the flow of water.

The cradle is not waterproof, so be careful not to touch the water.

How to use

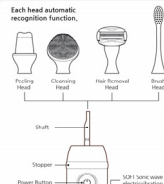

1. Main Body
2. 3 Charcoal brush heads
3. Hair removal head
4. Cleansing Head
5. Peeling head
6. Wireless Charging Station/Cable (C-FN)
7. USB Charging Cable (C-FN)
8. Special Pouch
9. Manual

How to use 4 types of head

Gently push each head against the shaft fixed axis of the main body vertically until it is fixed.

When removing each head from the main body, grasp the main body and head and pull them in opposite directions to separate them.

Working

Put the head on the shaft fixed axis of the main body and turn on the power by pressing the power button for a short time. You can check the sound wave vibration level for each head through the front LED and adjust the level according to your skin condition.

Adjust the Vibration Level

You can change 3 level of mode for each head and press power button shortly to change the mode.

How to use Wireless charging and UV-C Sterilization

Charge time, charging time, and remaining battery capacity may vary depending on the actual environment and product usage time.

For UV-C LED sterilization effect, we recommend the same location as the image

Recharging: The all-in-one body can only be charged wirelessly at the designated location.

Sterilizing: Place the 4 used heads in the direction of the UV-C LED on the side that touches the skin. UV-C LED automatically repeats 30 minutes of operating and 30 minutes later off, sterilizing 4 heads.

Be careful not to expose directly to the eyes when operating the UV-C LED.



How to use Sonic wave electric vibration toothbrush

Sonic wave electric vibrations and charcoal effects up to 44,000 times a minute clean the teeth, making the gums and teeth healthier and cleaner.

A) Soft Sonic wave electric vibration: Gently vibrates 21,000 times per minute to reduce stain on teeth, relieve gum pain, and cleanse sensitive teeth.

B) Bold Sonic wave electric vibration: Vibration up to 18,000 times per minute to easily brushing mode to effectively create air bubbles in the mouth and cleanse teeth gaps, gums, etc.

C) Pulse Sonic wave electric vibration: Massage gums with up to 44,000 to 22,000 sonic conversion vibration to remove plaque.

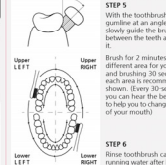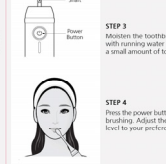

How to use Aqua Peeling Machine

It removes old dead skin cells, sebum, and waste with sonic wave micro-vibration 44,000 times per minute to make your skin look smooth.

It's more effective if you open your pores with a steam towel.

Use it only for short time (Not more than 3 minutes).

If you use it on one area of your skin for a long time, it may cause pigmentation or skin inflammation.



How to use Sonic wave electric vibration Silicone Cleansing

The soft daily cleansing effect of hygroscopic, hypoallergenic silicone, along with sonic vibration, cleans the pores deep in your skin while maintaining clean and healthy skin with massage effects.




How to use a hypoallergenic vibration hair removal head

Hypoallergenic vibration allows for convenient hair removal of desired body parts. Install and use Gillette Venus razor blade only.

Put it on the body area to be shaved with a steam towel to make the hair root flexible and minimize skin damage.

Do not place others on the wireless charging cradle except ICLO products. It can cause a fire.

Do not place others on the wireless charging cradle except ICLO products.

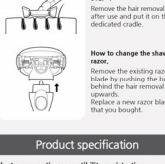

Precautions for Using device

Please use after reading the manual.

Please be careful not to be touched by infants or children.

When using the product for the first time, the brush head may feel sticky or tingling due to high-speed vibration, but it disappears when the gums are getting used to it.

Use the brush body (elastic) carefully when using the sonic wave electric toothbrush. (It may cause tooth strain.)

Do not install third party shaving blades.

Do not place others on the wireless charging cradle except ICLO products. It can cause a fire.

Do not place others on the wireless charging cradle except ICLO products.

Quality Assurance

Product name: ICLO Sonic wave electric All-in-one Care

Warranty period: 1 year from the date of purchase

Purchase Date: year month day

Customer Name: Customer Name

Place of purchase

This product has Marine (Insurance) manufactured goods liability (PI) insurance.

If the product is broken, even if you handled by production manual within free warranty period, free warranty service will be provided under the warranty regulations, and if it has to be paid warranty service to regulation the consumer needs to pay for the after service. If you want warranty service, please check the warranty sheet and warranty regulations and contact ICLO Consumer Protection Center.

Official AP Consumer Center: 070-4147-2064

Warranty Regulation: The products subject to warranty are the main body and wireless charging cradle.

Free Service: Free warranty service is available if a failure occurs during normal use within one year of purchase. This product does not qualify as a free service if it is connected for business use.

Paid Service: Even during the warranty period, the following cases will be paid:

1. When a shaft occurs because of the consumer's careless handling (fall, flooding, impact, damage, excessive operation, etc.)

2. When the consumer arbitrarily disassembles and modifies.

3. If it is broken cause by using other components which was not provided or don't follow the Precaution manual.

4. Consumables (heads) are end of life or test.

5. If the warranty period is not requested, if there is no date of purchase in this warranty paper, or if the details are changed arbitrarily.

