

Life Camera SK2

Instruction Manual

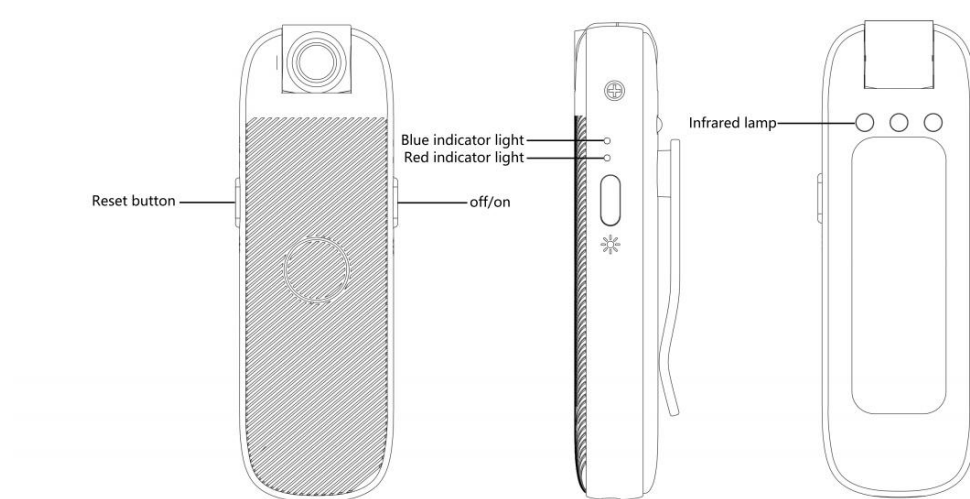


APP:CareCam Pro

- * Please fully charge before use
- * This product is suitable for service scenarios such as family guardianship, elderly care, child care, pet care, and daily home security. Please do not use the device for illegal purposes. Any legal risks arising therefrom will be borne by the user personally!
- * Do not disassemble, strike, squeeze or throw into fire. If severe swelling occurs, do not continue to use. Do not place in high-temperature environments. Do not use after soaking in water

SK2-V1.02

Product illustration



Indicator light status description

Indicator light status	Equipment status
The blue light is flashing	Wait for the wifi connection
The blue light remains on constantly	Network connection successful
The red light remains on constantly	be charging
The red light goes out	Charging is complete

Device reset

When the device is powered on, hold down the reset button for 3 to 5 seconds and then release it. When the blue indicator light goes out and flashes again, the reset is successful.

Download the APP and register to log in

1: Download APP.

Scan the QR code on the cover of the instruction manual or search for "CareCam pro" in the APP store to download and install the app


2: Register and log in.

Step 1 After downloading the APP – open the "CareCam Pro" APP

Step 2 The first time you use the account login, you need to register the account first. Account registration is divided into cell phone number registration and email registration;

--If you choose to register by cell phone number: Enter your cell phone number → Get verification code → Set password → Check the privacy policy → Click register → Register successfully.

--If you choose to register by e-mail: Enter your e-mail account → Enter your password → Check the Privacy Policy → Click Register → Register Successfully!

 Sign up or log in Log in after unregistered mobile phone verification Phone number or Email ☐ Accept User Agreement and privacy Policy Continue OR 	+86 183,  8007 Password Sign In Forgot password?	103    @qq.com Password ☐ Accept User Agreement and privacy Policy Sign Up
Enter your cell phone or email account	Cell phone number to enter the verification code to verify the success of registration and login	Enter your email address and password to register successfully

Step 3 If you are a registered user, you can directly enter your cell phone or email address to log in successfully.

Step 4 If the user forgets his/her password, he/she can click "Forgot Password" to get the verification code again and enter a new password to login.

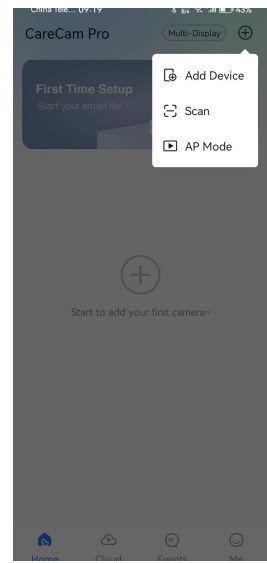
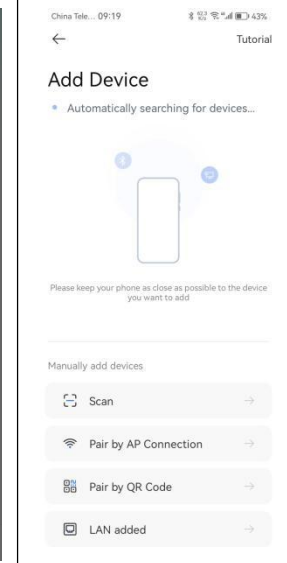
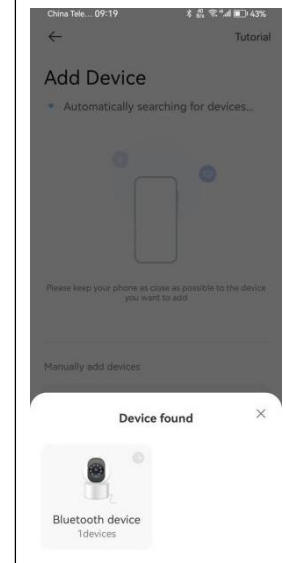
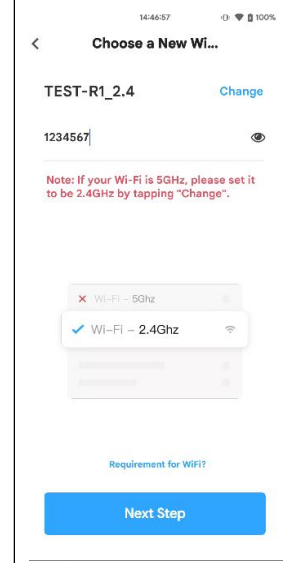
 Sign up or log in Log in after unregistered mobile phone verification Phone number or Email ☐ Accept User Agreement and privacy Policy Continue OR 	+86 183, 0007 Password Sign In Forgot password?
Enter your account number, or use a third-party shortcut to log in directly	Enter your password and click login to Slog in successfully

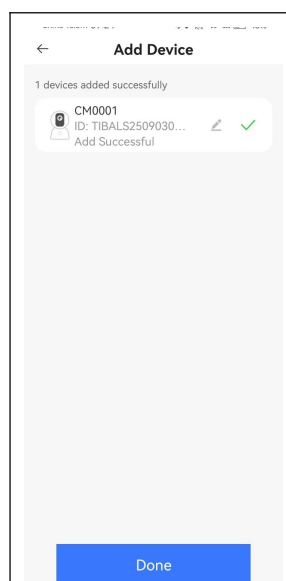
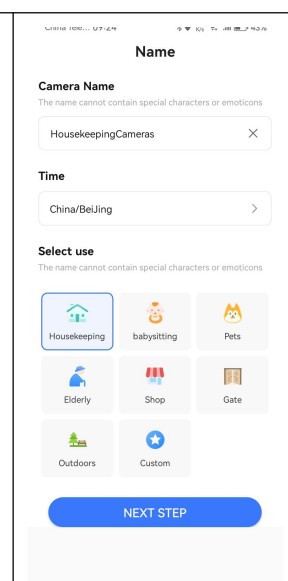
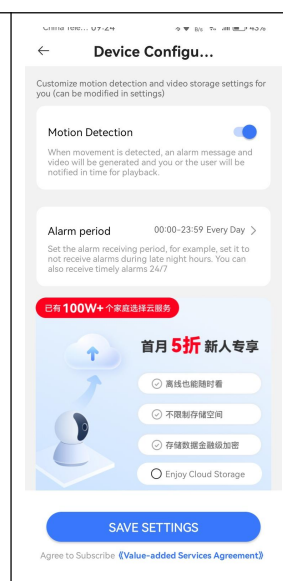
Connect the device

Note: Please turn on your mobile phone's Bluetooth before setting up the network.

The process of connecting to wifi via Bluetooth:

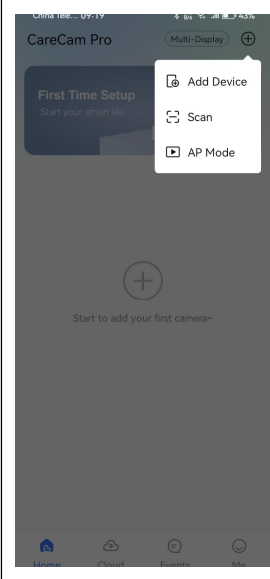
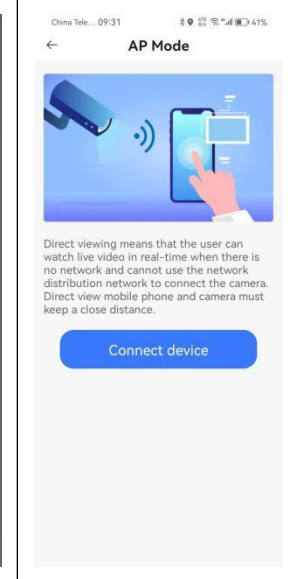
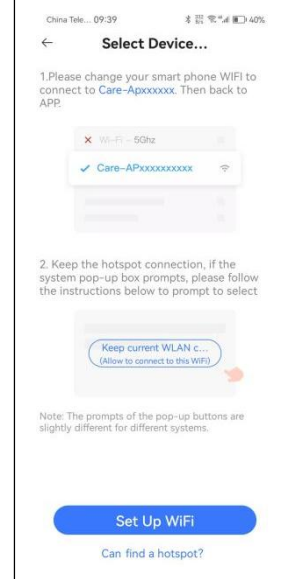
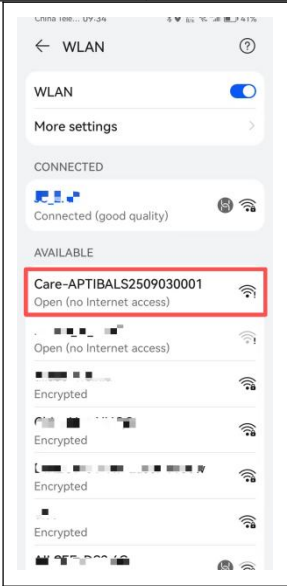
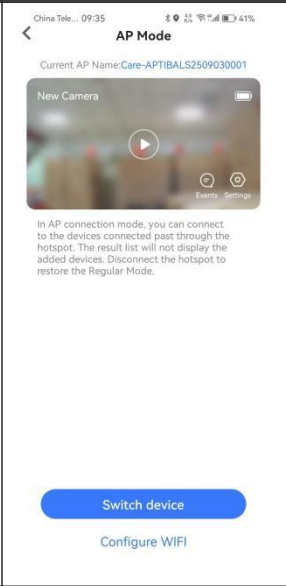
Process: Click the 「+」 and select 「Add Device」 → Bluetooth permission and Bluetooth function → Wait for the search device → Click "Add" → Select WiFi → Enter password → Confirm password again → Select Add based on the found device → Name the camera → Return to the list page.

			
Step 1: Click the 「+」 and select 「Add Device」	Step 2: Wait for the search	Step 3: Select the device	Step 4: Select WiFi

		
Step 6: Select and add based on the found device	Step 7: Naming	Step 8: Set the alarm time period for the device and save.

Operation process for direct connection to AP hotspots:

Process: Click + select Direct connection for viewing → Click to connect the device → Click to configure WiFi → Jump to the system WiFi interface → Select the hotspot of CARE-AP *** → Return to the APP to view the device

		
Step 1: Click the 「+」 and select 「AP Mode」	Step 2: Click to connect device	Step 3: Click to Set Up WiFi
		
Step 4: Select the hotspot of CARE-AP ***	Step 5: Return to the APP to view the device	

Live video

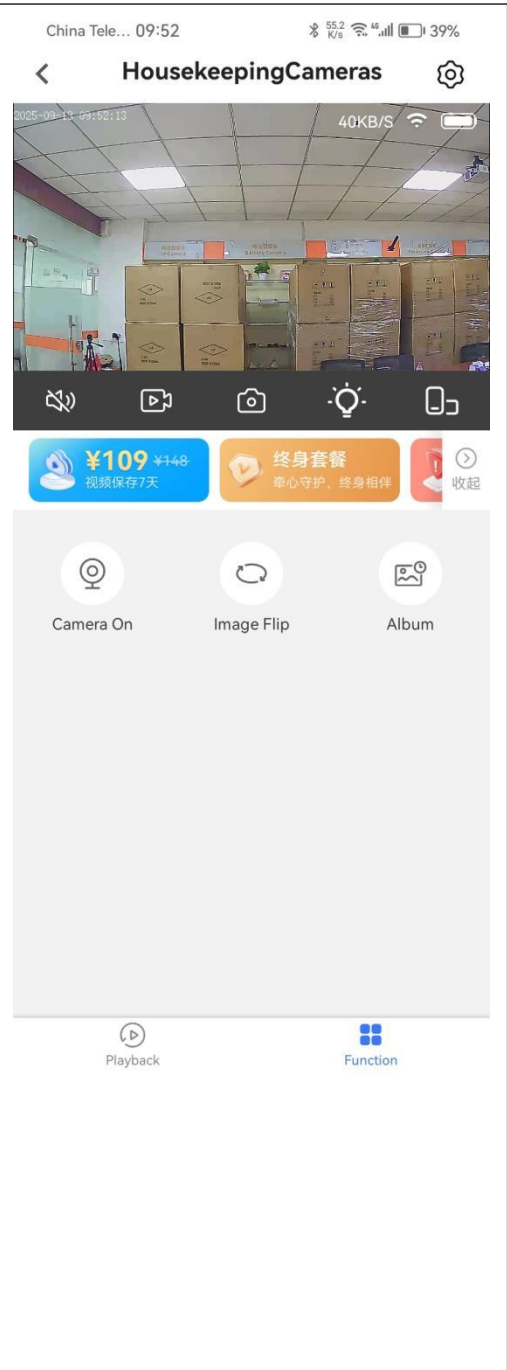
1: Function Description

Real-time video mainly involves viewing the monitored area in real time

2: Functional operation process

Process: Click on the video area on the list page → enter live video

3: Introduction to Function Points

	- Settings: Enter the Settings interface - Sound: It is the sound captured by the camera. After it is turned off, the sound captured by the camera cannot be heard - Video recording: The video recording is local and only valid on the current page. After the recording is completed, you can go to "Me" → "Album" → "Local Recorded Video" to view it - Screenshot: Take a screenshot of the current screen and automatically save it in "Me" → "Album" → "Local Video Screenshot" - Infrared lamp control: Click to switch the infrared light mode - Landscape: After clicking, real-time video can be viewed in landscape mode - Camera on: Click to turn off the live camera view - Image flip: Click to flip the image - Playback: Click to review the video - Function: View device functions - Album: Can record and generate videos
--	--

Video playback

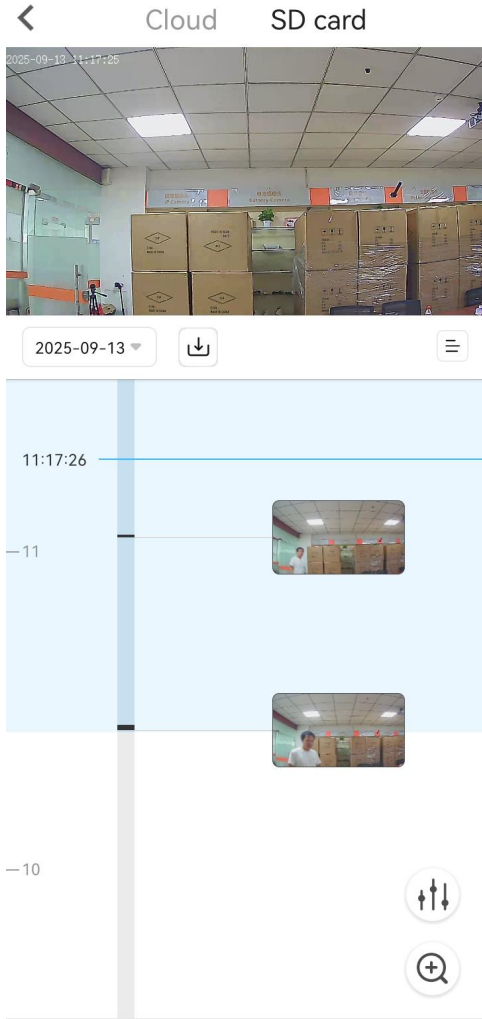
1: Function Description

Historical records can be viewed through cloud video recording and TF card video recording

2: Functional operation process

Cloud video/card video: Click "Watch Back" on the list page → enter the timeline → you can switch the interface of cloud card video.

3: Introduction to Function Points

	Cloud: To play back cloud videos, you need to purchase the cloud storage function to use it SD card: Replay the local TF card recording  Roll back 30 seconds: Roll back 30s of the video  Pause: Pause the video playback  Fast-forward 30 seconds: Fast-forward 30s of video  Sound: The sound captured by the camera  Speed: Select the video playback speed  Landscape: Watch videos in landscape mode  Date: Click to select the date for playback  Download: Download the video  Event: View alarm events  Detection: Click to select the video type, and the timeline will be different The color indicates the alarm event
--	---

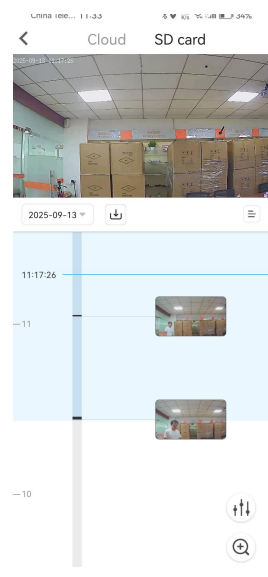
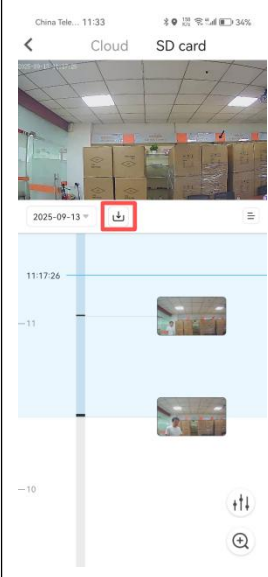
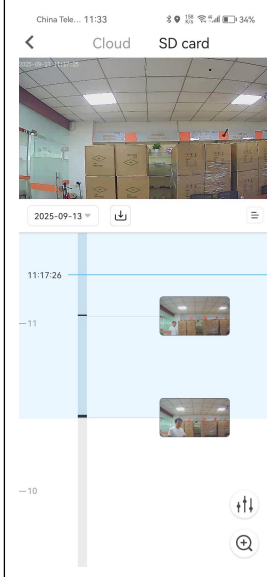
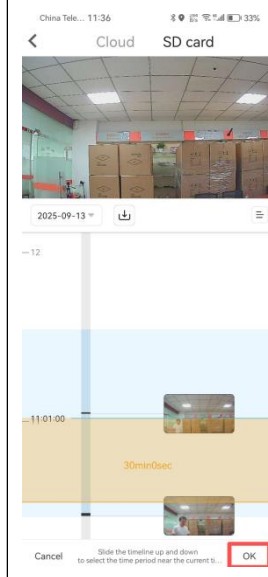
Video download

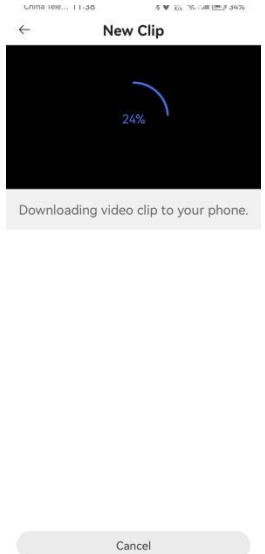
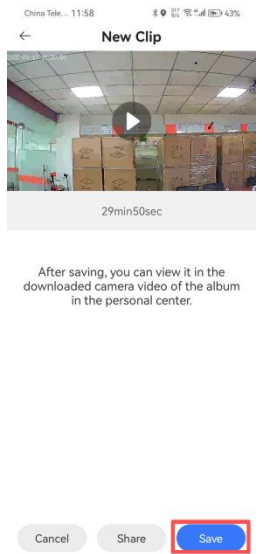
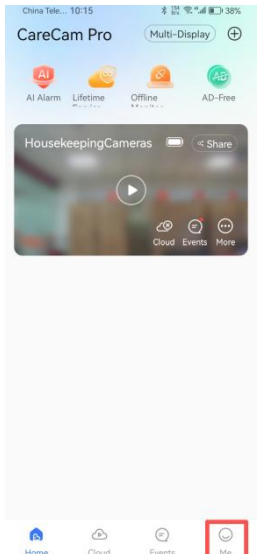
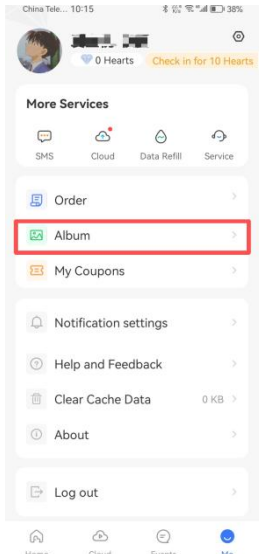
1: Function Description

Download the recorded video

2: Functional operation process

--Place the blue scale bar on the time scale of the event you need to download → Click the "Download" button → Slide the timeline up and down to select the content you need to download → Click "OK" → Wait for the download → The download is complete → click the "Save" button → go to "Me" → "Album" → view the downloaded video

			
Step 1: Place the blue scale bar on the time scale where you need to download	Step 2: Click the "Download" button	Step 3: Slide the timeline up and down to select the time period you want to download	Step 4: Click "OK"

			
Step 5: Wait for the download	Step 6: When the download is complete, click the "Save" button	Step 7: Return to the home page and go to "Me"	Step 8: Go to the "Album" to view the downloaded video

Cloud service

1: Function Description

The functions that require payment within the APP are uniformly referred to as cloud services. Currently, it supports cloud storage, AI face recognition, time album, intelligent AI alarm, flame detection, elderly care, etc...

Cloud service functions will be gradually opened. Please purchase your own packages as needed.

2: Cloud service purchase process

Enter the package purchase interface → or click "More Packages" to view more packages → Select the package you need to purchase → Click "Buy Now" → Select the payment method → Click "Confirm Payment" → Jump to the payment method to confirm payment → Complete the purchase

Share devices

1: Function Description

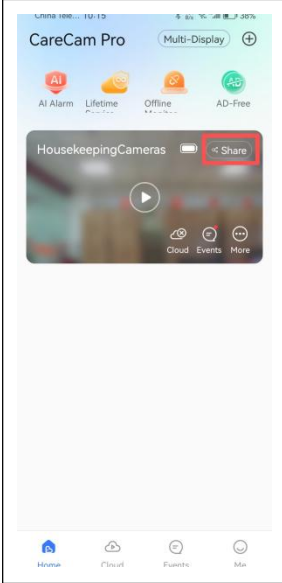
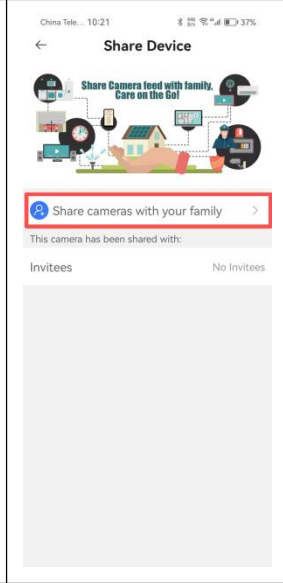
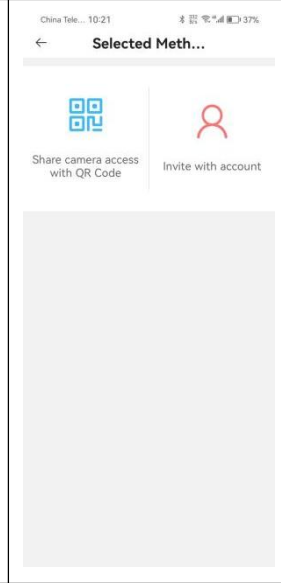
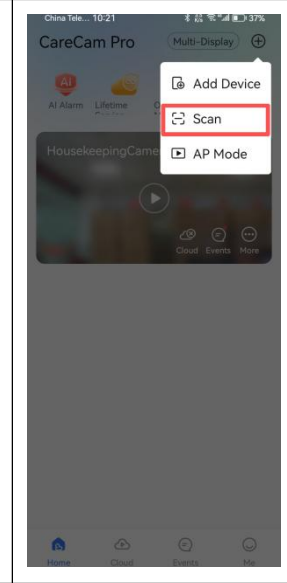
Share the device with others for common use.

2: Functional operation process

Share: You can share your device with other "CareCam Pro" users.

Click to share → Select to share with friends → Select the QR code (scan with the "CareCam Pro" APP)

Click "Share" → Select "Share with Friends" → Select "Invite by Account" → Enter your mobile phone number or email address (then another person can see the sharing device in the APP)

			
Step 1: Click the Share	Step 2: Click to Share cameras with your family	Step 3: It can be shared via a QR code or an account	Step 4: Others use "CareCam pro" to scan the QR code and add it

Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.